



## 用戶手冊

安全及參考

# LG OLED TV

---

請於操作產品前仔細閱讀本手冊並將其保留以供未來參考之用。




\* M F L 7 1 6 8 9 2 7 2 \*

(2006-REV01)

[www.lg.com](http://www.lg.com)


Copyright © 2020 LG Electronics Inc. All Rights Reserved. 版權所有。

## 警告! 安全指示





注意

觸電風險請勿打開



注意：為減低觸電風險，請勿移除蓋板（或背板）。當中並無用戶可自行維修的組件。請向合資格維修人員諮詢相關維修安排。

 此標誌用作提醒使用者，產品的機殼內有非絕緣保護的「危險電壓」，相關電壓的強度足以構成觸電風險。

 此標誌用作提醒使用者，電器附帶的相關產品說明，已列出重要操作及保養（維修）指示。

警告：為減低火災或觸電風險，請勿將本產品置於雨中或潮濕環境中。

- 為防止火災蔓延，請隨時保持本產品遠離蠟燭或其他有明火的物品。
  - 請勿將電視及遙控器放置於下列環境：
    - 勿讓產品直接暴露在陽光下。
    - 高濕度範圍，例如浴室。
    - 發熱源附近例如煮食爐及其他發熱裝置。
    - 輕易暴露於蒸氣或油煙如廚房工作範圍或放濕器附近。
    - 暴露於雨水或當風位置。
    - 勿讓液體滴入或潑灑到裝置，並且勿在裝置上方（例如裝置上方的架子上）放置裝有液體的物體（例如花瓶，杯子等）。
    - 靠近如汽油或蠟燭等易燃物，或將電視置於空調直吹處。
    - 請勿安裝在灰塵過多的位置。
- 否則，可能造成火災，觸電，燃燒/爆炸，故障或產品變形。

- 通風
  - 請將電視安裝在通風良好的位置。請勿安裝在狹窄的空間（例如書架）。
  - 請勿將產品安裝於地毯或軟墊上。
  - 裝置插入時勿讓衣物或其他材料擋住或蓋住產品。
- 小心勿觸碰通風口。長時間觀看電視時，通風口可能會產生高溫。
- 保護電源線以防止受到物理性如扭曲，折彎，緊夾，受到門的擠壓或踩踏或機件受損。請加倍留意插頭，牆上插座以及裝置的電線出口。
- 連接電源線時，請勿搬動電視。
- 請勿使用受損或鬆脫的電源線。
- 拔除電源線時，請確實握住插頭。不要拉扯電源線來拔除電視電源。
- 請勿在同一交流電源插座上連接過多裝置，因為這可能導致火災或觸電。
- 切斷裝置主電源
  - 電源插頭與裝置中斷連接。如有緊急情況，電源插頭必須保持隨時可用。
- 切勿讓孩童攀爬於電視上。否則將導致電視翻倒並引致嚴重受傷。
- 室外天線接地（可能依國家/地區而異）：
  - 如果安裝了室外天線，請遵循下列注意事項。室外天線系統不應設置於接近高壓電線或其他路燈照明或電源電路之處，或可能接觸此類輸電線或電路之處，否則可能導致人員傷亡。


- 接地（未接地的裝置除外）
  - 附三插頭的電視必須連接到三孔接地的 AC 插座。確保連接接地線，以防觸電。
- 切勿在雷擊或閃電時碰觸本裝置或天線。將可能導致觸電。
- 確保電源線安全地連接到電視和牆上插座，若未安全連接，插頭和插座可能損壞，並且在極端情況下可能引發火災。
- 請勿將金屬或易燃物體插入產品。若有異物掉入產品內，請拔除電源線，並聯絡服務中心。
- 插頭插上時，請勿觸碰電源線末端。將可能導致觸電。
- 如發生任何下列情況，即時切斷產品電源並聯絡當地服務中心。
  - 產品曾受損毀。
  - 若有水或其他物質滲入產品（像是 AC 轉接器，電源線或電視）。
  - 若聞到電視發出煙霧或其他臭味。
  - 出現雷擊或閃電時，或者長時間不使用產品時。
- 除非拔除電源線，否則即使用遙控器或按鈕關閉電視，AC 電源仍會保持接通狀態。
- 請勿在電視附近使用高電壓的電子設備（例如：滅蚊機）。這可能引起產品故障。
- 未經 LG Electronics 書面授權，請勿嘗試以任何方式修改本產品。可導致火災或觸電。如需服務或維修，請洽詢您當地的客戶服務中心。未經授權的修改可能會讓使用者失去操作本產品的權力。
- 請僅使用經授權的附件 / LG Electronics 所認可的配件。否則，可能導致火災，觸電或產品無法正常運作。
- 切勿拆開 AC 適配器或電源線。可能導致火災或觸電。
- 請小心處理適配器避免掉落或被撞擊。遭到撞擊可能會對產品造成損害。
- 為降低發生火災或觸電的風險，請勿用濕手碰觸電視。若電源插頭潮濕或佈滿灰塵，請將插頭完全擦乾或擦去灰塵。

- 電池
  - 將附件（電池等）存放在安全的位置並遠離兒童。
  - 請避免短路，拆卸或讓電池過熱。請勿用火焚化電池。電池不應暴露於高溫的地方。
  - 注意：如果更換的電池類型不正確，會有引發火災或爆炸的風險。
- 移動
  - 搬動時，確定已關閉產品電源，拔出插頭，並取下所有纜線。可能需要兩個或更多人搬運較大型的電視。請勿按壓設備屏幕或在電視屏幕上施力壓力。否則，可能導致產品損壞，造成危險或傷害。
- 請將包裝防潮材料或乙烯基包裝物料放置在兒童無法觸及的地方。
- 勿撞擊產品或讓任何物體掉入產品內部，也不要讓任何物體掉落到螢幕上。
- 請勿以手或指甲，鉛筆或鋼筆等尖銳物件用力按壓屏幕，或使其刮花。可能會使螢幕損壞。
- 清潔
  - 清潔時，請拔除電源線並以乾軟布輕拭，以避免刮傷。請勿直接在電視上噴水或其他液體。請勿使用會對產品及其屏幕造成損壞的化學品，例如玻璃清潔劑，空氣清新劑，殺蟲劑，潤滑劑，汽車或工業用蠟劑，磨光劑，稀釋劑，苯，酒精等。否則，可能導致觸電或產品損壞。

# 準備使用

圖  
冊

 - 如電視從廠商運出後首次開啟，電視初始化可能需時數分鐘。
- 插圖可能與實際情況有差異。
- 您電視的 OSD（螢幕顯示）可能與此手冊中顯示的內容略有不同。
- 可用的功能表及選項可能與您使用的輸入來源或產品型號有所不同。
- 新功能或將添加至此電視。
- 裝置必須在容易接近插座的位置。有些裝置沒有開啟 / 關閉按鈕，需要拔除電源線才能關閉。
- 產品隨附的部件視乎型號而可能有所不同。
- 本手冊的產品規格或內容或會因產品功能升級而隨時變更，恕不另行通知。
- 為了獲得最好的連接效果，HDMI 線和 USB 裝置接頭厚度應少於 8 毫米，寬度少於 18 毫米，線材直徑少於 8 毫米。如果 USB 纜線或 USB 記憶卡與您的電視的 USB 端口尺寸不符，請使用支援 USB 2.0 或更高版本的延長線。



\* A ≤ 8 毫米

\* B ≤ 18 毫米

\* C ≤ 8 毫米

- 使用附有 HDMI 標誌的獲認證的纜線。
- 如您並非使用獲認證的纜線，可能無法於螢幕顯示畫面，或發生連接錯誤。
- 建議的 HDMI 線類型
  - 超高速 HDMI®/™ 線（3 米或以下）

# 選購配件

另購項目可因改善品質而隨時變更或修改，恕不另行通知。如要購買這些項目，請聯絡經銷商。這些裝置僅配合某些型號使用。

型號名稱或設計可因產品功能升級，製造商或有關政策而有所改變。

## 神奇遙控器

MR20GA

檢查您的電視型號是否支援無線模組規格中的 Bluetooth，以確定它能否與神奇遙控器搭配使用。

## 底座

 
（視乎型號而定）

底座	型號
AN-GXDV55	OLED55GX*
AN-GXDV65	OLED65GX*
AN-GXDV77	OLED77GX*

## 掛牆架

(視乎型號而定)

確保使用符合 VESA 標準的螺絲及掛牆底座托架。  
掛牆底座套件的標準尺寸如下表所述。

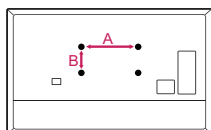

型號	OLED55/65/77GX*
VESA (A x B) (毫米)	300 x 300
標準螺絲	M6
螺絲數目	4
掛牆架	OLW480B


## 抬起與移動電視

 不論任何類型及大小，抬起或移動電視時，請閱讀下文，確保安全搬運，以防電視刮花或受損。


- 建議以包裝箱或連同電視原有的包裝材料移動電視。
- 移動或抬起電視前，中斷電源線和所有纜線的連接。
- 當握住電視時螢幕應面向外側以避免損壞。



- 平穩地握住電視外框的外側及底部。確保不要握住透明部分，喇叭或喇叭排孔區域。

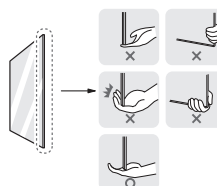

 - 大型電視需最少二人共同運送。
- 使用人手搬運電視時，請根據以下圖示握住電視。

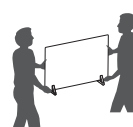

- 搬運電視時，請勿搖動或令電視受過度震動。
- 搬運電視時，保持電視直立，切勿轉向電視的側面，或向左方或右方傾斜電視。
- 請勿過份用力，否則可能導致外框底座屈曲 / 折彎，會損壞螢幕。
- 操作電視時，請勿損壞凸起的按鈕。




- 避免時常點按畫面，否則會導致畫面受損。
- 將底座安裝至電視組合時，電視螢幕應面向下方並放於附有軟墊的枱面或平面上以避免螢幕磨損。

## 安裝到桌面

 1 將電視機抬起並擺放在桌子上，保持機身豎直。

- 與牆壁保留最少 10 厘米空間以保持空氣流通。

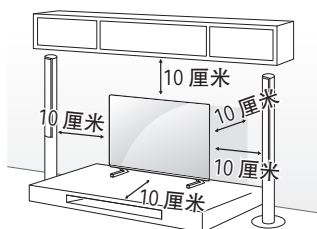


(視乎型號而定)

2 將電源線連接至牆上電源插座。



- 在組裝產品時，請勿於螺絲零件處使用油或潤滑劑等外來物質。（這樣可能會導致產品損壞。）
- 如將電視安裝於底座上，請採取措施以預防產品翻倒。否則，將可能導致電視翻倒並引致受傷。
- 請勿使用任何未經批准部件，以確保安全和產品壽命。
- 因使用未經批准物品而造成的任何損壞或傷害並不包括在保修範圍內。
- 請確保螺絲已正確插入並穩固旋緊。  
(如果沒有穩固扭緊螺絲，電視在安裝後可能會向前傾斜。) 請勿過份用力及過度扭緊螺絲，否則螺絲可能會受損並無法正確上緊。
- 使用支架安裝在櫃或架上時，請確定它的寬度大於電視寬度。

## 將電視固定到牆上

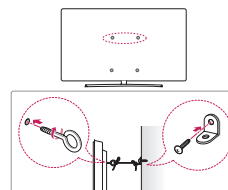 

(視乎型號而定)

1 在電視背面插入並擰緊環首螺栓或固定片和螺栓。

- 如果在環首螺栓位置中插入了螺栓，請先將這些螺栓取出。


2 用螺栓將固定片安裝到牆上。將掛牆架的位置對準電視背面的環形螺栓。

3 以堅固繩索將環形螺栓及掛牆架連接。確保繩索與平面保持水平。

- 使用堅固平臺或矮櫃以穩固承托電視。
- 掛牆架，螺栓及繩索需另行購買。您可從本地經銷商取得其他配件。

## 安裝到牆上

 將選購的掛牆架小心安裝在電視後方，再將掛牆架安裝在與地面垂直的堅固牆壁上。將電視安裝在其他建築物料時，請聯絡合資格的人員。LG 建議應由合資格的专业安裝人員進行掛牆安裝。建議使用 LG 提供的掛牆架。LG 掛牆架容易與連接的纜線一起移動。如不使用 LG 掛牆架，請使用能將裝置穩固於牆上並有足夠空間連接外部裝置的掛牆架。建議安裝固定的掛牆架之前先連接所有纜線。

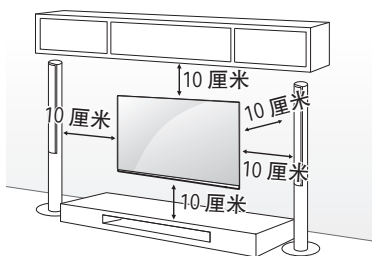

(視乎型號而定)



- 將電視安裝於掛牆架前需反方向轉動底座以將之移除。
- 如需螺絲和掛牆架的詳細資訊，請參閱其購買的資訊。
- 如希望將產品安裝於牆上，請於產品背面安裝 VESA 標準掛牆介面（選購配件）。於安裝套件以使用掛牆架（選購配件）時請注意固定以防墜落。
- 將電視以掛牆方式安裝時，務必避免使用電視背面的電源線和訊號線懸掛。
- 如牆壁會暴露於油或油霧，請勿在上面安裝此產品。此舉可能會損壞產品，並導致產品掉落。
- 安裝全接觸掛牆架時，可能因為某些牆壁狀況導致電視無法牢固地繫在牆上。



如需詳細資訊，請觀看您的智能裝置上的安裝視頻。

## 安全注意事項

(OLW480B 除外)

- 專業安裝人員應仔細閱讀本手冊，以確保正確安裝。
- 專業安裝人員應在安裝後將本手冊轉寄給客戶，並且鼓勵他們閱讀並將其存放在方便將來參考的地方。  
閱讀安裝手冊後，請將其放在方便將來參考的地方。



- 請商店指定的專業安裝人員安裝產品。  
由專業安裝人員以外的人安裝是非常危險的，因為可能導致人員受傷。
- 不要將產品安裝在不能承受其重量的不穩定場所。  
如果安裝地點不夠牢固且堅硬，產品可能會掉落，甚至可能造成人員受傷。
- 安裝後若要移動或更換產品，請先與商店指定的專業安裝人員聯繫。  
安裝是一項技術任務，如果個人試圖親自安裝或移動產品，可能會產生安全議題。
- 安裝後請勿掛在產品上，或使其受到嚴重衝擊。  
麼做可能會導致產品掉落，造成人員受傷。
- 將產品安裝在牆上時，請勿從電視背面懸掛電源線或訊號線。  
這會使電線受損，導致火災，電擊或產品故障。
- 在安裝產品時，務必要戴上工作手套。
  - 徒手安裝時若未戴任何東西保護雙手，可能令手部受傷。



- 根據安裝手冊中的說明安裝產品。  
若未根據安裝手冊中的說明安裝產品，可能導致嚴重的人員受傷或產品損壞。
- 安裝產品或調整產品高度時，請確保至少有兩名安裝人員。  
嘗試親自安裝或調整可能會導致人員受傷或產品損壞。
- 在繼續安裝之前，請確保有牆壁可用。使用隨產品提供的錨及螺絲。  
使用任何未經授權的錨或螺絲，可能無法支撐產品的重量，招致安全風險。
- 在牆上鑽孔以進行安裝時，務必使用鑽頭和指定直徑的鑽機。請遵循有關孔深的說明。  
以非安裝手冊指定的方式鑽孔和安裝產品，可能導致安裝不穩定和潛在的安全問題。
- 不要用濕抹布擦拭產品，也不要安裝在產品處的下方使用任何加熱設備或加濕器。  
液態水或蒸氣可能滲入產品，而過熱可能導致火災，觸電或故障。
- 請勿將產品安裝在靠近防火灑水系統或探测器的地方，可能發生振動或電擊的地方，或高壓電線或電源附近。
- 在安裝之前，從牆壁插座拔下產品的電源線。  
插入電源線同時安裝產品，可能會導致電擊或火災。
- 請勿徒手安裝產品。確保戴上工作手套。  
嘗試在未戴工作手套的情況下進行安裝，可能會造成人員受傷。
- 用隨附的纜線連接產品。使用未經授權的纜線，可能會因為與牆壁摩擦而造成損壞。確保使用提供的纜線性別。（這可能因型號而異）。

## 安裝前

(OLW480B 除外)

- 除了將電視安裝在牆上以外，請勿將本產品用於其他任何目的。
- 避免因安裝不慎造成產品損壞和安全事故，或使用不正確或未經授權的掛牆架。
- 按照安裝手冊中的說明可輕鬆安裝掛牆架。
- 如果您無法完全理解安裝程序，請立即停止安裝，並聯繫服務中心。  
如果在詢問後仍然無法解決安裝問題，請使用專業的安裝程式。
- 建議將此產品安裝在混凝土牆或木支撐栓上。不建議將此產品安裝在其他表面（乾牆、膠合板、磚塊等）。安裝不當可能會導致產品掉落。
- 產品僅安裝在垂直的牆壁。  
請勿安裝在超出建築標準的傾斜牆壁上，也不要安裝在過度傾斜的牆壁或天花板上。  
LG 不對產品安裝不當所引起的問題負責，例如嚴重傾斜的牆壁和天花板。
- 安裝前檢查隨附的配件。對於內包裝打開後任何遺失或損壞的配件，我們一概不負責。
- 當嬰兒或小孩吞下所附配件時，可能發生窒息等各種安全事故。將隨附的配件放在嬰兒和兒童接觸不到的地方。
- 鎖螺絲時，請擰緊直至完全貼合。  
擰緊螺絲時，避免過度用力。這樣做可能會損壞牆壁和產品，或降低產品堅固度或效能。
- 避免安裝超過指定張力負載的電視，並且勿對產品施加任何外力。
- 在安裝過程中請小心使用作業工具，以免發生事故。

 
## 安裝工具

- “+” 字型螺絲刀（手動或電動） / 級別 / 鑽孔 / 混凝土用 Ø 8 毫米鑽頭，或鋼用 Ø 4 毫米鑽頭



## 將電視固定到牆上

(OLW480B 除外)

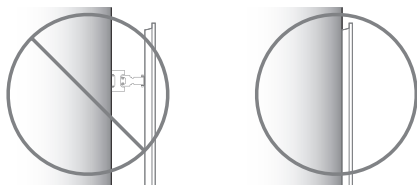

- 安裝後請使用靠牆的電視機。

## 如何固定錨和螺絲

 
(OLW480B 除外)

請確保：


- 檢查牆壁和飾面材料和厚度是否符合安裝手冊規格。開始進行安裝前，必須先確認牆壁能承受電視的重量。
- 應在無裂縫混凝土牆上使用封閉錨和螺絲。
- 切勿將產品安裝在石膏板或紙壁或中密度纖維板 (MDF) 上。當需要在這類牆上安裝產品時，必須將錨定螺絲鎖至擋土牆（混凝土）或飾面內部的木支撐柱。
- 掛牆架應固定在螺樁上。這通常是輕而易舉之事，但視乎個別情況而定，安裝時不一定都能順利安裝至螺樁。若遇此情況，可利用的乾牆錨如套掛螺絲等來解決問題。若是使用乾牆錨，請確認錨和牆壁都能承受電視的重量。請注意，所提供的錨不一定適用於所有情況，因此，請您洽詢當地專業人員，由其協助確認。
- 其他未指定的牆壁必須能夠承受超過 70 kgf (686 N) 的拉出載荷，而每個緊固件剪切載荷超出 100 kgf (980 N)。
- 混凝土適用  $\varnothing 8$  毫米鑽刀，若是在木支撐柱上鑽孔，則適用鐵錘（撞擊式）鑽頭或  $\varnothing 4$  毫米鑽刀。

(適用於在混凝土牆上安裝)


- 1 用  $\varnothing 8$  毫米鑽頭在錨定位置鑽孔，深度則為 80 毫米到 100 毫米。



- 2 清理鑽孔。

 


- 3 插入封閉的錨固件，將掛牆架固定在孔內。  
(使用錘子將錨插入)。

 


掛牆錨

 
- 4 將掛牆架緊推向牆壁，使其與孔位置相匹配。



 - 5 鎖緊螺絲將掛牆架固定到孔。此時，將螺絲鎖緊至 45 kgf/cm 至 60 kgf/cm 之間的扭力。




掛牆螺絲

 

(適用於在木支撐栓上安裝)

 使用  $\varnothing 4$  毫米鑽頭在木頭上鑽出 76 毫米深的孔。  
(清理鑽孔。)

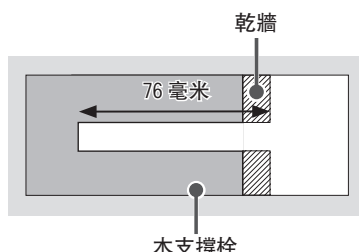


若無使用掛牆錨，則可將掛牆螺釘直接鎖至木支撐栓。

## 安裝後



 - 從側邊連接額外線材時，建議在連接之前先以水平或垂直方向抓住電視中心點，提拉產品以確定和牆壁之間有足夠距離。
- 從底部連接額外線材時，建議在連接之前先將電視從牆上的支架上鬆開。
- 使用纜線管理系統，將整理好的纜線放在電視機的底部，如下圖所示。線材管理系統並非隨產品提供，需要另外購買。

(例如)

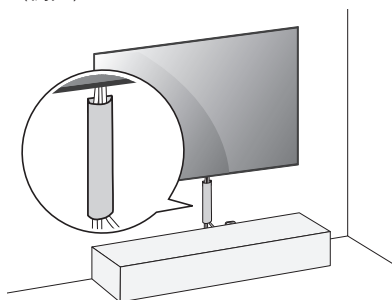

- 安裝產品後，一定要用它附著在牆上。
  - 在未附著到牆上時使用本產品，可能損害或搖晃產品。

## 連接

將不同的外置裝置連接至電視，並切換輸入模式以選取外置裝置。有關外置裝置連接的詳情，請參閱個別裝置隨附的手冊。

## 天線/纜線

使用 RF 線 (75  $\Omega$ ) 將電視連接至牆壁天線插座。

- 如使用兩部電視以上，使用訊號分線器。
- 如畫面品質惡劣，正確安裝訊號放大器以改善圖像品質。
- 如有連接天線，但畫面品質惡劣，嘗試以正確方向重新對準天線。
- 天線及轉換器並不提供。
- 由於相關標準尚未確認，此電視不能直接接收超高清 (3840 x 2160 像素) 廣播。

## 其他連接

將電視連接至外部裝置。為達到最佳圖片及音訊質素，請使用 HDMI 纜線將外置裝置及電視連接。不提供部份獨立纜線。

### HDMI



- 連接 HDMI 纜線時，產品和外部裝置應先關閉並將電源線拔除。
- 支援的 HDMI 音訊格式 (視乎型號而定) :  
True HD (48 kHz) ,  
Dolby Digital / Dolby Digital Plus (32 kHz, 44.1 kHz, 48 kHz) ,  
PCM (32 kHz, 44.1 kHz, 48 kHz, 96 kHz, 192 kHz)
- ⚙️ → ⓘ → [影像] → [其他設定] → [HDMI Ultra HD Deep Color]  
- 開：支援 4K @ 50/60 Hz  
(4 : 4 : 4, 4 : 2 : 2, 4 : 2 : 0) ,  
4K @ 100/120 Hz (4 : 4 : 4, 4 : 2 : 2, 4 : 2 : 0)  
- 關閉：支援 4K @ 50/60 Hz (4 : 2 : 0)  
如果連接到輸入的設備也支援 Ultra HD Deep Color，您的圖像會更清晰。不過，如果設備不支援，可能無法正常運作。如出現此情況，請將電視的 [HDMI Ultra HD Deep Color] 設定為停用。

 
如果連接到輸入的設備也支援 Ultra HD Deep Color，您的圖像會更清晰。不過，如果設備不支援，可能無法正常運作。如出現此情況，請將電視的 [HDMI Ultra HD Deep Color] 設定為停用。

## USB

某些 USB 集線器可能不能運作。如連接至 USB 集線器的 USB 裝置未能被探測，可直接將裝置連接至於電視上的 USB 端口。

## IR 發射器

- 使用 IR 發送器控制機頂盒（纜線/衛星/IP/OTT），藍光/DVD 播放機，Soundbar，遊戲主機等等。（視乎銷售國家而定）
- 將 IR 發送器纜線連接到電視的 IR 發送器連接埠。
- 如下圖所示般將 IR 發射器的兩側（一個或兩個）放置在外置裝置前面。
- 使用通用控制設置控制裝置。移至  →  → [連接] → [裝置連接設置] → [通用控制設置]。
- 使用隨附的 3M 膠帶保護 IR 發射器。




## 外部裝置

可用的外置裝置為：Blu-ray 播放器，HD 接收器，DVD 播放器，VCR，音效系統，USB 儲存裝置，電腦，遊戲裝置及其他外置裝置。


- 外置裝置連接視乎型號而有所不同。
- 不論電視連接埠順序為何，連接外部裝置至電視。
- 如果您在 Blu-ray/DVD 錄影機或 VCR 錄製電視節目，請確保電視訊號輸入纜線已連接電視及 DVD 錄影機或 VCR。有關錄影的詳情，請參閱連接裝置隨附的手冊。
- 有關操作說明，請參閱外部裝置手冊。
- 如果您將遊戲裝置連接至電視，使用遊戲裝置隨附的纜線。
- 於電腦模式，可能產生由解像度，垂直格式，對比度或亮度引致的雜音。如出現雜訊，將電腦輸出變更為其他解像度或將刷新率變更為其他頻率，或於 [影像] 功能表中調整亮度和對比度，直至影像變為清晰。
- 於電腦模式，部份解像度設定可能未能正常運作，視乎顯示卡而定。
- 如您在電腦上播放 Ultra HD 內容，視乎電腦性能，視訊或音訊可能會間歇性中斷。（視乎型號而定）
- 建議使用 CAT 7 網絡線連接區域網絡（LAN）。（僅限提供 LAN 連接埠時。）
- 若是 LM 系列，HDR（高動態範圍）圖像僅可通過互聯網或通過 USB 和 HDMI 1.4 相容裝置檢視。

## 使用按鈕

 只需使用按鈕，即可輕鬆操作電視功能。

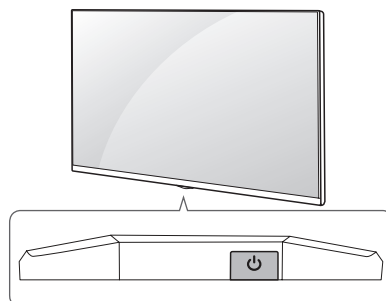

 

 
 
## 基本功能

	開機（按一下）
	關機 <sup>1</sup> （按住）
	選單控制（按下 <sup>2</sup> ）
	選單選擇（按住 <sup>3</sup> ）

- 1 所有操作中的應用程式將會關閉，令正在進行的所有錄影將會停止。（視乎銷售國家而定）
- 2 您可以在電視開啟時按下按鈕，以存取及調整選單。
- 3 當您存取調整選單時便可使用這功能。

## 調整功能表

當電視開啟時，按一下  按鈕。您可使用按鈕以調整功能表項目。

	關閉電源。
	更改輸入來源。
	調整音量。
	捲動已儲存的節目。

 
## 使用神奇遙控器

(視乎型號而定)

本手冊的描述基於遙控器的按鍵而定。請仔細閱讀本手冊並正確使用電視。

當顯示[神奇遙控器 電池電力不足。請更換電池。]時，請為遙控器更換電池。

如需安裝電池，打開電池蓋，更換電池 (1.5 V AA) 時配對電池格內的 ⊕ 及 ⊖ 端標籤，然後關上電池蓋。確保將遙控器指向電視機上的神奇遙控器感應器。如要移除電池，以相反步驟執行動作。

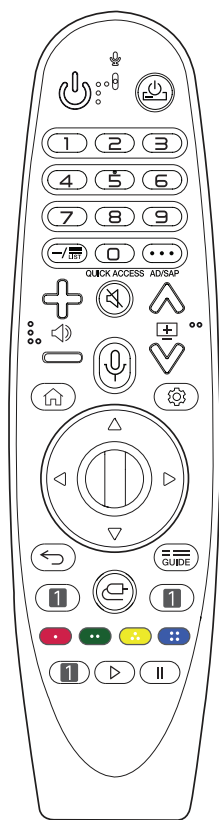

(因應產品型號或地區，部分按鈕功能和服務可能無法提供。)

\*\* 要使用按鈕，請按住1 秒以上。

⏻ (電源) 開啟或關閉電視。

⏻ (機頂盒電源) 只要將機頂盒新增至電視的通用遙控器便可開啟或關閉機頂盒。

數字鍵 輸入數字。

9" 進入[快速說明]。

— (破折號) 在號碼間插入—，例如 2-1 和 2-2。

≡ 進入已儲存節目列表。

... (更多動作) 顯示更多遙控功能。

AD/SAP" 將啟用音效說明功能。(視乎型號而定)

QUICK ACCESS" 編輯快速存取。

(快速存取是一項功能，可讓您按住數字按鈕即可直接進入指定的應用程式或 Live TV。)

⏮⏭ 調整音量。

🔇 (靜音) 打開或關閉聲音。

🔇" (靜音) 存取[協助工具]功能表。

⏮⏭ 捲動已儲存的節目。

🗣️ (語音辨識) 使用語音辨識功能時需要連接網絡。檢查是否有建議內容。(有些國家/地區不見得會提供部分建議的服務。)

🗣️" (語音辨識) 按住按鈕的同時說話，以使用語音辨識功能。

🏠 (主頁) 進用功能表。

🏠" (主頁) 顯示歷史記錄。

⚙️ (快速設定) 進入快速設定。

⚙️" (快速設定) 顯示[所有設定]功能表。

⌂ 滾輪 (確認) 按下 ⌂ 按鈕的中央以選擇功能表。您可使用 ⌂ 按鈕轉台。

△▽◀▶ (上/下/左/右) 按上，下，左或右按鈕以捲動功能表。如您按下△▽◀▶按鈕時同時使用游標，游標將於螢幕消失，神奇遙控器將以一般遙控器運作。如要再次於螢幕上顯示游標，向左及右搖一搖神奇遙控器。

↶ (返回) 返回至上一層。

↶" (返回) 清除所有 OSD 並返回先前的畫面輸入。

≡ 顯示節目指南。

📺 串流服務按鈕 連接至影片串流服務。

📺 (輸入) 更改輸入來源。

📺" (輸入) 進入[居家設定畫面]。

🔴, 🟢, 🟡, 🔵 訪問某些選單中的特殊功能。

🔴" 執行錄影功能。

▶, ⏮ (控制按鈕) 控制媒體內容。




- 請勿將新舊電池混合使用。此可導致電池過熱及洩漏。
- 沒有按照兩極正確裝入電池可能會造成電池爆炸或洩漏，引致火災，人身傷害或環境污染。
- 本裝置使用電池。您的居住地區可能會有關規定，要求您基於環境考量，妥善棄置這些電池。請洽詢地方當局，以瞭解棄置或回收的相關資訊。
- 電池內部或產品內部不可暴露於過熱的環境中，例如陽光，火光等。
- 在某些國家或收看模擬廣播時，部份按鍵可能無法使用。

## 註冊神奇遙控器


 
### 如何註冊神奇遙控器


如要使用神奇遙控器，首先與電視進行配對。

- 1 將電池放入神奇遙控器並開啟電視。
- 2 將神奇遙控器指向電視，然後按遙控器上的  滾輪（確認）。

\* 如電視無法註冊神奇遙控器，請關閉電視然後重新開啟，再試一次。

### 如何取消註冊神奇遙控器

 同時按下 （返回）和 （主頁）按鈕五秒鐘，讓神奇遙控器與電視取消配對。

\* 按住按  鈕將讓您取消並立即重新註冊神奇遙控器。



- 建議將接入點（AP）置於電視 0.2 米以外的範圍。如 AP 安裝於少於 0.2 米的範圍內，神奇遙控器可能因頻率干擾而無法正常操作。





## 使用者指南

    有關此電視的詳情，請參閱產品隨附的使用者指南。（視乎型號而定）

- 若要開啟使用指南  →  → [支持] → [使用指南]

## 疑難排解

### 無法使用遙控器控制電視。

- 請檢查產品上的遙控器感應器，然後再試一次。
- 請檢查產品和遙控器之間是否有任何障礙物。
- 請檢查電池是否仍可使用，且已正確安裝（ 對 ， 對 ）。

### 沒有畫面顯示或沒有聲音。

- 請檢查產品是否已開機。
- 請檢查電線是否已連接至牆上插頭。
- 請連接其他產品，確認牆上插頭是否有問題。

### 電視突然關機。

- 檢查電源控制設定。電源供應可能中斷。
- 檢查自動關閉功能是否在設定相關的時間啟動。
- 如果在電視開機時沒有訊號，15 分鐘後若無任何動作，電視就會自動關機。

### 連接到電腦（HDMI）時，未偵測到任何訊號。

- 使用遙控器關閉/開啟電視。
- 重新連接 HDMI 纜線。
- 在開啟電視的情況下重新啟動電腦。

### 異常顯示情況

- 如接觸產品時感覺冰冷，於開啟時可能出現「跳線」情況。此為正常情況，產品並無異常。
- 本屏幕是擁有數百萬像素的先進產品。微細黑點及/或高亮彩色光點（紅色，藍或綠色）可能以每百萬分一單位出現於顯示屏幕上。此並不代表非正常運作及並不影響產品之性能及其可靠性。此現象亦會於第三方產品出現並不接受更換或退款。
- 於不同位置（左/右/上/下方）觀看時可能感受到屏幕不同亮度及顏色顯示。此現象的出現乃顯示屏幕的特性。此與產品性能無關，並其運作正常。
- 長時間顯示靜態圖像可能會引致殘像。請避免長時間在電視螢幕顯示固定畫面。

### 產生聲音

- 「咔嚓」斷裂雜音：於觀看或關閉電視時出現的斷裂雜聲乃因溫度與濕度而導致塑料的熱收縮所產生。此等雜聲於遇熱膨脹之產品較為常見。
- 電路嗡嗡聲/屏幕訊噪：低水平雜音乃由高速切換電路以產生大量電流令產品運作時發出。其因應產品會有所不同。雜音之產生並不影響產品的性能及可靠性。



- 確保擰乾布上多餘的水分及清潔劑。
- 切勿直接在電視螢幕上噴水或清潔劑。
- 請只在乾布上噴上適度的水或清潔劑以擦拭螢幕。

## 規格

- 能源標籤上標明的每年能源消耗是根據 IEC 62087 及香港能源效益標籤計劃 (EELS) 來計算。
- 實際的能源消耗取決於使用環境 (觀看的内容, 電視設定等) 而定。

圖  
冊

廣播規格		
	數碼訊號	類比訊號
電視制式	DTMB	PAL D/K, PAL I, NTSC-M
節目範圍	DTMB : 21~69	PAL D/K : VHF/UHF 1~69, CATV 1~47 PAL I : VHF/UHF 1~69, CATV 1~47 NTSC-M : VHF/UHF 2~78, CATV 1~71
外置天線抗阻	75 $\Omega$	

無線模組 (LG5BWAC94) 規格	
無線 LAN (IEEE 802.11a/b/g/n/ac)	
頻率範圍	輸出功率 (最大)
2400 至 2483.5 MHz	17.5 dBm
5150 至 5350 MHz	18 dBm
5725 至 5850 MHz	12 dBm
Bluetooth	
頻率範圍	輸出功率 (最大)
2400 至 2483.5 MHz	9 dBm
<ul style="list-style-type: none"> <li>• 由於每個國家的波段頻道有所不同, 用戶無法更改或調整操作頻率。本產品配置之頻率為區域頻率表內。</li> <li>• 為用戶着想, 建議本裝置安裝及使用時, 應最少離用戶身體 20 厘米。</li> </ul>	

環境條件		
環境條件	操作溫度	0 °C 至 40 °C
	操作濕度	低於 80 %
	儲存溫度	-20 °C 至 60 °C
	儲存濕度	低於 85 %

- 如需有關電源供應和耗電量的詳細資訊, 請參閱附貼在產品上的標籤。
- 耗電量的測量標準以 IEC 62087 或每個國家 / 地區的能源法規為依據。
- \* 某些型號的標籤是貼在外部裝置連接端子外蓋內側。
- \* 依各型號或國家 / 地區的規定, 標籤上不一定會載明標準耗電量。

# 開放原始碼軟體注意事項

# 法規

若要依據 GPL、LGPL、MPL 及其他開放原始碼授權取得對應的原始碼，請瀏覽 <http://opensource.lge.com>。

除了開放原始碼，所有涉及的授權條款、免責聲明和版權聲明均可供下載。

LG Electronics 也可應您要求，在由您支付相關費用（如媒體成本、運費及處理費）的條件下以 CD-ROM 方式提供開放原始程式碼，如有需要請寄送電子郵件至 [opensource@lge.com](mailto:opensource@lge.com)。此服務提供的有效期限為本產品最後裝運日起計算的三年。此服務提供的有效對象為收到此資訊的任何人。

## 授權



(僅限支援神奇遙控器的型號)

## 警告!

請勿將電視機置於搖晃不穩的位置。因為電視機可能會掉落並導致嚴重個人傷害及傷亡。只要採取下列預防工作便可避免傷害事故發生（特別是兒童傷害）：

- 使用製造商建議的儲存櫃及支架置放電視。
- 只選用可安全支撐電視機的家具。
- 確保電視機不會懸在支撐家具的邊沿。
- 切勿將電視機置放在家具高處（如櫥櫃或書架），除非以適當的支撐物固定家具和電。
- 電視機和支撐家具之間不要夾置布料或其他材料。
- 告訴兒童爬上家具觸碰電視機或其控制器的危險性。

如要收藏並將電視機置放於其他地方，建議一律採用上述建議。

## 符號

~	AC 代表交流電。
==	DC 代表直流電。
回	代表第二級設備。
⏻	代表待機。
	代表「開啟」（電源）。
⚡	代表危險電壓。



## 防止殘像的重要資訊









OLED 是一項自我發光技術，對於影像品質和效能帶來了許多顯著的效益。如同任何自我發光顯示器，OLED 電視的使用者在某些情況下也可能遇到暫時的殘像現象，例如長時間在螢幕上顯示靜態影像。LG OLED 電視備有專屬功能，可保護螢幕可能產生的殘像現象。

若靜態影像持續在螢幕上顯示，螢幕亮度在螢幕的特定區域或者整個螢幕會自動降低。一旦靜態影像消失，螢幕亮度會自動回復到之前的設定。這不是產品故障。



### 可能導致殘像的影像範例

- 包含特定資訊的靜態影像或固定影像持續顯示在螢幕上，例如頻道號碼，電視台標誌，節目名稱，新聞或電影字幕和標題。
- 視訊遊戲主機的固定功能表或圖示，或者廣播的機頂盒。
- 顯示在螢幕上下左右的黑色條狀，例如 4 : 3 或 21 : 9 比例的影像。

### 防止殘像的建議措施

- 避免長時間觀看顯示以上所列影像的視訊。
- 開啟視訊長時間展示以上所列影像時，請如以下所示調整電視設定。
  -  →  → [影像] → [圖像模式設定] → [影像模式] → [Eco]
  -  →  → [影像] → [圖像模式設定] → [OLED 燈] → 調整至較低的值
  -  →  → [影像] → [OLED 螢幕保護裝置] → [標誌亮度調整] → [高]
- 關閉外部裝置的功能表列，例如機頂盒，以防長時間顯示這類裝置的功能表列。（如需說明指示，請參閱適用外部裝置的手冊。）
- 觀看持續在上下左右顯示黑色條狀的視訊時，請如以下所示調整設定，以便移除黑色條狀。
  -  →  → [影像] → [畫面比例設定] → [畫面比例] → [垂直縮放] 或 [4 向縮放]

## 與暫時殘像相關，支援影像品質的功能的資訊

- LG OLED 電視提供一項稱為「像素整理器」的功能，可協助防止產生暫時殘像現象。
- 當電視收看時間累積到 2000 小時或以上時（這相當於一年當中一天看五小時電視），「像素整理器」在電視關閉時會自動啟用。關閉電視時，螢幕上會顯示一則通知，告知「像素整理器」啟用。當電視關閉後，此功能會執行一小時。在程序幾乎完成時，可能會在螢幕上方或底部顯示一條水平線。
- 您也可以透過電視功能表手動啟用「像素整理器」： →  → [影像] → [OLED 螢幕保護裝置] → [像素整理器]。
- 每當累積收看電視超過四小時，「像素整理器」會在關閉電視後自動啟用數分鐘。（注意：如果電視的電源線未連接或者主電源關閉，「像素整理器」將不會啟用。）



產品的型號和序號位在產品的背面和其中一個側邊。  
請記下下列資料，以備需要服務時使用。

型號 \_\_\_\_\_

序號 \_\_\_\_\_



## OWNER'S MANUAL

Safety and Reference

# LG OLED TV


---

Please read this manual carefully before operating your set and retain it for future reference.

[www.lg.com](http://www.lg.com)


Copyright © 2020 LG Electronics Inc. All Rights Reserved.

# Warning! Safety Instructions





**CAUTION**

RISK OF ELECTRIC SHOCK DO NOT OPEN



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT REMOVE COVER (OR BACK). NO USER-SERVICEABLE PARTS INSIDE. REFER TO QUALIFIED SERVICE PERSONNEL.

 This symbol is intended to alert the user to the presence of uninsulated "dangerous voltage" within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.

 This symbol is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE AND ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

- TO PREVENT THE SPREAD OF FIRE, KEEP CANDLES OR OTHER ITEMS WITH OPEN FLAMES AWAY FROM THIS PRODUCT AT ALL TIMES.
- **Do not place the TV and/or remote control in the following environments:**
  - Keep the product away from direct sunlight.
  - An area with high humidity such as a bathroom.
  - Near any heat source such as stoves and other devices that produce heat.
  - Near kitchen counters or humidifiers where they can easily be exposed to steam or oil.
  - An area exposed to rain or wind.
  - Do not expose to dripping or splashing and do not place objects filled with liquids, such as vases, cups, etc. on or over the apparatus (e.g., on shelves above the unit).
  - Near flammable objects such as gasoline or candles, or expose the TV to direct air conditioning.
  - Do not install in excessively dusty places.

Otherwise, this may result in fire, electric shock, combustion/explosion, malfunction or product deformation.

## • Ventilation

 
- Install your TV where there is proper ventilation. Do not install in a confined space such as a bookcase.
- Do not install the product on a carpet or cushion.
- Do not block or cover the product with cloth or other materials while unit is plugged in.
- Take care not to touch the ventilation openings. When watching the TV for a long period, the ventilation openings may become hot.
- Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.
- Do not move the TV whilst the Power cord is plugged in.
- Do not use a damaged or loosely fitting power cord.
- Be sure do grasp the plug when unplugging the power cord. Do not pull on the power cord to unplug the TV.
- Do not connect too many devices to the same AC power outlet as this could result in fire or electric shock.
- **Disconnecting the Device from the Main Power**
  - The power plug is the disconnecting device. In case of an emergency, the power plug must remain readily accessible.
- Do not let your children climb or cling onto the TV. Otherwise, the TV may fall over, which may cause serious injury.
- **Outdoor Antenna Grounding** (Can differ by country):
  - If an outdoor antenna is installed, follow the precautions below. An outdoor antenna system should not be located in the vicinity of overhead power lines or other electric light or power circuits, or where it can come in contact with such power lines or circuits as death or serious injury can occur.

- **Grounding** (Except for devices which are not grounded.)
  - TV with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet. Ensure that you connect the earth ground wire to prevent possible electric shock.
- Never touch this apparatus or antenna during a lightning storm. You may be electrocuted.
- Make sure the power cord is connected securely to the TV and wall socket if not secured damage to the Plug and socket may occur and in extreme cases a fire may break out.
- Do not insert metallic or inflammable objects into the product. If a foreign object is dropped into the product, unplug the power cord and contact the customer service.
- Do not touch the end of the power cord while it is plugged in. You may be electrocuted.
- **If any of the following occur, unplug the product immediately and contact your local customer service.**
  - The product has been damaged.
  - If water or another substance enters the product (like an AC adapter, power cord, or TV).
  - If you smell smoke or other odors coming from the TV
  - When lightning storms or when unused for long periods of time. Even the TV is turned off by remote control or button, AC power source is connected to the unit if not unplugged in.
- Do not use high voltage electrical equipment near the TV (e.g., a bug zapper). This may result in product malfunction.
- Do not attempt to modify this product in any way without written authorization from LG Electronics. Accidental fire or electric shock can occur. Contact your local customer service for service or repair. Unauthorized modification could void the user's authority to operate this product.
- Use only an authorized attachments / accessories approved by LG Electronics. Otherwise, this may result in fire, electric shock, malfunction, or product damage.
- Never disassemble the AC adapter or power cord. This may result in fire or electric shock.
- Handle the adapter carefully to avoid dropping or striking it. An impact could damage the adapter.
- To reduce the risk of fire or electrical shock, do not touch the TV with wet hands. If the power cord prongs are wet or covered with dust, dry the power plug completely or wipe dust off.

- **Batteries**
  - Store the accessories (battery, etc.) in a safe location out of the reach of children.
  - Do not short circuit, disassemble, or allow the batteries to overheat. Do not dispose of batteries in a fire. Batteries should not be exposed to excessive heat.
  - Caution: Risk of fire or explosion if the battery is replaced by an incorrect type.
- **Moving**
  - When moving, make sure the product is turned off, unplugged, and all cables have been removed. It may take 2 or more people to carry larger TVs. Do not press or put stress on the front panel of the TV. Otherwise, this may result in product damage, fire hazard or injury.
- Keep the packing anti-moisture material or vinyl packing out of the reach of children.
- Do not allow an impact shock, any objects to fall into the product, and do not drop anything onto the screen.
- Do not press strongly upon the panel with a hand or a sharp object such as a nail, pencil, or pen, or make a scratch on it. It may cause damage to screen.
- **Cleaning**
  - When cleaning, unplug the power cord and wipe gently with a soft/dry cloth. Do not spray water or other liquids directly on the TV. Do not clean your TV with chemicals including glass cleaner, any type of air freshener, insecticide, lubricants, wax (car, industrial), abrasive, thinner, benzene, alcohol etc., which can damage the product and/or its panel. Otherwise, this may result in electric shock or product damage.

## Preparing

- If the TV is turned on for the first time after it was shipped from the factory, initialization of the TV may take a few minutes.
- Image shown may differ from your TV.
- Your TV's OSD (On Screen Display) may differ slightly from that shown in this manual.
- The available menus and options may differ from the input source or product model that you are using.
- New features may be added to this TV in the future.
- The device must be easily accessed to a location outlet near the access. Some devices are not made by turning on / off button, turning off the device and unplugging the power cord.
- The items supplied with your product may vary depending on the model.
- Product specifications or contents of this manual may be changed without prior notice due to upgrade of product functions.
- For an optimal connection, HDMI cables and USB devices should have bezels less than 8 mm thick, 18 mm width and 8 mm a wire diameter. Use an extension cable that supports USB 2.0 or higher if the USB cable or USB memory stick does not fit into your TV's USB port.



\*  $A \leq 8 \text{ mm}$

\*  $B \leq 18 \text{ mm}$

\*  $C \leq 8 \text{ mm}$

- Use a certified cable with the HDMI logo attached.
- If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI Cable Types
  - Ultra High Speed HDMI<sup>®</sup>/TM cable (3 m or less)

## Separate Purchase

Separate purchase items can be changed or modified for quality improvement without any notification. Contact your dealer to buy these items. These devices only work with certain models.

The model name or design may be changed depending on the upgrade of product functions, manufacturer's circumstances or policies.

### Magic Remote Control

MR20GA

Check whether your TV model supports Bluetooth in the Wireless Module Specification to verify whether it can be used with the Magic Remote.

### Stand

 
(Depending on model)

Stand	Model
AN-GXDV55	OLED55GX*
AN-GXDV65	OLED65GX*
AN-GXDV77	OLED77GX*

## Wall Mounting Bracket

(Depending on model)

Make sure to use screws and wall mount bracket that meet the VESA standard. Standard dimensions for the wall mount kits are described in the following table.

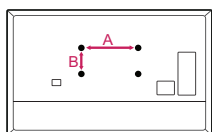

<b>Model</b>	OLED55/65/77GX*
<b>VESA (A x B) (mm)</b>	300 x 300
<b>Standard screw</b>	M6
<b>Number of screws</b>	4
<b>Wall mount bracket</b>	OLW480B


## Lifting and moving the TV

 Please note the following advice to prevent the TV from being scratched or damaged and for safe transportation regardless of its type and size.


- It is recommended to move the TV in the box or packing material that the TV originally came in.
- Before moving or lifting the TV, disconnect the power cord and all cables.
- When holding the TV, the screen should face away from you to avoid damage.



- Hold the side and bottom of the TV frame firmly. Make sure not to hold the transparent part, speaker, or speaker grill area.

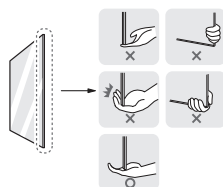

 - When transporting a large TV, there should be at least 2 people.
- When transporting the TV by hand, hold the TV as shown in the following illustration.

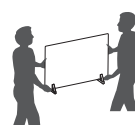


- When transporting the TV, do not expose the TV to jolts or excessive vibration.
- When transporting the TV, keep the TV upright, never turn the TV on its side or tilt towards the left or right.
- Do not apply excessive pressure to cause flexing / bending of frame chassis as it may damage screen.
- When handling the TV, be careful not to damage the protruding buttons.



- Avoid touching the screen at all times, as this may result in damage to the screen.
- When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

## Mounting on the Table

 - 1 Lift and tilt the TV into its upright position on a table.
  - Leave a 10 cm (minimum) space from the wall for proper ventilation.

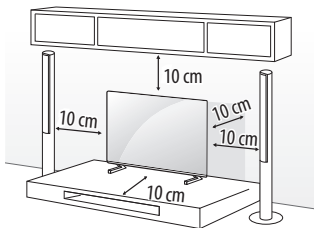


(Depending on model)

- 2 Connect the power cord to a wall outlet.



- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. (Doing so may damage the product.)
- If you install the TV on a stand, you need to take actions to prevent the product from overturning. Otherwise, the product may fall over, which may cause injury.
- Do not use any unapproved items to ensure the safety and product life span.
- Any damage or injuries caused by using unapproved items are not covered by the warranty.
- Make sure that the screws are inserted correctly and fastened securely. (If they are not fastened securely enough, the TV may tilt forward after being installed.) Do not use too much force and over tighten the screws; otherwise screw may be damaged and not tighten correctly.
- When installing on a cabinet or a shelf using a stand, make sure its width is greater than that of the TV.

## Securing TV to the Wall

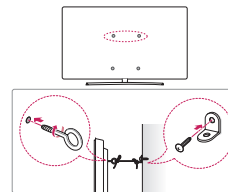 

(Depending on model)


- 1 Insert and tighten the eye-bolts, or TV brackets and bolts on the back of the TV.
  - If there are bolts inserted at the eye-bolts position, remove the bolts first.
- 2 Mount the wall brackets with the bolts to the wall. Match the location of the wall bracket and the eye-bolts on the rear of the TV.
- 3 Connect the eye-bolts and wall brackets tightly with a sturdy rope. Make sure to keep the rope horizontal with the flat surface.

- Use a platform or cabinet that is strong and large enough to support the TV securely.
- Brackets, bolts and ropes are not provided. You can obtain additional accessories from your local dealer.



## Mounting to the Wall

 Attach an optional wall mount bracket at the rear of the TV carefully and install the wall mount bracket on a solid wall perpendicular to the floor. When you attach the TV to other building materials, please contact qualified personnel. LG recommends that wall mounting be performed by a qualified professional installer. We recommend the use of LG's wall mount bracket. LG's wall mount bracket is easy to move with cables connected. When you do not use LG's wall mount bracket, please use a wall mount bracket where the device is adequately secured to the wall with enough space to allow connectivity to external devices. It is advised to connect all the cables before installing fixed wall mounts.

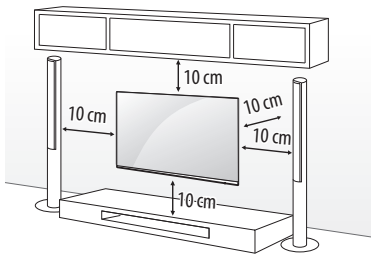

(Depending on model)



- Remove the stand before installing the TV on a wall mount by performing the stand attachment in reverse.
- For more information of screws and wall mount bracket, refer to the Separate purchase.
- If you intend to mount the product to a wall, attach VESA standard mounting interface (optional parts) to the back of the product. When you install the set to use the wall mounting bracket (optional parts), fix it carefully so as not to drop.
- When mounting a TV on the wall, make sure not to install the TV by hanging the power and signal cables on the back of the TV.
- Do not install this product on a wall if it could be exposed to oil or oil mist. This may damage the product and cause it to fall.
- When installing the Full Contact Wall Mount, the TV may not be contacted firmly against the wall due to some wall conditions.



For more information, watch the installation video on your smart device.

## Precautions for Safety

(Except for OLW480B)

- Professional installers should read this manual carefully to ensure proper installation.
- Professional installers should forward this manual to customers after installation and encourage them to read and store it in a convenient place for future reference.  
After reading the installation manual, keep it in a convenient place for future reference.



- Ask a professional installer appointed by the store for installation of the product.  
Installation by someone other than a professional installer is extremely dangerous and may result in personal injury.
- Do not install the product in an unstable site that cannot withstand its weight.  
If the installation site lacks sufficient rigidity, the product may fall and cause personal injury.
- Contact a professional installer appointed by the store prior to moving or replacing the product after installation.  
Installation is a technical task and safety issues may arise if an individual attempts to install or move the product personally.
- Do not hang on the product or subject it to severe impact after installation.  
Doing so may cause the product to fall and cause personal injury.
- When installing the product on a wall, do not hang the power line or signal cables from the back of the TV.  
This can damage the cords, resulting in a fire, electrical shock or malfunction of the product.
- Be sure to wear work gloves when installing the product.
  - Installing with unprotected hands may result in injury.



- Install the product according to the instructions in the installation manual.

Failure to install the product according to the instructions in the installation manual can result in serious personal injury or product damage.

- Be sure to have at least two people when installing the product or adjusting the product's height.  
Attempting to perform installation or adjustments personally may result in personal injury or damage to the product.

- Make sure a wall is available prior to proceeding with installation. Make use of the anchors and screws provided with the product.

Use of any unauthorized anchors or screws may not support the product's weight, which poses safety risks.

- When drilling in the wall for installation, be sure to use drill bits and drills of the specified diameter. Follow the instructions for the hole depth.

Drilling and installing the product in ways other than specified in the installation manual may result in an unstable installation and potential safety issues.

- Do not wipe the product with a wet towel or use any heating equipment or humidifier under the place where the product is installed.

Liquid water or vapor may enter the product and excessive heat may cause fire, electric shock, or malfunction.

- Do not install the product near a fire sprinkler or detector, a place where vibration or shock may occur or near a high-voltage wire or power source.

- Unplug the product's power cord from the wall outlet before installing.

Installing the product while the power cord is plugged in may result in electric shock or fire.

- Do not install the product with bare hands. Be sure to wear work gloves.

Attempting installation without work gloves may cause personal injury.

- Connect the product with the supplied cable. Use of an unauthorized cable may result in damage by friction with the wall. Make sure to use the supplied cable gender. (This may vary by model.)

## Before Installation

(Except for OLW480B)

 
- Do not use the product for any purpose other than installing the TV on a wall.
- Avoid product damage and safety accidents caused by careless installing or use of improper or unauthorized wall mount.
- Follow the instructions in the installation manual for a convenient installation of the wall mount.
- Immediately discontinue installation and contact the service center if you cannot fully understand the installation process.  
Use a professional installer if any installation issues remain after the inquiry.
- Installation of this product on a concrete wall or wood stud is recommended. Installation of this product on other surfaces (Dry wall, plywood, bricks, etc.) is not recommended. Improper installation may result in the product falling.
- Install the product only on a vertical wall.  
Do not install on a tilted wall that exceeds building standards or on the heavily tilted wall or ceiling.  
LG is not responsible for problems caused by improper installation of the product, e.g., heavily tilted walls and ceilings.
- Check the enclosed accessories before installation. We are not responsible for any lost or damaged accessories after the inner packaging is opened.
- When an infant or small child swallows the enclosed accessories, various safety accidents such as choking may occur. Keep the enclosed accessories out of the reach of infants and children.
- When tightening screws, tighten until fully snug.  
Avoid using excessive force when tightening the screws. Doing so may damage the wall and product or reduce the rigidity or performance of the product.
- Avoid installing a TV that exceeds the specified tensile load, and do not allow any external force to be applied to the product.
- Avoid accidents by using work tools with care during installation.

## Tools for Installation

- "+" shaped screwdriver (manual or electric) / level / drill / Ø 8 mm drill bit for concrete or Ø 4 mm drill bit for steel

## Securing TV to the Wall

(Except for OLW480B)

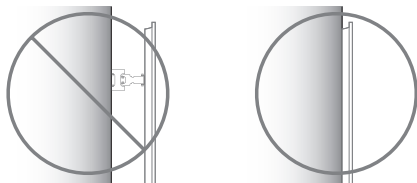

- Please use the TV close to the wall after installation.

## How to fix anchors and screws

 
(Except for OLW480B)

Please make sure that:


- Check that the material and thickness of the wall and finishing material comply with the installation manual. Before beginning the mounting process, you must be sure the wall is able to support the weight of the TV.
- Should use the enclosed anchors and screws on crack-free concrete walls.
- Never install the product on a plasterboard or wall made of paper or medium-density fiberboard (MDF). When it is necessary to install the product on such wall, anchor screws must be fastened to retaining walls (concrete) or wood Stud inside the finishing material.
- The wall mount should be attached to a stud. This usually will not be a problem, but depending on individual circumstances, there may be cases when the ability to mount into a stud is not possible. In this case, there are a variety of drywall anchors, such as toggle bolts, which may provide a solution. If using drywall anchors, please be sure the anchors and the wall have the ability to support the weight of your TV. Please note that the supplied anchors may not be the correct ones for your individual situation, so you should check with a local professional.
- Other unspecified walls must be capable of supporting pullout loads of over 70 kgf (686 N) and shear loads of over 100 kgf (980 N) per fastener.
- Use an  $\varnothing$  8 mm drill bit for concrete and a hammer (impact) drill or  $\varnothing$  4 mm drill bit for wood stud to drill holes.

(For installation on concrete wall)


- 1 Drill holes in anchor locations with a drill bit of  $\varnothing$  8 mm to a depth of 80 mm to 100 mm.



- 2 Clean the drilled holes.

 


 - 3 Insert the enclosed anchors for fixing the wall mount into the holes. (Use a hammer when inserting anchors.)




Wall mounting anchor

 
- 4 Push the wall mount support closely toward the wall to match the hole locations.



 - 5 Tighten screws for fixing the wall mount to the holes. At this time, tighten the screws to a torque of between 45 kgf/cm to 60 kgf/cm.




Wall mounting screw

 

(For installation on wood stud)

 Use the Ø 4 mm drill bit for wood to drill holes with the depth of 76 mm. (Clean the drilled hole.)

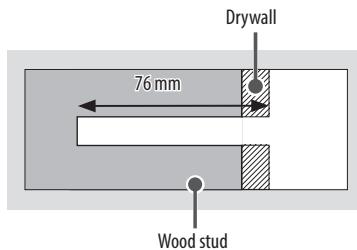


Without using the wall mounting anchor, fasten the wall mounting screw directly to the wood stud.

## After Installation



 - When connecting additional cables from the sides, we recommend holding the centre of the TV horizontally or vertically and pulling the product to make sure there is sufficient distance from the wall before connecting.
- When connecting additional cables from the bottom, we recommend releasing the TV from the wall mount before connecting.
- Use cable management systems to arrange the cables at the bottom of the TV as shown below. Cable managements are not provided with the product, so purchase them separately.  
(For example)

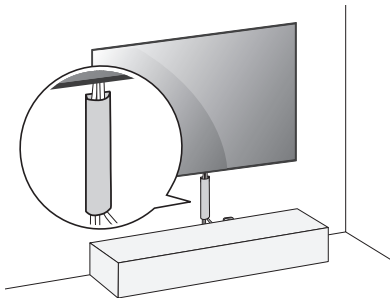

- After installing the product, be sure to use it adhered to the wall.
  - Using the product while it is not adhered to the wall may damage or shake the product.

## Connections

Connect various external devices to the TV and switch input modes to select an external device. For more information of external device's connection, refer to the manual provided with each device.

### Antenna/Cable

Connect the TV to a wall antenna socket with an RF cable (75 Ω).

- Use a signal splitter to use more than 2 TVs.
- If the image quality is poor, install a signal amplifier properly to improve the image quality.
- If the image quality is poor with an antenna connected, try to realign the antenna in the correct direction.
- An antenna cable and converter are not supplied.
- This TV cannot receive ULTRA HD (3840 x 2160 pixels) broadcasts directly because the related standards have not been confirmed.

### Other connections

Connect your TV to external devices. For the best picture and audio quality, connect the external device and the TV with the HDMI cable. Some separate cable is not provided.

#### HDMI


 
- When connecting the HDMI cable, the product and external devices should be turned off and unplugged.
- Supported HDMI Audio format (Depending on model):  
True HD (48 kHz),  
Dolby Digital / Dolby Digital Plus (32 kHz / 44.1 kHz / 48 kHz),  
PCM (32 kHz / 44.1 kHz / 48 kHz / 96 kHz / 192 kHz)
- → → [Picture] → [Additional Settings] → [HDMI Ultra HD Deep Colour]
  - On: Support 4K @ 50/60 Hz (4:4:4, 4:2:2, 4:2:0),  
4K @ 100/120 Hz (4:4:4, 4:2:2, 4:2:0)
  - Off: Support 4K @ 50/60 Hz (4:2:0)


If the device connected to Input Port also supports Ultra HD Deep Colour, your picture may be clearer. However, if the device doesn't support it, it may not work properly. In that case, change the TV's [HDMI Ultra HD Deep Colour] setting to Off.

## USB

 Some USB Hubs may not work. If a USB device connected using a USB Hub is not detected, connect it to the USB port on the TV directly.

## IR Blaster

- Control the set-top box (cable/satellite/IP/OTT), Blu-ray/DVD player, soundbar, game consoles, etc., using the IR Blaster. (Depending on country)
  - Connect the IR Blaster cable to the TV's IR Blaster port.
  - Place both ends (one or two) of the IR Blaster in front of the external device as shown in the picture below.
  - Use universal control settings to control the device. Go to  →  → [Connection] → [Device Connection Settings] → [Universal Control Settings].
  - Secure the IR Blaster with the 3M tape provided.




## External Devices

Available external devices are: Blu-ray player, HD receivers, DVD players, VCRs, audio systems, USB storage devices, PC, gaming devices, and other external devices.


- The external device connection may differ from the model.
- Connect external devices to the TV regardless of the order of the TV port.
- If you record a TV program on a Blu-ray/DVD recorder or VCR, make sure to connect the TV signal input cable to the TV through a DVD recorder or VCR. For more information of recording, refer to the manual provided with the connected device.
- Refer to the external equipment's manual for operating instructions.
- If you connect a gaming device to the TV, use the cable supplied with the gaming device.
- In PC mode, there may be noise associated with the resolution, vertical pattern, contrast or brightness. If noise is present, change the PC output to another resolution, change the refresh rate to another rate or adjust the brightness and contrast on the [Picture] menu until the picture is clear.
- In PC mode, some resolution settings may not work properly depending on the graphics card.
- If Ultra HD content is played on your PC, video or audio may become disrupted intermittently depending on your PC's performance. (Depending on model)
- When connecting via a wired LAN, it is recommended to use a CAT 7 cable. (Only when **LAN** port is provided.)
- For LM series, HDR (High Dynamic Range) pictures can be viewed over the Internet or via USB and HDMI 1.4 compatible devices.

## Using Button

 You can simply operate the TV functions, using the button.

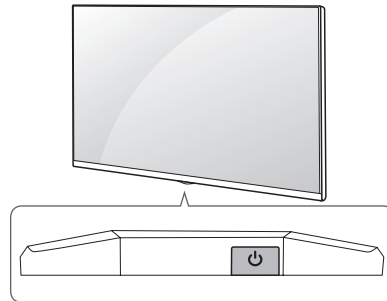






## Basic functions

	Power On (Press)
	Power Off <sup>1</sup> (Press and Hold)
	Menu Control (Press <sup>2</sup> )
	Menu Selection (Press and Hold <sup>3</sup> )

- All running apps will close, and any recording in progress will stop. (Depending on country)
- You can access and adjust the menu by pressing the button when TV is on.
- You can use the function when you access menu control.

## Adjusting the menu

When the TV is turned on, press the  button one time. You can adjust the Menu items using the button.

	Turns the power off.
	Changes the input source.
	Adjusts the volume level.
	Scrolls through the saved programmes.

 
# Using Magic Remote Control

(Depending on model)

The descriptions in this manual are based on the buttons on the remote control. Please read this manual carefully and use the TV correctly.

When the message [Magic Remote battery is low. Please change the battery.] is displayed, replace the battery.

To replace batteries, open the battery cover, replace batteries (1.5 V AA) matching the ⊕ and ⊖ ends to the label inside the compartment, and close the battery cover. Be sure to point the magic remote toward the remote control sensor on the TV. To remove the batteries, perform the installation actions in reverse.

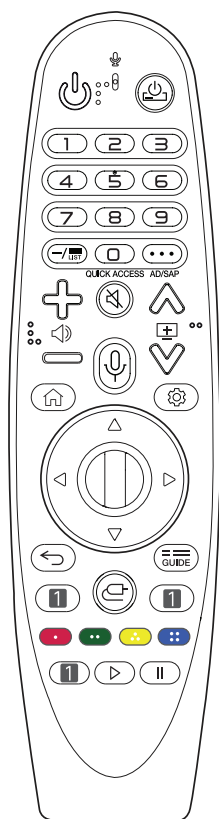

(Some buttons and services may not be provided depending on models or regions.)

**\*\* To use the button, press and hold for more than 1 second.**

**(POWER)** Turns the TV on or off.

**(STB POWER)** You can turn your set-top box on or off by adding the set-top box to the universal remote control for your TV.

**Number buttons** Enters numbers.

Accesses the [Quick Help].

**(DASH)** Inserts a — between numbers such as 2-1 and 2-2.

Accesses the saved programmes list.

**(More Actions)** Displays more remote control functions.

**AD/SAP** Audio descriptions function will be enabled. (Depending on the model)

**QUICK ACCESS** Edits QUICK ACCESS.

(QUICK ACCESS is a feature that allows you to enter a specified app or Live TV directly by pressing and holding the number buttons.)

Adjusts the volume level.

**(MUTE)** Mutes all sounds.

**(MUTE)** Accesses the [Accessibility] menu.

Scrolls through the saved programmes.

**(Voice recognition)** Network connection is required to use the voice recognition function. Check for recommended content. (Some recommended services may not be available in some countries.)

**(Voice recognition)** Speak while pressing and holding the button to use the voice recognition feature.

**(HOME)** Accesses the Home menu.

**(HOME)** Shows the previous history.

**(Q. Settings)** Accesses the Quick Settings.

**(Q. Settings)** Displays the [All Settings] menu.

**Wheel (OK)** Press the center of button to select a menu. You can change programmes by using button.

**(up/down/left/right)** Press the up, down, left or right button to scroll the menu. If you press buttons while the pointer is in use, the pointer will disappear from the screen and Magic Remote will operate like a general remote control. To display the pointer on the screen again, shake Magic Remote to the left and right.

**(BACK)** Returns to the previous screen.

**(BACK)** Clears on-screen displays and returns to last input viewing.

Shows programme guide.

**Streaming Service buttons** Connects to the Video Streaming Service.

**(INPUT)** Changes the input source.

**(INPUT)** Accesses the [Home Dashboard].

, , , These access special functions in some menus.

**\*\*** Runs the record function.

**(Control buttons)** Controls media contents.



- Do not mix new batteries with old batteries. This may cause the batteries to overheat and leak.
- Failure to match the correct polarities of the battery may cause the battery to burst or leak, resulting in fire, personal injury, or ambient pollution.
- This apparatus uses batteries. In your community there might be regulations that require you to dispose of these batteries properly due to environmental considerations. Please contact your local authorities for disposal or recycling information.
- Batteries inside or inside the product shall not be exposed to excessive heat such as sunshine, fire or the like.
- In Analogue TV and some countries, some remote control buttons may not work.

## Registering Magic Remote Control

### How to register the Magic Remote Control

To use the Magic Remote, first pair it with your TV.

- 1 Put batteries into the Magic Remote and turn the TV on.
- 2 Point the Magic Remote at your TV and press the **Wheel (OK)** on the remote control.

\* If the TV fails to register the Magic Remote, try again after turning the TV off and back on.

### How to deregister the Magic Remote Control

Press the (**BACK**) and (**HOME**) buttons at the same time, for five seconds, to unpair the Magic Remote with your TV.

\* Pressing and holding the button will let you cancel and re-register Magic Remote at once.



- It is recommended that an Access Point (AP) be located more than 0.2 m away from the TV. If the AP is installed closer than 0.2 m the Magic remote control may not perform as expected due to frequency interference.

## User Guide

For more information about this TV, read the USER GUIDE embedded in the product. (Depending on model)

- To open the USER GUIDE → → [Support] → [User Guide]

## Troubleshooting

### Cannot control the TV with the remote control.

- Check the remote control sensor on the product and try again.
- Check if there is any obstacle between the product and the remote control.
- Check if the batteries are still working and properly installed ( to , to ).

### No image display and no sound is produced.

- Check if the product is turned on.
- Check if the power cord is connected to a wall outlet.
- Check if there is a problem in the wall outlet by connecting other products.

### The TV turns off suddenly.

- Check the power control settings. The power supply may be interrupted.
- Check if the auto-off function is activated on the settings related time.
- If there is no signal while the TV is on, the TV will turn off automatically after 15 minutes of inactivity.

### When connecting to the PC (HDMI), no signal is detected.

- Turn the TV off/on using the remote control.
- Reconnect the HDMI cable.
- Restart the PC with the TV on.

### Abnormal Display

- If the product feels cold to the touch, there may be a small “flicker” when it is turned on. This is normal, there is nothing wrong with product.
- This panel is an advanced product that contains millions of pixels. You may see tiny black dots and/or brightly coloured dots (red, blue or green) at a size of 1 ppm on the panel. This does not indicate a malfunction and does not affect the performance and reliability of the product. This phenomenon also occurs in third-party products and is not subject to exchange or refund.
- You may find different brightness and colour of the panel depending on your viewing position(left/right/top/down). This phenomenon occurs due to the characteristic of the panel. It is not related with the product performance, and it is not malfunction.
- Displaying a still image for a prolonged period of time may cause image sticking. Avoid displaying a fixed image on the TV screen for a long period of time.

**Generated Sound**

- “Cracking” noise: A cracking noise that occurs when watching or turning off the TV is generated by plastic thermal contraction due to temperature and humidity. This noise is common for products where thermal deformation is required.
- Electrical circuit humming/panel buzzing: A low level noise is generated from a high-speed switching circuit, which supplies a large amount of current to operate a product. It varies depending on the product. This generated sound does not affect the performance and reliability of the product.



- Make sure to wring any excess water or cleaner from the cloth.
- Do not spray water or cleaner directly onto the TV screen.
- Make sure to spray just enough of water or cleaner onto a dry cloth to wipe the screen.



# Specifications

- The annual energy consumption indicated on the energy label is measured in accordance with IEC 62087 and the Hong Kong Energy Efficiency Labelling Scheme (EELS).
- The actual energy consumption depends on the usage environment (the content watched, TV settings, etc.).

Broadcasting specifications		
	Digital TV	Analogue TV
Television system	DTMB	PAL D/K, PAL I, NTSC-M
Programme coverage	DTMB: 21~69	PAL D/K: VHF/UHF 1~69, CATV 1~47 PAL I: VHF/UHF 1~69, CATV 1~47 NTSC-M: VHF/UHF 2~78, CATV 1~71
External antenna impedance	75 $\Omega$	

Wireless module (LGSBWAC94) specifications	
Wireless LAN (IEEE 802.11a/b/g/n/ac)	
Frequency Range	Output Power (Max.)
2400 to 2483.5 MHz	17.5 dBm
5150 to 5350 MHz	18 dBm
5725 to 5850 MHz	12 dBm
Bluetooth	
Frequency Range	Output Power (Max.)
2400 to 2483.5 MHz	9 dBm
<ul style="list-style-type: none"> <li>• As band channels can vary per country, the user cannot change or adjust the operating frequency. This product is configured for the regional frequency table.</li> <li>• For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.</li> </ul>	

Environment condition		
Environment condition	Operating Temperature	0 °C to 40 °C
	Operating Humidity	Less than 80 %
	Storage Temperature	-20 °C to 60 °C
	Storage Humidity	Less than 85 %

- For information of the power supply and power consumption, refer to the label attached to the product.
- The typical power consumption is measured in accordance with IEC 62087 or each country's energy regulations.
- \* On some models, the label is inside the external device connection terminal cover.
- \* Depending on the model or country, the typical power consumption may not be on label.

## Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

## Licenses



(Magic Remote supported models only)

## Regulatory

### WARNING!

Never place a television set in an unstable location. A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- Using cabinets or stands recommended by the manufacturer of the television set.
- Only using furniture that can safely support the television set.
- Ensuring the television set is not overhanging the edge of the supporting furniture.
- Not placing the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- Not placing the television set on cloth or other materials that may be located between the television set and supporting furniture.
- Educating children about the dangers of climbing on furniture to reach the television set or its controls.

If your existing television set is being retained and relocated, the same considerations as above should be applied.

### Symbols

~	Refers to alternating current(AC).
==	Refers to direct current(DC).
□	Refers to class II equipment.
⏻	Refers to stand-by.
I	Refer to "ON" (power).
⚡	Refers to dangerous voltage.

## Important Information for Preventing Image Retention









OLED is a self-emissive technology, which brings many significant benefits to image quality and performance. As with any self-emitting display, it is possible for users of OLED TVs to experience temporary image retention under certain conditions, such as when displaying a static image on the screen for a long time. LG OLED TVs incorporate dedicated functions that protect the screen from possible image retention.

If a static image persists on screen, screen brightness is automatically reduced in specific areas of, or across the entire screen. Once the static image disappears, screen brightness will automatically return to its prior setting. This is not a product malfunction.



### Examples of Images that may Cause Image Retention

- Still images or fixed images containing certain information that are displayed uninterrupted on the screen, such as channel numbers, station logos, program titles, news or movie subtitles, and headlines.
- Fixed menu or icons for video game consoles or broadcasting set-top boxes.
- Black bars shown on the left, right, top, or bottom of the screen, such as in images with a 4:3 or 21:9 ratio.

### Recommended Measures for Preventing Image Retention

- Avoid watching a video displaying an image as listed above for extended periods of time.
- Adjust your TV settings as below when turning on a video exhibiting an image as listed above for extended periods of time.
  -  →  → [Picture] → [Picture Mode Settings] → [Picture Mode] → [Eco]
  -  →  → [Picture] → [Picture Mode Settings] → [OLED LIGHT] → Adjust to lower value
  -  →  → [Picture] → [OLED Screen Saver] → [Logo Luminance Adjustment] → [High]
- Turn off the menu bar of an external device, such as a set-top box, to prevent long-term display of the menu bar of such device. (Please refer to the manual of the applicable external device for instructions.)
- Adjust the settings as below when watching a video constantly showing black bars on the left, right, top or bottom, in order to remove the black bars.
  -  →  → [Picture] → [Aspect Ratio Settings] → [Aspect Ratio] → [Vertical Zoom] or [4-Way Zoom]

## Information on Functions Supporting Image Quality in Relation to Temporary Image Retention

- LG OLED TVs provide a feature called Pixel Refresher, which helps to prevent temporary image retention.
- When the accumulated television viewing time reaches 2,000 hours or more (this is equivalent to watching TV for five hours a day over the course of a year), Pixel Refresher will be automatically activated once your TV is turned off. When turning off your TV, a notice will appear on the screen informing the activation of Pixel Refresher. This feature will run for an hour while your TV is turned off. A horizontal line may appear at the top or bottom of the screen when the process is almost finished.
- You may also manually activate Pixel Refresher via the TV menu:  →  → [Picture] → [OLED Screen Saver] → [Pixel Refresher].
- Whenever you watch your TV for more than four cumulative hours, Pixel Refresher will be automatically activated for a few minutes once your TV is turned off. (Note: Pixel Refresher will not be activated if the power cord of your TV is not plugged in or the main power is off.)



The model and serial number of the product are located on the back and on one side of the product. Record them below in case you ever need service.

Model \_\_\_\_\_

Serial No. \_\_\_\_\_