



ENGLISH

SIMPLE MANUAL

*MUSICflow* P5

Portable  
Bluetooth Speaker

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

NP5550W  
NP5550WO

NP5550WL  
NP5550B

NP5550BR  
NP5550WG

NP5550NC  
NP5558MC

NP5559NC



\* M F L 6 9 3 0 6 0 2 9 \*

[www.lg.com](http://www.lg.com)

## Safety Information

**CAUTION:** TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

### **WARNING:**

- To prevent fire or electric shock hazard, do not expose this product to rain or moisture.
- Do not install this equipment in a confined space such as a book case or similar unit.
- This unit contains magnets which can be harmful to some kind of object (Ex : Magnetic card, Pacemaker etc.).

### **CAUTION:**

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.
- The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- It is recommended that you use the 5 V AC adapter (more than 1.8 A) with this device. If you do not use the recommended adapter, charging is unavailable or charging time may differ.

- To avoid fire or electric shock, do not open the unit. contact to qualified personnel only.
- Do not leave the unit in a place near the heating appliances or subject to direct sunlight, moisture, or mechanical shock.
- To clean the unit, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.
- Do not use volatile liquids such as insecticide spray near the unit. Wiping with strong pressure may damage the surface. Do not leave rubber or plastic products in contact with the unit for a long period of time.
- Do not place the unit over the vehicle's air bag. When the air bag deploys, it may result in injury. Before using in the car, fix the unit.
- Do not use the handsfree function during driving a car.
- Do not leave the unit on an unstable place such as high shelves. it may fall down because of the vibration of the sound.
- Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

**CAUTION when using this product in environments of low humidity.**

- It may cause static electricity in environments of low humidity.
- It is recommended to use this product after touching any metal object which conducts electricity.

**CAUTION concerning the Power Cord**

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

**NOTICE:** For safety marking information including product identification and supply ratings, please refer to the main label on the bottom of the apparatus.

This device is equipped with a portable battery or accumulator.

**Safety way to remove the battery or the battery from the equipment:** Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.  
Do not remove battery incorporated with product for your safety. If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.

## Declaration of Conformity

# CE 0197

Hereby, LG Electronics European Shared Service Center B.V., declares that this Portable Bluetooth Speaker is compliant with the essential requirements and other relevant provisions of Directive 1999/5/EC. The complete Declaration of Conformity may be requested through the following postal address:

LG Electronics European Shared Service Center B.V.  
Krijgsman 1  
1186 DM Amstelveen  
The Netherlands

or can be requested at our dedicated DoC website:

<http://www.lg.com/global/support/cedoc/cedoc#>

 
This device is a 2.4 GHz wideband transmission system, intended for use in all EU member states and EFTA countries.







### IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord.

### DO NOT RE-USE THE PLUG.

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.



<b>Power / Battery</b>	Power On / Off .....	Hold 
	Check Battery Status .....	Press 
<b>Bluetooth</b>	To pair your mobile device, select <b>LG Music Flow P5 (xx)</b> from device list.	
	Ready to pair another device ....	Hold 
<b>Playback Controls</b>	Play / Pause .....	Press 
	Forward Skip .....	Press  x2
	Backward Skip .....	Press  x3

Download the app  
"Music Flow Bluetooth"



TV Private Sound



Dual Play



For more information, download the online owner's manual. <http://www.lg.com>

## Specification

### Power Supply:

- 5 V  $\equiv$  1.8 A (AC Adapter)
- Built-in rechargeable battery

### Power consumption:

- 9 W

### Dimensions (W x H x D):

Approx. 153 mm x 58 mm x 59.5 mm

### Net Weight:

Approx. 0.47 kg

### Operating Temperature:

5 °C to 35 °C

### Operating Humidity:

5 % to 60 %

### External Connector:

- $\varnothing$  3.5 mm mini jack
- Micro USB port for charging battery

### Communication:

Bluetooth


### Speaker:


- Type : Built-in
- Impedance Rate : 4  $\Omega$
- Rated Input Power : 10 W
- Max. Input Power : 20 W

### Battery:

- Battery capacity : 2100 mAh
- Operating time is approx. 15 hours. It may vary depending on the battery status and operational conditions.
- Design and specifications are subject to change without notice.

## Important Notice

- Fully charge the device before using for the first time.
- It is recommended that you use the 5 V AC adapter (more than 1.8 A) with this unit.
- Press and hold the  button for 2 seconds to turn on or off the unit.
- **Resetting**
  - In case that the unit freezes due to malfunction, press the RESET hole using an object like a thin pin.

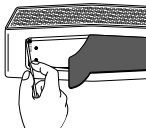

簡易手冊

*MUSICflow* P5

便攜藍牙揚聲器

要查看進階功能的說明，請到訪 <http://www.lg.com> 下載用戶手冊。  
一些本手冊中的內容可能與您的設備不同。

型號

NP5550W  
NP5550WO

NP5550WL  
NP5550B

NP5550BR  
NP5550WG

NP5550NC  
NP5558MC

NP5559NC



\* M F L 6 9 3 0 6 0 2 9 \*

[www.lg.com](http://www.lg.com)

# 安全資訊

**小心：**為了減低觸電風險，切勿把頂蓋（或背板）移去。機內並無使用者可自行修理的部分，如需維修，請聯絡合資格的技術人員。



等邊三角形內帶閃電箭頭的符號用以提醒使用者：產品內部含有未經絕緣的危險電壓，其強度可能會使人觸電。



等邊三角形內帶感嘆號的符號用以提醒使用者：產品的附帶資料中含有重要的操作及保養（服務）指引。

## 警告：

- 為免引起火警或觸電意外，切勿將本產品放在會沾到雨水或水分的位置。
- 切勿把本機安裝到狹窄的地方，例如書櫃之類的位置。
- 本機含有磁石，可能會損害其他物件，如磁卡，心臟起搏器等。

## 小心：

- 切勿阻塞任何通風口。請依照生產商指示安裝。  
機殼上的插槽及通風口特別為通風而設，並可確保產品正常運作，以免產品過熱。切勿把產品放置於睡床、沙發、地毯或其他類似的表面，以免堵塞通風口。除非已有正常的通風或依照生產商的指示，否則本產品不應放置於如書架或擱物架等嵌入式設備內。
- 切勿把本機暴露於有水（滴水或灑水）的地方，而且不應將載有液體的物件（如花瓶）放置於本機上。
- 切勿在本機上放置任何明火源，例如點燃的蠟燭。
- 建議您使用 5 V AC 適配器（超過 1.8 A）連接本設備。  
如果不使用推薦的適配器，可能導致不能充電或充電時間有所不同。

- 為免引起火警或觸電意外，切勿打開機身。請聯絡合資格的技術人員。
- 切勿將本機置於供熱設備附近或直接曝露於陽光、有水或會受到機械性衝擊的地方。
- 請使用乾燥的軟布清潔本機。如表面非常骯髒，使用沾上溫和清潔劑的微濕軟布擦拭。切勿使用強烈溶劑如酒精、苯或稀釋劑，因為這些物質或會損害裝置表層。
- 切勿在播放器附近使用揮發性液體，如殺蟲噴霧。大力擦拭播放器表面或損毀表層。切勿讓橡膠或塑膠產品與本產品長時間接觸。
- 切勿把本機放置在汽車的安全氣囊之上。安全氣囊打開時，本機可能會受損。在車內使用本機前，請先將其固定。
- 切勿在駕駛時使用免提功能。
- 切勿把本機放置在不穩固的地方，例如高處的架子。本機可能會因聲音震動而掉下來。
- 切勿在這項產品附近使用高電壓產品（如電蚊拍）。這項產品可能會因電擊而發生故障。

### **小心在低溫度的環境中使用本產品**

- 在低溫度的環境中或會導致靜電。
- 建議在碰觸任何導電的金屬物品後，使用本產品。

### **電源線注意事項**

如要中斷電源，請拔除電源線插頭。安裝本產品時，請確保插頭位於容易觸及的位置。

**注意：**有關安全標記的資訊包括產品識別和效率評級，請參閱裝置底部的主要標籤。

本產品設有便携式電池或充電池。

**安全地拆除本機電池的方法：**移除舊電池或電池組，步驟與裝配程序相反。為防止污染環境及可能危害人畜健康，請將舊電池或電池放置於指定回收地點的適當回收箱內。切勿把電池連同其他廢棄物一併棄置。建議您使用內置免歸還系統電池及充電池。切勿將電池曝露於溫度過高的環境中，例如陽光、火等等。為安全起見，切勿自行移除產品內的電池。如需更換電池，請把裝置帶到最近的 LG 授權電子服務中心或經銷商尋求協助。

符合標準聲明

# CE 0197

LG Electronics European Shared Service Center B.V. 特此聲明這個便携式藍牙揚聲器可兼容基本要求和和其他相關的 1999/5/EC 指令。或經以下的通訊地址要求遞交整個符合標準聲明：

LG Electronics European Shared Service Center B.V.  
Krijgsman 1  
1186 DM Amstelveen  
The Netherlands

或可向我們專設的 DoC 網站查詢：

<http://www.lg.com/global/support/cedoc/cedoc#>

這個裝置是 2.4 GHz 的寬頻傳輸系統，適用於所有歐盟成員國和 EFTA 國家。







## 安全注意事項

本機的插頭握柄是專為本產品所設計，且與附贈的電源線結合為一體，若您因為任何理由而需截短此電源線時

## 請勿再使用該插頭

應使用全新的插頭以確保連續使用之安全性。請依據 1994 年之插頭及插座規範的規定，將插頭確實地與電源線結合。



<b>電源 / 電池</b>	開/關電源 .....	長按 
	檢查電池狀態 .....	按 
<b>藍牙</b>	要配對您的行動裝置，請在裝置清單中選取 LG Music Flow P5 (xx)。	
	準備配對其他裝置 .....	長按 
<b>播放控制</b>	播放 / 暫停 .....	按 
	向前快轉 .....	按  兩次
	向後快轉 .....	按  三次

下載「Music Flow Bluetooth」應用程式



TV Private Sound



詳情請下載網上用戶說明書。  
<http://www.lg.com>

雙重播放



## 規格

### 電源供應：

- 5 V  1.8 A (AC 變壓器)
- 內置可充電電池

### 耗電量：

- 9 W

### 尺寸 (闊 x 高 x 深)：

約 153 毫米 x 58 毫米 x 59.5 毫米

### 總重量：約 0.47 公斤

### 操作溫度：5 °C 至 35 °C

### 操作濕度：5 % 至 60 %

### 外部連接器：

- ø 3.5 毫米迷你插口
- 用於電池充電的 Micro USB 插口

### 通訊：藍牙


### 揚聲器：

- 類型：內置
- 阻抗率：4 Ω
- 額定輸入功率：10 W
- 最大輸入功率：20 W

### 電池：

- 電池容量：2100 mAh
- 操作時間約為 15 小時。或視乎電池狀態和操作情況而不同。
- 如設計及規格有任何變更，恕不另行通知。

## 重要事項

- 首次使用本機前，請先充滿電。
- 建議使用 5 V AC 適配器 (超過 1.8 A) 連接本機。
- 長按  2 秒啟動或關上本機。
- **重設中**
  - 如果本機因故障而定格，使用類似幼針的細長物長按 RESET 孔。

