

ART#51 ART#52 ART#53 Portable Bluetooth Speaker

Please read this manual carefully before operating your set and retain it for future reference.

MODELS ART#51(ART51)

ART#52(ART52)

ART#53(ART53)



www.lg.com

Safety Information



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

WARNING: This unit contains magnets which can be harmful to some kind of object (Ex: Magnetic card, Pacemaker etc..).

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall be never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a builtin installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION concerning the Power Cord

Most appliances recommend they be placed upon a dedicated circuit;

That is, a single outlet circuit which powers only that appliance and has no additional outlets or branch circuits. Check the specification page of this owner's manual to be certain. Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your appliance, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the appliance, and have the cord replaced with an exact replacement part by an authorized service centre. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the appliance. The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

CAUTION when using this product in environments of low humidity

- It may cause static electricity in environments of low humidity.
- It is recommended to use this product after touching any metal object which conducts electricity.

This device is equipped with a portable battery or accumulator.

Safety way to remove the battery or the battery from the equipment: Remove the old battery or battery pack, follow the steps in reverse order than the assembly. To prevent contamination of the environment and bring on possible threat to human and animal health, the old battery or the battery put it in the appropriate container at designated collection points. Do not dispose of batteries or battery together with other waste. It is recommended that you use local, free reimbursement systems batteries and accumulators. The battery shall not be exposed to excessive heat such as sunshine, fire or the like.

Do not remove battery incorporated with product for your safety. If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

Disposal of your old appliance



- This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream.
- Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.
- 3. You can take your appliance either to the shop where you purchased the product, or contact your local government waste office for details of your nearest authorised WEEE collection point. For the most up to date information for your country please see www.lq.com/global/ recycling

Disposal of waste batteries/accumulators



This symbol may be combined with chemical symbols for mercury (Hg), cadmium (Cd) or lead (Pb) if the battery contains more than 0.0005% of mercury, 0.002% of cadmium or 0.004% of lead.



2. All batteries/accumulators should be disposed separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.

- The correct disposal of your old batteries/accumulators will help to prevent potential negative consequences for the environment, animal and human health.
- 4. For more detailed information about disposal of your old batteries/ accumulators, please contact your city office, waste disposal service or the shop where you purchased the product. (<u>http://www.lg.com/</u> <u>global/sustainability/environment/</u> <u>take-back-recycling/global-network-</u> <u>europe</u>)

Removal of waste batteries and accumulators

(Product with embedded battery ONLY)

In case this product contains a battery incorporated within the product which cannot be readily removed by endusers, LG recommends that only qualified professionals remove the battery, either for replacement or for recycling at the end of this product's working life. To prevent damage to the product, and for their own safety, users should not attempt to remove the battery and should contact LG Service Helpline, or other independent service providers for advice. Removal of the battery will involve dismantling of the product case, disconnection of the electrical cables/ contacts, and careful extraction of the battery cell using specialized tools.

If you need the instructions for qualified professionals on how to remove the battery safely, please visit http://www.lge.com/global/sustainability/ environment/take-back-recycling.

CAUTION: Internal lithium battery in the unit should not be replaced by user because of danger of explosion if battery is incorrectly replaced, and must be replaced with the same type battery by expert.

Declaration of Conformity

C€ 0197

Hereby, LG Electronics European Shared Service Center B.V., declares that this Portable Bluetooth speaker is compliant with the essential requirements and other relevant provisions of Directive 1999/5/ EC. The complete Declaration of Conformity may be requested through the following postal address:

LG Electronics European Shared Service Center B.V. Krijgsman 1 1186 DM Amstelveen The Netherlands

or can be requested at our dedicated DoC website:

http://www.lg.com/global/support/cedoc/cedoc#

This device is a 2.4 GHz wideband transmission system, intended for use in all EU member states and EFTA countries.

Table of Contents

1 Getting Started

- 2 Safety Information
- 6 Main Features
- 6 Accessories
- 6 Introduction
- 7 Main Unit
- 8 Charging the Unit
- 8 Connecting the AC adapter
- 8 Checking the charging status
- 9 Using BLUETOOTH App
- 9 Install "Music Flow Bluetooth" App onto Your BLUETOOTH Device
- 9 Activate BLUETOOTH with "Music Flow Bluetooth" App

3 Troubleshooting

- 17 Troubleshooting
- 17 General

4 Appendix

- 18 About LED indicator
- 19 Trademarks and Licenses
- 19 Handling the Unit
- 20 Specifications

2 Operating

- 11 Basic Operations
- 11 Using power button
- 11 Using volume button
- 11 Simple Operation Guide
- 12 Using BLUETOOTH® technology
- 12 Listening to music stored on the BLUETOOTH devices
- 14 Dual Play Connection (Optional)
- 14 Dual Play Auto Connection
- 15 LG Sound Sync (TV Private Sound)
- 15 With wireless connection
- 16 Listening to Music from Your External Device
- 16 Other Operation
- 16 Resetting
- 16 Notice for Auto Power Off

1

2

3

Main Features

Portable In

Listens to music from your portable device.

LG Sound Sync

Controls volume level of this unit by the remote control of your LG TV that is compatible with LG Sound Sync.

Music Flow Bluetooth

You can control this unit with your iPod touch/ iPhone/iPad or Android device via Bluetooth. This unit and your device must be paired for Bluetooth. Visit "Apple App Store" or "Google Android Market (Google Play Store)" or use the QR code shown below to search for "Music Flow Bluetooth" app. For detailed information, refer to page 9.





(iOS

Dual Play

You can enjoy the sound in stereo by using two speakers. When using this function, it needs two speakers.

What does LG Friends symbol mean?



The LG Friends symbol means that the unit is registered as G5 Friends.

It makes your action easier and faster when launching the Friends Manager App by installing and running Music Flow Bluetooth App automatically.

Accessories

Please check and identify the supplied accessories.





USB cable (1)

Simple Manual (1)

Introduction

Symbol used in this manual




Indicates special notes and operating features.



Indicates cautions for preventing possible damages from abuse

Main Unit

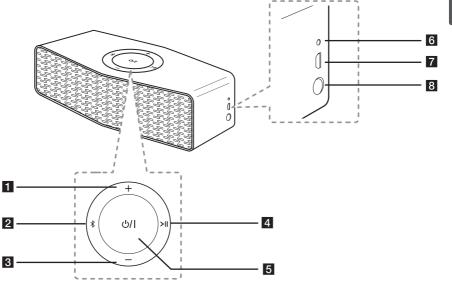

1 + : Turn up the volume.

2 *

- Connects a Bluetooth device to the unit. (Press \$)
- Adds a **Bluetooth** device for multi pairing. (Press and hold **\$**)
- Changes to Bluetooth mode in portable mode. (Press \$)
- **3** : Turn down the volume

4 >II

- Starts or pauses playback on the **Bluetooth** mode.
- Mutes the sound on the Portable and LG Sound Sync mode.

5 🕛/


- Turns On / Off : Press and hold it.
- 6 Battery indicator
- 7 USB port for charging
- 8 Portable In connector
 - Listens to music from your portable device.

Charging the Unit

Connecting the AC adapter

This device uses built-in battery. Before using it, charge the battery by connecting the AC Adapter.

- 1. Connect the supplied USB cable to the AC adapter.
- 2. Connect the USB cable to USB port of of the unit.
- 3. Plug the AC adapter into an AC outlet.

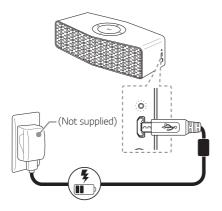


If the battery is fully charged in charging mode, indicator is changed from red to green.

() Caution

AC adapter is not supplied. It is recommended that you use the 5 V AC adapter approved by LG Electronics Inc. (more than 1.8 A) with this speaker because of danger of explosion. If you do not use the recommended adapter, charging is unavailable or charging time may differ.

Checking the charging status

When AC Adapter is connected, battery charging is started. If the power turned on, you can check the charging status by pressing $\bigcirc/1$ button.

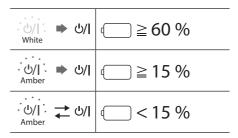

- 🚺 Note

- Operating time is approx. 15 hours. It may vary depending on the battery status and operational conditions.
- If you listening the music while charging, it will take longer to charge.

Using BLUETOOTH App

About "Music Flow Bluetooth" App

"Music Flow Bluetooth" app brings a suite of new features to this unit.

To enjoy more features and use this unit more comfortably, you are recommended to download and install free "Music Flow Bluetooth" app.

Install "Music Flow Bluetooth" App onto Your BLUETOOTH Device

There are two ways to install "Music Flow Bluetooth" App onto Your **Bluetooth** Device.

Install "Music Flow Bluetooth" App through QR code

- Install "Music Flow Bluetooth" app through QR code. Use the scanning software to scan the QR code.
- 2. Tap an icon for installation.
- 3. Tap an icon for downloading.



- Make sure that your **Bluetooth** device is connected to the Internet.
- Make sure that your **Bluetooth** device has a scanning software application. If you don't have one, download one from "App Store" or "Google Play Store".
- Depending on the region, QR code may not work.

Install "Music Flow Bluetooth" App through "App Store" or "Google Play Store"

- 1. Tap the "App Store" icon or "Google Play Store" icon.
- 2. In the search bar, type in the "Music Flow Bluetooth" and search it.
- 3. In the search result list, find and tap "Music Flow Bluetooth" to start downloading **Bluetooth** app.
- 4. Tap an icon for installation.
- 5. Tap an icon for downloading.

Activate BLUETOOTH with "Music Flow Bluetooth" App

"Music Flow Bluetooth" app helps to connect your **Bluetooth** device to this unit.


- Tap "Music Flow Bluetooth" app icon on the home screen to open "Music Flow Bluetooth" app, and go to the main menu.
- 2. Tap [Menu] and select the unit you want.
- 3. If you want to get more information to operate, tap [Setting] and refer to the [Help].

Note

- Music Flow Bluetooth app will be available in version of the software as follow; Android O/S : Ver 4.0.3 (or later) iOS O/S : Ver 6.0 (or later)
- Depending on the **Bluetooth** device, "Music Flow Bluetooth" app may not work.
- After connection of "Music Flow Bluetooth" app, music may be output from your device. In this case, try connecting procedure again.
- If you operate the other applications or change the settings on your **Bluetooth** device while using "Music Flow Bluetooth" app, "Music Flow Bluetooth" app may operate abnormally.
- When "Music Flow Bluetooth" app operate abnormally, check your **Bluetooth** device and the connection of "Music Flow Bluetooth" app and then try to connect again.
- Depending on the operating system of smart device, you have some differences for "Music Flow Bluetooth" operation.
- Even though **Bluetooth** connection will be disconnected, you can use "Music Flow Bluetooth" app when you change the function.


Basic Operations

Using power button

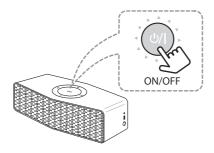

Power On / Off Press and hold the ()/ button.

Using volume button

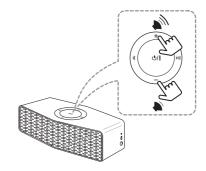

You can adjust speaker volume.



Note

While adjusting volume if you try to increase or decrease the volume when it is already at maximum or minimum level, a beep is played on the unit.

Simple Operation Guide

Function	How to	LED and Sound Status
Power On / Off	Press and hold the \bigcirc / \mid button.	\bigcirc / button blinks twice with the sound
Bluetooth pairing	When \$ button blinks in white, select LG Music Flow P5 (XX) from device list on your smart device.	X button stays in white with the sound.
Play / Pause	Press > .	-
Volume control	Press 🕂 or —	-
Forward skip	Press > twice.	-
Backward skip	Press > three times.	-
Multi pairing	Press and hold \$ for 2 seconds to add another Bluetooth device.	* button stays in white with the sound.
Initializing	Press and hold \$ for 10 seconds.	♣, Ů/ I and >II buttons blink twice and then ♣ button blinks in white.

Using BLUETOOTH® technology

About BLUETOOTH

Bluetooth is wireless communication technology for short range connection.

The sound may be interrupted when the connection interfered by the other electronic wave or you connect the **Bluetooth** in the other rooms.

Connecting individual devices under **Bluetooth** wireless technology does not incur any charges. A mobile phone with **Bluetooth** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth** wireless technology.

Available Devices : Mobile phone, MP3, Laptop, PDA etc.

BLUETOOTH Profiles

In order to use **Bluetooth** wireless technology, devices must be able to interpret certain profiles. This unit is compatible with following profile.

- A2DP (Advanced Audio Distribution Profile)
- Codec : SBC, AAC

Listening to music stored on the BLUETOOTH devices

Pairing your unit and BLUETOOTH device

Before you start the pairing procedure, make sure the **Bluetooth** feature is turned on in to your **Bluetooth** device. Refer to your **Bluetooth** device's user guide. Once a pairing operation is performed, it does not need to be performed again.

- 1. Turn on the unit then **\$** button blinks in white.
- Operate the Bluetooth device and perform the pairing operation. When searching for this unit with the Bluetooth device, a list of the devices found may appear in the Bluetooth device display depending on the type of Bluetooth device. Your unit appears as "LG Music Flow P5(xx)".
- 3. Select "LG Music Flow P5(xx)".

– 🊺 Note

- XX means the last two digits of Bluetooth address. For example, if your unit has a Bluetooth address such as 9C:02:98:4A:F7:08, you will see "LG Music Flow P5 (08)" on your Bluetooth device.
- Depending on the Bluetooth device type, some device have a different pairing way. Enter the PIN code (0000) as needed.
- You can connect this unit with up to 2 Bluetooth devices simultaneously same method as above description.
- The multi pairing connection is only supported on Android or iOS devices. (Multi pairing connection may not be supported depending on the connected device specifications.)
- Removable/detachable Bluetooth device (Ex : Dongle etc..) doesn't support multi pairing.
- When this unit is successfully connected with your **Bluetooth** device, blinking buttons will stay white with beep sound.
- 5. Listen to music.

To play a music stored on your **Bluetooth** device, refer to your **Bluetooth** device's user guide.

Note


 When using Bluetooth technology, you have to make a connection between the unit and the Bluetooth device as close as possible and keep the distance.

However you may experience issues in the cases below :

- There is a obstacle between the unit and the **Bluetooth** device.
- There is a device using same frequency with **Bluetooth** technology such as a medical equipment, a microwave or a wireless LAN device.
- You should connect your **Bluetooth** device to this unit again when you restart it.
- Even if this unit connected up to 2 **Bluetooth** devices, you can play and control music by using only one of the connected devices.
- The sound may be interrupted when the connection interfered by the other electronic wave.
- You may not control the **Bluetooth** device with this unit.
- Depending on the type of the device, you may not be able to use the **Bluetooth** function.
- You can enjoy wireless system using phone, MP3, laptop, etc..
- The more distance between the unit and the **Bluetooth** device, the lower the sound quality becomes.
- Bluetooth connection will be disconnected when the unit is turned off or the Bluetooth device gets too far from the unit.
- When Bluetooth connection is disconnected, connect the Bluetooth device to the unit again.
- When you connect **Bluetooth** device (iOS device etc.) to this unit or operate the device, the volume level can be synchronized with each other.

Dual Play Connection (Optional)

You can enjoy the sound in stereo by using two speakers. Two speakers are needed to enjoy in stereo.

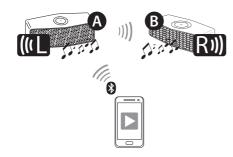

- 1. Connect the **A** speaker to a **Bluetooth** device.
- 2. Press and hold the each speaker's button as below at the same time.
 - A speaker : \$, + button
 - **B** speaker : **\$**, button
 - Beep sound is heard and **\$** buttons will blink white fast.
- 3. If two speakers are connected, blinking **\$** buttons will stay white with beep sound. If the units fail to detect, go to step 1 and try again.

Dual Play Auto Connection

If you turn the power off and then on again in dual play mode, these speakers keep the dual play mode automatically.

- Turn on the two speakers and wait to complete the dual play connection.
- It takes up to 30 seconds to connect to dual play.

Note

- If you use a **Bluetooth** device using dongle, you cannot use Dual Play.
- In portable input mode, you cannot use Dual Play.
- When you enjoy Dual Play, the multi pairing connection is not supported.
- When Dual Play connection is on processing, you cannot search the units on other Bluetooth devices.
- When you disconnect Dual Play connection, press and hold the buttons of one of the two speakers again. (*, + or *, -)
- When you enjoy Dual Play, you can adjust the volume of both (A) and (B) speakers at the same time.
- Once two speakers are connected to each other via Dual play, all devices connected to both speakers are disconnected except for the speaker the last connected to (A) speaker.
- Using Dual play is limited to only these units and is unavailable on other Music Flow series.
- To change the Bluetooth device in Dual Play mode, press and hold \$ for 2 seconds to disconnect current Bluetooth device and connect the desired Bluetooth device.
- In Dual Play mode, you can connect only the A speaker with the Bluetooth device.
- Dual Play is only supported on Android or iOS devices.
- When you connect Bluetooth device (iOS device etc.) to this unit or operate the device, the volume level can be synchronized with each other.
- In Dual Play mode, make the distance between the speakers as close as possible each other.
- Depending on network environment, the Dual Play may not work well.

LG Sound Sync (TV Private Sound)



You can control some functions of this unit by your TV's remote control with LG Sound Sync. The Feature is only compatible with LG TV's that support LG Sound Sync. Make sure of the LG Sound Sync logo is on your TV.

Controllable function by LG TV's remote control : Volume up/down, mute

Refer to the TV's instruction manual for the details of LG Sound Sync.

Make one of the following connections, depending on the capabilities of your equipment.



- When the connection fails, make sure of the condition of the TV and power.
- Make sure of the condition of this unit and the connection in the cases below when using LG Sound Sync.
 - Turn off the unit.
 - Changing the function to the others.
 - Disconnecting the wireless connection caused by interference or a distance.
- The amount of time to turn off this unit is different depending on your TV when you set AUTO POWER function to ON.
- Details of TV setting menu vary depending on the models of your TV.

With wireless connection


- 1. Turn on the unit by pressing $\bigcirc / 1$ (Power).
- Set up the sound output of TV to listen to the sound through this unit : TV setting menu → [Sound] → [TV Sound output] → [LG Sound Sync (Wireless)]
- Press and hold \$, >|| simultaneously until you hear a beep. \$ blinks amber. If connected, \$ stay in amber.

. 🚺 Note

- If you turned off the LG Sound Sync (Wireless) will be disconnected. To use this function again, you should reconnect the TV and the unit.
- You can mute the sound by pressing >||.

Listening to Music from Your External Device

The unit can be used to listen to the music from many types of external device.

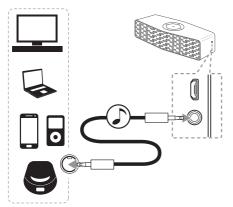


- 1. Connect the external device to the Portable In connector of the unit.
- 2. Turn the power on by pressing and holding ()/| button.
- 3. Turn the external device on and start playing.

I 🚺 Note

- When you connect the portable cable, the function is changed to portable in mode automatically.
- You can mute the sound by pressing > [].

Other Operation

Resetting

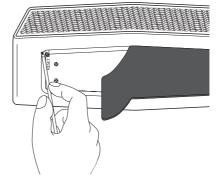

In case that the unit freezes due to malfunction, remove the rubber sleeve and press the reset hole using an object like a thin pin. Then the unit is turned off completely.

Notice for Auto Power Off

When the unit is in BT/LG Sound Sync mode without music playback for 20 minutes or in portable input mode without button operation for 6 hours, this unit is turned off automatically.

Troubleshooting

General

Problem	Cause & Correction
No Power.	The battery is discharged. Recharge the battery.
	Connect the unit to the power supply with the AC adapter.
No sound or sound distortion.	• The unit or your smart device's volume is set to minimum. Check and adjust the volume of the unit or Bluetooth device's volume.
	When you use an external device at high volume, the sound quality may be deteriorated. Lower the volume of the devices.
	• If you use the unit for purposes other than listening to music, the sound quality may be lowered or the unit may not work properly.
	Switch Bluetooth off and on again on your Bluetooth device, then try pairing again.
	• Be sure your Bluetooth device is on.
	Remove the obstacle in the path of the Bluetooth device and the unit.
Bluetooth pairing does not work well.	• Depending on the type of the Bluetooth device or surrounding environment, your device may not be paired with the unit.
	 While using Bluetooth, you may not activate "Music Flow Bluetooth" app. Disconnect Bluetooth device you have connected before to use "Music Flow Bluetooth" app properly.
	 When your Bluetooth device have been already connected with other unit, disconnect the Bluetooth connection first. Then you can control your unit through "Music Flow Bluetooth" app.
	 Depending on the Bluetooth device, "Music Flow Bluetooth" app may work restrictively not work.
	 The connection you've made may be disconnected if you select other application or change the setting of the connected device via "Music Flow Bluetooth" app. In such case, please check the connection status.
The unit does not operate normally.	• If the battery was fully discharged, the stored Bluetooth information can be deleted. Previous setting may not be saved when the unit's power is shut off.
	 In case of malfunction, Battery indicator is lit in white and amber alternately. Please use the unit in proper place where the temperature or humidity is not so high or low.
	• In case of overload, all LED indicators stay white. Please turn the power off and then on again.
Above solutions do not work.	Press Reset hole with a pointed thing like mechanical pencil.

About LED indicator

General

Battery indicator turns in red to green.	In Charging 👞 Fully Charged
() / I blinks in white with the sound.	Power is turned on.
()/ blinks in amber with the sound.	Battery is discharged. (Blinks rapidly)
Battery indicator blinks in red and green rapidly.	The unit operates abnormally. Leave the unit at room temperature (5 - 35 °C) for a while and try again.

Bluetooth

🖇 blinks or stays in white	Blink : Searching for Bluetooth device
with the sound.	Stay on : Bluetooth device is connected.

Dual Play & Sound Sync

 Blinks fast in white with the sound. (*) on the two speakers) 	Waiting for dual play connection
♣, blinks in amber with the sound.	Waiting for sound sync

Dual Play & Sound Sync

➤II blinks in white. Mute Status (Portable)

Trademarks and Licenses

Bluetooth*

Bluetooth wireless technology is a system which allows radio contact between electronic devices within a max. range of 10 meters.

Connecting individual devices under **Bluetooth** wireless technology does not incur any charges. A mobile phone with **Bluetooth** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth** wireless technology.

The **Bluetooth** word mark and logos are owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license.

Other trademarks and trade names are those of their respective owners.

Handling the Unit

When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

Keeping the exterior surfaces clean

- Do not use volatile liquids such as insecticide spray near the unit.
- Wiping with strong pressure may damage the surface.
- Do not leave rubber or plastic products in contact with the unit for a long period of time.

Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

Specifications

General	
Power requirements	5 V === 1.8 A (AC adapter) Built-in rechargeable battery
Power consumption	9 W
Dimensions (W x H x D)	Approx. 153 mm x 58 mm x 59.5 mm
Net Weight (Approx.)	0.47 kg
Operating temperature	5 °C to 35 °C
Operating humidity	5 % to 60 %

Inputs	
PORT. IN	0.65 Vrms (3.5 mm stereo jack)
USB	Micro USB port for charging battery

Speakers	
Туре	built-in
Impedance Rated	4 Ω
Rated Input Power	10 W
Max Input Power	20 W

Battery	
Battery capacity	2100 mAh
Operating time	Approx. 15 hours. It may vary depending on the battery status and operational conditions.

• Design and specifications are subject to change without notice.

