


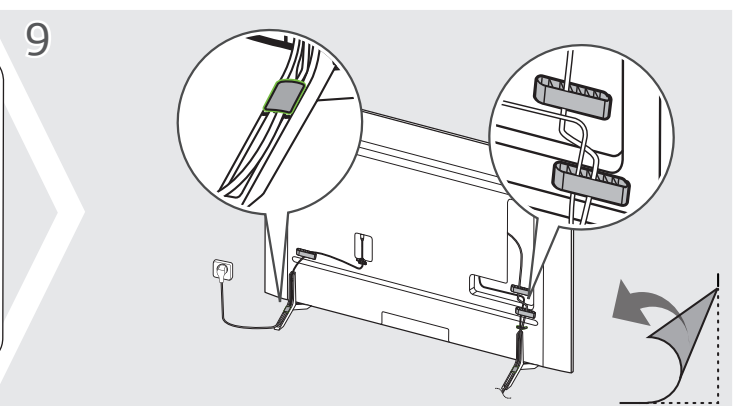
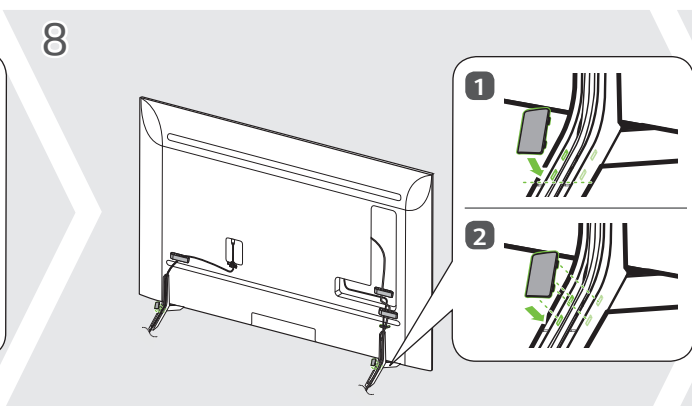
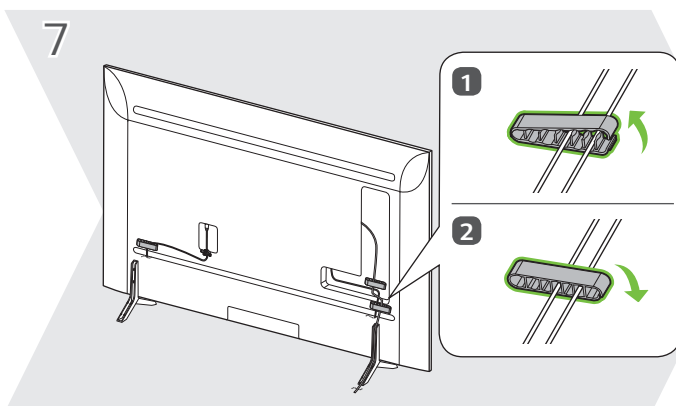
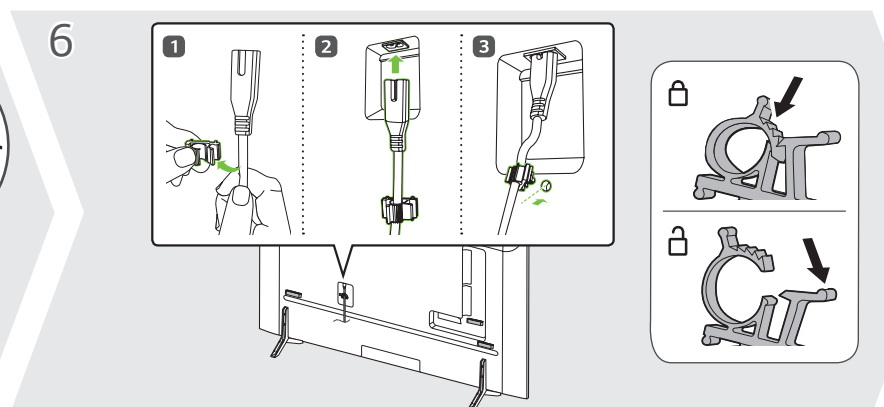
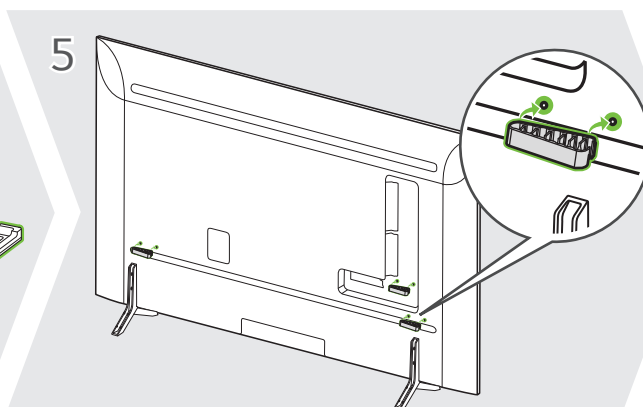
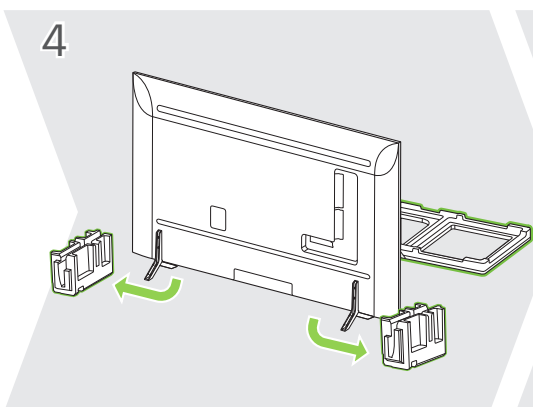
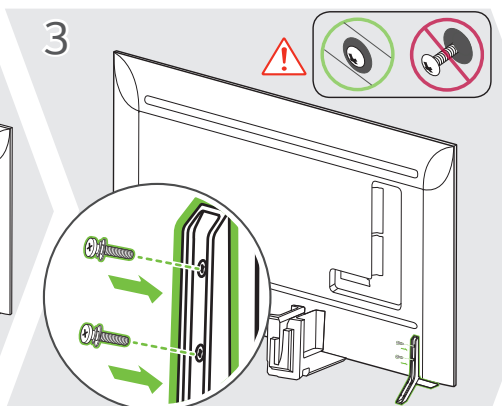
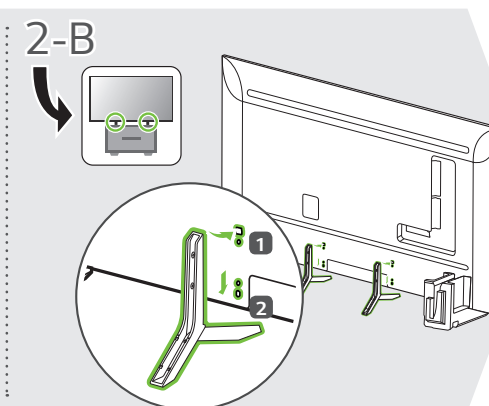
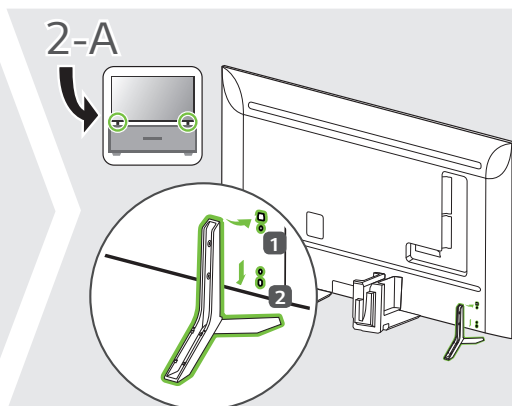
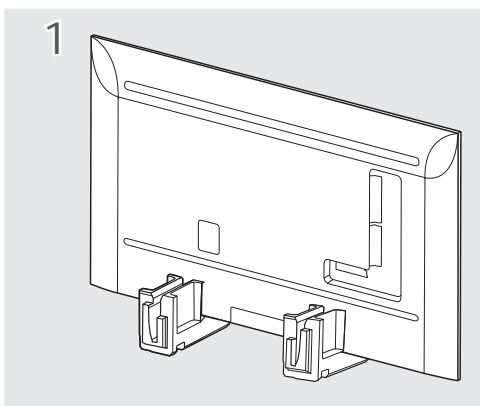
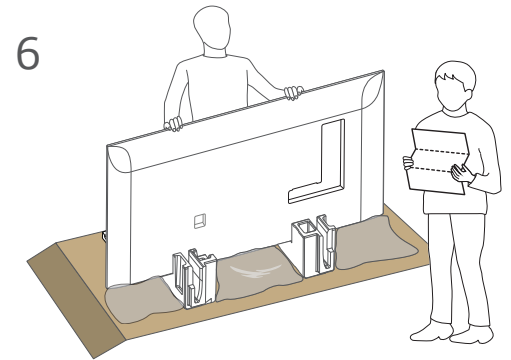
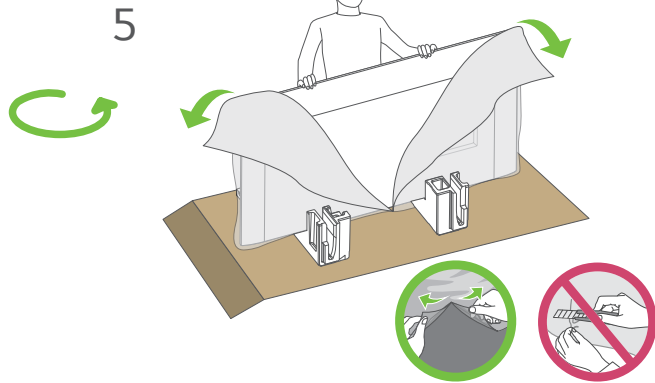
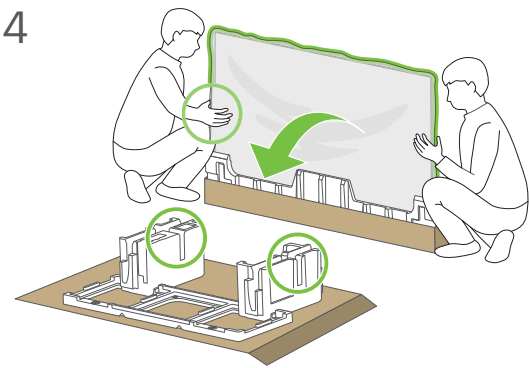
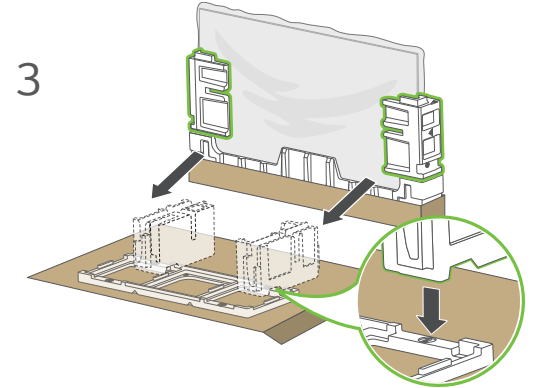
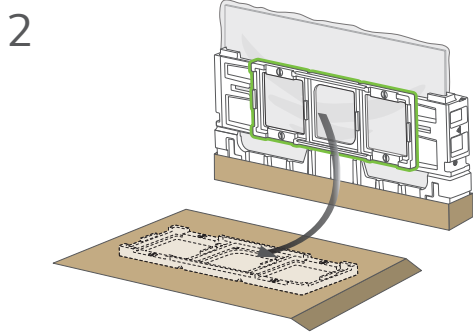
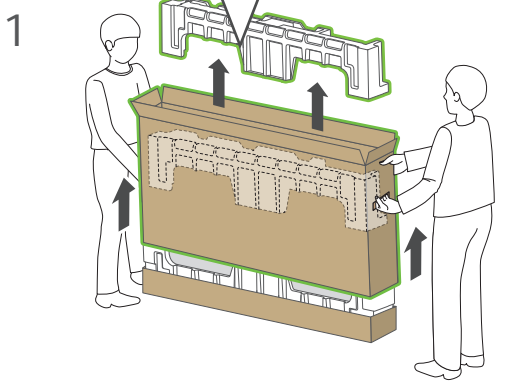
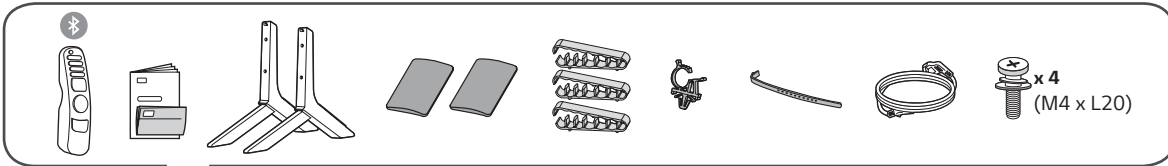
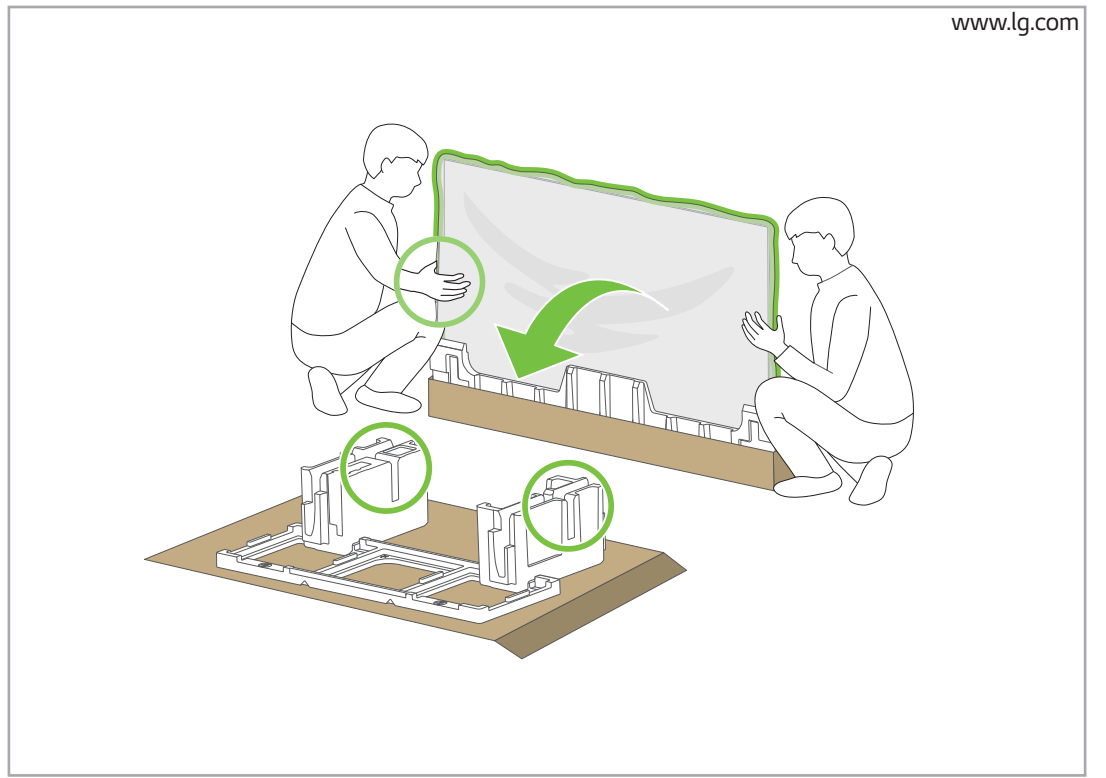
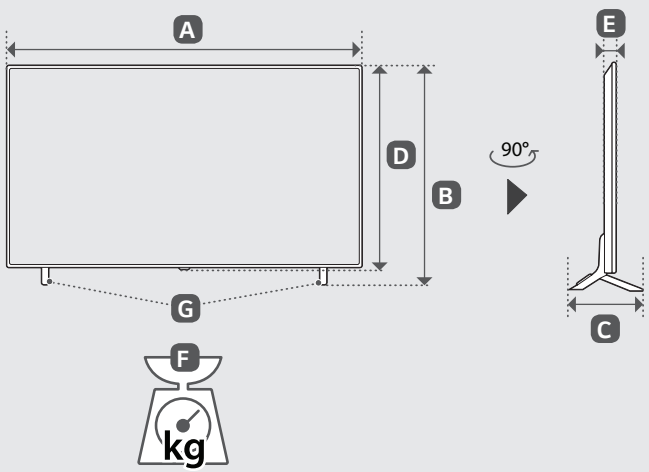


75UR9050PSK

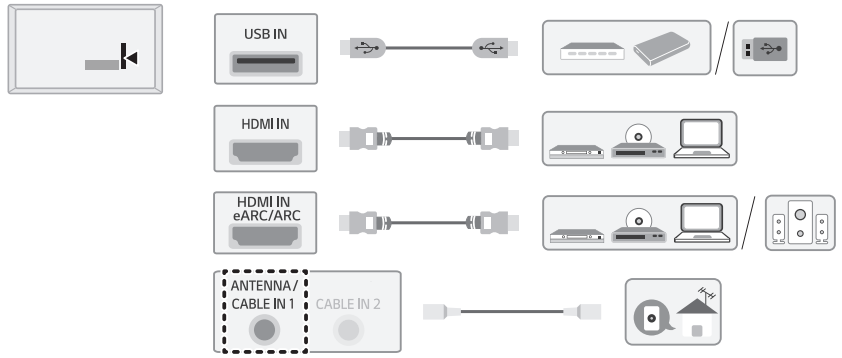


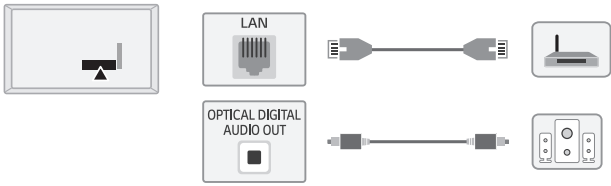

	A	B	C	D	E	F	F - G
	(mm)					(kg)	
75UR9050PSK	1677	1032	359	965	30.9	34.0	33.0

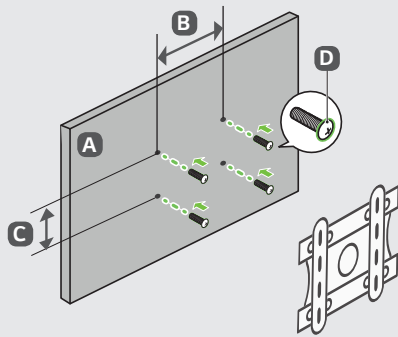

A	B × C (公釐)	D
75UR90*	400 x 300	M6

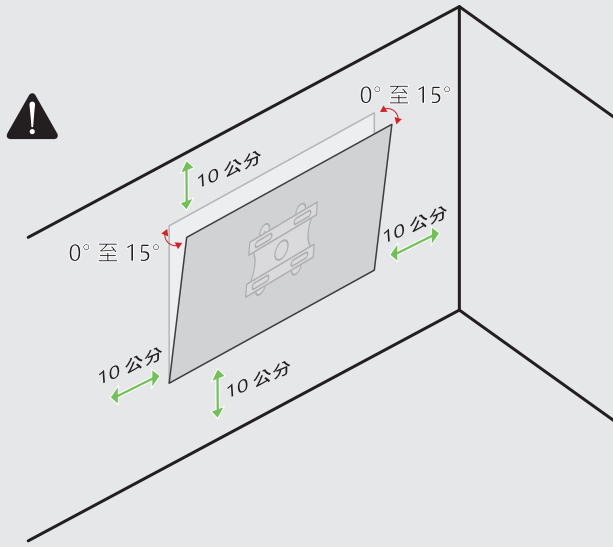

- 繁體中文
- 簡易設定指南
 - 操作電視機之前，請先詳細閱讀本手冊，並妥善保管手冊以供日後參考。
 - 請閱讀安全與相關資訊