



ENGLISH

SIMPLE MANUAL

Wireless Sound Bar

To view the instructions of advanced features,
visit <http://www.lg.com> and then download Owner's Manual.
Some of the content in this manual may differ from your unit.


MODEL
LAS450H



www.lg.com



Front Panel

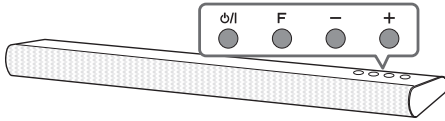

- Power On /Off
- Selects Function
- Adjusts Volume

1 Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

- 1 Connect the power cord of wireless subwoofer to the outlet.
- 2 Turn on the sound bar :
The sound bar and wireless subwoofer will be **automatically** connected. A yellow-green LED on the wireless subwoofer will light on.



If no sound is heard from the wireless subwoofer, please follow as below.


- i. Adjust volume level of sound bar to minimum. "VOL MIN" appears on display window.
- ii. Press and hold (Mute) button on the remote control about 3 seconds. "WL RESET" appears on display window and red LED on the sound bar blinks.
- iii. Press and hold **PAIRING** on the back of wireless subwoofer for more than 5 seconds using point of a pen.
- iv. Disconnect the power cord of the sound bar and the wireless subwoofer. Connect them again.

Controller App



Download the **Music Flow Bluetooth** App to your device.

Rear Panel

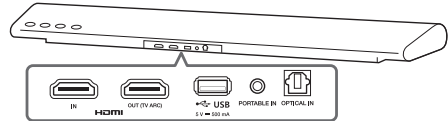


- HDMI IN Connect to a device
- HDMI OUT (TV ARC) Connect to a TV
- USB port Connect to a USB device
- PORTABLE IN Connect to a Portable device
- OPTICAL IN Connect to an Optical device

2 TV Connection

Connect with the Sound Bar and TV using Optical (A) or HDMI ARC (B).


A Optical Connection

- 1 Connect the sound bar to the TV using Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

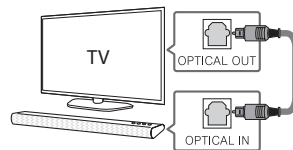

B HDMI(ARC) Connection

- 1 Connect the sound bar to the TV using HDMI cable.
- 2 Set up [External Speaker (HDMI ARC)] on your TV setting menu.

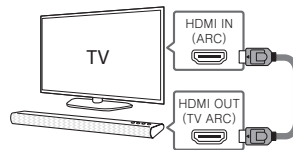


LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>


Additional Information





Specification

Power requirements	Refer to the main label.
Power consumption	Refer to the main label.
	Networked standby : 2.3 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 890 mm x 55 mm x 89 mm
Net Weight	Approx. 2.72 kg
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS Output power)	220 W

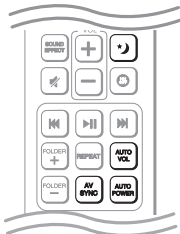Design and specifications are subject to change without notice.

Remote control




-  : Turns down the volume at night.
-  : Adjusts the volume level appropriately.
-  : Synchronizes the audio and video.
-  : Automatically turns on by an input source.

How to disconnect the wireless network connection or the wireless device


Set up the AUTO POWER ON/OFF function to off and turn off the unit.

Replacement of battery

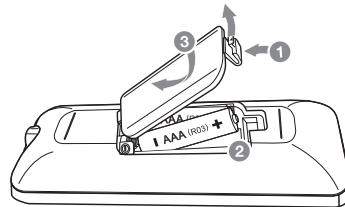

POWER: This unit operates on a mains supply of 200-240V~, 50/60Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

