

# SIMPLE MANUAL

## Mini Hi-Fi Audio

Please read this manual carefully before operating your set and retain it for future reference.  
To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL  
ONS




MFL71664338  
2004\_Rev02

[www.lg.com](http://www.lg.com)  
Copyright © 2021 LG Electronics Inc. All Rights Reserved.

ENGLISH




### Top panel

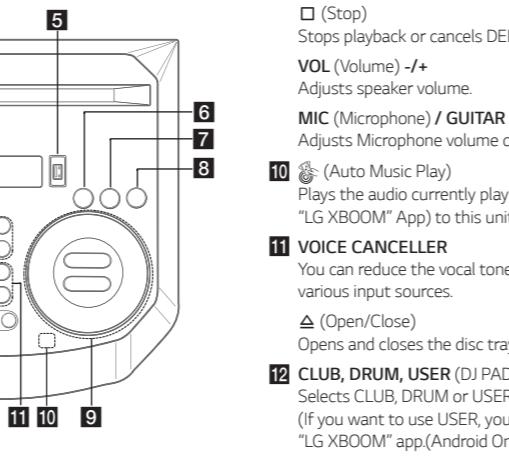


- 1 (Standby) Turns the power on or off.
- 2 USB REC / DEMO - Records to USB.  
- Stops recording.  
- In power off status, if you press USB REC / DEMO, show demo mode.
- 3 USB 1 Port You can play sound files by connecting the USB device.
- 4 Display window
- 5 USB 2 Port You can play sound files by connecting the USB device.
- 6 F (Function) Selects the function and input source.
- 7 LIGHTING Selects the lighting mode.
- 8 @TWIN Connects two units for TWIN mode in WIRELESS PARTY LINK.
- 9 KK/DK (Skip/Search) - Skips backward or forward.  
- Searches for a section within a track/file.  
- Selects the radio stations.
- 10 (Play/Pause) - Starts or pauses playback.  
- Selects stereo/mono.
- 11 Bluetooth connection lock (BT LOCK): Select the Bluetooth function by pressing F repeatedly. And long press DII to limit Bluetooth connection to only BT and LG TV.
- 12 CLUB, DRUM, USER (DJ PAD) Selects CLUB, DRUM or USER sound effect to mix.  
(If you want to use USER, you have to register a source with "LG XBOOM" app(Android Only))
- 13 MIC (Microphone) ECHO Selects ECHO mode.
- 14 VOCAL EFFECTS Selects various vocal effects mode.
- 15 KEY CHANGER (b/#) Changes the key to suit your vocal range.

### Front panel / Rear panel

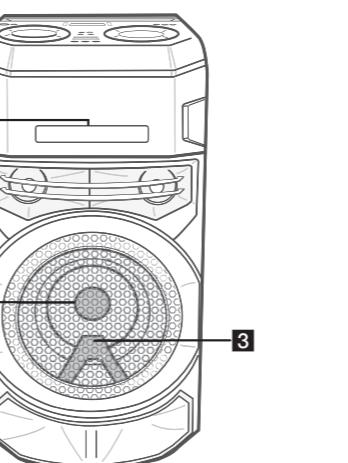

- 1 Disc tray
- 2 Lighting
- 3 Remote sensor

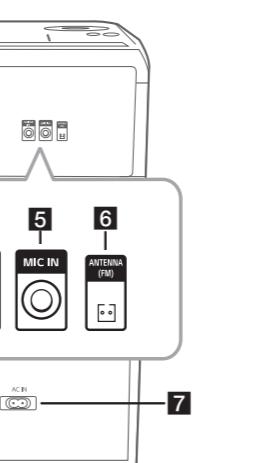

- 4 GUITAR IN: Connect a guitar.
- 5 MIC (Microphone) IN: Connect a microphone.
- 6 ANTENNA (FM)
- 7 AC IN socket

### Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 330.0 mm x 685.0 mm x 344.0 mm
Bus Power Supply (USB)	5 V 500 mA

Design and specifications are subject to change without notice.

### Caution

- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

### Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

**Oman - TRA**  
**D080134**  
**TRA/TA-R/2246/14**

**EAC**

### Controller App



Android



iOS

Download the **LG XBOOM** App to your device.




### LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

### Additional Information

### Replacement of battery

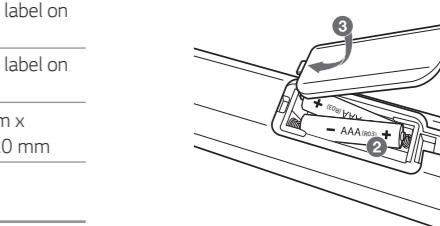

**POWER:** This unit operates on a main supply of 200 - 240 V 50 / 60 Hz.

**Wiring:** This unit is supplied with a B313 approved main plug. When replacing the fuse, always use one of the same rating and approved to B313.6. Never use this plug with the fuse cover removed. To obtain a replacement fuse cover or contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, the plug should be removed and a suitable type fitted. Please refer to the fitting instructions below.

**Warning:** A main plug removed from the main lead of this unit must be destroyed. A mains plug with a bare wire is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  $\frac{1}{2}$  or coloured green or green and yellow. If any other plug is fitted, use same rating fusing in the plug.

**Important:** The wires in this main lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - The colours of the wires in the mains lead of this unit may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

