



LG
Life's Good

SIMPLE MANUAL DVD Home Theater System

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
LHD70C



MFL71887611

2305_Rev01

www.lg.com
Copyright © 2023 LG Electronics Inc. All Rights Reserved.

ENGLISH



Front Panel



- MIC 1/2 Connect a microphone.
 PORT. IN Connect to a Portable device.
 USB Port Connect a USB device.
 △ Disc Tray Open / Close
 ▶/II Starts / Pauses playback.
 □ Stops playback.
 F Changes the input source or function.
 -/+ Adjusts volume.
 ⌂/I Power On / Off



Rear Panel



- SPEAKERS Connect to speakers.
 HDMI OUT TO TV Connect to TV.
 AUX (L/R) INPUT Connect to analogue device.
 VIDEO OUT Connect to TV.
 OPTICAL IN Connect to digital device.
 ANTENNA FM Connect to radio antenna.


! Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

1 Speaker Assembling

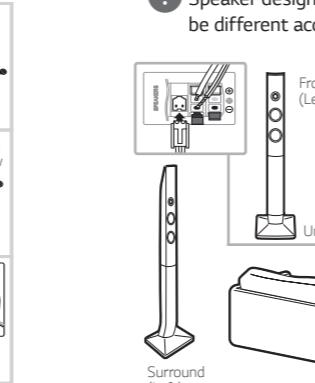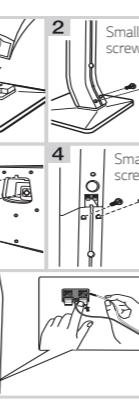

2 Speaker Connection


! Speaker design and connection method may be different according to models.

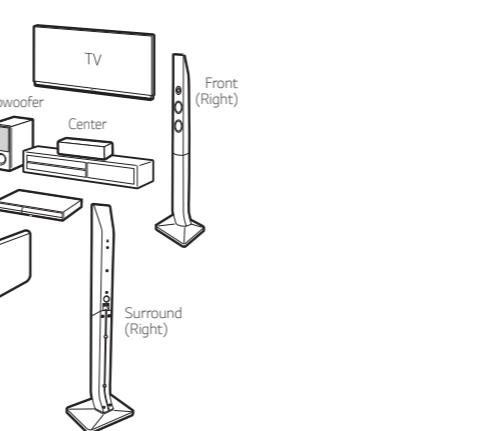

3 TV Connection

HDMI & Optical Connection

- 1 Connect the Unit to the TV using HDMI & Optical cable.
- 2 Set the input selector to HDMI on the TV.
- 3 Set up [External Speaker (Optical)] on your TV setting menu.
- 4 Follow the instructions on the TV screen using remote control.

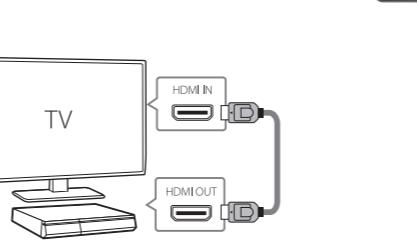

4 Home Menu

Home menu appears on the TV screen. Enjoy various functions on the unit.



Additional Information

Specification

| | |
|------------------------------------|-----------------------------------|
| Power requirements | Refer to main label. |
| Power consumption | Refer to main label. |
| Dimensions (W x H x D) | Approx. 360 mm x 58 mm x 298.5 mm |
| Bus Power Supply (USB) | 5 V 500 mA |
| Amplifier (Total RMS output power) | 1,000 W RMS |

Design and specifications are subject to change without notice.

POWER: This unit operates on a mains supply of 200 - 240 V ~ 50 / 60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below.

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol \triangle or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Replacement of battery



For more information, download the online owner's manual <http://www.lg.com>

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE



الدليل البسيط

DVD

نظام المسرح المنزلي

يرجى قراءة هذا الدليل بعناية قبل تشغيل الجهاز الذي بحوزتك واحفظ به للرجوع إليه في المستقبل.
لعرض تعليمات الخصائص المتقدمة، تفضل بزيارة موقعنا <http://www.lg.com> وقم بتحميل دليل المالك.
يمكن أن تختلف بعض محتويات هذا الدليل عن المشغل الخاص بك.



٦

لوحة الأمامية



٧

لوحة الخلفية



٨

معلومات إضافية



٩

الموصفات



١٠

القائمة الرئيسية



١١

توصيل التلفاز



١٢

توصيل السماعات



١٣

توصيل HDMI



١٤

استبدال البطارية



١٥

ال tövör



١٦

ال tövör



١٧

ال tövör



١٨

ال tövör



١٩

ال tövör



٢٠

ال tövör



٢١

ال tövör



٢٢

ال tövör



٢٣

ال tövör



٢٤

ال tövör



٢٥

ال tövör



٢٦

ال tövör



٢٧

ال tövör



٢٨

ال tövör



٢٩

ال tövör



٣٠

ال tövör



٣١

ال tövör



٣٢

ال tövör



٣٣

ال tövör



٣٤

ال tövör



٣٥

ال tövör



٣٦

ال tövör



٣٧

ال tövör



٣٨

ال tövör



٣٩

ال tövör



٤٠

ال tövör



٤١

ال tövör



٤٢

ال tövör



٤٣

ال tövör



٤٤

ال tövör



٤٥

ال tövör



٤٦

ال tövör



٤٧

ال tövör



٤٨

ال tövör



٤٩

ال tövör



٥٠

ال tövör



٥١

ال tövör



٥٢

ال tövör



٥٣

ال tövör



٥٤

ال tövör



٥٥

ال tövör



٥٦

ال tövör



٥٧

ال tövör



٥٨

ال tövör



٥٩

ال tövör



٦٠

ال tövör



٦١

ال tövör

