



簡易手冊

無線 Sound Bar

WIRELESS SOUND BAR

S77S



COV37434424
2303_Rev01



www.lg.com
版權所有 © 2023 LG Electronics Inc. 保留一切權利。

中文

規格

電源要求

- 請參閱主標籤。

電源耗用

- 請參閱主標籤。

尺寸 (闊 x 高 x 深) : 大約 890.0 mm x 61.5 mm x 126.0 mm

匯流排電源供應 (USB): 5 V 500 mA

擴音器 (RMS 總輸出功率) : 400 W RMS

安全注意事項

本機的插頭握柄是專為本產品所設計,且與附贈的電源線結合為一體,若您因為任何理由而需截短此電源線時

請勿再使用該插頭

應使用全新的插頭以確保連續使用之安全性。請依據1994年之插頭及插座規範的規定,將插頭確實地與電源線結合。



符合標準聲明

在此, LG電子聲明 無線Sound Bar 類型的無線電設備符合 2014/53/EU指令。你可以從以下互聯網地址獲得歐盟符合性聲明的全文:

<http://www.lg.com/global/support/cedoc/cedoc#>
為使用者安全着想, 安裝或使用裝置時, 身體與裝置之間的距離不應少於 20 厘米。

ENGLISH

Specification

Power requirements

- Refer to the main label.

Power consumption

- Refer to the main label.

Dimensions (W x H x D): Approx. 890.0 mm x 61.5 mm x 126.0 mm

Bus Power Supply (USB): 5 V 500 mA

Amplifier (Total RMS Output power): 400 W RMS

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord,

DO NOT RE-USE THE PLUG

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.

 
 
 


Declaration of Conformity

Hereby, LG Electronics declares that the radio equipment type Wireless Sound Bar is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>
For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.



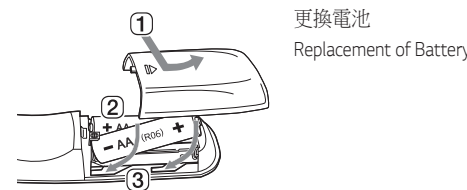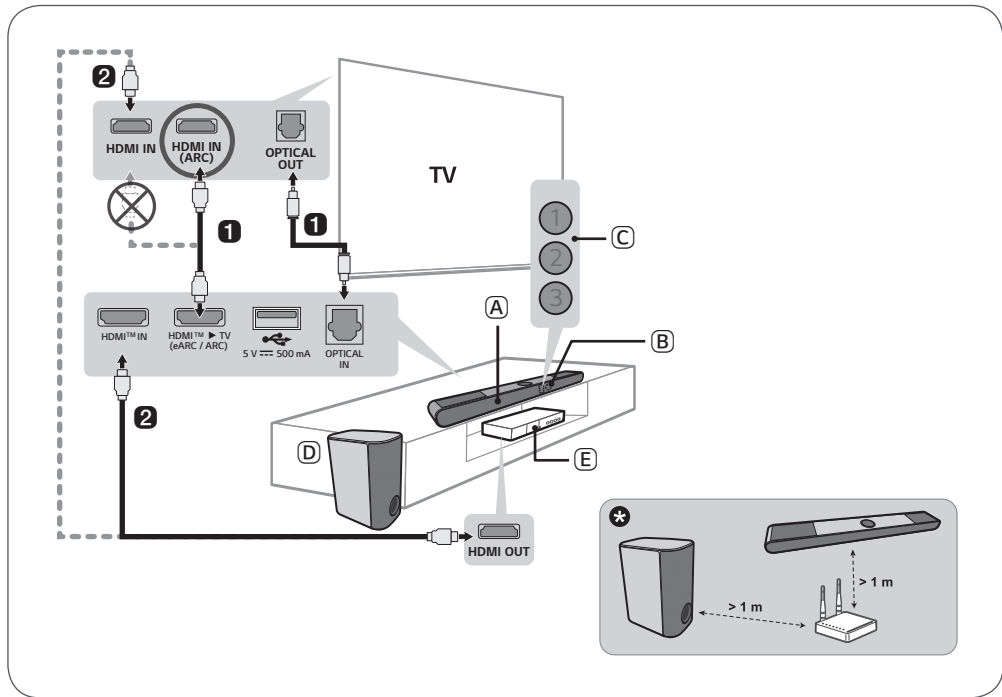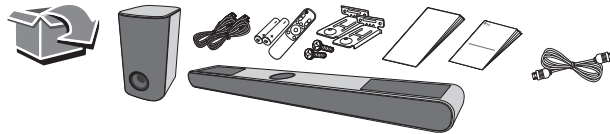

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

中文 產品安裝及使用

操作設備前請仔細閱讀本手冊，並保留以備日後參考。
要檢視有關進階功能的指示，請造訪 <http://www.lg.com> 或掃描二維碼下載使用說明書。部份使用說明的內容有可能與你的產品不同。



- A Sound Bar
B 遙控接收器
C LED 指示燈狀態 (1 2 3)
D 無線重低音揚聲器 — 貼近Sound Bar安裝。
E 外置設備 — (藍光播放機、遊戲機等等)

○: 開 / ●: 關 / ◐: 閃爍					
紅色閃爍	白色	藍色閃爍	藍色	白色	紫色
開啟 開機	OPTICAL / HDMI ARC	藍牙 就緒	藍牙	HDMI IN	USB

- 請用光纖線或 HDMI 線將Sound Bar連接至您的電視機。
- 如果您使用的是外部裝置（如機頂盒、藍光播放器、遊戲機等），透過 HDMI 連接線將其連接到Sound Bar或電視。
① 如有必要，請購買 HDMI 線纜、光纖或 USB 延長線來連接Sound Bar。
- 依照以下順序連接電源：無線重低音揚聲器 → Sound Bar。接著，開啟Sound Bar：與Sound Bar自動建立連線後，無線重低音揚聲器的 LED 指示燈亮綠色。
④ 與您的電視機配合使用產品
① 重複按下功能 [Function] 按鈕，直至 LED1 指示燈亮起白色。如果您使用連接到Sound Bar上的 HDMI™ IN 的外部裝置，請重複按下功能 [Function] 按鈕，直到 LED3 指示燈亮起白色。
② 在電視的設定上，將輸出揚聲器設定為 [HDMI ARC]、[光纖] 或 [外部揚聲器]。
- 透過 藍牙 將設備連接至您的智能電話
① 輕觸您的智能電話內的設定 [Settings] 按鈕，選擇 藍牙。開啟 藍牙 功能。（關 > 開）
② 按下 藍牙 配對 [Pair] 按鈕。一段時間過後，LED2 指示燈會閃爍藍色。
③ 於您的智能電話上找到並輕觸產品名稱。產品會顯示為「LG S77S(XX)」。
④ 當產品透過 藍牙 連接到智能手機時，LED2 指示燈會亮起藍色。
- 連接至 LG Sound Bar 應用程式
① 從您智能電話的 Google Play 或 App Store 應用程式中，找到並安裝 LG Sound Bar 應用程式。
② 您可透過選擇 [設定] 內的 [幫助] 以獲得更多資訊。

- ❗ 如果無線重低音揚聲器上的 LED 指示燈亮紅色，表示Sound Bar未連接至重低音揚聲器。若出現該情況，請依照以下順序進行連接。
- 按下Sound Bar的電源 [Power] 按鈕以關閉它。
 - 按下中斷連線的無線重低音揚聲器背面的PAIRING按鈕。確認 LED 指示燈是否閃爍綠色。
- 如果無線重低音揚聲器上仍出現紅色 LED 指示燈，請再次長按重低音揚聲器背面的按鈕。
 - 按下Sound Bar的電源 [Power] 按鈕以開啟它。
 - 建立連線後，無線重低音揚聲器上的 LED 指示燈會亮綠色。
- ❗ 請將Sound Bar、重低音揚聲器放置在離其他裝置（例如無線路由器、微波爐等等）超過 1 公尺的位置，以防止無線干擾。
• 某些揚聲器可能因輸入來源而無法發聲。選擇 BASS BLAST (BASS BLAST+) 聲音模式以聆聽所有揚聲器。

- 設計和規格若有更改，恕不另行通知。
- Google Play 是 Google LLC 的商標。

ENGLISH Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.



- A Sound bar
B Remote Control Receiver
C Status LED (1 2 3)
D Wireless Subwoofer - Install it close to the sound bar.
E External Device - (Blu-ray player, game console, etc.)

○: On / ●: Off / ◐: Blink					
Red blinking	White	Blue blinking	Blue	White	Purple
Power on Power off	OPTICAL / HDMI ARC	Bluetooth ready	Bluetooth	HDMI IN	USB

- Connect the sound bar to your TV via an optical cable or an HDMI cable.
- If you are using an external device (ex. Set-top box, Blu-ray player, game console, etc.), connect it to the sound bar or to the TV via an HDMI cable.
① If necessary, purchase HDMI cables, an optical cable, or a USB extension cable to connect the sound bar.
- Connect to power in the following order: wireless subwoofer → sound bar. Then, turn on the sound bar. When the connection is automatically established with the sound bar, the LED on the wireless subwoofer will light up green.
① If necessary, purchase HDMI cables, an optical cable, or a USB extension cable to connect the sound bar.
- Using the product with your TV
① Press the Function [Function] button repeatedly until LED1 lights up white. If you are using an external device that is connected to HDMI™ IN on the sound bar, press the Function [Function] button repeatedly until LED3 lights up white.
② On your TV's settings, set the output speaker to [HDMI ARC], [Optical], or [External Speaker].
- Connecting the product to your smartphone via Bluetooth
① Tap the Settings [Settings] button on your smartphone and select 藍牙 Bluetooth. Turn on the Bluetooth function. (Off > On)
② Press the Bluetooth pair [Pair] button. After a moment, LED2 blinks blue.
③ Find and tap the product on your smartphone. The product appears as "LG S77S(XX)".
④ When the product is connected to your smartphone via Bluetooth, LED2 lights up blue.
- Connecting to the LG Sound Bar app
① Find and install the LG Sound Bar app on Google Play or App Store from your smartphone.
② You can get more information regarding its use by selecting [Help] in [Setting].

- ❗ If you see a red LED on the wireless subwoofer, it means that the sound bar is not connected to the subwoofer. If this is the case, connect them in the following order.
- Press the Power [Power] button on the sound bar to turn it off.
 - Press the PAIRING button on the back of the disconnected wireless subwoofer. Check if LED blinks green.
- If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.
 - Press the Power [Power] button on the sound bar to turn it on.
 - When the connection is established, you will see a green LED light on the wireless subwoofer.
- ❗ Keep the sound bar, the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.
• Some speakers may not make sound depend on the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

- Design and specifications are subject to change without notice.
- Google Play is a trademark of Google LLC.