


Quick Start Guide



www.lg.com

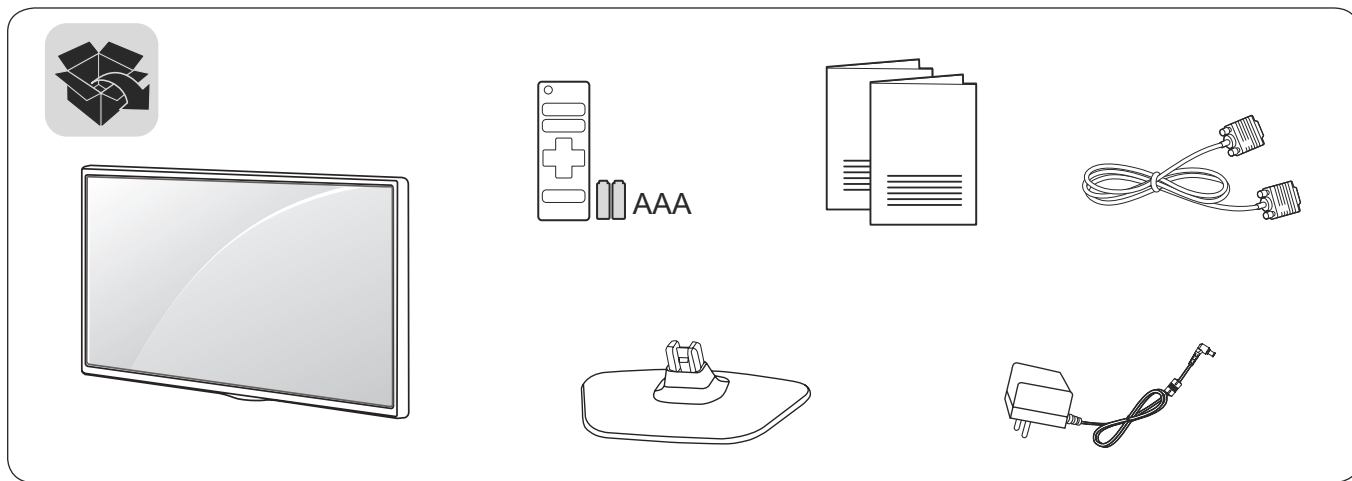

Read **Safety and Reference.**

*Image may vary depending on model.

Unpacking




Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.



MBM64536723

P/No: MBM64536723 (1601-REV00)


For the power supply and power consumption, refer to the label attached to the product

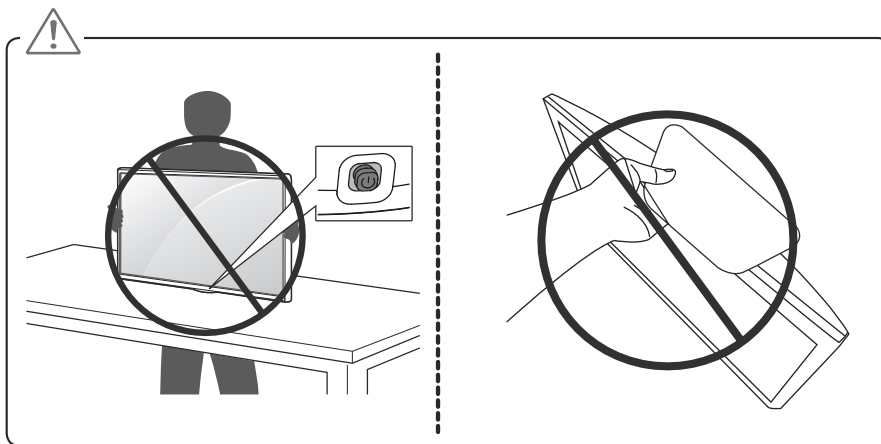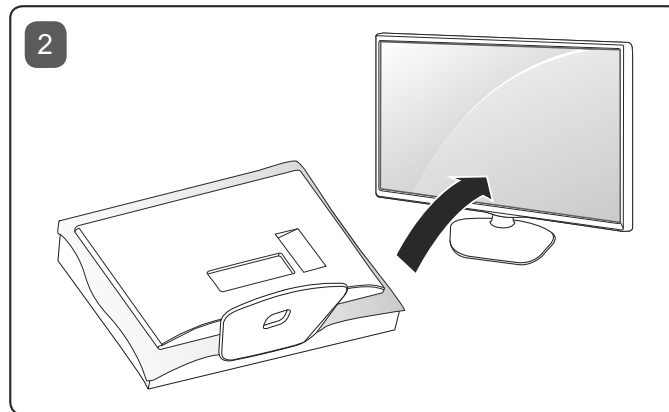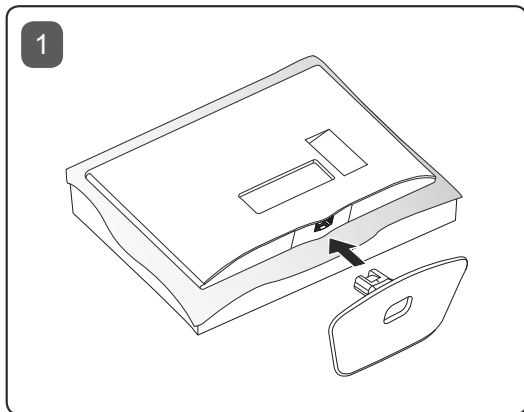

CAUTION



Image shown may differ from your monitor.

When attaching the stand to the monitor set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.

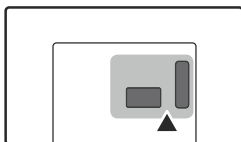

USB Connection







Connect a USB storage device such as a USB flash memory, external hard drive, or a USB memory card reader to the monitor and access the entertainment menu to use Various multimedia files

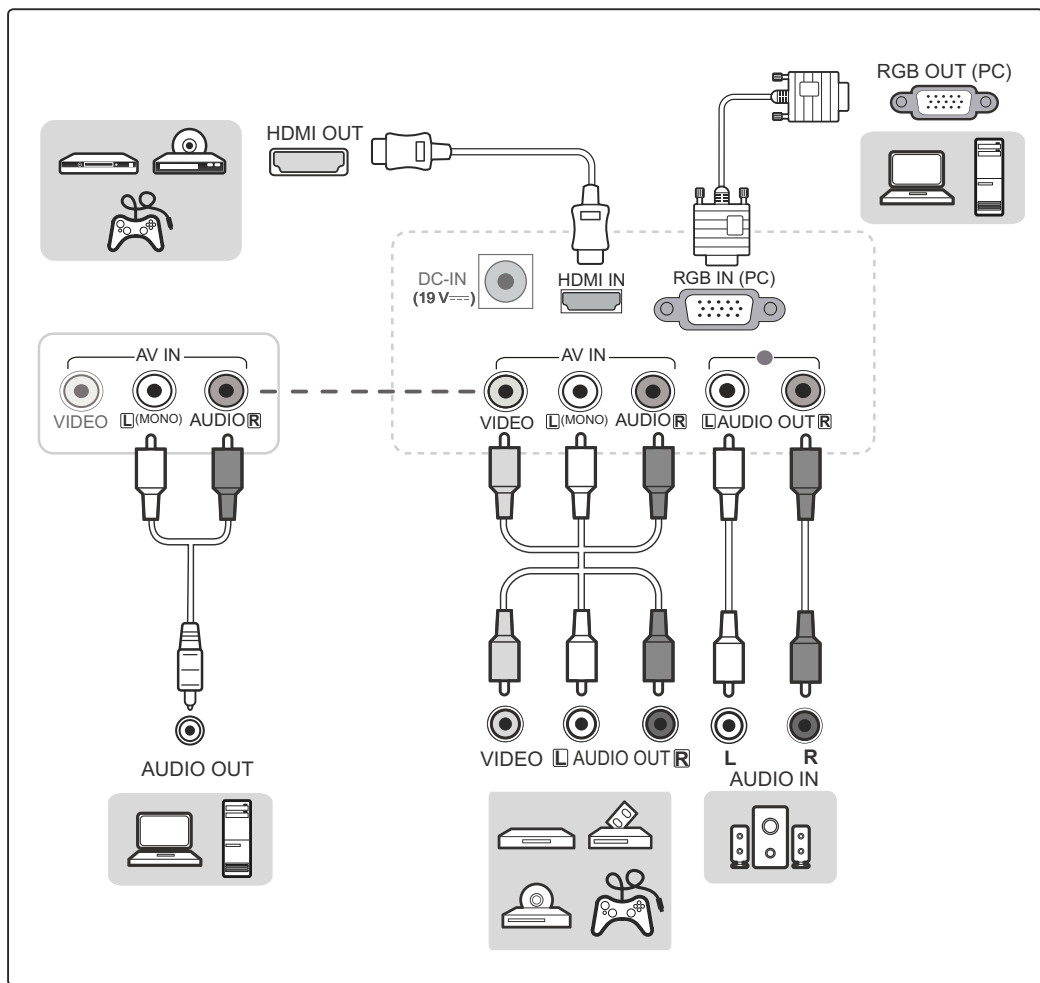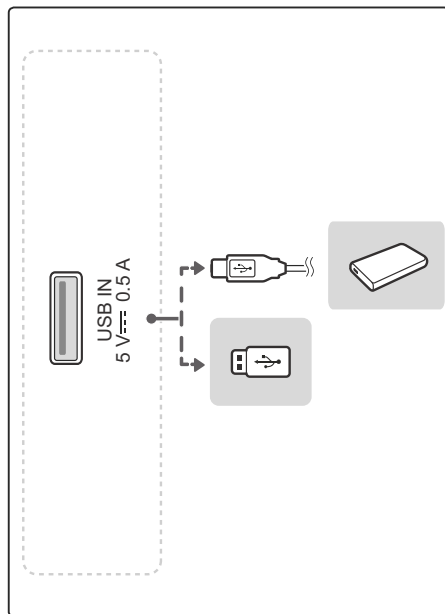

Note: All connection cables shown in the picture are not included along with the monitor set



DC-IN
(19 V ===)

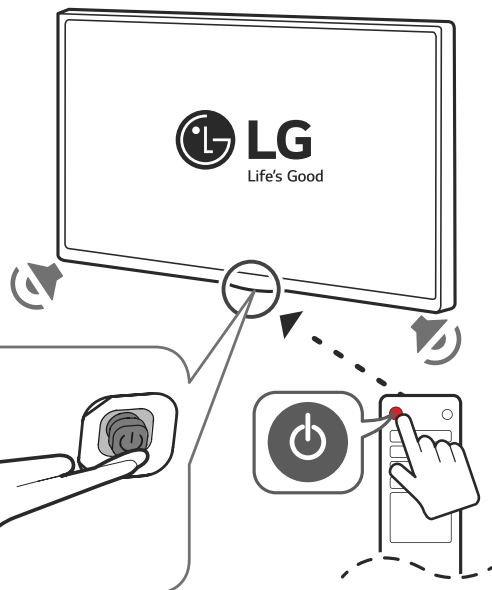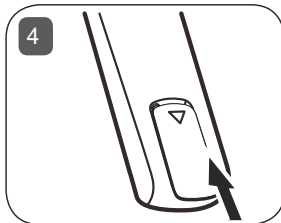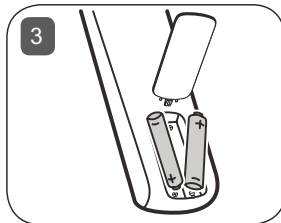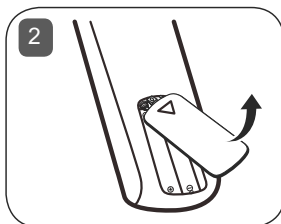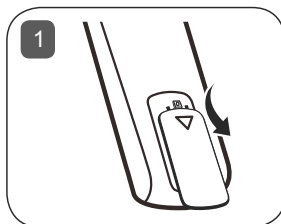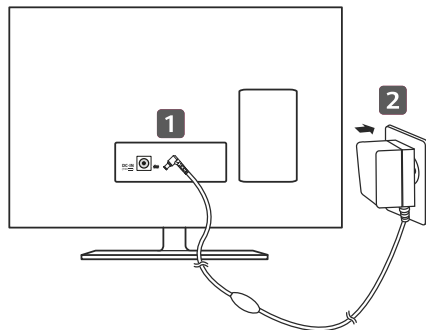

! NOTE

Do not use sub standard batteries in monitor remote which may lead to leakage & damage the remote control unit permanently. For long unused applications of remote controller it is advisable to remove batteries from remote control unit.