




OWNER'S MANUAL

VACUUM CLEANER

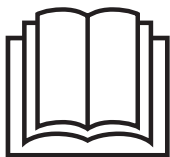

Before beginning installation, read these instructions carefully. This will simplify installation and ensure that the product is installed correctly and safely. Leave these instructions near the product after installation for future reference.

ENGLISH

A9LSLIMMOP



2339AHK-1

www.lg.com

TABLE OF CONTENTS

This manual may contain images or content that may be different from the model you purchased.
This manual is subject to revision by the manufacturer.

SAFETY INSTRUCTIONS

• READ ALL INSTRUCTIONS BEFORE USE	03
• WARNING	03
• CAUTION	09

INSTALLATION

• Product Overview	10
• Installing the Charging Station	13
• Storing the Accessories	14
• Charging the Battery	15

OPERATION

• Getting Started	16
• Operational Controls	17
• Using the Mop Nozzle	17
• Using the Nozzles and Tools	20

MAINTENANCE

• Cleaning the Appliance	22
• Cleaning the Nozzles	25

TROUBLESHOOTING

• Before Calling for Service	26
------------------------------------	----

SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USE

The following safety guidelines are intended to prevent unforeseen risks or damage from unsafe or incorrect operation of the appliance. The guidelines are separated into 'WARNING' and 'CAUTION' as described below.

Safety Messages

 This symbol is displayed to indicate matters and operations that can cause risk. Read the part with this symbol carefully and follow the instructions in order to avoid risk.

WARNING

This indicates that the failure to follow the instructions can cause serious injury or death.

CAUTION

This indicates that the failure to follow the instructions can cause the minor injury or damage to the product.

WARNING

WARNING

- To reduce the risk of explosion, fire, death, electric shock, injury or scalding to persons when using this product, follow basic precautions, including the following:

Technical Safety

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.
- Do not allow the appliance to be used as a toy. Close attention is necessary when used by or near children.

- Do not allow children to play with or hang on the appliance
- Do not use the appliance with damaged power cord or plug. The cord must be replaced. If the appliance is not working as it should, has been dropped, damaged, left outdoors, or dropped into water, return it to an LG Electronics service centre.
- Do not pull or carry by cord, use cord as a handle, close a door on cord, or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.
- Do not unplug by pulling on cord. To unplug, grasp the plug, not the cord.
- Place the cords from other appliances out of the area to be cleaned.

Battery

- Never use the battery, adapter, and the charging station from other appliances with this appliance. Use only the battery and the charging station provided by LG Electronics.
- Never use the battery, adapter, and the charging station from this appliance with other appliances.
- Unplug the power cord and remove the battery if the appliance will not be used for an extended period of time.
- Do not use modified or damaged batteries.
- Do not disassemble, remove or short-circuit the battery.
- When disposing of the battery or the appliance, remove the battery from the appliance and safely dispose of it.
- Have specifically designated battery packs replaced when it is no longer able to hold a charge.
- Refer to the Charging the Battery section instructions for the method of replacing the battery.
- When disposing of this appliance, follow regulations for disposal of rechargeable lithium-ion batteries.
- Follow all local ordinances and regulations when handling or disposing of the battery.
- Prevent unintentional starting. Ensure the switch is in the off position before connecting to the battery pack, picking up or carrying the appliance.
- Disconnect the battery pack from the appliance before making any adjustments, changing accessories, cleaning, servicing, or storing appliance.
- When battery pack is not in use, keep it away from other metal objects, like paper clips, coins, keys, nails, screws or other small metal objects, that can make a connection from one terminal to another.
- Under abusive conditions, liquid may be ejected from the battery. If this

- happens, avoid contact. If contact accidentally occurs, flush with water. If liquid contacts eyes, additionally seek medical help.
- If the appliance is to be stored unused for a long period, the batteries should be removed.
 - Before removing the battery, you must turn off this appliance.
 - When fitting the battery into the product body, insert it completely until it clicks.

Battery Specifications

- **Model Name:** VC-2339A-5S1P
- **Type:** Rechargeable Lithium-ion Battery
- **Rated Capacity:** 2200 mAh

Installation

- To avoid an electrical shock or fire, do not install, charge or store the appliance where it may be exposed to water, rainfall or high humidity.
- Install, charge and store the appliance in a well-ventilated place.
- Avoid operating the appliance in areas where there is a risk of leakage of flammable gas, industrial oil or metallic dust.
- Do not store or install the appliance, power cord or plug near heating devices or open flames.
- Install the charging station on a firm, level surface.
- Do not use or store the appliance at temperatures below 5 °C or above 38 °C.
- Do not store or install the appliance where it is exposed to temperatures below freezing or exposed to outdoor weather conditions.
- When installing or moving the appliance, be careful not to pinch, crush, or damage the power cord or plug.
- Use the anchoring screws only when attaching to concrete or similar solid surfaces.
- Never drill into a wall without first checking that the area behind it is free from power conduits, plumbing, vents, or cables.

Operation

- Read all instructions before using the appliance, and save these instructions.
- Use only as described in this manual. Use only manufacturer's recommended attachment.
- This appliance is designed for normal indoor domestic use only. It is not to

be used for any non-residential, commercial, or industrial application.

- This product should only be used with a 100 - 240 V~ 50/60 Hz outlet. Make sure to check the power specifications of the place where you intend to use the appliance.
- Do not handle the power cord, plug, or appliance controls with wet hands.
- Wipe any moisture or dirt off the cord or plug with a dry cloth.
- Never attempt to operate this appliance if it is damaged, malfunctioning, partially disassembled, or has missing or broken parts, including a damaged cord or plug. Take it to an authorized LG Electronics service centre or dealer for assistance.
- Do not apply excessive force to the power cord to bend it, or place it under a heavy object as this will damage it.
- Do not use multiple-outlet adapters with this appliance. Make sure to use a power socket with a capacity of 10 A.
- Do not plug the appliance into a damaged or loose outlet.
- Make sure to unplug the power cord when the appliance is not to be used for an extended period of time.
- Do not damage, alter, excessively bend, twist, pull, pinch or heat the power cord.
- Before using the appliance, remove any wire or string on the floor.
- Avoid touching the prongs of the power plug with your finger(s) when unplugging the power cord.
- Do not cover the power cord with a rug or carpeting.
- Push the power plug firmly into the wall outlet so that it is not loose.
- If the product has been submerged, contact an LG Electronics service centre or dealer for instructions before resuming use.
- If the product makes a strange noise or emits an odour or smoke, discontinue use and contact an LG Electronics customer information centre.
- Only qualified technicians or service personnel from LG Electronics may disassemble, repair or modify the appliance.
- Never insert a sharp metallic object such as a pin, nail or knife in a hole or gap in the appliance or the charging station.
- Do not vacuum liquids with this appliance. Make sure that no water, beverage or detergent gets inside the appliance or the charging station.
- Do not allow the appliance to sweep up blades, thumb tacks, sawdust, sharp objects, or hot or cold ashes.
- Do not allow children to use the appliance.
- Do not let children or pets get close to the appliance when using, charging or storing.
- Do not insert the nozzle or tools in your mouth.

- Keep clothing and hair, fingers, or other parts of the body away from openings and moving parts.
- Do not operate the appliance with the suction inlet or outlet blocked.
- Do not use the appliance without the dust bin and filters in place.
- Do not use in an enclosed space where vapors are present from paint thinner, mothproofing substances, flammable dust or other explosive or toxic materials.
- Do not touch the charging terminals on the appliance or the charging station, or insert an electrified object inside the appliance or the station.
- Always store the appliance on the floor standing or wall-mounted charging station when it is not in use.
- Do not lean the appliance on walls, chairs or tables.
- If the earth leakage breaker is tripped when the product is put on the charging station, immediately remove the appliance from the charging station. Contact an LG Electronics customer service centre.
- Use extra care when cleaning on stairs.
- Do not use or store a heating device or flammable substance(ether, benzene, alcohol, chemicals, combustible sprays, insecticide, air freshener or cosmetics) in close proximity to the appliance.
- Do not attempt to clean up a liquid substance (water, beverage), odorous substances (candy, chocolate, pet excrement), metallic objects (blades, pins), flammable substances, burning / smoking(cigarettes, matches, or hot ashes), surfactants, or glass shards with this appliance.
- In the event of a gas leak(natural gas, propane gas, etc.), do not operate this or any other appliance. Open a window or door to ventilate the area immediately.
- Do not hold the charging station upside down with the battery in the charging station.
- Do not expose the appliance, and the battery in particular, to heat, a heating device or direct sunlight.
- Do not keep the appliance or its battery inside a vehicle which is exposed to direct sunlight.
- Never allow any water, beverage or detergent to get inside the battery.
- Do not apply physical impacts to the battery.

Maintenance

- Make sure to unplug the power cord when cleaning or maintaining the charging station.
- Do not wash the inlet port or the dust bin with water or detergent.
- Do not use detergents, polishes or air fresheners to clean the dust bin.
- Do not apply or spray a flammable substance (gasoline or thinner) or surfactants (detergent or bath soap) on the appliance.
- Wash hands after handling nozzles. The nozzles contain carbon fiber, and contact may cause minor skin irritation.

Disposal

- Keep packing materials out of the reach of children. Packaging materials can pose a suffocation risk for children.
- Destroy the carton, plastic bag, and other packing materials after the appliance is unpacked. Children might use them for play. Cartons covered with rugs, bedspreads, or plastic sheets can become airtight chambers.
- Dispose of this appliance according to local, state, and regional laws and regulations.
- Contact your local city council or the related government authority before disposing of this appliance.

Mop Nozzle

- Do not use the mop nozzle to clean up sharp objects such as glass shards, wires, blades, or pins. The sharp objects could become embedded in the mop pads and cause injury when you clean the pads.

CAUTION

- To reduce the risk of injury to persons, malfunction, or damage to the product or property when using the appliance, follow basic safety precautions, including the following:

Operation

- This appliance has a built-in safety device to prevent damage from overheating. If the appliance becomes overheated after extended use, it may automatically turn off. If this occurs, leave the appliance in a cool, well-ventilated area for about an hour before turning on the power again.
- Do not subject the product to shocks or drop it.
- Do not install wet or damp filters.
- Always use a soft cloth to clean the appliance. Do not clean the product with a volatile or organic solvent (thinner or acetone).
- Do not clean the same spot repeatedly for an extended period of time. Doing so may damage the carpet or flooring surface.
- Keep fingers away from pinch points when assembling the appliance or the charging station.
- Do not use the double-sided tape to anchor the charging station on wallpaper. Use the provided screws to anchor the charging station. The weight of the charging station and the appliance could damage the paper.
- Do not apply force or any impact to the Cyclonic Mesh Filter.
- Do not remove the battery during operation.

Mop Nozzle

- Do not use the mop nozzle for any purpose (for example, polishing a car, cleaning windows) other than domestic floor cleaning.
- Do not use the mop nozzle to vacuum up liquids (water, beverage).
- When using the mop nozzle, always attach the mop pads.
- Do not clean a coated, rough or delicate floating floor and carpets with the mop nozzle.
- Do not use the mop nozzle to clean the same spot repeatedly for an extended period of time. The water injection at the mop nozzle may cause water to get into the dust inlet and damage the appliance.
- Do not step on the mop nozzle.
- Wet floors can pose a slip hazard. Allow floors to dry completely before allowing anyone to walk on them.
- Do not store the appliance by attaching the water tank filled with water to the mop nozzle.



INSTALLATION

Product Overview

The images in this guide may be different from the actual components and accessories, which are subject to change by the manufacturer without prior notice for product improvement purposes.

Front View

*1 This feature is only available on some models.

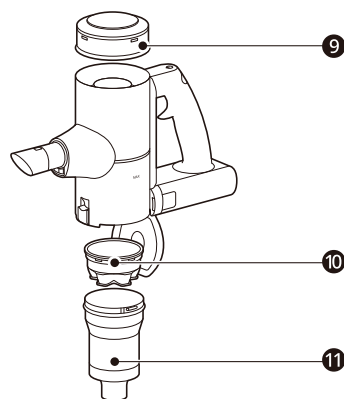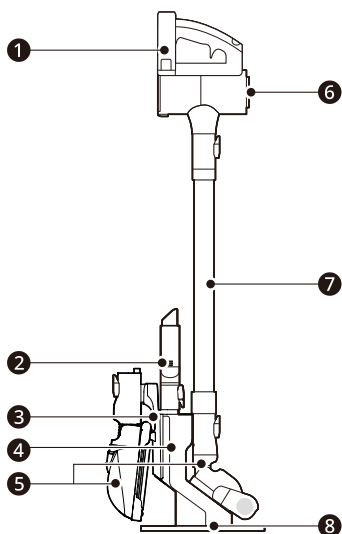


- ① Battery
- ② Tool
- ③ Tool Holder
- ④ Charging Station
- ⑤ Nozzle
- ⑥ Product Body

- ⑦ Fixed Pipe
- ⑧ Charging Station Support
- ⑨ Exhaust Filter
- ⑩ Pre-filter
- ⑪ Cyclonic Mesh Filter


Accessories

Included Accessories

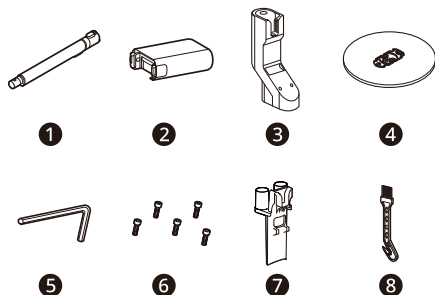


- ❶ Fixed Pipe
- ❷ Battery
- ❸ Charging Station
- ❹ Charging Station Support
- ❺ Allen Key
- ❻ Charging Station Screws
- ❼ Tool Holder
- ❽ Cleaning Brush

 Basic Accessories




- ❶ Crevice Tool
- ❷ Combination Tool

 Nozzles




- ❶ Hard Floor Power Drive Nozzle

Mop Kit

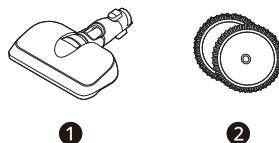

- ❶ Mop Nozzle
- ❷ Mop Pads for General Cleaning

Installation Kit

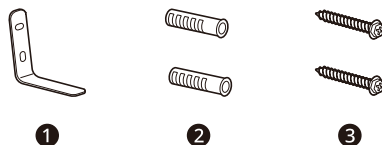

- ❶ 「L」 Shaped Wall Mounting Bracket
- ❷ Wall Anchor
- ❸ Wall Set Screws

NOTE

- The mop pads, batteries, exhaust filter and the pre-filter will eventually need to be replaced. Contact an LG Electronics customer service center.

Specifications

Appliance

Model	A9LSLIMMOP	
Dimensions (Width X Depth X Height)	251 mm X 242 mm x 1026 mm	
Weight	Approximately 1.97 kg	
Power Consumption	250 W in Turbo Mode (Maximum 450 W) 100 W in Power Mode 55 W in Normal Mode	
Battery Run Time (Using one battery)	Using with the Nozzle Up to 6 minutes in Turbo Mode Up to 15 minutes in Power Mode Up to 30 minutes in Normal Mode	Using with the Tool Up to 7 minutes in Turbo Mode Up to 20 minutes in Power Mode Up to 40 minutes in Normal Mode

- Dimensions are given for the assembled product body, pipe and nozzle.
- Battery run time is the result of using a fully charged battery according to the LG Electronics test standard. Results may be different depending on actual use environment and period of use.

Power Supply unit

Model	ZD012M220075BS
Input	100 V - 240 V~, 50/60 Hz, 0.5 A
Output	DC 22.0V, 0.75A

Installing the Charging Station

Installing the Stand-type Charging Station

⚠ Warning


- Install the charging station on a level surface so that it does not tip over.
- Supervise children or pets to avoid the product and its charging station from tipping over.

⚠ Caution

- When assembling the product or charging station, be careful not to pinch your fingers.
- Be careful not to drop the accessories when taking them out of the packaging box.
- Use wall screws only for solid walls, such as concrete walls.

Be sure to follow the steps below for the charging station

1. Mount the charging station ④ to the charging station support ③.
2. Use the included screws ② and Allen Key ① to assemble the charging station and charging station support.

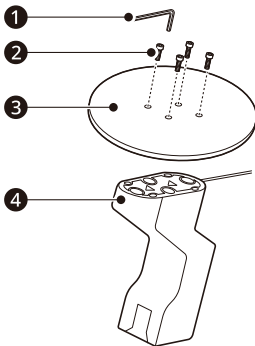

- Assemble according to the triangular assembly guide on the charging station and the charging station support.



⚠ Caution

- When assembling, be careful not to let the charging adapter wire get caught between the charging station and the charging station support.


Installing the Anti-Tip Bracket

The anti Tipping bracket helps prevent the product and its charging station from tipping over and causing damage or injury.


1. Before moving the product to its final location, select a suitable place to install the 「L」 shaped wall mounting bracket.
 - The 「L」 shaped wall mounting bracket should be located either behind or beside the product.
 - Place the charging station stand against the wall where it will be finally positioned and then align the L bracket to the top of the Charging base stand and the wall before marking out the two holes.

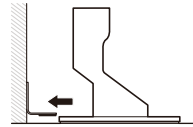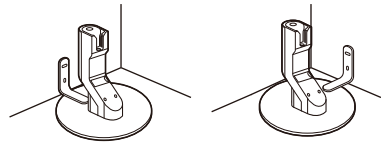

2. Drill 2 holes in the concrete wall at the selected location to insert the wall anchors. It is not recommended to secure the bracket to a Gyprock or plaster board wall as any impact or force to the bracket can damage the wall or its fixings.
 - We recommend a wall hole diameter of 8.5 mm and a depth of 55 mm.
 - NOTE: Make sure there are no pipes or wires inside the wall before drilling any holes.

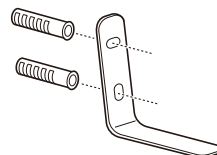

3. Use the wall set screws to fix the「L」shaped wall mounting bracket to the concrete wall.

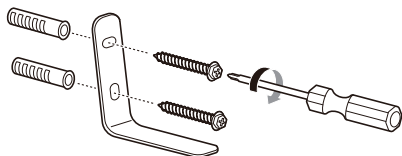


4. Slide the charging station support underneath the retaining bracket and connect the charging adaptor to the outlet.

Storing the accessories


Storing the Tools

Store the frequently used tools such as the combination tool and crevice tool attached to the charging station.


1. Insert Tool holder into the hole above the charging station.

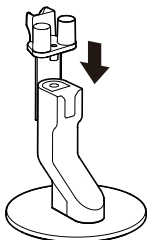


2. Use the screw and allen key provided with the product to secure the tool holder and charging station.

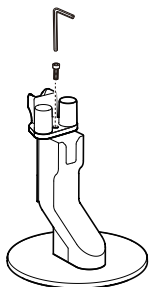

3. Insert the accessory tools into the holder.

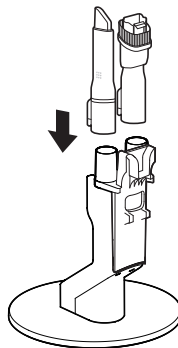

4. Insert the nozzle into the holder.

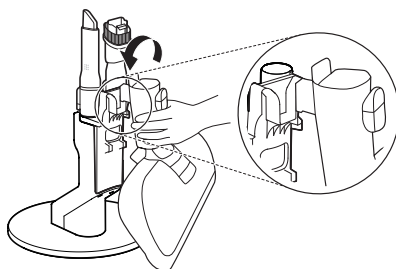


⚠ CAUTION

- When storing the mop nozzle on the stand, please empty the water tank before placing it.
- Do not store the mop nozzle on the stand with the product assembled. It may cause injury and product damage if the product falls over.
- The mop nozzle stand does not have a charging function. Please place the product on the charging stand.

Assembling the Appliance


Follow these steps to safely assemble the appliance.

1. Assemble pipe ③ and floor Nozzle onto the main unit ①.
 - To remove the pipe, press and pull down the pipe release button ②.

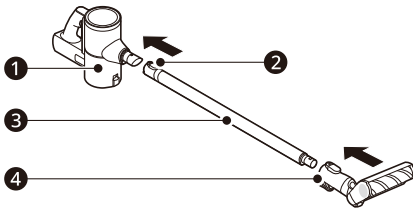


2. Align the product with the bottom groove **1** of the charging station.

- when the cleaner is successfully placed into the charging station it will emit an audible chime and the battery status bar will flash briefly. if the chime is not heard, then lift the cleaner from the charging station then lift it from the charging station and refit it again properly.

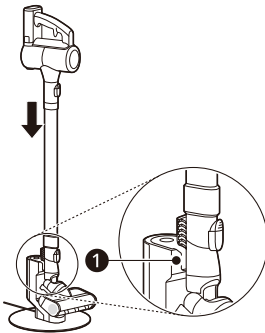

1. Press the power button to power off the product.
2. Align the product with the groove at the bottom of the charging station **1**.
 - Lower the cleaner into the charging station. When the cleaner is successfully placed into the charging station it will emit an audible chime and the battery status bar will flash briefly. if the chime is not heard, then lift the cleaner from the charging station and refit it again properly.
 - When charging is complete, the battery level indicator **3** will turn off.

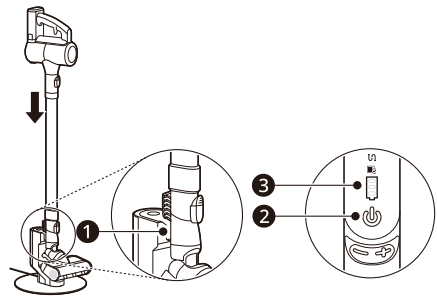

⚠ CAUTION

- Make sure to securely fit the product body onto the charging station. If the appliance falls off the charging station, it could cause injuries, property damage or product damage.

Charging the Battery

Before Charging the Battery

- Make sure that the adapter is connected to the power outlet.
- Fully charging a single battery usually takes 4 hours.
- The battery will not be charged if the indoor temperature is below 5 °C. Only charge the battery when indoor temperatures are between 5 °C and 38 °C.
- The battery will eventually need to be replaced. Due to the battery characteristics, runtime is shortened after using the appliance repeatedly for an extended period.

OPERATION

Getting Started


Before Using the Appliance

- Support the bottom of the appliance when cleaning an elevated surface.
- To avoid scratches on polished floors, keep tools and the brushes and rollers of the nozzles free from hair, grit, sand, or abrasive objects.
- Make sure that the exhaust filter or pre-filter is properly assembled before using the appliance.
- Close the dust bin cover properly before using the appliance. If the dust bin cover is left open, the suction strength may deteriorate and affect the cleaning results.
- Store the appliance in the charging station or place it flat on the floor when not in use. Leaning the appliance against a wall or chair can result in product damage or personal injury if the appliance falls.
- Environmental conditions such as temperature and humidity may cause static electricity to accumulate on the appliance. Please contact LG Electronics customer information centre if the problem persists.
- Make sure to remove any foreign object such as a sock or stocking before using the appliance. Any foreign object on the inlet port or extension pipe will prevent the appliance from functioning properly.
- Please use the product at normal room temperatures as the battery runtime may deteriorate severely if used at temperatures lower than 5 °C or higher than 38 °C for an extended period of time.
- The battery runtime is dependent on the surface type and the suction power.
- Follow manufacturer's recommendations when cleaning flooring, carpets, and rugs.
- Refer to the Specifications section for battery runtime details.


Assembling Attachments

Nozzles and tools can be attached to either the product body or the end of the fixed pipe.

1. Insert the fully charged battery **1** into the cavity at the bottom of the handle on the product body and push the battery until it clicks.
 - If it is not properly inserted, the battery may fall out, causing product to malfunction or personal injury.

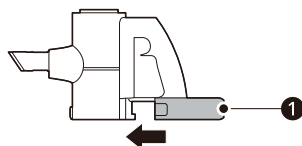


2. Attach the nozzles, tools, or fixed pipe by sliding them onto the inlet **2** on the body until they click into place. The nozzles and tools can also be attached to the end of the fixed pipe **2**.
 - Detach the accessories by pressing the release button **3**.

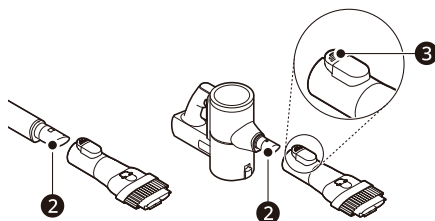

3. Press the **Power** button to activate the Normal mode.
 - To turn off the appliance, press the **Power** button again.

Operational Controls

Vacuum cleaner controls and status lights

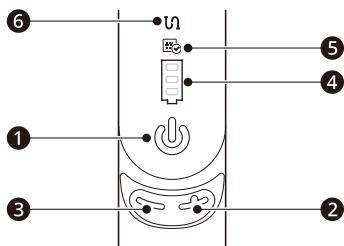

1 Power Button

- Press the power button to power the cleaner on and off.
- When turned on, it operates in Normal mode.

2 Increase suction (+) button

- Press the (+) button to increase suction power. The below 3 suction power modes are available. Normal → Power → Turbo mode.

3 Reduce suction (-) button

- When you press the (-) button, the suction power changes from Turbo → Power → Normal mode.

4 Battery level indicator

- The corresponding icon indicates the remaining battery capacity during use and also turns off when charging is complete.

5 Filter cleaning interval reminder light

- If you use the product for more than a certain amount of time, the icon will light up. Check the pre-filter, exhaust filter, and cyclonic mesh filter and clean if necessary.

6 Foreign matter clogging indicator lamp

- If the inside of the product, pipes, suction parts, inlets, pre-filters, exhaust filters, etc., are blocked by foreign objects, the icon will light up.
- If the foreign matter clogging persists, the appliance will switch off and a Foreign

matter clogging notification will sound. Remove any debris that may be lodged in the pipe and clean the pre-filter, exhaust filter, and cyclonic mesh filter.

Using the Mop Nozzle

 
Before Using the Mop Nozzle

- The mop pads only rotate at one speed regardless of what suction power setting the product body is set to.
- To prevent product damage, the mop attachment plate will automatically stop if there are foreign objects stuck in the plate or if it is subjected to a strong impact. Turn the appliance off immediately and remove the foreign objects or obstructions before resuming use.
- If you hear a noise while mopping, the mop pad may have dropped off the mop attachment plate. Turn off the product immediately and reattach the mop to the attachment plate before resuming use.
- Do not use a soiled mop pad to clean floors.
- Use only authorized LG Electronics mop pads.
- Empty the dust bin and clean the exhaust filter and the pre-filter after using the mop nozzle.

Using the Wet Mop Pads

Press the Power button. You can use the only mop mode and not turn on the dust suction function.

- Press the (+) button to turn on the dust suction function.




CAUTION

- Do not assemble or disassemble the nozzle while the appliance is turned on. Doing so may result in injury.
- Set the water adjustment button to the STOP position when not using the appliance for an extended period of time. Failure to do so may result in product failure.


- Do not let the appliance stand on the floor while the wet mop pads are attached. Doing so may result in damage or swelling to wood flooring.
- Do not use on PVC or PU mat for infants or children. Friction can cause the motor to overheat.
- If you use the mop nozzle for a long time with the suction off, the motor may overheat (recommended duration of use: 80 minutes).
- When the motor overheats, the overheating prevention function is activated and the appliance is automatically turned off. Use the appliance after cooling the heat for about one hour in a cool, well-ventilated place.

Filling the Water Tank


1. Press the PUSH button ① to remove the water tank from the mop nozzle.

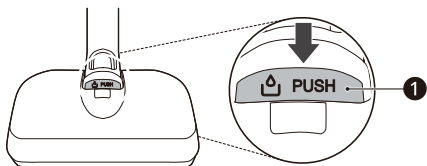

2. Open the water inlet cap ② on the bottom of the water tank and fill the tank with water.
 - Do not put any liquid other than water, including hot water, in the water tank.

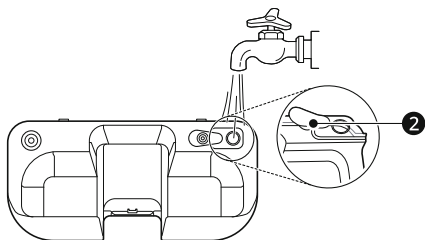


3. Close the water inlet cap tightly.
 - If the water inlet cap is not closed properly, water may leak.

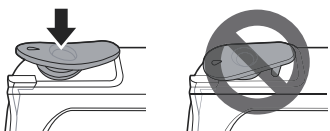

3. Attach the water tank to the mop nozzle again.


- Insert the 2 tabs ③ at the front of the water tank into the slots ④ on the top of the mop nozzle. Press down at the centre ⑤ to lock the tank in place.

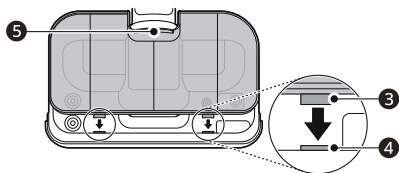


Attaching the Mop Pads

1. Wet both sides of the mop pads with water then squeeze out any excess water before attaching the pads.

- Do not attach pads while they are dripping wet.
- Attaching and using mop pads while they are dry may affect the cleaning results.

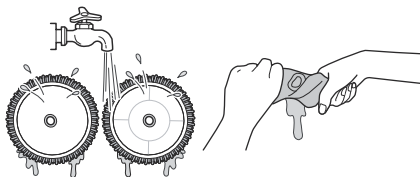


2. Place the mop nozzle upside down on the floor.
3. Align and attach the centre of the mop pad with the centre of the mop attachment plate. Place the mop nozzle upside down on the floor.

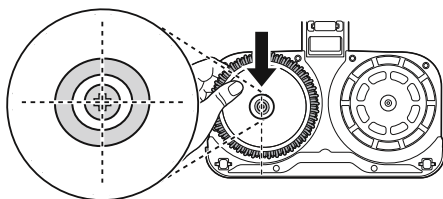


4. Assemble the mop nozzle to the appliance.

Adjusting the Amount of Water

 
Slide the water supply adjustment slider to control the amount of water released onto the mop.



 Use the **Low Mode** for cleaning wooden floors that are sensitive to moisture or when a small amount of water is needed.



 Use the **High Mode** when a large amount of water is needed (for example, to clean stubborn stains or areas with a lot of dust). Excessive water may damage the floor.



Use the **STOP Mode** when you need to stop the water supply or when cleaning with a dry cloth.

WARNING

- To avoid injury, do not attach the mop pad while the mop attachment plate is rotating.

CAUTION

- Do not let the appliance stand on the floor while the wet mop pads are attached. Doing so may result in damage or swelling to wood flooring

Using with the Mop Nozzle

1. Attach the water tank and mop pads to the mop nozzle.
2. Slide the water level adjustment slider to adjust the amount of water released onto the mop pad to either High Mode or Low Mode.
3. Press the Power button to start cleaning.


Drying the Water Tank and Mop Pads

Drying the Water Tank

When cleaning is completed, make sure to empty the water tank and dry it before storing the mop nozzle.


CAUTION

- Turn the water inlet caps to make sure they remain open when storing the water tank. If caps are closed and not properly dried, it may cause odour.
- Do not remove the water inlet caps from the water tank. Caps may tear.
- Do not add detergent, vinegar or baking soda to the water tank when washing. It is not easily removed in the water tank, which may soil the floor.
- After cleaning, wipe off any remaining water on the water supply inlet ① on the mop nozzle with a soft cloth. The water could drip onto the floor and damage it.

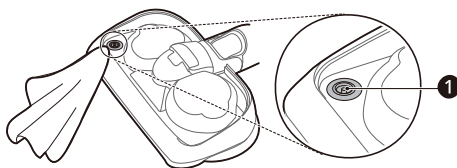


- Do not pull or stretch the rubber gasket on the water supply inlet. Doing so may tear or damage it.

1. Open the water inlet cap on the bottom of the water tank and empty the water tank.
- Shake the water tank to remove the remaining water.

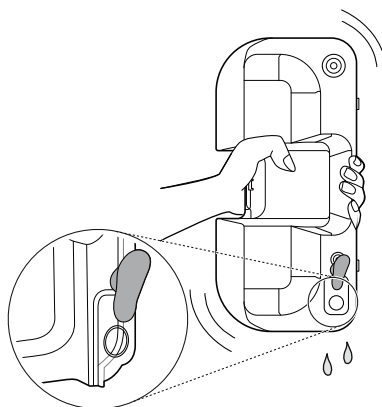

2. Leave the water inlet cap open and allow the water tank to dry in a well-ventilated area out of direct sunlight for at least 24 hours.
 - Keep the water tank after water is completely empty and dry. Moisture or residual water in the tank may cause odour.

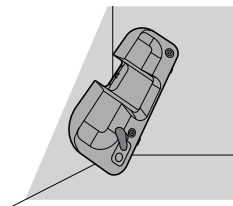


Drying the Mop Pads

After using the mop pads, hand wash them and allow them to dry before storing them.

⚠ CAUTION

- Do not use as follows, as it may become deformed.
- Do not use bleach or fabric softener when washing the mop pads.
- Do not dry the pads in a clothes dryer.
- Do not boil the mop pad.

1. Separate the mop pads from the mop attachment plate.
2. Hand wash the pads with a neutral detergent.
 - Storing mop pads in a damp state can result in an unpleasant odour. Set the pads in a well-ventilated area out of direct sunlight for at least 24 hours or until completely dry.

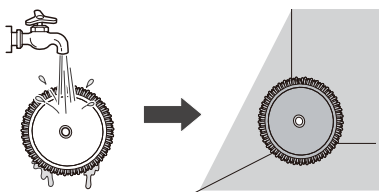

Using the Nozzles and Tools

Before Using the Nozzles and Tools

Some accessories are only available on some models.

Specialized attachments can help you clean more effectively. Tools and nozzles can be attached to the product body or the fixed pipe.

- Adjust the suction power if the inlet gets stuck on the floor, carpet, or bedding.
- Each Nozzle is equipped with a motor and may make a sound when operating.

⚠ CAUTION

- Do not use the Floor Power Nozzle on PVC or polyurethane mats for infants and children. The mat may stick to the nozzle, making it difficult to operate, causing damage to the mat or static electricity on the appliance. Clean mats using the crevice tool.

Floor Power Drive Nozzle


Use the Floor power nozzle for hard floors. it is not suitable for mats rugs or carpets.

- Do not push the 'PUSH' button on the Floor power nozzle during use as the rotating brush will detach and may cause damage or injury. It should only be pressed for cleaning purposes and when the nozzle is detached from the cleaner.

Crevice Tool

Use this tool to remove dust from corners or narrow spaces.

- Use it for areas with static electricity such as mats.
- Use it with the **Turbo** mode to clean pet hair out of furniture, mats, or tight areas like corners.

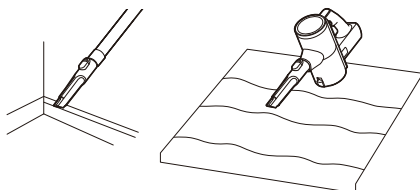


Combination Tool

Can be used in either crevice mode or brush mode for cleaning corners or small gaps where dust and dirt gather.

- **Crevice Mode**


Use the tool in the crevice mode to clean flat surfaces such as sofas or mattresses.

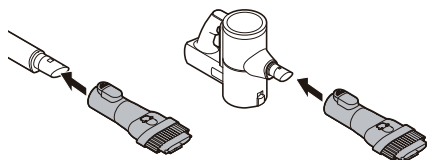

- **Brush Mode**

Use the tool in the brush mode to clean delicate surfaces such as frames or furniture.

- To convert modes, press the adjustment button ① and push forward.

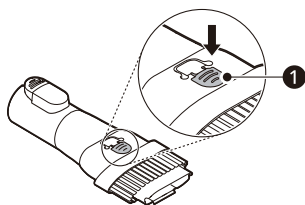

MAINTENANCE

Cleaning the Appliance

Before Cleaning the Appliance

To maintain the optimum suction power, the cyclonic mesh filter, the exhaust filter and the pre-filter should be cleaned regularly and washed under running water at least once a month.

- Turn off the power before cleaning the appliance.
- The frequency of cleaning varies depending on the usage environment and usage time. In a dusty environment, clean frequently.

⚠ WARNING

- Never wash the nozzle, rotating brush or product body with water. Water could reach the motor and cause electric shock or fire.
- Do not allow foreign objects to enter the motor. Doing so may cause electric shock, fire or product damage.
- Do not insert fingers or sharp objects into the motor. Doing so could cause product damage, personal injury or electric shock.

⚠ CAUTION

- Do not apply force or allow impacts to the cyclonic mesh filter. Doing so could deform the filter, compromise product performance, or cause the product to malfunction.


Removing Foreign Objects

In order to maintain product performance, be sure to remove any foreign objects and dust from inside the product body, fixed pipe or air inlets.

- Foreign materials inside the product can cause the product to be noisy, have poor suction, or shut down during operation.
- If the inside of the product body, fixed pipe, inlets, pre-filter, or exhaust filter is clogged with foreign objects, the power will surge

(alternating from Hi to Lo power) a few times to alert you to the blocked airflow. The appliance will then automatically turn off to prevent damage.


Separate the battery from the product body and remove the foreign objects before resuming use of the appliance.

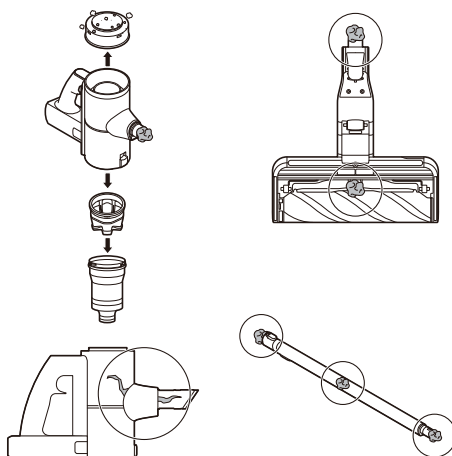

Cleaning the Dust Bin


Empty and clean the dust bin after every use.

- If the dust bin is completely full of dust or the filter is clogged, the suction power may be reduced.
1. Remove the battery from the body of the product before cleaning.
 2. Press the dust bin cover release button **①** to open the dust bin cover and empty the dust bin.
- Empty the dust bin into a larger waster bin.
 - For less dust, the dust bin can first be emptied into a plastic or paper bag before disposing of the bag into a waste bin.

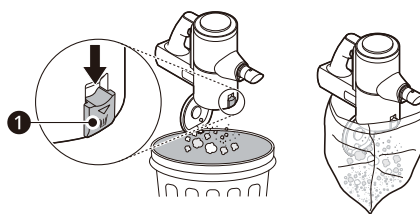


3. Rotate the cyclonic mesh filter **2** counter-clockwise to detach it.

- When the cyclonic mesh filter is removed, the pre-filter **3** should be attached to the cyclonic mesh filter. If it is not attached with the cyclonic mesh filter then, check the inside of the vacuum cleaner and take it out by hand.

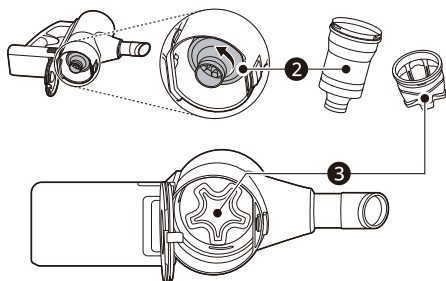


4. Remove dust from the cyclonic mesh filter and pre-filter and wash with water at least once a month.

- If there is any stubborn dust left in the cyclonic mesh filter, soak it in lukewarm water (about 40°C) for 30 minutes and then gently clean it with a brush before rinsing it again.
- Never tap or hit the cyclonic mesh filter against any surface as it will damage.
- Allow all the filters to dry in a well-ventilated area out of direct sunlight for at least 24 hours before reassembling.
- Any remaining moisture or undried filters may cause odour or severe damage to the suction motor.

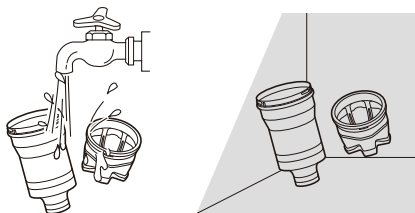

5. Use the cleaning brush **4** to remove the dust inside the dust bin.

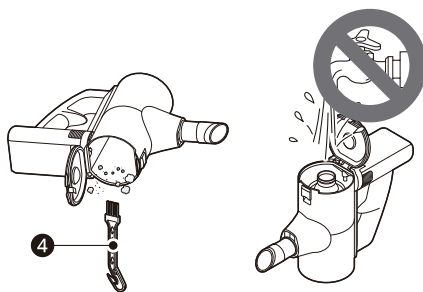

⚠ WARNING


- Never wash the product body with water. Water could reach the motor and cause electric shock or fire.
- Do not use the product body to suck up oils or any liquids, including water.
- Do not use the appliance without the Cyclonic Mesh Filter installed. Doing so could damage the product.
- Do not insert fingers or sharp objects into the motor to avoid product damage, personal injury, or electric shock.
- Do not allow foreign objects to reach the motor to avoid product damage, explosion or fire.

⚠ CAUTION

- Do not apply force or allow impacts to the Cyclonic Mesh Filter. Doing so could deform the filter, compromise product performance, or cause the product to malfunction.


Cleaning the exhaust filter

1. Remove the battery from the product body.
2. Rotate exhaust filter **1** counterclockwise to the open position **2** and remove it from the product body.

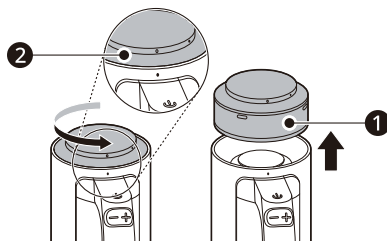

3. Use the cleaning brush ③ to clean the dust from the motor exhaust area.

- To prevent fire or permanent product damage, do not wash the body of the product with water as the suction motor is directly under the filter.

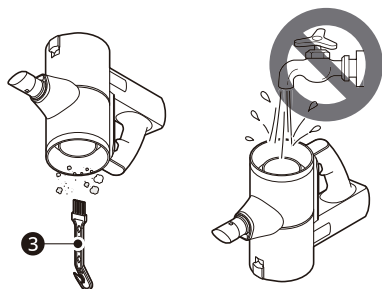


4. Dust off the filter and wash with water at least once a month.

- After washing the filter with water, allow it to dry completely in a well-ventilated area out of direct sunlight for at least 24 hours before reassembling. Any remaining moisture may cause odor or damage to the motor.



5. Align the exhaust filter to the open position and rotate clockwise to the locked position ④ to assemble it onto the product body.

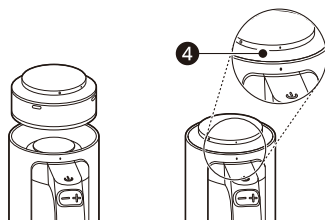

⚠ CAUTION


- Do not use the appliance without the exhaust filter installed. Doing so could result in product damage.

Cleaning the Nozzles

Clean the nozzle and rotating brush regularly.

⚠ CAUTION


- Always separate the nozzle from the product body or remove the battery before cleaning. If the nozzle starts to operate during cleaning, it could cause an injury.
- Keep fingers away from pinch points when assembling the nozzle on the appliance or the rotating brush on the nozzle.
- Do not use the rotating brush as a wet mop. It may cause product damage.
- Do not rinse or submerge the rotating brush or nozzle in water. It may cause product damage.

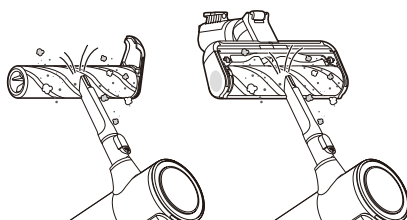


4. Use a damp towel or cloth to remove any remaining foreign objects and dust from the brush and the bottom of the nozzle. Remove foreign objects, debris and hair from all Rollers of the nozzles using tweezers.
- Wrap the handle of a long thin screwdriver with a wet towel or cloth and use it to clean the rotating brush and nozzle.

Cleaning the Slim Hard Floor Nozzle


1. Press the nozzle's release button ① to disconnect the nozzle from the pipe or product body.

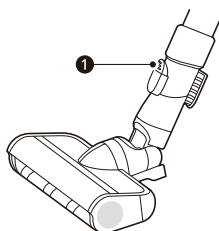

2. Turn the nozzle upside down and remove the rotating brush while holding down the PUSH button on the nozzle.

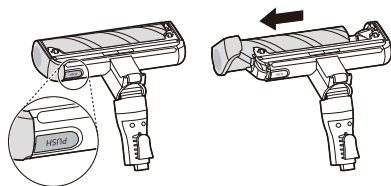


3. Attach the crevice tool to the product body and use the vacuum to remove foreign objects and dust from the brush and the bottom of the nozzle.

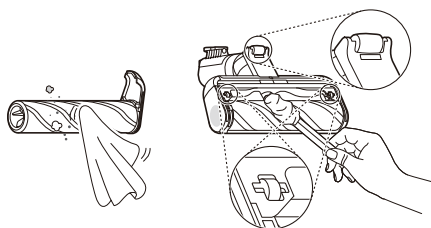

5. Slide the brush back into the nozzle until it clicks into place.

Cleaning the Mop Nozzle

1. Press the nozzle release button to remove the mop nozzle from the extension pipe and turn the nozzle upside down.
2. Use a damp towel or cloth to remove any remaining foreign objects and dust from the bottom of the mop nozzle. Remove foreign objects, debris and hair from all Rollers of the nozzles using tweezers.

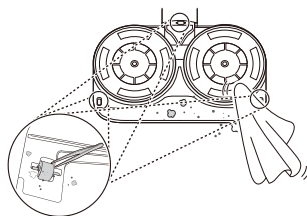

TROUBLESHOOTING

Before Calling for Service

Operation


Symptom	Causes and Solutions
The appliance does not operate.	Battery is fully discharged. Charge the battery.
	Appliance is turned off. Press the Power button to turn on the appliance.
Suction power is too weak.	Dust bin is full of dust. Empty the dust bin.
	Filters are clogged. Clean the pre-filter and the exhaust filter.
	Inlet is clogged. Remove any foreign objects from inside the product body or the fixed pipe.
	Foreign object is on rotating brush, or in inlet port. Remove any foreign objects (thread, hair) from the rotating brush or the inlet port.
The product body does not appear to be charging.	Power cord is unplugged. Plug the power cord securely into the outlet.
	Foreign object is on the charging terminals. Remove dirt or foreign objects from the charging terminals with a dry cloth.
Hot air is coming from the product body.	Motor is cooling. If the appliance is running normally, the hot air is a result of the motor cooling and is not a sign of malfunction.
A strange odour is coming from the appliance.	Appliance was purchased within the last 3 months. The cleaner may emit a smell of rubber for about 3 months after purchase.
	Dust bin is full of dust. The dust in the bin may cause some odour. Empty the bin and clean it.
	Foreign object is on the filter. The filter may emit an odour if it has not been cleaned for some time. Clean the pre-filter and exhaust filter regularly.

Symptom	Causes and Solutions
A strange odour is coming from the appliance.	Pre-filter, Fine dust filter or the Cyclonic Mesh Filter were installed while damp or wet. Wash the filters with running water. To avoid odour, allow the pre-filter to dry completely in a well-ventilated area out of direct sunlight for at least 24 hours before reassembling.
	Exhaust filter was installed while damp or wet. Wash the exhaust filter with running water. To avoid odour, allow the exhaust filter to dry completely in a well-ventilated area out of direct sunlight for at least 24 hours before reassembling.
The appliance makes too much noise.	Vacuum cleaner is running in Turbo mode. The motor may be louder at the higher suction power settings. This is normal.
The appliance turns off unexpectedly or by itself after the motor speed fluctuates repeatedly.	Battery is not fully charged. The battery must be fully charged before cleaning. If the problem persists when the battery is fully charged and the fixed pipe and attachments are clear from obstructions, contact an LG customer information centre for service.
	Foreign object is in the product body, fixed pipe, inlet port or nozzle. Remove any foreign objects from the product body, fixed pipe, inlet port or nozzle.
	Filters are clogged. Clean the pre-filter and the exhaust filter.
The rotating brush does not rotate.	Brush is improperly installed. Remove the brush, clean it if necessary and attach it again.
	Foreign object is on rotating brush. Remove any foreign objects from the rotating brush.

Mop nozzle

Symptom	Causes and Solutions
The mop pad attachment plate does not rotate.	Mop pads are improperly installed. Remove the mop pads, clean them if necessary and attach them again.
	Mop nozzle is pressed too hard against the floor. The mop attachment plate stops automatically to protect the product. This is not a failure. Attach the mop pads securely to the mop attachment plate and press the power button to resume use.
	Foreign object is between mop attachment plate and mop pads. Remove foreign objects from the mop nozzle attachment plate and press the power button to resume use.
There is no water coming out of the mop nozzle.	Water tank is empty. Fill the water tank. Remove the battery or detach the nozzle before filling the water tank.
	Water tank is improperly attached to mop nozzle. Properly attach the water tank to the mop nozzle. Remove the battery or detach the nozzle before properly securing the water tank to the nozzle.
	Water supply adjustment slider is set to STOP. Slide the High or Low water adjustment slider all the way down. The water will not come out if the slider is set to STOP.
	The water outlet was clogged by hard water scale or other foreign substances. Use a sharp pin to remove the blockage.
There is moisture in the water tank.	Water tank is not allowed to dry completely after use. Empty the water tank, set it out of direct sunlight, and allow it to dry completely after use.
A strange odour is coming from the appliance.	Foreign object is on the dust inlet of the mop nozzle. Wet dust in the mop nozzle may result in odour. Make sure to wipe the dust inlet of the mop nozzle with a wet wipe after each use.
Mop pads make the floor dirty.	Mop pads are not cleaned properly after use. Clean the mop pads thoroughly after each use. Using soiled mop pads may make the floor dirtier.
The appliance makes too much noise.	This is the sound generated when the pump at the inlet of the mop is operating. This is normal.
	The mop pads were improperly attached on the plates. Align and attach the centre of the mop pad with the centre of the mop attachment plate.

使用者手冊 **吸塵器**

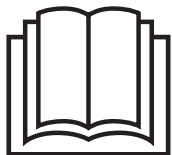

開始安裝之前，請仔細閱讀這些說明。這可使安裝簡便，並確保正確安全地安裝產品。安裝之後，將這些說明放置在產品附近以供將來參考。

粵語

A9LSLIMMOP

目錄

本手冊所包含的圖片與內容可能與您所購買的機型不同。
本手冊內容以製造商修訂版本為準。

安全說明

• 使用前請閱讀所有說明	03
• 警告	03
• 注意	08

安裝

• 產品概述	09
• 安裝充電座	12
• 保管	13
• 充電	14

運作

• 開始使用	15
• 操作	16
• 使用地拖吸頭	16
• 使用吸頭和工具	19

保養

• 清潔機器	21
• 清潔吸頭	24

故障排除

• 呼叫服務之前	25
----------------	----

安全說明

使用前請閱讀所有說明

下面的安全指導內容旨在預防由於不安全或錯誤產品操作而導致的不可預見風險。如下所述，指導內容分為「警告」和「注意」兩個部份。

安全訊息

 此符號指示會造成危險的物品或操作。請仔細閱讀標有此符號的內容，並遵循說明以避免發生危險。

警告

這表明若不遵循這些說明則可能會導致嚴重受傷或死亡。

注意

這表明若不遵循這些說明則可能會導致輕微受傷或損壞產品。

警告

警告

- 爲了減小爆炸、火災、死亡、觸電、受傷或人員燙傷等危險，在使用本產品時，請遵循包括以下的基本安全預防措施：

技術安全

- 本機器不適合讓身體、感官或心智能力不足的人員（包括兒童），或者缺乏知識和經驗的人員使用，除非由其監護人監督或指導他們如何使用本機器。須對兒童加以看管，以免其玩耍本機器。
- 請勿把電器當作玩具。在兒童旁邊或附近使用時，務必特別注意。
- 請勿讓兒童玩耍本機器或靠在本機器上。
- 請勿使用電源線損壞的電器。必須更換電源線或插頭。如果電器無法正常工作、掉落、損壞、留在戶外或掉入水中，請將其退回 LG 電子服務中心。

- 請勿拉扯或提起電源線、將電源線當作把手、讓門夾住電源線、或在尖銳的邊緣或轉角拉動電源線。請勿在電源線上使用電器。讓電源線遠離加熱表面。
- 請勿以拉動的方式拔下電源線。請握住插頭，而不是電源線。
- 將其他機器的電線放在待清潔區域之外。

電池

- 切勿在此機器中使用其他機器的電池、轉接器和充電座。僅使用LG電子提供的電池和充電座。
- 切勿在其他機器中使用本機器的電池、轉接器和充電座。
- 若長時間不使用本電器，請拔下電源線並取出電池。
- 請勿使用改裝或損壞的電池。
- 請勿拆卸、取出電池或使其短路。
- 處置電池或電器時，請從本電器中取出電池並安全地予以處置。
- 當電池無法再充電時，更換特製的電池組。
- 有關更換電池的方法，請參閱**電池充電**部分的說明。
- 棄置本電器時，請遵守棄置充電式鋰電池的規定。
- 處理或處置電池時，請遵守當地的所有法規和條例。
- 避免意外啟動。在連上電池組、拿起或攜帶產品之前，確保開關處於關閉位置。
- 在進行任何調整、更換配件、清潔、維修、或存儲電器之前，請拆下電器上的電池組。
- 當不使用電池組時，應保持遠離可能導致兩極通路的金屬物體，例如迴紋針、硬幣、鑰匙、釘子、螺絲或其他小金屬物體。
- 在使用不當的情況下，液體可能從電池漏出。如果發生這種情況，應避免接觸。如果意外接觸，請用清水沖洗。如果液體接觸到眼睛，必須尋求醫療幫助。
- 若電器長期間不使用，電池須自電器移出。
- 取出電池前應關閉電器。
- 電池裝入產品機身時需完全插入直到發出喀答聲。
- 洩漏電解液之電池請交由合格回收單位處理。

電池規格

- 提供一顆或兩顆電池，電池數量視購買的型號而有所不同。
- **型號名稱:** VC-2339A-5S1P
- **類型:** 充電式鋰離子電池
- **額定容量:** 2200毫安小時

安裝

- 為避免觸電或火災，請勿在可能接觸到水、雨水或高濕度環境中安裝、充電或存放本機器。
- 在通風良好的位置安裝、充電或存放本機器。
- 避免在可能存在易燃氣體、工業用油或金屬粉塵洩漏的區域操作本機器。
- 請勿在加熱裝置或明火附近存放或安裝本機器、電源線或插頭。
- 將充電座安裝在穩固平坦表面上。
- 為防止傾斜，直立式安裝應使用提供的支架固定螺絲、固定塊和雙面膠帶固定在牆壁上。
- 在壁掛式安裝中，充電座應使用提供的牆壁固定螺絲緊緊固定在牆壁上。
- 僅在連接到混凝土或類似堅硬表面時才使用固定螺絲。
- 在未先檢查牆壁後面區域沒有電力管道、管道系統、通風口或電纜之前，切勿鑽入牆壁。
- 請勿在低於 5 °C 或超過 38 °C 的環境中使用或存放本機器。
- 請勿將本機器存放或安裝在氣溫低於零度的環境中，也不能將其暴露在戶外天氣條件中。
- 安裝或移動本機器時，請小心不要擠壓、壓壞或損壞電源線或插頭。

操作

- 使用本機器之前請閱讀所有說明並保留這些說明。
- 僅按照本手冊中的說明使用。僅使用製造商推薦的附件。
- 本機器僅為一般家庭室內之用。不能用於任何非住宅、商業或工業應用。
- 本產品只能使用 100 - 240 V~ 50/60 Hz 的插座。請務必檢查本電器使用地的電力規格。
- 請勿用濕手接觸電源線、插頭或本機器控制裝置。
- 用乾布擦除電源線或插頭上的水分或污垢。

- 如果機器已損壞、出現故障、有部分拆解或有零件缺失或損壞（包括電線或插頭損壞），切勿運行。前往 LG 電子授權的服務中心或經銷商尋求幫助。
- 請勿對電源線施加過大力道使其彎曲，或將其置於重物下，否則會損壞電源線。
- 請勿在此機器上使用多插座轉接器。確保使用容量為 10 A 的電源插座。
- 請勿將機器插入損壞或鬆動的插座中。
- 如果長時間不使用本機器，請務必拔下電源線。
- 請勿損壞、改裝、過度彎曲、扭曲、拉扯、擠壓或加熱電源線。
- 在使用本機器之前，請先清除地板上的任何電線或繩子。
- 拔下電源線時，避免用手指觸摸電源插頭的插腳。
- 請勿用地毯覆蓋電源線。
- 將電源插頭牢固地推入牆壁插座，使其不會鬆動。
- 如果產品已浸入水中，請在恢復使用前聯絡 LG 電子服務中心或經銷商獲取相關說明。
- 如果產品發出奇怪噪音或散發出異味或煙霧，請停止使用並聯絡 LG 電子客戶資訊中心。
- 僅 LG 電子有資質的技術員或維修人員可拆解、修理或改裝機器。
- 切勿將尖銳的金屬物體（如針、釘子或刀）插入機器或充電座的孔或間隙中。
- 請勿使用本機器吸液體。確保機器或充電座內沒有進入水、飲料或洗滌劑。
- 請勿讓本機器清掃刀片、圖釘、木屑、尖銳物體或熱或冷的灰燼。
- 請勿讓兒童使用本機器。
- 使用或存放本機器或為其充電時，請勿讓兒童或寵物靠近本機器。
- 請勿將吸頭或工具放入口中。
- 使衣服和頭髮、手指或身體的其他部位遠離開口和活動零件。
- 請勿在吸塵入口或出口堵塞的情況下操作本機器。
- 如果未安裝集塵盒和濾網，請勿使用電器。
- 請勿在有塗料稀釋劑、防蛀物質、易燃粉塵或其他爆炸性或有毒物質蒸氣的封閉空間內使用。
- 請勿觸摸機器或充電座上的充電端子，或將帶電物體插入機器或充電座內。
- 在不使用時，請始終將本機器存放在直立式或壁掛式充電座上。
- 請勿將本機器靠在牆壁、椅子或桌子上。
- 如果在將產品放在充電座上時對地漏電斷路器跳閘，請立即從充電座中取

出本機器，聯絡 LG 電子客戶服務中心。

- 在樓梯上清潔時需特別注意。
- 請勿在機器附近使用或存放加熱裝置或易燃物質（乙醚、苯、酒精、化學物、可燃噴霧、殺蟲劑、空氣清新劑或化妝品等）。
- 請勿嘗試使用本電器清潔液體物質（水、飲料）、有氣味物質（糖果、巧克力、寵物排泄物）、金屬物體（刀片、針）、易燃物質、燃燒 / 冒煙中（香煙、火柴或熱灰）、表面活化劑或玻璃碎片。
- 若出現氣體洩漏（天然氣、丙烷等），請勿操作此機器或任何其他機器。打開窗戶或門，立即讓該區域通風。
- 請勿將帶有電池的充電座倒置。
- 請勿將本機器，特別是電池暴露在高溫、加熱裝置或陽光直射下。
- 請勿將本機器或其電池存放於陽光直射下的車輛內。
- 切勿讓任何水、飲料或洗滌劑進入電池內部。
- 請避免電池受到物理撞擊。

保養

- 清潔或保養充電座時，務必拔下電源線。
- 請勿用水或清潔劑清洗吸塵口或集塵盒。
- 請勿使用清潔劑、擦亮劑或空氣清新劑清潔集塵盒。
- 請勿在本機器上塗抹或噴灑易燃物質（汽油或稀釋劑）或表面活化劑（洗滌劑或沐浴皂）。
- 觸摸吸頭後請洗手。吸頭含有碳纖維，與之接觸可能會引起輕微的皮膚過敏。

處理

- 將包裝材料放在兒童接觸不到的地方。包裝材料可能會對兒童造成窒息危險。
- 本機器拆除包裝後，毀壞紙箱、塑膠袋和其他包裝材料。兒童可能會將這些材料當做玩具玩耍。地毯、床罩或塑料膜覆蓋的紙箱可能會形成密閉空間。
- 根據當地、州和地區的法律和法規處理本機器。
- 處理本機器之前，請聯絡當地市議會或相關政府機關。

地拖吸頭

- 請勿使用地拖吸頭清理尖銳物品（如玻璃屑、電線、刀片或別針）。尖銳物品可能嵌入抹布中，並在您清理抹布時造成傷害。

注意

- 為了降低在使用本機器時，發生人身傷害、產品故障或損壞、產品損失等風險，請遵循包括以下的基本安全預防措施：

操作

- 本機器具有內建安全裝置，可防止因過熱而造成損壞。如果機器在長時間使用後過熱，其可能會自動關閉。若發生這種情況，請將機器放在通風良好的陰涼區域約一小時，然後再開啟電源。
- 請勿讓產品受到撞擊或掉落。
- 不要安裝濕濾網。
- 始終使用軟布清潔本機器。請勿使用揮發性或有機溶劑（稀釋劑或丙酮）清潔產品。
- 不要長時間重複清潔同一位置。這樣做可能會損壞地毯或地板表面。
- 在組裝機器或充電座時，請讓手指遠離夾點。
- 請勿使用雙面膠帶將充電座固定在牆紙上。充電座和機器的重量可能會毀損牆紙，請使用提供的螺絲固定充電座。
- 不要對氣旋濾網施加力或讓其受到任何撞擊。
- 請勿在運行期間取出電池。

地拖吸頭

- 請勿將地拖吸頭用在居家地板清潔之外的任何用途上（例如，將車體拋光、清潔窗戶）。
- 請勿使用地拖吸頭吸入液體（水、飲料）。
- 使用地拖吸頭時，務必連接抹布。
- 請勿使用地拖吸頭清潔塗層、粗糙或纖細的夾層地板與毛毯。
- 請勿使用地拖吸頭長時間重複清潔相同地點。地拖吸頭噴出的水可能會導致集塵口進水並損壞電器。
- 請勿踏在地拖吸頭上。
- 潮濕地板可能會造成滑倒的危險。讓地板完全乾燥才可踐踏。
- 請勿將電器連同地拖吸頭一起放在裝滿水的水箱裡面。


安裝

產品概述


本說明書中的圖像可能與實際部件及配件有所不同，製造商可能出於產品改進目的而予以改變無須事先通知。

正面視圖

*1 此功能僅適用於某些型號。

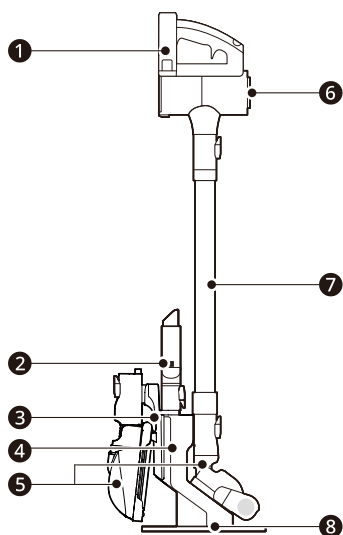


- ① 電池
- ② 基本配件
- ③ 工具架
- ④ 充電座
- ⑤ 吸頭
- ⑥ 產品機身

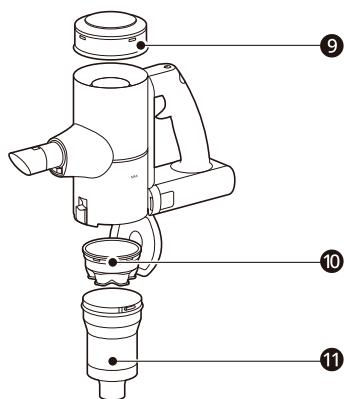


- ⑦ 集塵管
- ⑧ 充電座底盤
- ⑨ 排氣濾網
- ⑩ 前置濾網
- ⑪ 氣旋濾網

配件 隨附配件

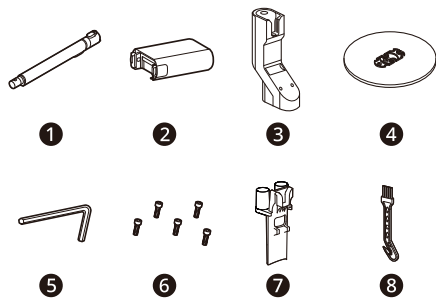


- ① 集塵管
- ② 電池
- ③ 充電座
- ④ 充電座底盤
- ⑤ 扳手
- ⑥ 螺絲 (5個)
- ⑦ 工具架
- ⑧ 清潔刷

 基本配件




- ① 縫隙工具
- ② 二合一毛刷吸頭

 吸頭




- ① 硬表面地板電動吸頭

地拖套裝

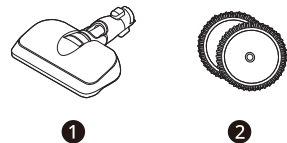

- ① 地拖吸頭
- ② 一般清潔用抹布

牆面固定用安裝用品 (防導電套裝)

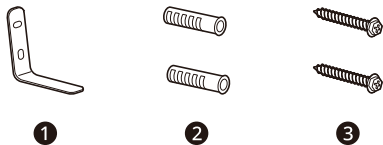

- ① 「L」型牆面固定托架
- ② 牆面固定錨固件
- ③ 壁面固定螺釘

備註

- 最終需要更換拖布、電池、排氣濾網和前置濾網。聯絡 LG 電子客戶服務中心。

規格

機器

型號	A9LSLIMMOP	
外形尺寸 (寬 x 深 x 高)	251 mm X 242 mm x 1026 mm	
重量	約重1.97 kg	
功率消耗	在渦輪模式下為 250W (最大450W) 在強力模式下為 100W 在標準模式下為 55W	
電池續航時間 (使用一個電池)	使用吸頭 在渦輪模式下長達 6 分鐘 在強力模式下長達 15 分鐘 在標準模式下長達 30 分鐘	使用工具 在渦輪模式下長達 7 分鐘 在強力模式下長達 20 分鐘 在標準模式下長達 40 分鐘

- 給出了組裝好的產品機身、集塵管與吸頭的尺寸。
- 電池續航時間是根據LG電子測試標準使用充滿電的電池的結果。根據實際使用環境和使用期限，結果可能有所不同。

充電器轉接器

型號	ZD012M220075BS
輸入	100 V - 240 V ~ 50/60 Hz, 0.5A
輸出	DC 22.0V, 0.75A

安裝充電座

安裝直立式充電座

⚠ 警告


- 請將充電座安裝於平坦處，以免發生產品翻覆。
- 請監督兒童或寵物，以防止被產品絆倒或纏繞。

⚠ 注意

- 安裝產品或充電座時，應保持手指遠離夾點，以避免造成人身傷害。
- 從產品盒中取出零件時注意防止掉落。
- 僅在连接到混凝土或類似堅硬表面時才使用固定螺絲。

請務必按照以下順序安裝充電座。

1. 將充電座④與充電座底盤③接合。
2. 使用附在產品上的螺絲②和扳手①安裝充電座和充電座底盤。

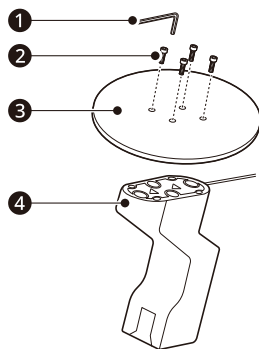

- 請按照充電器和充電座支架的三角形裝配指南進行裝配。


⚠ 注意

- 組裝時請注意不要讓電源供應器的線夾在充電座和充電座底盤之間。


安裝防倒塌套件

產品充電底盤防倒塌套裝，旨在防止產品倒塌，避免造成損傷或使產品和地板免受損害。


1. 在將產品移至最終位置之前，請選擇一個適合安裝「L」型牆面固定支架的位置。
 - 將「L」型牆面固定於支架，然後安裝在產品的背面或側面。
 - 請將充電座底盤安裝到可以固定高度的位置。

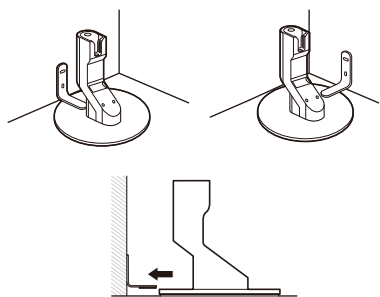

2. 在所選位置的混凝土牆上打兩個孔，將牆面固定鉗放入。
 - 建議牆孔直徑為8.5毫米，深度為55毫米。
 - 在鑽孔之前，請檢查牆內是否有管道或電線。

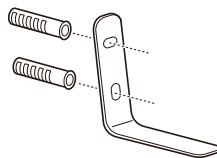

3. 使用牆面固定螺釘將「L」字牆面固定支架固定在牆面上。

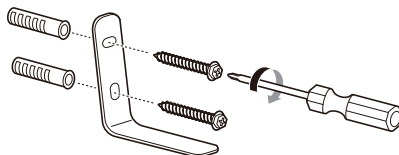


4. 將充電座底盤推到固定支架下方，將電源插頭連接到插座上。

保管


保管基本配件

請將基本配件(二合一毛刷吸頭、隙縫吸頭)和備用吸頭保管在充電座的支架上。


1. 將隙縫與二合一毛刷吸頭支架插入充電座上方的孔內。

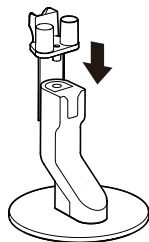


2. 使用附屬產品上的螺絲同扳手將吸頭支架同充電座固定。

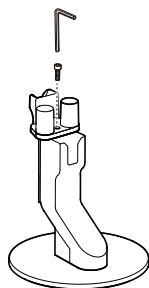

3. 將配件吸頭插入支架。

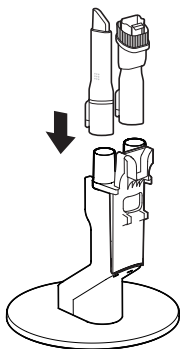

4. 將吸頭掛在吸頭支架上。

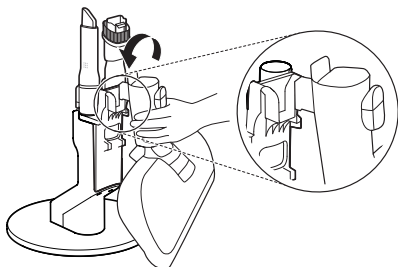


⚠ 注意

- 將拖把吸頭放在支架上時，請先倒空水箱內的水。
- 不要將組裝好的產品連同吸頭一起放在支架上。如果產品倒下，可能會造成傷害和產品損壞。
- 吸頭支架沒有充電功能。請將產品放在充電支架上。


產品組裝和保管

1. 在產品主機身①上安裝集塵管③和吸頭④。
 - 如需卸下集塵管，請按下集塵管分離按鈕②並下拉集塵管。

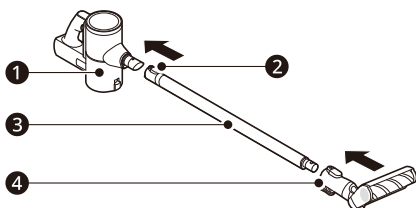

2. 請將產品對準充電座下端的凹槽並插入。

- 產品正確放置在充電座上時才會發出提示音。若沒有響起提示音，請重新放置產品。

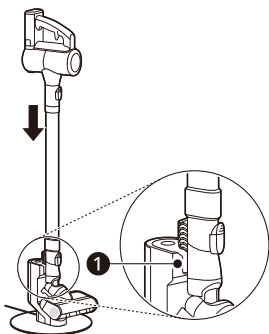

充電

⚠ 請記住


- 充電前請檢查電源供應器是否全部連接至充電座和插座。
- 一顆電池的充電時間約為4小時。
- 電池為消耗品。電池使用時間隨著產品的使用而縮短。壽命已盡的電池請再次購買使用。
- 如果室內溫度低於5°C，電池將不會充電。僅當室內溫度在 5 °C 至 38 °C 之間時才為電池充電。

為產品主機身充電

1. 按下電源按鈕，開關產品電源。

2. 請將產品對準充電座下端的凹槽並插入。

- 產品正確放置在充電座上時才會發出提示音。若沒有響起提示音，請重新放置產品。
- 充電完畢後，電量指示燈會關閉。

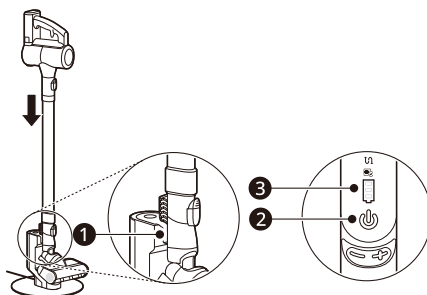

⚠ 警告

- 請將產品完全固定於充電座下端的凹槽中。產品掉落可能會造成傷害或產品破損。

運作

開始使用


使用機器前

- 清潔高處表面時請支撐機器底部。
- 為避免光亮地板產生劃痕，請保持工具、刷子及吸頭滾輪沒有毛髮、砂礫、沙子或腐蝕性物體。
- 使用電器前，請確保排氣濾網或前置濾網已正確組裝。
- 使用電器前蓋上集塵盒蓋子。若集塵盒蓋子打開，則吸力強度可能會減弱並影響清潔效果。
- 機器未使用時，請將其存放於充電座或平放在地板上。若將機器靠在牆壁或椅子上，則在機器掉落時可能會造成產品損壞或人身傷害。
- 溫度、濕度等環境條件可能造成靜電積聚在機器上。如問題持續發生，請聯絡LG 電子客戶資訊中心。
- 使用機器前，請務必清除襪子或絲襪等大型異物。吸塵口或集塵管上的任何異物都將妨礙機器正常工作。
- 請在正常室溫下使用本產品，因為如果在低於 5 °C 或高於 38 °C 的溫度下長時間使用，電池續航時間可能會嚴重降低。
- 電池續航時間視乎表面類型和吸力而定。
- 清潔地板和地毯時，請遵循製造商的建議。
- 如需電池續航時間詳情，請參閱規格部分。


組裝附件

吸頭和工具可以連接到產品機身或集塵管的末端。

1. 將充滿電的電池 ❶ 插入把手底部軌道，沿安裝方向推入，直到發出喀答聲。

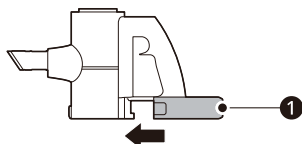


2. 安裝吸頭、工具或集塵管時只需將其滑入機身上的入口 ❷ 直至卡入到位即可。還可將吸頭與工具安裝在伸縮桿 ❷ 的末端。
 - 按下開啟按鈕 ❸ 即可拆下配件。

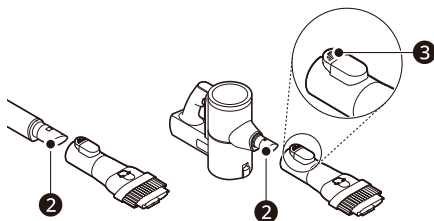

3. 按下 電源 按鈕，啟動為標準模式。
 - 若要關閉電器，請再次按下 電源 按鈕。

操作

吸塵器操作部位及狀態指示燈

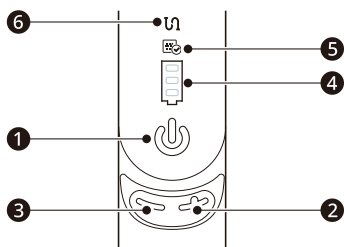

1 電源按鈕

- 按下電源按鈕，開關產品電源。
- 啟動後，工作在標準模式。

2 增加吸力 (+) 按鈕

- 按下 (+) 按鈕，吸力將依次增加為標準→強力→渦輪模式。

3 降低吸力 (-) 按鈕

- 按下 (-) 按鈕，吸力將依次切換為渦輪→強力→標準模式。

4 電量指示燈

- 該圖示顯示電池剩餘電量，充電完成後自動關閉。

5 濾網清潔周期指示燈

- 使用產品一段時間後，圖示的燈光將會亮起。請檢查前置濾網、排氣濾網、水洗氣旋濾網，如有必要則進行清潔。

6 異物堵塞指示燈

- 若產品內部、集塵管、吸頭、吸塵口、前置濾網、排氣濾網等被異物阻塞，圖示上的燈光將會亮起。
- 若異物堵塞持續，產品電源關閉，會響起異物堵塞通知。為了清除異物，請清理異物，同時清潔前置濾網、排氣濾網、氣旋濾網。

 
使用地拖吸頭

使用地拖吸頭前

- 無論產品機身設定為何種吸力設定，抹布僅會以單一速度旋轉。
- 若要避免產品損壞，抹布連接板將在異物卡住或受到強烈影響下自動停止。立即關閉電器並清除異物或障礙物，才能繼續使用。
- 如果您在拖地期間聽到噪音，抹布可能已從抹布連接板上脫落。立即關閉產品並將抹布重新連接至連接板上，才能繼續使用。
- 請勿使用髒的抹布清潔地板。
- 僅使用 LG Electronics 授權的抹布。
- 使用地拖吸頭後，請清空集塵箱並清潔微塵濾網與前導濾網。

使用濕抹布

按下 電源 按鈕。您可以使用僅為抹布模式且無須開啟吸塵功能。




⚠ 注意


- 電器開啟期間，請勿組裝或拆卸吸頭。這樣可能會導致人員受傷。
- 長時間未使用電器時，請將水位調節按鈕設為STOP位置。否則可能會導致產品故障。
- 請勿在濕抹布連接時讓電器直立在地板上。這樣可能會導致木質地板損壞或隆起。
- 請勿在供幼童與孩童使用的聚氯乙烯或聚氨酯墊子上使用。摩擦會導致摩打過熱。
- 如果您長時間使用地拖吸頭並關閉吸力，摩打可能會過熱（建議的持續使用時間：80 分鐘）。摩打過熱時，則會啟動避免過熱功能且電器會自動關閉。將電器放在涼爽且通風良好的地方冷卻一小時後再使用。

充填水箱


1. 按下 PUSH 按鈕 ❶ 將水箱從地拖吸頭上移除。

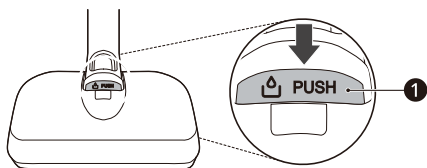


2. 開啟水箱的進水口蓋，並用水充填水箱。
• 請勿將水以外的液體，包括熱水，倒入水箱。

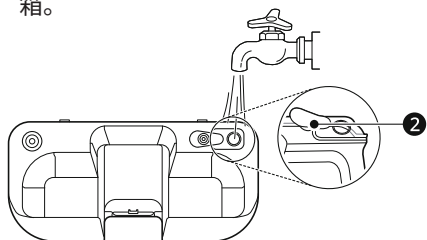

3. 關緊進水口蓋。
• 如果進水口蓋未正確關閉，則可能會漏水。

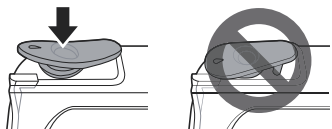


4. 將水箱重新連接至地拖吸頭。
• 將水箱前方的 2 塊垂片 ❸ 插進地拖吸頭上放的插槽 ❹。按下中心 ❺ 將水箱鎖定定位。

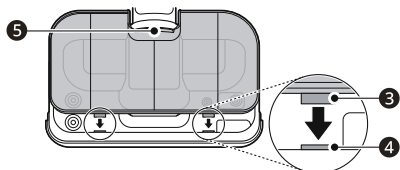


連接抹布

1. 用水將抹布兩面弄濕，然後連接板子前將多餘的水份擰乾。

- 抹布還濕淋淋時請勿將其連接到抹布連接板。
- 乾燥時連接並使用抹布可能會影響清潔效果。

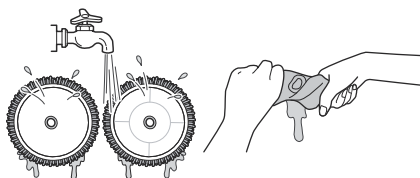


2. 將濕拖吸頭倒置在地板上。
3. 將抹布中心對準抹布連接板中心，然後進行安裝。
• 將抹布帶有魔術貼一面貼上至連接板。
抹布反轉或錯誤連接可能會影響清潔效果。

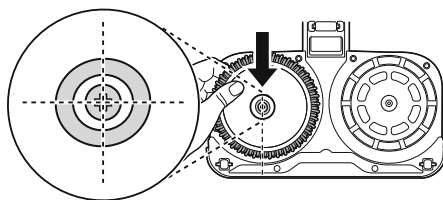


4. 將地拖吸頭連接至電器。

調節水量

 
滑動水位調節滑塊按鈕以調節釋放到抹布的水量。



對於對潮濕敏感的木地板進行清潔或者需要少量水的時候使用。

 

 當需要大量水時(例如清潔頑固汙漬或灰塵較多的地方)使用。過多水量可能會損壞地板。



當需要停止供水或者用乾抹布清潔時使用。

警告

- 若要避免受傷，請勿在抹布連接板旋轉期間連接抹布。

注意

- 請勿在濕抹布連接時讓電器直立在地板上。這樣可能會導致木質地板損壞或隆起。

使用濕拖吸頭

- 將水箱與抹布連接至地拖吸頭。
- 按下水量調節按鈕，即可將出水到拖布的水量調節為高水量模式或低水量模式。
- 按下 電源 按鈕開始清潔。


弄乾水箱與抹布

弄乾水箱

清潔完成時，請確保在存放地拖吸頭前清空水箱並將其弄乾


注意

- 請在存放水箱時轉動進水口蓋以確保它們保持開啟。如果蓋子關閉且沒有弄乾，即可能導致臭味。
- 請勿將進水口蓋從水箱上移除。蓋子可能會裂開。
- 請勿在清洗時將清潔劑、醋或發酵粉加入水箱中。水箱中很難清理這些物質，也可能會弄髒地板。
- 清潔後，擦拭地拖吸頭上供水口 ① 所有殘留的水份。地板上可能會積水並將其損壞。

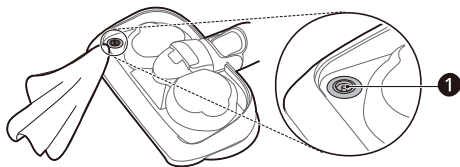


- 請勿拉扯或張大供水口的橡膠墊圈。這樣可能會裂開或損壞。

- 開啟水箱側面的進水口蓋並清空水箱。搖晃水箱以移除殘留的水份。

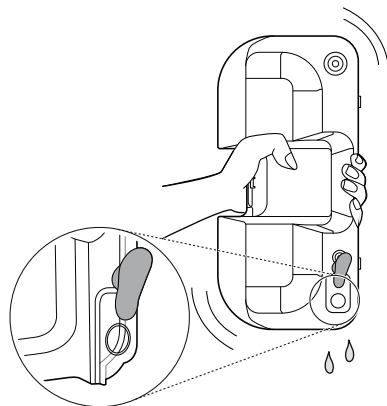

2. 讓進水口蓋保持開啟，並將水箱放在通風良好且避免在陽光直射的地方至少 24 小時讓其乾透。

- 水箱中的水份完全清空並乾透後才存放水箱。水箱中潮濕或殘留的水份可能導致臭味。

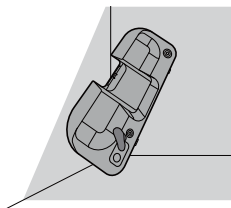

弄乾抹布

使用抹布後，用手清洗它們並在存放前使其乾燥。


⚠ 注意

- 請勿以如下所述的方法使用，因為這樣可能會變形。
- 請勿在清洗抹布時使用漂白劑或織物軟化劑。
- 請勿用乾衣機烘乾抹布。
- 請勿用沸水煮抹布。

1. 將抹布從抹布連接板上拆下來。

2. 用中性清潔劑手洗抹布。

- 存放潮濕的抹布會發出難聞的臭味。將板子放在通風良好且避免在陽光下直射的區域至少 24 小時，直到完全乾透。

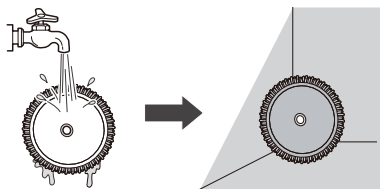

使用吸頭和工具

使用吸頭和工具前

部分配件僅適用於某些型號。

專門的附件可以幫助您更有效地清潔。工具和吸頭可以連接到產品機身或集塵管。

- 若吸塵口卡在地板、地毯或寢具上，則調整吸力。
- 每個吸頭都配備馬達，操作時可能會發出聲音。

⚠ 注意

- 在嬰兒和兒童用 PVC 或 PU 墊子上，不要使用硬表面地板電動吸頭。墊子可能會黏在吸頭上，使其難以操作，損壞墊子或導致電器上產生靜電。使用縫隙工具清潔墊子。

硬表面地板電動吸頭


使用這種吸頭來清潔硬地板表面。

- 在清潔中，意外按下吸頭上的 PUSH 按鈕可能拆下滾刷。請重新裝上滾刷。

縫隙工具

使用此工具清除角落或狹窄空間的灰塵。

- 用於帶靜電的區域，例如地墊。
- 用於強力模式，以清潔家具、地墊、或狹窄區域（例如角落）的寵物毛髮。

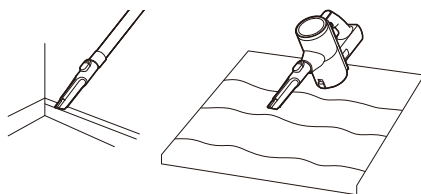


二合一毛刷吸頭

可在縫隙模式或刷子模式中使用，用於清潔灰塵和污垢聚集的角落或小間隙。

• 縫隙模式


在縫隙模式下使用該工具清潔平面，如沙發或床墊。

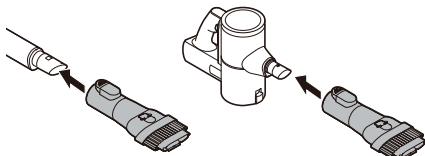

• 刷子模式

在刷子模式下使用該工具清潔精緻表面，如框架或傢俱。

- 要轉換模式，請按下調整按鈕 ❶ 並向前推。

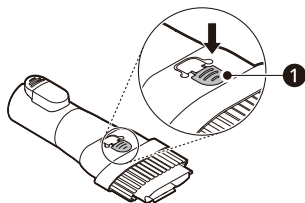

保養

清潔機器

清潔機器前

為保持最佳吸力，氣旋濾網、排氣濾網和前置濾網應定期清潔，並至少每月以流水清洗一次。

- 清潔機器前請關閉電源。
- 清潔頻率視使用環境和使用時間而定。
在灰塵較多的環境，應經常清潔。

警告

- 切勿用水清洗吸頭、滾刷或產品機身。水能進入馬達，引起觸電或火災。
- 不要讓異物進入馬達。這樣做可能導致觸電、火災或產品損壞。
- 請勿將手指或尖銳物體插入馬達，否則可能損壞產品、造成人身傷害或觸電。


注意

- 請勿對氣旋濾網施力或讓其受到撞擊。否則，可能使濾網變形，影響產品效能或導致產品故障。

清除異物

為了保持產品效能，請務必清除產品機身、集塵管或進氣口內部的任何異物和灰塵。

- 產品內部的異物會導致產品在運轉過程中發出噪音，吸力不足或關閉。
- 如果產品機身、集塵管、進氣口、前置濾網或排氣濾網內部被異物堵塞，電源將激增（從 Hi 到 Lo 電源交替）幾次，以提醒您注意氣流阻塞。然後電器將自動關閉以防止損壞。繼續使用本電器前，請先將電池從產品機身取出再清除異物。

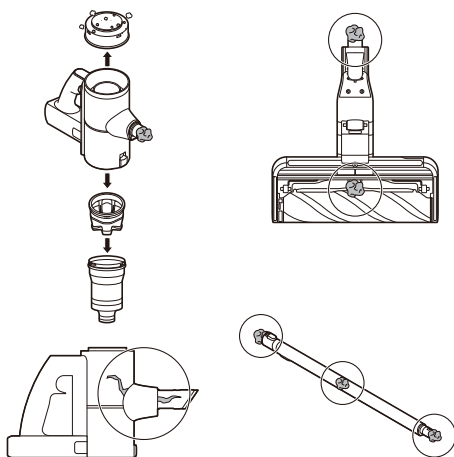


清潔集塵盒

每次使用後請清空並清潔集塵盒。

若集塵盒裝滿灰塵或濾網堵塞，則吸力可能會降低，每次使用後請清空並清潔集塵盒。


1. 清潔前請將電池從產品主機身中分離。
2. 按下分離集塵盒蓋按鈕①，可打開集塵盒蓋，清空集塵盒。

- 打開集塵盒時，請注意灰塵可能會溢出。請在垃圾箱附近清空集塵盒。
- 可以塑膠袋包裹集塵盒以避免清空集塵盒灰塵四散。

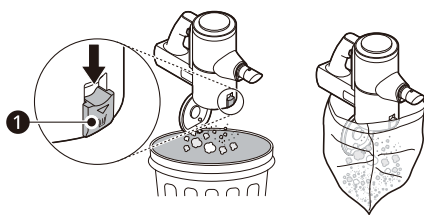

3. 沿著逆時針方向旋轉、氣旋濾網②時以進行分離。


- 分離氣旋濾網時，前置濾網③以組裝狀態一同分離。若前置濾網沒有和氣旋濾網一同分離，請檢查吸塵器內部並取出。

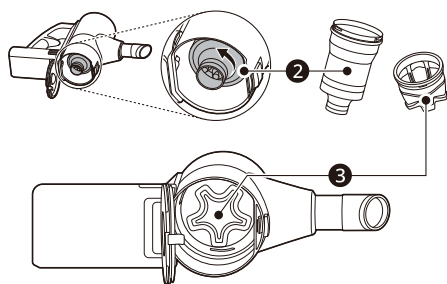

4. 氣旋濾網、排氣濾網、前置濾網應定期清洗，每月至少用水清洗1次。

- 若還有殘留的污垢，請用溫水（約40°C）浸泡30分鐘，用刷子輕輕清潔，然後再次沖洗。
- 用水清洗後，應在通風良好區域完全乾透至少24小時後使用。殘留水分時，可能會產生異味或損壞馬達。
- 切勿敲擊或撞擊氣旋濾網的任何表面，否則會損壞。

5. 請使用提供的清潔刷 **④**，清理集塵盒內部的灰塵。

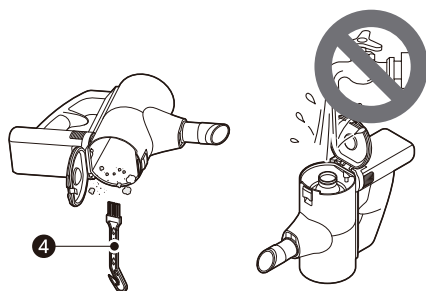

⚠ 警告


- 切勿用水清洗產品機身。水能進入馬達，引起觸電或火災。
- 請勿使用產品機身吸油或任何液體（包括水）。
- 如果未安裝氣旋濾網，請勿使用機器。否則，可能會損壞產品。
- 請勿將手指或尖銳物體插入馬達，以免損壞產品、造成人身傷害或觸電。
- 請勿讓異物進入馬達，以免損壞產品、引起爆炸或火災。

⚠ 注意

- 請勿對氣旋濾網施力或讓其受到撞擊。否則，可能會使濾網變形，影響產品效能或導致產品故障。


清潔排氣濾網

1. 請將電池從產品中分離。
2. 旋轉排氣濾網 ① 旋至開啟位置 ② 使其與產品機身分離。

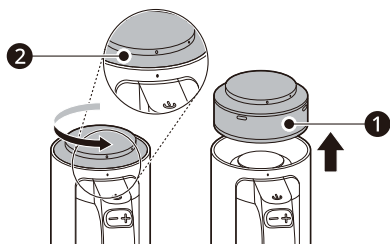

3. 請使用提供的清潔刷 ③，清理馬達部分的灰塵。

- 為防止火災或永久性產品損壞，請勿用水清洗產品主機身，因為抽吸馬達位於濾網正下方。

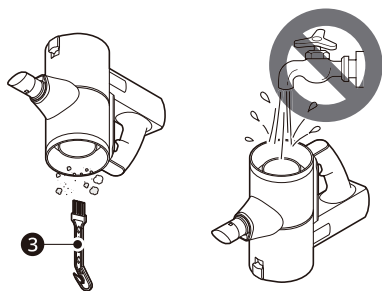


4. 清潔濾網應定期清洗，每月至少用水清洗1次。

- 用水清洗濾網後，應在通風良好區域完全乾透至少24小時後使用。殘留水分時，可能會產生異味或損壞馬達。



5. 旋轉排氣濾網對齊開啟位置並旋至解鎖位置 ④，組裝在產品主機身上。

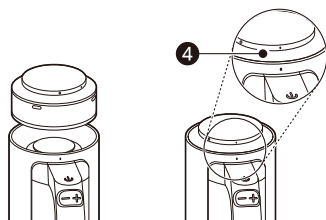

⚠ 注意

- 若未安裝排氣濾網，請勿使用本電器。否則，可能會導致產品損壞。

清潔吸頭


定期清潔吸頭與滾刷。

⚠ 注意


- 一律先從產品機身分離吸頭或是卸下電池，然後再進行清潔。若濕拖吸頭在清潔過程中開始動作，可能會造成傷害。
- 在組裝電器上的吸頭或吸頭上的滾刷時，請讓手指遠離夾點。
- 請勿將滾刷用作濕拖。可能會損壞產品。
- 請勿用水沖洗滾刷或吸頭，也不要將其浸入水中。可能會損壞產品。

清潔硬表面地板電動吸頭


1. 按下吸頭分離按鈕 ④ 即可從集塵管或產品機身中取出吸頭。

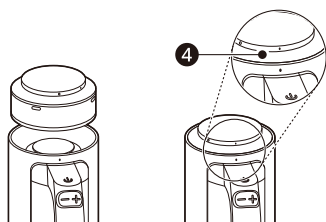

2. 倒置吸頭，同時按下吸頭上的 PUSH 按鈕拆下滾刷。

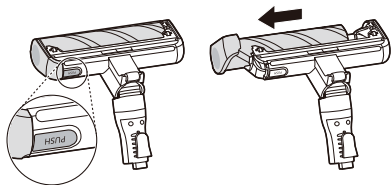


3. 旋轉排氣濾網對齊開啟位置並旋至解鎖位置 ④，組裝在產品主機身上。

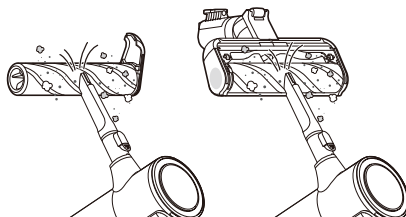

4. 使用濕紙巾或布從滾刷和吸頭底部去除任何剩餘的異物和灰塵。利用鑷子從吸頭的所有滾輪取出異物、碎片和毛髮。


- 以濕毛巾或布包裹在長條工具上，以清潔滾刷和吸頭。

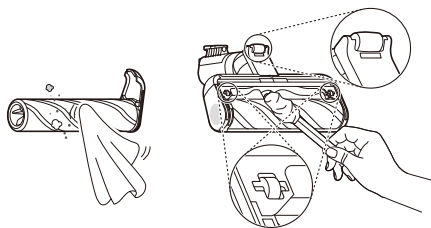

5. 將滾刷滑回吸頭直到卡入定位。

清潔地拖吸頭

1. 按下吸頭釋放按鈕，從連接管移除地拖吸頭，並將吸頭倒放。
2. 使用濕紙巾或布，以移除殘留在地拖吸頭底部的任何異物與灰塵。使用鑷子從所有吸頭的滾軸中移除異物、碎片及毛髮。

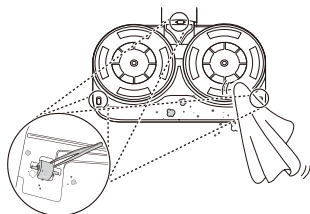

故障排除

呼叫服務之前

操作

症狀	可能的原因和解決方案
機器不工作。	電池已完全放電。 請給電池充電。
	機器已關閉。 按下 Power 按鈕，啟動電器。
吸力太弱。	集塵盒已裝滿灰塵。 清空集塵盒。
	濾網已堵塞。 清潔前置濾網與排氣濾網。
	吸塵口已堵塞。 從產品機身或集塵管內部清除任何異物。
	滾刷上或吸塵口內有異物。 從滾刷或吸塵口清除任何異物（細線、頭髮）。
產品機身似乎沒有在充電。	已拔掉電源線。 將電源線牢固插入插座。
	充電端子上有異物。 用乾布清除充電端子上的污垢或異物。
產品機身散發熱空氣。	馬達正在運轉。 若機器正常運行，則馬達運轉時會產生熱空氣，並非故障跡象。
機器發出異味。	機器購入日期為過去三個月內。 購入吸塵器後約 3 個月內可能散發出橡膠氣味。
	集塵盒已裝滿灰塵。 集塵盒內的灰塵可能會產生異味。清空集塵盒並清潔乾淨。
	濾網上有異物。 若濾網長時間未清潔，則可能散發出異味。請定期清潔前置濾網與排氣濾網。
	前置濾網、排氣濾網或氣旋濾網安裝時潮濕。 用自來水清洗濾網。為避免產生異味，在重新組裝之前，讓前置濾網在通風良好區域完全乾透，避免陽光直射至少 24 小時。
	排氣濾網安裝時潮濕。 用自來水清洗排氣濾網。為避免產生異味，在重新組裝之前，讓排氣濾網在通風良好區域完全乾透，避免陽光直射至少 24 小時。

症狀	可能的原因和解決方案
機器產生的噪音太大。	吸塵器在強力清掃模式下運行。 在較高的吸力設定下，馬達聲音可能會更響。這是正常情況。
馬達速度反覆波動後，機器會意外關閉或自行關閉。	電池未充滿電。 清潔前，電池必須充滿電。若電池充滿電且集塵管和配件已清除任何障礙物後問題仍然存在，請聯絡 LG 客戶資訊中心進行維修。
	產品機身、集塵管、吸塵口或吸頭內有異物。 從產品機身、集塵管、吸塵口或吸頭清除任何異物。
	濾網已堵塞。 清潔前置濾網與排氣濾網。
迴轉刷不旋轉。	刷子未正確安裝。 取下刷子，如有必要則進行清潔，然後再次安裝。
	迴轉刷上有異物。 清除迴轉刷上的任何異物。

地拖吸頭

症狀	可能的原因和解決方案
抹布連接板未旋轉。	抹布安裝不正確。 拆下抹布，視需要進行清潔並重新裝上。
	將地拖吸頭太用力往地板壓。 抹布連接板自動停止以保護產品。這並非失靈。將抹布牢固地連接至抹布連接板，並按下電源按鈕以繼續使用。
	異物卡在抹布連接板與抹布之間。 清除地拖吸頭連接板的異物，並按下電源按鈕以繼續使用。
地拖吸頭沒有流出液體。	水箱中沒有水。 將水箱裝滿水。充填水箱前，請取下電池或拆下吸頭。
	水箱與地拖吸頭連接不正確。 將水箱正確連接至地拖吸頭。將水箱正確固定至吸頭前，請取下電池或拆下吸頭。
	給水調節按鈕已設為 STOP。 將高或低水位調節按鈕按到最底部。如果按鈕設為 STOP，則不會出水。
	出水口被硬水水垢或其他異物堵塞。 使用尖銳針移除堵塞物。

症狀	可能的原因和解決方案
水箱中有濕氣。	水箱在使用後並未完全乾透。 • 清空水箱、將它放在避免在陽光下直射的地方，並使其在使用後完全乾透。
電器散發出奇怪的氣味。	異物卡在地拖吸頭的集塵口。 • 地拖吸頭中濕的灰塵可能會導致臭味散出。請確保在每次使用後都用濕紙巾擦拭地拖吸頭的集塵口。
抹布使地板變髒。	抹布在使用後並未正確清潔。 • 每次使用後徹底清潔抹布。使用髒的抹布可能讓地板更髒。
電器發出很大的噪音。	這是地拖吸頭泵正在運轉所發出的聲音。 • 這是正常狀況。
	抹布並未正確連接至板子上。 • 將抹布中心對準抹布連接板中心，然後進行安裝。

備註

備註

備註

備註

