




Additional Information

Specification

Power requirements	Refer to main label.
Power consumption	Refer to main label.
Dimensions (W x H x D)	Approx. 360 mm x 58 mm x 298.5 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	1,250 W RMS

Design and specifications are subject to change without notice.

Replacement of battery

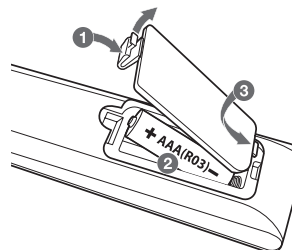

SIMPLE MANUAL

DVD Home Theater System

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

LHD687




MFL71688106
2012_Rev01

www.lg.com
Copyright © 2020 LG Electronics Inc. All Rights Reserved.



 
Front Panel



MIC 1/2 Connect a microphone.
PORT. IN Connect to a Portable device.
USB Port Connect a USB device.
△ Disc Tray Open / Close
>|| Starts / Pauses playback.
□ Stops playback.
F Changes the input source or function.
- / + ... Adjusts volume.
⏻ / I Power On / Off

1 Speaker Connection

! Speaker design and connection method may be different according to models.

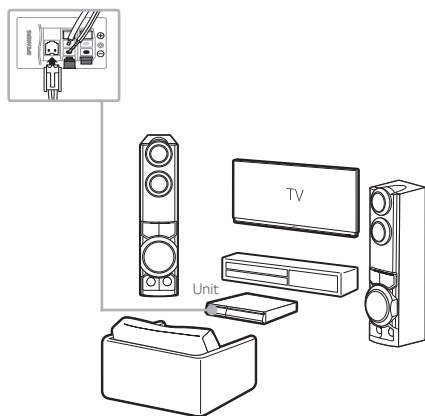

Rear Panel




SPEAKERS Connect to speakers.
HDMI OUT TO TV Connect to TV.
AUX (L/R) INPUT Connect to analogue device.
VIDEO OUT Connect to TV.
OPTICAL IN Connect to digital device.
ANTENNA FM Connect to radio antenna.

! Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

2 TV Connection

HDMI & Optical Connection

- 1 Connect the Unit to the TV using HDMI & Optical cable.
- 2 Set the input selector to HDMI on the TV.
- 3 Set up [External Speaker (Optical)] on your TV setting menu.
- 4 Follow the instructions on the TV screen using remote control.

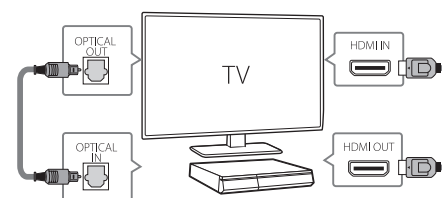

3 Home Menu

Home menu appears on the TV screen. Enjoy various functions on the unit.



LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>