



**LG**  
Life's Good

# SIMPLE MANUAL Wireless Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL  
SK5R




MFL70420378

[www.lg.com](http://www.lg.com)

Copyright © 2018 LG Electronics Inc. All Rights Reserved.

ENGLISH

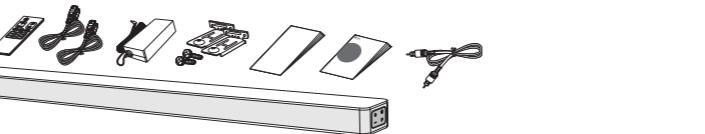

## Front Panel




The buttons are located on the side.

D (Standby) ..... Switches the unit ON or OFF

F (Function) ..... Selects Function

+/- (Volume) ..... Adjusts Volume

## Rear Panel

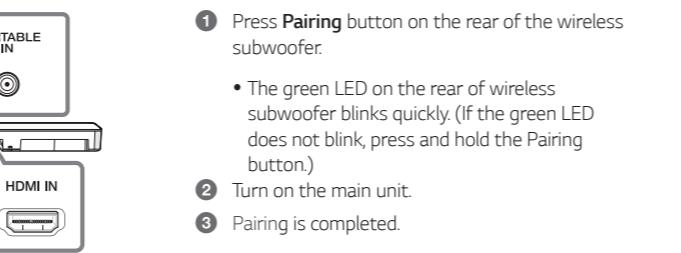

DC IN ..... Connect to the AC adapter


OPTICAL IN ..... Connect to an Optical device

PORTABLE IN ..... Connect to a Portable device

USB ..... Connect to a USB device

HDMI OUT (TV ARC) ..... Connect to a TV

HDMI IN ..... Connect to HDMI out on a device

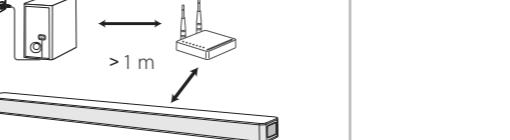


Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

## 2 TV Connection

Connect with the Sound Bar and TV using Optical (A) or HDMI ARC (B).


### A Optical Connection

- 1 Connect the sound bar to the TV using Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

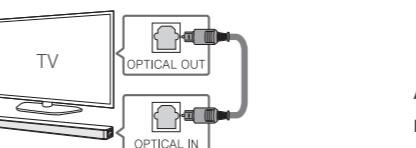

### B HDMI(ARC) Connection

- 1 Connect the sound bar to the TV using HDMI cable.
- 2 Set up [External Speaker (HDMI ARC)] on your TV setting menu.

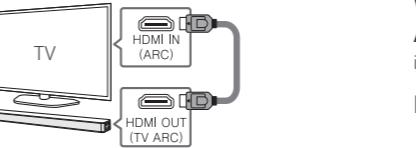

- HDMI connection is unavailable if your TV does not support HDMI ARC.  
 • If this unit is connected by OPTICAL and ARC at the same time, the ARC signal is a high priority.

## Remote control

Refer to the main label.


Model : DA-38A25

Manufacturer : Asian Power

Devices Inc.

Input : 100 - 240 V ~ 50 - 60 Hz

Output : 25 V 1.52 A

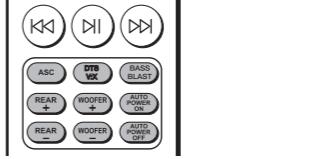

ASC/DTS V:X/BASS BLAST: Selects the sound effect.


REAR +/-: Adjusts the volume level of rear speakers. (For rear speakers)

! Adjustment of the Rear speakers volume levels and using Surround Sound are applied only when the rear speakers are connected.

WOOFER +/-: Adjusts the volume level of subwoofer.

AUTO POWER ON/OFF: Automatically turns on by an input source.

## Replacement of battery

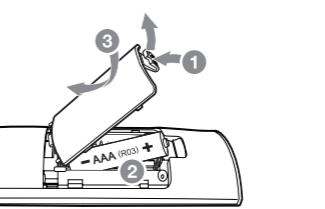

## Additional Information

### Specification

Power consumption

Refer to the main label.

AC adapter

Model : DA-38A25

Manufacturer : Asian Power

Devices Inc.

Input : 100 - 240 V ~ 50 - 60 Hz

Output : 25 V 1.52 A

Dimensions (W x H x D)

Approx. 891.0 mm X 57.5 mm X 87.8 mm

With foot

Bus Power Supply (USB)

5 V 500 mA

Amplifier (Total RMS Output power)

480 W RMS

Design and specifications are subject to change without notice.

### Rear Surround sound

Wireless Rear Speakers Kit included for real surround sound. (SPJ4-S)

### OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com).

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.







LG  
Life's Good

# SIMPLE MANUAL

## Wireless Rear Speakers Kit

Please read this manual carefully before operating your set  
and retain it for future reference.

To view the instructions of advanced features,  
visit <http://www.lg.com> and then download Owner's Manual.  
Some of the content in this manual may differ from your unit.

MODEL  
SPJ4-S



MFL70420379

[www.lg.com](http://www.lg.com)


Copyright © 2018 LG Electronics Inc. All Rights Reserved.

ENGLISH



### 1 Rear Speakers Connection

**!**  
Speaker design and connection method may be different according to models.

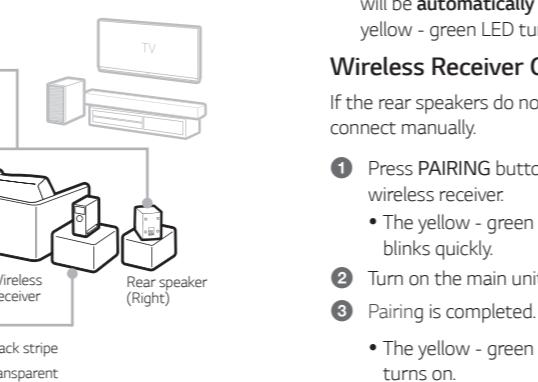

- ① Connect the speaker cables to rear speakers correctly.
- ② Connect the Wireless Receiver and the rear speakers (Grey: right, Blue: left) with the speaker cables.
- ③ Turn on the Surround function to enjoy surround sound.

### 2 Wireless Receiver Connection

- ① Connect the power cord of wireless receiver to the outlet.
- ② Turn on the unit: The unit and wireless receiver will be **automatically** connected. The receiver's yellow - green LED turns on.

#### Wireless Receiver Connection Manually

If the rear speakers do not make sound, try to connect manually.

- ① Press PAIRING button on the rear of the wireless receiver.
  - The yellow - green LED on the wireless receiver blinks quickly.
- ② Turn on the main unit.
- ③ Pairing is completed.
  - The yellow - green LED on the wireless receiver turns on.

### Surround Sound On/Off

When you turn on surround function, you can enjoy magnificent surround sound for all the input sound source with rear speakers.

**!**  
The initial setting for the surround function is OFF, turn the surround function ON to use it.

Surround On: Press and hold REAR + button on the remote control about 2 seconds.

Surround Off: Press and hold REAR - button on the remote control about 2 seconds.


### Additional Information

#### Specification of Wireless receiver

Power requirement	Refer to the main label on the wireless receiver.
Power consumption	Refer to the main label on the wireless receiver.
Dimensions (W x H x D)	Approx. 60.0 mm x 220.0 mm x 175.0 mm

Design and specifications are subject to change without notice.

#### About Ferrite Core (Optional)

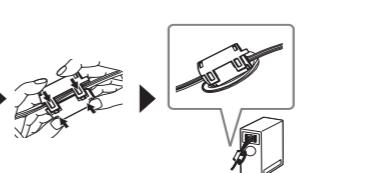

LG

Life's Good


# طاقم السماعات الخلفية اللاسلكية

دليل بسيط



## ١ | توصيل المستعات الخلفية

قد يختلف تصميم السماعة وطريقة التوصيل بحسب الطراز.

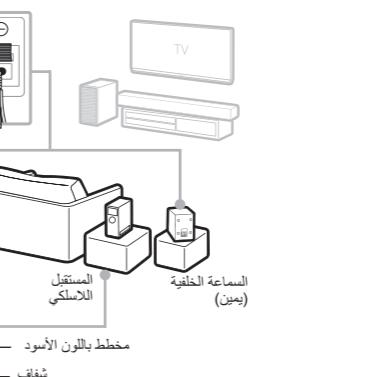

- ١ | وصل كابل الطاقة الخاص بالمستعيل اللاسلكي بمفتاح الطاقة.
- ٢ | شغل الوحدة الرئيسية: ستم توصيل المستعيل اللاسلكي والوحدة بشكل تلقائي. يضئي المؤشر الأصفر - أخضر الخاص بالمستعيل.

## ٢ | توصيل المستعيل اللاسلكي

قد يختلف تصميم السماعة وطريقة التوصيل بحسب الطراز.

- ١ | اضغط على زر PAIRING الموجود خلف المستعيل اللاسلكي.
- ٢ | أصفر - أخضر يومض مؤشر LED على المستعيل اللاسلكي بسرعة.
- ٣ | شغل الوحدة الرئيسية.
- ٤ | أصفر - أخضر يضئي مؤشر LED على المستعيل اللاسلكي كثيل على التشغيل.


- ٥ | وصل كابلات السماعة بالسماعات الخلفية بشكل صحيح.
- ٦ | وصل المستعيل اللاسلكي والسماعات الخلفية (رمادي - يمين، أزرق - يسار) باستخدام كابلات السماعة.
- ٧ | قم بتشغيل وظيفة الصوت المحيطي لاستئناع بصوت محيطي.

## معلومات إضافية

مواصفات المستعيل اللاسلكي	
متطلبات الطاقة	ارجع إلى الملصق الرئيسي الموجود على المستعيل اللاسلكي.
استهلاك الطاقة	ارجع إلى الملصق الرئيسي الموجود على المستعيل اللاسلكي.
الأبعاد	نوعياً (عرض × الارتفاع × العمق) ٦٠,٠ مم × ٢٢٠,٠ مم × ١٧٥,٠ مم

يخص التصميم والمواصفات للتغيير دون إخطار مسبق.

## معلومات عن الحلقة الحديدية (اختياري)

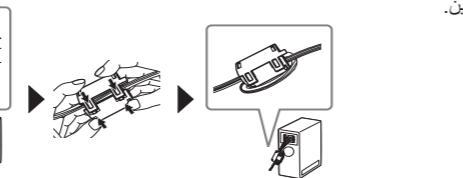

## تشغيل/إيقاف تشغيل الصوت المحيطي

عند تشغيل وظيفة الصوت المحيطي، يمكنك الاستئناع بالصوت المحيطي الرائع من جميع مصادر دخول الصوت عن طريق السماعات الخلفية.

الإعداد الأولي لوظيفة الصوت المحيطي هو إيقاف التشغيل، فقم بتشغيل وظيفة الصوت المحيطي لاستخدامها.

تشغيل الصوت المحيطي: اضغط مع الاستمرار على زر REAR + الموجود على جهاز التحكم عن بعد لمدة ثانية.

إيقاف الصوت المحيطي: اضغط مع الاستمرار على زر REAR - الموجود على جهاز التحكم عن بعد لمدة ثانية.