


Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 350 mm x 166 mm x 276 mm
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS output power)	1,100 W RMS

Design and specifications are subject to change without notice.

Replacement of battery

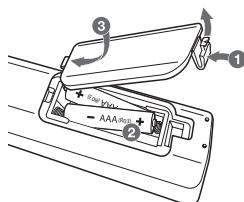

POWER: This unit operates on a mains supply of 200 - 240 V~, 50 / 60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below.

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



ENGLISH

SIMPLE MANUAL

Mini Hi-Fi System

Please read this manual carefully before operating your set, and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

MODEL
CK57




MFL70960409

www.lg.com

Copyright © 2018 LG Electronics Inc. All Rights Reserved.
1807_Rev02



Front Panel

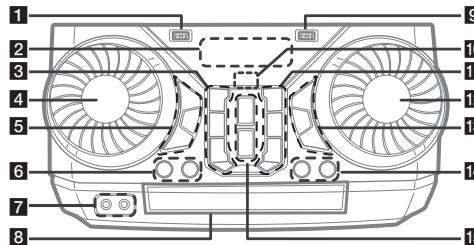

1 USB 1 Port
You can play sound files by connecting the USB device.

2 Display window

3 (Standby)

Turns the power on or off.

USB REC / DEMO

- Records to USB.
- To stop Recording, press and hold for 3 seconds.
- In power off status, if you press **USB REC / DEMO**, show DEMO mode.

KK (Skip/Search)

- Skips backward.
- Searches for a section within a track/file.
- Selects the radio stations.

□ (Stop)

Stops playback or cancels DELETE function.

4 EQUALIZER / SEARCH

- Chooses sound impressions.
- Searches a folder or a file.
- Selects the lighting effects.

5 SPECIAL EQ / BASS BLAST (or BASS BLAST+)

- Chooses special equalizer.
- Press and hold to select BASS (or BASS+) effect directly.

SEARCH

Moves to folder or file in selection mode.

OK

Selects a folder when searching a file.

6 LIGHTING

Selects lighting mode.

VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

7 PORTABLE IN jack

MIC (Microphone) jack

8 Disc tray

9 USB 2 Port

You can play sound files by connecting the USB device.

10 (Remote sensor)

11 F (Function)

Selects the function and input source.

⑤ WIRELESS LINK

- Selects MAIN or OTHER on WIRELESS PARTY LINK mode.
- Enable or disable WIRELESS PARTY LINK mode.

⑥ (Skip/Search)

- Skips forward.
- Searches for a section within a track/file.
- Selects the radio stations.

△ (Open/Close)

Opens and closes the disc tray.

12 MASTER VOL. (Volume) / MULTI

- Adjust speaker volume.
- Adjust microphone volume.
- Selects vocal effects.

13 VOCAL EFFECTS

Selects VOCAL EFFECTS mode.

MIC VOL (Microphone volume)

Selects microphone volume mode.

MIC ECHO

Selects ECHO mode.

14 KEY CHANGER (b/#)

Changes the key to suit your vocal range.


15 AUTO DJ

Selects the AUTO DJ mode.

⑦ (Play/Pause)

- Starts or pauses playback.
- Selects stereo/mono.

Rear Panel

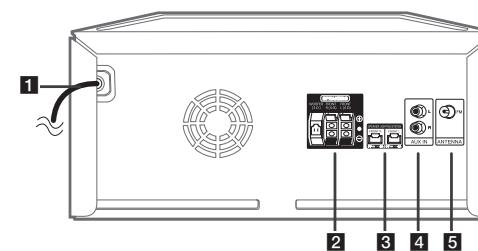

1 Power cord

2 SPEAKERS connector

3 SPEAKER LIGHTING SYSTEM


Connect the speaker lighting cables.

4 AUX IN (L/R)

Connect an auxiliary device.

5 ANTENNA (FM)

Speaker Connection

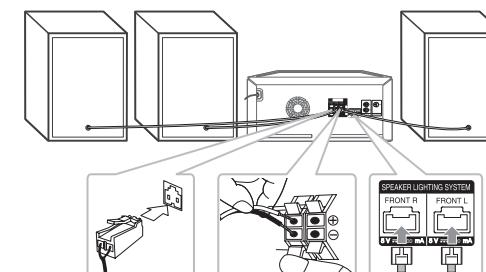

Controller App



Download the **Music Flow Bluetooth** App to your device. (Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>