

 
Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 350 mm x 163 mm x 251 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	480 W RMS

Design and specifications are subject to change without notice.

Replacement of battery

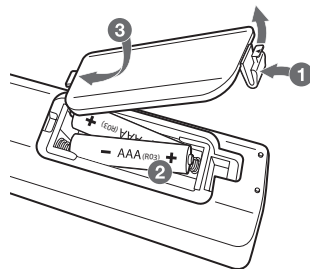

SIMPLE MANUAL

Mini Hi-Fi System

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL
CJ44




COV32127011
2407_Rev01




This product has no disc drive.

www.lg.com

 Copyright © 2026 LG Electronics Inc. All Rights Reserved.




Front Panel

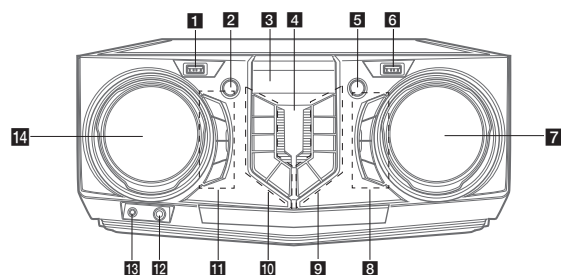 


- 1** USB 1 Port
You can play sound files by connecting the USB device.
- 2** (Standby)
Turns the power on or off.
- 3** Display window
- 4** (Remote sensor)
- 5** **WIRELESS LINK**
 - Selects MAIN or OTHER on WIRELESS PARTY LINK mode.
 - Enable or disable WIRELESS PARTY LINK mode.
- 6** USB 2 Port
You can play sound files by connecting the USB device.
- 7** **VOLUME**
Adjust speaker volume.
- 8** **MIC** (Microphone) +/-
Adjust microphone volume.
VOICE CANCELLER
You can enjoy the function while playing the music, by reducing singer vocal of music in the various source.
ECHO
Selects ECHO mode.
- 9** **F** (Function)
Selects the function and input source.
 - >||** (Play/Pause)
 - Starts or pauses playback.
 - Selects stereo/mono.
 - >>I** (Skip/Search)
 - Skips forward.
 - Searches for a section within a file.
 - Selects the radio stations.
- KEY CHANGER** (# / b)
Changes the key to suit your vocal range.
- 10** **USB REC / DEMO**
 - Records to USB.
 - In power off status, if you press **USB REC / DEMO**, show DEMO mode.
 - (Stop)
Stops playback or cancels DELETE function.
 - I<<** (Skip/Search)
 - Skips backward.
 - Searches for a section within a file.
 - Selects the radio stations.
 - (Information)
 - Sees information about your music. An MP3 file often come with ID3 tag. The tag gives the Title, Artist, Album or Time information.
 - Sees **Bluetooth** device name of the unit in BT READY.
 - Sees the name of connected all **Bluetooth** device in **Bluetooth** mode.
 - When these units are successfully connected each other in WIRELESS PARTY LINK mode, each of connected device names appears in the each unit.
- AUTO DJ**
Selects the AUTO DJ mode.
- 11** **EQ**
Chooses sound impressions.
SPECIAL EQ / BASS BLAST
 - Chooses special equalizer.
 - Press and hold to select BASS effect directly.
- SEARCH**
Moves to folder or file in selection mode.
- OK**
Selects a folder when searching a file.
- 12** **MIC** (Microphone) jack
- 13** **PORT.** (Portable) **IN** jack
- 14** **SEARCH**
 - Searches a folder or a file.
 - Turns clockwise or counterclockwise to control the EQ, SPECIAL EQ mode.

 Rear Panel

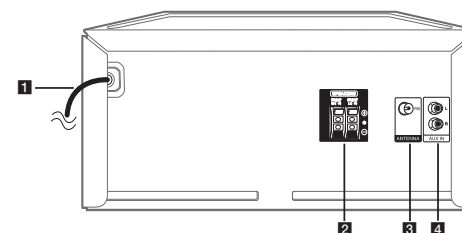

- 1** Power cord
- 2** **SPEAKERS** terminals
- 3** **ANTENNA** (FM)
- 4** **AUX IN** (L/R)
Connect an auxiliary device.

 Speaker Connection

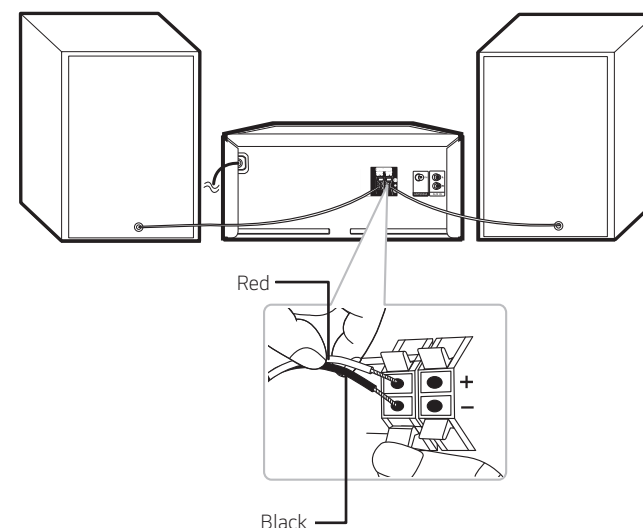

Controller App



Download the **LG XBOOM** App to your device.
(Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>