

ENGLISH



MBM65221201 (1.0)

LG Watch Urbane

LG-W150

QUICK START GUIDE

www.lg.com





CE0168

Visit **www.lg.com** to view the user guide and more information.

- Some contents and illustrations may differ from your device depending on the region, service provider, software version, or OS version, and are subject to change without prior notice.
- Always use genuine LG accessories. The supplied items are designed only for this device and may not be compatible with other devices.
- Available accessories may vary depending on your region, country or service provider.

  Watch layout

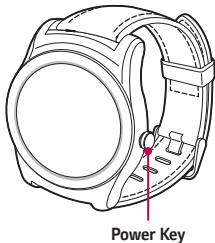

! **Warning** Do not close or push the hole located at the bottom of the device with a sharp object. Doing so may cause your device to work improperly.

 
Char

Before



Charging the watch

Before using your watch for the first time, you should charge the battery.

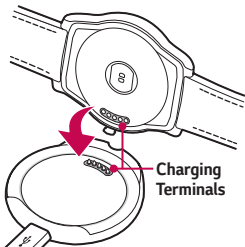

- Use the charging cradle provided with the your watch to charge its battery.
- Connect the charging cradle to a power outlet and place the watch on it. The watch will turn on automatically.
- To maximize battery life, make sure that the battery is fully charged before you use it for the first time.

push
m of
ct.
ice to

1
6

Charging the watch

⚠️ Cautions to be taken regarding the corrosion of charging terminals

Exposing to sweat or other foreign material during the use of the product may cause corrosion at the terminals while charging it.

To prevent this, wipe the product with a cloth before charging.

⚠️ Cautions before wearing the leather strap

- The LG Watch Urbane's stitched leather strap is thick enough to meet high quality standard. Before wearing the leather strap, please bend it back and forth a few times. This will help you feel more comfortable when wearing it.
- Depending on the user's skin condition, the watch may cause unintended allergic reactions on the skin it's in contact with.

 
Turni

To turn
hold th
hand si
second




Turning on the watch

To turn on the watch, press and hold the **Power Key** (on the right hand side of the watch) for a few seconds.

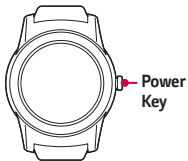

Turning off the watch

- 1 Press and hold the **Power Key** until the apps list appears.
- 2 Tap **Settings > Power off**.
- 3 When prompted with the message **Power off: Are you sure?**, tap .

Before Pairing

Before pairing, please do the following on the phone or tablet.

- 1 Make sure that the Android version on your phone or tablet is Android 4.3 or higher and supports Bluetooth®.
 - To find out whether your phone or tablet supports Android Wear, visit <http://g.co/WearCheck> from your phone or tablet.
 - If your phone or tablet is not Android 4.3, or later, please check with your manufacturer for a possible software update.
- 2 Make sure your phone or tablet is next to your watch.
- 3 On your phone or tablet, download the **Android Wear**  app from the **Play Store**  app and install it. Check that the **Android Wear**  app is installed and updated to the latest version on your phone or tablet.

Before

4 Ma
You

5 Kee

NOTE

- Dep
aut
- Dep
ove

Before Pairing

- 4 Make sure your phone or tablet is connected to mobile data or Wi-Fi.
You need a data connection to set up your watch for the first time.
- 5 Keep the watch connected to power during setup.

NOTES:

- Depending on the software installed on your watch, your watch may automatically download and install an update.
- Depending on the network condition, the setup process might take over 20 minutes.

How to pair your watch

- 1 Turn on the watch and swipe the welcome screen left to begin.
- 2 Tap a language.
- 3 Connect your watch to a power source and swipe left to continue.


Tip: If the battery is less than 20%, your watch may not move to the next step.

- 4 Swipe left following the onscreen instruction until the watch code is displayed.

How

 
- 5 Op
Blu
- 6 On
wat
- 7 You
the
- 8 Tap
- 9 You
can
- 10 Fol

How to pair your watch

- 5 Open the **Android Wear**  app on your phone or tablet. Turn Bluetooth on during setup, if it isn't already on.
- 6 On your phone or tablet, you'll see a list of nearby devices. Tap your watch's code.
- 7 You'll see a pairing code on your phone or tablet and watch. Check that the codes match.
- 8 Tap **Pair** on your phone or tablet to start pairing.
- 9 You'll see a confirmation message on your watch once it is paired. This can take a few minutes, so please wait a while.
- 10 Follow the onscreen instructions to complete the initial setup.

Heart Rate Sensor

Wear your watch on your wrist correctly before measuring the heart rate.

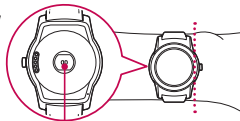

Heart Rate Sensor

NOTES:

- Loose fitting or too much movement may cause inaccurate measurements.
- Never look directly at the heart rate sensor light as this may damage your eyesight.
- When heart rate readings are inaccurate, retake your heart rate measurements by putting your watch on the inside of one of your wrists.

Conn

If you w
watch.

Reset

This se
deletes


- 1 Pre
 - 2 Tap
 - 3 Tap
- Your
 - Fact
comp

Connecting to another mobile device

If you want to connect your watch to another device, you must reset your watch.

Reset your watch

This setting resets your watch's settings to their factory default values and deletes all of your data.

- 1 Press and hold the **Power Key** until the apps list appears.
 - 2 Tap **Settings** > **Factory reset**. You are prompted to confirm.
 - 3 Tap .
- Your watch connects to one mobile device at a time.
 - Factory reset erases all data from your watch's memory. After completion, it is ready to connect to another mobile device.

Safety information

Before turning on your product, review the basic safety information provided here.

General safety & handling

While using your product, be aware of the following common-sense guidelines.

Your environment

- **Safe operating temperatures.** Use and store your product in temperatures between 0°C/32°F and 40°C/104°F. Exposing your product to extremely low or high temperatures may result in damage, malfunction, or even explosion.
- **While driving.** When driving a car, driving is your first responsibility. Using a mobile device or accessory for a call or other application while driving may cause distraction. Keep your eyes on the road.

- Arou
- might
- On a
- device
- taken
- device
- mag
- and
- item
- not s
- want
- Alwa
- off in
- dang
- Char
- conn

- **Around explosives.** Do not use in areas where sparks from the product might cause a fire or explosion.
- **On airplanes.** Observe all rules and instructions for use of electronic devices. Most airlines allow electronic use only between and not during takeoffs and landings. There are three main types of airport security devices: X-ray machines (used on items placed on conveyor belts), magnetic detectors (used on people walking through security checks), and magnetic wands (hand-held devices used on people or individual items). You can pass your product through airport X-ray machines. But do not send it through airport magnetic detectors or expose it to magnetic wands.
- Always follow any special regulations in a given area. Turn your device off in areas where use is forbidden or when it may cause interference or danger.
- Changing the wrist straps to metal straps might cause Bluetooth/Wi-Fi connectivity problem.

Safety tips

WARNING: The charging cradle contains strong magnets that may interfere with pacemakers, credit cards, watches, and other magnet-sensitive objects. To avoid damaging your product and reduce the risk of fire or electric shock, explosion, or other hazards, observe these common-sense precautions:

- Use only with cables, chargers, and other accessories approved by LG.
- Do not drop, strike, or shake your product.
- Do not damage the power cord by bending, twisting, pulling, heating, or placing heavy items on it.
- This product is equipped with a USB cable for connecting to a desktop or notebook computer or to the charger. Be sure your computer is properly grounded before connecting your product to the computer. The power supply cord of a desktop or notebook computer has an equipment-grounding conductor and a grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in

- acco
- Do n
- equi
- onl
- Do n
- prod
- Do n
- Do n
- Do n
- Clear
- benz
- Disp
- and i
- Like
- oper

accordance with all local codes and ordinances.

- Do not attempt to repair or modify or remanufacture the product. It is equipped with an internal rechargeable battery, which should be replaced only by LG or an authorized LG repair center.
- Do not open, disassemble, crush, bend or deform, puncture, or shred the product.
- Do not insert foreign objects into the product.
- Do not place the product in a microwave oven.
- Do not expose the product to fire, explosion, or other hazards.
- Clean with a soft, damp cloth. Don't use harsh chemicals (such as alcohol, benzene, or thinners) or detergents to clean your product.
- Dispose of your product and battery separately from household waste and in accordance with local regulations.
- Like many electronic devices, your product generates heat during normal operation. Extremely prolonged, direct skin contact in the absence of

adequate ventilation may result in discomfort or minor burns. Therefore, use care when handling your product during or immediately after operation.

- If you have a problem with using the product, please stop using it and consult with the authorised LG Electronics customer service center.
 - Do not immerse or expose the product to water or other liquids.
- Pedometer, Sleep, Exercise, and Heart rate are not intended to treat or diagnose any medical condition, and should be used for leisure, well-being and fitness purposes only.
 - Heart rate readings can be affected by measurement conditions and your surroundings. Make sure you are seated and relaxed before reading your heart rate.

- This
- whi
- min
- Hea
- con
- Nev
- dan
- If y
- to t
- The
- and

Batte

- Do n

- This product is water and dust-resistant according to the IP67 Rating, which tests submersion in water at up to one metre for up to 30 minutes. Not shockproof. The case must be completely closed.
- Heart rate readings may be affected by skin condition, measurement conditions and your surroundings.
- Never look directly at the light of the heart rate sensor as this may damage your eyesight.
- If your device becomes hot, remove it until it cools down. Exposing skin to the hot surface for a long period of time may cause skin burn.
- The Heart rate feature is only intended for measuring your heart rate and must not be used for any other purposes.

Battery warnings

- Do not disassemble or open crush, bend or deform, puncture or shred.

- Do not modify or remanufacture, attempt to insert foreign objects into the battery, immerse or expose to water or other liquids, expose to fire, explosion or other hazard.
- Make sure that no sharp-edged items, such as animal's teeth or nails, come into contact with the battery. This could cause a fire.
- Only use the battery for the system for which it is specified
- Only use the battery with a charging system that has been qualified with the system per CTIA Certification Requirements for Battery System Compliance to IEEE1725. Use of an unqualified battery or charger may present a risk of fire, explosion, leakage, or other hazard.
- Do not short circuit a battery or allow metallic conductive objects to contact battery terminals.
- Replace the battery only with another battery that has been qualified with the system per this standard, IEEE-Std-1725. Use of an unqualified battery may present a risk of fire, explosion, leakage or other hazard.

- Only non-
- Batt
- Avoid drop it to
- Impr
- Alwa char
- Ther

Only authorized service providers shall replace battery (If the battery is non-user replaceable)

- Battery usage by children should be supervised.
- Avoid dropping the product or battery. If the product or battery is dropped, especially on a hard surface, and the user suspects damage, take it to a service center for inspection.
- Improper battery use may result in a fire, explosion or other hazard.
- Always unplug the charger from the wall socket after the product is fully charged to save unnecessary power consumption of the charger.
- There is risk of explosion if the battery is replaced with an incorrect type.

WARNING Notice for Battery replacement

- For your safety, do not remove the battery incorporated in the product. If you need to replace the battery, take it to the nearest authorized LG Electronics service point or dealer for assistance.
- Li-Ion Battery is a hazardous component which can cause injury.
- Battery replacement by non-qualified professional can cause damage to your device.

Notes on water resistant properties

This product is water and dust resistant in compliance with the Ingress Protection rating IP67*.

- * The IP67 rating means that the product will maintain its operability even if it is gently submerged in a tank of still tap water at room temperature for about 30minutes, up to a depth of 1 meter.

Avoid exposing the product to environments with excessive dusts or

moistu



- Once Shaked
- Even

moisture. Do not use the product in the following environments.



Do not immerse the product in any liquid chemicals (soap, etc.) other than water.



Do not immerse the product in salt water, such as sea water.



Do not immerse the product in hot spring.



Do not swim wearing this product.



Do not use the product underwater.



Do not place the product directly on sand (such as at a beach) or mud.

- Once the product gets wet, water may remain in gaps of the main unit. Shake the product well to drain water.
- Even after water is drained, the inner parts might be still wet. Although

you can use the product, do not place it near things that must not get wet. Take care not to wet your clothes, bag or contents of the bag.

- Drain water if the voice activation does not work properly due to water remaining in the microphone.
- Do not use the product in places where it may be sprayed with high-pressure water (e.g. near a faucet or shower head) or submerge it in water for extended periods of time, as the product is not designed to withstand high water pressure.
- This product is not resistant to shock. Do not drop the product or subject it to shock. Doing so might damage or deform the main unit causing water leak.

Pacemakers and other medical devices

Persons with pacemakers should:

- **ALWAYS** keep the product more than six (6) inches from their pacemaker when the product is turned ON.

- Not
 - Use
 - Turn
- If you u
manufa
externa

- Not carry the product in a breast pocket.
- Use the wrist opposite the pacemaker to minimize the potential for RF interference.
- Turn the product OFF immediately if there is any indication that interference is taking place.

If you use any other personal medical device, consult your physician or the manufacturer of your device to determine if it is adequately shielded from external RF energy.

Tips for the display screen

- Do not display non-moving images for an extended period. This may cause image burn-in or stains on the screen.
- Applications that display the same screen for more than 10 minutes are not recommended because the potential screen damage is not covered by the warranty.

EU DECLARATION OF CONFORMITY

Hereby, **LG Electronics** declares that this **LG-W150** product is in compliance with the essential requirements and other relevant provisions of Directive **1999/5/EC**. A copy of the Declaration of Conformity can be found at <http://www.lg.com/global/declaration>.

Open Source Software Notice Information

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

Regu

1. Pre
2. Tap
info

HOW

- Access
impro
1. Pre
 2. Tap

Regulatory information

1. Press and hold the **Power Key** until the apps list appears.
2. Tap **Settings** > **About** > **Regulatory information** to get regulatory information.

HOW TO UPDATE YOUR DEVICE

Access to latest firmware releases, new software functions and improvements.

1. Press and hold the **Power Key** until the apps list appears.
2. Tap **Settings** > **About** > **System updates** on your device.



Disposal of your old appliance

1. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
2. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
3. To locate a nearest collection centre or call for pick-up (limited area only) for disposal of this appliance, please contact Toll Free No. 1800-180-9999 for details. All collection centre and pick up facilities are done by third parties with LG Electronics India Pvt. Ltd. Merely as a facilitator. For more detailed information , please visit : <http://www.lge.com/in>.

Customer Information Center

For any query related to the after sales service and customer support please contact below details.

24 x 7 CALL CENTER



1800-180-9999
(Toll Free)



5757554
(Send SMS)



www.lg.com
serviceindia@lge.com

