


SEC. WORK	적용모델	재 질	인쇄방법	인쇄도수		PAGE	REMARK
				표 지	내 지		
20	A9*****	표지 : 아트지 150g 무광 Laminating 내지 : 모조지 80g OFFSET 인쇄	OFFSET 인쇄	4도	3도	64, A5	홍콩향, A9 Mop English+ Chinese(Hongkong)

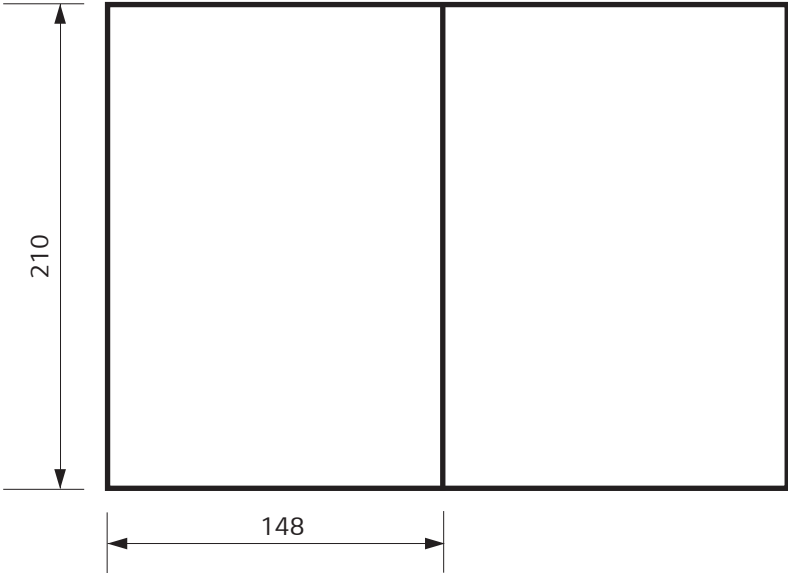

<< 주기 >>

- 1. 재질, 인쇄방법, 인쇄도수, 외곽치수등은 작업표에 준한다.
- 2. 인쇄내용, 문자크기 및 형상, 선의 굵기 등은 설계에서 제시된 도면에 준함.
- 3. 외곽치수는 절단후 치수임.
- 4. 양산전에 설계 한도를 득할 것.
- 5. 본 부품에 금지물질이 포함되지 않도록 하고, 상세내용은 LG(63)-A-5501 - 34
를 만족할 것.

<< NOTES >>

- 1. Material, printing and exterier size are refer to work tables.
- 2. Printing, text size and line are based on LG design drawing.
- 3. Exterier size on the drawing is cutting line.
- 4. Before product controlled by criteria sample.
- 5. The part should not contain prohibited substances(Pb,Cd,Hg,Cr+6,PBB,
PBDE) and details should comply with LG standard of LG(63)-A-5501 - 34

△					
△					
△					
△					
△					
△					
△					
△					
REV. NO. 기호	REVISION DESCRIPTION 변경 사항	REF. NO. 사양 번호	DATE 년/월/일	PREPARED 사양자	APPROVED 승인자

PDF
ILLUSTRATOR

DR COMPLETED
도면 DR 완료
완료일 :

TRIG.	UNIT	mm	SCALE	1/1	T I T L E	MANUAL, OWNER'S A9 MOP 홍콩향	1/1
MODELING	DESIGNED	REVIEWED	CHECKED	APPROVED			
	이 다 정 18.12.03	박 세 종 18.12.03		김 남 철 18.12.04			
LG 전자 (주) LG Electronics Inc.			RELATED DWG.		DWG. No.	MFL69883620	

LG CordZero™

USER'S MANUAL

A9

Make sure to read the "Safety Cautions" carefully before starting to use this product.

Please keep this User's Manual within easy reach of the user.

As the product is only intended for domestic use such as household cleaning, it must not be used for commercial, experimental or industrial purposes.

Make sure to fully charge the product's battery before first use of the product after purchasing it.



MFL69883620

www.lg.com

Copyright © 2018 LG Electronics Inc. All Rights Reserved.

TABLE OF CONTENTS

This User's Manual may contain images or contents that differ slightly to the purchased product.

SAFETY PRECAUTIONS 04

PACKAGE INFORMATION 11

INSTALLATION 13

 Installing the floor standing charging station..... 13

 Installing the wall-mount station 14

 Uninstalling the station..... 14

 Storage of the combination tool and crevice tool..... 15

 Storage of the Mop Nozzle..... 15

 Storage of the Mop Pads 15

HOW TO USE 16

 Note about using the product..... 16

 Using the Product 16

 Charging the Product..... 17

 Power / Suction Strength button..... 17

 Using the nozzles 18

MAINTENANCE..... 22

 Cleaning the Dustbin..... 22

 Cleaning the Filters 22

 Cleaning the Power Drive Floor/Carpet Nozzle 24

 Cleaning the Bedding Power Punch 24

 Cleaning the Mop Nozzle..... 25

**POINTS TO CHECK BEFORE CONTACTING
CUSTOMER SERVICE. 26**

DISPOSAL INFORMATION 28

 Disposal of old products not related with the
 purchase of a new product..... 28

PRODUCT SPECIFICATIONS 28

SAFETY PRECAUTIONS

The following cautions are intended to protect you from unexpected risk or property loss by ensuring safe and correct usage of the product.

Cautions are categorized into 'Warning' and 'Caution', which mean:



Pictograms are designed to draw attention to matters and uses that may pose a risk to the user. Make sure to carefully read any item marked with this symbol and comply with it to prevent any risk.



WARNING

Failure to comply with this warning may result in serious damage, injury or even death to the user.



CAUTION

Failure to comply with this warning may result in damage to the product or moderate injury to the user.

WARNING

1. This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
2. Children should be supervised to ensure that they do not play with the appliance.
3. If the supply cord is damaged, it must be replaced by an LG Electronics Service Agent in order to avoid a potential hazard.
4. This appliance can be used by children aged 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance.
Cleaning and user maintenance must not be performed by children without supervision.

Installation and Usage

Do not install, charge or store the product where it may be exposed to water, rainfall or severe moisture. Do not use the product in any outdoor location, workshop or garage environment.

- Such conditions will leave the product vulnerable to fire when charging the battery.
- Please install, charge or store the product in a well-ventilated place.

Make sure to avoid places where there is a risk of leakage of flammable gas, industrial oil or metallic dust.

- It may cause product malfunction or damage.

If you intend to use the charging station by "standing" it vertically (standing type), make sure to secure it to the wall with the appropriate type of screws .

- Otherwise, the charging station or product may slant and become damaged or cause property damage or injury.

Please place the charging station on an even surface.

- Otherwise, the product may fall and sustain damage or cause an injury.

If you intend to mount the charging station on a wall (wall-mounted type), make sure to secure it tightly to the wall using the appropriate type of screws.

- Failure to do so may damage the product and/or cause an injury.

Please use the anchoring screws only when the wall is made of concrete or is solid enough.

- If the Station mounting is performed on an unsuitable wall it may cause injury and damage the property or product.

Never install the charging station on a wall with any piping (gas, water, air) or power cables or wires behind it.

- There is a risk of injury from electric shock, fire or flooding.

Do not use or store the product at temperatures below 5 ° C or above 38 ° C.

- Failure to do so may damage the product.

Power requirements

This product should only be used with AC 220 V. Make sure to check the power specifications of the place where you intend to use the product.

- The wrong specifications will result in electric shock or damage the product in the event of a short-circuit.

Do not apply excessive force to the power cord to bend it, or place it under a heavy object as this will damage it.

- The power cord may get damaged and cause electric shock or injury.

Please refrain from using multiple power appliances in one power board or power socket and make sure to use a power socket with a capacity of 10A.

- Failure to do so may result in fire due to abnormal overheating of the socket.
- Or it may activate the circuit breaker leading to a loss of power.

Never touch the power cord and plug with a wet hand.

- This may result in injury or electric shock.

Please clear any dust or water from the power cord and plug with a dry cloth.

- Failure to do so may result in electric shock, short circuit or fire.

When unplugging the power cord, never pull the cord itself and always hold the power plug.

- Failure to do so will damage the cord it and may result in electric shock or fire.

Stop using the product and contact the customer service department of LG Electronics if the power cord or power plug is damaged or the holes of the power outlet socket are loose.

- Failure to do so may result in electric shock or fire.

Make sure to unplug the power cord when cleaning or maintaining the charging station.

- Failure to do so may result in injury or electric shock.

Make sure to unplug the power cord when the product is not to be used for an extended period of time.

- Failure to do so may result in electric shock, short circuit or fire.

Make sure to organize the power cord of the Adaptor while using or cleaning the product.

- Otherwise, the cord may get tangled with the product and result in malfunction, electric shock or injury if its disconnected or broken.

Avoid touching the pins of the power plug with your finger(s) when unplugging the power cord.

- Failure to do so may result in electric shock or fire.

Do not to let children or pets get close to the product when using, charging or storing.

- It may damage the product and/or result in injury.

Do not hold the charging station upside down with the battery in the charging station.

- Otherwise, it may damage the product and/or result in injury.

Proper usage

Make sure that no child is allowed to use the product.

- The product is too heavy for a child to handle properly.

Make sure that no hand, foot, hair or clothes gets stuck in the rotating brush or wheel while using or cleaning the product.

- Failure to do so may damage the product or result in injury.

No one other than a qualified technician/service engineer from LG Electronics may disassemble, repair or modify the product.

- Do not attempt to disassemble or repair the product yourself as it may result in electric shock, injury or fire.

Never use the battery, the charging station and the adaptor with other appliances other than this product.

- It may cause a product malfunction or fire.

Do not use the battery of another appliance in the product.

- It may cause malfunctioning or fire.

Do not arbitrarily disassemble, remove or short-circuit the battery.

- It may result in electric shock, injury or fire.

Do not apply heat or shock to the battery.

- It may cause electric shock, injury or fire.

Never insert a sharp metallic object such as a pin, nail or knife in a hole or gap in the product or the charging station.

- Otherwise, you may get injured or suffer electric shock.

Do not vacuum liquids with this product. Make sure that no water, beverage or detergent gets inside the product or the charging station.

- Failure to do so may result in injury or electric shock.

Do not apply or spray a flammable substance (gasoline or thinner) or surface active agent (detergent or bath soap) on the product.

- It may result in malfunction or fire.

In the event of a gas leakage (propane or urban gas), make sure to ventilate the area first without coming into contact with the product or its power plug.

- Otherwise, there may be sparks which may result in an explosion, fire or injury.

Do not let liquid stain the upper part of the mop nozzle. Do not clean a wet floor.

- It may damage the product or cause electric shock.

Do not use or store a heating device or flammable substance(ether, benzene, alcohol, chemicals, combustible spray, insecticide, air freshener or cosmetics) in close proximity to the product.

- It may result in product malfunction or fire.

Do not attempt to clean up a liquid substance (water, beverage), odorous substances (candy, chocolate, pet excrement, etc.), metallic objects (such as blade, pins), flammable substances, surface active agents, or glass shards with this product.

- It may result in product malfunction or fire.
- In the event that any liquid, metallic object, glass shard or spark gets inside the product, immediately turn off the product and contact the customer service department of LG Electronics.

Do not use the product with the exhaust or inlet port blocked.

- It will cause the product to overheat and result in malfunction or fire.

In the event that smoke is emitted by the product while it is charging, immediately unplug the power cord and contact the customer service department of LG Electronics.

- Failure to do so may cause electric shock or fire.

Do not expose the product, and the battery in particular, to heat, a heating device or direct sunlight.

- It may result in electric shock, explosion or fire.

Do not keep the product or its battery inside a vehicle which is exposed to direct sunlight.

- It may cause fire or explosion.

In the event that some kind of liquid leaks from the battery, make sure that it does not contact the skin or eyes.

- It may burn the skin or severely damage the eyes.
- If liquid from the battery comes into contact with part of the skin, immediately wash it off with plenty of water and seek medical advice.

Do not wash the inlet port with water or detergent.

- As the inlet port contains a motor, it may result in electric shock or fire.

Always use the charging station and adaptor provided with the product to charge the product and its battery.

- Using any charging device other than the provided station and adaptor will damage the battery and result in electric shock, explosion or fire.

Never allow any water, beverage or detergent to get inside the battery.

- It may cause electric shock, explosion or fire.

Do not touch the charging terminals on the product or the charging station, or insert an electrified object inside the product or the station.

- Otherwise, you may get injured or suffer electric shock.

Always leave the product on the floor standing or wall-mount charging station when it is not in use. Do not leave the product on the charging station not fixed to the wall or charging station support.

- Otherwise, the product may fall and get damaged or cause injury.

In the event that the earth leakage breaker gets activated while the product is placed on the charging station, immediately remove the product from the station and contact the customer service department of LG Electronics.

- Failure to do so may cause electric shock or fire.

Do not wash the dust bin with water.

- The water will get into the motor and cause electric shock or fire.

Do not attempt to vacuum fine dust such as cement with the product.

- It may cause product malfunction or fire.

Make sure that no child can play with the product, charging station or battery.

- It may damage the product and cause an injury.
- If a child places the product or battery into its mouth, it will cause electric shock or injury, or damage the product or battery.

When using the product, remove any wire or string from the bottom of the Charging Station.

- Straps or wires may wrap around the product and cause a product malfunction or a broken cord.

Take caution not to get fingers caught in the flexible part of the nozzle.

- Failure to do so may result in injury.

Do not vacuum sharp objects (glass pieces, wire, blades, pins, etc.) with the mop nozzle attached.

- It may cause injury or product damage.
- Particularly, a sharp object embedded in the mop, can cause injury when cleaning the mop pads after mopping.

Disposal

Discard the packing materials (plastic vinyl, styrofoam) properly so that no child comes into contact with them.

- Such materials may cause a child to suffocate.

When disposing of the product, make sure to remove the battery from the product's body.

- Failure to do so may result in fire or explosion.

CAUTION

Proper usage

Do not apply impact to the product or drop it from a height.

- It may damage the product and/or result in injury.

Make sure that the product does not fall.

- It may cause injury or damage the product.

Make sure that the filter is installed in the product prior to each use.

- Failure to install a filter may result in product malfunction.

Make sure to wipe up any liquid such as water or oil or pet excrement from the floor before using the product.

- Such substances will cause the unit to malfunction or cause irreparable damage

Do not clean the product with a volatile or organic solvent (thinner or acetone).

- It may damage the product.
- Always use a soft cloth to clean the product.

Make sure to avoid running into a person or a pet while using the product.

- It may cause injury.

Do not kick or apply impact to the product.

- It may cause the product to malfunction.

Do not put any object other than the product, especially a metallic or magnetic object, on the charging station.

- It may damage the product or cause electric shock.

Do not clean the same spot repeatedly for an extended period of time.

- Vibration from the inlet port or rotating brush may damage the floor or the carpet.

Make sure that your finger does not get stuck when assembling the product or the charging station.

- It may injure your finger.

Do not let a child or a pet hang onto the charging station.

- It may cause injury or damage the product.

Do not put double-sided tape directly onto the wallpaper as it may be torn by external force.

- Anchor the charging station with the wall anchoring screw(s) to prevent tearing of the wallpaper.

Do not apply force or impact to the filter parts or dust bin parts.

- The parts may become deformed, compromise the performance or cause the unit to malfunction.

Do not remove the battery during operation.

- It may cause the product to malfunction.

If the motor is overheated by using the product for a long period of time, the product will automatically turn off by its built in safety device to prevent heat damage.

- After cooling for about 1 hour in a cool, well-ventilated area, turn on the power again.

Do not leave the product standing on the charging station while the mop nozzle (and its water tank) attached to the main body.

- The water may leak and damage the floor.

Do not store the water tank where the temperature is 0 °C or lower.

- It may result in product damage.

Do not clean the same spot repeatedly for an extended period of time.

- The water injection at the mop nozzle may cause the water get into the dust inlet and damage the main body.

Do not use the mop nozzle for any purpose (e.g.: polishing a car, cleaning windows) other than domestic floor cleaning application.

- It may result in product damage.

Do not trample on the mop nozzle.

- It may result in product damage.

Do not use the mop nozzle to vacuum liquid.

- It may result in product damage.

When using the mop nozzle, always attach the mop pads.

- Failure to do so may cause damage to the floor or carpet.

Do not clean the carpet with the mop nozzle.

- The carpet may get wet or stick to the Velcro, causing damage to the carpet.

Do not clean a coated floor.


- If used repeatedly, the coating may peel off.

Do not use the mopping functions on delicate floating floors.


- Floors use the mopping functions on delicate floating floors.

PACKAGE INFORMATION

Standing type

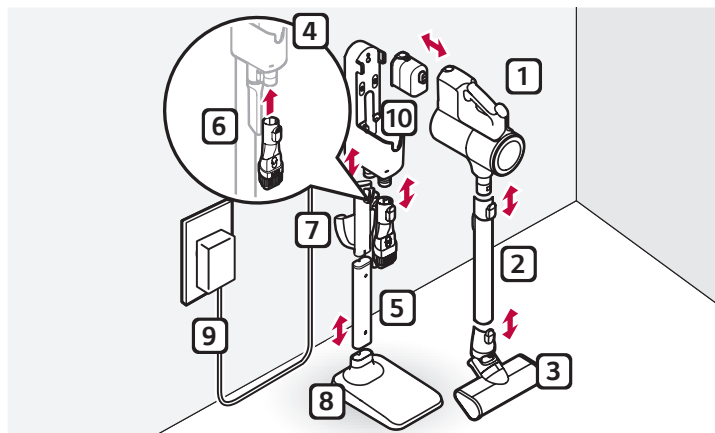




Wall-mount type

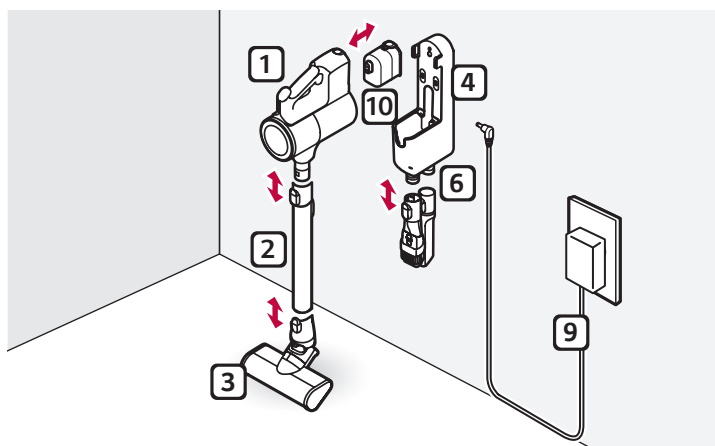







- | | | |
|----------------------------|--|----------------------------|
| 1 Product body | 5 Charging station pipe | 8 Charging station support |
| 2 Extension pipe | 6 Combination tool and crevice tool holder | 9 Adaptor |
| 3 Power Drive Floor Nozzle | 7 Detachable stand for nozzle and mop pads | 10 Battery |
| 4 Charging station | | |

Accessories

   - Parts and accessories may vary depending on the model that you have purchased.

				
Product body	Extension pipe	Power Drive Floor Nozzle	Charging station	Adaptor
				
Battery	Crevice Tool	Combination Tool	Wall Anchoring Block	Double-sided tape (2)
				
Screw Anchor (2)	Anchoring screw for wall-mount type (Φ 3.5 mm, length 50 mm)(2)	Anchoring screw for standing type (Φ 3.5 mm, length 90 mm)	Pre-filter (Spare)	Charging station pipe
				
Charging station support				

   - Please note that these parts come with their corresponding models only.

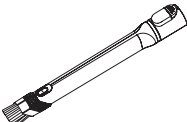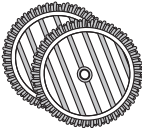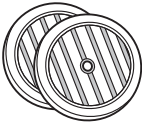
				
Hard Dirt Tool	Mattress Tool	Flexible CreviceTool	Multi Angle Tool	Flexible Hose Extension
				
Battery	Power Drive Carpet Nozzle	Bedding Power Punch	Mop Nozzle	Accessory bag
1) 	1) 			
Detachable stand for mop pads	Detachable stand for nozzle	Mop pads for general cleaning (2)	Mop pads for cleaning stubborn stains (2)	Water filler jug

1) For some models, the Detachable stand for mop pads, mop nozzle and other nozzles are provided together in an assembled condition.

INSTALLATION


Installing the floor standing charging station (it can be Free Standing or Wall Mounted)

- 1 Place the charging station support on the floor and assemble the charging station pipe, the Detachable stand for nozzle and mop pads and the charging station in this order.

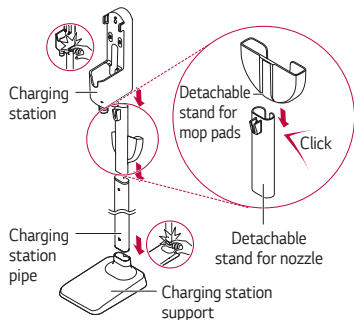


⚠ CAUTION

- Avoid getting your fingers stuck in any gap.
- 2 Connect the power adapter to the port on the back of the charging station and plug the power cord into the power outlet.
- The cord can be secured tidily by putting it through the power cord anchoring ring located on the back of the charging station pipe.

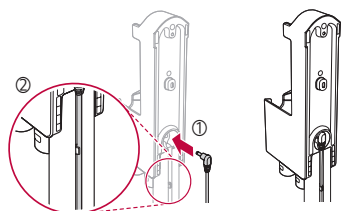


- 3 After ensuring there are no pipes or wires inside or behind the wall, make a hole at the appropriate height to anchor the charging station and insert the screw anchor.

- Recommended diameter of hole: $\Phi 6.5$;
Recommended depth: 100 mm.

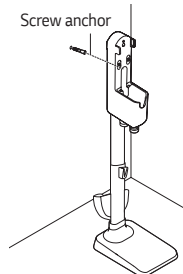


- 4 Put the anchoring block on the back of the charging station and anchor the charging station with the screw.
- Make sure to fully tighten the screw.

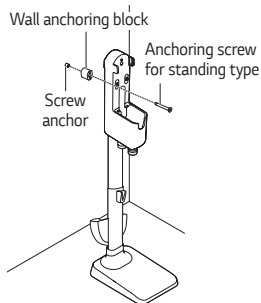


When using double-sided tape (do not use if the wall is wallpapered)

- 1 Use double-sided tape to attach the wall anchoring block to the charging station in step 4.
- Be sure to remove the center part of the double-sided tape before mounting it.

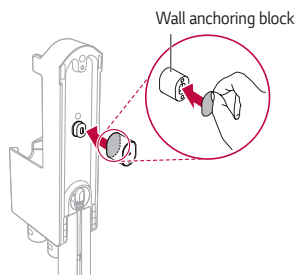

- 2 Use the remaining part of the tape to anchor the station to the wall before inserting the screw.

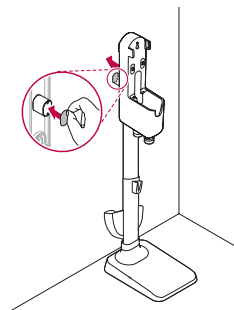


CAUTION

- Avoid dropping the product and parts when taking them out of the package. It may damage the product and/or cause personal injury.
 - Do not use double-sided tape to anchor the charging station on papered walls. Please use the provided screws as otherwise the wall paper will get torn by movement of the charging station during the docking of the unit.
 - We recommend anchoring the station with the anchoring screw.
 - Use the anchoring screws only when the wall is made of concrete or is solid enough. An unsuitable wall can cause the mountings to weaken and cause the Charging station to fall causing injury and damage the property or product.
 - Do not store the product or battery in the accessory bag except for the inlet ports and flexible hose extension.
 - Be careful not to throw or drop the accessory bag carrying accessories such as the inlet ports. It may damage the product and/or cause personal injury.
- * The accessory bag is provided only for an applicable model.


Please note

- The charging station, its pipe and support cannot be disassembled separately once they have been assembled, and the charging station has been attached to the wall.
- If necessary, the charging station and the nozzle cradle can be separated from the charging station pipe. Pull the charging station upward and separate it in sequence while the charging station support is in a fixed state.

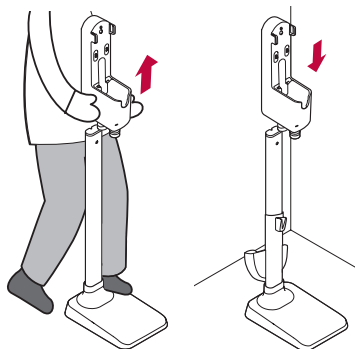

Installing the wall-mount station

- 1 Connect the power adapter to the port on the back of the charging station and plug the power cord into the power outlet.
- 2 Ensure that there are no Electrical wires or water pipes inside the wall where the wall mount bracket will be attached to. By drilling or screwing, make a hole 1 meter from the floor to insert the wall plug or screw anchor.
 - Recommended diameter of hole: $\Phi 6.5$;
 - Recommended depth: 60 mm.
- 3 Anchor the station to the wall with the provided anchoring screws.

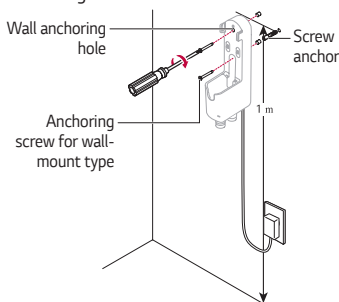


Please note

- A service request to change the installation location of the charging station will incur additional costs if required to do so by a qualified installer.
- The Detachable stand for the nozzles and the Detachable stand for mop pads cannot be separated once they are assembled.

Uninstalling the station

Keep and charge the product on the charging station after separating extension pipe and nozzle from the product body.

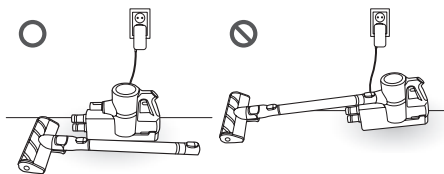


CAUTION

- Leaving the extension pipe and nozzle assembled for a long time may cause damage the product.


Storage of the combination tool and crevice tool

Keep the combination tool and crevice tool on the charging station for easy access.

 - 1 Attach the combination tool and crevice tool to the dedicated holders.




- 2 Press and hold the inlet removal button and pull downward to remove the combination tool or crevice tool.

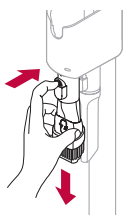

Nozzles provided additionally can be stored in the accessory bag.


* The accessory bag is provided only for the applicable models sold with the Total Care Kit. Do not use the accessory bag for purposes other than for storage of nozzles.

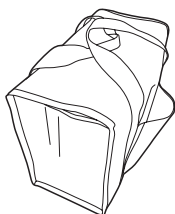


Storage of the Mop Nozzle

Storing mop nozzles on the Detachable stand for nozzle and mop pads helps in finding and using the mop nozzle.

- 1 Mount the mop nozzle to the nozzle cradle.

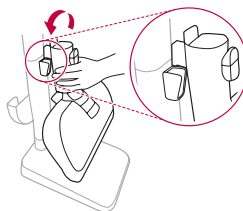

- 2 Lift the nozzle to separate the mop nozzle.

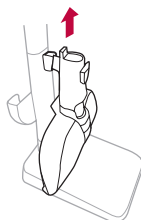

* The Power Drive Floor Nozzle can be stored as well.

Storage of the Mop Pads

Storing mops on the Detachable stand for mop pads helps in finding and using the mop. Up to 2 mop pads can be stored.



- After cleaning with a mop pad, wash and dry the mop pads before storage. A mop pad which has not been properly dried may emit an odour when stored.
- We recommend to hand-wash the mop pad with a pH-neutral detergent.
- Do not use bleach or fabric softener when washing the mop pad.
- It is not recommended to use a laundry dryer to dry the mop pad.
- Do not boil the mop pad. The mop pad may become deformed.

HOW TO USE


Note about using the product

Points to be aware of when using the product

- Make sure that the dustbin lid is on prior to using the product. Otherwise, the suction strength will deteriorate and cleaning will not be satisfactory.
- Support the bottom of the product when cleaning an elevated surface.
- When leaving the product unattended or unused for an extended period, make sure to place it properly on the charging station or lie it on the floor. Otherwise, the product may fall and get damaged or cause an injury.
- Make sure that the exhaust filter is properly assembled before using the product.
- Environmental conditions such as temperature and humidity may cause static to accumulate on the product. Please contact the customer service department of LG Electronics if the problem persists.
- Any foreign object on the inlet port or extension pipe will prevent the product from functioning properly. Make sure to remove any foreign object such as a sock or stocking before using the product.
- The battery runtime will be shortened after using the product repeatedly for an extended period due to its characteristics.
- When the battery is about to become fully run down during use, the last block on the battery indicator will start to flash and the product will power off after a while. Fully charge the battery in this case.
- Please use the product at normal room temperatures as the battery runtime will deteriorate severely if used at temperatures lower than 5°C or higher than 38°C for an extended period of time.
- Refer to Product specifications for battery run time details.
- These times are a guide only and may be less depending on the surface type.
- It is recommended to swap the battery on the main body and the battery on the auxiliary charging station regularly for maintaining the maximum life of the batteries. (For dual-battery models only)


Using the Product

- 1 Assemble the body, extension pipe, inlet port, and battery in that order.

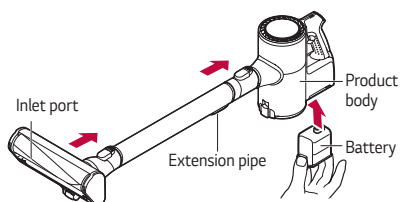


- 2 Press the button on the extension pipe to adjust its length.

- The pipe has 4 extendable length positions

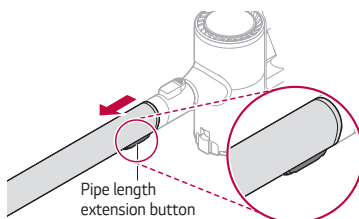

- 3 Attach the accessory tool to the body or the extension pipe.

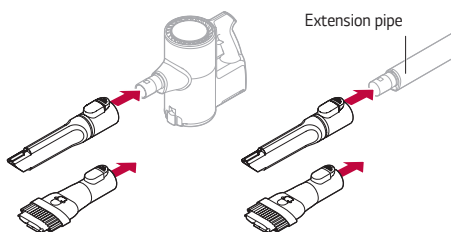


⚠ CAUTION


- Prolonged use of the product with the accessory tool attached may overheat the motor.
- Using the inlet port to clean a TV, monitor or LCD display may scratch the screen.
- Exercise caution to avoid getting your finger stuck in any gap when assembling the attachments.
- If any foreign object is sucked into the inlet during cleaning, operation of the vacuum cleaner might stop in order to prevent damage to the body or motor. Immediately stop using the vacuum cleaner and remove the object before resuming cleaning.

Charging the Product

 - 1 Put the product on the charging station.
 - The battery indicator will start to flash and charging will proceed in 3 steps.



- 2 The battery indicator starts to flash and charging will start.
 - All of the indicators will stay on when the battery is fully charged.

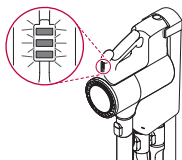

⚠ CAUTION


- Make sure to securely fit the unit on to the charging station. Otherwise, the product may fall and get damaged.

Please note


- The battery will not be charged if the ambient temperature is below 5°C. Only charge the battery when ambient temperatures are between 5° and 38° C.
- The battery indicator will flash if the product is fully charged, removed from the station, and charged again soon. The flashing stops soon, and the indicator stays on.

Charging the auxiliary battery

- 1 Hold the product and pull the battery by pressing both ends of the battery.

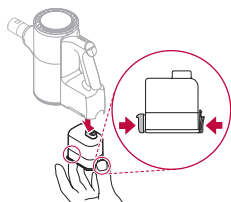

- 2 Insert the battery into the auxiliary charging station.

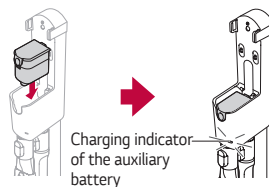


Please note

- Make sure that the power adapter is connected to both the charging station and the power outlet
- If the main battery is charging on the charging station, the auxiliary battery will only start charging once the main battery is fully charged.
- The auxiliary battery indicator flashes when charging starts.
- The indicator will stay on when the auxiliary battery is fully charged.
- Fully charging a single battery usually takes 3.5 hours, but it will take twice as long if you charge it along with a discharged auxiliary battery.

Power / Suction Strength button

You can adjust the suction strength with the suction strength button located on the handle.

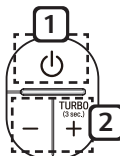

1 Power On/Off button

- Press the power On/Off button to activate the Normal mode.

2 Mode button

- Press "+" once to activate the Power mode.
- Press and hold "+" for more than 3 seconds to activate the Turbo mode.
- The unit will take a moment to switch to the Turbo mode from the Normal mode when the "+" button is held down.
- Press "-" to switch from Turbo to Power, or from Power to Normal.

Using the nozzles

- Please note that the following applies to the corresponding models:
- The nozzle can be attached to the product body or extension pipe.
- Use a different mode if the inlet gets stuck on the floor, carpet or bed sheets or if you need a more powerful mode.

CAUTION

- Do not use the product for any purpose other than domestic household.

Power Drive Floor Nozzle

- It is suitable for cleaning carpets or rugs.
- It can be used to clean hard floors but will generate some noise.

CAUTION


- Do not use this nozzle on a play mat (PVC) for children.

Power Drive Carpet Nozzle (some models only)

- It is suitable for cleaning hard floor surfaces.

Bedding Power Punch (some models only)

- Bedding Power Punch lets you clean bed sheets and covers more effectively. This attachment can be used to remove Pet Hair from various surfaces without hair tangling.
- Make sure to adjust the suction level to an appropriate setting when you vacuum-clean a blanket with a thin outer fabric as the cleaner may attempt to suck the outer fabric.

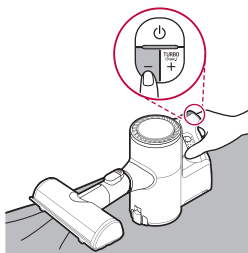

Crevice Tool


It is suitable for cleaning dust in a corner or a narrow space.

Combination Tool

This accessory is helpful for cleaning corners or small gaps.


Basic

For cleaning flat surfaces such as a sofa or mattress.

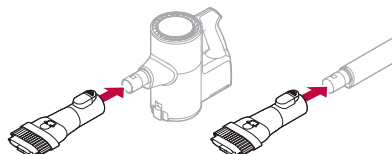

Brush type

For cleaning delicate surfaces such as a frame or furniture.

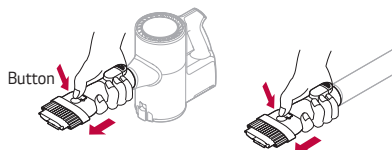

CAUTION

- Prolonged use of the product with an accessory tool attached may over heat the motor.
- Using this accessory tool on a TV, monitor or LCD display may scratch the screen.
- Avoid getting your finger stuck in any gaps when fitting the accessory tools.
- If any foreign object is sucked into the inlet during cleaning, operation of the unit might stop in order to prevent damage to the body, motor or inlet. Immediately stop using the vacuum cleaner and remove the object before resuming cleaning.

Hard Dirt Tool

It is firm bristles for removing dirt from hard surfaces.

Mattress Tool


It is for mattresses and soft furnishing.

Flexible Crevice Tool

Since its length can be adjusted and it can be bent, it is used for cleaning dust inside the vehicle or narrow spaces in furniture where bending is necessary.


1 How to operate the brush

- You can use the brush by holding and pulling the brush fixing unit in the arrow direction.
- You can insert the brush by pressing the button and inserting the brush fixing unit in the opposite direction of the arrow.

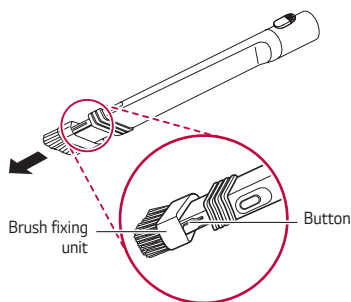

2 How to adjust the length

- Adjust its length by pressing the length extension button and pulling or pushing it to the end.

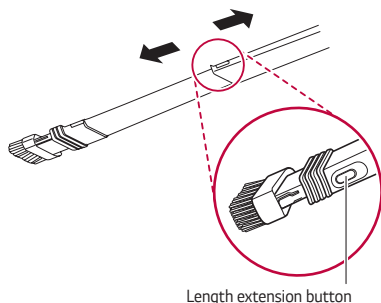

Multi Angle Tool

Since it can be adjusted to various angles and the brush is soft, it is used to clean the console in the vehicle or on top of furniture.

Flexible Hose Extension

Since its length can be adjusted, it is connected with the inlet port and used to clean out of reach places.

* The flexible hose extension is provided only for an applicable model.

Please note

- When the flexible hose extension is used, the Power Drive Floor Nozzle, Power Drive Carpet Nozzle and the Bedding Power Punch do not work.
- Attach the Power Drive Floor Nozzle, Power Drive Carpet Nozzle or the Bedding Power Punch to the body or the extension pipe when using it.

Mop Nozzle

It is suitable for cleaning dust and mop cleaning at the same time.

 
Please note

The mop pads will only rotate at one speed regardless of what power setting the Vacuum is set to.


For mop cleaning

How to fill the water


- 1 Press the PUSH button to separate the mop nozzle and the water tank.



- 2 Open the cap on the side of the water tank.
 - Open one cap only. Opening both caps may cause the water to flush.

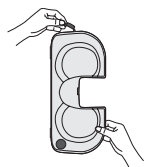

- 3 Fill the water to the MAX line and close the cap tightly. (Using the water filler jug will make the filling of water easier.)

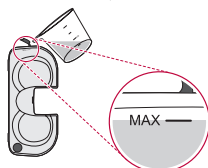

- If the water tank is filled with water and stored, water may slowly drip from the water tank and on to the air intake. When not using the mop nozzle, ensure that the water tank is empty empty.
- If you do not close the cap on the side of the water tank, water may leak.



Good)



Bad)




- 4 Assemble the mop nozzle and the water tank. Insert the 2 bumps in front of the tank and push until a clicking sound is heard.

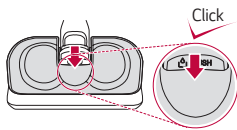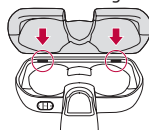


How to install the mop


- 1 Wet the mop pad with water before use.

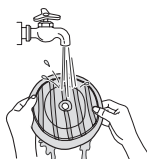

 - 2 Squeeze the mop pad sufficiently to remove liquid.




- 3 Align the center of the mop pad with the center of the mop attachment plate, and have the striped side of the mop face up.

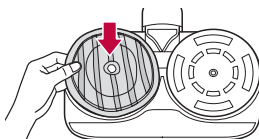


- Fitting the mop plate upside down or failure to attach the mop pad to the attachment plate properly may compromise the cleaning performance.
- Attaching the mop pad in a dry state may compromise the cleaning performance.

※ How to install the mop pad properly

 Good)




Bad)

 

How to adjust the water flow to the Mop Pads

 
The amount of water injected from the mop nozzle can be adjusted.



Used to clean a moisture-sensitive floor or to supply a little amount of water



 
Used to clean ingrained dirt or to supply a large amount of water



Used to stop the supply of water or clean with a dry mop

For dry mop cleaning

 - 1 Empty the water in the water tank.
- 2 Attach the dry mop pad to the mop attachment plate at the bottom of the mop nozzle.
- 3 Set the Water Adjustment button to STOP.



- 4 Turn on the power and begin mopping

WARNING


- Do not insert your hand into the moving rotor. It may result in injury.
- Do not attach the mop pad while the mop nozzle is operating. It may result in injury.

CAUTION

- Do not slam down or throw the mop nozzle onto the floor. Doing so may result in an injury or product damage.
- Do not let the product stand on the floor while the wet mop pads are attached. Doing so may result in damage or swelling to timber flooring.
- Set the Water Adjustment button to STOP when not using the product for an extended period of time. Otherwise it may result in a product failure.
- Do not use any other mop pad other than the one provided.
- Do not put liquid other than water in the water tank.
- Do not put hot water in the water tank.
- Do not step on the mop nozzle. It may result in product damage




- After cleaning, remove the remaining water in the mop nozzle with a tissue before storing. The water may leak and damage the floor.

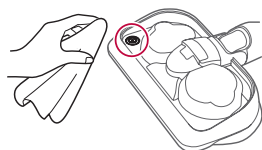


- Do not pull on the marked rubber. It may tear.

Please note


- When using a mop, clean using straight lines and diagonal lines.

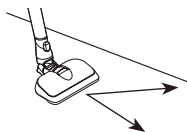

- Wet the mop and squeeze it sufficiently to remove any residual water before attaching the mop. Attaching and using a mop pad in a dry state may compromise the cleaning performance.
- When filling the water tank with water, do not fill the water more than the MAX line.
- Do not separate the cap of the water tank completely.
- Open only one cap of the water tank to fill the water.
- When cleaning is completed, always empty the water in the water tank. Otherwise the water may be contaminated and give off a bad smell. Shake the water tank to remove the remaining water.
- Open the 2 caps on the side of the water tank and dry for over 24 hours in a well-ventilated location with no direct sunlight.
- When cleaning with the mop is finished, separate and wash the mop pads. Otherwise the mop pads may give off a bad smell.
- Do not clean while a soiled mop pad is installed. Cleaning will not be effective.
- From new, the Water Adjustment button is set to Level 1. Press the button according to the amount of water needed.
- When moving around with the mop nozzle, set the Water Adjustment button to STOP.
- If there are foreign objects stuck in the mop attachment plate's rotating mechanism or a strong force or impact is applied to it, the mop attachment plate will stop automatically to protect the product. Press the Power button again to use the product because it is not a failure. Clean any foreign matter from the plate before turning it back on again.
- Use the mop pads for general cleaning or the mop pads for cleaning stubborn stains for their specific purpose to clean more effectively.

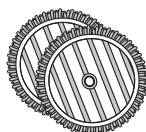

Mop pads for general cleaning

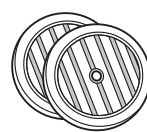


Mop pads for cleaning stubborn stains


MAINTENANCE

Cleaning the the Dustbin


- 1 Remove the battery from the unit before cleaning the dustbin.
- 2 Please empty the dustbin next to a wastebasket or where dust and foreign objects can be emptied easily.
- 3 Press the dustbin button downward to open it.
 - Empty the bin.
 - Be careful as dust/foreign matter may spill out when you open the dustbin.

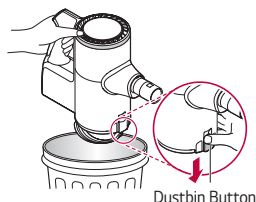


- 4 Insert the crevice tool into the large dust separation device (Cyclonic Mesh Filter) and turn it counterclockwise to remove it. Use the suction end of the crevice tool to do this with ease.

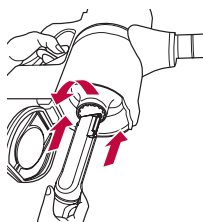

- 5 Wash the large dust separation device (Cyclonic Mesh Filter) with running water.
 - Be sure to dry the device completely before reinserting it.

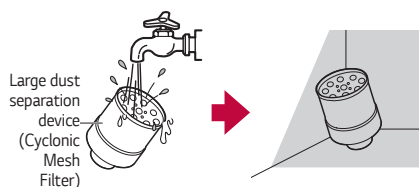

- 6 Remove the Cyclone and use the combination tool to clean out the dust inside the dustbin.

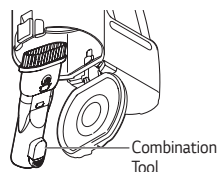


⚠ WARNING

- Never wash the product's body with water. Water may reach the motor and cause electric shock or fire.
- Do not apply force or any impact to the dust bin parts or the Cyclone as it may damage them.
- Use the product only after cleaning the Cyclone and reassembling it on the product. Failure to do so will damage the product.


Cleaning the Filters

The pre-filter and exhaust filter need to be cleaned at least once a month to maintain the cleaning performance of the product. Clean these filters frequently when used in dusty environments and when the cleaner is used regularly.

- 1 Turn the exhaust filter counterclockwise to remove it and take out the pre-filter.

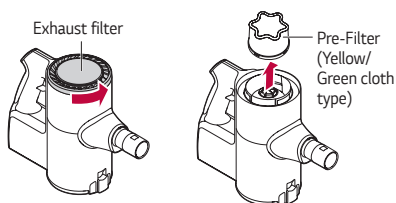

- 2 With the unit upside down, use the combination tool to clear dust from the motor part once the Dust separator filter has been removed.

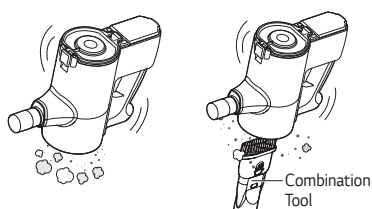


3 Clean the exhaust filter by brushing the dust off or by washing it in running water.

- To maintain cleaning performance, remove the dust from the exhaust filter at least once a month.




- Wash the exhaust filter in running water if it emits an odor.
- The exhaust filter may emit an odor if it is not dried completely after it has been cleaned in water. Make sure to dry it completely for 24 hours in a well-ventilated area out of the direct sunlight before refitting it.

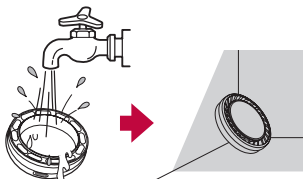

4 Clean the pre-filter by brushing the dust off or by washing it in running water.

- When washing the cloth type pre-filter with water, it must be dried completely in a well-ventilated area out of direct sunlight before reinserting. Failing to do so will cause it to emit odours.
- As a spare pre-filter is provided for your convenience, two pre-filters can be used alternatively if necessary.
- The more often the filters are cleaned, the more optimal the suction power will be.
- Filters are consumables and will wear with time and use. Please purchase more filters from an authorized service center.

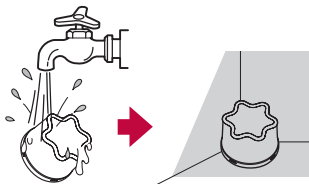

5 To refit the filters, attach the pre-filter first, followed by the exhaust filter, so as to align the white circle near the battery level indicator and then turn it clockwise so that the white circles align with each other.



⚠ WARNING

- Never wash the product's body with water as it may reach the motor and result in electric shock or fire.
- Make sure that no foreign object reaches the motor as it will damage the product and may result in explosion or fire.
- Do not insert a finger or a sharp object near the motor as it will damage the product and may result in injury or electric shock.

⚠ CAUTION


- Make sure to reattach the exhaust filter and pre-filter to the product after washing them. Using the product without these filters will allow dust to reach the motor inside the product and cause malfunction.

Please note

- As too much dust will reduce the suction power, we recommend cleaning the filters before and after using the product.

※ Removing foreign objects from inside the product

In order to maintain product performance, be sure to remove any foreign objects and dust from inside the product (body, pre-filter, extension pipe, inlet port). The foreign materials inside the product can cause the product to shutdown during operation, generate noise, or cause poor suction.

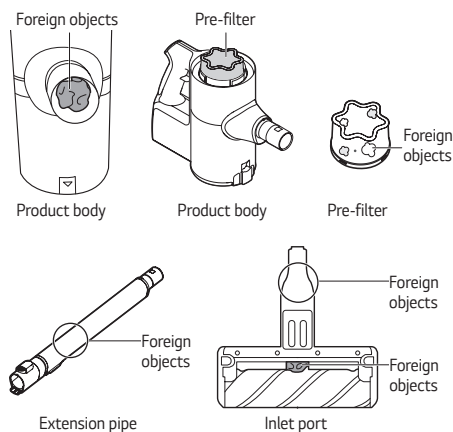


- If the inside of the product body, extension pipe, or inlet port or the pre-filter itself is clogged with foreign objects, the power automatically turns off to protect the product. Separate the battery from the product and remove the foreign objects.


Cleaning the Power Drive Floor/Carpet Nozzle

Please clean the floor and carpet nozzles as follows:


- 1 Remove the nozzle from the product.
- 2 Turn the nozzle upside down and turn the rotating brush removal screw counterclockwise.
 - Use a flat head screwdriver to turn the screw.

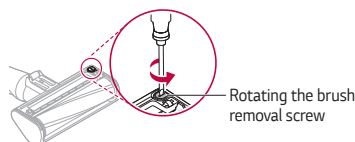


- 3 Pull the brush in the direction of the arrow to remove it.

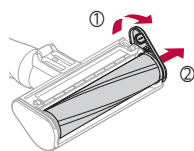


- 4 Attach the crevice tool to the unit and use the vacuum to remove dust/foreign objects from the brush and the bottom of the nozzle.

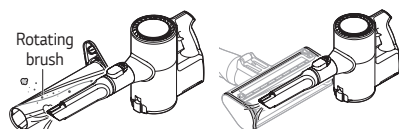

- 5 Use a wet towel or tissue to remove any remaining foreign matter and dust from the brush and the bottom of the nozzle.

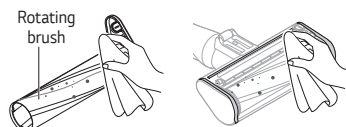

- 6 Assemble the brush in reverse order after cleaning.

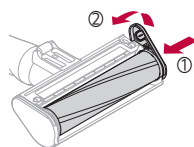


⚠ CAUTION


- Avoid getting your finger stuck in any gaps when reassembling.
- Do not wash the rotating brush and the nozzle with water.
- Do not use the rotating brush as a mop.
- Do not use the nozzle to absorb any liquid.

Cleaning the Bedding Power Punch

- 1 Remove the Bedding Power Punch and turn it upside down.
- 2 Attach the crevice tool to the unit and use the vacuum to remove dust/foreign objects from the bottom of the Bedding Power Punch.

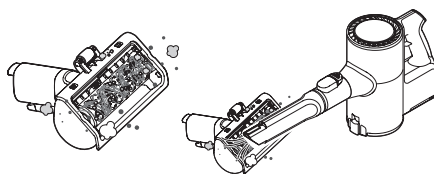

- 3 Use a wet towel or tissue to move any remaining foreign matter and dust.

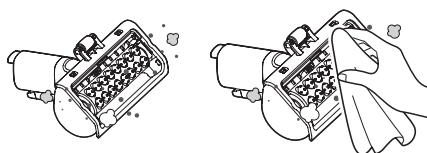


⚠ WARNING

- Do not wash the Bedding Power Punch with water.
- Do not suck any liquids including water into the Bedding Power Punch.


Cleaning the Mop Nozzle

Clean the mop nozzle as below.


- 1 Separate the nozzle from the product and turn the nozzle over.

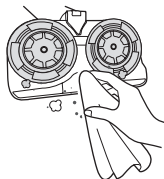

- 2 Attach the crevice tool to the main body of the vacuum to remove any foreign objects from its base.

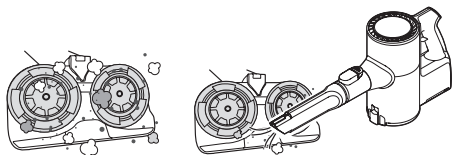

- 3 Remove the remaining foreign objects using a wet wipe or a tissue.

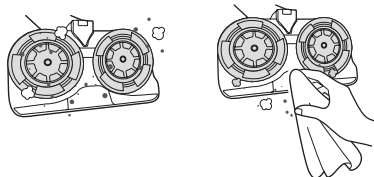

※ Foreign matter remaining on the nozzle may result in a bad smell.

WARNING


- Make sure to separate the nozzle from the main body or separate the battery before cleaning. Otherwise the mop attachment plate may rotate and result in injury.

CAUTION

- Do not clean or submerge the nozzle with water. It may result in product damage.

Drying the water tank

Open the 2 caps on the side of the water tank and shake the water tank to remove the remaining water. Drying thoroughly for over 24 hours in a well-ventilated location with no direct sunlight is effective to remove moisture from the water tank.

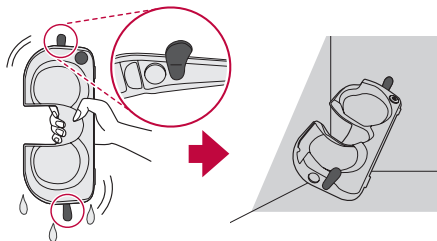

Please note

- When cleaning is completed, always empty the water in the water tank. Otherwise the water may be contaminated and give off a bad smell.

CAUTION

- Turn the direction of the cap to prevent the cap of the water tank from being closed.
- Do not separate the cap of the water tank completely.
- Do not add detergent, vinegar or baking soda to the water tank when washing.

POINTS TO CHECK BEFORE CONTACTING CUSTOMER SERVICE.

Please check once again if one of the following symptoms is present while using the product. The product may not be malfunctioning.

Symptom	Cause	Solution
The product does not operate.	Is the battery fully discharged?	Charge the battery.
	Is the product powered off?	Press the power button to power on the product.
Suction is too weak.	Is the dustbin full of dust?	Empty the dustbin.
	Is the filter clogged?	Clean the pre-filter and the exhaust filter.
	Is the inlet clogged?	Remove the extension pipe, remove any foreign objects from the product body.
	Is there a foreign object on the rotating brush of the inlet port?	Make sure to remove any foreign objects (thread, hair) from the rotating brush.
The unit does not appear to be charging.	Is the power adapter connected to the charging station?	Make sure that the adapter is properly plugged into the charging station.
	Is the power cord plugged into the outlet?	Make sure that the power cord is properly plugged into the power outlet.
	Is there any foreign object on the charging terminals?	Remove any foreign objects from the charging terminals with a dry cloth.
Hot air is expelled from the unit.	Is it operating properly?	The hot air originates from cooling of the motor and is not a sign of malfunction.
A strange odor is coming from the product.	Did you purchase the cleaner within the last 3 months?	The cleaner may emit a smell of rubber for about 3 months after purchase.
	Is it operating properly?	If the cleaner is working fine, it is not malfunctioning.
	Is the dustbin full of dust?	Also, dust in the bin may cause some odor. Empty the bin and clean it.
	Are there any foreign objects in the filter?	The filter may emit an odor if it has not been cleaned for some time. Clean both the pre-filter and the exhaust filter.
	Is the pre-filter wet?	Washing the pre-filter with water and not leaving it long enough to dry completely may cause it to smell. Make sure to dry it completely before reassembling it on the cleaner.
	Is the exhaust filter wet?	Washing the exhaust filter with water and not leaving it long enough to dry completely may cause it to smell. Make sure to dry it completely before reassembling it on the cleaner.
	Are there any foreign objects on the dust inlet of the mop nozzle?	Wet dust in the mop nozzle may result in odour. Make sure to wipe the dust inlet of the mop nozzle with a wet wipe before use.



Symptom	Cause	Solution
The cleaner makes too much noise.	Is it operating properly?	Different levels of noise is normal during operation due to three power settings. It is not a sign of malfunction.
The unit powers off too soon or by itself after the motor speed fluctuates repeatedly.	Is the battery fully charged?	The battery must be fully charged before cleaning. If the problem persists even though the battery is fully charged, and the pipes and attachments are clear from obstructions, then please contact LG customer service
	Is there any foreign substance in the body of the product, extension pipe, or inlet port?	Remove the foreign objects from the body of the product, extension pipe, or inlet port.
	Is the filter clogged?	Clean the pre-filter and the exhaust filter.
The rotating brush does not rotate.	Is the brush properly attached?	Remove the brush, clean it if necessary and attach it again.
	Are there any foreign objects on the rotating brush?	Remove any foreign objects from the rotating brush.
The mop pad attachment plate does not rotate.	Did you press the mop nozzle hard?	The mop attachment plate stops automatically to protect the product. This is not a failure. Press the power button again to use the product.
	Are there any foreign objects between the mop attachment plate?	Remove foreign objects from the mop nozzle attachment plate and press the power button again to use the product.
There is no water coming out of the mop nozzle.	Is the water tank filled?	In order for the water to come out of the mop nozzle, the water tank should be filled.
	Is the water tank properly attached to the mop nozzle?	In order for the water to come out of the mop nozzle, the water tank should be properly attached to the mop nozzle.
	Is the Water Supply Adjustment button on?	- The water will not come out if the button is set to STOP. - Press the Water Supply Adjustment button according to the type of cleaning.
There is moisture in the water tank.	Have you thoroughly dried the water tank?	- The water tank will become moist if the water tank is containing water. - Dry the water tank properly in a shadow.
Using the mop nozzle makes the floor dirtier.	Did you clean the mop before use?	- Cleaning with a soiled mop may make the floor dirtier. - Clean the mop before use.

DISPOSAL INFORMATION

Disposal of old products not related with the purchase of a new product

You must contact your local city council or the related government authority before disposing of large appliances.

PRODUCT SPECIFICATIONS

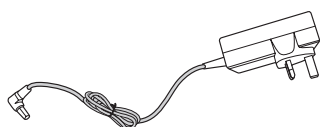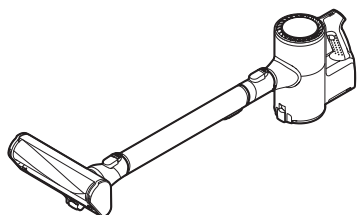

Item/Model	A9****
Dimensions	260 mm(W) X 270 mm(L) X 1120 mm(H)
Weight	2.7 kg
Power consumption:	400 W (Maximum power: 450 W)/ 250 W/ 80 W (Turbo/Power/ Normal)
Suction power	140 W ¹⁾
Battery	DC 25.55 V
Battery runtime ²⁾ (When fully charged, and without using the Power Drive nozzles ³⁾)	Approx. 6 minutes in Turbo
	Approx. 9 minutes in Power
	Approx. 40 minutes in Normal
Battery runtime ²⁾ (When fully charged, and using the Power Drive nozzles ³⁾)	Approx. 6 minutes in Turbo
	Approx. 9 minutes in Power
	Approx. 30 minutes in Normal

Item	Charger (Adaptor)
Input	100 V - 240 V~ 50/60 Hz, 0.8 A
Output	DC 29.4 V 1.0 A

Item/Model	Battery
Type	Rechargeable Li-ion Battery
Rated	DC 25.55 V , 2000 mAh, 7 cells

1) Suction Power test based on IEC 62885-2, 5.8.

2) Test result according to our test standard, it may be different depending on actual use environment and period of use.

3) Floor, carpet, bedding, mop only (suction port may vary by model)

Note

Note

Note

LG CordZero™

用戶手冊

A9

開始使用本產品之前，請務必仔細閱讀「安全注意事項」。

請將本用戶手冊放在用戶伸手可及之處。

本產品僅適合家用（如家居清潔），不得用於商業、
實驗或工業用途。

購買後首次使用產品前，請務必對產品的電池充滿電。

安全注意事項	04
包裝資訊	11
安裝	13
安裝落地式充電座	13
安裝掛牆式充電座	14
簡易式充電	14
存放二合一吸頭與縫隙吸頭	15
存放地拖吸頭	15
清潔墊存放	15
使用方法	16
有關使用本產品的說明	16
使用本產品	16
為產品充電	17
電源/吸力強度按鈕	17
使用吸頭	18
維護	22
清潔集塵箱	22
清潔過濾器	22
清潔地板及地毯專用吸頭	24
清潔震動寢具吸頭	24
清潔地拖吸頭	25
聯絡客戶服務之前要檢查的要點。	26
處理資訊	28
處理與所購新產品無關的舊產品	28
產品規格	28

安全注意事項

以下注意事項旨在透過確保安全並正確使用本產品來保護您免受非預期風險或財產損失。

注意事項分為「警告」和「注意」，是指：



象形圖旨在吸引用戶注意可能對其構成風險的事項與用途。請務必仔細閱讀標有此符號的任何項目並遵守該項目以防止產生任何風險。



警告

不遵守此警告可能對用戶造成嚴重損害、傷害甚至死亡。



注意

不遵守此警告可能導致產品損壞或對用戶造成中度傷害。

⚠ 警告

1. 除非有負責其安全的人員給予有關使用本電器的監督或指引，否則身體、感知或心理能力較弱者或缺乏經驗及知識的人群（包括兒童）不宜使用本電器。
2. 應監督兒童，避免其把玩該電器。
3. 如果電源線損壞，必須由 LG Electronics 服務代理商更換，以避免發生潛在危險。
4. 如果監護人監督用戶使用或指導其以安全的方式使用本裝置，並讓其瞭解到相關危險，本裝置才可由 8 歲或以上兒童，以及生理、感觀、心智能力不足的人員使用。兒童不得玩耍本裝置。不得讓兒童在沒有監督的情況下進行清潔或用戶保養。

安裝與使用

請勿在可能暴露於水、雨水或十分潮濕的地方安裝、存放本產品或對其充電。請勿在任何戶外場所、車間或車庫環境中使用本產品。

- 此類條件容易使產品在對電池充電時發生火災。
- 請在通風良好的地方安裝、存放本產品或對其充電。

確保避免可能存在易燃氣體、工業用油或金屬粉塵洩漏的地方。

- 可能導致產品故障或損壞。

如果您打算以垂直「站立」（落地式）的方式使用充電座，請確保使用適當類型的螺絲將其固定在牆壁上。

- 否則，充電座或產品可能發生傾斜並損壞或造成財產損失或傷害。

請將充電座放在平坦的表面上。

- 否則可能跌落並造成損壞或傷害。

如果您打算將充電座安裝在牆壁上（掛牆式），請確保使用適當類型的螺絲將其牢固固定在牆壁上。

- 否則可能損壞產品及/或造成傷害。

請僅在混凝土或足夠堅固的牆壁使用固定螺絲。

- 如果在不適合的牆壁上安裝充電座，可能造成傷害或財產或產品損壞。

切勿在後裝有任何管（天然氣、水、空氣）或電源線或電線的牆壁上安裝充電座。

- 有觸電傷害、火災或水浸的風險。

請勿在低於 5°C 或高於 38°C 的溫度下使用或存放本產品。

- 否則可能損壞本產品。

電源要求

本產品只能使用 AC 220 V 的電源。請務必檢查您打算使用本產品的地區的電源規格。

- 規格不當會引發短路，進而導致觸電或損壞產品。

請勿對電源線施加過大的力以使其彎折，或將其置於重物下，否則會損壞電源線。

- 電源線可能被損壞並導致觸電或傷害。

請勿在一個電源板或充電座中使用多個電器，並確保使用容量為 10A 的充電座。

- 否則可能因插座異常過熱而引發火災。
- 否則可能啟用斷路器，導致斷電。

切勿用濕手觸摸電源線及插頭。

- 可能導致傷害或觸電。

請清除電源線上的灰塵或水，並用乾布塞住。

- 否則可能導致觸電、短路或火災。

按下電源線時，切勿拉扯電源線並始終握住電源插頭。

- 否則會損壞電源線並可能導致觸電或火災。

如果電源線或電源插頭損壞或充電座孔鬆動，請停用本產品並聯絡 LG Electronics 的客戶服務部門。

- 否則可能導致觸電或火災。

清潔或維護充電座時，請務必拔下電源線。

- 否則可能導致傷害或觸電。

如果長時間不使用本產品，請務必拔下電源線。

- 否則可能導致觸電、短路或火災。

使用或清潔產品時，請務必整理變壓器的電源線。

- 否則，電源線可能與產品纏結在一起，並在斷開或折斷時導致故障、觸電或傷害。

拔下電源線時，請避免用手指觸摸電源插頭的插腳。

- 否則可能導致觸電或火災。

使用、充電或存放時，請勿讓兒童或寵物靠近本產品。

- 可能損壞產品及/或導致傷害。

請勿在充電座中有電池的情況下將充電座倒置。

- 否則可能損壞產品及/或導致傷害。

正確使用

確保不讓兒童使用本產品。

- 本產品太重，兒童無法搬運。

在使用或清潔本產品時，確保手、腳、頭髮或衣服不被卡在旋轉的刷子或輪子中。

- 否則可能損壞產品或導致傷害。

除 LG Electronics 的合資格技術人員/維修工程師外，其他人不得拆卸、維修或改裝本產品。

- 請勿嘗試自行拆卸或維修產品，否則可能導致觸電、傷害或火災。

切勿將電池、充電座和變壓器與本產品以外的其他設備結合使用。

- 可能導致產品故障或火災。

請勿在本產品中使用其他設備的電池。

- 可能導致故障或火災。

請勿隨意拆卸、移除電池或使其短路。

- 否則可能導致觸電、傷害或火災。

請勿對電池加熱或撞擊電池。

- 可能導致觸電、傷害或火災。

切勿將尖銳的金屬物體（如別針、釘子或刀片）插入本產品或充電座的孔或間隙中。

- 否則可能導致受傷或觸電。

請勿使用本產品對液體進行真空吸塵。確保產品或充電座內沒有水、飲料或洗滌劑。

- 否則可能導致傷害或觸電。

請勿在本產品上塗抹或噴灑易燃物質（汽油或稀釋劑）或表面活性劑（洗滌劑或沐浴皂）。

- 可能導致故障或火災。

如果發生燃氣洩漏（丙烷或城市燃氣），請務必先讓該區域通風，而不要接觸本產品或其電源插頭。

- 否則，可能產生火花，進而導致爆炸、火災或傷害。

請勿讓液體污染地拖吸頭上部。請勿清潔濕地板。

- 否則可能損壞產品或導致觸電。

請勿在本產品附近使用或存放加熱裝置或易燃物質（乙醚、苯、酒精、化學品、可燃噴霧劑、殺蟲劑、空氣清新劑或化妝品）。

- 可能導致產品故障或火災。

請勿嘗試使用本產品清理液體物質（水、飲料）、變味物質（糖果、巧克力、寵物排泄物等）、金屬物體（如刀片、別針）、易燃物質、表面活性劑或玻璃碎片。

- 可能導致產品故障或火災。
- 如果任何液體、金屬物體、玻璃碎片或火花進入產品內部，請立即關閉產品電源並聯絡 LG Electronics 的客戶服務部門。

請勿在排氣口或進氣口堵塞的情況下使用本產品。

- 會造成產品過熱並導致故障或火災。

如果產品在充電時發出煙霧，請立即拔下電源線並聯絡 LG Electronics 的客戶服務部門。

- 否則可能造成觸電或火災。

請勿將本產品（特別是電池）暴露於高溫、加熱裝置或陽光直射下。

- 否則可能導致觸電、爆炸或火災。

請勿將本產品或其電池放在暴露於直射陽光下的車輛內。

- 可能導致火災或爆炸。

如果某種液體從電池洩漏，請確保不要接觸皮膚或眼睛。

- 可能灼傷皮膚或嚴重損害眼睛。
- 如果電池中的液體與部份皮膚接觸，請立即用大量清水沖洗並就醫。

請勿用水或清潔劑清洗進氣口。

- 由於進氣口包含摩打，可能導致觸電或火災。

務必使用產品隨附的充電座和變壓器為產品及其電池充電。

- 使用隨附的充電座和變壓器以外的任何充電裝置，均會損壞電池並導致觸電、爆炸或火災。

切勿讓任何水、飲料或洗滌劑進入電池內部。

- 可能導致觸電、爆炸或火災。

請勿觸摸產品或充電座上的充電端子，或在產品或充電座內插入帶電物體。

- 否則可能導致受傷或觸電。

不使用時，請始終將產品放在落地式或掛牆式充電座上。請勿將產品放在未固定到牆壁的充電座上或充電座支架上。

- 否則，本產品可能跌落並受損或造成傷害。

如果在將產品放置在充電座上期間接地漏電斷路器被啟用，請立即從充電座上取下產品並聯絡 LG Electronics 的客戶服務部門。

- 否則可能造成觸電或火災。

請勿用水清洗集塵箱。

- 水會進入摩打並導致觸電或火災。

請勿嘗試使用產品吸附水泥等細小灰塵。

- 可能導致產品故障或火災。

確保兒童不玩弄產品、充電座或電池。

- 可能損壞產品並造成傷害。
- 如果兒童將產品或電池放入口中，將導致觸電或傷害，或損壞產品或電池。

使用本產品時，請從充電座底部取下所有電線或繩索。

- 帶子或電線可能纏繞在產品周圍，導致產品故障或電線折斷。

注意不要讓手指夾在吸頭的彎曲部分。

- 否則可能導致受傷。

請勿用地拖吸頭吸入玻璃碎片、電線、刀片等尖銳物體。

- 可能導致人身傷害或產品損壞。
- 特別注意若有尖銳物體被吸入之後，在使用後清潔吸頭時可能會對人體造成傷害。

處理

請妥善丟棄包裝材料（乙烯塑料、泡沫塑料），以免兒童接觸到它們。

- 此類材料可能導致兒童窒息。

處理產品時，請務必從產品的主機中取出電池。

- 否則可能導致火災或爆炸。

⚠ 注意

正確使用

請勿撞擊產品或從高處跌落。

- 可能損壞產品及/或導致傷害。

確保產品不會跌落。

- 否則可能導致傷害或損壞本產品。

確保在每次使用之前將過濾器安裝在產品中。

- 未安裝過濾器可能導致產品故障。

在使用本產品之前，請務必從地板上擦去水、油或寵物排泄物等液體。

- 此類物質會導致設備故障或造成無法修復的損壞。

請勿使用揮發性或有機溶劑（稀釋劑或丙酮）清潔本產品。

- 可能損壞產品。
- 務必使用軟布清潔本產品。

使用本產品時，請務必避免撞到人或寵物。

- 可能造成傷害。

請勿踢打或撞擊本產品。

- 可能導致產品故障。

請勿在充電座上放置產品以外的任何物體，尤其是金屬或磁性物體。

- 否則可能損壞產品或導致觸電。

請勿長時間反復清洗同一個地方。

- 來自進氣口或旋轉刷的振動可能損壞地板或地毯。

組裝產品或充電座時，確保手指不被卡住。

- 可能傷害您的手指。

請勿讓兒童或寵物依附在充電座上。

- 否則可能導致傷害或損壞本產品。

請勿將雙面膠紙直接貼在牆紙上，因為牆紙可能被外力撕裂。

- 使用牆壁錨固螺絲固定充電座，以防止牆紙撕裂。

請勿撞擊過濾器零件或集塵箱零件或對它們施加壓力。

- 此類部件可能變形、影響性能或導致設備故障。

操作期間不要取出電池。

- 可能導致產品故障。

如長時間使用產品而令摩打過熱，安全裝置會關閉本產品，以防止產品溫度上升。

- 在陰涼、通風良好處冷卻約 1 小時後再打開電源。

當地拖吸頭(及水箱)安裝在產品上時，切勿將其放到充電座上。

- 水可能滲漏並損壞地板。

請勿將水箱存放在溫度為 0°C 或以下的地方。

- 可能導致產品損壞。

請勿長時間反復清洗同一處。

- 否則可能因吸入由吸頭注水口弄濕的灰塵而損壞主機。

除清潔之外，請勿將地拖吸頭用於任何其他目的（如拋光汽車、清潔窗戶）。

- 可能導致產品損壞。

請勿踩踏地拖吸頭。

- 可能導致產品損壞。

請勿使用地拖吸頭吸取液體。

- 可能導致產品損壞。

使用地拖吸頭時，必須安裝清潔墊。

- 否則可能損壞地板或地毯。

請勿用地拖吸頭清潔地毯。

- 地毯可能弄濕或粘在魔術貼上，導致地毯受損。


請勿清潔帶有塗層的地板。

- 如反復使用，塗層可能剝落。


請勿清潔浮動地板。

- 地板可能受損。

落地式

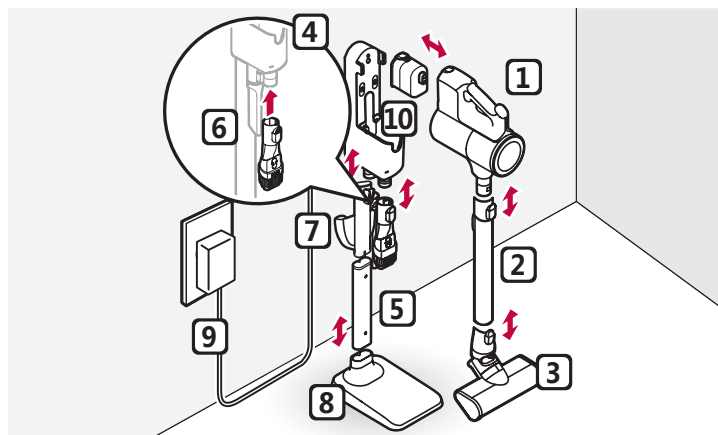

掛牆式

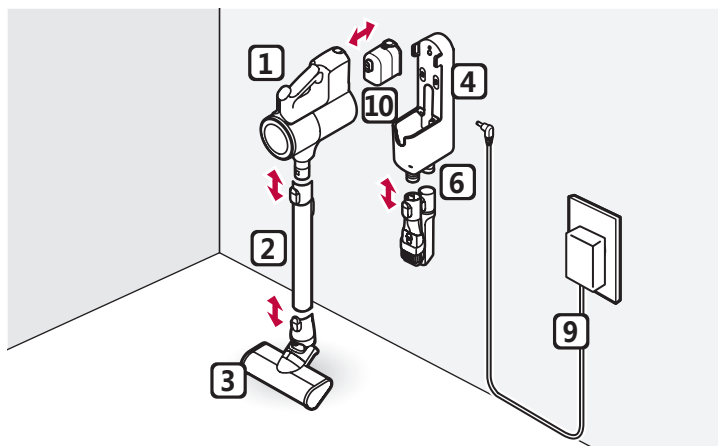

- | | | |
|--------|-----------------|---------|
| 1 主機 | 5 充電座管 | 8 充電座支架 |
| 2 延長管 | 6 二合一吸頭與縫隙吸頭置放處 | 9 變壓器 |
| 3 地板吸頭 | 7 吸頭收納架 | 10 電池 |
| 4 充電座 | | |

附件

 
• 零件與配件可能視乎您購買的型號而不同。




主機



延長管



地板吸頭

 


充電座




變壓器



 電池



縫隙吸頭

 

二合一吸頭



掛牆定位模塊



雙面膠紙 (2)



螺紋膠塞 (2)



 
掛牆式安裝用固定螺絲 ($\Phi 3.5\text{mm}$, 長度 50 mm) (2)




落地式安裝用固定螺絲 ($\Phi 3.5\text{mm}$, 長度 90 mm)



前導濾網 (備件)



充電座管

 

充電座支架


• 請注意，配件會按個別型號而有所不同。




硬污垢工具



床墊工具

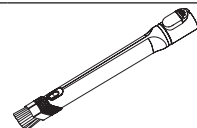

柔性縫隙工具

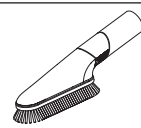


多角度工具



柔性軟管延伸件



 電池



地毯專用吸頭




震動寢具吸頭




地拖吸頭




配件包

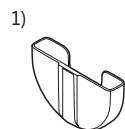


清潔墊的可拆卸支架

 

地拖吸頭的可拆卸支架

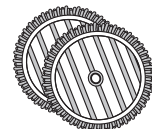

標準清潔墊 (2 個)

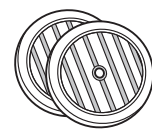

強力清潔墊 (2 個)




注水壺

1) 部份型號的地拖吸頭與清潔墊支架會在組合後發售。


安裝落地式充電座

- 1 將充電座支架放在地板上，依次組裝充電座管、地拖吸頭和清潔墊的可拆卸支架以及充電座。

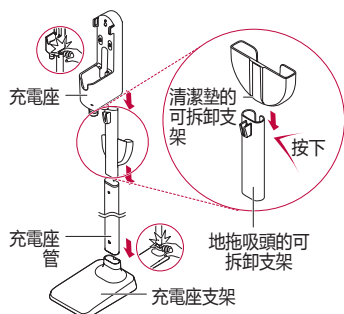


⚠ 注意

- 避免手指卡入任何縫隙。
- 2 將電源變壓器連接到充電座背面的連接埠，然後將電源線插入充電座。
- 將電線穿過充電座管背面的電源線固定環，整齊地固定電線。

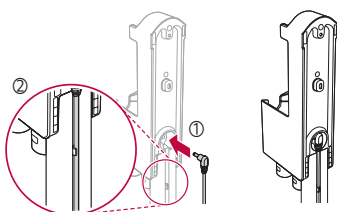


- 3 確保牆壁內部沒有管道或電線之後，於適當高度鑽一個孔以固定充電座並插入螺紋膠塞。
- 建議孔徑：Φ6.5；建議深度：100 mm。

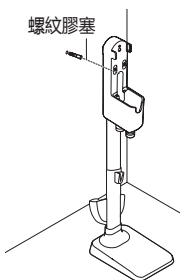

- 4 將錨塊放在充電座的背面，並用螺絲固定充電座。


- 確保螺絲完全擰緊。

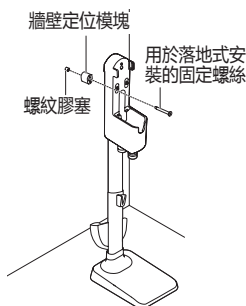


使用雙面膠紙時（如果牆壁貼有牆紙，請不要使用）

- 1 在第 4 步，使用雙面膠紙將牆壁定位模塊連接到充電座。

- 安裝前須除去雙面膠紙的中央部份。

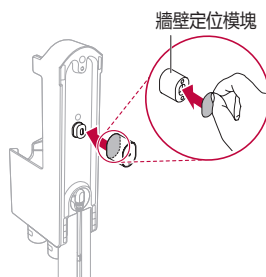

- 2 插入螺絲之前，使用膠帶的剩餘部份將充電座固定在牆壁上。

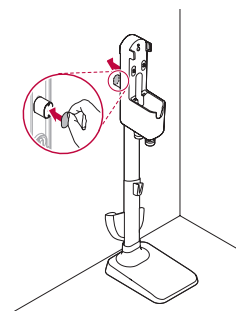


⚠ 注意

- 從包裝中取出產品和零件時，請避免跌落。跌落可能損壞產品及/或造成傷害。
- 請勿使用雙面膠紙將充電座固定在貼有牆紙的牆壁上。請使用隨附的螺絲，否則在對接設備的過程中，牆紙會因充電座的移動而撕裂。
- 建議您使用固定螺絲固定充電座。
- 僅在混凝土或足夠堅固的牆壁使用固定螺絲。不合適的牆壁可導致安裝件變弱並造成充電座跌落，進而造成傷害或損壞財產或產品。
- 請勿將產品或電池存放在配件包中，但進氣口和柔性軟管延長件除外。
- 注意不要扔或摔攜帶配件（如進氣口）的配件包。可能損壞產品及/或造成人身傷害。
- * 配件包僅在部份型號提供。


請注意

- 充電座、其管及支架一旦組裝完畢，就不能單獨拆卸，並且充電座已安裝在牆壁上。
- 如需要，充電座和地拖吸頭支架可與充電座道分開。當充電座支架處於固定狀態時，向上拉出充電座並依次將其分開。

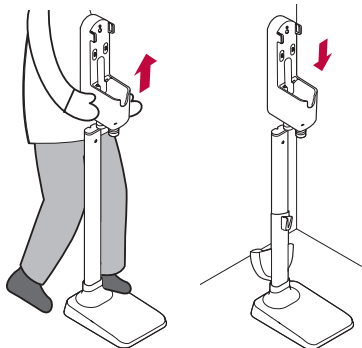

安裝掛牆式充電座

- 1 將電源變壓器連接到充電座背面的連接埠，然後將電源線插入充電座。
- 2 確保掛牆安裝處的牆壁內沒有電線或水管。利用電鑽或螺絲批在離地面1米處鑽一個孔，插入螺絲膠塞或螺絲固定器。
 - 建議孔徑：Φ6.5；建議深度：60 mm。
- 3 使用隨附的固定螺絲將充電座固定到牆上。

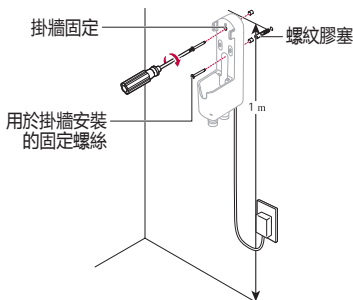


請注意

- 合資格安裝人員要求更改充電座的安裝位置之維修請求將產生額外的費用。
- 地拖吸頭與清潔墊的可拆卸支架一但組裝，就無法再分開。

簡易式充電

將主機跟延長管及吸頭分開後，讓主機在充電座上繼續充電。

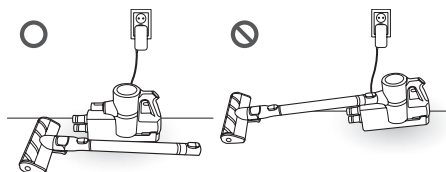


⚠ 注意

- 長時間讓延長管與吸頭處於組合狀態，可能損壞本產品。


存放二合一吸頭與縫隙吸頭

將二合一吸頭與縫隙吸頭放在充電座上以便於操作。

 - 1 將二合一吸頭與縫隙吸頭連接到專用收納處。




- 2 按住進氣口移除按鈕並向下拉，以取下二合一吸頭或縫隙吸頭。

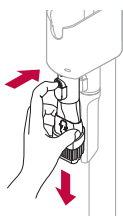

另外提供的噴嘴可存放在配件包中。


* 配件包僅針對適用型號提供。請勿將配件包用於存放噴嘴之外的用途。

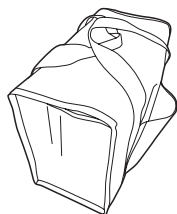


存放地拖吸頭吸

地拖吸頭放在吸頭收納架上，收納使用更方便。

- 1 將地拖吸頭安裝到收納架上。

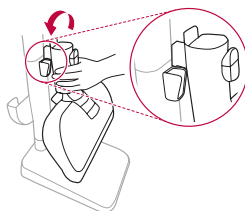


- 2 從收納架提起地拖吸頭。

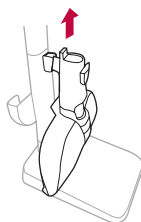

* 也可存放強力驅動地毯噴嘴。

清潔墊存放

將清潔墊存放在清潔墊的支架上，收納或使用時更方便。最多可存放 2 個清潔墊。

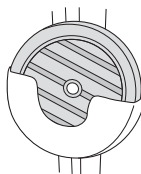

- 清潔墊在使用後須清洗並晾乾，然後再存放。沒有適當晾乾的清潔墊，會散發出異味。
- 建議使用 pH 中性洗滌劑清洗清潔墊。
- 清洗拖把清潔墊時，請勿使用漂白劑或衣物柔順劑。
- 建議不要使用乾衣機烘乾清潔墊。
- 請勿用開水加熱清潔墊。可能導致清潔墊變形。

使用方法


有關使用本產品的說明

使用本產品時需要注意的要點


- 使用本產品之前，請確保集塵箱蓋已鎖上。否則，吸力強度會下降，清潔效果不理想。
- 清潔較高的表面時支撐產品底部。
- 如果本產品長時間無人看管或不使用，請務必將其正確放置在充電座上或放在地板上。否則，產品可能跌落受損或造成傷害。
- 使用本產品之前，請確保已正確組裝排氣過濾器。
- 溫度與濕度等環境條件可能導致產品上積聚靜電。如果問題仍存在，請聯絡 LG Electronics 的客戶服務中心。
- 進氣口或延長管上的異物會妨礙產品正常工作。使用本產品之前，請務必清除任何異物，如短襪或長襪。
- 由於其特性，長時間反覆使用本產品後，電池運行時間將會縮短。
- 當電池在使用過程中即將完全耗盡電量時，電池指示燈上的最後一格電量將開始閃爍，一會兒後產品將關閉。在此情況下，請為電池充滿電。
- 請在正常室溫下使用本產品，因為如果產品長時間在低於 5℃ 或高於 38℃ 的溫度下使用，電池運行時間會大幅縮短。
- 如需電池運行時間的詳情，請參閱產品規格。
- 這些運行時間僅供參考，視乎表面類型可能較少。
- 建議在主機上的電池和輔助充電座上的電池依次切換，以維持電池的使用壽命。（僅適用於雙電池型號）

使用本產品


- 1 依照順序組裝主機、延長管、進氣口及電池。

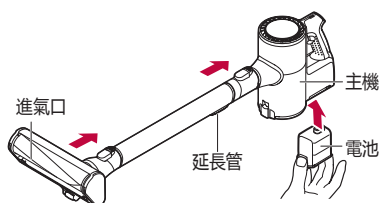

- 2 按延長管上的按鈕以調節其長度。
 - 延長管有 4 個可延伸的長度位置

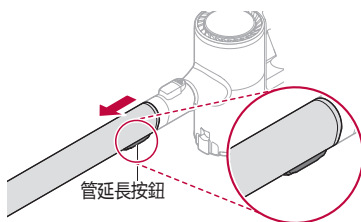

- 3 將配連接到主機或延長管。

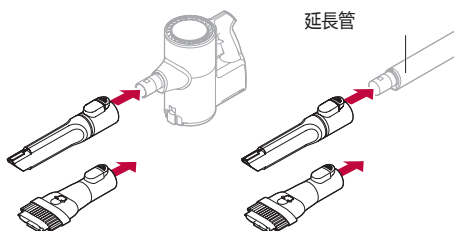


⚠ 注意


- 在連接配件工具的情況下長時間使用本產品可能致使摩打過載。
- 使用進氣口清潔電視、顯示器或液晶顯示屏可能劃傷屏幕。
- 在組裝配件時，請務必小心，避免手指卡入任何間隙。
- 如果在清潔過程中進氣口吸入任何異物，真空吸塵機的操作可能停止，以防止損壞主機或摩打。繼續清潔前，立即停止使用吸塵機並清除異物。

為產品充電

 - 1 將本產品放在充電座上。
 - 電池指示燈將開始閃爍，充電將分 3 階段進行。



- 2 電池指示燈開始閃爍，充電開始。
 - 電池充滿電後，所有指示燈都會保持常亮狀態。

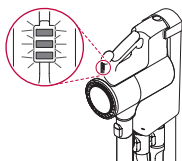

⚠ 注意


- 確保將設備牢固地安裝到充電座上。否則，產品可能跌落並受損。

請注意


- 如果環境溫度低於 5°C，電池不會充電。電池僅在環境溫度介於 5°C 和 38°C 之間充電。
- 如果產品已充滿電、從充電座取出並很快再次充電，電池指示燈將閃爍。閃爍很快停止，指示燈保持常亮狀態。

給輔助電池充電

- 1 握住產品並按下電池的兩端以拉動電池。

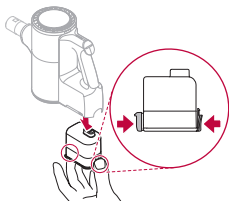

- 2 將電池插入輔助充電座。

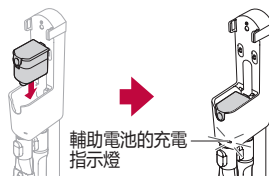


請注意

- 確保電源變壓器已連接到充電座及充電座。
- 如果主電池正在充電座充電，則只有在主電池充滿電後，輔助電池才會開始充電。
- 充電開始時輔助電池指示燈閃爍。
- 當輔助電池充滿電時，指示燈將保持常亮狀態。
- 對單個電池充滿電通常需要 3.5 小時，但如果您使用已放電的輔助電池充電，則需要兩倍的時間。

電源/吸力強度按鈕

您可使用手柄上的吸力強度按鈕調節吸力強度。

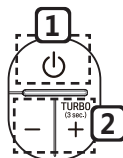

① 電源開/關按鈕

- 按電源開/關按鈕以啟用一般模式。

② 模式按鈕

- 按「+」一次啟用強效模式。
- 按住「+」3 秒以上啟用Turbo模式。
- 按住「+」按鈕時，設備將花費一些時間從一般模式切換到Turbo模式。
- 按「-」從Turbo模式切換到強效模式，或從強效模式切換到一般模式。

使用吸頭

- 請注意配件會按個別型號而有所不同。
- 吸頭可連接到主機或延長管使用。
- 在清掃地板、地毯或寢具時，如出現吸力過強而卡住；或無法吸起塵粒時，請調節吸力度後用。

⚠ 注意

- 請勿將本產品用於家庭以外的任何用途。

地板吸頭

- 適用於清潔地毯。
- 可用於清潔硬地板，但會產生一些噪音。

⚠ 注意


- 請勿在兒童遊戲墊 (PVC) 上使用此吸頭。

地毯專用吸頭 (僅限部份型號)

- 適合清潔硬地板表面。

震動寢具吸頭 (僅限部份型號)

- 震動寢具吸頭可更有效地清潔床單與被套。此配件可從各種表面清除寵物毛髮，而不會導致毛髮纏結。
- 當在清潔質料較薄的床上用品時，請先調整至適當吸力，以免吸塵機把布料吸入。

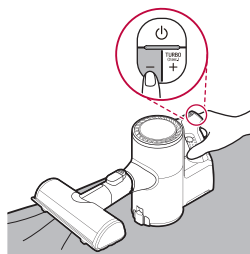

縫隙吸頭


適合清潔角落或狹窄空間的灰塵。

二合一吸頭

此配件有助於清潔角落或小間隙。


基本

用於清潔平面，如梳化或床褥。

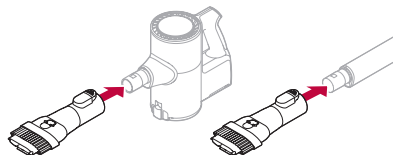

刷頭類型

用於清潔相架或傢俱等脆弱表面。

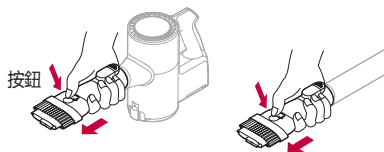

⚠ 注意

- 長時間使用連有配件工具的產品可能令摩打過熱。
- 在電視、顯示器或液晶顯示屏上使用此配件可能劃傷屏幕。
- 安裝配件工具時，避免手指卡入任何縫隙。
- 如果在清潔過程中進氣口吸入任何異物，設備會停止運作，以防止損壞主機、摩打或進氣口。繼續清潔前，必須先停止使用吸塵機並清除異物。

硬污垢工具

採用緊實刷毛，用於去除硬表面上的污垢。

床墊工具


適用於床墊及軟質傢俱。

柔性縫隙工具

由於其長度可調且可彎曲，因此適合清潔車輛內的灰塵或傢俱內需要彎曲的狹窄空間。


1 如何操作刷子

- 您可握住刷子固定裝置並沿箭頭方向拉動來使用刷子。
- 您可透過按下按鈕並沿與箭頭相反的方向插入刷子固定裝置來插入刷子。

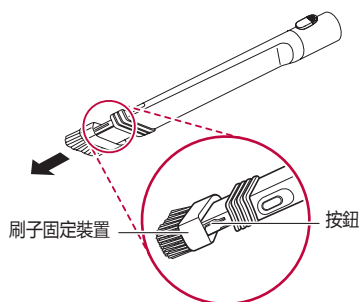

2 如何調節長度

- 透過按長度延伸按鈕並將其推拉至末端，調節其長度。

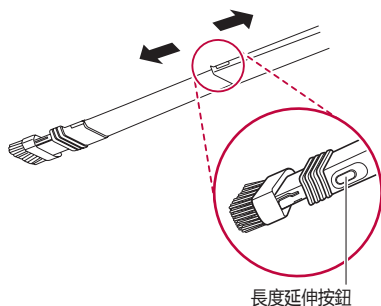

多角度工具

由於可調節到各種角度並且刷子比較柔軟，因此適合清潔車輛中控台或傢俱頂部。

柔性軟管延伸件

由於其長度可以調節，因此與進氣口連接並用於清潔無法觸及之處。

* 柔性軟管延伸件僅針對適用型號提供。

請注意

- 使用柔性軟管延伸件時，強力驅動地板噴嘴、強力驅動地毯噴嘴及床具震動刷不起作用。
- 使用時，將強力驅動地板噴嘴、強力驅動地毯噴嘴或床具震動刷連接到主體或延長管。

地拖吸頭

適用於同時清潔灰塵及拖地。

 
請注意

無論吸塵機的吸力設定在任何等級，地拖吸頭均以相同速度運轉。


用於拖地

如何加水


- 1 按「PUSH」按鈕分離吸頭及水箱分開。



- 2 打開水槽側面的蓋。
 - 只需打開其中一個蓋。同時打開兩個蓋可能導致水溢出。

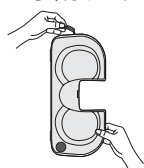

- 3 注水至「MAX」線後將蓋牢固地蓋上。
(使用注水壺加水更容易。)

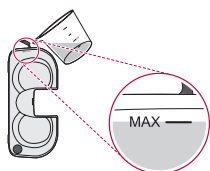


- 如水箱在有水的情況下收納，可能會在出水口或氣口附近形成水滴。在不使用地拖吸頭時，請保持水箱清空。
- 如沒有完全關閉水箱蓋，水可能會洩漏。


良好)



 不良)




- 4 安裝水箱方法是將水箱2個凸出的卡棒插入吸頭，並按下水箱直至聽到咔嚓聲。

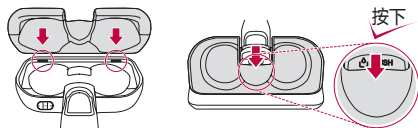

如何安裝拖把


- 1 使用之前用水弄濕清潔墊。

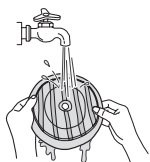

- 2 盡量擰乾清潔墊，祛除多餘水份。




- 3 將清潔墊中心與拖把連接板的中心對齊，使清潔墊的條紋面朝上。

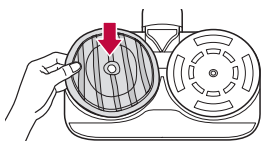


- 若清潔墊反轉安裝，或未能正確安裝到連接板，清潔效能會受影響。
- 在使用地拖吸頭時若未加濕清潔墊，清潔效果可能會受影響。

※ 如何正確安裝清潔墊

 良好)



不良)

 

如何調節水量

 
可調節吸頭到清潔墊的出水量。



用於清潔不能過份受潮的地板或想要減少用水時使用




清潔頑固污跡或增加水量時使用



停止供水或乾抹時使用

不用水進行清潔

 - 1 清空水箱中的水。
- 2 將乾的清潔墊安裝到地拖吸頭底部的連接板上。
- 3 將水調節按鈕設為「STOP」。



- 4 打開電源並即可進行清潔。

警告


- 請勿將手插入移動的轉子中。可能導致受傷。
- 切勿在地拖吸頭運轉時安裝清潔墊，否則可導致受傷。

注意

- 請勿用力將地拖吸頭摔或扔在地板上。這樣可能導致人身傷害或產品損壞。
- 請勿將濕的吸頭放在地板上，以免地板受潮而損壞。
- 如果長時間不使用本產品，請將「水量調節」按鈕設為「STOP」。否則，可能會導致故障。
- 請勿使用非原廠清潔墊。
- 請勿將水以外的液體加入水箱。
- 請勿將熱水加入水箱。
- 請勿踩踏地拖吸頭。可能導致產品損壞。




- 清潔後用紙巾清除地拖吸頭中剩餘的水，然後再安裝。否則水可能洩漏並損壞地板。

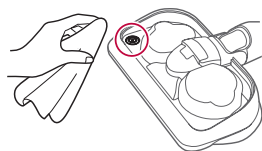


- 請勿拉扯標記橡膠處。可能導致撕裂。

請注意


- 使用地拖吸頭時，以直線和對角線進行清潔。

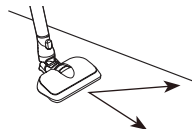

- 在安裝地拖吸頭之前，弄濕清潔墊並充分擠壓以除去液多餘水份。安裝及使用乾燥狀態下的清潔墊可能影響清潔性能。
- 為水箱注水時，請勿填充水超過「MAX」線。
- 請勿將水槽蓋完全分開。
- 注水時請只打開水箱的其中一個蓋。
- 清潔完成後，請務必清空水箱中的水。否則水可能被污染並散發出難聞的氣味。搖動水箱以去除剩餘的水。
- 打開水箱側面的 2 個蓋，在通風良好、無陽光直射的地方晾 24 小時以上，直至乾透為止。
- 使用清潔墊清潔完成後，將清潔墊分開並清洗。否則拖把可能散發出難聞的氣味。
- 不要使用骯髒的清潔墊進行清潔，否則地板可能變髒。
- 產品在新購時預設為「STOP」停止供水，請根據用量按下供水按鈕。
- 若在吸頭裝上時搬動產品或乾抹地板時，請將「水量調節」按鈕設為「STOP」。
- 如果地拖吸頭卡有異物或對其施加過大的力，地拖吸頭將自動停止以保護產品。這不是故障，只需重新開啟產品即可再次使用。
- 請使用標準清潔墊進行一般清潔，或使用強力清潔墊祛除頑固污跡，以達致最佳清潔效果。

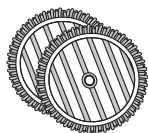


標準清潔墊

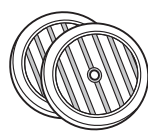


強力清潔墊

清潔集塵箱


- 1 清潔集塵箱之前，請先從設備中取出電池。
- 2 請在廢紙簍旁或容易清空灰塵及異物之處清空集塵箱。
- 3 向下按集塵箱按鈕將其打開。
 - 清空集塵箱。
 - 打開集塵箱時，請注意灰塵/異物可能溢出。

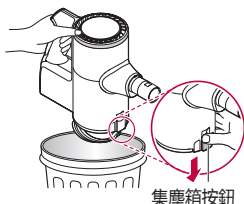


- 4 將縫隙吸頭插入大型灰塵分離裝置（旋風濾網）並逆時針旋轉將其取下。使用縫隙吸頭的吸入端可輕鬆完成此操作。

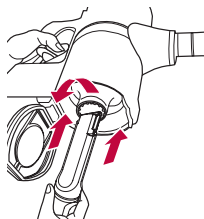

- 5 用自來水清洗大型灰塵分離裝置（旋風濾網）。
 - 重新插入之前，請務必使裝置乾透。

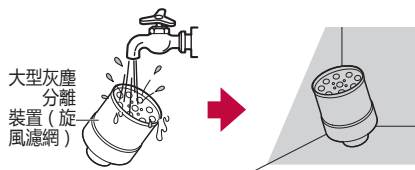

- 6 拆下旋風濾網並使用二合一吸頭清除垃圾桶內的灰塵。

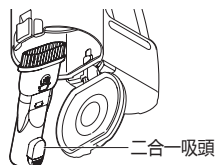


警告

- 切勿用水清洗主機。水可能進入摩打並導致觸電或火災。
- 請勿撞擊集塵箱零件或旋風濾網或對其施加壓力，否則可能損壞它們。
- 只有在清潔旋風濾網並在產品上重新組裝後才能使用本產品。否則會損壞產品。


清潔過濾器

前導濾網與排氣過濾器需要每月至少清潔一次，以保持產品的清潔性能。在多塵環境中使用及定期使用吸塵機時，需經常清潔這些過濾器。

- 1 逆時針轉動排氣過濾器將其拆下並取出前導濾網。

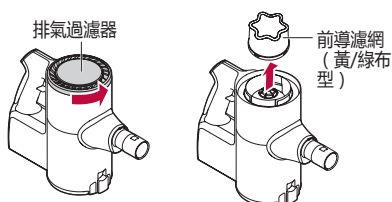

- 2 讓設備倒置，拆下灰塵分離過濾器後，使用二合一吸頭清除摩打零件上的灰塵。

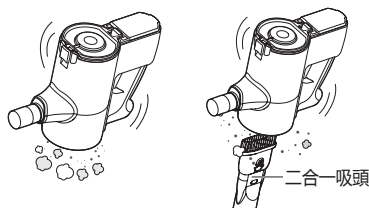


3 刷掉灰塵或用自來水沖洗以清潔排氣過濾器。

- 為了保持清潔性能，每月至少清除一次排氣過濾器上的灰塵。




- 如果排氣過濾器發出異味，請用自來水沖洗。
- 如果排氣過濾器在水中清洗後未乾透，可能會產生異味。重新安裝之前，請確保在通風良好及無陽光直接照射的地方放置24小時將其徹底乾透。

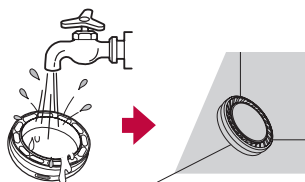

4 刷掉灰塵或用自來水沖洗以清潔前導濾網。

- 用水清洗前導濾網時，必須在無陽光直射、通風良好的區域晾乾透，然後再重新插入。否則可能會產生異味。
- 在前導濾網乾透前，可先使用隨機附設的後備前導濾網。
- 經常清洗前導濾網將能保持最佳吸力。
- 過濾器為消耗品，會隨著時間及使用而發生磨損。請從授權維修中心購買新的過濾器。

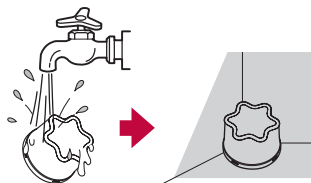

5 欲重新安裝過濾器，請先安裝前導濾網，然後安裝排氣過濾器，對齊電池電量指示燈附近的白色圓圈，然後順時針旋轉，使白色圓圈相互對齊。



警告

- 切勿用水沖洗產品主機，因為水可能進入摩打並導致觸電或火災。
- 確保沒有異物進入摩打，因為這會損壞產品並可能導致爆炸或火災。
- 請勿在摩打附近插入手指或尖銳物體，否則可能損壞產品並導致傷害或觸電。

注意


- 當排氣過濾器及前導濾網完成清潔及乾透後，必須重新正確安裝到主機身上，未曾安裝這些濾網而使用本產品，有機會令機內的塵粒進入摩打而造成故障。

請注意

- 由於過多的灰塵會降低吸力，建議在使用本產品之前及之後清潔過濾器。

※ 移除產品內部的異物。

為了保持產品性能，請務必清除產品（主機、前導濾網、延長管、進氣口）內的任何異物與灰塵。產品內的異物會導致產品在運行過程中停機、產生噪音或吸力下降。

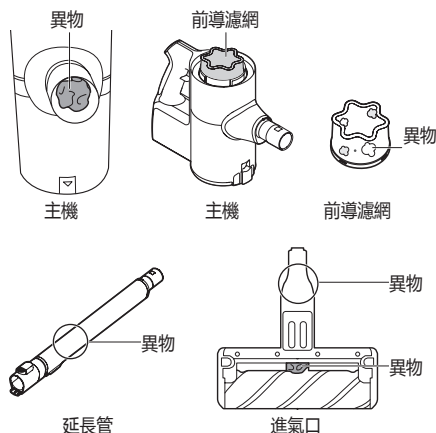


※如果主機、延長管或進氣口內部或前導濾網本身被異物堵塞，電源將自動關閉以保護產品。將電池與產品分開並去除異物。


清潔地板及地毯專用吸頭

請依下列說明清潔地板及地毯專用吸頭。


- 1 從產品上取下吸頭。
- 2 將吸頭倒置，逆時針轉動旋轉刷卸下螺絲。
 - 使用一字型螺絲起子旋轉螺絲。

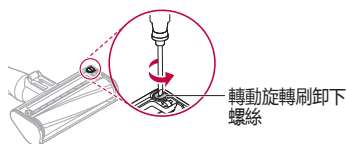

- 3 沿箭頭方向拉動旋轉刷將其取下。

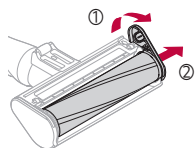


- 4 將縫隙吸頭連接到設備上，並使用真空吸塵機清除旋轉刷與吸頭底部的灰塵/異物。

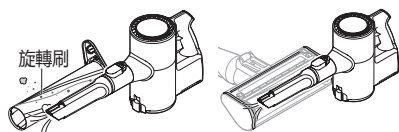

- 5 使用濕毛巾或紙巾清除旋轉刷及吸頭底部殘留的異物與灰塵。



- 6 清潔後，依照相反的順序組裝旋轉刷。

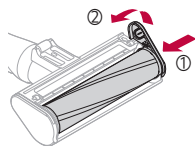


⚠ 注意


- 重新組裝時，避免手指卡入任何縫隙。
- 請勿用水清洗旋轉刷與吸頭。
- 請勿將旋轉刷用作拖把。
- 請勿使用吸頭吸收任何液體。

清潔震動寢具吸頭

- 1 取下震動寢具吸頭並將其倒置。
- 2 將縫隙吸頭連接到設備上，並使用真空吸塵機清除震動寢具吸頭底部的灰塵/異物。

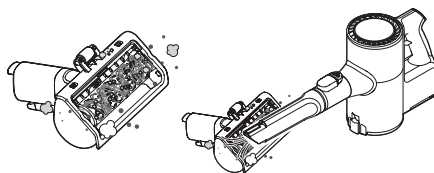

- 3 使用濕毛巾或紙巾清除任何殘留的異物與灰塵。

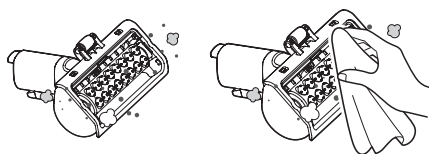


⚠ 警告

- 請勿用水沖洗震動寢具吸頭。
- 請勿將任何含水的液體吸入震動寢具吸頭。


清潔地拖吸頭

清潔地拖吸頭方法如下。


- 1 將吸頭與產品分開並將吸頭翻轉過來。

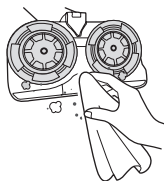

- 2 將縫隙吸頭連接到主體上，以清除地拖吸頭上的異物。

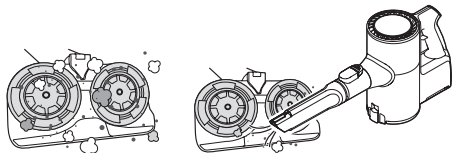

- 3 使用濕擦拭布或紙巾清除殘留的異物。

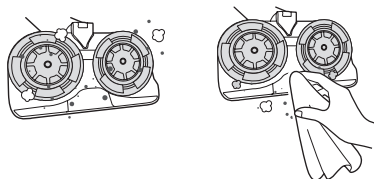

※ 留在吸頭上的異物可能導致難聞的氣味。

⚠ 警告


- 清潔之前，務必將吸頭與主體或分開電池。否則拖把連接板可能旋轉並導致受傷。

⚠ 注意

- 請勿用水清洗吸頭。可能導致產品損壞。

晾乾水箱

打開水箱側面的 2 個蓋，搖動水箱以去除剩餘的水。
在通風良好、無陽光直射的地方晾 24 小時以上直至乾透，可有效除去水箱中的水分。

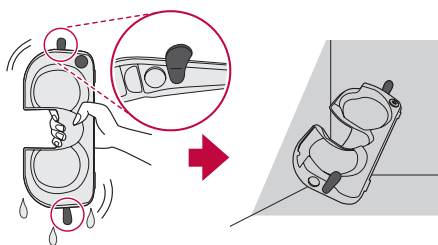

請注意

- 清潔完成後，請務必清空水箱中的水。否則水可能被污染並散發出難聞的氣味。

⚠ 注意

- 轉動蓋的方向以防止水箱蓋關閉。
- 請勿將水箱蓋完全分開。
- 清洗時，不要在水箱中加入洗滌劑、醋或小蘇打。

聯絡客戶服務之前要檢查的要點。

如在使用本產品時出現以下情況，可能並非產品出現故障，請先再次檢查。



現象	原因	解決方案
產品無法運作。	電池是否電量用盡？	• 給電池充電。
	本產品是否已關閉電源？	• 按電源按鈕以打開產品電源。
吸力太弱。	集塵箱裡是否積滿灰塵？	• 清空集塵箱。
	過濾器是否堵塞？	• 清潔前導濾網與排氣過濾器。
	進氣口是否堵塞？	• 拆下延長管，從主機上清除異物。
	進氣口旋轉刷上是否有異物？	• 確保從旋轉刷上清除任何異物（線頭、毛髮）。
設備似乎沒有在充電。	電源變壓器是否已連接到充電座？	• 確保變壓器已正確插入充電座。
	電源線是否插入插座？	• 確保電源線已正確插入充電座。
	充電終端上是否有異物？	• 用乾布清除充電終端上的異物。
從設備排出熱空氣。	其工作是否正常？	• 此為從排氣口排出冷卻摩打的空氣，並非故障。
產品發出異味。	產品是否在最近三個月內購買？	• 新購買的吸塵機在頭3個月內可能會散發像膠氣味。
	其工作是否正常？	• 如果吸塵機工作正常，則不會發生故障。
	集塵箱裡是否積滿灰塵？	• 此外，集塵箱中的灰塵可能產生一些氣味。清空集塵箱並清潔乾淨。
	過濾器中是否有異物？	• 如果過濾器長時間沒有清潔，可能散發異味。請先清潔前導濾網及排氣過濾器。
	前導濾網是否潮濕？	• 用水清洗前導濾網後而未乾透，可能使其散發異味。務必讓前導濾網乾透，然後再重新安裝到吸塵機上。
	排氣過濾器是否潮濕？	• 用水清洗排氣過濾器而不乾透，可能使其散發異味。務必讓前導濾網乾透，然後再重新組裝到吸塵機上。
	地拖吸頭的灰塵入口是否有異物？	• 地拖吸頭中的濕灰塵可能產生異味。使用前務必用濕紙巾擦拭拖把吸頭的灰塵入口。

現象	原因	解決方案
吸塵機產生太多噪音，	其工作是否正常？	由於三種功率設定，操作期間產生不同的噪聲水平是正常的。這不是故障的跡象。
摩打速度不穩，設備過早或自行關閉電源。	電池是否已充滿電？	清潔前必須給電池充滿電。如果即使電池已充滿電且延長管及配件已無障礙物但問題仍存在，請聯絡 LG 電子客戶服務中心。
	產品主體、延長管或進氣口中是否有異物？	從主機、延長管或進氣口移除異物。
	過濾器是否堵塞？	清潔前導濾網與排氣過濾器。
旋轉刷不轉動	旋轉刷是否正確連接？	取下旋轉刷，必要時進行清潔並再次安裝。
	旋轉刷上是否有任何異物？	從旋轉刷上清除任何異物。
拖把連接板不會旋轉。	您是否用力按壓拖把吸頭？	把連接板自動停止以保護產品並不是故障。再次按下電源按鈕即可使用本產品。
	清潔墊連接板之間是否有異物？	從地拖吸頭連接板上除去異物，然後再次按下電源按鈕以使用本產品。
地拖吸頭沒有水流出。	水箱是否填滿？	為了使水從拖把噴嘴中流出，應填滿水箱。
	水箱是否正確連接到地拖吸頭？	為使水從地拖吸頭中流出，水箱應正確連接到地拖吸頭上。
	供水調節按鈕是否打開？	- 如果按鈕設定為「STOP」，水不會流出。 - 據清潔類型按下供水調節按鈕。
水箱裡有水分。	您是否徹底晾乾水箱？	- 如果水箱有水，水箱會變濕。 - 在陰涼處正確晾乾水箱。
使用地拖吸頭後地板卻更骯髒。	您在使用前是否清潔清潔墊？	- 使用骯髒的清潔墊可能會令地板變得更髒。 - 使用前先清洗清潔墊。

處理與所購新產品無關的舊產品

在處理大型電器之前，您必須聯絡當地市政局或相關政府部門。

產品規格

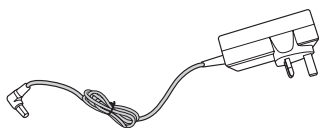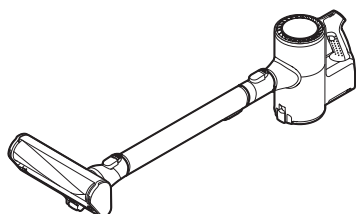

項目/型號	A9****
尺寸	260 mm (寬) X 270 mm (長) X 1120 mm (高)
重量	2.7 kg
功耗：	400 W (最大功率：450 W)/ 250 W/ 80 W (快速/強力/一般)
吸入功率	140 W ¹⁾
電池	DC 25.55 V
電池運行時間 ²⁾ (充滿電後且 不使用強力驅 動吸頭時 ³⁾)	Turbo模式下約 6 分鐘
	強效模式下約 9 分鐘
	一般模式下約 40 分鐘
電池運行時間 ²⁾ (充滿電後且 使用強力驅動 吸頭時 ³⁾)	Turbo模式下約 6 分鐘
	強效模式下約 9 分鐘
	一般模式下約 30 分鐘
項目	充電器 (變壓器)
輸入	100 V - 240 V~ 50/60 Hz, 0.8 A
輸出	DC 29.4 V 1.0 A
項目/型號	電池
類型	充電式鋰離子電池
額定	DC 25.55 V, 2000 mAh, 7 組

1) 基於 IEC 62885-2, 5.8. 的吸入功率測試。

2) 根據我們的測試標準測試結果，根據實際使用環境和使用期限可能有所不同。

3) 地板吸頭，地毯專用吸頭，寢具專用吸頭，地拖吸頭 (可能因型號而異)

附註

附註

附註

LG CordZero™