 


RELEASING THIS DRAWING WITHOUT
PERMISSION OF LG Electronics SHOULD BE
ACCUSED ACCORDING TO THE LAWS AND
COMPANY RULES

Rev No.	Revision Description	Ref. No.	Date	Prepared	Approved
1	Adding new model 7.5kg	ENOG600001	07 June 2016	Ari DFN	Mariono
2					
3					
4					

SEC. WORK	①	②	③	④	MATERIAL AND PRINTING DESCRIPTION	LG MODEL	SUFFIX	LANG.	PAGE	REMARK
	BRAND	MODEL	P/NO.	Rev No.						
11	LG	P905R/P850R/P800N P750N	MFL68060011		Recycle	P905R P850R P800N P750N	ALGPEIN	ENG/IND	8	Sawaddee

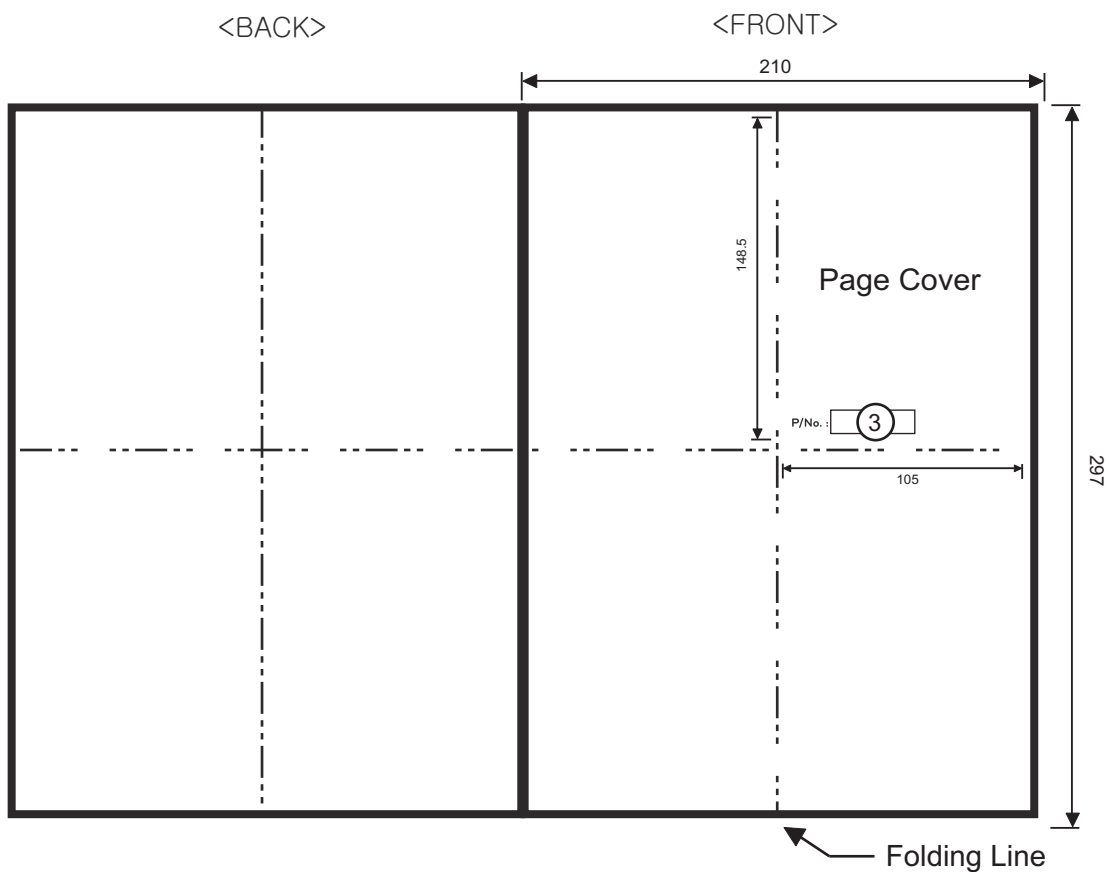

 
1. Material : : Printing and exterior size are refer to work table
2. Print : Print with Paper size A3 front and back then fold by 4 page
3. Exterior size on the drawing is cutting line A3
4. Interior size on the drawing is Folding line.
5. Before product controlled by criteria sample.
6. This part should not contain prohibited substances (Pb,Cd,Hg,Cr+6,PBB,PBDE) and details should comply with LG standard of LG(63) -A-5501-34

[illegible]

INSTALLATION

Installation area

- Set on flat and firm floor.
- Incorrect installation may cause severe noise and break down.




Connecting the earth wire

- Install the earth wire to prevent short-circuit due to leaking current and electric shock.
- It is attached at the back of the washer.

Connect it to the metal water pipe. If the water pipe is made of plastic, it does not have the earth effect.


- Do not connect the earth wire to the gas pipe, lightning arrester, telephone connector, etc.

 Warning-the appliance with two-pronged plug must be grounded

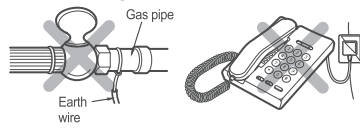




Connecting the power plug

 - Insert the power plug into the outlet.
- Before connecting the power plug, check if the voltage setting of the washer matches the outlet voltage.
- If AC outlet with ground terminal is used, grounding is not needed. If not, never forget earthing (earthing method above).
- The appliance must be positioned so that the plug is accessible




Other earthing method

   - After connecting the earth wire to the earth copper plate, bury it at least 75cm deep under the wet ground.
- Connect to the earthing-only outlet.
- When installing it in an area where earthing is not possible, purchase a short-circuit breaker connect it to the outlet.



Connecting the drain hose

 - Push the clamp toward the body of the washing machine as shown in the figure.
- Be sure to reroute the hose so that it is not kinked; kinks or sharp bending in the hose will prevent proper drainage.
- Make sure water is drained smoothly by placing a base under the machine or by applying other appropriate mean.




4

HOW TO RINSE & HOW TO SPIN


Interim spin rinse

 - Interim spin rinse prior to regular rinsing helps removing sudsy water from the laundry and improve rinsing efficiency. Also is helpful to water saving.

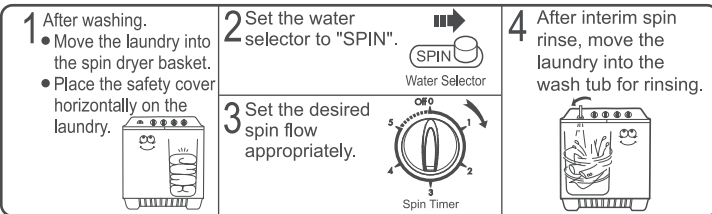


Note for spinning

 - Put the laundry evenly into the spin dryer basket.
- Put the laundry down lightly.
- Place the safety cover horizontally over the laundry, washing machine will be damage if the safety cover is not placed.
- Close the spin dryer cover.
- Do not drain the water out of the wash tub while the spin dryer basket is in operation.
- If the spin dryer basket is off-balance and vibrates excessively, stop the spinning, rearrange the clothes evenly, and then resume spinning.
- If the spinning fail to stop when the spin dryer cover is opened, the brake is out of order. Immediately stop using the machine and request repair service.

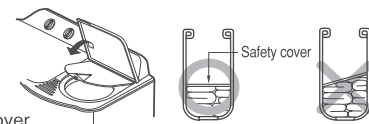

CARE & MAINTENANCE

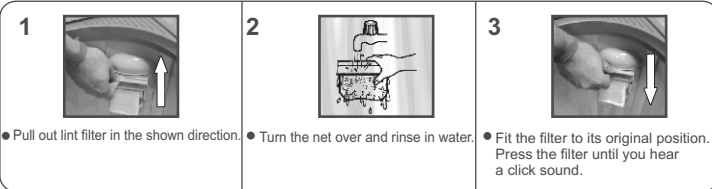 

6

 
INSTALLATION & HOW TO WASH

Before washing

- Check the washing instruction labels on the clothing to be washed.
- Remove all objects from the pockets of the clothing. Objects left in the pockets may damage clothing or break the washing machine (could cause the drain hose to clog).
- After separating oiled or dyed clothing, wash.
- For your convenience hang up the wash cover on the right or left side of the washing machine tub when not in use.
- Check and clean detergent box before washing.



How to wash

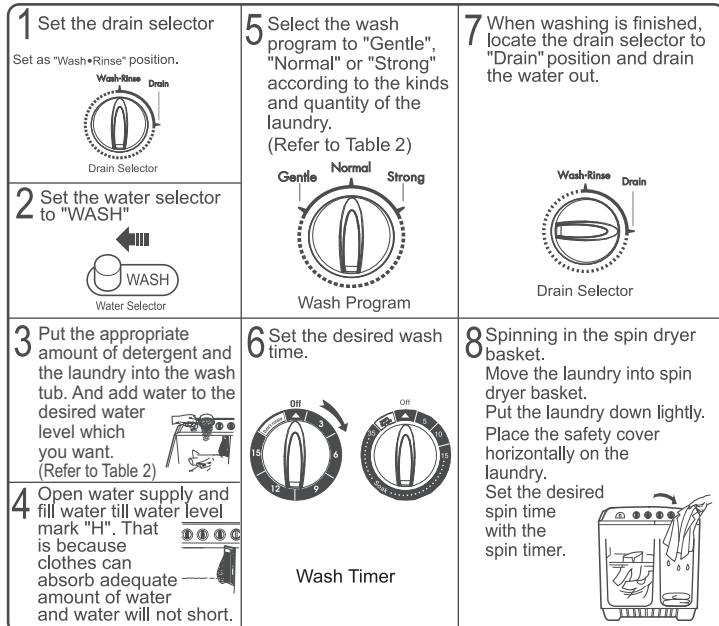

5

REFERENCE

TABLE 1. WEIGHT GUIDE FOR CLOTHES

Type of clothing	Type of fabric	Weight per piece
Under shirt	Cotton	150g(53.0oz)
Handkerchief	Cotton	50g(1.8oz)
Bath towel	Cotton	300g(10.6oz)
Shirt	Mixed fabric	200g(7.1oz)
Socks (1 pair)	Mixed fabric	50g(1.8oz)
Pajama (shirt and pants)	Cotton	500g(17.6oz)
Winter undershirt	Woolen	600g(21.2oz)
Workclothes	Mixed fabric	800g(28.2oz)
Blouse	Mixed fabric	200g(7.1oz)

TABLE 2. GUIDE FOR WASHING

Type of Fabric	Wash Selector	Wash Time	Water Level	Amount of Water (Ltr)	Amount of Detergent (gms)
Synthetics, Silk	GENTLE / SOAK-GENTLE	15 min / 15+15 min.	L	49	50-55
	GENTLE	15 min.	M	55	56-64
Cotton, Linen	NORMAL / SOAK-NORMAL	20 min / 20+15 min.	L	49	50-55
	NORMAL	20 min.	M	55	56-64
Very soiled cotton and linen	STRONG / SOAK-STRONG	25 min / 25+15 min.	L	49	50-55
	STRONG	25 min.	H	60	56-64

Notes :

- Amount of laundry is a weight of dry laundry.
- Detergent is a general synthetic detergent.

CAUTION : Fill in wash to height 20mm above the level you desire. When washing starts water level will automatically come to level you desire.


TROUBLESHOOTING GUIDE

Before Requesting Service

Problem	Checking point
Motor does not operate,	- Is the power cord firmly plugged in? - Is the timer turned to a suitable point except "Off" ?
Spin dryer basket does not operate.	- Is there any clothing dropped between the basket and tub? - Is the spin dryer cover closed? - Is the laundry gathered to one side of the spin dryer basket?
Water does not enter washer	- Is the water faucet hooked up? - Is the water faucet frozen?
No draining	- Is there lint stuck in the plunger valve? - Is the end of the drain hose guide located at an exceed height? - Is the drain hose laid down? - Is the drain hose twisted?

7

 SPESIFIKASI

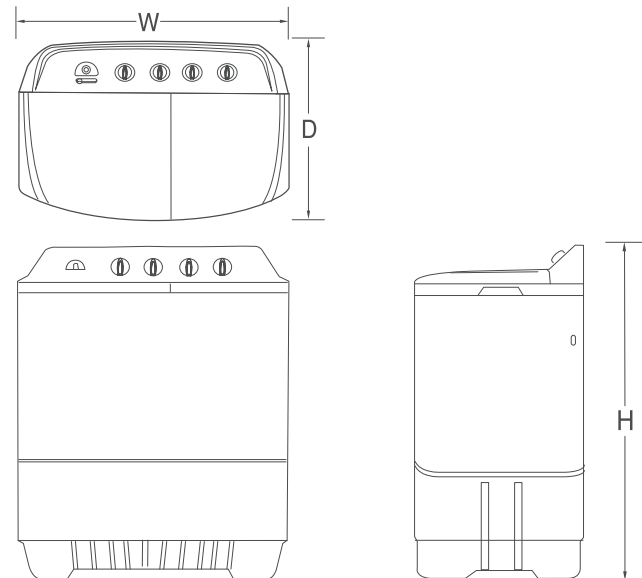

Sumber tenaga	Pada label spesifikasi
Tinggi air	H : 60 Liter
Tekanan air	Kurang dari 100kPa (1kgf/cm ²)
Dimensi	805 x 478 x 975 mm.(W x D x H)
Berat	26.0 kg
Kapasitas	Cuci : 9/8.5/8/7.5 KG
Daya Masuk	Cuci : 320 W

LAYANAN KONSUMEN/CUSTOMER INFORMATION CENTER:

14010

TANDA PENDAFTARAN
PETUNJUK PENGGUNAAN MANUAL DAN
KARTU JAMINAN/GARANSI
DALAM BAHASA INDONESIA BAGI PRODUK ELEKTRONIK

8



BUKU PANDUAN

MESIN CUCI

Bacalah buku ini dengan cermat sebelum mengoperasikan mesin cuci anda.

Simpanlah buku ini sebagai petunjuk di masa mendatang.

Catatlah model dan nomor seri mesin cuci ini.

Berikan buku ini kepada dealer, jika anda ingin menservis mesin cuci ini. Mesin cuci ini dibuat dan didesain hanya untuk keperluan rumah tangga.

MODEL : P905R / P850R / P800N / P750N



MFL68060011

 
LG Electronics Indonesia

Kawasan Industri MM2100 Blok G
Cikarang Barat, Bekasi, Jawa Barat 17520
Indonesia

Registration no : P.14.LG1.01104.0414
I.14.LG2.03010.0914
P.14.LG1.01306.0614


www.lg.com/id

KEAMANAN

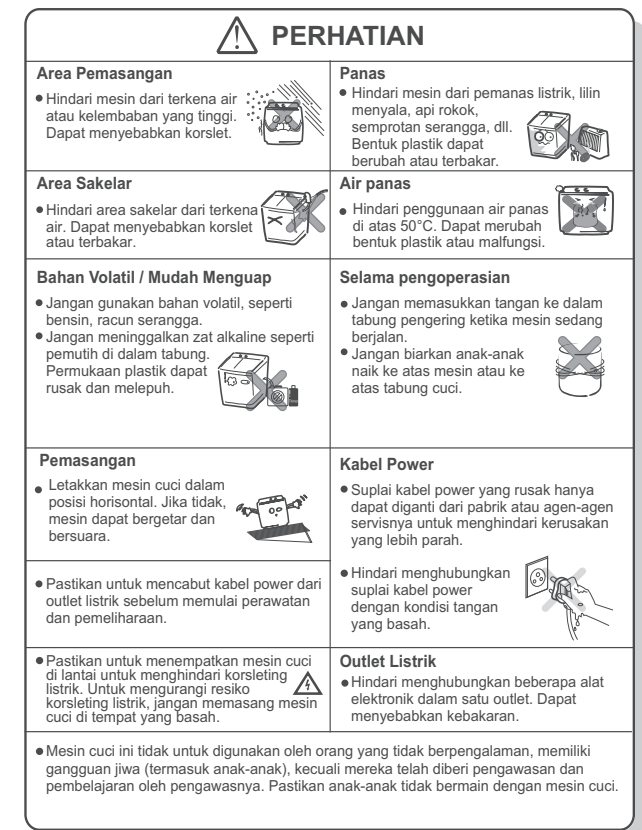


- Jika produk ini digunakan untuk kepentingan komersil, maka tidak ada garansi. (Contoh : Toilet umum, Asrama) Jika produk ini dipasang di luar area normal, maka biaya transportasi, servis akan ditanggung oleh pemilik.

 PENGENALAN BAGIAN

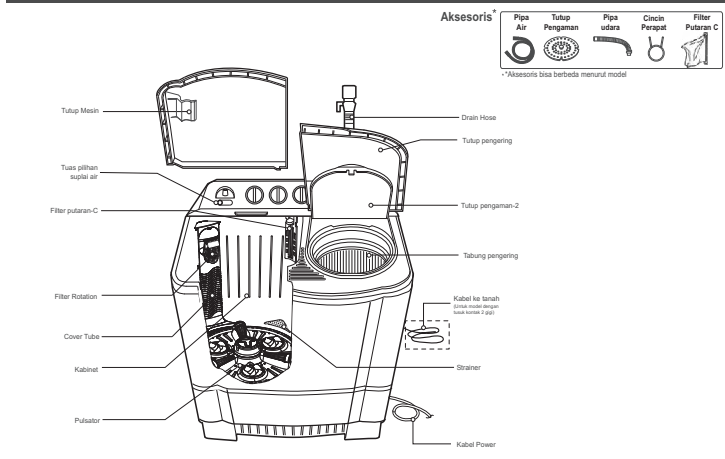

 (Jangan menyamakan model dengan gambar karena tiap model bisa berbeda. Ini hanya gambaran secara skema.)



- Cold Water Inlet**
Sambungkan dengan pipa selang dari keran air untuk mengisi tabung
- Water Supply Selector**
Pilih "WASH" untuk mensuplai air untuk mencuci dan memblais, dan "SPIN" untuk bilasan pengering.
- Wash Timer**
Pilih waktu yang diinginkan untuk mecuci atau memblais
- Wash Program**
Atur knob ke "GENTLE", "NORMAL", "STRONG" menurut jenis dan jumlah cucian.
- Drain Selector**
Pilih "Wash-Rinse" untuk mencuci dan memblais, dan "Drain" untuk mengeluarkan air dari tabung.
- Spin Timer**
Pilih waktu yang diinginkan untuk pengeringan. Batas maksimal adalah 5 min. jangan putar knob lebih dari batas yang dianjurkan.

3

2

PEMASANGAN

Area Pemasangan

- Atur pada lantai yang kokoh dan rata.
- Penempatan yang salah dapat membuat mesin rusak dan bersuara.

 


- Jaga jarak lebih dari 10 cm. antara lubang saluran buangan dengan dinding.
- Karpet tidak boleh menghalangi lubang ventilasi.



Menghubungkan kabel ke tanah


- Pasanglah kabel ke tanah untuk mencegah korslet karena arus pendek dan kejutan listrik.
- Kabel terdapat di bagian belakang mesin. Lilitkan kabel ke pipa air yang terbuat dari logam karena jika pipanya plastik, maka hubungan ke tanah tidak akan berhasil.
- Jangan lilitkan kabel tanah ke pipa gas, penangkal petir, penghubung telepon, dll.

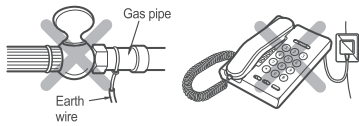

Peringatan-pemasangan dengan tusuk kontak 2 gigi harus ditanam




Menghubungkan tusuk kontak

 - Masukan tusuk kontak ke dalam outlet.
- Sebelum memasukkan, periksa apakah pengaturan voltase di mesin cuci sesuai dengan voltase di outlet.
- Jika AC outlet menggunakan terminal tanah, maka kabel ke tanah tidak diperlukan. Jika tidak, jangan lupa untuk memasang kabel ke tanah (Lihat gambar)
- Penempatan mesin cuci harus sesuai untuk memudahkan tusuk kontak.




Metode alternative

   - Setelah kabel tanah dililit pada paku tembaga, tanam di tanah basah sedalam 75 cm.
- Lekatkan kabel tanah pada dinding luar outlet.
- Jika tidak memungkinkan untuk memasang kabel ke tanah, belilah sebuah penangkal arus pendek dan sambungkan ke outlet.



Menghubungkan pipa

 - Tekan penjepit selang ke mesin cuci seperti yang terlihat pada gambar.
- Selalu periksa arah saluran pembuangan agar tidak melengkung atau bengkok sehingga saluran dapat bekerja dengan baik
- Tinggi saluran pembuangan harus lebih rendah dari bagian bawah mesin cuci agar air pembuangan dapat sepenuhnya terbuang.




4

CARA MEMBILAS & MENGERINGKAN


Cara membilas

 - Membasahi bilasan dalam pengering sebelum membilas dapat membantu mengeluarkan air sabun dari cucian. Selain itu dapat menghemat air.

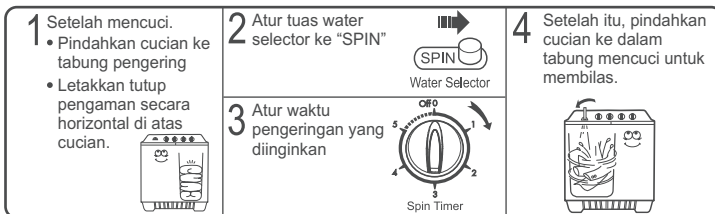

Cara mengeringkan

 - Letakkan cucian dengan rata dalam tabung pengering.
- Tekan cucian perlahan.
- Letakkan tutup pengaman secara horizontal di atas cucian.
- Letakkan tutup tabung pengering
- Jangan keringkan air pada tabung cucian ketika keranjang pengeringan sedang bekerja.
- Jika tabung pengering tidak seimbang dan bergetar berlebihan, hentikan pengeringan, atur kembali pakaian dengan rata dan ulangi pengeringan.
- Jika proses pengeringan tidak berhenti ketika tutup tabung pengering terbuka, segera hentikan penggunaan mesin cuci dan hubungi servis.

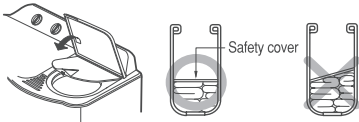

PERAWATAN & PEMELIHARAAN



6

PEMASANGAN & CARA MENCUCI

 
Sebelum mencuci

- Periksa label instruksi mencuci pada pakaian
- Keluarkan semua benda dalam pakaian. Benda yang tertinggal dikantong dapat merusak pakaian dan mesin cuci. (Dapat menyumbat pipa selang saluran buangan)
- Pisahkan pakaian yang luntur atau berwarna
- Untuk kenyamanan anda gantungkan tutup mesin cuci di sebelah kanan atau kiri mesin cuci ketika tidak digunakan.
- Periksa dan bersihkan kotak detergen sebelum digunakan.

Pindahkan bagian ini sebelum mencuci



Cara mencuci

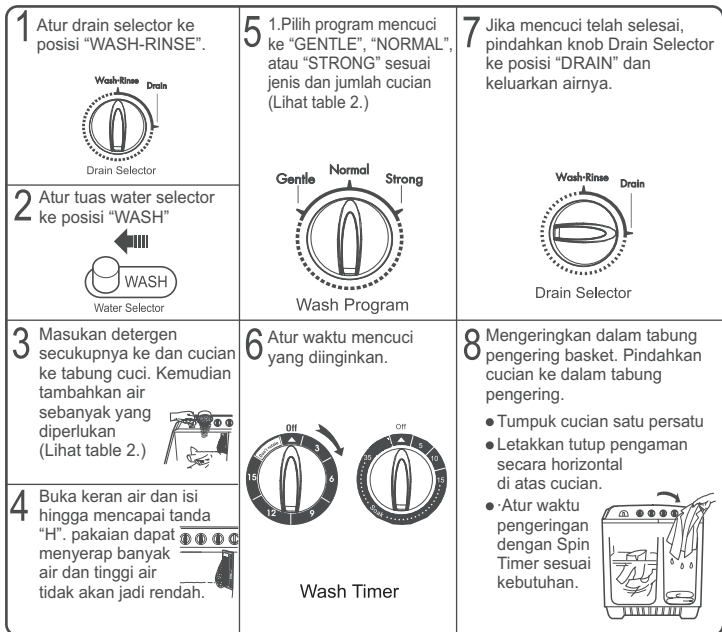

5

REFERENSI

TABEL 1. PETUNJUK BERAT PAKAIAN

JENIS PAKAIAN	JENIS BAHAN	BERAT SATUAN
KAOS DALAM	KATUN	150g (53oz)
SAPUTANGAN	KATUN	50g (1.8oz)
HANDUK MANDI	KATUN	300g (10.6oz)
KAOS DALAM	CAMPURAN	200g (7.1oz)
KAOS KAKI (1 PSG)	CAMPURAN	50g (1.8oz)
BAJU TIDUR (KAOS + CELANA)	KATUN	500g (17.6oz)
BAJU HANGAT	KATUN	600g (21.2oz)
BAJU KERJA	CAMPURAN	800g (28.2oz)
BLUS	CAMPURAN	200g (7.1oz)

TABEL 2. PETUNJUK MENCUCI

Jenis Bahan	Pilihan Mencuci	Waktu Cuci	Level Air	Jumlah Air (Ltr)	Jumlah Deterjen (gms)
Sintetik, Sutra	GENTLE / SOAK-GENTLE	15 min / 15+15 min.	L	49	50-55
			M	55	56-64
	GENTLE	15 min.	H	60	65-68
Katun, Linen	NORMAL / SOAK-NORMAL	20 min / 20+15 min.	L	49	50-55
			M	55	56-64
	NORMAL	20 min.	H	60	65-68
Katun sangat kotor dan linen	STRONG / SOAK-STRONG	25 min / 25+15 min.	L	49	50-55
			M	55	56-64
	STRONG	25 min.	H	60	65-68

Catatan :

- Jumlah cucian dihitung dalam keadaan kering.
- Jumlah deterjen didasarkan pada deterjen cucian pada umumnya.

PERHATIAN : Isi air pada ketinggian 20mm di atas tingkat ketinggian air yang diinginkan. Ketika proses pencucian dimulai, tingkat ketinggian air akan menjadi sesuai yang kita inginkan.



PETUNJUK PERBAIKAN GANGGUAN

Sebelum diperbaiki

Masalah	Periksa
Motor tidak berjalan	- Apakah tusuk kontak kabel power sudah masuk dengan benar? - Apakah penunjuk waktu berada di posisi selain "OFF"?
Tabung pengering tidak berputar	- Apakah ada pakaian yang tersangkut diantara tabung pengering dan mesin cuci? - Apakah tutup pengering tertutup? - Apakah posisi cucian terkumpul di satu sisi dalam tabung pengering?
Air tidak masuk ke tabung mesin cuci	- Apakah keran air tersumbat? - Apakah keran air rusak?
Air buangan tidak keluar	- Apakah katup saluran air tersumbat kotoran? - Apakah posisi pipa selang buangan lebih tinggi dari bagian bawah mesin cuci? - Apakah katup saluran air terpelintir? - Apakah katup saluran air bocor?

7

  SPECIFICATIONS

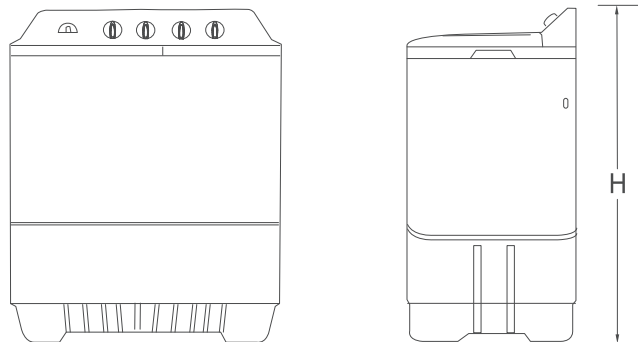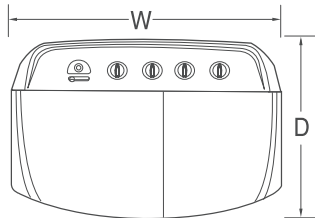

Power source	On specification label
Water level	H : 60 Litres
Water pressure	Less than 100kPa (1kgf/cm) ²
Dimension	805 x 478 x 975 mm.(W x D x H)
Weight	26.0 kg
Capacity	Wash : 9/8.5/8/7.5 KG Spin : 6.5 kg
Power input	Wash : 320 W Spin : 250 W

 
LAYANAN KONSUMEN/CUSTOMER INFORMATION CENTER:

14010

REGISTRATION MARK
OWNERS MANUAL AND WARRANTY CARD
FOR ELECTRONICS PRODUCT IN INDONESIAN LANGUAGE

8

SAFETY MEASURE

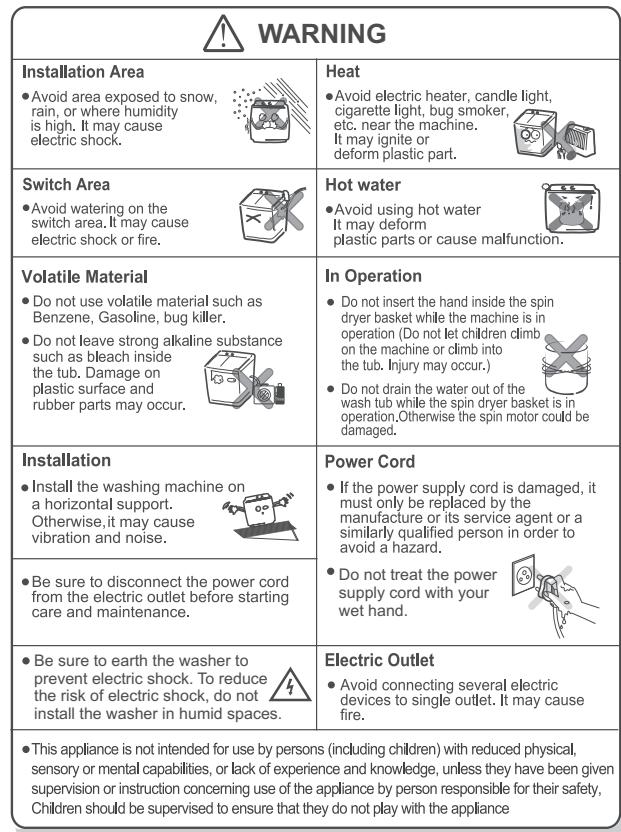

- If this product is used for commercial purpose, it is not warranted. (Example : Public places such as public bathroom, lodging house, training center, dormitory)
- If the product is installed outside the normal service area, any cost of transportation involved in the repair of the product, or the replacement of a defective part, shall be borne by the owner.

2



OWNER' S MANUAL

WASHING MACHINE

Please read this manual carefully before operating your set. Retain it for future reference. Record model number and serial number of the set. See the label attached on the back cover and quote this information to your dealer when you require service. This washing machine is designed and manufactured for household use only.

MODEL : P905R / P850R / P800N / P750N



MFL68060011

 
LG Electronics Indonesia

Kawasan Industri MM2100 Blok G
Cikarang Barat, Bekasi, Jawa Barat 17520
Indonesia


Registration no : P.14.LG1.01104.0414
I.14.LG2.03010.0914
P.14.LG1.01306.0614

www.lg.com/id

FEATURES

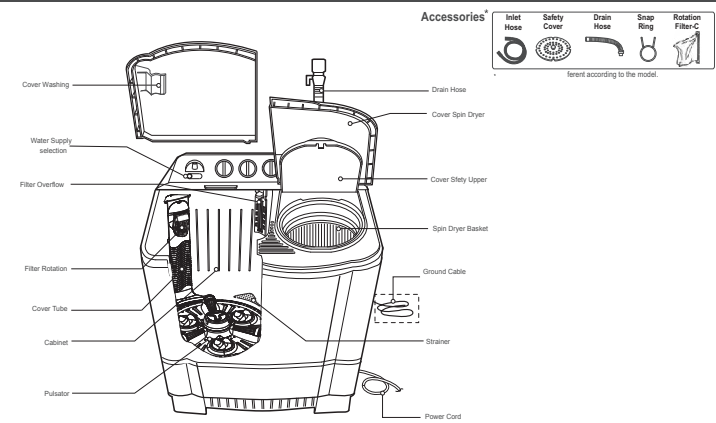

 (Please do not match this figure with model as it may be different from your model. These are schematic diagrams only.)



- Cold Water Inlet**
Connect here with the inlet hose from the water faucet to feed water to the tub.
- Water Selector**
Select "WASH" to supply water for washing and rinsing and "SPIN" for spin shower rinse.
- Wash Timer**
Select the desired time for soaking, washing or rinsing.
- Wash Program**
Set the program to "Gentle", "Normal", "Strong" according to kinds and quantity of the laundry.
- Drain Selector**
Select "Wash • Rinse" for washing and rinsing and "Drain" to drain the water out of the tub.
- Spin Timer**
Select the desired time for spinning. The maximum limit is 5 min. Don't rotate the knob more than prescribed limit.

3