

OWNER'S MANUAL

LED LCD MONITOR

(LED Monitor*)

* LG LED Monitor applies LCD screen with LED backlights.

Please read this manual carefully before operating your set and retain it for future reference.

34WP85C

34BP85C

34WP85CN

34BP85CN

www.lg.com

Copyright © 2021 LG Electronics Inc. All Rights Reserved.

TABLE OF CONTENTS

LICENSE	2
OPEN SOURCE SOFTWARE NOTICE	3
ASSEMBLING AND PREPARING	3
USING THE MONITOR	8
USER SETTINGS	10
TROUBLESHOOTING	22
PRODUCT SPECIFICATION	24

LICENSE

Each model has different licenses. Visit www.lg.com for more information on the license.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc.



The SuperSpeed USB Trident logo is a registered trademark of USB Implementers Forum, Inc.



MaxxAudio and additional MAXX trademarks are trademarks and/ or registered trademarks of Waves Audio Ltd.

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit http://opensource.lqe.com.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to *opensource@lge.com*. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

ASSEMBLING AND PREPARING

! CAUTION

- · Always use genuine LG components to ensure safety and product performance.
- The product warranty will not cover damage or injury caused by the use of unauthorized components.
- It is recommended that use the supplied components.
- If you use generic cables not certified by LG, the screen may not display or there may be image noises.
- Illustrations in this document represent typical procedures, so they may look different from the actual product.
- Do not apply foreign substances (oils, lubricants, etc.) to the screw parts when assembling the product. (Doing so may damage the product.)
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this
 way will not be covered by the product warranty.
- Do not carry the monitor upside down by just holding the base. This may cause the monitor to fall off the stand and could result in personal injury.
- When lifting or moving the monitor, do not touch the monitor screen. The force applied to the monitor screen may cause damage to it.



- The components may look different from those illustrated here.
- Without prior notice, all product information and specifications contained in this manual are subject to change to improve the performance of the product.
- To purchase optional accessories, visit an electronics store or an online shopping site, or contact the retailer from which you purchased the product.
- The power cord provided may differ depending upon the region.

Supported Drivers and Software

You can download and install the latest version from the LGE website (www.lq.com).

Drivers and Software	Installation Priority
Monitor Driver	Recommended
OnScreen Control	Recommended
Dual Controller	Optional

Product and Button Description



How to Use the Joystick Button

You can easily control the functions of the monitor by pressing the joystick button or moving it left/right/up/down with your finger.

Basic Functions

	Power on	Press the joystick button once with your finger to turn on the monitor.
<u></u>	Power off	Press and hold the joystick button once more than 3 seconds with your finger to turn off the monitor.
◄/ ▶	Volume control	You can control the volume by moving the joystick button left/right.

 


• The joystick button is located at the bottom of the monitor.

Moving and Lifting the Monitor

When moving or lifting the monitor, follow these instructions to prevent the monitor from being scratched or damaged and to ensure safe transportation, regardless of its shape or size.

- Place the monitor in the original box or packing material before attempting to move it.
- Before moving or lifting the monitor, disconnect the power cord and all other cables.
- Hold the bottom and side of the monitor frame firmly. Do not hold the panel itself.
- When holding the monitor, the screen should face away from you to prevent it from being scratched.
- When transporting the monitor, do not expose the monitor to shock or excessive vibration.
- When moving the monitor, keep it upright and never turn the monitor on its side or tilt it sideways.






CAUTION

- · Avoid touching the monitor screen as much as possible.
 - This may result in damage to the screen or some of the pixels used to create images.
- If you use the monitor panel without the stand base, its joystick button may cause the monitor to become
 unstable and fall, resulting in damage to the monitor or human injury. In addition, this may cause the joystick
 button to malfunction.

Installing on a Table

Lift the monitor and place it on the table in an upright position. Place the monitor at least 100 mm (3.94 inches) away from the wall to ensure sufficient ventilation.

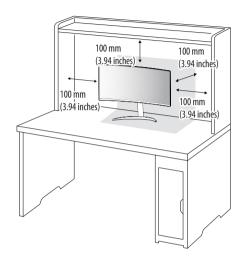



- Unplug the power cord before moving or installing the monitor. There is risk of electric shock.
- Make sure to use the power cord that is provided in the product package and connect it to a grounded power outlet.
- If you need another power cord, please contact your local dealer or the nearest retail store.

Adjusting the Stand Height

- 1 Place the monitor mounted on the stand base in an upright position.
- 2 Handle the monitor with both hands for safety.



WARNING

• When adjusting the screen height, do not place your hand on the stand body to avoid injury to your fingers.

Adjusting the Angle

- 1 Place the monitor mounted on the stand base in an upright position.
- 2 Adjust the angle of the screen.

The angle of the screen can be adjusted forward or backward from -5° to 20° for a comfortable viewing experience.

WARNING

- To avoid injury to the fingers when adjusting the screen, do not hold the lower part of the monitor's frame as illustrated below.
- Be careful not to touch or press the screen area when adjusting the angle of the monitor.



Using the Kensington Lock

The connector for the Kensington security system is located at the back of the monitor.

For more information on installation and usage, refer to the Kensington lock owner's manual or visit the website at http://www.kensington.com.

Connect the monitor to a table using the Kensington security system cable.





• The Kensington security system is optional. You can obtain optional accessories from most electronics stores.

Installing the Wall Mount Plate


This monitor meets the specifications for the wall mount plate or other compatible devices.



- **NOTE**
- The wall mount plate is sold separately.
- For more information on installation, refer to the wall mount plate's installation guide.
- Be careful not to apply too much force while mounting the wall mount plate as it may cause damage to the screen.
- Remove the stand before installing the monitor on a wall mount by performing the stand attachment in reverse.

Installing on the Wall

Install the monitor at least 100 mm (3.94 inches) away from the wall and leave about 100 mm (3.94 inches) of space at each side of the monitor to ensure sufficient ventilation. Detailed installation instructions can be obtained from your local retail store. Alternatively, please refer to the manual for how to install and set up a tilting wall mounting bracket.

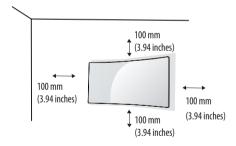

To install the monitor to a wall, attach a wall mounting bracket (optional) to the back of the monitor. Make sure that the wall mounting bracket is securely fixed to the monitor and to the wall.


Wall Mount (mm)	100 x 100
Standard screw	M4 x L10
Number of screws	4
Wall Mount Plate (Optional)	LSW 149



- A non-VESA standard screw may damage the product and cause the monitor to fall. LG Electronics is not liable for any accidents relating to the use of non-standard screws.
- The wall mount kit includes the installation guide and all necessary parts.
- The wall mounting bracket is optional. You can obtain optional accessories from your local dealer.
- The length of the screw may differ for each wall mounting bracket. If you use screws longer than the standard length, it may damage the inside of the product.
- For more information, please refer to the user manual for the wall mounting bracket.

! CAUTION

- Unplug the power cord before moving or installing the monitor to avoid electric shock.
- Installing the monitor on the ceiling or on a slanted wall may result in the monitor falling off, which could lead
 to injury. Use an authorized LG wall mount and contact the local dealer or qualified personnel.
- Applying excessive force when tightening screws may cause damage to the monitor. Damage caused in this
 way will not be covered by the product warranty.
- Use the wall mounting bracket and screws that conform to VESA standards. Damage caused by the use or misuse of inappropriate components will not be covered by the product warranty.
- When measured from the back of the monitor, the length of each installed screw must be 8 mm (0.3 inches)
 or less.

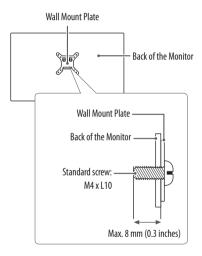

USING THE MONITOR

• Illustrations in this manual may differ from the actual product. Press the joystick button, go to **Settings** \rightarrow **Input**, and then select the input option.

! CAUTION

- Do not press the screen for a prolonged time. This may cause image distortion.
- Do not display a still image on the screen for a prolonged time. This may cause image retention. Use a PC screensaver if possible.
- When connecting the power cord to the outlet, use a grounded (3-hole) power strip or a grounded power
- The monitor may flicker when turned on in an area where the temperature is low. This is normal.
- Sometimes red, green, or blue spots may appear on the screen. This is normal.

Connecting to a PC

- This monitor supports the *Plug and Play feature.
- * Plug and Play: A feature that allows you to add a device to your computer without having to reconfigure anything or install any manual drivers.

HDMI Connection

Transmits digital video and audio signals from your PC to the monitor.

! CAUTION

- Using a DVI to HDMI / DP (DisplayPort) to HDMI cable may cause compatibility issues.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- Recommended HDMI cable types
- High-Speed HDMI°/™ cable
- High-Speed HDMI°/TM cable with Ethernet

DisplayPort Connection

Transmits digital video and audio signals from your PC to the monitor.



NOTE

- There may be no video or audio output depending on the DP (DisplayPort) version of the PC.
- If you are using a Mini DisplayPort output graphics card, use a Mini DP to DP (Mini DisplayPort to DisplayPort) cable or gender that supports DisplayPort1.2 or 1.4. (Sold separately)

Connecting AV Devices

HDMI Connection

HDMI transmits digital video and audio signals from your AV device to the monitor.



- Using a DVI to HDMI / DP (DisplayPort) to HDMI cable may cause compatibility issues.
- Use a certified cable with the HDMI logo attached. If you do not use a certified HDMI cable, the screen may not display or a connection error may occur.
- · Recommended HDMI cable types
- High-Speed HDMI°/™ cable
- High-Speed HDMI°/TM cable with Ethernet

Connecting Peripherals

USB Device connection

The USB port on the product functions as a USB hub.



- It is recommended you install all Windows Updates to keep your Windows up-to-date before connecting to the product for use.
- Peripheral devices are sold separately.
- A keyboard, mouse, or USB device can be connected to the USB port.
- The charging speed may vary depending on the device.
- To use USB Downstream port of monitor, user must connect Upstream port of monitor to Host PC using USB C-C or USB C-A cable.
- When the USB C-C cable is connected between Upstream port of monitor and Host PC, the Downstream port of monitor support USB 2.0 device.
- When the USB C-A cable is connected between Upstream port of monitor and Host PC, the Downstream port of monitor support USB 3.0 device.

However, Host PC must support USB 3.0 function.

! CAUTION

Cautions When Using a USB Device

- A USB device with an automatic recognition program installed, or that uses its own driver, may not be recognized.
- Some USB devices may not be supported or may not work properly.
- It is recommended to use a USB hub or hard disk drive with power supplied. (If the power supply is not adequate, the USB device may not be recognized properly.)

Headphones Connection

Connect peripherals to the monitor via the headphones port.



NOTE

- Peripheral devices are sold separately.
- Depending on the audio settings of the PC and external device, headphones and speaker functions may be limited.
- If you use angled earphones, it may cause a problem with connecting another external device to the monitor. Therefore, it is recommended to use straight earphones.







Straight (Recommend)

USER SETTINGS



- Your monitor's OSD (On Screen Display) may differ slightly from that shown in this manual.
- When **Beep Guide** is activated, pressing the joystick button will take you to **Settings** right away.


Activating the Main Menu



- 1 Press the joystick button on the bottom of the monitor.
- Move the joystick up/down and left/right to set the options.
- Press the joystick button once more to exit the main menu.

Button	Menu Status		Description
	Main me	nu disabled	Enables the main menu.
	Main menu enabled		Exits the main menu. (Holding down the button more than 3 seconds to turn off the monitor. You can turn off the monitor this way at any time, including when the OSD is on.)
		Main menu disabled	Adjusts the monitor volume level.
	Main menu enabled		Enters the Input features.
	Main menu disabled Main menu enabled		Adjusts the monitor volume level.
			Enters the Settings feature.
A		Main menu disabled	Enters the Accessibility menu.
		Main menu enabled	Turns off the monitor.
	_	Main menu disabled	Enters the Accessibility menu.
V	Main menu enabled		Enters the Picture Mode feature.

Main Menu Features

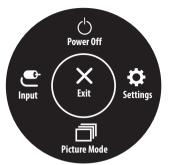

Main Menu	Description		
Input	Sets input mode.		
Power Off	Turns off the monitor.		
Settings	Configures the screen settings.		
Picture Mode	Sets the picture mode.		
Exit	Exits the main menu.		

Menu Settings

- To view the OSD menu, press the joystick button at the bottom of the monitor and then enter the **Settings**.
- Move the joystick up/down and left/right to set the options.
- To return to the upper menu or set other menu items, move the joystick to ◀or pressing (心) it.
- If you want to exit the OSD menu, move the joystick to ◀until you exit.











Quick Settings

Input

Picture

Sound

General

Quick Settings

Settings > Quick Settings	Description			
Brightness	Adicate the control of the control o	64		
Contrast	Adjusts the contrast and brightness o	of the screen.		
	Adjusts the volume.			
Volume	NOTE	₽ NOTE		
	- You can adjust Mute / Unmute by moving the joystick button to ▼ in the Volume menu.			
Waves MaxxAudio®	On MaxxAudio® by waves, recipient of a Technical GRAMMY Award® is a suite of studio-quality sound tools for a superior listening experience. Off Disables the MaxxAudio function.			
waves maxxaudio				
	Custom The user can adjust it to red, green, or blue by customization.			
	Warm Sets the screen color to a reddish tone. Medium Sets the screen color between a red and blue tone. Cool Sets the screen color to a bluish tone.			
Color Temp				
	Manual The user can fine-tune the color temperature.			

Input

Settings > Input	Description		
	Input List	Selects the input mode.	
		When automatic input switch is set to On , display will automatically switch to new input when connected.	
	Auto Input Switch	On	Enables Auto Input Switch.
		Off	Disables Auto Input Switch.
		Adjusts the aspect ratio of the screen.	
land.		Full Wide	Displays the video in widescreen, regardless of the video signal input.
Input	Aspect Ratio	Original	Displays video according to the aspect ratio of the video signal input.
	● NOTE		
		• The display may look the same for Full Wide and Original options at the recommended resolution. (3440 x 1440	
	PBP	Displays the screens of two input modes on one monitor.	
	Main/Sub Screen Change Toggles between the main screen and sub screen in PBP mode.		en and sub screen in PBP mode.
	Main/Sub Sound Change	Toggles between the audio of the main screen and sub screen in PBP mode.	

Picture



• The **Picture Mode** that can be set depends on the Input signal.

[Picture Mode on SDR (Non-HDR) signal]

Settings > Picture	Description			
	Custom	Allows the user to adjust each element.		
	Vivid	Heightens contrast, brightness and sharpness to display vivid images.		
	HDR Effect	Optimizes the screen for high dynamic range.		
	Reader	Optimizes the screen for viewing documents. You can brighten the screen in the OSD menu.		
	Cinema	a Optimizes the screen for video.		
Picture Mode	FPS			
	RTS			
	Color Weakness	This mode is for users who cannot distinguish between red and green. It enables users with color weakness to easily distinguish between the two colors.		
	NOTE			
	• If the Picture Mode is changed in the DP (DisplayPort) input, the screen may flicker or the resolution of your PC screen may be affected.			

[Picture Mode on HDR signal]

Settings > Picture	Description			
	Custom	Allows the user to adjust each element.		
	Vivid	Optimized the screen for HDR vivid colors.		
	Cinema	Optimized the screen for HDR video.		
	FPS	This mode is optimized for FPS games.It is suitable for very dark FPS games.		
Picture Mode	RTS This mode is optimized for RTS Game.			
	NOTE HDR content may not display correctly depending on Window10 OS settings, please check HDR On/Off settings in Windows. When the HDR function is turned on, the characters or picture quality may be poor according to Graphic card performance. While the HDR function is on, screen flickering or cracking may occur when changing the monitor input or power on/off according to Graphic card performance.			

Settings > Picture	Description		
	Brightness	Adjusts the contrast and brightness of the screen.	
	Contrast		
	Sharpness	Adjusts the sharpness of the screen.	
		High	Optimizes the screen for crystal clear images. Best for high-definition video or games.
		Middle	Optimizes the screen for comfortable viewing, with images at the middle level between the low and high modes. Best for UCC or SD videos.
	SUPER RESOLUTION+	Low	Optimizes the screen for smooth and natural images. Best for still images or images with less movement.
	SUPER RESULUTION+	Off	Displays in the most common setting. Disables SUPER RESOLUTION+ .
Picture Adjust		 NOTE Because this is a function to increase the sharpness of low resolution pictures, it is not recommended to use the function for normal text or for desktop icons. Doing so may result in unnecessarily high sharpness. 	
		Sets the offset level (for HDMI only). • Offset: as a reference for a video signal, this is the darkest color the monitor can display.	
	Black Level	High	Keeps the current contrast ratio of the screen.
		Low	Lowers the black levels and raises the white levels from the current contrast ratio of the screen.
	DFC	0n	Adjusts the brightness automatically according to the screen.
	ערל	Off	Disables the DFC feature.

Settings > Picture	Description		
		Sets a response time for displayed pictures based on the movement of the picture on the screen. For a normal environment, it is recommended that you use Fast . When there is a lot of motion, it is recommended that you use Faster . Setting to Faster may cause image sticking.	
	Response Time	Faster	Sets the response time to faster.
		Fast	Sets the response time to fast.
		Normal	Sets the response time to normal.
		Off	Does not use the response time improvement feature.
Game Adjust	FreeSync	Provides seamless and natural images by synchronizing the vertical frequency of the input signal with that of the output signal with that output signal with that output signal with that output signal with the output signal with the output signal with that output signal with the output signal with the output s	
		Off	FreeSync function off.
You can control the black contrast to have better visibility in dark scenes. Black Stabilizer Increasing the Black Stabilizer value brightens the low gray level area on the screen. (You can easily dis Reducing the Black Stabilizer value darkens the low gray level area and increases the dynamic contrast		r value brightens the low gray level area on the screen. (You can easily distinguish objects on dark game screens.)	

Settings > Picture	Description			
	Gamma	Mode 1, Mode 2, Mode 3	The higher the gamma value, the darker the image becomes. Likewise, the lower the gamma value, the lighter the image becomes.	
		Mode 4	If you do not need to adjust the gamma settings, select Mode 4 .	
		Set your own color temperature		
		Custom	The user can adjust it to red, green, or blue by customization.	
	Color Temp	Warm	Sets the screen color to a reddish tone.	
		Medium	Sets the screen color to between a red and blue tone.	
Color Adjust		Cool	Sets the screen color to a bluish tone.	
		Manual	The user can fine-tune the color temperature.	
	Red/Green/Blue	You can customize the picture color using red, green, and blue colors.		
	Six Color	Meets the user requirements for colors by adjusting the hue and saturation of the six colors (red, green, blue, cyan, magenta, and yellow) and then saving the settings.		
		Hue	Adjusts the tone of the screen colors.	
		Saturation	Adjusts the saturation of the screen colors. The lower the value, the less saturated and brighter the colors become. The higher the value, the more saturated and darker the colors become.	
Dieturo Pocot	bo you want to leset your	Yes	Returns to the default settings.	
Picture Reset		No	Cancel the select.	

Sound

Settings > Sound	Description		
	Adjusts the volume level.		
Volume	NOTE		
	You can adjust Mute / Unmute by	y moving the joystick button to▼ in the Volume menu.	
Waves MaxxAudio®	On	MaxxAudio® by waves, recipient of a Technical GRAMMY Award® is a suite of studio-quality sound tools for a superior listening experience.	
waves maxxaudio	Off	Disables the MaxxAudio function.	

General

Settings > General	Description		
Language	Sets the menu screen to the desired language.		
	Conserve energy by using luminance compensation algorithm.		
	High	Saves energy using the high-efficiency SMART ENERGY SAVING feature.	
	Low	Saves energy using the low-efficiency SMART ENERGY SAVING feature.	
SMART ENERGY SAVING	Off	Disables the feature.	
	 NOTE The value of energy saving data may differ depending on panel and panel suppliers. If you select the option of SMART ENERGY SAVING is High or Low, monitor luminance become lower or higher depend on source. 		
	[Mode 1], [Mode 2]	, power consumption is minimized while the monitor is in standby mode. Enables Deep sleep Mode.	
Deep Sleep Mode	Off	Disables Deep sleep Mode.	
	NOTE - USB HUB functions will not work in standby mode while Deep sleep Mode is [Mode 2].		
	Turns the power LED on the bottom of the monitor on or off.		
	On	The power LED turns on automatically.	
	Off	The power LED turns off.	
Power LED	NOTE When the Power LED function is turned on, it operates as follows: On Mode: White Sleep Mode: White Blinking Off Mode: Off		
Automatic Standby	Feature that automatically turns off the monitor when there is no movement on the screen for a period of time. You can set a timer for the auto-off function. (8 H, 6 H, 4 H, and Off)		

Settings > General	Description			
DisplayPort Version	Set DisplayPort Version to the same version as the connected external device. (1.4 and 1.2) To use the HDR function, set to 1.4.			
	HDMI Compatibility Mode feature can	recognize the legacy equipment that does not support HDMI 2.0.		
	0n	Enables HDMI Compatibility Mode.		
	Off	Disables HDMI Compatibility Mode.		
HDMI Compatibility Mode	 NOTE If the connected device does not support HDMI Compatibility Mode, the screen or sound may not work properly. When HDMI Compatibility Mode is on, HDR function is not supported. Some older graphics cards do not support HDMI 2.0, but you can select HDMI 2.0 resolution in the control panel of window. This may cause the screen to appear abnormal control panel of window. 			
	This feature lets you set the sound generated from Buzzer when your monitor powers on.			
Buzzer	On	Enables your monitor's Buzzer .		
	Off	Disables your monitor's Buzzer .		
	This feature disables the configuration	n and adjustment of menus.		
OSD Lock	0n	Enables OSD Lock.		
	Off	Disables OSD Lock.		
Information	The following display information will be shown; Total Power On Time , Resolution .			
Reset to Initial Settings	Do you want to reset your settings?			
	Yes	Returns to the default settings.		
	No	Cancel the reset.		

TROUBLESHOOTING

Nothing is displayed on the screen.	
Is the monitor's power cord plugged in?	Check if the power cord is correctly plugged into the power outlet.
Is the power LED on?	Check the power cable connection and press the power button.
Is the power on and the power LED displaying white?	Check that the connected input is enabled (Settings > Input).
Is the No Signal message being displayed?	This is displayed when the signal cable between the PC and the monitor is missing or disconnected. Check the cable and reconnect it.
Is the Out of Range message being displayed?	This occurs when signals transferred from the PC (graphics card) are out of the horizontal or vertical frequency range of the monitor. Please see the Product Specification section of this manual to set the appropriate frequency.
Screen display is unstable and shaky. / Images displayed on the	monitor leave shadow trails.
Did you select the appropriate resolution?	 If the selected resolution is HDMI 1080i 60/50 Hz (interlaced), the screen may be flickering. Change the resolution to 1080p or the recommended resolution. Not setting the graphics card to the recommended (optimal) resolution may result in blurred text, a dimmed screen, a truncated display area or misalignment of the display. The setting methods may be different depending on the computer or operating system, and some resolutions may not be available depending on the performance of the graphics card. If this is the case, contact the manufacturer of the computer or graphics card for assistance.
Does image sticking occur even when the monitor is turned off?	 Displaying a still image for a prolonged time may cause damage to the screen, resulting in the retention of the image. To extend the lifetime of the monitor, use a screensaver.
Are there spots on the screen?	• When using the monitor, pixilated spots (red, green, blue, white, or black) may appear on the screen. This is normal for an LCD screen. It is not an error, nor is it related to the monitor's performance.
Some features are disabled.	
Are some functions not available when you press the Menu button?	The OSD is locked. Disable OSD Lock in General.

Do you see an "Unrecognized monitor, Plug and Play (VESA DDC) monitor found" message?		
Have you installed the display driver?	 Be sure to install the display driver from our web site: http://www.lg.com. Make sure to check if the graphics card supports Plug and Play function. 	
No sound from the headphone port.		
Are images displayed without sound?	 Make sure that the headphone port connections are made properly. Try increasing the volume with the joystick. Set the audio output of the PC to the monitor you are using. (The settings may differ depending on the operating system (OS) you use.) 	



• LED can be lighted with Set OSD Menu. Settings — General — Power LED — On

PRODUCT SPECIFICATION

34WP85C/34WP85CN

Color Depth	8-bit color is supported.			
Desclusion	Max Resolution	3440 x 1440 @ 60 Hz		
Resolution	Recommended Resolution	3440 x 1440 @ 60 Hz		
	Power Rating	19.5 V = 8.5 A		
Power Sources	Power Consumption	On mode: 42 W Typ. (Outgoing condition) * Sleep Mode (Standby Mode) \leq 0.5 W (HDMI / DP input Condition) ** Off Mode \leq 0.3 W		
AC/DC adaptor	ACC-LATP1 type, SHENZHEN HONOR ELECTRONIC Output: 19.5 V ==== 10.8 A			
	Operating Conditions	Temperature	0 °C to 40 °C (32 °F to 104 °F)	
Environmental Conditions		Humidity	Less than 80 %	
Environmental Conditions	Carrier Condition	Temperature	-20 °C to 60 °C (-4 °F to 140 °F)	
	Storing Conditions	Humidity	Less than 85 %	
	Monitor Size (Width x Height x Depth)			
Dimensions	With Stand	814.0 x 571.1 x 260.0 (mm)	32.0 x 22.4 x 10.2 (inches)	
	Without Stand	814.0 x 359.1 x 90.0 (mm)	32.0 x 14.1 x 3.5 (inches)	
Woight (Without Packaging)	With Stand	8.2 kg	18.0 lbs	
Weight (Without Packaging)	Without Stand	6.3 kg	13.8 lbs	

The specifications are subject to change without notice.

The \sim symbol means alternating current, and the $\frac{1}{2}$ symbol means direct current.

The power consumption level can be different by operating condition and monitor setting.

 $[\]hbox{* The On mode power consumption is measured with LGE test standard (Full White pattern , Maximum resolution).}\\$

^{**} In case of USB-C input, the power consumption of Sleep Mode may vary depending on the connected device.

^{**} The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).

PRODUCT SPECIFICATION

34BP85C/34BP85CN

Color Depth	8-bit color is supported.			
Develoption	Max Resolution	3440 x 1440 @ 60 Hz		
Resolution	Recommended Resolution	3440 x 1440 @ 60 Hz		
	Power Rating	19.5 V = 8.5 A		
Power Sources On mode: 28.2 W Typ. (ENERGY STAR® standard) * Sleep Mode (Standby Mode) ≤ 0.5 W (HDMI / DP input Condition) ** Off Mode ≤ 0.3 W		ut Condition) **		
AC/DC adaptor	ACC-LATP1 type, SHENZHEN HONOR ELECTRONIC Output: 19.5 V = == 10.8 A			
	Operating Conditions	Temperature	0 °C to 40 °C (32 °F to 104 °F)	
Funitaria antal Candisiana		Humidity	Less than 80 %	
Environmental Conditions	S. J. S. IV.	Temperature	-20 °C to 60 °C (-4 °F to 140 °F)	
	Storing Conditions	Humidity	Less than 85 %	
	Monitor Size (Width x Height x Depth)			
Dimensions	With Stand	814.0 x 571.1 x 260.0 (mm)	32.0 x 22.4 x 10.2 (inches)	
	Without Stand	814.0 x 359.1 x 90.0 (mm)	32.0 x 14.1 x 3.5 (inches)	
Weight (Without Packaging)	With Stand	8.2 kg	18.0 lbs	
	Without Stand	6.3 kg	13.8 lbs	

The specifications are subject to change without notice.

The \sim symbol means alternating current, and the $\frac{1}{2\pi - 2}$ symbol means direct current.

The power consumption level can be different by operating condition and monitor setting.

^{*} The On mode power consumption is measured with ENERGY STAR* test standard.

^{**} In case of USB-C input, the power consumption of Sleep Mode may vary depending on the connected device.

^{**} The monitor goes to the Sleep Mode in a couple of minutes(Max 5 minutes).

Factory Support Mode (Preset Mode, PC)

DisplayPort / USB-C

Preset Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Polarity (H/V)	Remarks
640 x 480	31.469	59.94	-/-	
800 x 600	37.879	60.317	+/+	
1024 x 768	48.363	60	-/-	
1920 x 1080	66.587	59.934	+/-	
1720 x 1440	88.739	59.92	+/-	
3440 x 1440	73.631	49.953	+/-	
3440 x 1440	88.841	59.987	+/-	DP/USB-C Preferred timing
3440 x 1440	111.864	74.976	+/-	

HDMI

Preset Mode	Horizontal Frequency (kHz)	Vertical Frequency (Hz)	Polarity (H/V)	Remarks
640 x 480	31.469	59.94	-/-	
800 x 600	37.879	60.317	+/+	
1024 x 768	48.363	60	-/-	
1920 x 1080	66.587	59.934	+/-	
1720 x 1440	88.739	59.92	+/-	
3440 x 1440	73.631	49.953	+/-	Recommended Timing (HDMI1.4) HDMI ULTRA HD Deep Color : OFF
3440 x 1440	88.841	59.987	+/-	Recommended Timing (HDMI2.0) HDMI ULTRA HD Deep Color : ON
3440 x 1440	111.864	74.976	+/-	

HDMI Timing (Video)

Factory support mode (Preset Mode)	Horizontal Frequency(kHz)	Vertical Frequency(Hz)	Remarks
480p	31.5	60	
720p	45.0	60	
1080p	67.5	60	
2160p	135	60	

Beep Guide

Menu	Location
Quick Settings	1
Quick Settings - Brightness	11
Quick Settings - Brightness	111 Slider
Quick Settings - Contrast	12
Quick Settings - Contrast	1 2 1 Slider
Quick Settings - Volume	13
Quick Settings - Volume	1 3 1 Slider
Quick Settings - Waves MaxxAudio	1 4 Toggle
Quick Settings - Color Temp	15
Quick Settings - Color Temp - Custom	151
Quick Settings - Color Temp - Warm	152
Quick Settings - Color Temp - Medium	153
Quick Settings - Color Temp - Cool	154
Quick Settings - Color Temp - Manual	155
Quick Settings - Color Temp - Manual	1551Slider
Input (PBP Off)	2
Input (PBP Off) - Input List	21
Input (PBP Off) - Input List - HDMI1	211
Input (PBP Off) - Input List - HDMI2	212
Input (PBP Off) - Input List - DisplayPort	213
Input (PBP Off) - Input List - USB-C	214
Input (PBP Off) - Auto Input Switch	2 2 Toggle

Menu	Location
Input (PBP Off) - Aspect Ratio	23
Input (PBP Off) - Aspect Ratio - Full Wide	231
Input (PBP Off) - Aspect Ratio - Original	232
Input (PBP Off) - PBP - Off	241
Input (PBP Off) - PBP - On	242
Input (PBP Off) - Main/Sub Screen Change	2 5 Toggle
Input (PBP Off) - Main/Sub Sound Change	2 6 Toggle
Input (PBP On)	2
Input (PBP On) - Input List	21
Input (PBP On) - Input List - Main Input	211
Input (PBP On) - Input List - Main Input - HDMI1	2111
Input (PBP On) - Input List - Main Input - HDMI2	2112
Input (PBP On) - Input List - Main Input - DisplayPort	2113
Input (PBP On) - Input List - Main Input - USB-C	2114
Input (PBP On) - Input List - Sub Input	212
Input (PBP On) - Input List - Sub Input - HDMI1	2121
Input (PBP On) - Input List - Sub Input - HDMI2	2122
Input (PBP On) - Input List - Sub Input - DisplayPort	2123
Input (PBP On) - Input List - Sub Input - USB-C	2124
Input (PBP On) - Aspect Ratio	22
Input (PBP On) - Aspect Ratio - Main Aspect Ratio	221

Menu	Location
Input (PBP On) - Aspect Ratio - Main Aspect Ratio - Full Wide	2211
Input (PBP On) - Aspect Ratio - Main Aspect Ratio - Original	2212
Input (PBP On) - Aspect Ratio - Sub Aspect Ratio	222
Input (PBP On) - Aspect Ratio - Sub Aspect Ratio - Full Wide	2221
Input (PBP On) - Aspect Ratio - Sub Aspect Ratio - Original	2222
Input (PBP On) - PBP	23
Input (PBP On) - PBP - Off	231
Input (PBP On) - PBP - On	232
Input (PBP On) - Main/Sub Screen Change - On	2 4 Yes
Input (PBP On) - Main/Sub Sound Change - On	2 5 Yes
Picture	3
Picture - Picture Mode	31
Picture - Picture Mode - Custom	311
Picture - Picture Mode - Vivid	312
Picture - Picture Mode - HDR Effect	313
Picture - Picture Mode - Reader	314
Picture - Picture Mode - Cinema	315
Picture - Picture Mode - FPS	316
Picture - Picture Mode - RTS	317

Menu	Location	
Picture - Picture Mode - Color Weakness	318	
Picture - Picture Adjust	32	
Picture - Picture Adjust - Brightness	321	
Picture - Picture Adjust - Brightness	3 2 1 1 Slider	
Picture - Picture Adjust - Contrast	322	
Picture - Picture Adjust - Contrast	3 2 2 1 Slider	
Picture - Picture Adjust - Sharpness	323	
Picture - Picture Adjust - Sharpness	3 2 3 1 Slider	
Picture - Picture Adjust - SUPER RESOLUTION+	324	
Picture - Picture Adjust - SUPER RESOLUTION+ - High	3241	
Picture - Picture Adjust - SUPER RESOLUTION+ - Middle	3242	
Picture - Picture Adjust - SUPER RESOLUTION+ - Low	3243	
Picture - Picture Adjust - SUPER RESOLUTION+ - Off	3244	
Picture - Picture Adjust - Black Level	325	
Picture - Picture Adjust - Black Level - High	3251	
Picture - Picture Adjust - Black Level - Low	3252	
Picture - Picture Adjust - DFC	3 2 7 Toggle	
Picture - Game Adjust	33	
Picture - Game Adjust - Response Time	331	
Picture - Game Adjust - Response Time - Faster	3311	
Picture - Game Adjust - Response Time - Fast	3312	
Picture - Game Adjust - Response Time - Normal	3313	

Menu	Location
Picture - Game Adjust - Response Time - Off	3314
Picture - Game Adjust - FreeSync	3 3 2 Toggle
Picture - Game Adjust - Black Stabilizer	333
Picture - Game Adjust - Black Stabilizer	3 3 3 1 Slider
Picture - Color Adjust	3 4
Picture - Color Adjust - Gamma	341
Picture - Color Adjust - Gamma - Mode 1	3 4 1 1
Picture - Color Adjust - Gamma - Mode 2	3412
Picture - Color Adjust - Gamma - Mode 3	3413
Picture - Color Adjust - Gamma - Mode 4	3414
Picture - Color Adjust - Color Temp	3 4 2
Picture - Color Adjust - Color Temp - Custom	3 4 2 1
Picture - Color Adjust - Color Temp - Warm	3422
Picture - Color Adjust - Color Temp - Medium	3423
Picture - Color Adjust - Color Temp - Cool	3 4 2 4
Picture - Color Adjust - Color Temp - Manual	3425
Picture - Color Adjust - Color Temp - Manual	3 4 2 5 1 Slider
Picture - Color Adjust - Red	343
Picture - Color Adjust - Red	3 4 3 1 Slider
Picture - Color Adjust - Green	3 4 4
Picture - Color Adjust - Green	3 4 4 1 Slider
Picture - Color Adjust - Blue	3 4 5
Picture - Color Adjust - Blue	3 4 5 1 Slider

Menu	Location	
Picture - Color Adjust - Six Color	346	
Picture - Color Adjust - Six Color - Red Hue	3461	
Picture - Color Adjust - Six Color - Red Hue	3 4 6 1 1 Slider	
Picture - Color Adjust - Six Color - Red Saturation	3462	
Picture - Color Adjust - Six Color - Red Saturation	3 4 6 2 1 Slider	
Picture - Color Adjust - Six Color - Green Hue	3463	
Picture - Color Adjust - Six Color - Green Hue	3 4 6 3 1 Slider	
Picture - Color Adjust - Six Color - Green Saturation	3464	
Picture - Color Adjust - Six Color - Green Saturation	3 4 6 4 1 Slider	
Picture - Color Adjust - Six Color - Blue Hue	3465	
Picture - Color Adjust - Six Color - Blue Hue	3 4 6 5 1 Slider	
Picture - Color Adjust - Six Color - Blue Saturation	3466	
Picture - Color Adjust - Six Color - Blue Saturation	3 4 6 6 1 Slider	
Picture - Color Adjust - Six Color - Cyan Hue	3467	
Picture - Color Adjust - Six Color - Cyan Hue	3 4 6 7 1 Slider	
Picture - Color Adjust - Six Color - Cyan Saturation	3468	
Picture - Color Adjust - Six Color - Cyan Saturation	3 4 6 8 1 Slider	
Picture - Color Adjust - Six Color - Magenta Hue	3469	
Picture - Color Adjust - Six Color - Magenta Hue	3 4 6 9 1 Slider	
Picture - Color Adjust - Six Color - Magenta Saturation	3 4 6 10	
Picture - Color Adjust - Six Color - Magenta Saturation	3 4 6 10 1 Slider	
Picture - Color Adjust - Six Color - Yellow Hue	3 4 6 11	

Menu	Location	
Picture - Color Adjust - Six Color - Yellow Hue	3 4 6 11 1 Slider	
Picture - Color Adjust - Six Color - Yellow Saturation	3 4 6 12	
Picture - Color Adjust - Six Color - Yellow Saturation	3 4 6 12 1 Slider	
Picture - Picture Reset	35	
Picture - Picture Reset - Yes	351	
Picture - Picture Reset - No	352	
Sound	4	
Sound - Volume	41	
Sound - Volume	4 1 1 Slider	
Sound - Waves MaxxAudio	4 2 Toggle	
General	5	
General - Language	51	
General - Language - English	511	
General - Language - German	512	
General - Language - French	513	
General - Language - Spanish	514	
General - Language - Italian	515	
General - Language - Swdish	516	
General - Language - Finnish	517	
General - Language - Portuguese	518	
General - Language - Portuguese (Brazil)	519	
General - Language - Polish	5 1 10	
General - Language - Russian	5111	

Menu	Location
General - Language - Greek	5 1 12
General - Language - Ukrainian	5 1 13
General - Language - Chinese	5 1 14
General - Language - Traditional Chinese	5 1 15
General - Language - Japanese	5 1 16
General - Language - Korean	5 1 17
General - SMART ENERGY SAVING	52
General - SMART ENERGY SAVING - High	521
General - SMART ENERGY SAVING - Low	522
General - SMART ENERGY SAVING - Off	523
General - Deep Sleep Mode	53
General - Deep Sleep Mode - Mode 2	531
General - Deep Sleep Mode - Mode 1	532
General - Deep Sleep Mode - Off	533
General - Power LED	5 4 Toggle
General - Automatic Standby	5 5
General - Automatic Standby - Off	551
General - Automatic Standby - 4H	552
General - Automatic Standby - 6H	553
General - Automatic Standby - 8H	554
General - DisplayPort Version	56
General - DisplayPort Version - 1.4	561
General - DisplayPort Version - 1.2	562

Menu	Location
General - HDMI Compatibility Mode	5 7 Toggle
General - Buzzer	5 8 Toggle
General - OSD Lock	5 9 Toggle
General - Information 5 10	
General - Reset to Initial Settings	5 11
General - Reset to Initial Settings - Yes	5 11 1
General - Reset to Initial Settings - No	5 11 2



Supplier's Declaration of Conformity

Trade Name LG

Responsible Party LG Electronics USA, Inc.

Address 111 Sylvan Avenue, North Building,

Englewood Cliffs,NJ 07632

E-mail lg.environmental@lge.com

The model and serial number of the product are located on the back and on one side of the product. Record them below in case you ever need service.

Model		
Serial No.		
,		



(for 34BP85C/34BP85CN)

This Product qualifies for ENERGY STAR®

Changing the factory default configuration and settings or enabling certain optional features and functionalities may increase energy consumption beyond the limits required for ENERGY STAR $^{\odot}$ certification.

Refer to ENERGYSTAR.gov for more information on the ENERGY STAR $^{\scriptsize @}$ program.