



SIMPLE MANUAL

Wireless Sound Bar

ENGLISH

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODELS


SJ7

SJ7-C



www.lg.com

 Copyright © 2017 LG Electronics Inc. All Rights Reserved.



Front/Side Panel

Primary unit



-/+ : Adjusts Volume
F : Selects Function
Power : Standby

Secondary unit




>|| : Starts or pauses playback.
Bluetooth : Connects Bluetooth device.
Bluetooth : Bluetooth LED

LED indicator
(Connection LED)

TV Connection

Connect with the Sound Bar and TV using Optical or HDMI ARC.

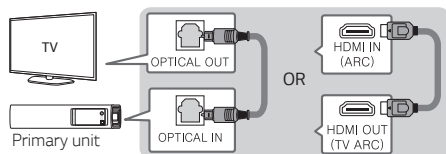


- 1 Connect the sound bar to the TV using Optical or HDMI cable.
- 2 Set up [External Speaker (Optical)] or [External Speaker (HDMI ARC)] on your TV setting menu.



- HDMI connection is unavailable if your TV does not support HDMI ARC.
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal is a high priority.

Additional Device Connection

- 1 Connect to the external device. It is recommended to connect as follows.

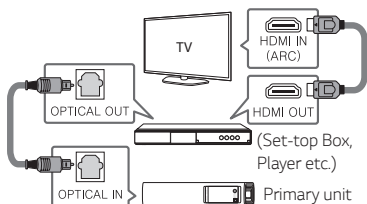

- 2 Set the input source by pressing F on the remote control or unit repeatedly.

 
Speaker Connection

You can use speaker connection in the SOUND BAR or REAR usage mode only.

Secondary unit connection

Place the Secondary unit near the Primary unit and follow steps below.

- 1 Connect the power cord of Secondary unit and Primary unit to the outlet.
- 2 Turn on the Primary unit by pressing Power. Turn on the Secondary unit by switching the Usage Mode Switch to REAR or SOUND BAR.



Secondary unit

The Primary unit and Secondary unit will be **automatically** connected. The Secondary unit's white LED turns on.

Secondary unit Connection Manually

If the Secondary unit does not make sound, try to connect manually.

- 1 Turn off the Primary unit.
- 2 Press **PAIRING** button on the rear of the Secondary unit. The white LED on the front of Secondary unit blinks.
- 3 Turn on the Primary unit.
- 4 Pairing is completed. The white LED on the front of Secondary unit turns on.

Subwoofer connection

Place the wireless subwoofer near the speaker and follow steps below.

- 1 Connect the power cord of wireless subwoofer and sound bar to the outlet.
- 2 Turn on the Primary unit :
The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's green LED turns on.

Subwoofer Connection Manually

If the subwoofer does not make sound, try to connect manually.

- 1 Press **Pairing** button on the rear of the wireless subwoofer. The green LED blinks quickly.
- 2 Turn on the Primary unit.
- 3 Pairing is completed. The green LED turns on.

Positioning the Unit


SOUND BAR usage mode

Primary unit and Secondary unit play as FRONT L/ R(Left/Right) speaker like a sound bar.

Turn on the Primary unit by pressing .

Turn on the Secondary unit by switching the Usage Mode Switch to SOUND BAR.

When disconnecting AC Adapter of Secondary unit, the audio output may be reduced.

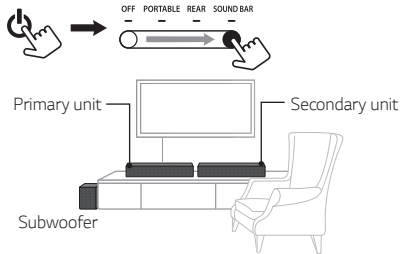


PORTABLE usage mode

You can play Secondary unit without Primary unit.

Primary unit and Secondary unit play separately with each connected device.

Turn on the Secondary unit by switching the Usage Mode Switch to PORTABLE.

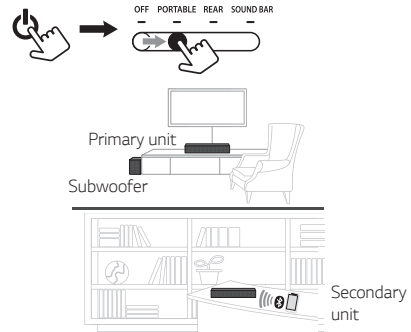


REAR usage mode

Primary unit plays as front speaker and Secondary unit plays as rear surround speaker.

Turn on the Primary unit by pressing .

Turn on the Secondary unit by switching the Usage Mode Switch to REAR.

When disconnecting AC Adapter of Secondary unit, the audio output may be reduced.

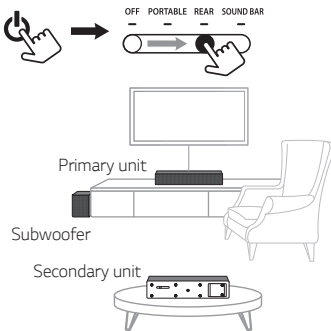

BLUETOOTH Connection (Secondary unit)

Select LG SJ7-2ND (xx) from device list to pair your mobile device.

When successfully Paired, Bluetooth LED turns on white with beep sound.

BLUETOOTH Connection (Primary unit)

- ① Press F button to select the BT (Bluetooth) Function.
- ② Select LG SJ7 (xx) from device list to pair your mobile device.


When successfully Paired, "PAIRED" Your device's name "BT" appears in the display window in this order.

OFF usage mode

Primary unit plays alone without Secondary unit


Turn on the Primary unit by pressing .

Turn on the Secondary unit by switching the Usage Mode Switch to OFF.

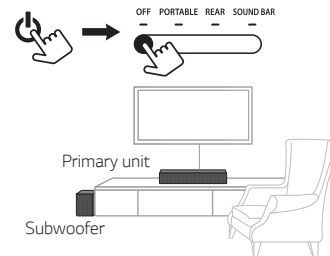

Charging the Unit

Before using it, charge the battery by connecting the AC Adapter. (Secondary unit only)

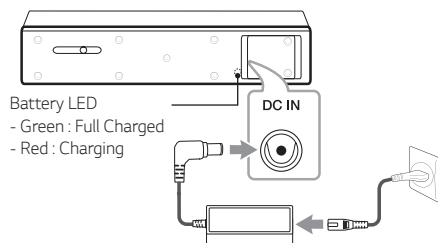

Remote control



🌙: Turns down the volume at night.

REAR LEVEL -/+: Adjusts rear level of Secondary unit on the REAR usage mode.


SURROUND: Turns on/off Surround function.

AV SYNC: Synchronizes the audio and video.


AUTO VOL: Automatically adjusts too loud or low output volume level appropriately.

AUTO POWER: Automatically turns on by an input source.

Replacement of battery

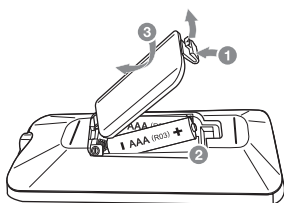

About Ferrite Core (Optional)

 

Wind AC adapter cable around the ferrite core once.
Connect the AC adapter applied a ferrite core to the secondary unit..

Additional Information

Specification

Power consumption	Refer to the main label. Networked standby : 1.5 W (If all network ports are activated.)
AC adapter	- Model : DA-38A25 - Manufacturer : Asian Power Devices Inc. - Input : 100 - 240 V ~ 50 - 60 Hz 1.2 A - Output : 25 V $\overline{\text{---}}$ 1.52 A
Dimensions (W x H x D)	Approx. 340 mm x 74 mm x 110 mm With foot (In each of Primary unit and Secondary unit)
Amplifier (Total RMS Output power)	320 W RMS (In state of connecting AC Adapter).
Operating time (Battery)	Approx. 4 hours (Varies by volume level and audio content.)

Design and specifications are subject to change without notice.

How to disconnect the wireless network connection or the wireless device

Set up the AUTO POWER ON/OFF function to off and turn off the unit.

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to opensource@lge.com. This offer is valid for three (3) years from the date on which you purchased the product.

HDMITM
HIGH-DEFINITION MULTIMEDIA INTERFACE

Additional Information

Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type Wireless Sound Bar is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc#>

The use of the 5150 – 5350 MHz band is restricted to indoor use only.

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm
2412 to 2472 MHz	16 dBm
5180 to 5240 MHz	20 dBm
5736 to 5814 MHz	12 dBm
5730 to 5821 MHz	13 dBm



Российская Федерация

Импортер ООО "ЛГ Электроникс Рус"

Адрес импортера: 143160 Российская Федерация, Московская область, Рузский район, сельское поселение Дороховское, 86 км. Минского шоссе, д.9

Адрес производителя : ЛГ Электроникс (Хужоу) Инк., завод Хатаи
516006, Китай, пров. ГуанДонг, г. Хужоу, Промышленная зона
Жонгкай, Индустриальный парк Хутай, ХуФенг Донг Уи Роуд, 13.

Сделано в Китае

Україна

Вироблено в : ЛГ Електронікс (Хужоу) Інк., завод Хатай
516006, Китай, пров. ГуанДонг, м. Хужоу, Промислова зона Жонгкай,
Індустріальний парк Хутай, ХуФенг Донг Уі Роуд, 13.

Қазақстан Республикасы

Импорттаушы АҚ "ЭЛ Джи Электроникс Алматы Қазақстан", 050061, Алматы қ., к. Көкөрай, 2А

Өндірушінің мекенжайы: LG Electronics(Huizhou) Inc. Huitai Factory
516006, Қытай, ГуанДонг ауданы, Хужоу қаласы,
Жонгкай өнеркәсіптік аймағы, Хутай Индустриялық саябағы,
ХуФенг Донг Уи Роуд, 13.

Қазақстан Республикасы территориясында тұтынушылардан келіп түскен талаптар мен ұсыныстарды қарайтын және тауарды жөндеу мен техникалық қызмет көрсететін ұжым:

АҚ «Эл Джи Электроникс Алматы Казахстан», 050061, Қазақстан Республикасы, Алматы қ., Көкөрай, 2А. Басқа сервис орталықтары жайында мағлұматты "Тұтынушыға қызмет көрсету орталығына" телефон шалу арқылы білуге болады.

Қытайда жасалған