
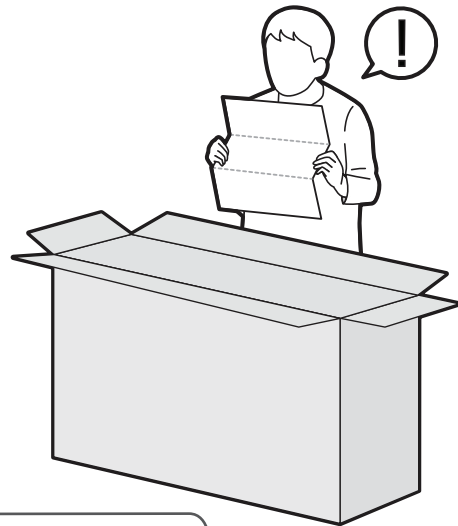


Quick Start Guide









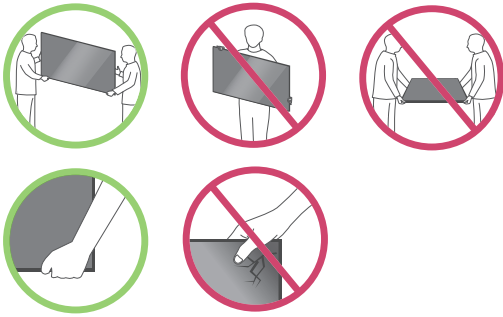


Images shown in manual
may vary depending on model

Unpacking


Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.

IN002043

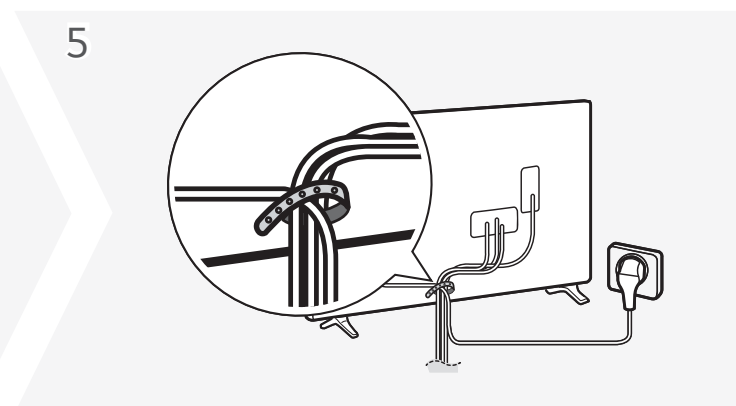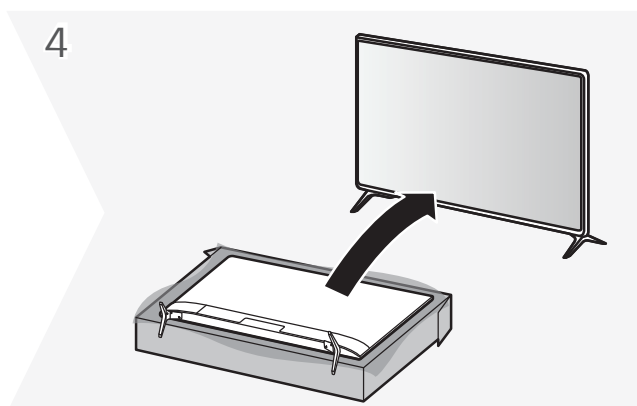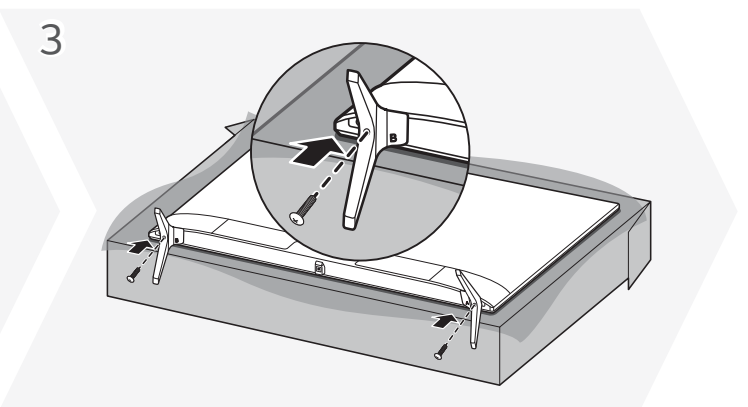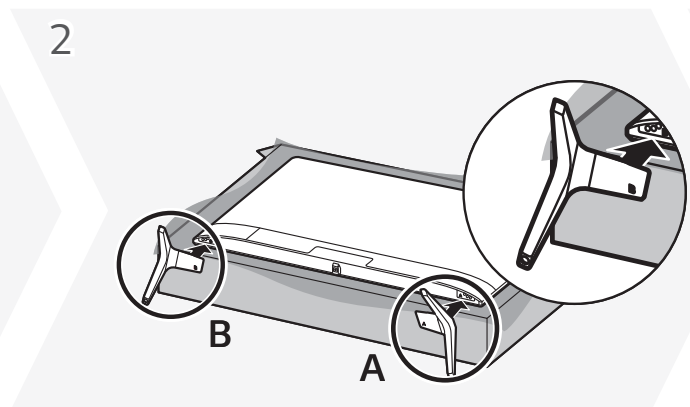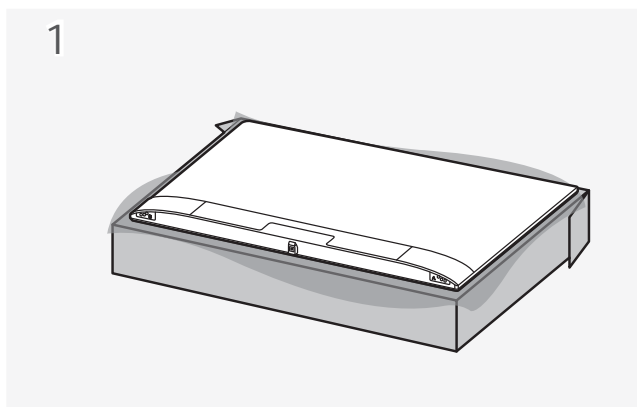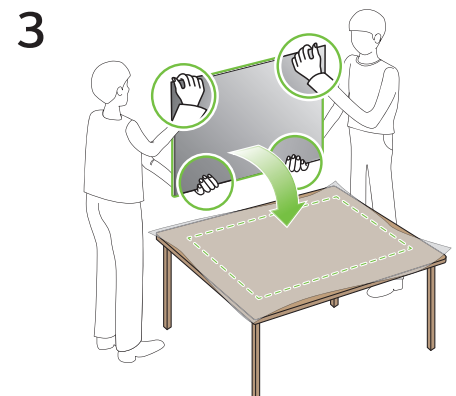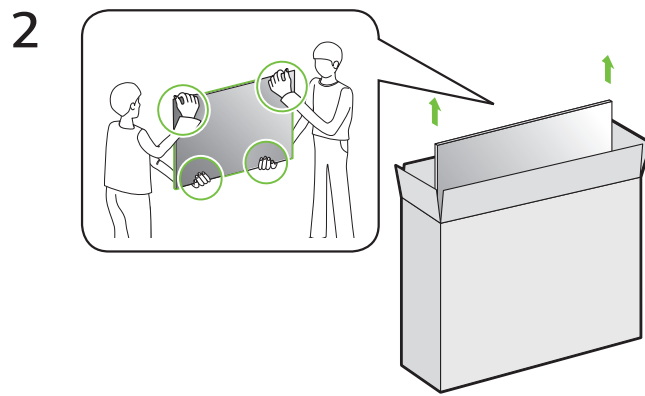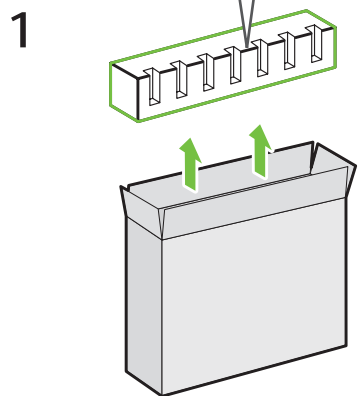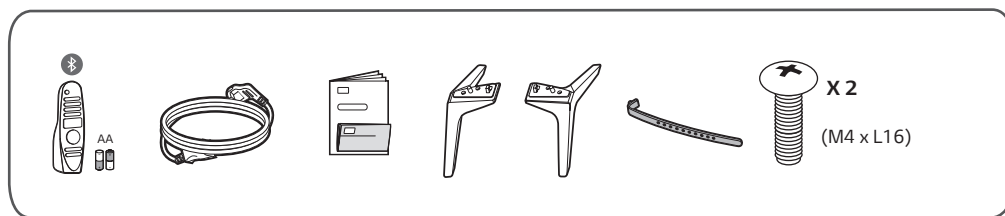

CAUTION
Image shown may differ from your TV
When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.



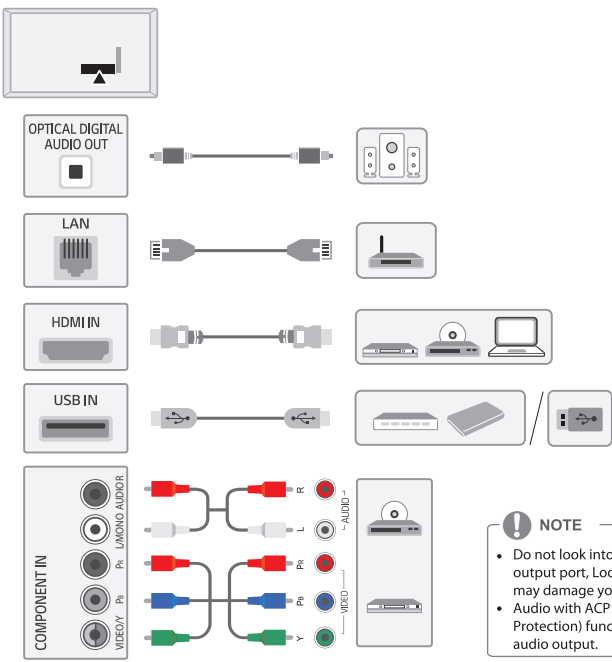


NOTE

- Do not look into the optical output port. Looking at the laser beam may damage your vision.
- Audio with ACP (Audio Copy Protection) function may block digital audio output.




NOTE

- Some USB Hubs may not work. If a USB device connected using a USB Hub is not detected, connect it to the USB port on the TV directly.
- Connect the external power source if your USB is needed.

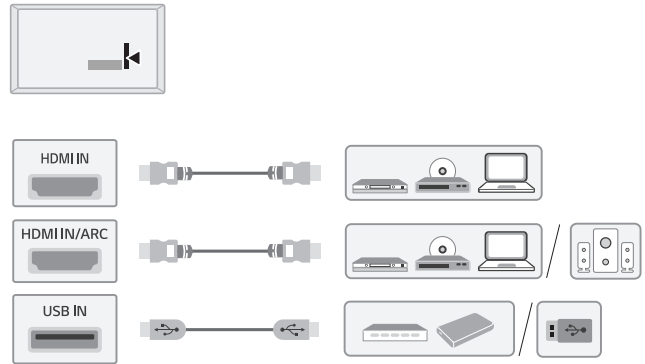

NOTE

Image shown may vary depending on model.
All connection cables & devices shown in the picture are not included along with the TV set.

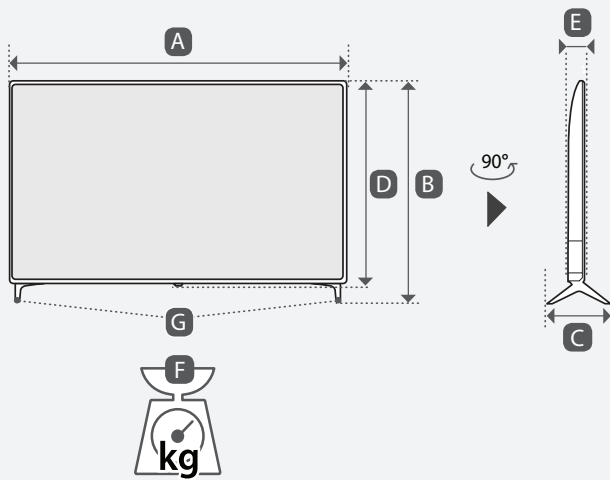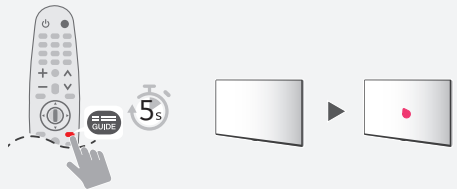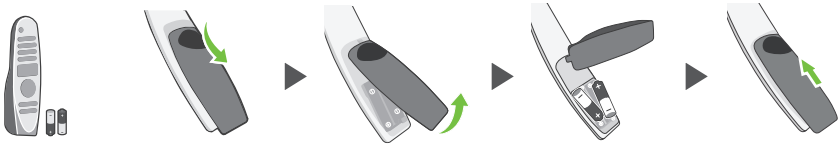

	A	B	C	D	E	F	F - G
	(mm)					(kg)	
43UN7300PPC	973	623	216	572	85.0	8.1	8.0
Power requirement				AC 100-240 V - 50 / 60 Hz			



English

- Read **Safety and Reference.**
- For the power supply and power consumption, refer to the label attached to the product.

+ : Depending on model