

OWNER'S MANUAL

AIR CONDITIONER

Please read this manual carefully before operating
your set and retain it for future reference.

CEILING SUSPENDED AIR CONDITIONER



MFL68120703
Rev.02_031419

www.lg.com

Copyright © 2013 - 2019 LG Electronics Inc. All Rights Reserved.

TIPS FOR SAVING ENERGY

Here are some tips that will help you minimize the power consumption when you use the air conditioner. You can use your air conditioner more efficiently by referring to the instructions below:

- Do not cool excessively indoors. This may be harmful for your health and may consume more electricity.
- Block sunlight with blinds or curtains while you are operating the air conditioner.
- Keep doors or windows closed tightly while you are operating the air conditioner.
- Adjust the direction of the air flow vertically or horizontally to circulate indoor air.
- Speed up the fan to cool or warm indoor air quickly, in a short period of time.
- Open windows regularly for ventilation as the indoor air quality may deteriorate if the air conditioner is used for many hours.
- Clean the air filter once every 2 weeks. Dust and impurities collected in the air filter may block the air flow or weaken the cooling / dehumidifying functions.

For your records

Staple your receipt to this page in case you need it to prove the date of purchase or for warranty purposes. Write the model number and the serial number here:

Model number : _____

Serial number : _____

You can find them on a label on the side of each unit.

Dealer's name : _____

Date of purchase : _____

IMPORTANT SAFETY INSTRUCTIONS

READ ALL INSTRUCTIONS BEFORE USING THE APPLIANCE.

Always comply with the following precautions to avoid dangerous situations and ensure peak performance of your product

WARNING

It can result in serious injury or death when the directions are ignored

CAUTION

It can result in minor injury or product damage when the directions are ignored

WARNING

- Installation or repairs made by unqualified persons can result in hazards to you and others.
- The product shall be installed according to the Wiring regulations of the corresponding country.
- The information contained in the manual is intended for use by a qualified service technician familiar with safety procedures and equipped with the proper tools and test instruments.
- Failure to carefully read and follow all instructions in this manual can result in equipment malfunction, property damage, personal injury and/or death.

Installation

- Do not use a defective or underrated circuit breaker. Use this appliance on a dedicated circuit. There is risk of fire or electric shock.
- For electrical work, contact the dealer, seller, a qualified electrician, or an Authorized Service Center. Do not disassemble or repair the product. There is risk of fire or electric shock.
- Always ground the product. There is risk of fire or electric shock.
- Install the panel and the cover of control box securely. There is risk of fire or electric shock.
- Always install a dedicated circuit and breaker. Improper wiring or installation may cause fire or electric shock
- Use the correctly rated breaker or fuse. There is risk of fire or electric shock.
- Do not modify or extend the power cable. There is risk of fire or electric shock.
- Do not install, remove, or re-install the unit by yourself (customer). There is risk of fire, electric shock, explosion, or injury.
- Be cautious when unpacking and installing the product. Sharp edges could cause injury. Be especially careful of the case edges and the fins on the condenser and evaporator.
- For installation, always contact the dealer or an Authorized Service Center. There is risk of fire, electric shock, explosion, or injury.
- Do not install the product on a defective installation stand. It may cause injury, accident, or damage to the product.
- Be sure the installation area does not deteriorate with age. If the base collapses, the air conditioner could fall with it, causing property damage, product failure, and personal injury.
- Do not let the air conditioner run for a long time when the humidity is very high and a door or a window is left open. Moisture may condense and wet or damage furniture.

Operation

- Take care to ensure that power cable could not be pulled out or damaged during operation. There is risk of fire or electric shock.
- Do not place anything on the power cable. There is risk of fire or electric shock.
- Do not plug or unplug the power supply plug during operation. There is risk of fire or electric shock.
- Do not touch(operate) the product with wet hands. There is risk of fire or electrical shock.
- Do not place a heater or other appliances near the power cable. There is risk of fire and electric shock.
- Do not allow water to run into electric parts. It may cause There is risk of fire, failure of the product, or electric shock.
- Do not store or use flammable gas or combustibles near the product. There is risk of fire or failure of product.
- Do not use the product in a tightly closed space for a long time. Oxygen deficiency could occur.
- When flammable gas leaks, turn off the gas and open a window for ventilation before turn the product on. Do not use the telephone or turn switches on or off. There is risk of explosion or fire
- If strange sounds, or small or smoke comes from product. Turn the breaker off or disconnect the power supply cable. There is risk of electric shock or fire.
- Stop operation and close the window in storm or hurricane. If possible, remove the product from the window before the hurricane arrives. There is risk of property damage, failure of product, or electric shock.
- Do not open the inlet grill of the product during operation.(Do not touch the electrostatic filter, if the unit is so equipped.) There is risk of physical injury, electric shock, or product failure.
- When the product is soaked (flooded or submerged), contact an Authorized Service Center. There is risk of fire or electric shock.
- Be cautious that water could not enter the product. There is risk of fire, electric shock, or product damage.
- Ventilate the product from time to time when operating it together with a stove, etc. There is risk of fire or electric shock.
- Turn the main power off when cleaning or maintaining the product. There is risk of electric shock.
- When the product is not be used for a long time, disconnect the power supply plug or turn off the breaker. There is risk of product damage or failure, or unintended operation.
- Take care to ensure that nobody could step on or fall onto the outdoor unit. This could result in personal injury and product damage.

CAUTION

Installation

- Always check for gas (refrigerant) leakage after installation or repair of product. Low refrigerant levels may cause failure of product.
- Install the drain hose to ensure that water is drained away properly. A bad connection may cause water leakage.
- Keep level even when installing the product. To avoid vibration or water leakage.
- Do not install the product where the noise or hot air from the outdoor unit could damage the neighborhoods. It may cause a problem for your neighbors.
- Use two or more people to lift and transport the product. Avoid personal injury.
- Do not install the product where it will be exposed to sea wind (salt spray) directly. It may cause corrosion on the product. Corrosion, particularly on the condenser and evaporator fins, could cause product malfunction or inefficient operation.

Operation

- Do not expose the skin directly to cool air for long periods of time. (Don't sit in the draft.) This could harm to your health.
- Do not use the product for special purposes, such as preserving foods, works of art, etc. It is a consumer air conditioner, not a precision refrigeration system. There is risk of damage or loss of property.
- Do not block the inlet or outlet of air flow. It may cause product failure.
- Use a soft cloth to clean. Do not use harsh detergents, solvents, etc. There is risk of fire, electric shock, or damage to the plastic parts of the product.
- Do not touch the metal parts of the product when removing the air filter. They are very sharp! There is risk of personal injury.
- Do not step on or put anything on the product. (outdoor units) There is risk of personal injury and failure of product.
- Always insert the filter securely. Clean the filter every two weeks or more often if necessary. A dirty filter reduces the efficiency of the air conditioner and could cause product malfunction or damage.
- Do not insert hands or other objects through the air inlet or outlet while the product is operated. There are sharp and moving parts that could cause personal injury.
- Do not drink the water drained from the product. It is not sanitary and could cause serious health issues.
- Use a firm stool or ladder when cleaning or maintaining the product. Be careful and avoid personal injury.
- Replace the all batteries in the remote control with new ones of the same type. Do not mix old and new batteries or different types of batteries. There is risk of fire or explosion
- Do not recharge or disassemble the batteries. Do not dispose of batteries in a fire. They may burn or explode.
- If the liquid from the batteries gets onto your skin or clothes, wash it well with clean water. Do not use the remote if the batteries have leaked. The chemicals in batteries could cause burns or other health hazards.
- If you eat the liquid from the batteries, brush your teeth and see doctor. Do not use the remote if the batteries have leaked. The chemicals in batteries could cause burns or other health hazards.

TABLE OF CONTENTS

2 TIPS FOR SAVING ENERGY

3 IMPORTANT SAFETY INSTRUCTIONS

7 BEFORE USE

- 7 Preparing for operation
- 7 Usage
- 7 Cleaning and maintenance
- 7 Service

8 PRODUCT INTRODUCTION

- 8 Name and function of parts
- 8 Operation Indication Lamps
- 9 Wireless Remote Controller

11 OPERATING INSTRUCTION

- 11 How to insert the Batteries
- 11 Wireless Remote Controller Maintenance
- 11 Operating Method

12 OWNER'S INSTRUCTION

- 12 Cooling Mode - Standard Operation
- 12 Cooling Mode - Power Cooling
- 13 Cooling mode - Comfort Cooling (Optional)
- 14 Heating Mode - Standard Operation
- 15 Heating Mode - Power Heating
- 16 Auto Operation Mode
- 17 Auto Changeover Mode
- 18 Auto Changeover Mode - Setting the Mode Change Temperature
- 19 Dehumidification Mode
- 20 Fan Mode
- 21 Temperature Setting/Room Temperature checking
- 22 Airflow Setting
- 22 Celsius/Fahrenheit Switching

23 TIMER

- 23 Setting the Current Time
- 23 Sleep Timer Setting
- 23 On Timer Setting
- 24 Off Timer Setting
- 24 To cancel the Timer Setting

25 MAINTENANCE AND SERVICE

- 26 Operation Tips!
- 26 When the air conditioner is not going....
- 27 Troubleshooting Tips! Save time and money!
- 27 Call the service immediately in the following situations

BEFORE USE

Preparing for operation

- Contact an installation specialist for installation.
- Use a dedicated circuit.

Usage

- Being exposed to direct airflow for an extended period of time could be hazardous to your health. Do not expose occupants, pets, or plants to direct airflow for extended periods of time.
- Due to the possibility of oxygen deficiency, ventilate the room when used together with stoves or other heating devices.
- Do not use this air conditioner for non-specified special purposes (e.g. preserving precision devices, food, pets, plants, and art objects). Such usage could damage the items.

Cleaning and maintenance


- Do not touch the metal parts of the unit when removing the filter. Injuries can occur when handling sharp metal edges.
- Do not use water to clean inside the air conditioner. Exposure to water can destroy the insulation, leading to possible electric shock.
- When cleaning the unit, first make sure that the power and breaker are turned off. The fan rotates at a very high speed during operation. There is a possibility of injury if the unit's power is accidentally triggered on while cleaning inner parts of the unit.

Service

For repair and maintenance, contact your authorized service dealer.

PRODUCT INTRODUCTION

Name and function of parts

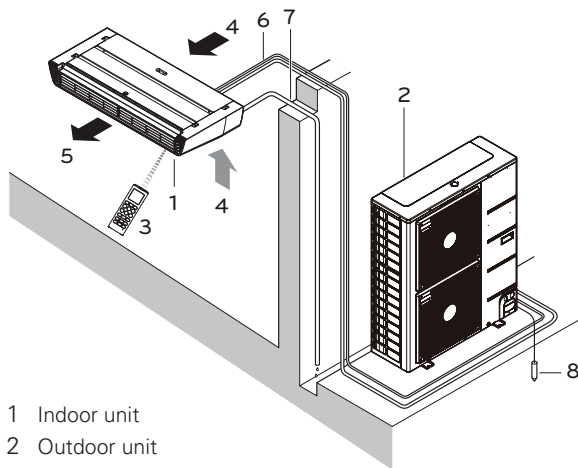

- 1 Indoor unit
- 2 Outdoor unit
- 3 Remote controller
- 4 Inlet air
- 5 Discharge air
- 6 Refrigerant piping, connection electric wire
- 7 Drain pipe
- 8 Ground wire
Wire to ground outdoor unit to prevent electrical shocks.



Operation Indication Lamps

- ① **On/Off** : Lights up during the system operation.
- ⏏ **Filter Sign** : Lights up after 2 400 hours from the time of first operating unit.
- ⌚ **Timer** : Lights up during Timer operation.
- * ⏏ **Defrost Mode** : Lights up during Defrost Mode or Hot Start operation.
(Heat pump type)
- **Forced operation** : To operate the unit when the remote control can't be used for any reason.

! NOTE

The feature may be changed according to the type of model.

Wireless Remote Controller

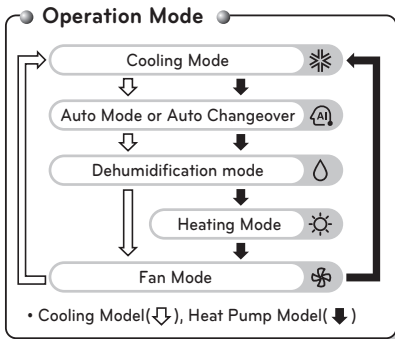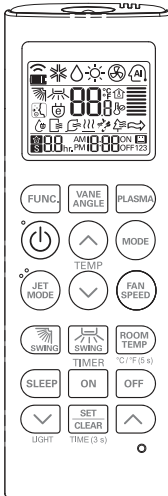

	VANE ANGLE Button Used to set each vane angle.
	FUNCTION SETTING Button Used to set or clear Auto Clean, Smart Clean, Electric heater or Individual vane angle control.
	ON/OFF Button Used to turn on/off the unit.
	JET MODE/COOL Button Speed heating/cooling operates super high fan speed.
	LEFT/RIGHT AIRFLOW Button (OPTIONAL) Used to set the desired left/right(horizontal) airflow direction.
	UP/DOWN AIRFLOW Button Used to stop or start louver movement and set the desired up/down airflow direction.
	ON TIMER Button Used to set the time of starting operation.
	SLEEP TIMER Button Used to set the time of sleeping operation.
	SET / CLEAR Button Used to set/clear the timer. Used to set the current time(if it input for 3 seconds)
	PLASMA Button (OPTIONAL) Used to start or stop the plasma-purification function.
	ROOM TEMPERATURE SETTING Button Used to select the room temperature.
	OPERATION MODE SELECTION Button Used to select the operation mode.
	INDOOR FAN SPEED SELECTION Button Used to select fan speed in four steps low, medium, high and chaos.
	ROOM TEMPERATURE CHECKING Button Used to check the room temperature.
	OFF TIMER Button Used to set the time of stopping operation.
	TIMER SETTING(Up/Down)/LIGHT Button Used to set the timer. Used to adjust the brightness.(if it is not time adjust mode)
	RESET Button Used to reset the remote controller.

 CAUTION

- Aim at the signal receiver on the wired remote controller so as to operate.
- The remote control signal can be received at a distance of up to about 7 m.
- Be sure that there are no obstructions between the remote controller and the signal receptor.
- Do not drop or throw the remote controller.
- Do not place the remote controller in a location exposed to direct sunlight, or near the heating unit, or any other heat source.
- Block a strong light over the signal receptor with a curtain or etc. so as to prevent the abnormal operation.
(ex:electronic quick start, ELBA, inverter type fluorescent lamp)


 NOTE

- For more details refer to the Wireless Remote Control Accessory manual.
- The actual product can be different from above contents depending upon model type.

OPERATING INSTRUCTION

How to insert the Batteries

- 1 Remove the battery cover by pulling it according to the arrow direction.
- 2 Insert new batteries making sure that the (+) and (-) of battery are installed correctly.
- 3 Reattach the cover by sliding it back into position.

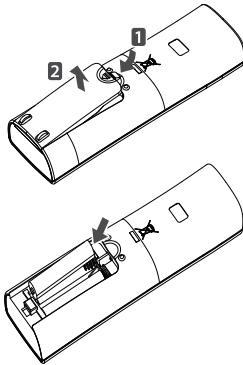


! NOTE

- Always use/replace both batteries of same type.
- If the system is not to be used for a long time, remove the batteries to save their working life.
- If the display screen of remote controller starts, fading replace both of the batteries.

Wireless Remote Controller Maintenance

- 1 Choose a suitable place where its safe & easy to reach.
- 2 Fix the holder to wall etc with the supplied screws firmly.
- 3 Slide the remote controller inside the holder.

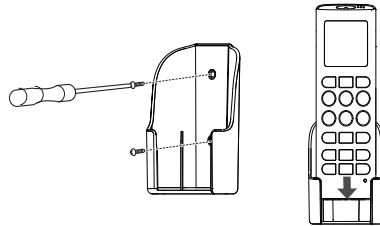

! NOTE


- Remote controller should never be exposed to direct sunlight.
- Signal transmitter & receiver should always be clean for proper communication. Use a soft cloth to clean them.
- In case some other appliances also get operated with remote control, change their position or consult your serviceman.

Operating Method

- 1 The signal receiver is inside the unit.
- 2 Aim the remote controller towards the unit to operate it. There should not be any blockage in between.

OWNER'S INSTRUCTION

Cooling Mode - Standard Operation

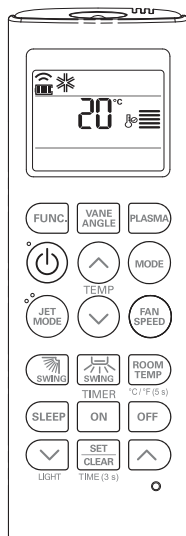


- 1 Press the ON/OFF button.
The unit will respond with beep sound.



- 2 Press MODE button to select Cooling Mode.




 - 3 Set the desired temperature by pressing TEMP button.
Press ROOM TEMPERATURE CHECKING button to check the room temperature.
When setting the desired temperature is higher than room temperature, cooling wind isn't blow out.



- Setting Temp. Range :
Common : 18~30 °C(64~86 °F)
UAE Only : 20~30 °C(68~86 °F)

Cooling Mode - Power Cooling

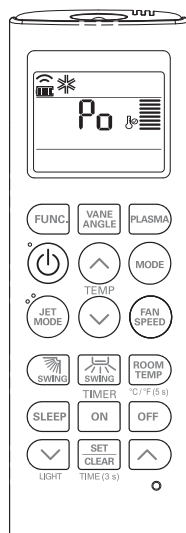

- 1 Press the ON/OFF button.
The unit will respond with beep sound.



- 2 Press MODE button to select Cooling Mode.



- 3 Press the JET MODE/COOL button. The unit will operate in super high fan speed in cooling mode.
* Wall mounted models operate power cooling mode for 30 minutes.



- 4 To cancel the Power cooling Mode press the JET MODE/COOL button or the fan button or the room temperature setting button again and the unit will operate in high fan speed in cooling mode.



or




or



Cooling mode - Comfort Cooling (Optional)

This function is automatically control the cooling strength to maintain the pleasant feeling without turning off the product after the indoor temperature reached the desired temperature.

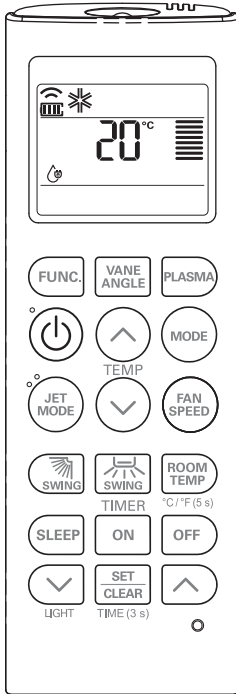

- 1 Press the ON/OFF button.
The unit will respond with beep sound.



- 2 Press MODE button to select
Cooling mode.



- 3 Press FUNC. Button repeatedly until comfort
cooling icon  displayed.




- 4 Press SET/CLEAR button for setting.



Heating Mode – Standard Operation

This Function is only for H/P model.

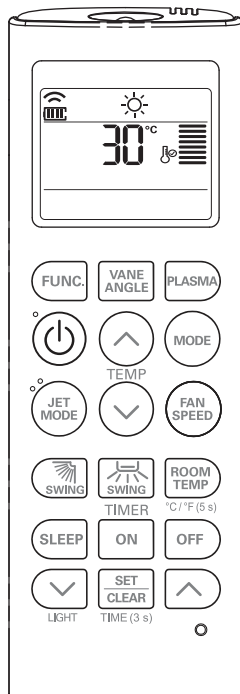


- 1 Press the ON/OFF button.
The unit will respond with beep sound.



- 2 Press MODE button to select Heating Mode.



 - 3 Set the desired temperature by pressing TEMP button.
Press ROOM TEMPERATURE CHECKING button to check the room temperature.
When setting the desired temperature is lower than room temperature, heating wind isn't blow out.




*** Setting Temp. Range in Heating Mode : 16~30 °C (60~86 °F)**

- 4 Set the fan speed again. You can select the fan speed in four steps—low, medium, high, or chaos. Each time the button is pressed, the fan speed mode is shifted.



Heating Mode – Power Heating

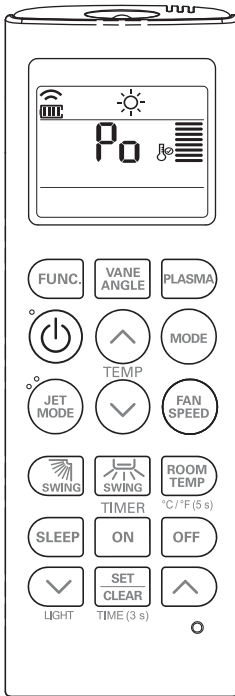

- 1** Press the ON/OFF button.
The unit will respond with beep sound.



- 2** Press MODE button to select Heating Mode.



- 3** Press the JET MODE/COOL button. The unit will operate in super high fan speed in heating mode.
* Wall mounted models operate power heating mode for 30 minutes.



- 4** To cancel the Power heating Mode press the JET MODE/COOL button or the fan button or the room temperature setting button again and the unit will operate in high fan speed in heating mode.




or



or



Auto Operation Mode

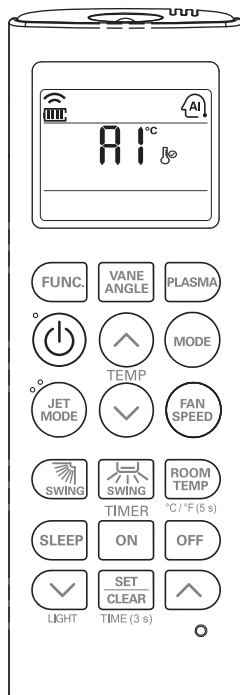

- 1 Press the ON/OFF button.
The unit will respond with beep sound.



- 2 Press MODE button to select Auto Operation Mode.

 



- 3 Set the desired temperature.

<For Cooling Model>

The temperature and fan speed are automatically set by the electronic controls based on the actual room temperature. If you feel hot or cold, press TEMPERATURE SETTING buttons for more cooling or heating effect.


You cannot switch the indoor fan speed. It has already been set by the Auto Operation Mode rule.

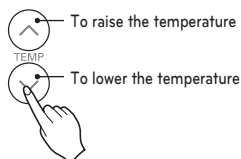

* Please select the code depend on your feeling.

Code	Feel
2	Cold
1	Slightly cool
0	Neutral
-1	Slightly warm
-2	Warm

<For Heating Model>

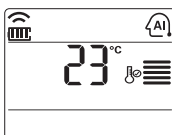

You can set desired temperature and indoor fan speed.

Setting Temp. Range :

Common : 18~30 °C (64~86 °F)


UAE Only : 20~30 °C (68~86 °F)

NOTE

During Auto Operation Mode

- If the system is not operating as desired, manually switch to another mode. The system will not automatically switch from the cooling mode to the heating mode, or from heating to cooling, then you must set the mode and the desired temperature again.

Auto Changeover Mode

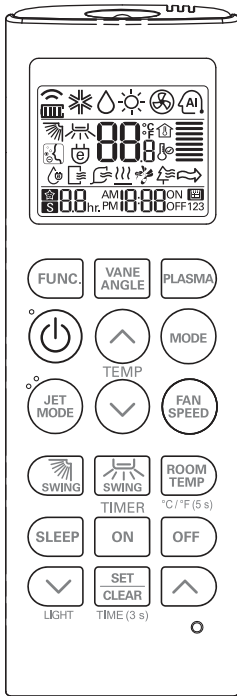


- 1 Press the ON/OFF button. The unit will respond with beep sound.



- 2 Press MODE button to select Auto Changeover Mode.



- 3 Set the desired room temperature.
* Setting Temp. Range in Auto Changeover Mode :
Common : 18~30 °C (64~86 °F)
UAE Only : 20~30 °C (68~86 °F)

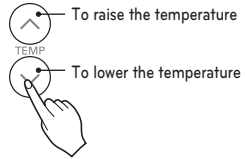

- 4 You can select the fan speed in four steps—low, medium, high and chaos. Each time the button is pressed, the fan speed mode is shifted.



! NOTE


During Auto changeover Mode

The air conditioner changes the operation mode automatically to keep indoor temperature. When room temperature vary over ± 2 °C(4 °F) with respect to setting temperature, air conditioner keeps the room temperature within ± 2 °C(4 °F) with respect to setting temperature by auto changeover mode.


Auto Changeover Mode - Setting the Mode Change Temperature

This Function is to set the operating mode of the Auto Changeover Mode.

- 1 In Auto Changeover Mode, Press FUNCTION button to select Setting the Mode Change Temperature.

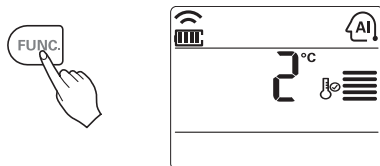

- 2 Press the TEMPERATURE SETTING button to set desired Mode Change Temperature. (Default value is 2 °C(4 °F).)

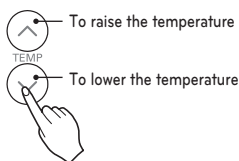


*** Mode Change Temp. Range :**
1~7 °C(2~14 °F)

! NOTE

The Mode Change Temperature is the difference of temperature when from cooling mode to heating mode or from heating mode to cooling mode.

Ex) When setting temperature is 25 °C(76 °F) and room temperature is 20 °C(68 °F), then operating mode is heating. If you set the mode change temperature to 2 °C(4 °F), when the room temperature up to 27 °C(25 °C + 2 °C)(80 °F(76 °F + 4 °F)), the unit start cooling operation.

Dehumidification Mode

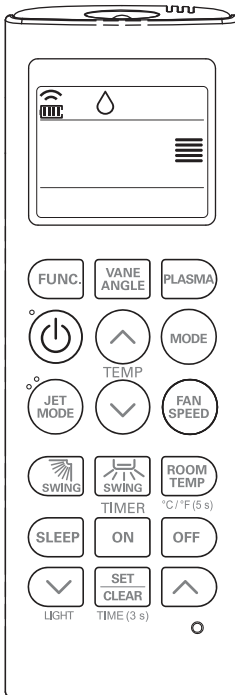

- 1 Press the ON/OFF button.
The unit will respond with beep sound.



- 2 Press MODE button to select
Dehumidification Mode.



- 3 Set the fan speed. You can select the fan speed
in four steps - low, medium, high, or chaos.
Each time the button is pressed, the fan speed
mode is shifted.




! NOTE

During Dehumidification Mode

- If you select the dehumidification mode on the operation selection button, the indoor unit starts to run the dehumidification function, automatically setting the room temp. and air volume to the best condition for dehumidification based on the sensed room temp.
In this case, the setting temp. is not displayed in the Remote Controller and you are not able to control the room temp. either.
- During the healthy dehumidification function, the air volume is automatically set according to the algorithm responding to the current room temp. and makes the room condition healthy and comfortable even in the high humidity season.

Fan Mode

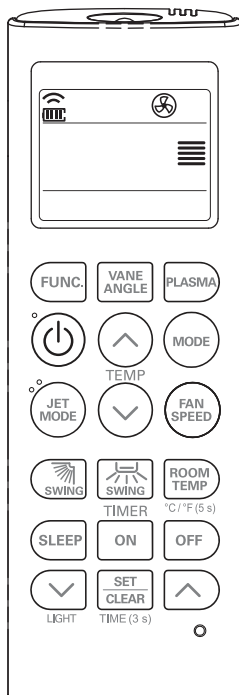

- 1 Press the ON/OFF button.
The unit will respond with beep sound.



- 2 Press MODE button to select Fan Mode.



- 3 Set the fan speed again. You can select the fan speed in four steps—low, medium, high, or chaos. Each time the button is pressed, the fan speed mode is shifted.



! NOTE

- **Natural Wind by the chaos Logic**


For more fresh feeling than other fan speed, press the Indoor Fan Speed Selector and set to chaos mode. In this mode, the wind blows like natural breeze by automatically changing fan speed according to the chaos logic.

- **During Fan Mode**

The outdoor compressor doesn't work.

Have a function to circulate the indoor air as it sends out the air that doesn't have much temperature difference with indoor.

Temperature Setting/Room Temperature checking

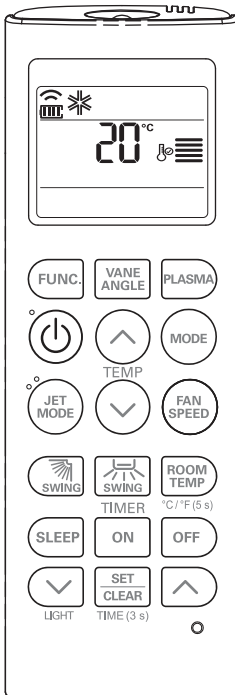

We can simply adjust the desired temperature

- Press the buttons to adjust the desired temperature



: Increase Temp. per one time pressing



: Decrease Temp. per one time pressing

Room temp: Indicate the current room temperature

Set temp: Indicate the temperature that user want to set

<Cooling Mode>

The cooling mode doesn't work if desired temperature is higher than room temperature Please lower the desired temperature

<Heating Mode>

The heating mode doesn't work if desired temperature is lower than room temperature Please increase the desired temperature

Whenever press ROOM TEMPERATURE button, the room temperature will be displayed within 5 seconds.

After 5 seconds, it turns to display the desired temperature.

Because of location of remote controller, the real room temperature and the this displayed value can be different.

Press ROOM TEMPERATURE button for 5 seconds, temperature unit change Celsius to Fahrenheit or Fahrenheit to Celsius.

Airflow Setting

Up/Down Airflow Direction Control (Optional)

The up/down airflow (Vertical Airflow) can be adjusted by using the remote controller.

- 1 Press the ON/OFF button to start the unit.
- 2 Press up/down airflow button and the louvers will swing up and down.
Press the up/down airflow button again to set the vertical louver at the desired airflow direction.

! NOTE

 
- If you press the UP/DOWN AIRFLOW button, the horizontal airflow direction is changed automatically based on the Auto Swing algorithm to distribute the air in the room evenly and at the same time to make the human body feel more comfortable, as if enjoying a natural breeze.
- Always use the remote controller to adjust the up/down airflow direction. Manually moving the vertical airflow direction louver by hand, could damage the air conditioner.
- When the unit is shut off, the up/down airflow direction louver will close the air outlet vent of the system.

Celsius/Fahrenheit Switching

- Press the °C/°F SWITCH button to change from Celsius to Fahrenheit or from Fahrenheit to Celsius.
- Whenever press TEMPERATURE SETTING button in Fahrenheit mode, the temperature will increase/drop 2 °F.

TIMER


Setting the Current Time

- 1 Press the SET / CLEAN button for 3 seconds. 
- 2 Press TIME SETTING buttons until the desired time is set.
(If you press down the button for a long time, it will change quickly in the units of 10 minutes.) 
- 3 Press the SET / CLEAR button. 


! NOTE

Check the indicator for A.M. and P.M.

 Sleep Timer Setting


- 1 Press the TIMER button to turn timer on or off.  
Timer Sleep
- 2 Press TIME SETTING buttons until the desired time is set.
(7 hours is the maximum setting) 
- 3 Press the SET / CLEAR button. 

 On Timer Setting


- 1 Press the ON button to turn timer on or off.  
Timer ON
- 2 Press TIME SETTING buttons until the desired time is set. 
- 3 Press the SET / CLEAR button. 

Off Timer Setting

 - 1 Press the OFF button to turn timer on or off.



 - 2 Press TIME SETTING buttons until the desired time is set.



- 3 Press the SET / CLEAR button.



To cancel the Timer Setting

- If you wish to cancel all timer setting, press the CLEAR ALL button.

- If you wish to cancel each timer setting, press the each timer button to turn timer sleep or on or off as you want. And then press the SET/CLEAR button aiming the remote controller at the signal receptor.

(The timer lamp on the air conditioner and the display will go off.)



MAINTENANCE AND SERVICE

Grille, Case and Remote Control

- Turn the system off before cleaning. To clean, wipe with a soft, dry cloth. Do not use bleach or abrasives.

! NOTE

Supply power must be disconnected before cleaning the indoor unit.

Air Filters

The air filters behind the front grille should be checked and cleaned once every 2 weeks or more often if necessary.

- Never use any of the followings:

Water hotter than 40 °C.
Could cause deformation and or discoloration.

Volatile substances.

Could damage the surfaces of the air conditioner.



- Remove the Air filters.

Take hold of the tab and pull slightly forward to remove the filter.

! CAUTION

When the air filter is to be removed, do not touch the metal parts of the indoor unit.

It may cause an injury.

- Clean dirt from the air filter using a vacuum cleaner or washing with water.


If dirt is conspicuous, wash with a neutral detergent in lukewarm water.

If hot water (40 °C or more) is used, it may be deformed.

- After washing with water, dry well in the shade.

Do not expose the air filter to direct sunlight or heat from a fire when drying it.

- Install the air filter.

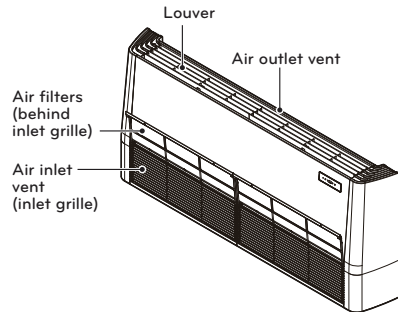

! NOTE

The feature may be changed according to the type of model.

Operation Tips!

Do not overcool the room. This is not good for the health and wastes electricity.	Keep blinds or curtains closed. Do not let direct sunshine enter the room when the air conditioner is in operation.	Keep the room temperature uniform. Adjust the vertical and horizontal airflow direction to ensure a uniform temperature in the room.
Make sure that the doors and windows are shut tight. Avoid opening doors and windows as much as possible to keep the cool air in the room.	Clean the air filter regularly. Blockages in the air filter reduce the airflow and lower cooling and dehumidifying effects. Clean at least once every two weeks.	Ventilate the room occasionally. Since windows are kept closed, it is a good idea to open them and ventilate the room now and then.

When the air conditioner is not going....

When air conditioner is not going to be used for a long time.

- Operate the air conditioner at the following settings for 2 to 3 hours.
 Type of operation: Fan operation mode.
 (Refer to page "Fan Mode".)
 This will dry out the internal mechanisms.
- Turn off the breaker.



CAUTION

Turn off the breaker when the air conditioner is not going to be used for a long time.
 Dirt may collect and may cause a fire.

- Remove the batteries from the Remote Controller.

Helpful information

The air filters and your electric bill.

If the air filters become clogged with dust, the cooling capacity will drop, and 6% of the electricity used to operate the air conditioner will be wasted.

When the air conditioner is to be used again.

- Clean the air filter and install it in the indoor unit. (Refer to page "MAINTENANCE AND SERVICE".)
- Check that the air inlet and outlet of the indoor/outdoor unit are not blocked.
- Check that the ground wire is connected correctly. It may be connect to the indoor unit side.

Troubleshooting Tips! Save time and money!

Check the following points before requesting repairs or service.... If the malfunction persist, please contact your dealer.

The air conditioner does not operate. - Have you made a mistake in timer operation? - Has the fuse blown or has the circuit breaker been tripped?	The room has a peculiar odor. - Check that this is not a damp smell exuded by the walls, carpet, furniture or cloth items in the room.	It seems that condensation is leaking from the air conditioner. - Condensation occurs when the airflow from the air conditioner cools the warm room air.	Air conditioner does not operate for about 3 minutes when restart. - This is the protector of the mechanism. - Wait about three minutes and operation will begin.
Does not cool or heat effectively. - Is the air filter dirty? See air filter cleaning instructions. - The room may have been very hot when the room air conditioner was first turned on. Allow time for it to cool down. - Has the temperature been set incorrectly? - Are the indoor unit's air inlet or outlet vents obstructed?	The air conditioner operation is noisy. - For a noise that sounds like water flowing. * This is the sound of freon flowing inside the air conditioner unit. - For a noise that sounds like the compressed air releasing into atmosphere. - This is the sound of the dehumidifying water being processed inside the air conditioning unit.	Crack sound is heard. - This sound is generated by the expansion/ constriction of the front panel, etc. due to changes of temperature.	Remote control display is faint, or no display at all. - Are the batteries depleted? - Are the batteries inserted in the opposite (+) and (-) directions?

Call the service immediately in the following situations

- Anything abnormal such as burning smell, loud noise etc. happen. Stop the unit and turn the breaker off. Never try to repair by yourself or restart the system in such cases.
- Main power cable is too hot or damaged.
- Error code is generated by self diagnosis.
- Water leaks from indoor unit even if the humidity is low.
- Any switch, breaker (safety, earth) or fuse fails to work properly

User must carry routine checkup & cleaning to avoid unit's poor performance.

In case of special situation, the job must be carried out by service person only.

