 
Game remote functions

Game Hot Key works only in normal TV viewing mode.

(Not in USB Playback)



- ப் (POWER) Turns the TV on or off.
- ← (HOME) Accesses the Home menu.
- (Game) Opens Game menu.
- (Input list) Changes the input source.
- ← (Back) Returns to the previous level.

EXIT Clears on-screen displays and returns to TV viewing.

- ^P ✓ Scrolls through the saved programmes.
- Navigation buttons (up/down/left/right) Scrolls through menus or options.
- **OK** Game selection / Game play