

Quick Start Guide









X 2
(M4 X L16)
43LK57*
43LK60*
32/43LK61*
43LK63*



 
X 4
(M4 X L16)
49LK57*
49LK60*
49LK61*
49LK63*











43LK57*, 43LK60*
32/43LK61*, 43LK63*

49LK57*, 49LK60*
49LK61*, 49LK63*

⊕ : Depending on model

Unpacking
Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.
* Image shown may vary depending on model.

P/No: MFL70524002(1801-REV00)



 
English

- Read **Safety and Reference**.
- For the power supply and power consumption, refer to the label attached to the product.




43LK57*, 43LK60*, 32/43LK61*, 43LK63*


1

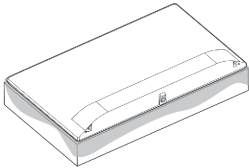


2-A 32LK61*

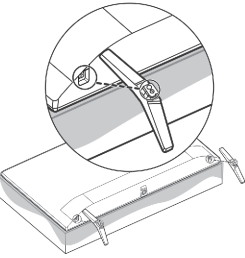 


2-B 43LK57*, 43LK60*,
43LK61*, 43LK63*

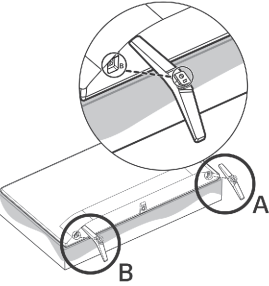 


3

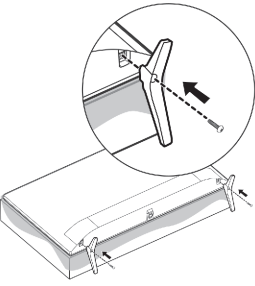 

4

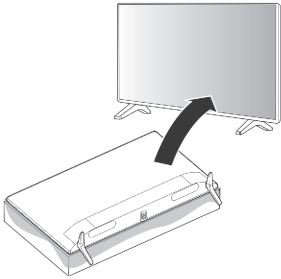 


5

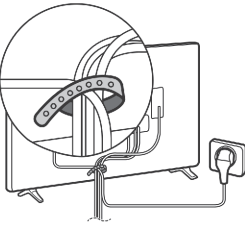 


CAUTION
Image shown may differ from your TV.
When attaching the stand to the TV set,
place the screen facing down on a
cushioned table or flat surface to protect
the screen from scratches.

49LK57*, 49LK60*, 49LK61*, 49LK63*


 
1

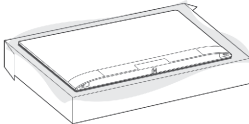


2

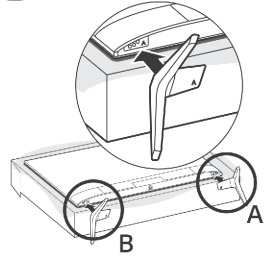 


3

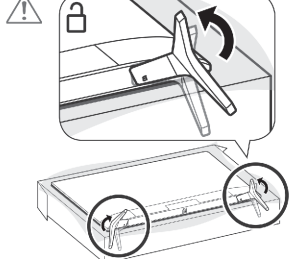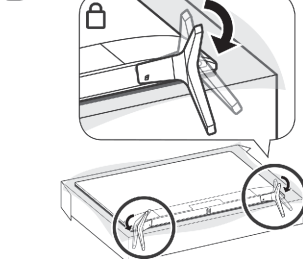  


4

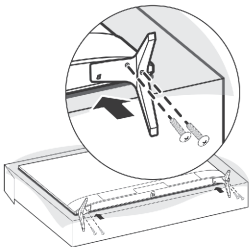 

5

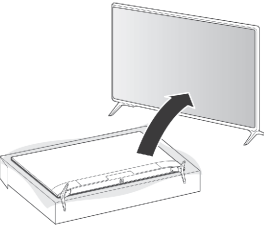 

6

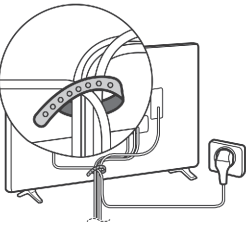 


NOTE
Image shown may vary depending on model.

⊕ : Depending on model






 
ANTENNA/
CABLE IN




Satellite IN

 


PCMCIA CARD SLOT

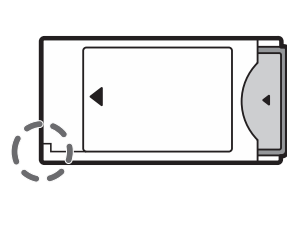 


HDMI IN

 


HDMI IN/ARC

 


USB IN

 


COMPONENT IN
VIDEO/Y Pr L/MONO AUDIO
VIDEO/Y Pb

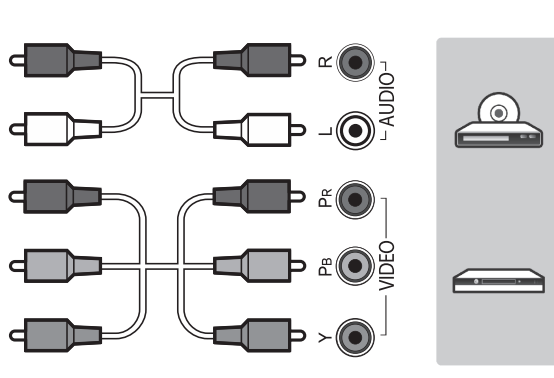 



AV IN
VIDEO/Y Pr L/MONO AUDIO
VIDEO/Y Pb

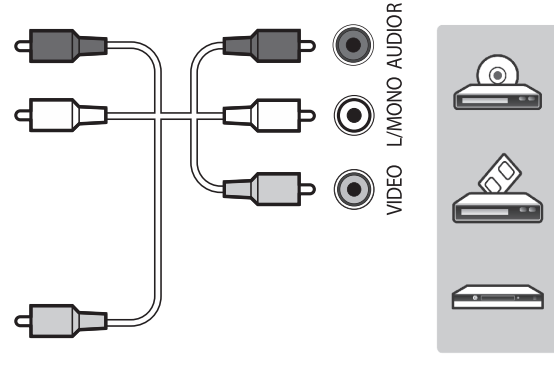 

LAN

 

OPTICAL DIGITAL
AUDIO OUT

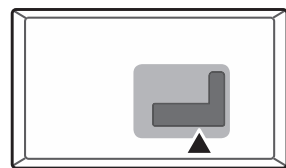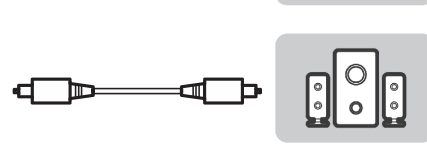  

⊕ : Depending on model

NOTE
• Do not look into the optical output port. Looking at the laser beam may damage your vision.
• Audio with ACP (Audio Copy Protection) function may block digital audio output.

NOTE
Some USB Hubs may not work. If a USB device connected using a USB Hub is not detected, connect it to the USB port on the TV directly.
Connect the external power source if your USB is needed.

 
NOTE
Image shown may vary depending on model.
All connection cables & devices shown in the picture are not included along with the TV set.

ARC (Audio Return Channel)


- An external audio device that supports SIMPLINK and ARC must be connected using HDMI IN (ARC) port.
- When connected with a high-speed HDMI cable, the external audio device that supports ARC outputs SPDIF audio without additional audio cable and supports the SIMPLINK function.





NOTE
Image shown may vary depending on model.

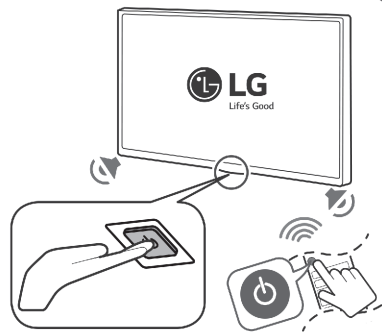

⊕ : Depending on model

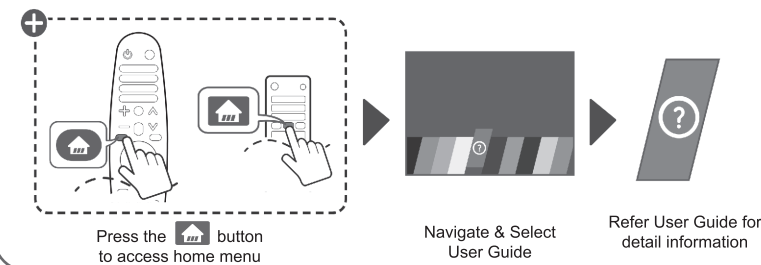 

  CAUTION
Use alkaline batteries in magic remote for long life

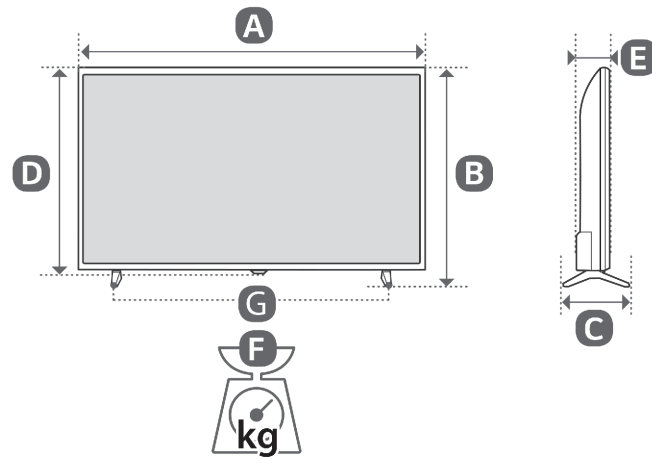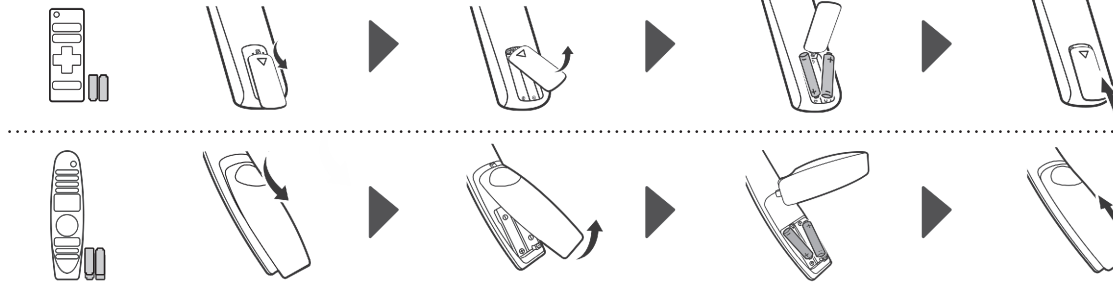

	A	B	C	D	E	F	F - G
	(mm)					(kg)	
43LK5730PVC 43LK6030PTC 43LK5700PTA 43LK5730PVC 43LK5760PTA	977	615	187	575	80.8	8.1	8.0
49LK6030PTC 49LK5730PVC 49LK5730YVA 49LK5760PTA	1110	705	235	650	81.1	11.4	11.3
32LK612BPTB 32LK610BPTB 32LK610BPVA 32LK610BYVA	742	472	180	445	86.5	5.15	5.10
32LK616BPTB	742	472	180	445	86.5	5.55	5.50
43LK6120PTC 43LK6100PVA 43LK6300PTA 43LK6100YVA	975	612	188	571	85.2	8.2	8.1
49LK6120PTC 49LK6100PVA 49LK6300PTA 49LK6100YVA	1108	703	235	646	85.3	10.3	10.2
Power requirement				AC 100-240 V ~ 50 / 60 Hz			