 


SJ4Y/SJ4R/SJ5Y Software Update Guide - Preparation

■ Preparation

1. SJ4Y/SJ4R/SJ5Y Main Units
2. SJ4Y/SJ4R/SJ5Y Remote controller
3. USB Memory
4. Android Device with “Version Check APP” for SJ4Y/SJ4R



<Main Unit>
Necessary



<RCU>
Necessary



<USB Memory>
Necessary

- ※ Take care not to power off during update
- ※ Do format USB memory before update (FAT32 file system)


<Software Download - LG.com Website>



<http://www.lg.com>

<http://www.lg.com/us/support/software-firmware-drivers>

http://www.lg.com/ca_en/support/software-firmware

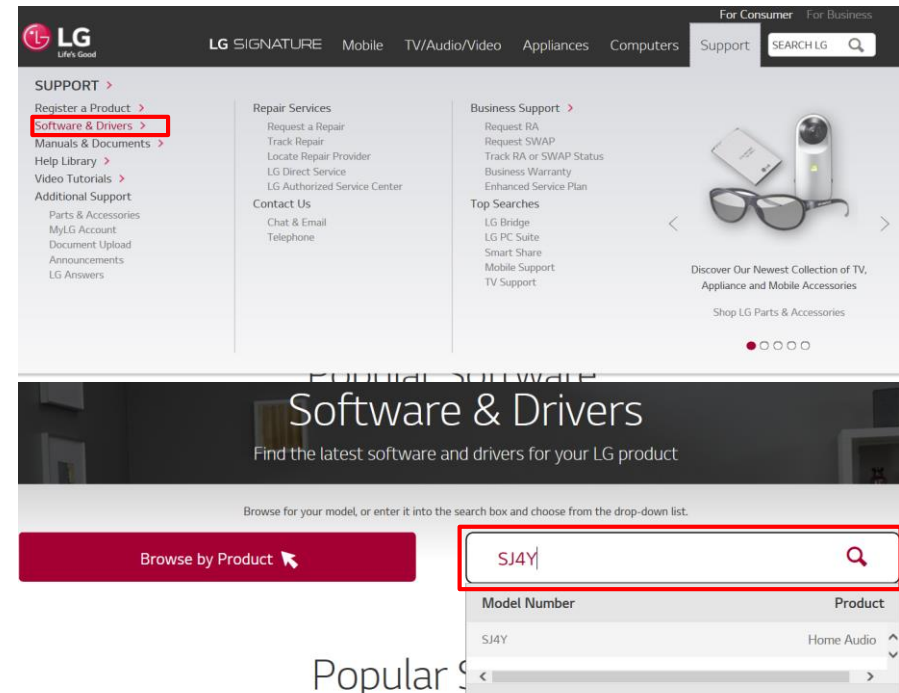

SJ4Y/SJ4R/SJ5Y Software Update Guide - Preparation

Step 1. Prepare SJ4/SJ5 update Software.


Update module	Filename Sample
Micom	SJ4Y/SJ4R : MICOM_SJ4_1704262_919D_rev3093.HEX SJ5Y : MICOM_SJ5_1704262_919D_rev3093.HEX

Step 2. Copy software to USB memory.

Step 3. Power on SJ4Y/SJ4R/SJ5Y main unit.


Step 4. Press Function key to change function to USB.

※ Verify whether USB function is or not by VFD(SJ5Y) or LED(SJ4Y/SJ4R).

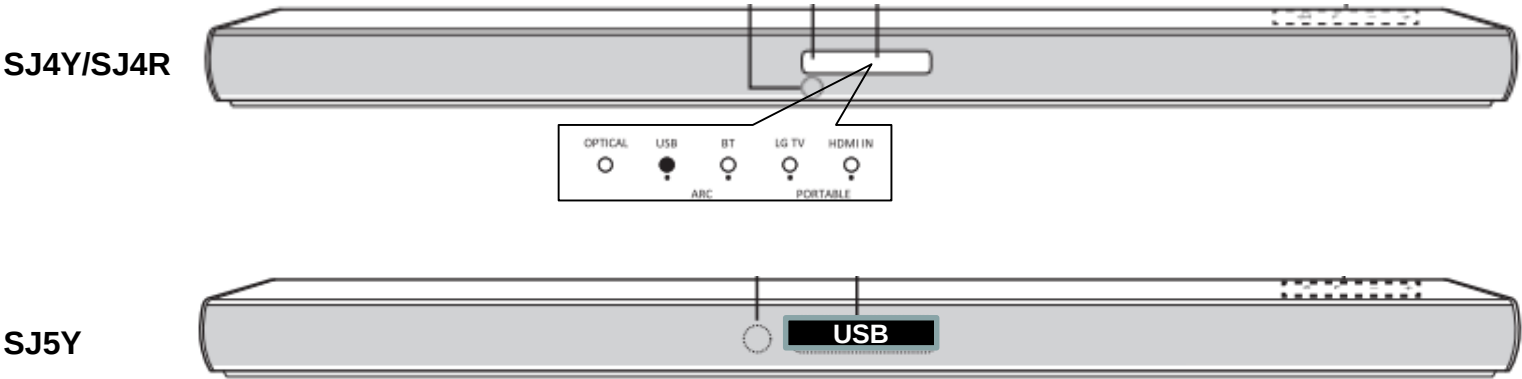


SJ4Y/SJ4R/SJ5Y Software Update Guide - Preparation

Step 5. Attach USB which has update software to the USB slot back of SJ4Y/SJ4R/SJ5Y main unit.

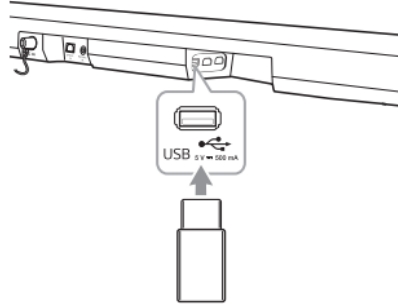


Step 6. Update will start automatically.

※ SJ4Y/SJ4R : Check whether function LED blinks one by one to the right direction

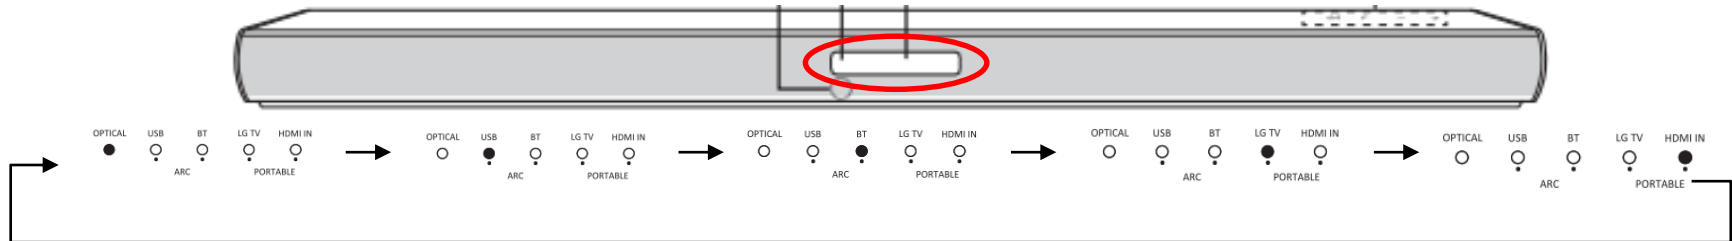

※ SJ5Y : Check whether VFD is “M-UP”

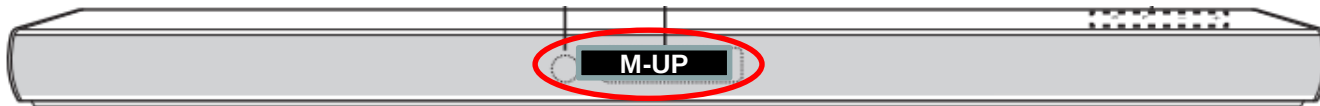

Step 7. SJ4Y/SJ4R/SJ5Y main unit will be off automatically after update finish.