


Additional Information


Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 350.0 mm x 163.0 mm x 251.0 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	950 W RMS

Design and specifications are subject to change without notice.

POWER: This unit operates on a mains supply of 200 - 240 V ~ 50 / 60 Hz.

 
Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE:** As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

Replacement of battery

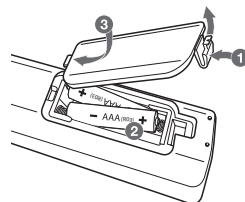

Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.



SIMPLE MANUAL

DVD MINI
HI-FI SYSTEM

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

CL65D

Controller App



Download the **LG XBOOM** App to your device.
(Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>




MFL71181803
1903_Rev01

www.lg.com

Copyright © 2019 LG Electronics Inc. All Rights Reserved.



 Front Panel

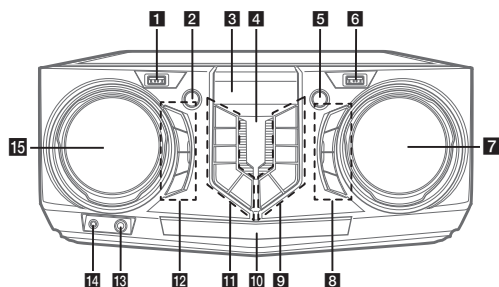

1 USB 1 Port

You can play sound files by connecting the USB device.

2 (Standby)

Turns the power on or off.

3 Display window

4 (Remote sensor)

5 TWIN

Connects two speakers for TWIN mode in WIRELESS PARTY LINK.

6 USB 2 Port

You can play sound files by connecting the USB device.

7 VOLUME

- Adjust speaker volume.
- Adjusts microphone volume.

8 MIC VOL (Microphone volume)

Selects microphone volume mode.

MIC (Microphone) ECHO

Selects ECHO mode.

VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

VOCAL EFFECTS

Selects various vocal effects mode.

9 F (Function)

Selects the function and input source.

II (Play/Pause)

- Starts or pauses playback.
- Selects stereo/mono.

II (Skip/Scan)

- Skips forward.
- Scans for a section within a track/file/chapter.
- Selects the radio stations.

KEY CHANGER (#/b)

Changes the key to suit your vocal range.

10 Disc tray

11 USB REC / DEMO

- Records to USB.
- Stops Recording.
- In power off status, if you press **USB REC / DEMO**, show DEMO mode.

□ (Stop)

Stops playback or cancels DELETE function.

II (Skip/Scan)

- Skips backward.
- Scans for a section within a track/file/chapter.
- Selects the radio stations.

△ (Open/Close)

Opens and closes the disc tray.

AUTO DJ

Selects the AUTO DJ mode.

12 LIGHTING

Selects the lighting mode.

SPECIAL EQ / BASS BLAST (or BASS BLAST+)

- Chooses special equalizer.
- Press and hold to select BASS (or BASS+) effect directly.

SEARCH

Moves to folder or file in selection mode. (USB only)

OK

Selects a folder when searching a file.

 
13 MIC (Microphone) jack

14 AUX IN 1 jack

15 EQUALIZER / SEARCH & MULTI

- Chooses sound impressions.
- Searches a folder or a file. (USB only)
- Selects the lighting effects.

Rear Panel

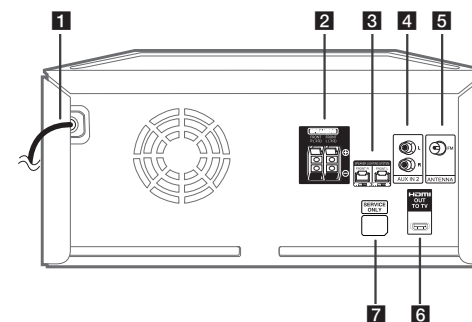

1 Power cord

2 SPEAKERS terminals

3 SPEAKER LIGHTING SYSTEM

Connect the speaker lighting cables.

4 AUX IN 2 (L/R)

Connect an auxiliary device.

5 ANTENNA (FM)

 
6 HDMI OUT TO TV

Connect to TV.

7 SERVICE ONLY

S/W download connector.

Speaker Connection

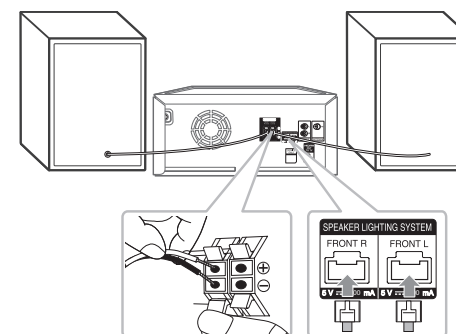


1 TV Connection

HDMI Connection:

Connect with the unit and TV using HDMI .

 - 1 Connect the unit to the TV using HDMI cable.
- 2 Set the input selector to HDMI on the TV.
- 3 Follow the instructions on the TV screen using remote control.

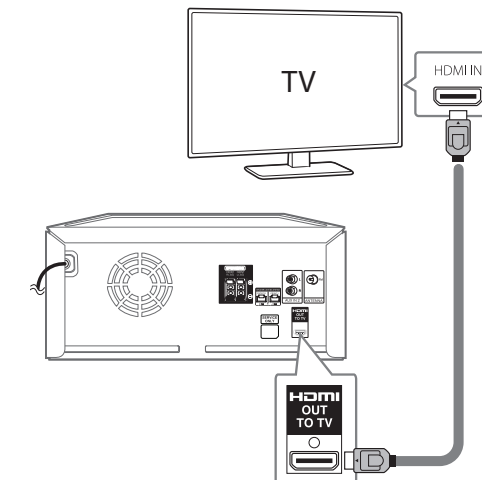

2 Home Menu

Home menu appears on the TV screen. Enjoy various functions on the player.



Home menu only appears on DVD/CD function.

HDMI
HIGH-DEFINITION MULTIMEDIA INTERFACE