



Please read this manual carefully before operating your set and retain it for future reference.

MODEL SK4D (SK4D, SPH4B-W)

Safety Information



RISK OF ELECTRIC SHOCK



CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING: TO PREVENT FIRE OR FLECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN. OR MOISTURE.

CAUTION: The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.

WARNING: Do not install this equipment in a confined space such as a book case or similar unit.

CAUTION: Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION: No naked flame sources, such as lighted candles, should be placed on the apparatus.

CAUTION: Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.

Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings shall never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a builtin installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

CAUTION concerning the Power Cord

The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.

Check the specification page of this owner's manual to be certain of the current requirements.

Do not overload wall outlets. Overloaded wall outlets, loose or damaged wall outlets, extension cords, frayed power cords, or damaged or cracked wire insulation are dangerous. Any of these conditions could result in electric shock or fire. Periodically examine the cord of your device, and if its appearance indicates damage or deterioration, unplug it, discontinue use of the device, and have the cord replaced with an exact replacement part by an authorized service center. Protect the power cord from physical or mechanical abuse, such as being twisted, kinked, pinched, closed in a door, or walked upon. Pay particular attention to plugs, wall outlets, and the point where the cord exits the device.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

This device is equipped with a portable battery or accumulator.

How to Safely remove the batteries or the battery pack from the equipment: To Remove the old batteries or battery pack, follow the assembly steps in reverse order. To prevent contamination of the environment and bring on possible threat to human and/or animal health, the old batteries or the battery pack must be put in an appropriate container at designated collection points. Do not dispose of batteries or battery pack together with other waste. It is recommended that you use local, free reimbursement systems batteries or battery packs, (may not be available in your area). The batteries or the battery pack should not be exposed to excessive heat such as sunshine, fire or the like.

For models using an adapter

Only use the AC adapter supplied with this device. Do not use a power supply from another device or another manufacturer. Using any other power cable or power supply may cause damage to the device and void your warranty.

Symbols

~	Refers to alternating current (AC).
==	Refers to direct current (DC).
	Refers to class II equipment.
Ů	Refers to stand-by.
I	Refers to "ON" (power).
5	Refers to dangerous voltage.

2

Table of Contents

1 Getting Started

- 2 Safety Information
- 6 Unique features
- 6 Introduction
- 6 Symbols used in this manual
- 7 Remote control
- 8 Front panel
- 8 Rear panel
- 9 About LED condition
- 11 Installing the sound bar

2 Connecting

- 12 Connecting the AC Adapter
- 12 Wireless subwoofer connection
- 14 Connecting to your TV
- 14 Using an OPTICAL cable
- 14 LG Sound Sync
- 16 Optional equipment connection
- 16 OPTICAL IN connection

3 Operating

- 17 Operations
- 17 Turn off the sound temporarily
- 17 Using your TV remote control
- 17 Auto display Dimmer
- 17 Auto power down
- 18 AUTO POWER On/Off
- 19 Auto function change
- 20 Using BLUETOOTH® technology
- 20 Listening to music stored on the BLUETOOTH devices
- 21 BLUETOOTH connection lock (BT lock)
- 22 Using BLUETOOTH App
- 22 Install "Music Flow Bluetooth" App onto Your BLUETOOTH Device
- 22 Activate BLUETOOTH with "Music Flow Bluetooth" App
- 24 Sound adjustment
- 24 Setting sound effect
- 24 Adjust the woofer level settings
- 24 Night mode

4 Troubleshooting

- 25 Troubleshooting
- 25 General
- 26 NOTES to use wireless

5 Appendix

- 27 Trademarks and licenses
- 28 Specifications
- 30 Maintenance
- 30 Handling the unit

Unique features

Auto power down

This unit will turn off by itself for energy saving consumption.

LG Sound Sync

Controls volume level of this unit by the remote control of your LG TV that is compatible with LG Sound Sync.

BLUETOOTH®

Listen to music stored on your Bluetooth device.

Introduction

Symbols used in this manual



Note


Indicates special notes and operating features.




Caution

Indicates cautions for preventing possible damages from abuse.

Remote control

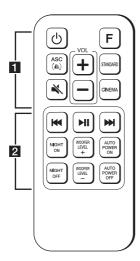

Replacement of Battery

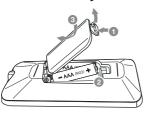

Remove the battery cover on the rear of the remote control, and insert the battery \odot with \odot and matched correctly.

(¹) (Power): Switches the unit ON or OFF.

F: Selects the function and the input source.

ASC (MI): Analyzes the property of input sound and provides the sound optimized for the content in real time

(Mute): Mutes the sound.

VOL +/-: Adjusts speaker volume.

STANDARD: Selects standardized sound.

CINEMA: Selects cinematic surround sound.

► II (Play/Pause): Starts playback. / Pauses playback.



You can control Bluetooth device using

I (Skip) and I (Play/Pause) buttons on the remote control.

NIGHT ON/OFF:


- Turns on or off Night mode.
- Controls this unit using TV remote. (Page 17)

WOOFER LEVEL +/-: Adjusts sound level of subwoofer.

AUTO POWER ON/OFF:

- Turns on or off AUTO POWER function. (Page 18)
- Turns on or off the **Bluetooth** connection lock. (Page 21)


Front panel

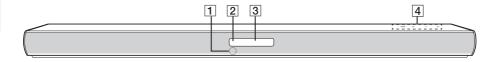

- 1 Remote sensor
- 2 Standby LED (Red)
- 3 Function LED (White)

4 The buttons are located on the rear.

Rear panel

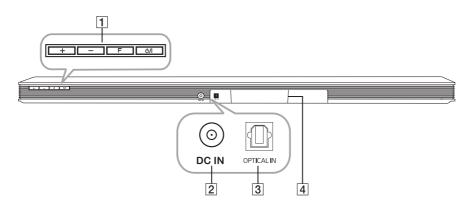

- 1 +/- (Volume): Adjusts volume level
 - $\boldsymbol{\mathsf{F}}$ (Function) : Selects the function and input source.
 - **Ů/**I (Standby/On)

- **2 DC IN** : AC adapter input
- 3 OPTICAL IN: Optical input
- 4 USB (Service only): S/W download connector

About LED condition

• : LED is staying on.

:LED is blinking.

O: LED is off.

LED			Condition	Description
OPTICAL	ВТ	LG TV	OPTICAL LED turns on.	OPTICAL function is selected.
OPTICAL	—	OPTICAL	OPTICAL LED blinks twice and turns on.	LG Sound Sync (Optical) function is selected.
OPTICAL O	ВТ	LG TV	BT (Bluetooth) LED turns on.	Paired with Bluetooth device.
OPTICAL O	ВТ	LG TV	BT (Bluetooth) LED blinks.	Waiting for Bluetooth connection.
OPTICAL O	ВТ	LG TV	LG TV LED turns on.	LG Sound Sync (Wireless) function is selected.



- When you press any button, standby LED (Red) on the main unit blinks.
- When this unit reaches minimum volume, standby LED (Red) turns on for 2 seconds and blinks slowly.
- When this unit reaches maximum volume, standby LED (Red) turns on for 2 seconds.
- When you press volume (+/-) button continually, standby LED (Red) blinks quickly.

Useful functions for using the unit

Function	Description	To do	Do this
TV Remote On/ Off	It allows you to control the volume of this unit by your TV	ON	Press and hold NIGHT ON on the remote control for about 2 seconds.
(Page 17)	remote control even by other		The standby LED (Red) blinks once.
	company's product. Initial setting of this function was set to on.	OFF	Press and hold NIGHT OFF on the remote control for about 2 seconds.
	Was sec to on.		The standby LED (Red) blinks once.
BT Lock On/Off (Page 21)	It allows you to connect a Bluetooth deivce only on Bluetooth and LG TV functions.	ON	Press and hold AUTO POWER ON on the remote control for about 2 seconds in Bluetooth function.
Initial setting of this function was set to off.	Initial setting of this function		The standby LED (Red) blinks once.
	OFF	Press and hold AUTO POWER OFF on the remote control for about 2 seconds in Bluetooth function.	
			The standby LED (Red) blinks once.
Auto Power On/Off	It allows the unit to turn on and off automatically by input	ON	Press AUTO POWER ON on the remote control.
(Page 18) signals:		The standby LED (Red) blinks once.	
	Optical, LG TV or Bluetooth . Initial setting of this function	OFF	Press AUTO POWER OFF on the remote control.
was set to on.	was set to on.		The standby LED (Red) blinks once.

Installing the sound bar

You can hear the sound by connecting the unit to the other device: TV, Blu-ray disc player, DVD player, etc.

Place the unit in front of the TV and connect it to the device you want. (Pages 14 - 16)

You can place the wireless subwoofer anywhere in your room. But it is better to place the subwoofer near the main unit. Turn it slightly toward the center of the room to reduce the wall reflections.



<u>(!)</u>

Caution

- For best performance of wireless connection such as **Bluetooth** or wireless subwoofer, do not install the unit on Metallic furniture because wireless connection communicates through a module positioned on the bottom of the unit.
- Be careful not to make scratches on the surface of the Unit / Subwoofer when installing or moving them.




Note

For the convenient button usage, it is recommended to have some distance between the soundbar and your TV when you install the sound bar.

Connecting the AC Adapter

Connect the speaker to the power supply with the supplied AC adapter.

- Connect the supplied AC power cord to the AC adapter.
- Connect the AC adapter cable to DC IN adapter input.
- 3. Plug the AC power cord into an AC outlet.

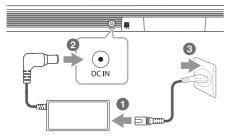

(<u>!</u>)

Caution

Only use the AC adapter supplied with this device. Do not use a power supply from another device or manufacturer. Using any other power cable or power supply may cause damage to the device and void your warranty.

Wireless subwoofer connection

LED indicator of wireless subwoofer

LED Color	Status
Yellow green (Blink)	The connection is trying.
Yellow green	The connection is completed.
Red	The wireless subwoofer is in standby mode or the connection failed.
Off (No display)	The power cord of wireless subwoofer is disconnected.


Setting up the wireless subwoofer for the first time

- 1. Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
- Turn on the sound bar. The sound bar and the wireless subwoofer will be automatically connect.

Manually pairing wireless subwoofer

When your connection is not completed, you can check red LED on the wireless subwoofer and the wireless subwoofer does not make sound. To solve the problem, follow the steps below.


 Press PAIRING on the rear of the wireless subwoofer.

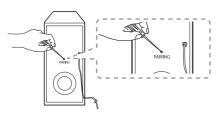

- The yellow green LED on the front of the wireless subwoofer blinks quickly.
 (If the yellow green LED does not blink, press and hold the **PAIRING**.)
- 2. Turn on the sound bar.
- 3. Pairing is completed.
 - The yellow green LED on the front of the wireless subwoofer turns on.




- It takes a few seconds (and may take longer) for the main unit and the subwoofer to communicate with each other and make sounds.
- The closer the main unit and the subwoofer, the better sound quality. It is recommended to install the main unit and the subwoofer as close as possible and avoid the cases below.
 - There is an obstacle between the main unit and the subwoofer.
 - There is a device using same frequency with this wireless connection such as a medical equipment, a microwave or a wireless LAN device.
 - Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

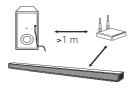

Connecting to your TV

Using an OPTICAL cable

 Connect the OPTICAL IN jack on the back of the unit to OPTICAL OUT jack on the TV using an OPTICAL cable.

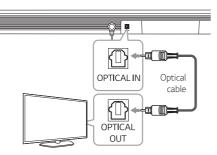

Select the input source to OPTICAL by pressing F repeatedly.

You can see OPTICAL LED turns on. Then optical function is selected.



- Before connecting the optical cable, be sure to remove the protection plug cover if your cable has the cover.
- You can enjoy the TV audio through the speakers of this unit. In the case of some TV models, you must select the external speaker option from the TV menu. (For details, reference your TV user manual.)
- Set up the sound output of TV to listen to the sound through this unit:

 TV setting menu → [Sound] → [TV Sound output] → [External speaker (Optical)]
- Details of TV setting menu vary depending on the manufacturers or models of your TV.

LG Sound Sync



You can control some functions of this unit by your TV's remote control with LG Sound Sync. It is compatible with the LG TV that is supports LG Sound Sync. Make sure of the LG Sound Sync logo on your TV.

Controllable function by LG TV's remote control : Volume up/down, mute

Refer to the TV's instruction manual for the details of LG Sound Sync.

Make one of the following connections, depending on the capabilities of your equipment.




- You can also use the remote control of this unit while using LG Sound Sync. If you use TV's remote control again, the unit synchronizes with the TV. According to TV Specifications, the volume and mute of this unit synchronize with TV
- When the connection fails, make sure of the condition of the TV and power.
- Make sure of the condition of this unit and the connection in the cases below when using LG Sound Sync.
 - The unit is turned off.
 - Changing the function to the others.
 - Disconnecting the optical cable.
- The amount of time to turn off this unit is different depending on your TV when you set AUTO POWER function to ON.
- Details of TV setting menu vary depending on the models of your TV.

2

LG Sound Sync with wired connection

 Connect your LG TV to the unit by using an optical cable.

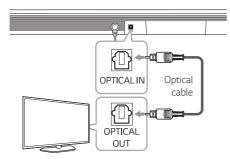

- 2. Set up the sound output of TV to listen to the sound through this unit :
 - TV setting menu \rightarrow [Sound] \rightarrow [TV Sound output] \rightarrow [LG Sound Sync (Optical)]
- 3. Turn on the unit by pressing \bigcirc on the remote control or \bigcirc / on the unit.
- Select the input source to OPTICAL by pressing F repeatedly.

You can see OPTICAL LED blinks twice and turns on. Then LG Sound Sync (Optical) function is selected.

LG Sound Sync with wireless connection

- 1. Turn on the unit by pressing 1 on the remote control or 1/1 on the unit.
- 2. Select the input source to LG TV by pressing **F** repeatedly.
- Set up the sound output of TV to listen to the sound through this unit:
 TV setting menu → [Sound] → [TV Sound output] → [LG Sound Sync (Wireless)]
 You can see LG TV LED turns on if connecting normally between this unit and your TV. Then LG Sound Sync (Wireless) function is selected.




If you turned off the unit directly by pressing b on the remote control or b/1 on the unit, LG Sound Sync (Wireless) will be disconnected. To use this function again, you should reconnect the TV and the unit.

2

Optional equipment connection

OPTICAL IN connection

Connect an optical output jack of external devices to the OPTICAL IN jack.

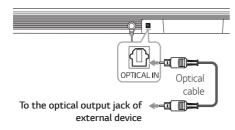


- 1. Connect the OPTICAL IN jack on the back of the unit to optical out jack of your external device.
- 2. Select the input source to OPTICAL by pressing **F** repeatedly.
 - You can see OPTICAL LED turns on. Then optical function is selected.
- 3. Listen to sound.



Before connecting the optical cable, be sure to remove the protection plug cover if your cable has the cover.

Optional equipment connection

You can enjoy both sound and picture from the external device you connect.

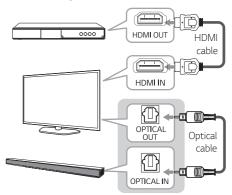

- Connect HDMI IN jack of your TV to HDMI OUT jack on the external device such as Blu-ray disc player, DVD player, etc.
- Connect the OPTICAL IN jack on the back of the unit to OPTICAL OUT jack on the TV using an OPTICAL cable.
- Select the input source to OPTICAL by pressing F repeatedly.

You can see OPTICAL LED turns on. Then optical function is selected.

Operations

Turn off the sound temporarily

Press **≼**(Mute) to mute your unit

To cancel it, press (Mute) again on the remote control or change the volume level.

Using your TV remote control

You can control some functions of this unit by your TV remote control even by other company's product. Controllable functions are volume up/down and mute.

Press and hold **NIGHT ON** on the remote control for about 2 seconds. Then the standby LED (Red) blinks once and you can control this unit by your TV remote control.

To turn off this function, press and hold **NIGHT OFF** on the remote control for about 2 seconds. Then the standby LED (Red) blinks once and you cannot control this unit by your TV remote control.



• Supported TV brands

LG	Panasonic	Philips	Samsung
Sharp	Sony	Toshiba	Vizio

- Make sure that the sound output of your TV is set to [External speaker].
- Depending on the remote control, this function may not work well.
- This function does not operate on LG TV's magic remote control.
- This function may not work well when you use LG Sound Sync.

Auto display Dimmer

Display window will be darkened automatically if there is no key input for 15 seconds. When you press any button, the display window will be brighten.

Auto power down

This unit will turn itself off to save electric consumption if the main unit is not connected to an external device and has not been used for 15 minutes.

How to disconnect the wireless network connection or the wireless device

Set up the AUTO POWER ON/OFF function to off and turn off the unit.

AUTO POWER On/Off

This unit automatically turns on by an input source : Optical, LG TV or **Bluetooth**.

When you turn on your TV or an external device connected to this unit, this unit recognizes the input signal and selects the suitable function. You can hear the sound from your device.

If you try to connect your **Bluetooth** device, this unit turns on and the unit will be connected to your **Bluetooth** device.

This function turns on or off each time you press **AUTO POWER ON/OFF.**



- After the unit is turned on by AUTO POWER function, it will be automatically turned off if there is no signal for a certain period of time from the external device.
- If you turned off the unit directly, it cannot be turned on automatically by AUTO POWER function. However the unit can be turned on by AUTO POWER function when optical signal comes in after 5 seconds of no signal.
- Depending on the connected device, this function may not operate.
- If you disconnect Bluetooth connection by this unit, some Bluetooth devices try to connect to the unit continually. Therefore it is recommended to disconnect the connection before turn off the unit.
- When you turn on this unit for the first time, status of Auto Power function is turned on.
- To use this function, the main unit must be registered in paired devices list of **Bluetooth** device.
- You can set the AUTO POWER function only when this unit is turned on.

Auto function change

This unit recognizes input signals such as Optical, **Bluetooth** and LG TV and then changes suitable function automatically.

When optical signal comes in

When you turn on the external device connected to this unit by an optical cable, this unit changes the function to optical. You can hear the sound from your device.

When you try to connect BLUETOOTH device

When you try to connect your **Bluetooth** device to this unit, **Bluetooth** function is selected. Play your music on the **Bluetooth** device.

When LG TV signal comes in

When you turn on your LG TV connected by LG Sound Sync (Wireless connection), this unit changes the function to LG TV. You can hear the sound from your TV.



- To change to optical function, it needs 5 seconds of no signal.
- If the Bluetooth connection lock function is set, Bluetooth connection will be only available on BT (Bluetooth) and LG TV function. (Page 21)

Using BLUETOOTH® technology

About BLUETOOTH

Bluetooth is wireless communication technology for short range connection.

The sound may be interrupted when the connection interfered by the other electronic wave or you connect the **Bluetooth** in the other rooms.

Connecting individual devices under **Bluetooth** wireless technology does not incur any charges. A mobile phone with **Bluetooth** wireless technology can be operated via the Cascade if the connection was made via **Bluetooth** wireless technology.

Available Devices: Smart phone, MP3, Notebook, etc..

Version: 4.0Codec: SBC

BLUETOOTH Profiles

In order to use **Bluetooth** wireless technology, devices must be able to interpret certain profiles. This unit is compatible with following profile.

A2DP (Advanced Audio Distribution Profile)

Listening to music stored on the BLUETOOTH devices

Pairing your unit and BLUETOOTH device

Before you start the pairing procedure, make sure that the **Bluetooth** feature on your smart device is turned on. Refer to your **Bluetooth** device's user guide. Once a pairing operation is performed, it does not need to be performed again.

- Select the input source to BT (Bluetooth) by pressing F repeatedly.
 - BT (Bluetooth) LED will blinks.
- Operate the **Bluetooth** device and perform the pairing operation. When searching for this speaker on your **Bluetooth** device, a list of the devices found may appear in the **Bluetooth** device display depending on the type of **Bluetooth** device.

Your speaker appears as "LG SK4D (XX)".



- XX means the last two digits of Bluetooth address. For example, if your unit has a Bluetooth address such as 9C:02:98:4A:F7:08, you will see "LG SK4D (08)" on your Bluetooth device.
- Depending on the Bluetooth device type, some device have a different pairing way.
 Enter the PIN code (0000) as needed.
- When this unit is successfully connected with your **Bluetooth** device, BT (**Bluetooth**) LED will be turned on.
- Listen to music.
 To play a music stored on your Bluetooth device, refer to your Bluetooth device's user guide.



Note

 When using Bluetooth technology, you have to make a connection between the unit and the Bluetooth device as close as possible and keep the distance.

However it may not work well in the case below:

- There is an obstacle between the unit and the **Bluetooth** device.
- There is a device using same frequency with **Bluetooth** technology such as a medical equipment, a microwave or a wireless I AN device
- If Bluetooth connection does not work well, try pairing it again.
- The sound may be interrupted when the connection has interference by the other electronic waves.
- Pairing is limited to one **Bluetooth** device per unit and multi-pairing is not supported.
- Depending on the type of the device, you may not be able to use the **Bluetooth** function.
- You can enjoy Bluetooth function using smart phone, MP3, Notebook, etc..
- The more distance between the unit and the Bluetooth device, the lower the sound quality becomes.
- Bluetooth connection will be disconnected when the unit is turned off or the Bluetooth device gets far from the unit.
- When Bluetooth connection is disconnected, connect the Bluetooth device to the unit again.

0

Note

- When Bluetooth device is not connected, BT (Bluetooth) LED blinks.
- When you connect Bluetooth device (iOS device etc.) to this unit or operate the device, the volume level can be synchronized with each other.
- You can control Bluetooth device using
 I◄◄/▶►I (Skip) and ►II (Play/Pause)
 buttons on the remote control.
- If you change to another function after connecting **Bluetooth**, **Bluetooth** connection will be disconnected. And you return to **Bluetooth** function, **Bluetooth** connection will be connected automatically.

BLUETOOTH connection lock (BT lock)

You can limit **Bluetooth** connections to only BT (**Bluetooth**) and LG TV function to prevent unintended **Bluetooth** connections.

Press and hold **AUTO POWER ON** on the remote control for about 2 seconds to turn on this function in BT (**Bluetooth**) function. Then the standby LED (Red) blinks once. After that, this function is enabled.

To turn off this function, press and hold **AUTO POWER OFF** on the remote control for about 2 seconds in BT (**Bluetooth**) function. Then the standby LED (Red) blinks once. After that, this function is disabled.



Note

Even if you set up **Bluetooth** connection lock to On, this sound bar turns on by Auto Power function. Turn off Auto Power function to prevent it. (Page 18)

Using BLUETOOTH App



Note

- · Only Android OS is available to use "Music Flow Bluetooth" app with this unit.
- Additional data charges may occur if installed over 3G/4G, according to your device plan.

About "Music Flow Bluetooth" App

"Music Flow Bluetooth" app brings a suite of new features to this unit.

To enjoy more features, you are recommended to download and install free "Music Flow Bluetooth" app.

Install "Music Flow Bluetooth" **App onto Your BLUETOOTH** Device

There are two ways to install "Music Flow Bluetooth" app onto your Bluetooth device.

Install "Music Flow Bluetooth" App through QR code

1. Install "Music Flow Bluetooth" app through QR code. Use the scanning software to scan the QR code.



Tap an icon for installation.



Note

- Make sure that your Bluetooth device is connected to the Internet.
- Make sure that your Bluetooth device has a scanning software application. If you don't have one, download one from "Google Android Market (Google Play Store)".
- Depending on area, QR code may not work.

Install "Music Flow Bluetooth" App through "Google Android Market (Google Play Store)"

- 1. Tap the "Google Android Market (Google Play Store)" icon.
- 2. In the search bar, type in the "Music Flow Bluetooth" and search it.
- 3. In the search result list, find and tap "Music Flow Bluetooth" to start downloading **Bluetooth** app.
- 4. Tap an icon for installation.
- 5. Tap an icon for downloading.



Note Note

- Make sure that your Bluetooth device is connected to the Internet.
- Make sure that your Bluetooth device is equipped with "Google Android Market (Google Play Store)".

Activate BLUETOOTH with "Music Flow Bluetooth" App

"Music Flow Bluetooth" app helps to connect your Bluetooth device to this unit.

- 1. Tap "Music Flow Bluetooth" app icon on the home screen to open "Music Flow Bluetooth" app, and go to the main menu.
- 2. If you want to get more information to operate, tap [Setting] and tap [Help] menu.



- "Music Flow Bluetooth" app will be available in the software version as follow;
 - Android O/S: Ver 4.0.3 (or later)
- If you use "Music Flow Bluetooth" app for operation, there would be some differences between "Music Flow Bluetooth" app and the supplied remote control. Use the supplied remote control as necessary.
- Depending on the **Bluetooth** device, "Music Flow Bluetooth" app may not work.
- After connection of "Music Flow Bluetooth" app, music may be output from your device. In this case, try connecting procedure again.
- If you operate the other applications or change the settings on your Bluetooth device while using "Music Flow Bluetooth" app, "Music Flow Bluetooth" app may operate abnormally.
- When "Music Flow Bluetooth" app operates abnormally, check your Bluetooth device and the connection of "Music Flow Bluetooth" app and then try to connect again.
- Depending on the smart phone's operating system, you have some differences for "Music Flow Bluetooth" operation.
- Even though Bluetooth connection will be disconnected, you can use "Music Flow Bluetooth" app when you change the function.
- Additional features offered by "Music Flow Bluetooth" app may not work depending on the distance between this unit and **Bluetooth** device and wireless conditions.

Sound adjustment

Setting sound effect

This system has a number of pre-set surround sound fields. You can select a desired sound mode by using each sound effect buttons.

Sound effect	Description
ASC (Adaptive Sound Control)	Analyzes the property of input sound and provides the sound optimized for the content in real time.
STANDARD	You can enjoy optimized sound.
CINEMA	You can enjoy more immersive and cinematic surround sound.



- · In some of sound effect mode, some speakers, there's no sound or low sound. It depends on the mode of surround and the source of audio, it is not defective.
- · You may need to reset the sound effect mode, after switching the input, sometimes even after the sound file changed.

Adjust the woofer level settings

You can adjust the sound level of subwoofer as your preference.

Press WOOFER LEVEL +/- on the remote contol to adjust woofer level.



Note

When the subwoofer level reaches maximum or minimum, standby LED (Red) on the main unit turns on for 2 seconds.

Night mode

This function is useful when you want to watch movies at low volume late at night. Set Night mode to On to reduce the sound intensity and improve fineness and softness.

Press NIGHT ON/OFF on the remote control to turn on or off night mode.

Troubleshooting

General

PROBLEM	CAUSE & CORRECTION	
The unit does not work properly.	 Turn off the power of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and turn them on again. Disconnect the power cord of this unit and the connected external device (TV, Woofer, DVD-player, Amplifier, etc.) and then try connecting again. 	
No Power	 Previous setting may not be saved when device power is shut off. The power cord is unplugged. Plug in the power cord. Check whether electricity failed. Check the condition by operating other electronic devices. 	
No sound	 Incorrect input source is selected. Check the input source and select the correct input source. The mute function is activated. Press (Mute) or adjust the volume level to cancel the mute function. When you are using connection with a external device (set top box, Bluetooth device etc.), adjust volume level of the device. 	
No woofer sound	 The power cord of the subwoofer is not connected. Plug the power cord into the wall outlet securely. Pairing between the unit and the subwoofer gets disconnected. Connect the unit and the subwoofer (Page 12) 	
The remote control does not work properly.	 The remote control is too far from the unit. Operate the remote control within about 7 m. There is an obstacle in the path of the remote control and the unit. Remove the obstacle. The batteries in the remote control is exhausted. Replace the batteries with new one. 	
The AUTO POWER function does not work.	 Check connection of the external device such as TV, DVD/Blu-Ray player or Bluetooth device. Depending on the connected device, this function may not operate. 	
LG Sound Sync does not work.	 Check whether your LG TV supports LG Sound Sync. Check connection of LG Sound Sync (Optical or wireless). Check sound setting of your TV and this unit. 	

PROBLEM	CAUSE & CORRECTION
The unit does not connect with Bluetooth device	Turn off the Bluetooth connection lock function. (Page 21)
	Check the details below and adjust the unit according to them. • With the sound bar connected with TV, change the AUDIO DIGITAL OUT setting on TV Setup Menu from [PCM] to [AUTO] or [BITSTREAM].
When you feel the output sound of the unit is low.	With the sound bar connected with Player, change the AUDIO DIGITAL OUT setting on Player Setup Menu from [PCM] to [PRIMARY PASS-THROUGH] or [BITSTREAM].
	 Change Audio DRC setting on connected device setup menu to [OFF] state. Make sure Night Mode is not On. Turn [OFF] Night Mode.

NOTES to use wireless

PROBLEM	CAUSE & CORRECTION
This device may have wireless interference.	 Wireless may not operate normally in weak signal area. Please install the device close enough to wireless subwoofer. Do not install the device on metal furniture for optimum performance.
Bluetooth device may malfunction or make noise in the following cases.	 When any part of your body contact the transceiver of the Bluetooth device or sound bar. When there is an obstacle or wall or the device is installed in a secluded spot. When there is a device(a wireless LAN, a medical equipment or a microwave) using same frequency, make the distance between the products as far away as possible each other. When to connecting the device to the Bluetooth device, make the distance between the products as close as possible each other. When the device gets too far from the Bluetooth device, the connection is disconnected and also malfunction may occur.

Appendix

Trademarks and licenses

All other trademarks are trademarks of their respective owners.

DOLBY AUDIO

Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories.



For DTS patents, see http://patents.dts.com. Manufactured under license from DTS Licensing Limited. DTS, the Symbol, DTS and the Symbol together, and Digital Surround are registered trademarks and/or trademarks of DTS, Inc. in the United States and/or other countries. © DTS, Inc. All Rights Reserved.

Bluetooth°

The **Bluetooth®** word mark and logos are registered trademarks owned by the Bluetooth SIG, Inc. and any use of such marks by LG Electronics is under license.

Other trademarks and trade names are those of their respective owners.

Specifications

General		
	Refer to the main label.	
Power consumption	Networked standby : 0.5 W	
	(If all network ports are activated.)	
AC adapter	 Model: DA-38A25 Manufacturer: Asian Power Devices Inc. Input: 100 - 240 V ~ 50 - 60 Hz Output: 25 V == 1.52 A 	
Dimensions (W x H x D)	Approx. 890.0 mm x 53.0 mm x 85.0 mm Without foot	
Operating temperature	5 °C to 35 °C	
Operating humidity	5 % to 90 %	
Available Digital Input Audio Sampling Frequency	32 kHz, 44.1 kHz, 48 kHz, 88.2 kHz, 96 kHz	
Available Digital Input Audio format	Dolby Audio, DTS Digital Surround, PCM	

Input		
OPTICAL IN (Digital audio in)	3 V (p-p), Optical jack x 1	

Amplifier (RMS Output)		
Total	300 W RMS	
Front	50 W RMS x 2 (4 Ω at 1 kHz, THD 10%)	
Subwoofer	200 W RMS (3 Ω at 80 Hz, THD 10%)	

• Designs and specifications are subject to change without prior notice.

Refer to the main label on the wireless subwoofer.

Refer to the main label on the wireless subwoofer.

Approx. 171.0 mm x 390.0 mm x 261.0 mm

1 Way 1 Speaker

400 W RMS

3 Ω 200 W RMS

Wireless subwoofer

Power requirements

Power consumption

Rated Input Power

Max. Input Power

Dimensions (W \times H \times D)

Type Impedance

Maintenance

Handling the unit

When shipping the unit

Please save the original shipping carton and packing materials. If you need to ship the unit, for maximum protection, re-pack the unit as it was originally packed at the factory.

Keeping the exterior surfaces clean

- Do not use volatile liquids such as insecticide spray near the unit.
- Wiping with strong pressure may damage the surface.
- Do not leave rubber or plastic products in contact with the unit for a long period of time.

Cleaning the unit

To clean the player, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

