



SIMPLE MANUAL

Mini Hi-Fi

System

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual.

Some of the content in this manual may differ from your unit.

MODEL
CK99



MFL70920617


www.lg.com

Copyright © 2018 LG Electronics Inc. All Rights Reserved.
1807_Rev02

ENGLISH




Top Panel

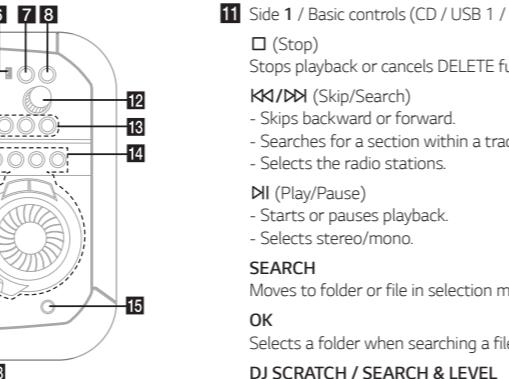


- 1** (Standby)
Turns the power on or off.
- 2** **USB REC / DEMO**
- Records to USB 1.
- To stop Recording, press and hold for 3 seconds.
- In power off status, if you press **USB REC / DEMO**, show **DEMO** mode.
- 3** **USB 1 Port**
You can play sound files by connecting the USB device.
- 4** **Display window**
- 5** **TEMPO A -/+**
Adjusts TEMPO in USB 1 function.
- MASTER VOL. (Volume) -/+**
Adjusts speaker volume.
- TEMPO B -/+**
Adjusts TEMPO in USB 2 function.
- 6** **USB 2 Port**
You can play sound files by connecting the USB device.
- 7** **F (Function)**
- Selects the function and input source.
- Press and hold to select the **PARTY LINK**.
- 8** **WIRELESS LINK**
- Selects **MAIN** or **OTHER** on **WIRELESS PARTY LINK** mode.
- Enable or disable **WIRELESS PARTY LINK** mode.
- 9** **MIC (Microphone) VOLUME -/+**
Adjusts microphone volume.
- 10** **VOCAL EFFECTS**
Selects **VOCAL EFFECTS** mode.
- MIC ECHO**
Selects **ECHO** mode.
- VOICE CANCELLER**
You can reduce the vocal tones during music playback from various input sources.
- 11** **Side 1 / Basic controls (CD / USB 1 / BLUETOOTH / RADIO only)**
 (Stop)
Stops playback or cancels **DELETE** function.
- KI/KD (Skip/Search)**
- Skips backward or forward.
- Searches for a section within a track/file.
- Selects the radio stations.
- DJ (Play/Pause)**
- Starts or pauses playback.
- Selects stereo/mono.
- SEARCH**
Moves to folder or file in selection mode.
- OK**
Selects a folder when searching a file.
- DJ SCRATCH / SEARCH & LEVEL**
- Turns clockwise or counterclockwise to make scratch sound.
- Turns clockwise or counterclockwise to control the **USER EQ** level.
- 12** **Side 2 / Basic controls (USB 2 only)**
 (Stop)
Stops playback or cancels **DELETE** function.
- KI/KD (Skip/Search)**
- Skips backward or forward.
- Searches for a section within a track/file.
- DJ (Play/Pause)**
Starts or pauses playback.
- SEARCH**
Moves to folder or file in selection mode.
- OK**
Selects a folder when searching a file.
- 13** **Side 1 / Basic controls (CD / USB 1 / BLUETOOTH / RADIO only)**
 (Stop)
Stops playback or cancels **DELETE** function.
- KI/KD (Skip/Search)**
- Skips backward or forward.
- Searches for a section within a track/file.
- DJ (Play/Pause)**
- Starts or pauses playback.
- Selects stereo/mono.
- SEARCH**
Moves to folder or file in selection mode.
- OK**
Selects a folder when searching a file.
- 14** **Side 2 / Basic controls (USB 2 only)**
 (Stop)
Stops playback or cancels **DELETE** function.
- KI/KD (Skip/Search)**
- Skips backward or forward.
- Searches for a section within a track/file.
- DJ (Play/Pause)**
Starts or pauses playback.
- SEARCH**
Moves to folder or file in selection mode.
- OK**
Selects a folder when searching a file.
- 15** **△ (Open/Close)**
Opens and closes the disc tray.
- 16** **CLUB, DRUM, USER (DJ PAD)**
Selects CLUB, DRUM or USER sound effect to mix.
(If you want to use USER, you have to register a source with "Music Flow Bluetooth" app.)
- 1, 2, 3, 4, 5, 6 (DJ PAD)**
Press a desired sound pad.
- 17** **AUTO SYNC**
When using MIX, you can synchronize the tempo of audio files being played in USB 1 and USB 2 by pressing **AUTO SYNC**.
- MIX**
Mixes audio sound.
- Cross fader**
Move the cross fader to adjust the sound volume of mixed sound when using **MIXER ON**.
- 18** **PARTY ACCELERATOR lever**
Slide the lever to create a party atmosphere.
- PARTY ACCELERATOR MODE**
Selects **PARTY ACCELERATOR MODE**.

Front Panel

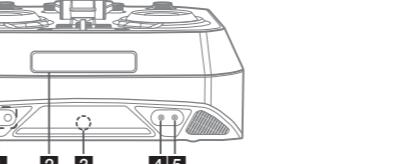

- 1** **MIC (Microphone) 1/2 jack**
- 2** **Disc tray**
- 3** **R (Remote sensor)**
- 4** **PORT. (Portable) IN jack**
- 5** **H/P (Headphone) jack**

Rear Panel

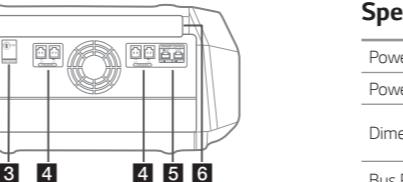

- 1** **Power cord**
- 2** **AUX IN 1/2 (L/R)**
- 3** **ANTENNA (FM)**
- 4** **SPEAKERS connector**
- 5** **SPEAKER LIGHTING**
Connect the speaker lighting cables.
- 6** **Lighting LED**

Design and specifications are subject to change without notice.

Additional Information

Replacement of battery




Caution

- When you use the multiple socket, it is advisable to use 15 A socket. 10 A socket may cause power off due to lack of power supply.
- Do not place objects on the speakers. It may cause the objects to fall and make property damage.
- Install the speakers on a firm surface not to slide. The vibration caused by the strong output can shake and move the speakers.
- Avoid turning up max volume in a small enclosed space. The powerful and intense output of the speakers can shake the ceiling and get the objects in the room falling.
- To protect from hearing damage, keep the sufficient distance from the speaker. The overwhelming sound from the speaker may cause a person's hearing damage.
- Allow more than 20 cm of free space between the main set and the speakers when you install the main set on the ground. High sound pressure from the speakers can make the set tremble to disturb the CD playback.
- Connect the power cord to wall outlet directly if possible. Or when you use an extension cable, it is highly recommended to use an extension cable of 110 V / 15 A or 230 V / 15 A, otherwise the unit may not operate properly because of the lack of power supply.
- Do not overload the extension cord with excessive electrical load.

Additional Information

Speaker Connection

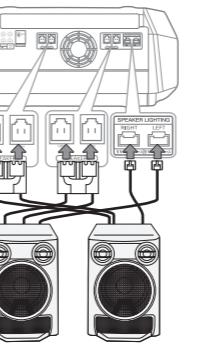

Additional Information

Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 470 mm x 213 mm x 423 mm
Bus Power Supply (USB)	5 V 500 mA
Amplifier (Total RMS output power)	5,000 W RMS

Design and specifications are subject to change without notice.

Controller App



Download the **Music Flow Bluetooth** App to your device. (Android only)

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>

Note

- Do not look directly at the light emitting part when the **LIGHTING** is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the **LIGHTING** of the unit.

Grounding

(Except for devices which are not grounded.) Ensure that you connect the earth ground wire to prevent possible electric shock (i.e. A Audio with a three-prong grounded AC plug must be connected to a three-prong grounded AC outlet). If grounding methods are not possible, have a qualified electrician install a separate circuit breaker. Do not try to ground the unit by connecting it to telephone wires, lightening rods, or gas pipes.

POWER: This unit operates on a mains supply of 200 - 240 V ~ 50 / 60 Hz

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

دليل بسيط نظام هاي-فاي صغير

الطراز CK99


www.lg.com
حقوق النشر والتاليف © عام ٢٠١٨ LG Electronics Inc.
جميع الحقوق محفوظة.
MFL70920617

يرجى قراءة هذا الدليل بعناية قبل تشغيل جهازك واحظبه للرجوع إليه في المستقبل.
لعرض تعليمات الميزات المتقدمة، تفضل بزيارة موقع الويب <http://www.lg.com>، ثم قم بتنزيل دليل المالك.

يمكن أن تختلف بعض محتويات هذا الدليل عن المشغل الخاص بك.



لوحة العلية

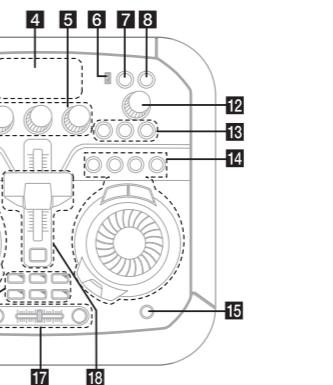

11

الجانب ١ / عناصر التحكم الرئيسية (RADIO)

(قط)

□ إيقاف التشغيل أو الغاء وظيفة

DELETE

□ (قط)/ Δ

- للتخطي بسرعة للأمام أو الخلف.

- يبحث عن قسم في سمارت ملف.

- اختيار محظيات الاعادة.

□ (فتح/غلق)

- لفتح التشغيل أو الإيقاف المؤقت للتشغيل.

STEREO/MONO

- التحديد.

OK

الانتقال إلى مجلد وملف في وضع التحديد.

□ (استعداد)

- ينبع الطاقة أو يوقف تشغيلها.

USB REC / DEMO 2

- يسجل على USB.

- لإيقاف التسجيل، اضغط على زر

USB REC / DEMO

- في حالة إيقاف التشغيل، إذا أضغط على زر

USB

- وعرض وضع

DEMO

□ منفذ 1

- يمكن تشغيل ملفات صوتية بتوصيل جهاز USB.

□ نافذة العرض

4

- نافذة DJ EFFECT

DJ EFFECT

- يحدد DJ EFFECT

□ منفذ 2

- ينبع الطاقة أو يوقف تشغيلها.

□ (قط)/ Δ

- إيقاف التشغيل، اضغط مع الاستمرار في الضغط لمدة ٣ ثوان.

□ (قط)/ Δ

- في حالة إيقاف التشغيل، إذا أضغط على زر

USB REC / DEMO

- في حالة إيقاف التشغيل، إذا أضغط على زر

USB

- وعرض وضع

DEMO

□ منفذ 3

- يمكن تشغيل ملفات صوتية بتوصيل جهاز USB.

□ (قط)/ Δ

- نافذة العرض

4

- نافذة DJ LOOP

DJ LOOP

- يحدد وضع

TEMPO A /+

- يمكن استخدامه ووضع

DJ LOOP

- DJ LOOP

- يحدد وضع

TEMPO B /+

- يضبط مستوى صوت سماعات الرأس.

□ منفذ 5

- يمكن تشغيل ملفات صوتية بتوصيل جهاز USB.

□ (قط)/ Δ

- نافذة KEY CHANGER

KEY CHANGER

- تغيير المقاييس المناسبة.

□ منفذ 6

- يمكن تشغيل ملفات صوتية بتوصيل جهاز USB.

□ (قط)/ Δ

- نافذة MODE

MODE

- يضبط تحديد وضع مرافق سماعة الرأس.

□ منفذ 7

- نافذة F

F

- التحديد الوظيفي ومصدر الدخل.

□ منفذ 14

- عناصر التحكم الرئيسية (2)

USB (قط)

□ (قط)/ Δ

- إيقاف التشغيل أو الغاء وظيفة

DELETE

□ (قط)/ Δ

- للتخطي بسرعة للأمام أو الخلف.

- يبحث عن قسم في سمارت ملف.

□ (قط)/ Δ

- لبدء التشغيل أو الإيقاف المؤقت للتشغيل.

OK

الانتقال إلى مجلد وملف في وضع التحديد.

□ (قط)/ Δ

- يختار مجلد عند البحث عن ملف.

□ WIRELESS LINK 8

- يحدد وضع

WIRELESS PARTY

LINK

- يفعل وضع

WIRELESS PARTY

LINK

- يمكن تشغيل بعض محتويات هذا الدليل عن المشغل الخاص بك.

□ MIC VOLUME -/+ 9

- يعدل صوت الميكروفون.

□ VOCAL EFFECTS 10

- يحدد وضع

VOCAL EFFECTS

- يختار مجلد عند البحث عن ملف.

□ VOICE CANCELLER

- يمكن تقليل التغmitters الصوتية أثناء تشغيل الموسقي من مصادر الإدخال المختلفة.

□ ملاحة

GPS

MAP

MAP