



**LG**  
Life's Good

# SIMPLE MANUAL Wireless Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL  
SJ5




[www.lg.com](http://www.lg.com)  
Copyright © 2017 LG Electronics. All Rights Reserved.

ENGLISH



## Front Panel

The buttons are located on the rear.

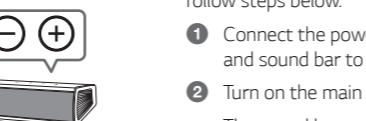

- Power ..... Standby
- F ..... Selects Function
- + ..... Adjusts Volume

## Rear Panel



- DC IN ..... Connect to the AC adapter
- OPTICAL IN ..... Connect to an Optical device
- PORTABLE IN ..... Connect to a Portable device
- USB ..... Connect to a USB device
- HDMI OUT (TV ARC) ..... Connect to a TV
- HDMI IN ..... Connect to HDMI out on a device

**! Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.**



## Subwoofer Connection

Place the wireless subwoofer near the speaker and follow steps below.

- ① Connect the power cord of wireless subwoofer and sound bar to the outlet.
- ② Turn on the main unit:

The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's green LED turns on.

## Subwoofer Connection Manually

If the subwoofer does not make sound, try to connect manually.

- ① Press **Pairing** button on the rear of the wireless subwoofer.
- ② The green LED on the rear of wireless subwoofer blinks quickly.
- ② Turn on the main unit.
- ③ Pairing is completed.

 
The green LED on the rear of wireless subwoofer turns on.

## Additional Information

- ! HDMI connection is unavailable if your TV does not support HDMI ARC.**
- ! If this unit is connected by OPTICAL and ARC at the same time, the ARC signal is a high priority.**

## Additional Device Connection

- ① Connect to the external device as follows.



- ② Set the input source by pressing **F** on the remote control or unit repeatedly.

2

## TV Connection

Connect with the Sound Bar and TV using Optical (A) or HDMI ARC (B).

### A Optical Connection

- ① Connect the sound bar to the TV using Optical cable.
- ② Set up [External Speaker (Optical)] on your TV setting menu.



### B HDMI(ARC) Connection

- ① Connect the sound bar to the TV using HDMI cable.
- ② Set up [External Speaker (HDMI ARC)] on your TV setting menu.



### Additional Device Connection

- ! HDMI connection is unavailable if your TV does not support HDMI ARC.**

**! If this unit is connected by OPTICAL and ARC at the same time, the ARC signal is a high priority.**

2

## Remote control

Refer to the main label.

### AC adapter

- Model : DA-38A25
- Manufacturer : Asian Power Devices Inc.
- Input : 100 - 240 V ~ 50 - 60 Hz 1.2 A
- Output : 25 V  $\frac{1}{2}$  1.52 A


Dimensions (W x H x D)  
Approx. 950 mm x 55 mm x 85 mm With foot

Bus Power Supply (USB)  
5 V  $\frac{1}{2}$  500 mA

Amplifier (Total RMS Output power)  
320 W RMS

Design and specifications are subject to change without notice.

## Replacement of battery

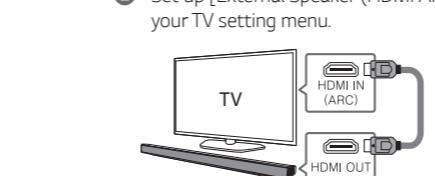

## OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for three (3) years from the date on which you purchased the product.

2

## Additional Information

### Specification

Power consumption Refer to the main label.

### AC adapter

Model : DA-38A25

Manufacturer : Asian Power Devices Inc.

Input : 100 - 240 V ~ 50 - 60 Hz 1.2 A

Output : 25 V  $\frac{1}{2}$  1.52 A

Dimensions (W x H x D)  
Approx. 950 mm x 55 mm x 85 mm With foot

Bus Power Supply (USB)  
5 V  $\frac{1}{2}$  500 mA

Amplifier (Total RMS Output power)  
320 W RMS

Design and specifications are subject to change without notice.

## Additional Information

### POWER

This unit operates on a mains supply of 100 - 240V~, 50 - 60Hz.

### Wiring

This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below.

### Warning

A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  $\triangle$  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

### Important

The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

**POWER:** This unit operates on a mains supply of 100 - 240V~, 50 - 60Hz.

**Wiring:** This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below.

**Warning:** A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  $\triangle$  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

**Important:** The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

**OPEN SOURCE SOFTWARE NOTICE INFORMATION**

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com). This offer is valid for three (3) years from the date on which you purchased the product.



