

NANO91*


Quick Start Guide




Images shown in manual
may vary depending on model

Unpacking


Check your product box for the following items. If there are any missing accessories, contact the local dealer where you purchased your product. The illustrations in this manual may differ from the actual product and item.

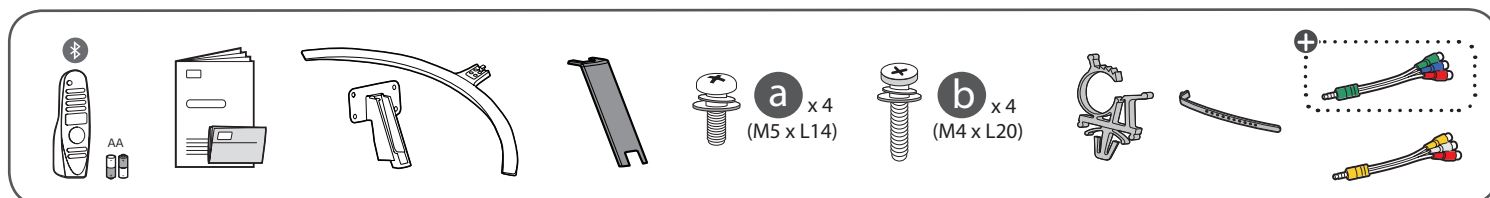


1-A 75NANO91*

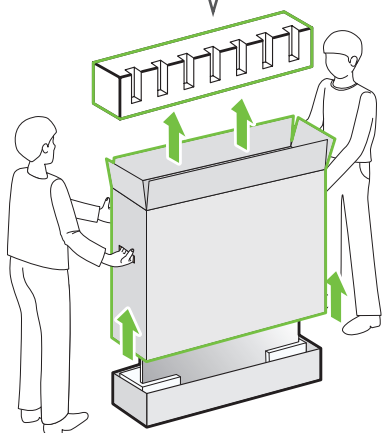


1-B 86NANO91*

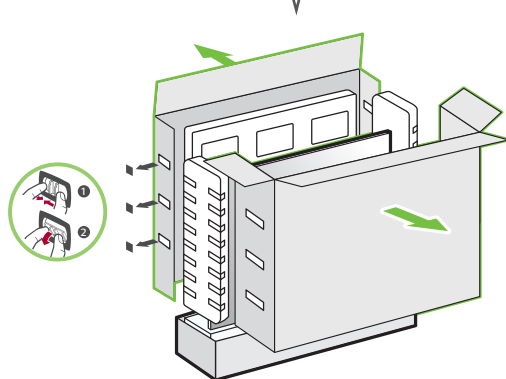

2

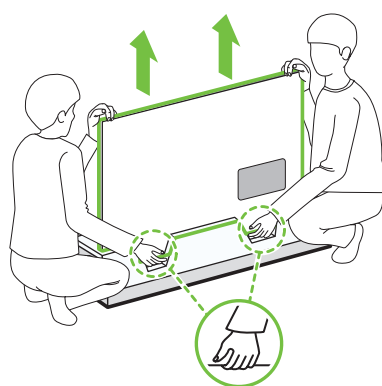


3

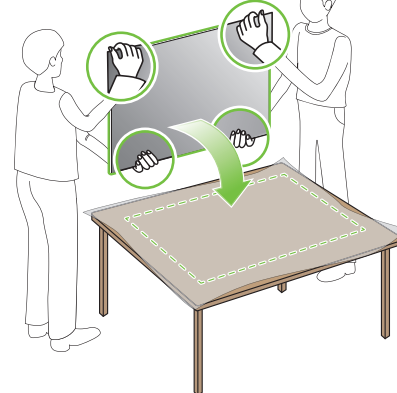


CAUTION

Image shown may differ from your TV
When attaching the stand to the TV set, place the screen facing down on a cushioned table or flat surface to protect the screen from scratches.


1

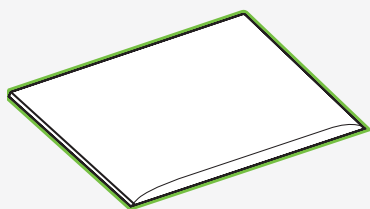


2

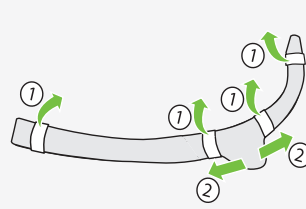


3

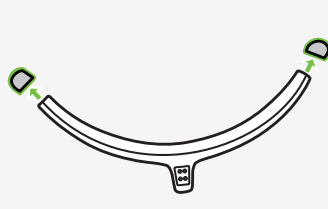


4

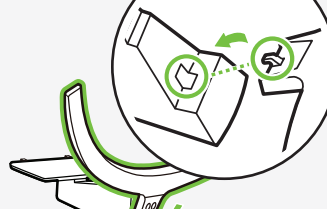


5

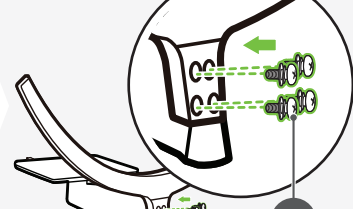


6

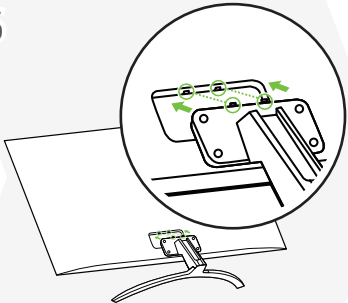


7

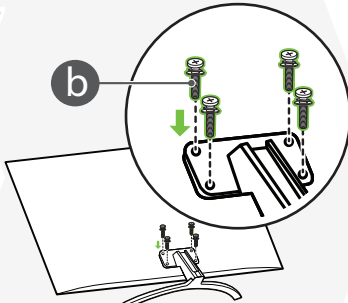


8

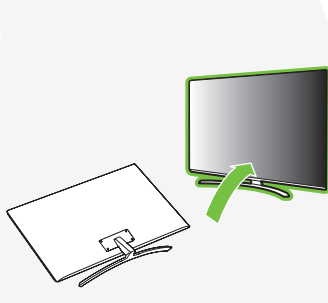


9

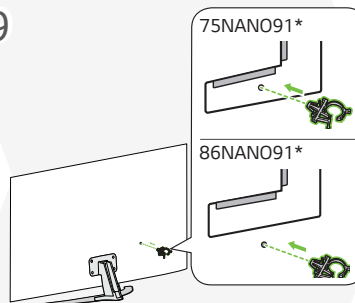


10

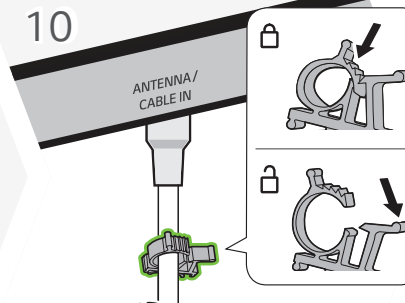



11

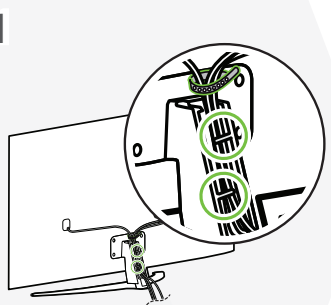


12




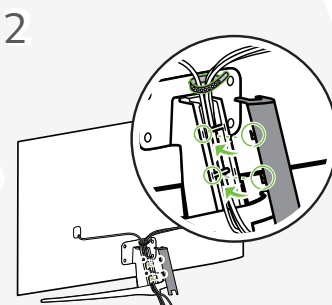


13

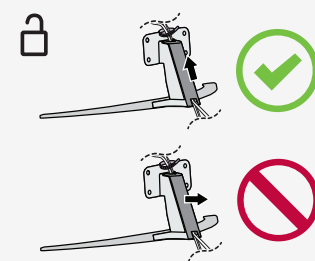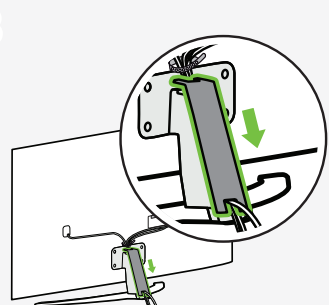

14

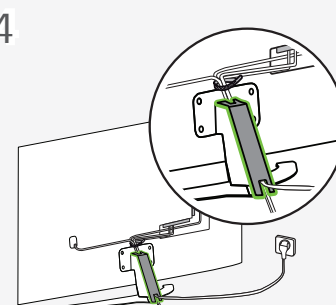

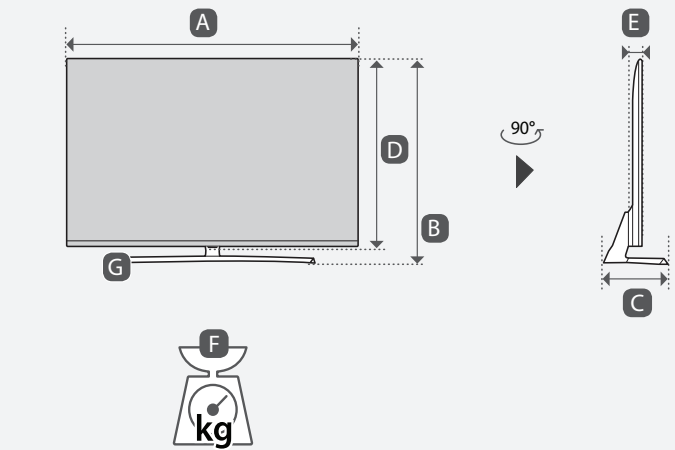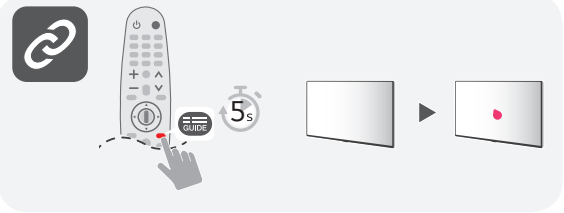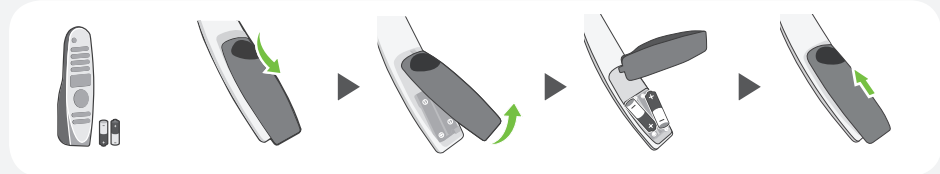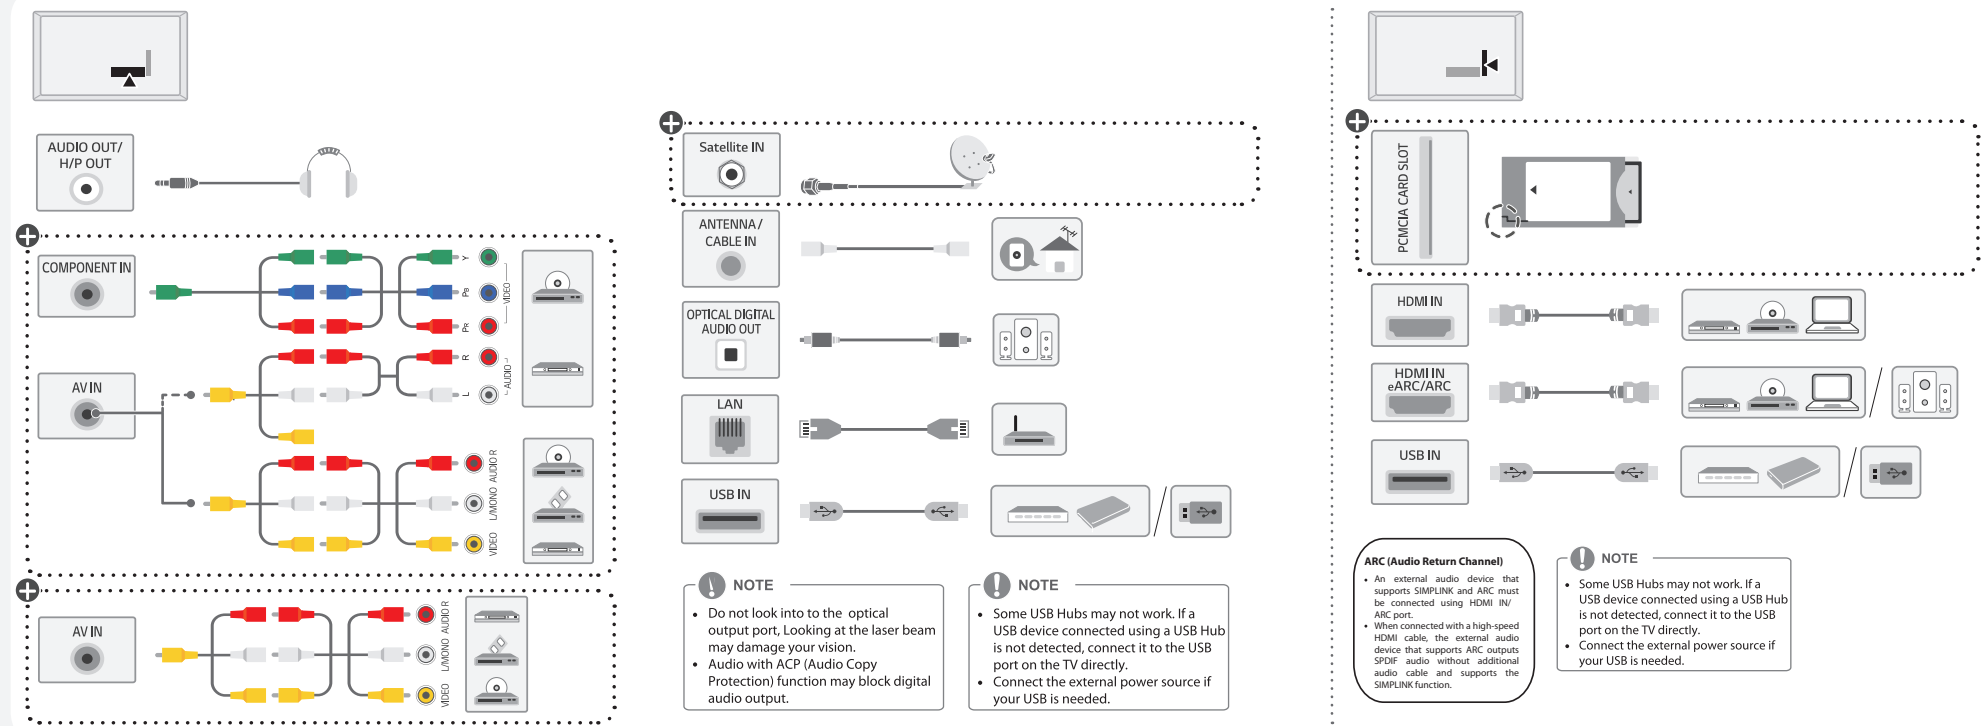

	A	B	C	D	E	F	F-G
	(mm)					(kg)	
75NANO91TNA	1677	1043	384	966	72.9	37.9	35.0
86NANO91TNA	1926	1183	432	1106	73.2	55.4	51.9
Power requirement				AC 100-240 V ~ 50 / 60 Hz			



ENGLISH Read **Safety and Reference**.
Due to environmental government regulations about imports and battery destruction in Colombia, TVs will not include the batteries for the remote control.

Easy Setup Guide
Please read this manual carefully before operating your set and retain it for future reference.

+ : Depending upon model