 
 


## Remote control

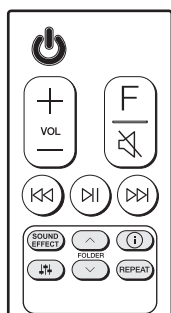

## Replacement of Battery

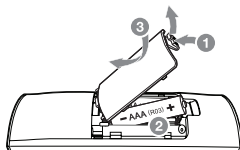

**SOUND EFFECT:** Selects a sound effect mode.

- **TV remote:** Long press **SOUND EFFECT** and press it again to use TV remote control.

**FOLDER** ^/∨: Searches a folder.

ⓘ: Displays the information of a file, an input source, a connected **Bluetooth** device name or an application name.

- **Auto Power ON/OFF:** Long press ⓘ and press it again.

⏮/⏭: Adjusts sound level of each speaker.

- **Surround sound:** Long press ⏮/⏭ and press it again.

**REPEAT:** Listens to your files repeatedly or randomly.

## Additional

## Download LG Sound Bar Application

You can manage the speaker settings and control the speaker by using "LG Sound Bar".

Download "LG Sound Bar" on the App Store or Google Play Store.

## AI Room calibration

AI Room Calibration is a sound tuning tool, which adjusts the audio settings of the Sound Bar based on the room acoustics and environment.

To access the AI Room Calibration it is necessary to install the "LG Sound Bar" app. On [Sound Setting] menu, choose [AI Room Calibration].

## Additional Information

## Specification

Power requirements	Refer to the main label.
Power consumption	Refer to the main label.
Dimensions (W x H x D)	Approx. 1443.0 mm x 63.0 mm x 146.0 mm (with foot)
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS Output power)	770 W RMS

Design and specifications are subject to change without notice.



## Rear Surround sound

Wireless Rear Speakers Kit included for real surround sound. (SPN11-SL / SPN11-SR)

To enjoy content containing **Dolby Atmos®** and **DTS:X®**, the connected device and content must support **Dolby Atmos®** and **DTS:X®**.

## OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to [opensource@lge.com](mailto:opensource@lge.com).

This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.



## SIMPLE MANUAL

# LG Wi-Fi Sound Bar

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

MODEL

SN11R




MFL71828421


2104\_Rev03



 [www.lg.com](http://www.lg.com)  
Copyright © 2020-2021 LG Electronics Inc. All Rights Reserved.

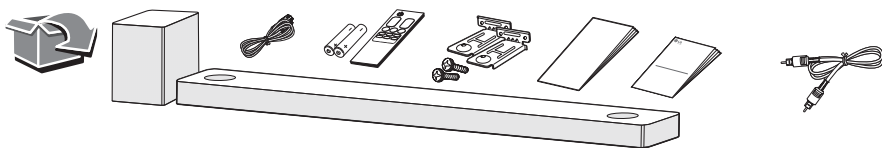

## Front Panel

 


- ⏻ (Standby) ..... Switches the unit ON or OFF.
- F (Function) ..... Selects function.
- /+ (Volume) ..... Adjusts volume.
- 📶 (Wi-Fi) ..... Selects Wi-Fi function.



### Reset the Unit

 Press and hold the 📶 on the unit until you hear the beep sound once.

## Rear Panel

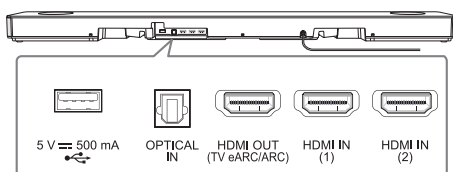

- USB port ..... Connect to a USB device.
- OPTICAL IN ..... Connect to an optical device.
- HDMI OUT (TV eARC/ARC) ..... Connect to a TV.
- HDMI IN (1) / HDMI IN (2) ..... Connect to device with HDMI OUT.



Make sure to properly align and connect the optical cable; improper alignment may cause damage to the jack.

## Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

- 1 Connect the power cord of the sound bar and the wireless subwoofer to the outlet.
- 2 Turn on the sound bar.
  - The sound bar and wireless subwoofer will be **automatically** connected. The subwoofer's green LED turns on.

 
### Manually Subwoofer Connection

If the subwoofer does not make sound, try to connect manually.

- 1 Press **Pairing** on the rear of the wireless subwoofer.
  - The green LED on the rear of the wireless subwoofer blinks quickly. (If the green LED does not blink, press and hold the **Pairing**.)
- 2 Turn on the sound bar.
  - Pairing is completed. The green LED on the rear of the wireless subwoofer turns on.



Keep the sound bar and the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

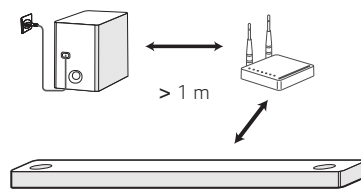


## TV Connection

Connect the sound bar and TV using Optical (A) or HDMI ARC (B).


### A Optical Connection

 - 1 Connect the sound bar to the TV using Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

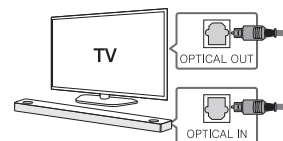

### B HDMI (TV eARC/ARC) Connection

 
- 1 Connect the sound bar to the TV using HDMI cable.
- 2 Set up [External Speaker (HDMI ARC)] on your TV setting menu.

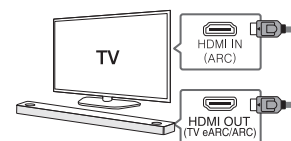

- HDMI connection is unavailable if your TV does not support HDMI ARC.
- If this unit is connected by OPTICAL and ARC at the same time, the ARC signal has a higher priority.


### Additional Device Connection

 - 1 Connect to the external device like as follow.

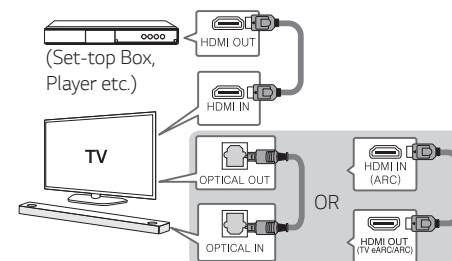

- 2 Set the input source by pressing **F** repeatedly.

## Network Connection

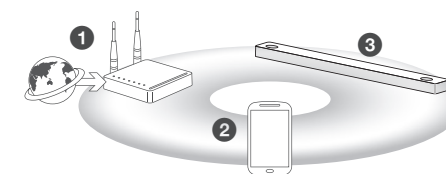 

- 1 Check network condition. A router connected to network should be installed.
- 2 Connect your smart device to your home network.
- 3 Connect the sound bar to the power supply.



All devices should be connected to same router.

### Step.1 Install "Google Home" App

Download the Google Home App from the Google Play or App Store.

### Step.2 Set up the Wi-Fi connection with app

- 1 Connect your smart device to the Wi-Fi network that you'll use for your unit.



In case of iOS devices, it should be turned on **Bluetooth** setting on your smart device.

- 2 Launch the "Google Home" app.
- 3 Follow the steps for Wi-Fi connection on the app.
  - When the unit is properly connected to Wi-Fi, "CONNECTED" will appear on the display window with sound.



- When connect to Wi-Fi, this app may request to create a Google Account. You will need a Google account to use this app.
- "Google Home" app is provided by Google. It might be revised by a change of Google Policy.



SIMPLE MANUAL

# Wireless Rear Speakers Kit

---

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.


MODEL

SPN11-SL, SPN11-SR



MFL71698919  
2005\_Rev02

 [www.lg.com](http://www.lg.com)  
Copyright © 2020 LG Electronics Inc. All Rights Reserved.

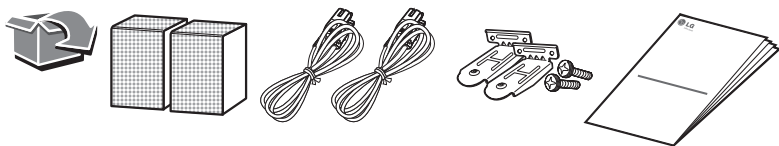

## Wireless Rear speakers connection

- 1 Connect the power cord of the wireless rear speakers to the outlet.
- 2 Turn on the main unit: The sound bar and wireless rear speakers will be automatically connected. The green LED on the wireless rear speakers turns on.

 
## Manually pairing wireless rear speakers

When your connection is not completed, you can see the red LED on the wireless rear speaker and the speaker does not make sound. Try to connect manually.

- 1 Press **PAIRING** on the rear of the wireless rear speaker.  
(If the green LED does not blink, press and hold the **PAIRING**.)
  - The green LED on the wireless rear speaker blinks quickly.
- 2 Turn on the main unit
  - Pairing is completed. The green LED on the wireless rear speaker turns on.



Set the distance between the sound bar and the wireless rear speakers as close as possible and keep them away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

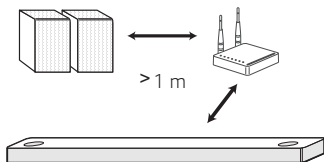

## Surround Sound On/Off

When you turn on surround function, you can enjoy magnificent surround sound for all the input sound source with rear speakers.



The initial setting for the surround function is OFF; turn the surround function ON to use it.

**Surround On:** Press and hold **Surround** button on the remote control about 3 seconds and then press **Surround** button repeatedly to select ON - SURROUND in the display window.

**Surround Off:** Press and hold **Surround** button on the remote control about 3 seconds and then press **Surround** button repeatedly to select OFF - SURROUND in the display window.

## Additional Information

### Specification (Each speaker)

Power requirements	Refer to the main label.
Power consumption	Refer to the main label.
Dimensions (W x H x D)	Approx. 130.0 mm x 21.5 mm x 191.2 mm (with foot)

Design and specifications are subject to change without notice.

