



簡易手冊

Wi-Fi Sound Bar

Wi-Fi SOUND BAR

SC9S



MFL70286292
2211_Rev01

www.lg.com
版權所有 © 2023-2025 LG Electronics Inc. 保留一切權利。

中文

規格

- 電源耗用
- 請參閱主標籤。
- 電源適配器
- 型號：MS-Z2610R230-065E0-P
 - 製造商：MOSO POWER SUPPLY TECHNOLOGY CO., LTD.
 - 輸入：100 - 240 V ~ 50/60 Hz
 - 輸出：23 V $\overline{\text{---}}$ 2.61 A
- 尺寸（闊 x 高 x 深）：大約 975.0 mm x 63.0 mm x 125.0 mm
- 匯流排電源供應 (USB): 5 V $\overline{\text{---}}$ 500 mA
- 擴音器（RMS 總輸出功率）：400 W RMS

注意：開放來源程式碼軟件

欲獲得 GPL、LGPL、MPL 及其他有義務公開包含本產品內容原始程式授權的源代碼，及存取所有提及授權條款、版權聲明及其他相關文件，請瀏覽 <https://opensource.lge.com>。

LG Electronics 也可應您要求，在由您支付相關費用（如媒體成本、運費及處理費）的條件下以 CD-ROM 方式提供開放原始程式碼，如有需要請寄送電子郵件至 opensource@lge.com。

該產品最後一次出貨的三年內，任何收到此資訊的人可享此優惠。

安全注意事項

本機的插頭握柄是專為本產品所設計，且與附贈的電源線結合為一體。若您因為任何理由而需截短此電源線時

請勿再使用該插頭

應使用全新的插頭以確保連續使用之安全性。請依據1994年之插頭及插座規範的規定，將插頭確實地與電源線結合。



符合標準聲明

在此，LG電子聲明 Wi-Fi Sound Bar 類型的無線電設備符合 2014/53/EU指令。你可以從以下互聯網地址獲得歐盟符合性聲明的全文：
<http://www.lg.com/global/support/cedoc/cedoc#>

為使用者安全着想，安裝或使用裝置時，身體與裝置之間的距離不應少於 20 厘米。

ENGLISH

Specification

- Power consumption
- Refer to the main label.
- AC adapter
- Model: MS-Z2610R230-065E0-P
 - Manufacturer: MOSO POWER SUPPLY TECHNOLOGY CO., LTD.
 - Input: 100 - 240 V ~ 50/60 Hz
 - Output: 23 V $\overline{\text{---}}$ 2.61 A
- Dimensions (W x H x D): Approx. 975.0 mm x 63.0 mm x 125.0 mm
- Bus Power Supply (USB): 5 V $\overline{\text{---}}$ 500 mA
- Amplifier (Total RMS Output power): 400 W RMS

Open Source Software Notice Information

To obtain the source code that is contained in this product, under GPL, LGPL, MPL, and other open source licenses that have the obligation to disclose source code, and to access all referred license terms, copyright notices and other relevant documents, please visit <https://opensource.lge.com>.

LG Electronics will also provide open source code to you on CD-ROM for a charge covering the cost of performing such distribution (such as the cost of media, shipping, and handling) upon email request to opensource@lge.com.

This offer is valid to anyone in receipt of this information for a period of three years after our last shipment of this product.

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord,

DO NOT RE-USE THE PLUG

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.



 


Declaration of Conformity

Hereby, LG Electronics declares that the radio equipment type Wi-Fi SOUND BAR is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:
<http://www.lg.com/global/support/cedoc/cedoc#>

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.



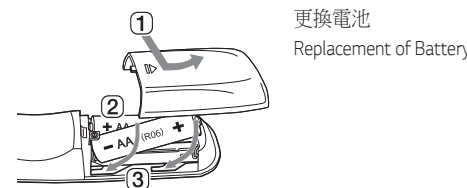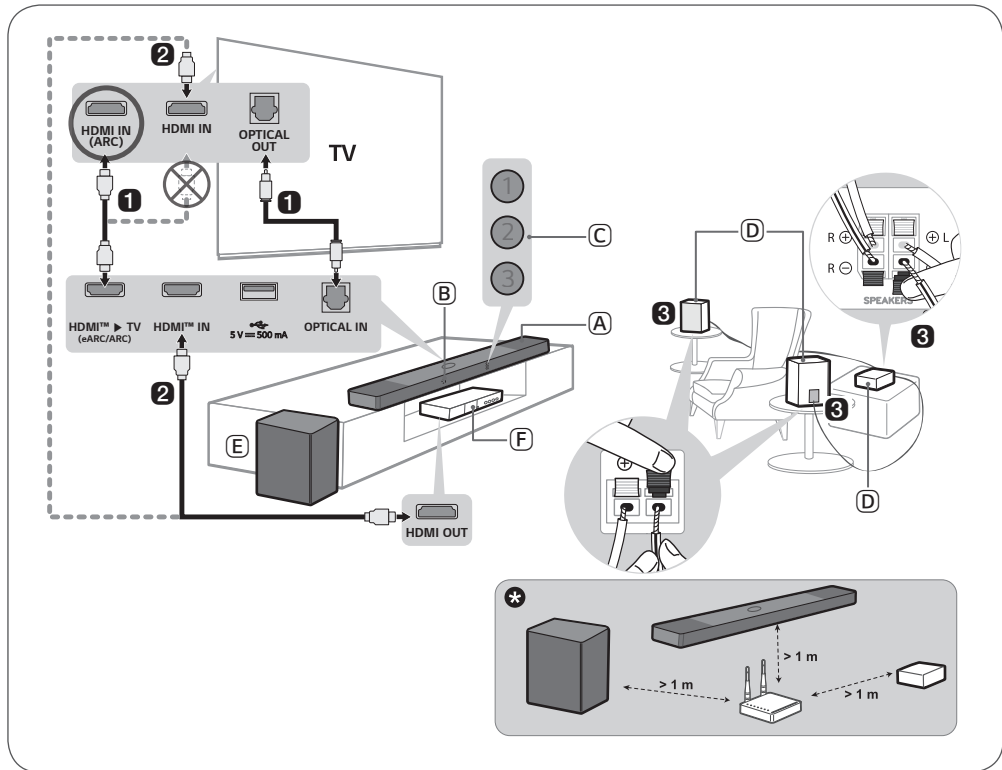

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE

中文 產品安裝及使用

操作設備前請仔細閱讀本手冊，並保留以備日後參考。
要檢視有關進階功能的指示，請造訪 <http://www.lg.com> 或掃描二維碼下載使用說明書。部份使用說明的內容有可能與您的產品不同。



- A Sound Bar
B 遙控接收器
C LED 指示燈狀態 (1)(2)(3)
D 後置揚聲器 / 無線接收器 (單獨發售, SPQ8-S)
E 無線重低音揚聲器 — 貼近Sound Bar安裝。
F 外置設備 — (藍光播放機、遊戲機等等)

○ : 亮起 / ● : 熄滅 / ◐ : 閃爍							
紅色閃爍	白色閃爍	白色	藍色閃爍	藍色	白色	白色	紫色
開啟 開機	無線網絡 就緒	無線網絡	藍牙 就緒	藍牙	OPTICAL / HDMI ARC	HDMI IN	USB

- 請用光纖線或 HDMI 線將Sound Bar連接至您的電視機。
- 如果您使用的是外部裝置（如機頂盒、藍光播放器、遊戲機等），透過 HDMI 連接線將其連接到 Sound Bar 或電視。
 - 如有必要，請購買 HDMI 線纜、光纖或 USB 延長線來連接 Sound Bar。
- 若您另外購買了後置揚聲器及無線接收器，請用揚聲器線纜將後置揚聲器連接至無線接收器。連接後置揚聲器至無線接收器時，請將黑色條紋線纜連接至每個揚聲器的負極，並將其餘線纜連接至每個揚聲器的正極。
- 依照以下順序連接電源：無線重低音揚聲器 → 無線接收器 → Sound Bar。接著，開啟 Sound Bar：與 Sound Bar 自動建立連線後，無線重低音揚聲器和無線接收器的 LED 指示燈會變成綠色。

與您的電視機配合使用產品

- 重複按下功能 (F) 按鈕，直到 LED1 和 LED2 指示燈亮起白色。如果您使用連接到 Sound Bar 上的 HDMI™ IN 的外部裝置，請重複按下功能 (F) 按鈕，直到 LED1 和 LED3 指示燈亮起白色。
- 在電視的設定上，將輸出揚聲器設定為 [HDMI ARC]、[光纖] 或 [外部揚聲器]。
 - 您可以使用 LG WOWCAST（另售，WTP3）無線連接到 Sound Bar 來欣賞音效。

透過 Wi-Fi 將產品連接至您的智能電話

- 將您的智能電話連接至 Wi-Fi。
- 從 Google Play 或 App Store 安裝 LG Sound Bar 應用程式。
- 運行 LG Sound Bar 應用程式並依照指引操作。
- 產品會連接至您的智能電話，您可透過 LG Sound Bar 應用程式操控產品。

透過 藍牙 將設備連接至您的智能電話

- 輕觸您的智能電話內的設定 (S) 按鈕，選擇 藍牙。開啟 藍牙 功能。（開 > 關）
- 按下 藍牙 配對 (P) 按鈕。一段時間過後，LED2 指示燈會閃爍藍色。
- 找到並輕觸「LG_Speaker_SC9S_XXXX」或您的 Google Home 應用程式之登入名稱。
- 當產品透過 藍牙 連接到智能手機時，所有LED 指示燈都會亮起藍色。

ENGLISH

Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.



- A Sound bar
B Remote Control Receiver
C Status LED (1)(2)(3)
D Rear Speakers / Wireless Receiver (Sold separately, SPQ8-S)
E Wireless Subwoofer - Install it close to the sound bar.
F External Device - (Blu-ray player, game console, etc.)

○ : On / ● : Off / ◐ : Blink							
Red blinking	White blinking	White	Blue blinking	Blue	White	White	Purple
Power on Power off	Wi-Fi ready	Wi-Fi	Bluetooth ready	Bluetooth	OPTICAL / HDMI ARC	HDMI IN	USB

- Connect the sound bar to your TV via an optical cable or an HDMI cable.
- If you are using an external device (ex. Set-top box, Blu-ray player, game console, etc.), connect it to the sound bar or to the TV via an HDMI cable.
 - If necessary, purchase HDMI cables, an optical cable, or a USB extension cable to connect the sound bar.
- If you purchased the rear speakers and wireless receiver separately, connect the rear speakers to the wireless receiver via a speaker cable. When connecting the rear speakers to the wireless receiver, connect the black striped cable to the negative terminal of each speaker and the remaining cable to the positive terminal of each speaker.
- Connect to power in the following order: wireless subwoofer → wireless receiver → sound bar. Then, turn on the sound bar. When the connection is automatically established with the sound bar, the LEDs on the wireless subwoofer and the wireless receiver will light up green.
- Using the product with your TV
 - Press the Function (F) button repeatedly until LED1 and LED2 light up white. If you are using an external device that is connected to HDMI™ IN on the sound bar, press the Function (F) button repeatedly until LED1 and LED3 light up white.
 - On your TV's settings, set the output speaker to [HDMI ARC], [Optical], or [External Speaker].
 - You can enjoy the sound by connecting LG WOWCAST (Sold separately, WTP3) to the sound bar wirelessly.
- Connecting the product to your smartphone via Wi-Fi
 - Connect your smartphone to Wi-Fi.
 - Install the LG Sound Bar app on Google Play or the App Store.
 - Run the LG Sound Bar app and follow the instructions.
 - The product will connect to your smartphone and you can control the product with LG Sound Bar app.
- Connecting the product to your smartphone via Bluetooth
 - Tap the Settings (S) button on your smartphone and select Bluetooth. Turn on the Bluetooth function. (Off > On)
 - Press the Bluetooth pair (P) button. After a moment, LED2 blinks blue.
 - Find and tap "LG_Speaker_SC9S_XXXX" or the name you registered on the Google Home app.
 - When the product is connected to your smartphone via Bluetooth, all LEDs light up blue.

!

If you see a red LED on the wireless subwoofer or on the front of the wireless receiver, it means that the sound bar is not connected to the speakers. If this is the case, connect them in the following order.

- Press the Power (P) button on the sound bar to turn it off.
 - Press the Pairing (PAIRING) button on the back of the disconnected wireless subwoofer or wireless receiver. Check if each LED blinks green.
 - If you still see a red LED on the wireless subwoofer, press and hold the button on the back of the subwoofer again.
 - Press the Power (P) button on the sound bar to turn it on.
 - When the connection is established, you will see a green LED light on the wireless subwoofer or on the front of the wireless receiver light up green.
- Keep the sound bar, the subwoofer and wireless receiver away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.
 - Some speakers may not make sound depend on the input source. Select BASS BLAST (BASS BLAST+) sound mode to listen through all speakers.

- Design and specifications are subject to change without notice.
- Google Play is a trademark of Google LLC.