

SIMPLE MANUAL

Wireless Sound Bar


To view the instructions of advanced features,
visit <http://www.lg.com> and then download Owner's Manual.
Some of the content in this manual may differ from your unit.

MODEL
LAS550H





Front Panel

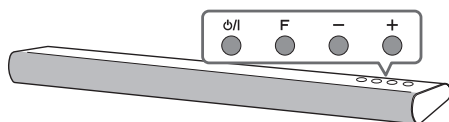

- Power On /Off
- Selects Function
- Adjusts Volume

1 Subwoofer Connection

Place the wireless subwoofer near the sound bar and follow steps below.

- 1 Connect the power cord of wireless subwoofer to the outlet.
- 2 Turn on the sound bar :
The sound bar and wireless subwoofer will be **automatically** connected. A yellow-green LED on the wireless subwoofer will light on.



If no sound is heard from the wireless subwoofer, please follow as below.


- i. Adjust volume level of sound bar to minimum. "VOL MIN" appears on display window.
- ii. Press and hold (Mute) button on the remote control about 3 seconds. "WL RESET" appears on display window and red LED on the sound bar blinks.
- iii. Press and hold **PAIRING** on the back of wireless subwoofer for more than 5 seconds using point of a pen.
- iv. Disconnect the power cord of the sound bar and the wireless subwoofer. Connect them again.

Controller App



Download the **Music Flow Bluetooth** App to your device.

Rear Panel

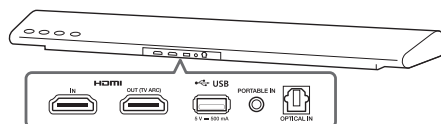


- HDMI IN Connect to a device
- HDMI OUT (TV ARC) Connect to a TV
- USB port Connect to a USB device
- PORTABLE IN Connect to a Portable device
- OPTICAL IN Connect to an Optical device

2 TV Connection

Connect with the Sound Bar and TV using Optical (A) or HDMI ARC (B).


A Optical Connection

- 1 Connect the the sound bar to the TV using Optical cable.
- 2 Set up [External Speaker (Optical)] on your TV setting menu.

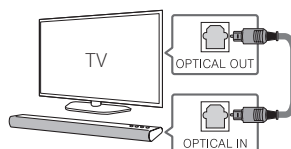

B HDMI(ARC) Connection

- 1 Connect the sound bar to the TV using HDMI cable.
- 2 Set up [External Speaker (HDMI ARC)] on your TV setting menu.

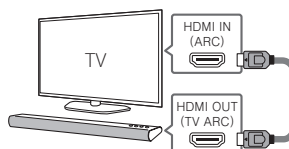

LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>


Additional Information

Specification

Power requirements	Refer to the main label.
	Refer to the main label.
Power consumption	Networked standby : 2.5 W (If all network ports are activated.)
Dimensions (W x H x D)	Approx. 890 mm x 51 mm x 85 mm
Net Weight	Approx. 2.8 kg
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS Output power)	320 W

Design and specifications are subject to change without notice.

Remote control

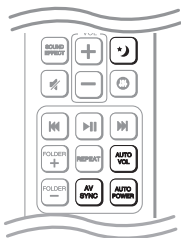


-  : Turns down the volume at night.
-  : Adjusts the volume level appropriately.
-  : Synchronizes the audio and video.
-  : Automatically turns on by an input source.

How to disconnect the wireless network connection or the wireless device

Set up the AUTO POWER ON/OFF function to off and turn off the unit.

Replacement of battery

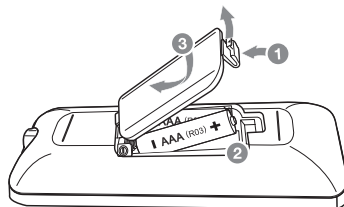

Declaration of Conformity

CE 0197

Hereby, LG Electronics European Shared Service Center B.V. declares that this Wireless Sound Bar is compliant with the essential requirements and other relevant provisions of Directive 1999/5/EC. The complete Declaration of Conformity may be requested through the following postal address:

LG Electronics European Shared Service Center B.V.
European Standard Team
Krijgsman 1
1186 DM Amstelveen
The Netherlands

or can be requested at our dedicated DoC website:

<http://www.lg.com/global/support/cedoc/cedoc#>

This device is a 2.4 GHz wideband transmission system, intended for use in all EU member states and EFTA countries.

RF Radiation Exposure Statement

This equipment should be installed and operated with minimum distance 20 cm between the radiator and your body.

IMPORTANT SAFETY NOTICE

The cord grip for the plug fitted to this product is built into the existing power cord as supplied. If, for any reason you need to shorten the cord.

DO NOT RE-USE THE PLUG.

A new plug must be used to ensure your continued safety by securing the plug to the power cord in accordance with Plug & Socket Regulations 1994.

HDMI™
HIGH-DEFINITION MULTIMEDIA INTERFACE



簡易手冊

無線

Soundbar

要查看進階功能的指示，請瀏覽 <http://www.lg.com> 並下載使用者手冊。
本手冊中的某些內容可能會與您的裝置不符。


MODEL
LAS550H



www.lg.com



前面板

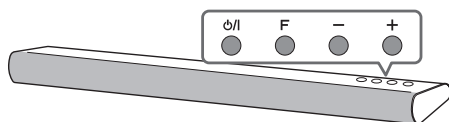

- ⏻ 開機/關機
- F 選擇功能
- + 調節音量

1 無線超低音揚聲器連接

把無線超低音揚聲器放置在 Sound Bar 式揚聲器附近並按照以下步驟操作。

- 1 將無線超低音揚聲器的電源線連接至電源插座。
- 2 開啟 Sound Bar 式揚聲器：
Sound Bar 式揚聲器和無線超低音揚聲器將自動連接。無線超低音揚聲器上的黃綠色 LED 將會亮起。



若無線超低音揚聲器沒有聲音，請按照下列步驟操作。


- i. 調節 Sound Bar 式揚聲器的音量至最小。「VOL MIN」在顯示視窗中顯示。
- ii. 按住遙控器上的  (靜音) 並持續約 3 秒。「WL RESET」在顯示視窗中顯示，且 Sound Bar 式揚聲器上的紅色 LED 閃爍。
- iii. 使用筆尖按住無線超低音揚聲器背部的 PAIRING 超過 5 秒。
- iv. 中斷 Sound Bar 式揚聲器和無線超低音揚聲器的電源連接。重新連接。

控制應用程式



下載 **Music Flow Bluetooth** 應用程式至您的裝置。

後面板

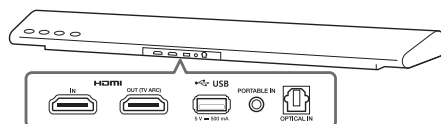


- HDMI IN 連接至裝置
- HDMI OUT (TV ARC) 連接至 TV
- USB port 連接至 USB 裝置
- PORTABLE IN 連接至可攜式裝置
- OPTICAL IN 連接至光纖裝置

2 電視連接

透過光纖 (A) 或 HDMI ARC (B) 連接 Sound Bar 式揚聲器和 TV。


A 光纖連接

- 1 透過光纖將 Sound Bar 式揚聲器連接至 TV。
- 2 在您的 TV 設定功能表上設定 [外置揚聲器 (光纖)]。

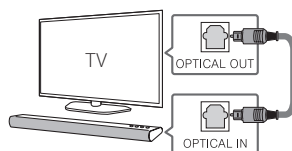

B HDMI (ARC) 音訊連接

- 1 透過 HDMI 纜線連接 Sound Bar 式揚聲器至 TV。
- 2 在您的 TV 設定功能表上設定 [外置揚聲器 (HDMI ARC)]。

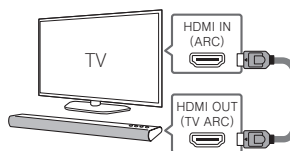

LG Sound Sync (無線)



更多資訊，請下載網上使用者手冊。
<http://www.lg.com>

其他資訊

規格

電源要求	請參閱主要標籤。
耗電	請參閱主要標籤。 網絡待機: 2.5 W (如果所有網絡端口都被啟動。)
尺寸 (寬 x 高 x 深)	大約 890 mm x 51 mm x 85 mm
淨重	大約 2.8 kg
匯流排電源供應 (USB)	5 V $\equiv$ 500 mA
擴音器 (總RMS 輸出功率)	320 W

設計和規格如有任何變更，恕不另行通知。

遙控器




- : 在夜晚調低音量。
- : 適當地調節音量。
- : 同步音訊和視訊。
- : 透過輸入源自動開啟。

如何中斷連接無線網絡或無線裝置

設定自動電源開啟/關閉功能關閉它及關閉裝置。

更換電池

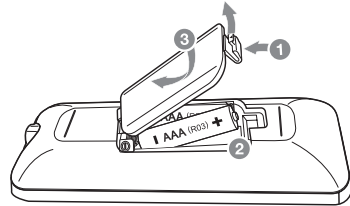

符合標準聲明

CE 0197

LG Electronics European Shared Service Center B.V. 特此聲明這個 Wireless Sound Bar 可兼容基本要求和和其他相關的 1999/5/EC 指令，或經以下的通訊地址要求遞交整個符合標準聲明：

LG Electronics European Shared Service Center
B.V.
European Standard Team
Krijgsman 1
1186 DM Amstelveen
The Netherlands

或可向我們專設的 DoC 網站查詢：

<http://www.lg.com/global/support/cedoc/cedoc#>

這個裝置是 2.4 GHz 的寬頻傳輸系統，適用於所有歐盟成員國和 EFTA 國家。

RF 輻射洩漏聲明

本裝置應以最小距離您身體 20 厘米的位置安裝及運作。

安全注意事項

本機的插頭握柄是專為本產品所設計，且與附贈的電源線結合為一體，若您因為任何理由而需截短此電源線時

請勿再使用該插頭

應使用全新的插頭以確保連續使用之安全性。請依據1994年之插頭及插座規範的規定，將插頭確實地與電源線結合。

HDMITM
HIGH-DEFINITION MULTIMEDIA INTERFACE

