

Specification

Power requirements

- Refer to the main label.

Power consumption

- Refer to the main label.

Dimensions (W x H x D): Approx. 950.0 mm x 71.0 mm x 47.0 mm

Bus Power Supply (USB): 5 V  500 mA

Amplifier (Total RMS Output power): 300 W RMS



SIMPLE MANUAL

**WIRELESS
SOUND BAR**

SQC2



MFL71970407

2211_Rev01


www.lg.com

Copyright © 2022 LG Electronics Inc. All Rights Reserved.



ENGLISH Installing and Using the Product

Please read this manual carefully before operating your set and retain it for future reference.
To view the instructions of advanced features, visit <http://www.lg.com> or scan QR code and then download Owner's Manual. Some of the content in this manual may differ from your product.

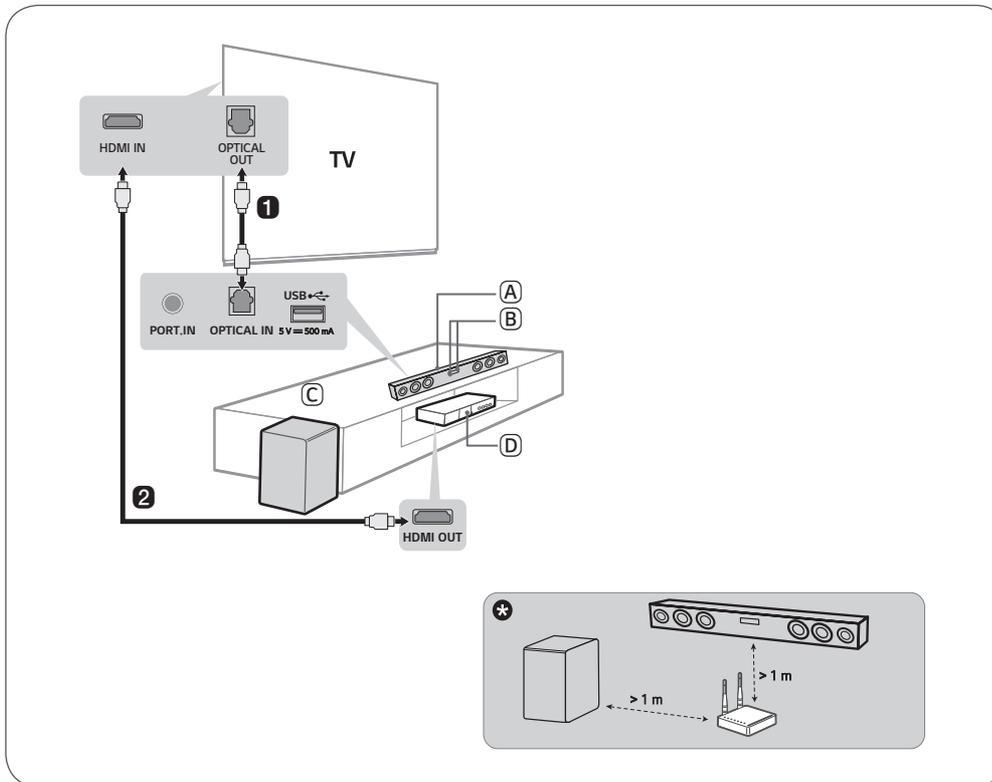

- (A) Sound bar
- (B) Function LED / Remote Control Receiver
- (C) Wireless Subwoofer - Install it close to the sound bar.
- (D) External Device - (Blu-ray player, game console, etc.)

1 Connect the sound bar to your TV via an optical cable.

2 If you are using an external device (ex. Blu-ray player, game console, etc.), connect it to the TV via an HDMI cable.

3 Connect to power in the following order: wireless subwoofer → sound bar. Then, turn on the sound bar. When the connection is automatically established with the sound bar, the LED on the wireless subwoofer will light up green.

4 Using the product with your TV

1 Press the **F** button repeatedly until the OPTICAL LED appears on the function LED.

2 On your TV's settings, set the output speaker to [Optical] or [External Speaker].

5 Connecting the product to your smartphone via Bluetooth

1 Tap the **Settings** button on your smartphone and select **Bluetooth**. Turn on the **Bluetooth** function. (Off > On)

2 Press the **F** button repeatedly until the blinking **Bluetooth** LED appears on the function LED.

3 Find and tap the product on your smartphone. The product appears as "LG SQC2 (XX)".

4 When the product is connected to your smartphone via **Bluetooth**, the **Bluetooth** LED turns on.



If you see a red LED on the back of the wireless subwoofer, it means that the sound bar is not connected to the subwoofer. If this is the case, connect them in the following order.

1 Press the **Power** button on the sound bar to turn it off.

2 Press the **Pairing** button on the back of the disconnected wireless subwoofer. Check if LED blinks green.

- If you still see a red LED on the back of the wireless subwoofer, press and hold the button on the back of the subwoofer again.

3 Press the **Power** button on the sound bar to turn it on.

4 When the connection is established, you will see a green LED light on the back of the wireless subwoofer.

* Keep the sound bar, the subwoofer away from the device (ex. wireless router, microwave oven, etc.) over 1 m to prevent wireless interference.

- Design and specifications are subject to change without notice.

Replacement of Battery

