



ENGLISH

SIMPLE MANUAL

LG ThinQ® View

Smart Display with
the Google Assistant

MODEL
WK9



MFL70441307

1904_Rev01

www.lg.com

Copyright © 2019 LG Electronics Inc.
All Rights Reserved.

Safety Information

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the product.

WARNING:

- TO PREVENT FIRE OR ELECTRIC SHOCK HAZARD, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.
- Do not install this equipment in a confined space such as a book case or similar unit.
- This unit contains magnets which can be harmful to some kind of object (Ex: Magnetic card, Pacemaker etc.).

CAUTION:

- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions. Slots and openings in the cabinet are provided for ventilation and to ensure reliable operation of the product and to protect it from over heating. The openings should never be blocked by placing the product on a bed, sofa, rug or other similar surface. This product shall not be placed in a built-in installation such as a bookcase or rack unless proper ventilation is provided or the manufacturer's instruction has been adhered to.

- The apparatus should not be exposed to water (dripping or splashing) and no objects filled with liquids, such as vases, should be placed on the apparatus.
- No naked flame sources, such as lighted candles, should be placed on the apparatus.
- To avoid fire or electric shock, do not open the unit: contact to qualified personnel only.
- Do not leave the unit in a place near the heating appliances or subject to direct sunlight, moisture, or mechanical shock.
- The Power Plug is the disconnecting device. In case of an emergency, the Power Plug must remain readily accessible.
- To clean the unit, use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.
- Do not use volatile liquids such as insecticide spray near the unit. Wiping with strong pressure may damage the surface. Do not leave rubber or plastic products in contact with the unit for a long period of time.
- Do not place the unit over the vehicle's air bag. When the air bag deploys, it may result in injury. Before using in the car, fix the unit.
- Do not use the handsfree function while driving the car.
- Do not leave the unit on an unstable place such as high shelves. It may fall down because of the vibration of the sound.
- Do not use high voltage products around this product. (ex. Electrical swatter) This product may malfunction due to electrical shock.

CAUTION when using this product in environments of low humidity.

- It may cause static electricity in environments of low humidity.
- It is recommended to use this product after touching any metal object which conducts electricity.

NOTICE: For safety marking information including product identification and supply ratings, please refer to the main label on the bottom or the other surface of the product.

For models using an adapter

Only use the AC adapter supplied with this device. Do not use a power supply from another device or another manufacturer. Using any other power cable or power supply may cause damage to the device and void your warranty.

Declaration of Conformity



Hereby, LG Electronics declares that the radio equipment type LG ThinQ View is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address:

<http://www.lg.com/global/support/cedoc/cedoc>

The use of the 5150 – 5350 MHz band is restricted to indoor use only. This restriction exists in the countries Belgium (BE), Bulgaria (BG), Czech Republic (CZ), Denmark (DK), Germany (DE), Estonia (EE), Ireland (IE), Greece (EL), Spain (ES), France (FR), Croatia (HR), Italy (IT), Cyprus (CY), Latvia (LV), Lithuania (LT), Luxembourg (LU), Hungary (HU), Malta (MT), Netherlands (NL), Austria (AT), Poland (PL), Portugal (PT), Romania (RO), Slovenia (SI), Slovakia (SK), Finland (FI), Sweden (SE), United Kingdom (UK), Switzerland (CH), Iceland (IS), Liechtenstein (LI) and Norway(NO).

For consideration of the user, this device should be installed and operated with a minimum distance of 20 cm between the device and the body.

Frequency range	Output power (Max.)
2402 to 2480 MHz	10 dBm
2412 to 2472 MHz	20 dBm
5180 to 5320 MHz	23 dBm
5500 to 5700 MHz	23 dBm

Symbols

	Refers to alternating current (AC).
	Refers to direct current (DC).
	Refers to class II equipment.
	Refers to stand-by.
	Refers to "ON" (power).
	Refers to dangerous voltage.



Disposal of your old appliance

1. This crossed-out wheeled bin symbol indicates that waste electrical and electronic products (WEEE) should be disposed of separately from the municipal waste stream.
2. Old electrical products can contain hazardous substances so correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health. Your old appliance may contain reusable parts that could be used to repair other products, and other valuable materials that can be recycled to conserve limited resources.
3. You can take your appliance either to the shop where you purchased the product, or contact your local government waste office for details of your nearest authorised WEEE collection point. For the most up to date information for your country please see www.lg.com/global/recycling

POWER: This unit operates on a mains supply of 100-240 V- 50-60 Hz.

Wiring: This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

Warning: A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol $\perp$ or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

Important: The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE: NEUTRAL, BROWN: LIVE** - As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

OPEN SOURCE SOFTWARE NOTICE INFORMATION

To obtain the source code under GPL, LGPL, MPL, and other open source licenses, that is contained in this product, please visit <http://opensource.lge.com>.

In addition to the source code, all referred license terms, warranty disclaimers and copyright notices are available for download. LG Electronics will also provide open source code to you on CDROM for a charge covering the cost of performing such distribution (such as the cost of media, packaging and posting) upon email request to opensource@lge.com. This offer is valid for a period of three years after our last shipment of this product. This offer is valid to anyone in receipt of this information.

For more information about Google's open source, visit device settings of Google Home app.

Disclaimers

 
- Google, Google Home, Google Play, Google Duo, Chromecast built-in and other related marks and logos are trademarks of Google LLC.
- The Google Assistant requires an internet/ data connection. Data rates may apply.
- The Google Assistant is not available in certain languages and countries.
- Subscriptions may be required, and additional terms, conditions and/or charges may apply.
- Controlling certain devices and features in your home requires a compatible smart device.
- Details of services may vary by country.
- Please note that AI Service may be changed, removed or terminated, without notice, by LGE or its third-party providers.

Setup

Step 1. Connect the AC adapter


After connecting the AC adapter, the Smart Display starts booting. Then screen turns on

- 1 LG booting logo appears on the screen.
- 2 Google Assistant logo appears on the screen.
- 3 Setup screen appears on the screen.

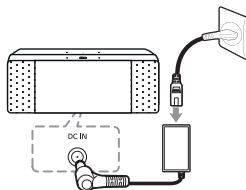

Step 2. Install the Google Home App

 Download the Google Home App from the Google Play or App Store.

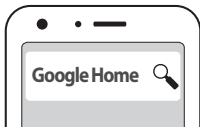

! NOTE

The Smart Display is not compatible with the "Smart ThinQ" app. So it can not be used for setup or for control by using the "Smart ThinQ" app.

Step 3. Set up the Wi-Fi connection with app

- 1 Connect your smart device to the Wi-Fi network that you'll use for your Smart Display.

! NOTE

 
When using an iOS device, turn on **Bluetooth** setting on your smart device.

- 2 Launch the Google Home app.
- 3 Follow the steps for Wi-Fi connection on the app.

! NOTE

You will need a Google Account to use this app.

- ④ Smart Display is properly connected to Wi-Fi, main screen will appear.



! NOTE

The Google Home app is provided by Google. It might be revised by a change of Google Policy.

Getting help for the Google Assistant

For more information and inquiries, please refer to the below guide.

- Visit the Google Assistant Help Center or Google Product Forums on the web site.
- Visit <http://www.lg.com> and then search "WK9".

Then follow these instructions.
[Support] → [Help Library]

! NOTE

Site address is subject to change.

How to Use the Google Assistant

Make sure the Smart Display is connected to Wi-Fi. (Page 8-10)

Just start with "Hey Google" and then ask it questions. Quickly manage tasks, view glanceable answers, stay connected with loved ones, enjoy your entertainment, and control your smart home -- all hands-free.

Say "Hey Google"



Hey Google





NOTE

Voice commands

- **Timers and alarms**

"Set a timer for 15 minutes"

"Wake me up at 7 AM tomorrow"

- **Weather**

"What's the weather this weekend?"

- **Calendar and reminders**

"What's on my agenda?"

"Add doctor's appointment to my calendar"

- **Media**

"Show me football highlights on YouTube"

"Show my playlists"

"Play the news"

- **Photos**

"Show me my photos from two years ago"

"Show me my photos from Hawaii"

and more.

For more information on the voice commands, refer to the Google Home app screen.

Additional

Smart Home Control

With the Google Assistant, you can control compatible smart home devices such as TV's, lights, switches, plugs, thermostats and more by simply using your voice.



NOTE

Compatible LG appliance models:

Visit <http://www.lg.com> and then search the information

Make video calls

You can use Google Duo to make video calls to your family and friends. With Google Duo, you can enjoy video calls between this unit and smartphones, tablets, and computers with the Duo app.



 
NOTE

If you need more information about Google Duo, please contact Google or visit the Google Duo Help Center.

Bluetooth Connection

Step 1. Connect the Wi-Fi

Make sure the Smart Display connects to Wi-Fi by using the Google Home app (Page 8-10).

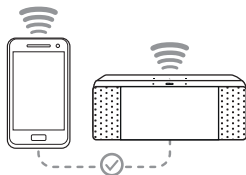

! NOTE

 
The **Bluetooth** connection may not work properly before connecting to Wi-Fi.

Step 2. Setup to be able to pair with a Bluetooth device on the Google Home app

You can set to be able to pair with a Bluetooth device on the Google Home app.


Follow these instructions on the Google Home app.

[Home] → [Settings] → [Paired Bluetooth devices]

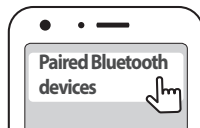


Step 3. Find and select your Smart Display name on setting of your device

 Select Smart Display name that is set on the Google Home app from phone's smart device list.

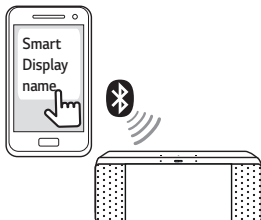


Basic Operation

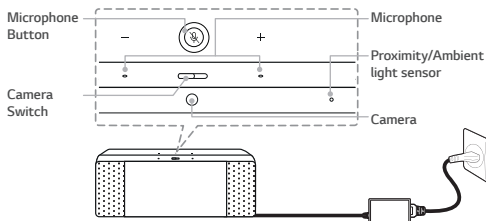 


Volume	Volume Control Tap - or +
Microphone	Enable / Disable Voice Recognition Press 
Camera	Enable / Disable Camera Slide Camera Switch.

 Device Gestures



 - Swipe right from left edge to go back to your home screen.




- Swipe up from bottom edge to access to your quick settings.

Important Notice

Resetting

To initialise information of existing connection, follow these instructions.

 - 1 Press and hold **—** and **+** button for 10 seconds at the same.



- 2 Before Smart Display enter reset mode, pop-up window is displayed on the screen of Smart Display.
- 3 When you select [Yes, do it!], the Smart Display is reset.

NOTE

When you reset this Smart Display, it needs to reconnect Wi-Fi, **Bluetooth**.

Specification

Power consumption:

- Refer to the main label.
- Networked standby : 5.1 W

Dimensions (W x H x D):

- Approx. 321 mm X 136 mm X 133 mm

AC Adapter:

- Model : ADS-45SN-19-2 19040G
- Manufacturer: SHENZHEN HONOR ELECTRONIC CO.,LTD
- Input: 100-240 V ~ 50-60 Hz
- Output: 19 V  2.1 A
- Design and specifications are subject to change without notice.

For more information, download the online owner's manual. <http://www.lg.com>



