

## Additional Information

### Specifications

Power Requirements	Refer to the main label on the unit.
Power Consumption	Refer to the main label on the unit.
Dimensions (W x H x D)	Approx. 275 mm X 530 mm X 275 mm
Bus Power Supply (USB)	5 V  500 mA
Amplifier (Total RMS output power)	150 W RMS

Design and specifications are subject to change without notice.

### Note

- Do not look directly at the light emitting part when the LIGHTING is turned on.
- If the illumination brightness is glaring, switch on the room lights or turn off the LIGHTING of the unit.

**POWER:** This unit operates on a mains supply of 200 - 240 V ~, 50 / 60 Hz.

**Wiring:** This unit is supplied with a BS 1363 approved main plug. When replacing the fuse, always use a fuse of the same rating and approved to BS 1362. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your dealer. If the type of plug supplied is not suitable for the mains sockets in your home, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

**Warning:** A mains plug removed from the mains lead of this unit must be destroyed. A mains plug with bared wires is hazardous if inserted in a mains socket. Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol  or coloured green or green and yellow. If any other plug is fitted, use same rating of fuse in the plug.

**Important:** The wires in this mains lead are coloured in accordance with the following codes:

- **BLUE:** NEUTRAL, **BROWN:** LIVE: As the colours of the wires in the mains lead of this unit may not correspond with the coloured marking identifying the terminals in your plug, proceed as follows: The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black. The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.



# SIMPLE MANUAL

# HIGH POWER

# SPEAKER SYSTEM

Please read this manual carefully before operating your set and retain it for future reference.

To view the instructions of advanced features, visit <http://www.lg.com> and then download Owner's Manual. Some of the content in this manual may differ from your unit.

### MODEL

RL4



MFL71281414


1901\_Rev01

[www.lg.com](http://www.lg.com)

Copyright © 2019 LG Electronics Inc. All Rights Reserved.



## Top panel

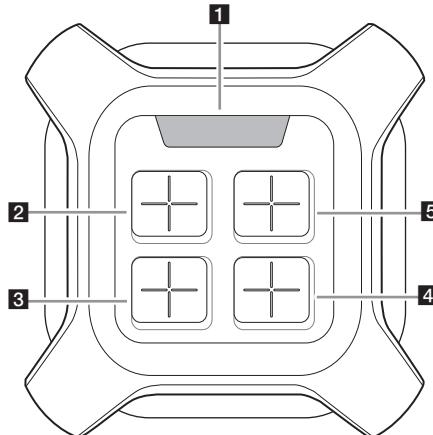

### 4 MIC ECHO / DEMO

- Selects ECHO mode.
- In power off status, if you press **MIC ECHO / DEMO**, show DEMO mode.

### VOCAL EFFECTS

Selects various vocal effects mode.

### KEY CHANGER

Changes the key to suit your vocal range with **KK/DD** (Skip/Search) button.

### VOICE CANCELLER

You can reduce the vocal tones during music playback from various input sources.

### 5 F (Function)

- Selects the function and input source.
- Press and hold to adjust delay time when using PARTY LINK with AUX.

### MIC (Microphone) VOL (Volume)

Adjusts microphone volume.

### +/- (Volume)

Adjusts speaker and microphone volume.

**1** Display window

**2** (Standby)

Turns the power on or off.

### LIGHTING

Selects the lighting mode.

### TWIN

Connects two speakers for TWIN mode in WIRELESS PARTY LINK.

### SOUND EFFECT / BASS BLAST (or BASS BLAST+)

- Chooses sound impressions.
- Press and hold to select BASS (or BASS+) effect directly.

### **3** AUTO DJ

Selects the AUTO DJ mode.

### (Play/Pause)

Starts or pauses playback.

### (Skip/Search)


- Skips backward or forward.
- Searches for a section within a file.

### Controller App



Download the **LG XBOOM** App to your device.  
(Android only)

## Rear panel

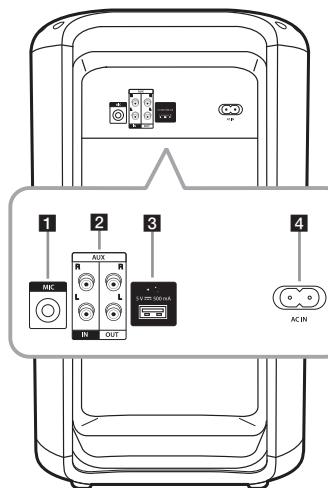

**1** MIC (Microphone) jack


**2** AUX IN / OUT (L/R)

**3** USB port


**4** AC IN socket

## How to place the unit
 
### Vertical



### Horizon

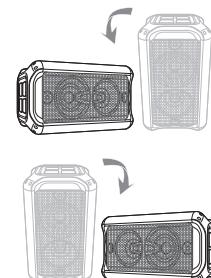

### LG Sound Sync (Wireless)



For more information, download the online owner's manual. <http://www.lg.com>