 


IMPORTANT SAFETY PRECAUTION

- ❑ Don't rest heavy objects on or apply pressure to the lid.

- Don't bend the lid forcibly, as it may break.

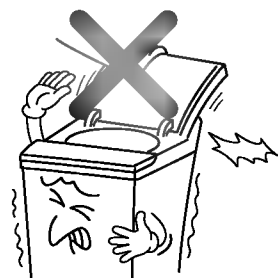


- ❑ Don't press the switches and/or the panel with a sharp object, i.e mechanical pencil.

- Switch and/or panel damage or a malfunction may result.




- ❑ Don't install the washer where it would be exposed to direct sunlight.

- Plastic parts and the painted cabinet may be deformed and/or fade.

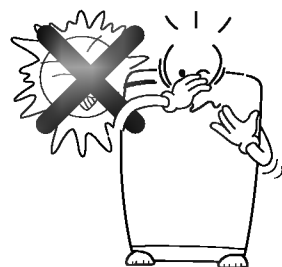


- ❑ Don't use excessively hot water. (above 70 °C)

- Plastic parts of the washer may be deformed or damaged.

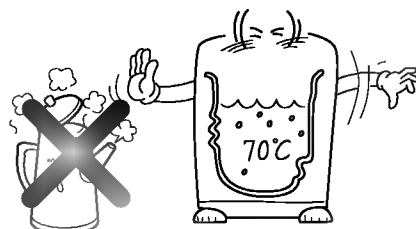


- ❑ Don't spin-dry starched clothes.

- If spined by mistake, operate the washer without load with only half the normal amount of detergent.
- Otherwise, starch adhering to the bowl may soil other clothes.

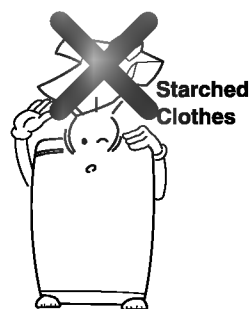

- ❑ Don't use strong alkaline detergents.

- The rubber parts may be damaged.

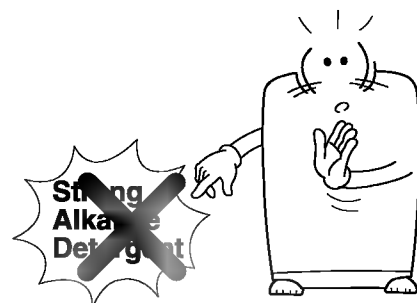

IMPORTANT SAFETY PRECAUTION

- ☐ Never touch the clothes in the bowl during operation or until the bowl stops rotating.
- Even when rotating slowly, the clothes may wrap around your fingers, which is dangerous.




- ☐ The appliance is not intended for use by young children or infirm persons without supervision.
- ☐ Young children should be supervised to ensure that they do not play with the appliance.



- ☐ Don't put hand(s) under the washer during operation.
- Rotating parts may injure your hand(s).




- ☐ Don't put kerosene, gasoline, benzene, thinner or clothes containing these chemicals into the washer.
- An explosion might result.

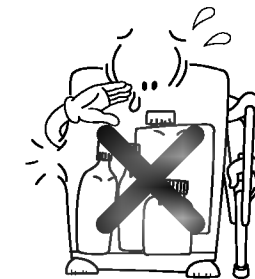


- ☐ Keep washer away from the fire(a heater, burning cigarette, etc.).
- The washer may be deformed or a fire may break out.






- ☐ After washing
 - Close the water tap.
 - Turn the POWER button "OFF" at the wall power outlet, if you will not be using the machine for a long period of time.
 - * To prevent water leakage, fire, electric shocks, etc.

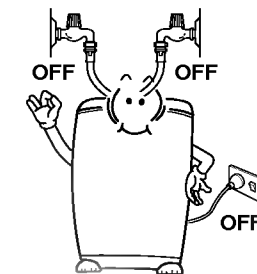

PARTS NAME

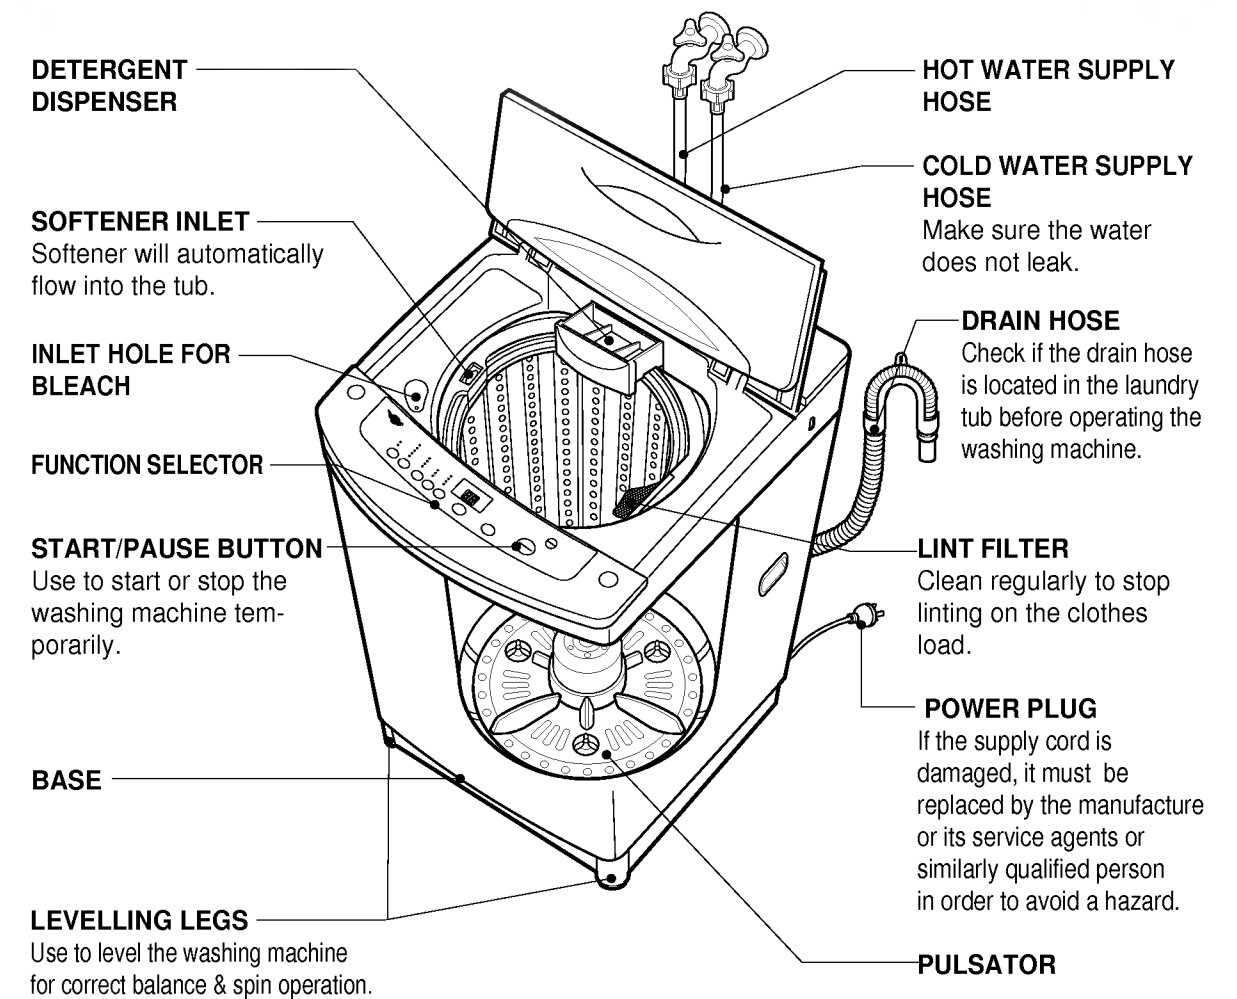


Accessories

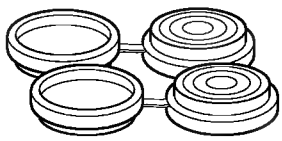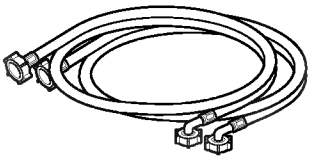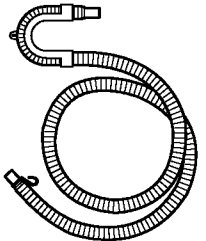Height adjustment plate	Inlet hose	Drain hose
 4 Pieces	 1 Each for cold and hot water	 1 Piece

Install the washing machine on a firm and even floor.

- Install the washing machine on a level and firm surface.
- Keep the washing machine more than 10cm from the wall to prevent vibration noise during spinning.
- The base opening must not be obstructed by carpeting when the washing machine is installed on a carpeted floor.
- Wooden floors may need reinforcing to prevent the normal vibration which occurs with an unbalanced load.


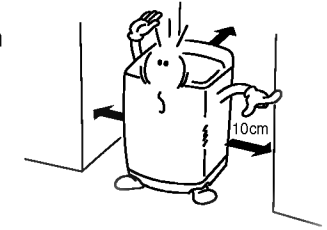


CAUTION

- If the appliance is supplied from a cord extension set or electrical portable outlet device the cord extension set or electrical portable outlet device should be positioned so it is not subject to splashing or ingress of moisture.


Level the washing machine

- ☐ Check the level of the washing machine using a spirit level on the side of the washing cabinet
- ☐ You can check the level also by visually lining up the washer with the fills, adjacent walls or cabinets.

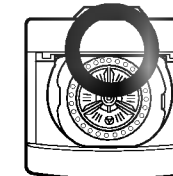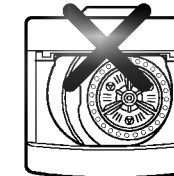

- ☐ You can level the washer using the A.L spindle fitted to the cabinet.


- Screw the A.L SPINDLE legs up or down as required.
- Additional height adjustment plates are provided in the accessory bag. These fit under A.L SPINDLE if required to allow for greater adjustment of the legs.
- When washing machine does not even out, turn A.L SPINDLE right or left to be level.
- When you need to control the height highly, use to fold the height adjustment plate once or double.

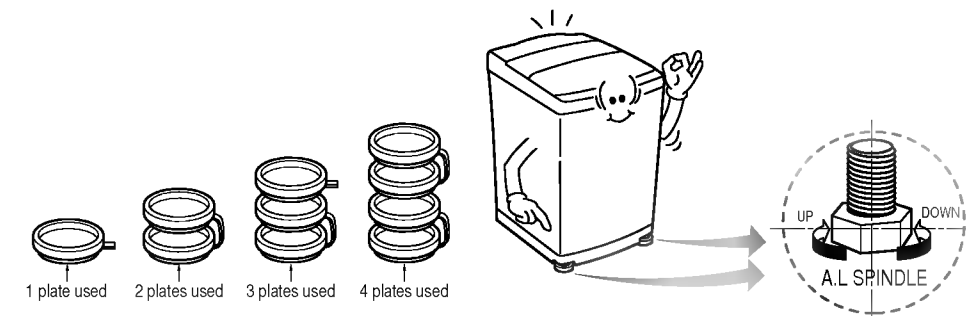



Adding fabric softener

(For detailed description, refer directions on fabric softener container.)

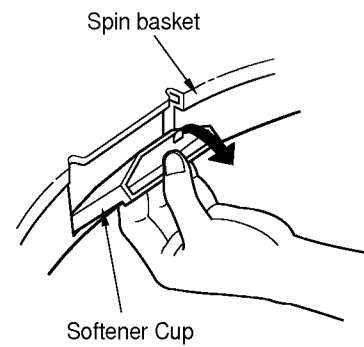


- Remove the softener cup by pulling out in the direction of the arrow. Put fabric softener into the cup and return it to the original position before starting the wash.
- The fabric softener is automatically dispensed at the last rinse cycle.
- Do not add too much softener.
- Refer to the softener manufacturer's instructions.

CAUTION

- Opening the lid during the spin cycle will quicken the softener deposit time, lowering its effect.
- Do not leave the washer for more than a day after depositing fabric softener into the tub.
- The effect of softening is changeable to position of inlet box and wash bowl.
- Selectable washes described in page 18 & 19 are not designed to be used with the fabric softener.


Adding liquid bleach

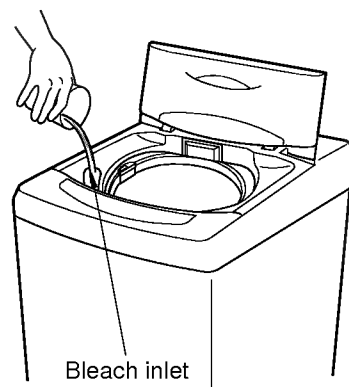


- Dilute the bleach with water and pour it through the bleach inlet slowly at the start of washing.
- Follow the bleach manufacturer's instruction on the amount of bleach to use.
- Do not use bleach for coloured clothes as they may fade.
- Do not pour undiluted liquid bleach having a high concentration directly over the clothes. This may damage the clothes.

- If the signal sounds are bothering especially at night. Press process & program button at the same time. Signal function resumes by pressing two buttons again.

 OPTION

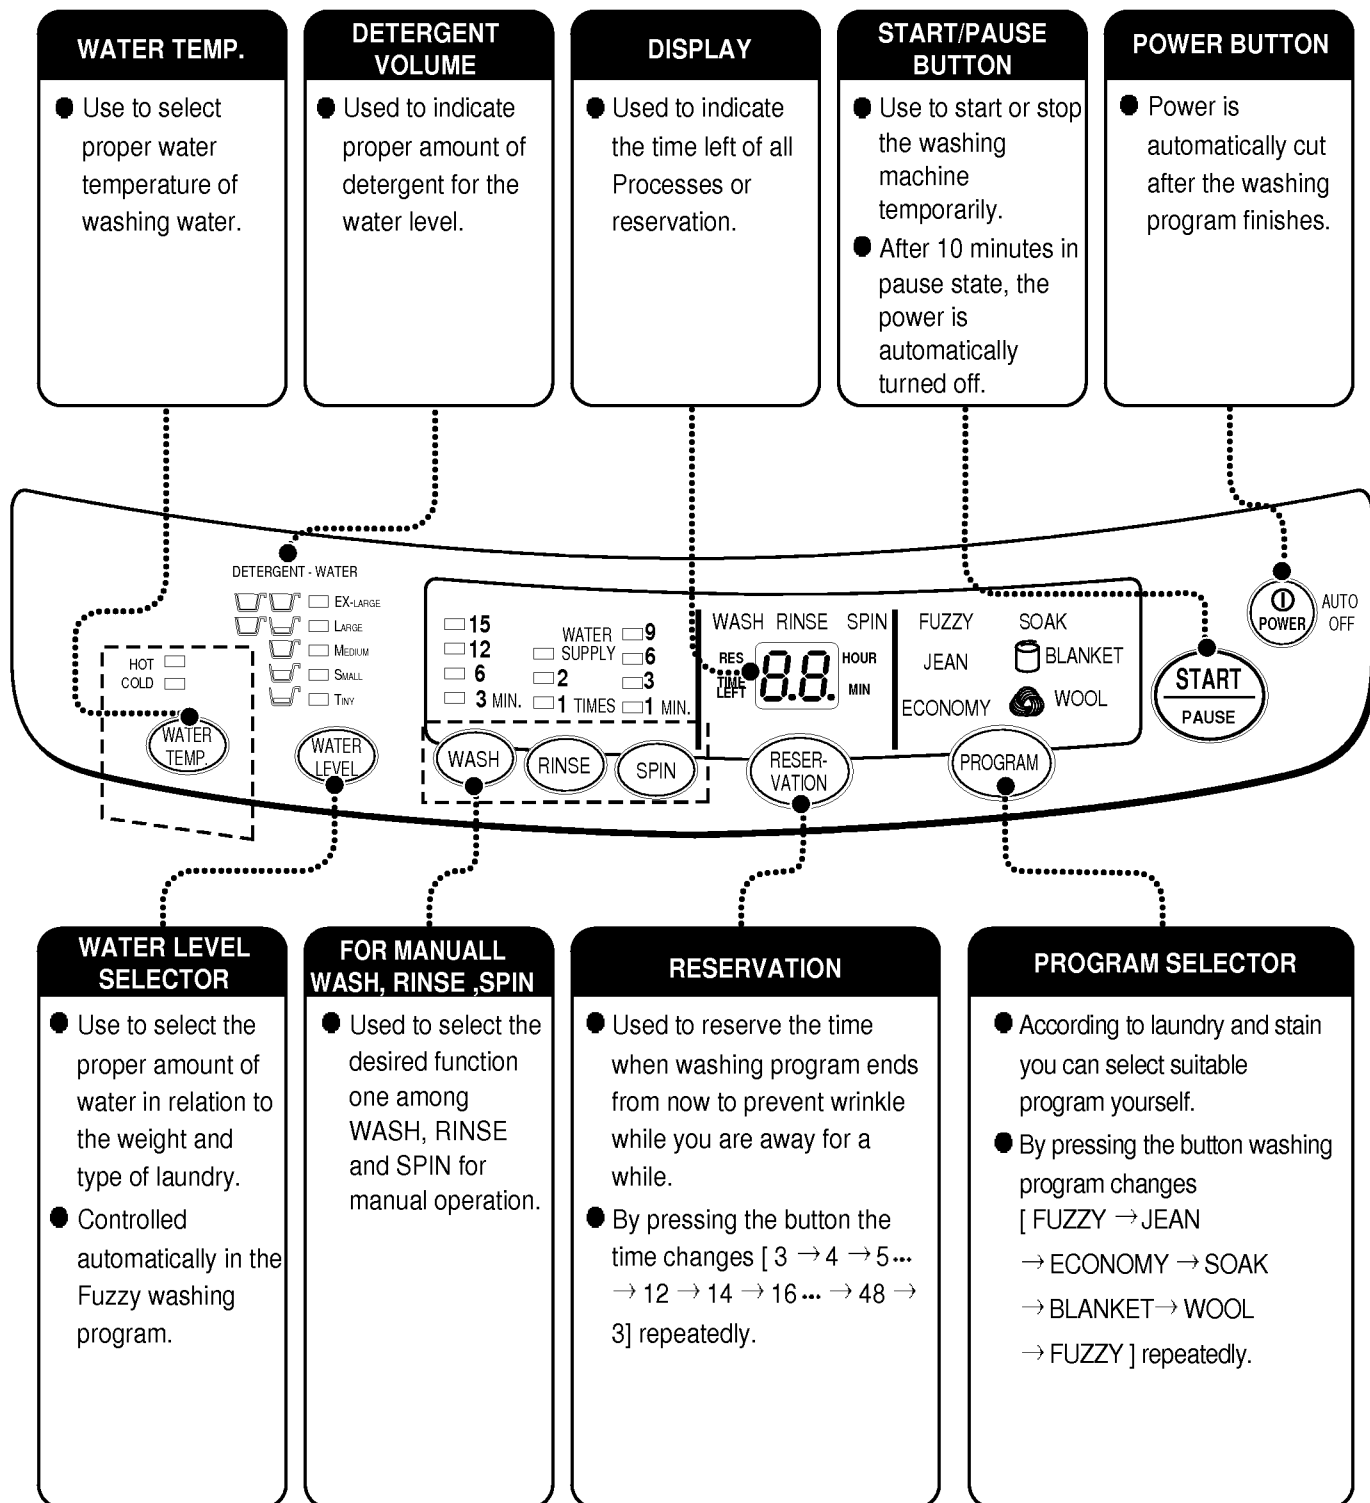


□ **WASH & RINSE** . . . When it is not desirable to spin clothes in order to avoid wrinkles.

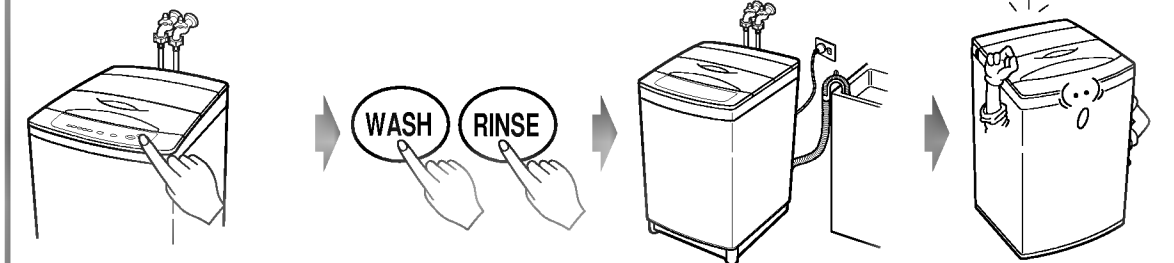

- Press the power button.
- Set the wash time lights and the number of rinse lights to the desired settings. (Set the spin time lights to [OFF] position.)
- Press the START/PAUSE button after closing the lid.
- Wash and rinse end. (At this time the water in the tub does not pump out.)


□ **RINSE & SPIN** . . . When it is desirable to rinse and spin clothes which have already been washed.

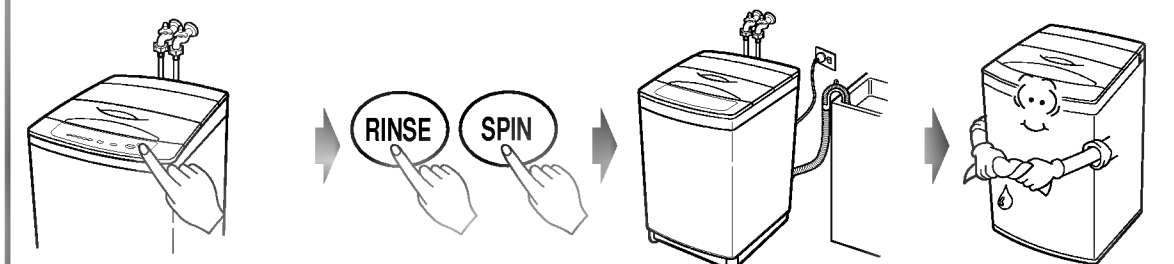

- Press the power button.
- Set the number of rinse lights and spin time lights to the desired settings. (Set the wash time lights to [OFF] position.)
- Press the START/PAUSE button after closing the lid.
- Rinse and spin end.

* [Deep1] and [Spray rinse+Deep1] rinse are the same process to preserve water within bowl.

□ **WASH & SPIN** . . . When heavy soiling is removed prior to normal washing



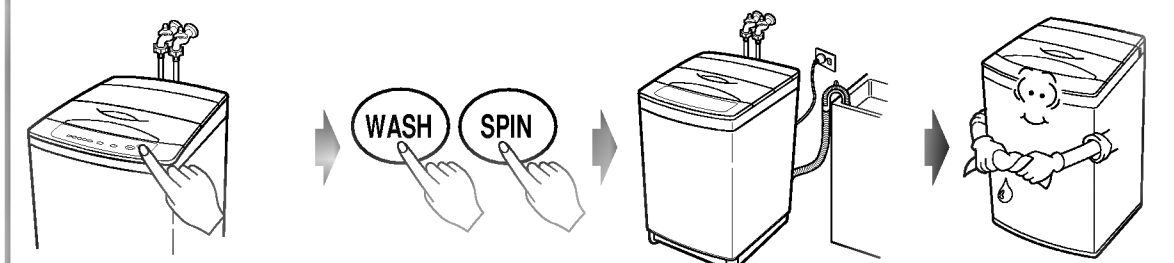


- Press the power button.
- Set the wash time lights and spin time lights to the desired position. (Set the number of rinses lights to [OFF] position.)
- Press the START/PAUSE button after closing the lid.
- Wash and Spin end.

□ CLEAN THE FILTER IN THE VALVE




- Clean the filter when water supply into the tub is bad or the inlet valve is clogged with impurity.

- 1 Disconnect the power cord.
- 2 Pull out the filter from the inlet valve.
- 3 Use a tooth brush to get rid of dirt. Replace it.

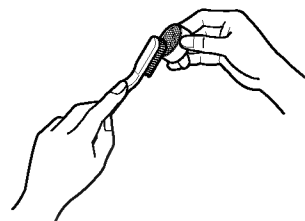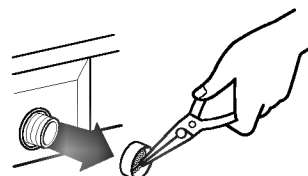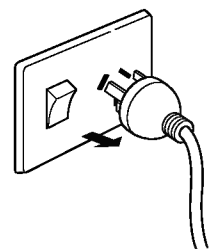

□ CLEAN THE LINT FILTER

- 1 Pull out the waste thread collection net from the tub like the arrow direction below.
- 2 Turn inside out to get rid of filth.
- 3 Insert it to the original location.

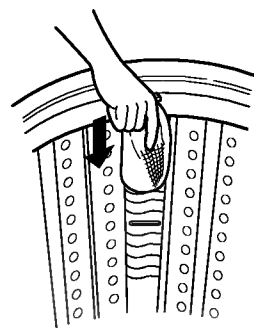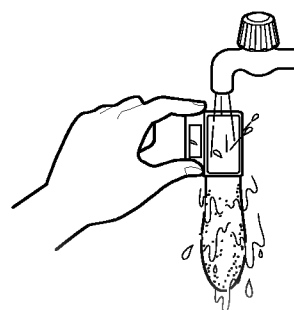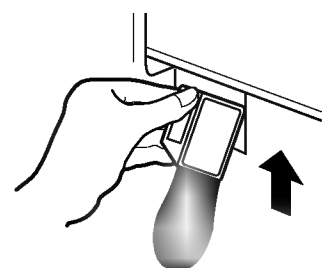

□ CLEAN THE CABINET

- Wipe stains from the cabinet and the control panel with a soft cloth.




⚠ CAUTION

- Do not pour water directly on the cabinet.
- Do not wipe the cabinet with benzene, thinner, cleanser, alkaline detergent or wax.
- Do not rub the cabinet with a scrubbing brush.
- When you use a chemical dustcloth, follow the instructions.


MAINTENANCE

□ CLEAN THE PUMP CASING (when drainage is bad)

1 Unfasten 4 screws of the back cover.

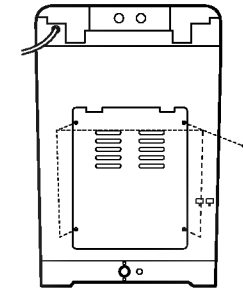


2 Turn the cap to the arrow direction and unfasten it. Remove foreign objects such as pin, button, coin; etc.

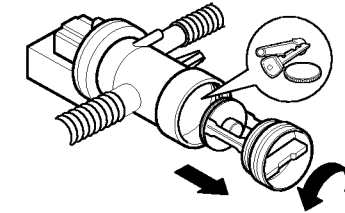

(Bottom view)

3 Reassemble the cap to the arrow direction and fasten it.

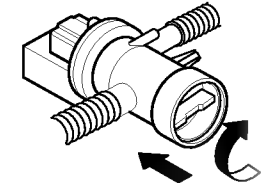

(Bottom view)

* **CAUTION** : Check it over if water leaks after reassembling. (Rubber ring is in the cap)

□ WHEN THERE IS A FEAR OF FREEZING

1 Close the water taps and remove the water supply hoses.

2 Hold the water supply hoses as shown in the drawing so that it does not sag.

3 Set the POWER button to "ON" and the WATER TEMP. to warm.

4 Press START/PAUSE button and operate the washing machine for 20 seconds.

● Water which remains in the water supply is removed.


5 Press START/PAUSE button to stop the operation.

6 Lower the drain hose and select manual spin mode.

7 Press START/PAUSE button and operate for 30 seconds.

Set the POWER button to "OFF".

● Drain the water in the bowl and the drain hose.

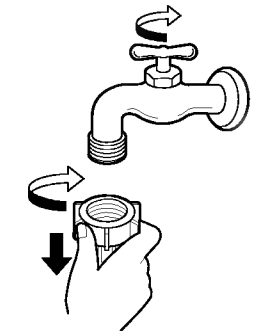


□ IF FROZEN









1 Remove the water supply hose, and immerse it in hot water at approx. 40°C.

2 Pour approx. 2 liters of hot water at approx. 40°C, into the bowl for 10 minutes.

3 Connect the water supply hose to the water tap, and confirm that the washing machine performs the supply and drainage of water.

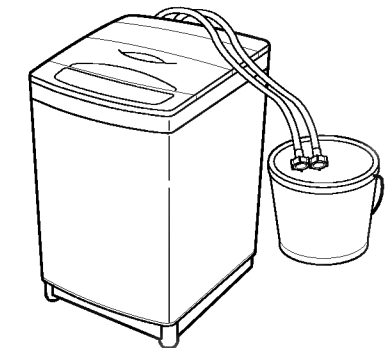

TROUBLE-SHOOTING GUIDE

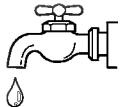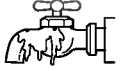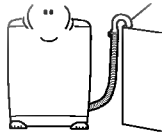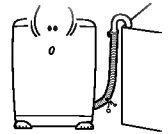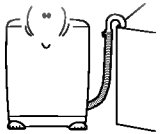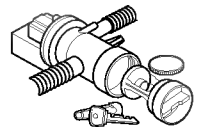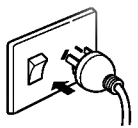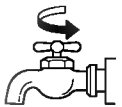No water supply 	 Is tap turned off?  Is the water supply cut off?  Is the tap frozen?
No drain 	 Check if electric power has gone off.  Check that the drain hose is not twisted or kinked?  Is the drain hose hung properly?  Check whether the drain pump is locked by foreign objects.
No spinning  	 Is the wash load unevenly balanced?, redistribute the load evenly & close the lid.  Is the lid closed?
No power	 AUTO OFF Is the power button on?  Is the power cord unplugged or switched off? Power failure? Fuse blown or check circuit breaker?
Not working	 Is the water shut off?  Is the water level normal?  Has the START/PAUSE button been pressed? The power will automatically shut down after 10 minutes.
A high level of vibration and noise during spinning.	 Is the washing machine correctly installed on a firm and level surface?
Auto off error  Water level sensing switch error  Over flooding error 	ASK FOR SERVICE