



website: <http://www.lgservice.com>
e-mail: <http://www.lgservice.com/techsup.html>

MICROWAVE OVEN

OWNER'S MANUAL

PLEASE READ THIS OWNER'S MANUAL
THOROUGHLY BEFORE OPERATING.

MV-1565S
MV-154SJ

P/NO. 3828W5A2022
Printed in Korea

TABLE OF CONTENTS

TABLE OF CONTENTS	2	SENSOR OPERATING INSTRUCTIONS	14
SAFETY	3	Sensor Cooking Guide.....	14
Important Safety Instructions	3	Adding or Subtracting Cook time	15
Precautions To Avoid Possible Exposure To Excessive Microwave Energy	4	Popcorn.....	15
INFORMATION	5	Vegetable.....	15
Location of Model Number	5	Pizza	15
Oven Specifications	5	Potato.....	16
Electrical Rating	5	Cook.....	16
Electrical Requirements	5	Reheat	16
Grounding Instructions.....	5	AUTO DEFROST	17
Microwave Oven Features	6	AUTO DEFROST CHART	18
Oven Control Panel.....	7	TWO POSITION METAL RACK	20
OPERATION	9	COOKING	21
LEARN ABOUT YOUR MICROWAVE OVEN	9	Getting the Best Cooking Results	21
Clock	9	Fish & Shellfish	21
Timer	9	Appetizers/Sauces/Soups	22
Light Timer	9	Meat	22
Fan Hi/Lo/Off.....	10	Poultry	24
Light Hi/Lo/Off.....	10	Pasta and Rice.....	25
Turntable On/Off	10	MAINTENANCE	26
Child Lock	10	CARE AND CLEANING	26
Help.....	10	Metal Rack	26
Hold Warm	10	Cleaning the Grease Filters	26
Custom Set	11	Charcoal Filter(Optional) Replacement	26
Ez On	11	Cooktop/Night Light Replacement	27
Custom Cook	11	Oven Light Replacement	27
More(+) / Less(-)	12	QUESTIONS AND ANSWERS	27
Cooking at High Cook Power	12	MICROWAVE UTENSIL GUIDE	28
Cooking at Lower Power Levels.....	12	BEFORE CALLING FOR SERVICE	29
Cooking with More Than One Cook Cycle.....	12		
Cooking Guide for “Lower Power Levels”	13		

SAFETY

IMPORTANT SAFETY INSTRUCTIONS

The safety instructions below will tell you how to use your oven to avoid harm to yourself or damage to your oven.

WARNING-To reduce the risk of burns, electric shock, fire, injury to persons or exposure to excessive microwave energy.

- **Read all the instructions before using your oven.**
- **Do not allow children to use this oven without close supervision.**
- Read and follow the specific **“PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY”** found on page 4.
- Use the microwave oven only for its intended use as described in its manual. **Do not use** corrosive chemicals or vapors, in the microwave oven. This type of oven is specifically designed to heat, cook or dry food. It is not designed for industrial or laboratory use.
- **Do not use or store** this appliance outdoors. Do not use this product near water -for example, near a kitchen sink, in a wet basement, or near a swimming pool, and the like.
- **Do not use** the cavity for storage purposes. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- **Clean the ventilating hood frequently.** Do not allow grease to accumulate on the hood or the filters.
- When flaming foods under the hood, turn the fan on.
- Suitable for use above both gas and electric cooking equipment 36 inches wide or less.
- Use care when cleaning the vent hood filters. Corrosive cleaning agents such as lye-based oven cleaners, may damage the filters.
- **When cleaning the door and the surfaces that touch the door, use only mild, non-abrasive soaps or detergents and a sponge or soft cloth.**
- **Do not tamper with the built-in safety switches on the oven door.** The oven has several built-in safety switches to make sure the power is off when the door is open.
- **If your oven is dropped or damaged,** have it thoroughly checked by a qualified service technician before using it again.
- **To avoid a fire hazard:**
 - **Do not severely overcook food.** Severely overcooked foods can start a fire in the oven. Watch the oven carefully, especially if you have paper, plastic, or other combustibles in the oven.
 - **Do not store combustible items (bread, cookies, etc.) in the oven,** because if lightning strikes the power lines, it may cause the oven to turn on.
 - **Do not use wire twist-ties in the oven.** Be sure to remove them before placing the item in the oven.
- **If a fire should start:**
 - **Keep the oven door closed.**
 - **Turn the oven off.**
 - **Disconnect the power cord or shut off the power at the fuse or circuit breaker panel.**
- **To avoid electric shock:**
 - **This appliance must be grounded.** Connect it only to a properly grounded outlet. See the electrical grounding instructions on page 5.
 - **Do not operate this appliance if it has a damaged cord or plug,** if it is not working properly or if it has been damaged or dropped.
 - **Do not immerse the electrical cord or plug in water.**
 - **Keep the cord away from heated surfaces.**
 - This appliance should be serviced only by qualified service personnel.
- Install or locate the microwave oven only in accordance with the provided installation instructions.
- Do not mount oven on a sink.
- Do not let cord hang over edge of table or counter.

SAFETY

- **To avoid improperly cooking some foods.**
 - **Do not heat any types of baby bottles or baby food.** Uneven heating may occur and possibly cause personal injury.
 - **Do not heat small-necked containers**, such as syrup bottles.
 - **Do not deep-fat fry in your microwave oven.**
 - **Do not attempt home canning in your microwave oven.**
 - **Do not heat the following items in the microwave oven:** whole eggs in the shell; water with oil or fat; sealed containers or closed glass jars. These items may explode.
- **Do not use this oven for commercial purposes.** It is made for household use only.
- Do not cover or block any openings in the oven.
- Do not run the oven empty, without food in it.
 - **Do not** allow the gray film on special microwave-cooking packages to touch the oven floor. Put the package on a microwavable dish.
- **Do not** cook anything directly on the oven floor. Use a microwavable dish.
- Keep a browning dish at least 3/16 inch above floor. Carefully read and follow the instructions for the browning dish. If you use a browning dish incorrectly, you could damage the oven floor.
- **Preserve the metal rack:**
 - Remove the metal rack from the oven when you are not using it.
 - **Do not** use the oven empty with the metal rack in it.
 - The metal rack may get hot while cooking. Use pot holders to remove it after cooking.
 - **Do not** use foil or metal containers on the metal rack.
- This appliance should be serviced only by qualified service personnel. Contact nearest authorized service facility for examination, repair or adjustment.

SAVE THESE INSTRUCTIONS

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY ...


- **Do not attempt to operate this oven with the door open**, since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlock.
- **Do not operate the oven if it is damaged.** It is particularly important that the oven door close properly and that there is no damage to the:
 - door (bent)
 - hinges and latches (broken or loosened)
 - door seals and sealing surfaces.
- **Do not place any object between the oven front face and the door**, or allow soil or cleaner residue to accumulate on sealing surfaces.
- **The oven should not be adjusted or repaired** by anyone except properly qualified service personnel.

INFORMATION

Please read this owner's manual. It will tell you how to use all the fine features of this microwave oven.

LOCATION OF MODEL NUMBER

To request service information or replacement parts, LG Electronics CANADA will require the complete model number of your microwave oven. The number is on the left side of control panel as shown in the illustration below.

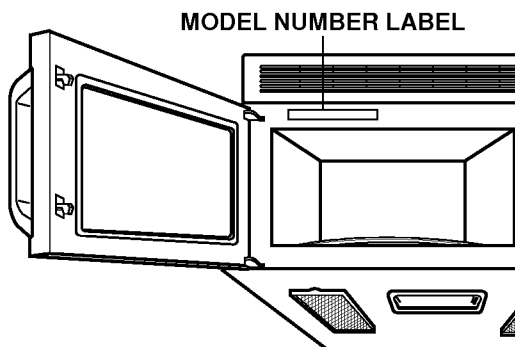

OVEN SPECIFICATIONS

Output Power 1000W (IEC 705 Standard)
Outer Dimensions 29-15/16" x 16-7/16" x 15-3/8"
Cavity Volume 1.5 Cu.ft
Net Weight 65 lbs.

ELECTRICAL RATING

* Electrical Rating of the Oven: 120V AC 60Hz
* 14 Amps / 1500 Watts (MWO + Cooktop Lamp + Ventilation Fan)

ELECTRICAL REQUIREMENTS

The oven is designed to operate on a Standard 120V/60Hz household outlet. Be sure the circuit is at least 15A or 20A and the microwave oven is the **only appliance on the circuit**. It is not designed for 50Hz or any circuit other than a 120V/60Hz circuit.

GROUNDING INSTRUCTIONS


This appliance must be grounded. If an electrical short circuit occurs, grounding reduces the risk of electric shock by providing an escape wire for the electric current. The cord for this appliance has a grounding wire with a grounding plug. Put the plug into an outlet that is properly installed and grounded.

WARNING - If you use the grounding plug improperly, you risk electric shock.

Ask a qualified electrician if you do not understand the grounding instructions or if you wonder whether the appliance is properly grounded.

Because this appliance fits under the cabinet, it has a short power-supply cord. See the separate Installation Instructions for directions on properly placing the cord. Keep the electrical power cord dry and do not pinch or crush it in any way.


If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug, and a 3-slot receptacle that will accept the plug on the appliance. The marked rating of the extension cord shall be equal to or greater than the electrical rating of the appliance.

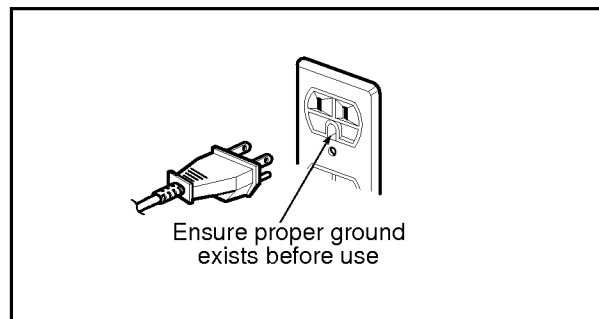


For a permanently connected appliance:
This appliance must be connected to a grounded, metallic, permanent wiring system, or an equipment grounding conductor should be run with the circuit conductors and connected to the equipment grounding terminal or lead on the appliance.

INFORMATION

MICROWAVE OVEN FEATURES

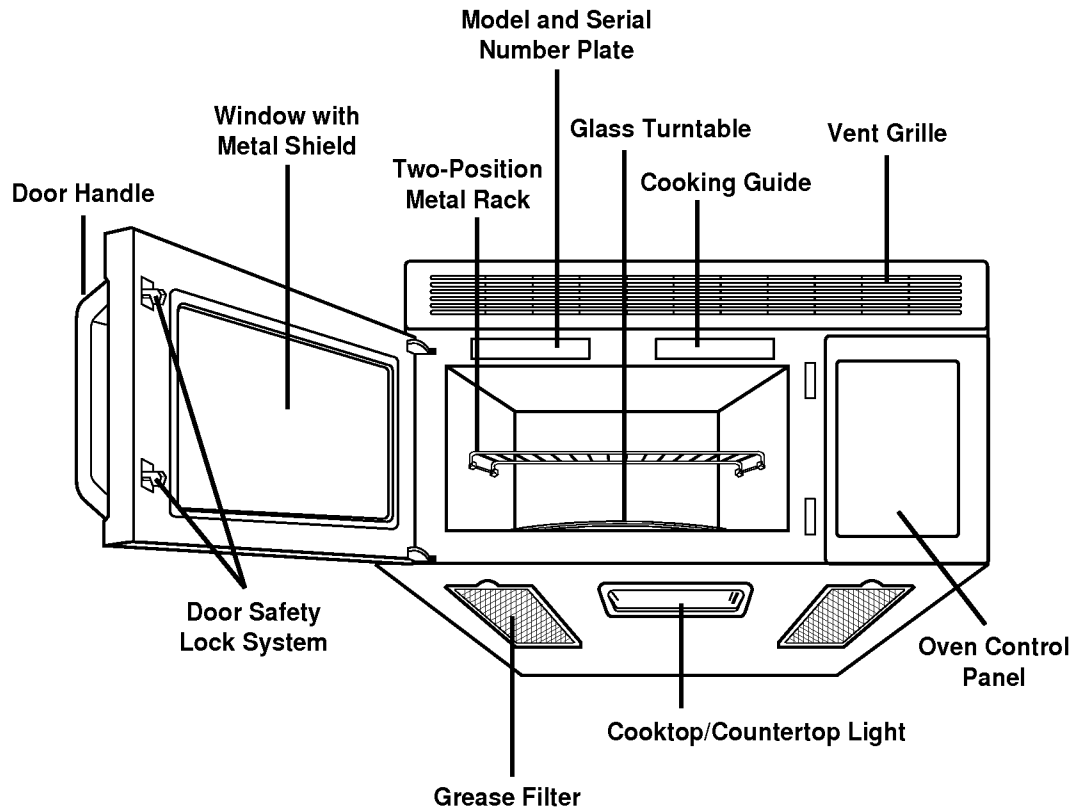

OVEN CONTROL PANEL

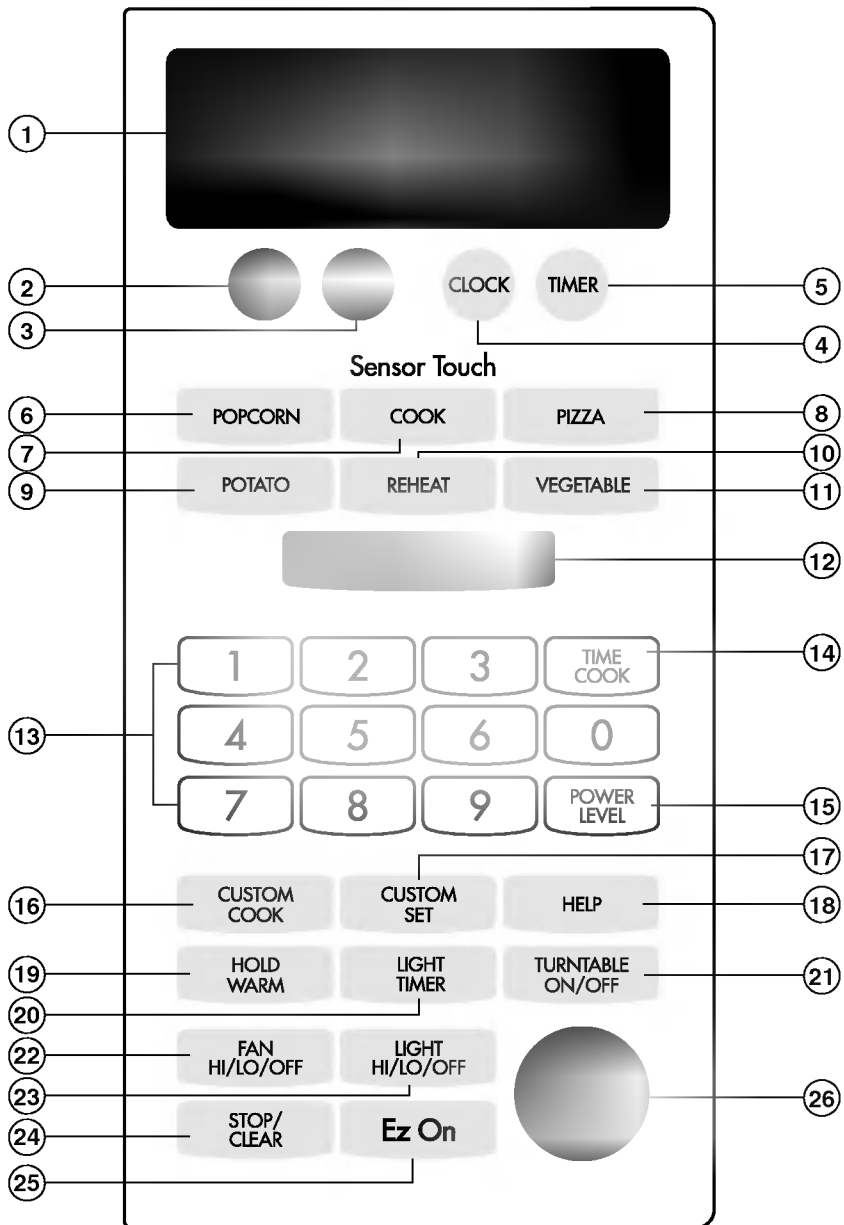

INFORMATION

- 1. DISPLAY:** The Display includes a clock and indicators to tell you time of day, cooking time settings and cooking functions selected.
- 2. MORE(+):** Touch this pad to add ten seconds of cooking time each time you press it. See page 12 for more information.
- 3. LESS(-):** Touch this pad to subtract ten seconds of cooking time each time you press it. See page 12 for more information.
- 4. CLOCK:** Touch this pad to enter the time of day. See page 9 for more information.
- 5. TIMER:** Touch this pad to set the kitchen timer. See page 9 for more information.
- 6. POPCORN:** Touch this pad when popping popcorn in your microwave oven. The oven's sensor will tell the oven how long to cook depending on the amount of humidity it detects from the popcorn. See page 15 for more information.
- 7. COOK:** Touch this pad to cook frozen entree, casserole, and rice. The oven's sensor will tell the oven how long to cook depending on the amount of humidity it detects from the popcorn. See page 16 for more information.
- 8. PIZZA:** Touch this pad to cook pizza without selecting cooking times and power levels. See page 15 for more information.
- 9. POTATO:** Touch this pad to cook potatoes. The oven's sensor will tell the oven how long to cook depending on the amount of humidity it detects from the potato. See page 16 for more information.
- 10. REHEAT:** Touch this pad to reheat casserole, dinner plate, and soup/sauce. The oven's sensor will tell the oven how long to cook depending on the amount of humidity it detects from the popcorn. See page 16 for more information.
- 11. VEGETABLE:** Touch this pad to reheat vegetables. The oven's sensor will tell the oven how long to cook depending on the amount of humidity it detects from the vegetables. See page 15 for more information.
- 12. AUTO DEFROST:** Meat, poultry, fish. Touch on pad to select food type and defrost food by weight. See page 17 for more information.
- 13. NUMBER:** Touch number pads to enter cooking time, power level, quantities or weights.
- 14. TIME COOK:** Touch this pad to set a cooking time.
- 15. POWER LEVEL:** Touch this pad to select a cooking power level.
- 16. CUSTOM COOK:** Touch this pad to recall one cooking instruction previously programmed into memory. See page 11 for more information.
- 17. CUSTOM SET:** Touch this pad to change the oven's default settings for sound, clock, display speed, defrost weight, and demo mode operations. See page 11 for more information.
- 18. HELP:** Touch this pad to learn how to use each oven function. See page 10 for more information.
- 19. HOLD WARM:** Touch this pad to keep hot, cooked foods safety warm in your microwave oven for up to 99 minutes 99 seconds. See page 10 for more information.
- 20. LIGHT TIMER:** Touch this pad to set the light timer. See page 9 for more information.
- 21. TURNTABLE ON/OFF:** Touch this pad to turn off the turntable. "T/TABLE OFF" will appear in the display. See page 10 for more information.
- 22. FAN HI/LO/OFF:** Touch this pad to turn the fan on or off. See page 10 for more information.
- 23. LIGHT HI/LO/OFF:** Touch this pad to turn on the cooktop/countertop light. See page 10 for more information.
- 24. STOP/CLEAR:** Touch this pad to stop the oven or clear all entries.
- 25. EZ ON:** Touch this pad to set and start quickly at 100% power. See page 11 for more information.
- 26. START:** Touch this pad to start a function. If you open the door after oven begins to cook, retouch START.

LEARN ABOUT YOUR MICROWAVE OVEN

This section discusses the concepts behind microwave cooking and introduces you to the basics you need to know to operate your microwave oven. Please read this information before use.

CLOCK

This oven includes a 24 hour clock.

Example: To set 8:00 AM.

1. Touch **STOP/CLEAR**.
2. Touch **CLOCK**.
(Press once for AM, twice for PM.)
3. Enter the time by using the number key pad.
4. Touch **CLOCK**.

TIMER

You can use your microwave oven as a timer. Use the Timer for timing up to 99 minutes, 99 seconds.

Example: To count 3 minutes.

1. Touch **STOP/CLEAR**.
2. Touch **TIMER**.
3. Enter the time by using the number key pad.
4. Touch **START**.
When the time is over, you will hear seven beeps and **END** will display.

LIGHT TIMER

You can set the LIGHT to turn on and off automatically at any time you want. The light comes on at the same time every day until reset.

Example: Turn on 2:00 AM, turn off 7:00 AM.

1. Touch **STOP/CLEAR**.
2. Touch **LIGHT TIMER**.
(Press once for AM, twice for PM.)
3. Enter the time you want the LIGHT to turn on.
4. Touch **LIGHT TIMER** again.
(Press once for AM, twice for PM.)
5. Enter the time you want the LIGHT to turn off.
6. Touch **START**.

NOTE: To reset that time to turn on and off the LIGHT, repeat steps 2 to 6.

Example: To cancel the LIGHT TIMER.

1. Touch **LIGHT TIMER**.
2. Touch **STOP/CLEAR**.

NOTE: If you want to cancel the LIGHT TIMER in operation, you should touch **LIGHT H/LO/OFF** key.

FAN HI / LO / OFF

FAN
HI/LO/OFF

The FAN moves steam and other vapors from the surface cooking. Touch FAN once for High fan speed, twice for Low fan speed, or a three times to turn the fan off.

NOTE: If the temperature gets too hot around the microwave oven, the fan in the vent hood will automatically turn on at the LOW setting to cool the oven. It may stay on up to an hour to cool the oven. When this occurs, **you can not turn the fan off manually.**

LIGHT HI / LO / OFF

LIGHT
HI/LO/OFF

Touch LIGHT once for bright light, twice for the night light or three times to turn the light off.

TURNTABLE ON / OFF

TURNTABLE
ON/OFF

For best cooking results, leave the turntable on. It can be turned off for large dishes. Press TURN TABLE ON/OFF to turn the turntable on or off.

NOTE:

- Sometimes the turntable can become hot to touch. Be careful touching the turntable during and after cooking.
- Do not run the empty without food in it.

CHILD LOCK

You may lock the control panel to prevent the microwave from being accidentally started or used by children.

Example: To set the child lock.

STOP/
CLEAR

1. Touch **STOP/CLEAR**.



2. Touch and hold **0** more than 4 seconds. **LOCKED** will appear in the display window with two beeps.

Example: To cancel the child lock.



1. Touch and hold **0** more than 4 seconds. **LOCKED** will disappear and you hear two beeps. At this time the oven is ready.

HELP

The HELP pad display feature information and helpful hints. Press HELP, then select a key pad.

Example: To learn about POPCORN.

STOP/
CLEAR

1. Touch **STOP/CLEAR**.

HELP

2. Touch **HELP**.

POPCORN

3. Touch **POPCORN**.

HOLD WARM

You can safely keep hot, cooked food warm in your microwave oven for up to 99 minutes 99 seconds. You can use HOLD WARM by itself, or to automatically follow a cooking cycle.

Example: To use the hold warm.

STOP/
CLEAR

1. Touch **STOP/CLEAR**.

HOLD
WARM

2. Touch **HOLD WARM**.



3. Touch **START**.

NOTES:

- HOLD WARM operates for up to 99 minutes 99 seconds.
- Food cooked covered should be covered during HOLD WARM.
- Pastry items (pies, turnovers, etc.) should be uncovered during HOLD WARM.
- Complete meals kept warm on a dinner plate could be covered during HOLD WARM.

To make HOLD WARM automatically follow another cycle:

- While you are programming the cooking instructions, touch HOLD WARM before touching START.
- When the last cooking cycle is over, you will hear two tones and "WARM" will appear in the oven display.
- You can set HOLD WARM to follow AUTO DEFROST, or multi-cycle cooking.

CUSTOM SET

You can change the default values for beep sound, clock, display speed, defrost weight, and demo mode operations.

See following chart for more information.

NUMBER	CUSTOM SET	NUMBER	RESULT
1	Sound ON/OFF control	1	Sound ON
		2	Sound OFF
2	Clock display control	1	Clock ON
		2	Clock OFF
3	Display	1	Slow speed
		2	Normal speed
		3	Fast speed
4	Defrost weight mode select	1	Lbs
		2	Kg
5	Demo mode select	1	Demo ON
		2	Demo OFF

Example: To change defrost weight mode. (from lbs to kg)

1. Touch **STOP/CLEAR**.
2. Touch **CUSTOM SET**.
3. Touch number **4**.
4. Touch number **2**.

EZ ON

A time-saving pad, this simplified control lets you quickly set and start microwave cooking without the need to touch **START**.

Example: To set Ez On for 2 minutes.

Touch **Ez On** 4 times. The oven begins cooking and display shows time counting down.

NOTE:

If you touch **Ez On**, it will add 30 seconds up to 3 minutes ; after 3 minutes every touch will add 1 minutes up to 99 min 59 seconds.

CUSTOM COOK

CUSTOM COOK lets you to recall one cooking instruction previously placed in memory and begin cooking quickly.

Example: To memorize for 2 minutes.

1. Touch **STOP/CLEAR**.
2. Touch **CUSTOM COOK**.
3. Enter the cook time.
4. Touch **START**.

Example: To recall the memory.

1. Touch **STOP/CLEAR**.
2. Touch **CUSTOM COOK**.
3. Touch **START**.
When the cook time is over, you will hear four beeps and **END** will display.


MORE(+) / LESS(-)

By using the MORE(+) or LESS(-) Keys, all of the pre-programmed cook and time cook and etc. can be adjusted to cook food for a longer or shorter time.

Pressing MORE(+) will add 10 seconds of the cooking time each time you press it. Pressing LESS(-) will subtract 10 seconds of cooking time each time you press it.

COOKING AT HIGH COOK POWER

Example: To cook food for 8 minutes 30 seconds.

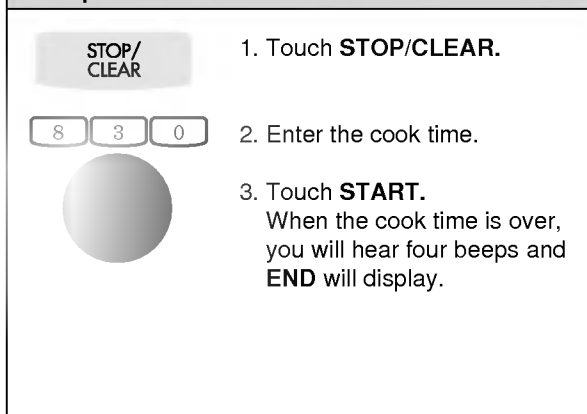


1. Touch **STOP/CLEAR**.
2. Enter the cook time.
3. Touch **START**.
When the cook time is over, you will hear four beeps and **END** will display.

COOKING AT LOWER POWER LEVELS

HIGH power cooking does not always give you the best results with foods that need slower cooking, such as roasts, baked goods, or custards. Your oven can be set to change from one to another automatically, for up to three cycles.

Example: To cook food for 7 minutes 30 seconds at 70% power.

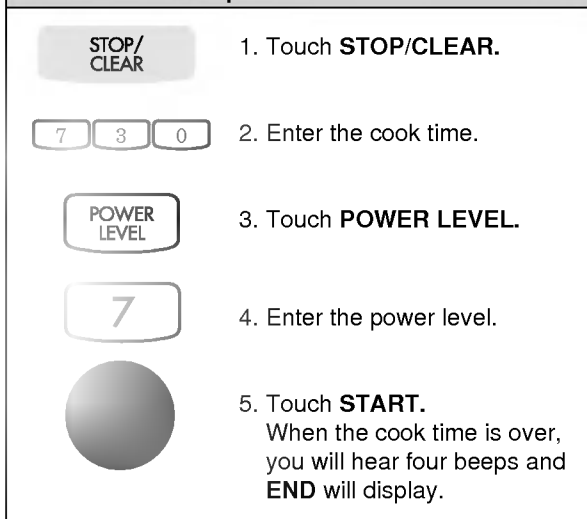


1. Touch **STOP/CLEAR**.
2. Enter the cook time.
3. Touch **POWER LEVEL**.
4. Enter the power level.
5. Touch **START**.
When the cook time is over, you will hear four beeps and **END** will display.

COOKING WITH MORE THAN ONE COOK CYCLE

For best results, some recipes call for one Power Level for a certain length of time, and another Power Level for another length of time. Your oven can be set to change from one to another automatically, for up to three cycles.

Example: To cook food for 3 minutes at 100% power and then 70% power for 7 minutes 30 seconds.

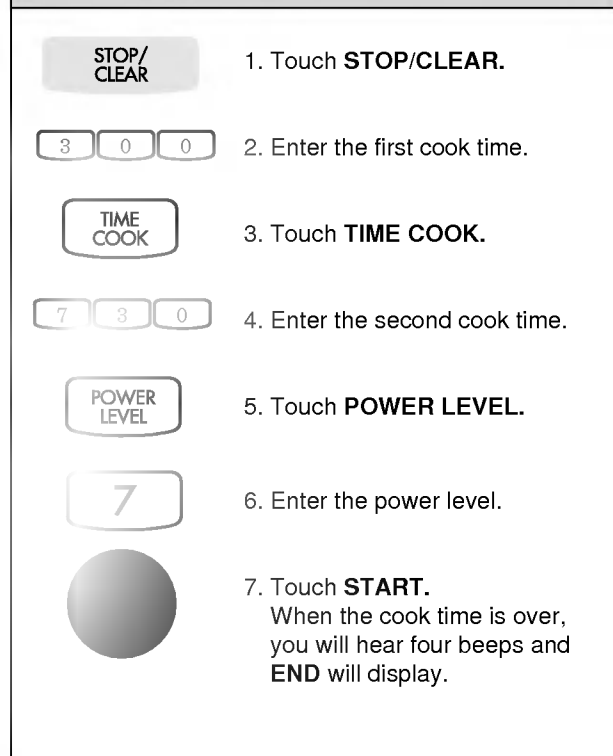

1. Touch **STOP/CLEAR**.
2. Enter the first cook time.
3. Touch **TIME COOK**.
4. Enter the second cook time.
5. Touch **POWER LEVEL**.
6. Enter the power level.
7. Touch **START**.
When the cook time is over, you will hear four beeps and **END** will display.

OPERATION

COOKING GUIDE FOR “LOWER POWER LEVELS”

The nine power levels in addition to “HIGH” allow you to choose the best power level for the food you are cooking. Below are listed all the power levels,

examples of foods best cooked at each level, and the amount of microwave power you are using.

POWER LEVEL	MICROWAVE OUTPUT	USE
10 "HIGH"	100%	<ul style="list-style-type: none"> • Boil water. • Cook ground beef. • Make candy. • Cook fresh fruits and vegetables. • Cook fish, and poultry. • Preheat browning dish.
9	90%	<ul style="list-style-type: none"> • Reheat meat slices quickly. • Saute onions, celery, and green pepper.
8	80%	<ul style="list-style-type: none"> • All reheating. • Cook scrambled eggs.
7	70%	<ul style="list-style-type: none"> • Cook breads and cereal products. • Cook cheese dishes, veal. • Cook cakes, muffins, brownies, cup cakes.
6	60%	<ul style="list-style-type: none"> • Cook pasta.
5	50%	<ul style="list-style-type: none"> • Cook meats, whole poultry. • Cook custard. • Cook whole chicken, turkey, spare ribs, rib roast, sirloin roast.
4	40%	<ul style="list-style-type: none"> • Cook less tender cuts of meat. • Reheat frozen convenience foods.
3	30%	<ul style="list-style-type: none"> • Thawing meat, poultry, and seafood. • Cooking small quantities of food. • Finish cooking casserole, stew, and some sauces.
2	20%	<ul style="list-style-type: none"> • Soften butter and cream cheese. • Heating small amounts of food.
1	10%	<ul style="list-style-type: none"> • Soften ice cream. • Raise yeast dough.
0		<ul style="list-style-type: none"> • Standing time.

OPERATION

SENSOR OPERATING INSTRUCTIONS

Sensor Cook allows you to cook most of your favorite foods without selecting cooking times and power levels. The display will indicate "SENSING" during the initial sensing period. The oven automatically determines required cooking time for each food item. When the internal sensor detects a certain amount of humidity coming from the food, it will tell the oven how much longer to heat. The display will show the remaining heating time. For best results by Sensor, following these recommendation.

1. Food cooked with the sensor system should be at normal storage temperature.
2. Glass Tray and outside of container should be dry to assure best cooking results.
3. Foods should always be covered loosely with microwavable plastic wrap, waxed paper or a lid.
4. Do not open the door or touch the "STOP/CLEAR" key during the sensing time. When sensing time is over, the oven beeps twice and the remaining cooking time will appear in the display window. At this time you can open the door to stir, turn or rearrange the food.

SENSOR COOKING GUIDE


Appropriate containers and coverings help assure good Sensor cooking results.


1. Always use microwavable containers and cover them with lids or vented plastic wrap.
2. Never use tight-sealing plastic covers. They can prevent steam from escaping and cause food to overcook.
3. Match the amount of the size of the container. Fill containers at least half full for best results.
4. Be sure the outside of the cooking container and the inside of the microwave oven are dry before placing food in the oven. Beads of moisture turning into steam can mislead the sensor.


ADDING OR SUBTRACTING COOK TIME


If the SENSOR function is too long or too short, you can increase or decrease the cook time by 10% after choosing the function. You can only increase or decrease cook time before cooking starts.

Example: If you want to adjust the Sensor Cook (casserole) cooking time for longer time.

 1. Touch **STOP/CLEAR**.

 2. Touch **COOK**.

 3. Choose food category.


 4. Touch number **9**.

Cook time	Touch pad number
Less	7
Normal	8
More	9


VEGETABLE

VEGETABLE has preset cook powers for 3 food categories: **Fresh, Frozen, and Canned**.

Example: To reheat Frozen Vegetable.

 1. Touch **STOP/CLEAR**.

 2. Touch **VEGETABLE**.

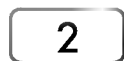 3. Choose food category.

Category	Touch pad number
Fresh	1
Frozen	2
Canned	3


When the cook time is over, you will hear four beeps and **END** will display.

POPCORN

POPCORN lets you pop commercially packaged microwave popcorn. Pop only one package at a time. For best results, use fresh bags of popcorn.

Example: To pop 3.5 oz.

 1. Touch **STOP/CLEAR**.

 2. Touch **POPCORN**.
When the cook time is over, you will hear four beeps and **END** will display.


CAUTION: Do not leave microwave unattended while popcorn.

PIZZA

Reheating pizza with PIZZA lets you reheat one or several slices of pizza without selecting cooking times and power levels.

Example: To reheat 2 slices of pizza.

 1. Touch **STOP/CLEAR**.

 2. Touch **PIZZA**.
When the cook time is over, you will hear four beeps and **END** will display.


POTATO


Cooking with POTATO lets you bake one or several potatoes without selecting cooking times and power levels.

NOTE:

- **Before baking**, pierce potato with fork several times.
- **After baking**, let stand for 5 minutes wrapped.

Example: To cook 2 potatoes.


 1. Touch **STOP/CLEAR**.


 2. Touch **POTATO**.
When the cook time is over, you will hear four beeps and **END** will display.


COOK

Using COOK lets you heat common microwave-prepared foods without needing to program times and Cook Powers. Sensor Cook has preset Cook Power for 3 food categories: **Frozen Entree, Casserole, and Rice**.

Example: To cook Rice.

 1. Touch **STOP/CLEAR**.

 2. Touch **COOK**.

 3. Choose food category.


Category	Touch pad number
Frozen Entree	1
Casserole	2
Rice	3


When the cook time is over, you will hear four beeps and **END** will display.


REHEAT

REHEAT lets you heat foods without needing to program times and Cook Powers. REHEAT has preset Cook Powers for 3 categories: **Casserole, Dinner Plate, and Soup/Sauce**.

Example: To reheat Casserole.

 1. Touch **STOP/CLEAR**.

 2. Touch **REHEAT**.

 3. Choose food category.

Category	Touch pad number
Casserole	1
Dinner Plate	2
Soup/Sauce	3

When the cook time is over, you will hear four beeps and **END** will display.

AUTO DEFROST

Your microwave oven is preset with three defrost sequences. Using AUTO DEFROST is the best way to defrost frozen foods. The Auto Defrost Sequence Table below provides some basic guidelines for using the three defrost sequences.

Example: To defrost 1.2 lbs of ground beef.

1. Touch **STOP/CLEAR**.
2. Touch **AUTO DEFROST**.
3. Choose food category.

Category	Touch pad number
Meat	1
Poultry	2
Fish	3
4. Enter the weight.
5. Touch **START**.
6. After 1/3 of the defrost time is over, The display will prompt you to turn over food. Open door, turn over food, and shield any warm portions.
7. Close the door and restart.
8. After 2/3 of the defrost time is over, the display will prompt you to turn over food. Repeat steps 6 and 7. When the defrost time is over, you will hear four beeps and **END** will display.

NOTE: If you do not open the door, the display will resume the countdown.

However, in order to enter food weight in AUTO DEFROST, you must specify pounds and tenths of a pound. If the weight on the food package is in fractions of a pound, you can use the following chart to convert the weight to decimals.

EQUIVALENT OUNCE WEIGHT	NUMBER AFTER DECIMAL
1.6	.10
3.2	.20
4.0	.25 One-Quarter Pound
4.8	.30
6.4	.40
8.0	.50 One- Half Pound
9.6	.60
11.2	.70
12.0	.75 Three-Quarters Pound
12.8	.80
14.4	.90
16.0	1.00 One Pound

DEFROSTING TIPS

- When using AUTO DEFROST, the weight to be entered is the net weight in pounds and tenths of pounds (the weight of the food minus the container).
- Only use AUTO DEFROST for raw food. AUTO DEFROST gives best results when food to be thawed is a minimum of 0°F (taken directly from a "true" freezer). If food has been stored in a refrigerator-freezer that does not maintain a temperature of 5°F or below, always program a lower food weight (for a shorter defrosting time) to prevent cooking the food.
- If the food is stored outside the freezer for up to 20 minutes, enter a lower food weight.
- The shape of the package alters the defrosting time. Shallow rectangular packets defrost more quickly than a deep block.
- Separate pieces as they begin to defrost. Separated pieces defrost more easily.
- You can use small pieces of aluminum foil to shield foods like chicken wings, leg tips, and fish tails, but the foil must not touch the side of the oven. Foil can damage the oven lining.
- Shield areas of food with small pieces of foil if they start to become warm.
- For better results, a preset standing time is included in the defrosting time.

Weight conversion chart

You are probably used to food weights as being in pounds and ounces that are fractions of a pound (for example 4 ounces equals 1/4 pound).

OPERATION

AUTO DEFROST CHART

Meat setting

FOOD	SETTING	AT BEEP	SPECIAL INSTRUCTIONS
BEEF			Meat of irregular shape and large, fatty cuts of meat should have the narrow or fatty areas shielded with foil at the beginning of a defrost sequence.
Ground beef (bulk)	MEAT	Remove thawed portions with fork. Turn over. Return remainder to oven.	Do not defrost less than 1/4 lb. Freeze in doughnut shape.
Ground beef (patties)	MEAT	Separate and rearrange.	Do not defrost less than two oz.patties. Depress center when freezing.
Round steak	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.
Tenderloin steak	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.
Stew beef	MEAT	Remove thawed portions with fork. Separate remainder. Return remainder to oven.	Place in a microwavable baking dish.
Pot roast, chuck roast	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.
Rib roast	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.
Rolled rump roast	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.
LAMB			
Cubes for stew	MEAT	Remove thawed portions with fork. Return remainder to oven.	Place in a microwavable baking dish.
Chops (1 inch thick)	MEAT	Separate and rearrange.	Place on a microwavable roasting rack.
PORK			
Chops (1 inch thick)	MEAT	Separate and rearrange.	Place on a microwavable roasting rack.
Hot dogs	MEAT	Separate and rearrange.	Place on a microwavable roasting rack.
Spareribs Country style ribs	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.
Sausage, links	MEAT	Separate and rearrange.	Place on a microwavable roasting rack.
Sausage, bulk	MEAT	Remove thawed portions with fork. Turn over. Return remainder to oven.	Place in a microwavable baking dish.
Loin roast, boneless	MEAT	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack.

OPERATION

AUTO DEFROST CHART (continued)

Poultry setting

FOOD	SETTING	AT BEEP	SPECIAL INSTRUCTIONS
CHICKEN Whole	POULTRY	Turn over (finish defrosting breast-side down). Cover warm areas with aluminum foil.	Place chicken breast-side-up on a microwavable roast rack. Finish defrosting by immersing in cold water. Remove giblets when chicken is partially defrosted.
Cut-up		Turn over. Cover warm areas with aluminum foil. Separate pieces and rearrange.	Place on a microwavable roasting rack. Finish defrosting by immersing in cold water.
CORNISH HENS Whole	POULTRY	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack. Finish defrosting by immersing in cold water.
TURKEY Breast	POULTRY	Turn over. Cover warm areas with aluminum foil.	Place on a microwavable roasting rack. Finish defrosting by immersing in cold water.

Fish setting

FOOD	SETTING	AT BEEP	SPECIAL INSTRUCTIONS
FISH Fillet	FISH	Turn over. Separate fillets when partially thawed if possible.	Place in a microwavable baking dish. Carefully separate fillets under cold water.
Steaks	FISH	Separate and rearrange.	Place in a microwavable baking dish. Run cold water over to finish defrosting.
Whole	FISH		Place in a microwavable baking dish. Cover head and tail with foil; do not let foil touch sides of microwave. Finish defrosting by immersing in cold water.
SHELLFISH Crabmeat	FISH	Break apart.	Place in a microwavable baking dish.
Lobster tails	FISH	Rearrange.	Place in a microwavable baking dish.
Shrimp	FISH	Separate and rearrange.	Place in a microwavable baking dish.
Scallops	FISH	Separate and rearrange.	Place in a microwavable baking dish.

NOTE : Food to be defrosted must be not more than 6.0 lbs. (4.0kg)



OPERATION

TWO POSITION METAL RACK

The two position Metal Rack gives you extra space when cooking in more than one container at the same time. The metal rack can be turned upside-down to help fit taller containers on the bottom of the oven.

NOTE:

- **Rack must be on 4 supports when used.**
- Insert the rack securely into the four supports on the side walls of the oven.
- Turn the rack upside-down when using taller containers on the bottom of the oven.

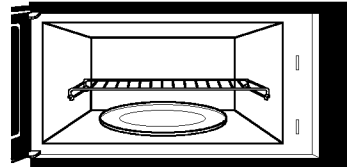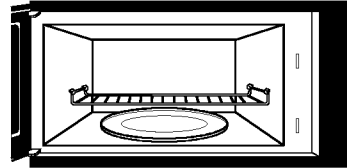

WARNING:

DO NOT RUN THE OVEN EMPTY, WITHOUT FOOD IN IT.

COOKING

GETTING THE BEST COOKING RESULTS

To get the best results from your microwave oven, read and follow the guidelines below.

- **Storage Temperature:** Foods taken from the freezer or refrigerator take longer to cook than the same foods at room temperature. The time for recipes in this book is based on the normal storage temperature of the food.
- **Size:** Small pieces of food cook faster than large ones, pieces similar in size and shape cook more evenly. For even cooking, reduce the power when cooking large pieces of food.
- **Natural Moisture:** Very moist foods cook more evenly because microwave energy is attracted to water molecules.
- **Stir** foods such as casseroles and vegetables from the outside to the center to distribute the heat evenly and speed cooking. Constant stirring is not necessary.
- **Turn over** foods like pork chops, baking potatoes, roasts, or whole cauliflower halfway through the cooking time to expose all sides equally to microwave energy.
- **Place** delicate areas of foods, such as asparagus tips, toward the center of the dish.
- **Arrange** unevenly shaped foods, such as chicken pieces or salmon steaks, with the thicker, meatier parts toward the outside of the dish.
- **Shield**, with **Small** pieces of aluminum foil, parts of food that may cook quickly, such as wing tips and leg ends of poultry.
- **Let It Stand:** After you remove the food from the microwave, cover food with foil or casserole lid and let it stand to finish cooking in the center and avoid overcooking the outer edges. The length of standing time depends on the density and surface area of the food.
- **Wrapping in waxed paper or paper towel:** Sandwiches and many other foods containing prebaked bread should be wrapped prior to microwaving to prevent drying out.

Fish & Shellfish

Cooking Fish and Shellfish: General Directions

- Prepare the fish for cooking.
 - Completely defrost the fish or shellfish.
 - Arrange unevenly shaped pieces with thicker parts toward the outside of the dish. Arrange shellfish in a single layer for even cooking.
 - The type of cover you use depends on how you cook. Poached fish needs a microwavable lid or **vented** plastic wrap.
 - Baked fish, coated fish, or fish in sauce needs to be covered lightly with waxed paper to keep the coating crisp and sauce from getting watery.
- Always set the shortest cooking time. Fish is done when it turns opaque and the thickest part begins to flake. Shellfish is done when the shell turns from pink to red and the flesh is opaque and firm.
- The Fish and Shellfish Cooking Table below provides specific directions with Power Level and Cooking Time settings for most types of fish and shellfish.

Fish And Shellfish Cooking Table

FISH	POWER LEVEL	COOKING TIME	DIRECTIONS
Fish fillets	HI	3 1/2-4 1/2 minutes	Arrange fish in a single layer with thickest portion toward outside edge of 1 1/2 quart microwavable baking dish. Brush with melted butter and season, if desired. Cook covered with vented plastic wrap. Let stand covered 2 minutes. If you are cooking more than 1 lb. of fish, turn the fish halfway through cooking.
Fish steaks	HI	4 1/2-5 1/2 minutes	
Whole fish	7	4 1/2-6 minutes	
Scallops	HI	3 1/2-5 minutes	Arrange in a single layer. Prepare as directed above, except stir instead of turning the shellfish.
Shrimp, shelled	HI	3 1/2-5 minutes	

COOKING

Appetizers / Sauces / Soups

Cooking Appetizers: Tips and Techniques

Recommended

- Crisp crackers, such as melba toast, shredded wheat, and crisp rye crackers are best for microwave use. Wait until party time to add the spreads. Place a paper towel under the crackers while they cook in the microwave oven to absorb extra moisture.
- Arrange individual appetizers in a circle for even cooking.
- Stir dips to distribute heat and shorten cooking time.

Cooking Sauces: Tips and Techniques

- Use a microwavable casserole or glass measuring cup that is at least 2 or 3 times the volume of the sauce.
- Sauces made with cornstarch thicken more rapidly than those made with flour.

Cooking Soups: Tips and Techniques

- Cook soups in a microwavable dish which holds double the volume of the recipe ingredients to prevent boil-over, especially if you use cream or milk in the soup.
- Generally, cover microwaved soups with VENTED plastic wrap or a microwavable lid.
- Cover foods to retain moisture. Uncover foods to retain crispness.
- Avoid overcooking by using the minimum suggested time. Add more time, if necessary, only after checking the food.

Not Recommended

- Appetizers with a crisp coating or puff pastry are best done in a conventional oven with dry heat.
- Breaded products can be warmed in the microwave oven but will not come out crisp.
- Cook sauces made with cornstarch or flour uncovered so you may stir them 2 or 3 times during cooking for a smooth consistency.
- To adapt a conventional sauce or gravy recipe, reduce the amount of liquid slightly.
- Stirring occasionally will help blend flavors, distribute heat evenly, and may even shorten the cooking time.
- When converting a conventional soup recipe to cook in the microwave, reduce the liquid, salt, and strong seasonings.

Meat

Cooking Meat: General Directions

- Prepare the meat for cooking.
 - Defrost completely.
 - Trim off excess fat to avoid splattering.
 - Place the meat, fat side down, on a microwavable rack in a microwavable dish.
 - Use oven cooking bag for less tender cuts of meat.
 - Arrange the meat so that thicker portions are toward the outside of the dish.
 - Cover the meat with waxed paper to prevent splattering.
- Tend the meat as it cooks.
 - Drain juices as they accumulate to reduce splattering and keep from overcooking the bottom of the meat.
 - Shield thin or bony portions with strips of foil to prevent overcooking.

NOTE: Keep the foil **at least 1 inch** from the oven walls, and do not cover more than one-third of the meat with foil at any one time.

- Let the meat stand covered with foil 10-15 minutes after you remove it from the oven. The internal temperature of the meat may rise from 5-10°F during standing time.

The Meat Cooking Table on the next page provides detailed directions, Power Level, and Cooking Time settings for most cuts of meat.

COOKING

Meat Cooking Table

MEAT	POWER LEVEL	COOKING TIME	DIRECTIONS
Beef Hamburgers, Fresh or defrosted (4 oz. each) 1 patty 2 patties 4 patties	HI	1-1½ minutes 1½-2 minutes 2½-3½ minutes	Form patties with depression in center of each. Place on microwavable roast rack. Brush with browning agent, if desired. Cover with waxed paper. Turn over halfway through cooking. Let stand covered 1 minute.
Sirloin tip roast (3-4 lbs.)	5	8-10 minutes per pound RARE(135°F) 11-13 minutes per pound MEDIUM(155°F)	Place roast fat side down on microwavable roast rack. Add desired seasonings and cover with waxed paper. Turn meat over halfway through cooking and shield if necessary. Remove roast from microwave oven when desired temperature is reached. Let stand covered with foil 15 minutes.(Temperature may rise about 10°F).
Lamb Lamb roast, rolled boneless (3-4 lbs.)	5	11-12 minutes per pound RARE(135°F) 12-13 minutes per pound MEDIUM(145°F) 13-14 minutes per pound WELL(155°F)	Place roast fat side down on microwavable roast rack. Brush lamb with marinade or desired seasonings such as rosemary, thyme or marjoram. Cover with waxed paper. Turn roast over after 15 minutes, and again after 30 minutes. Shield if necessary. Remove roast from microwave when desired temperature is reached. Let stand covered with foil 15 minutes (Temperature may rise about 10°F).
Pork Bacon slices 2 slices 4 slices 6 slices	HI	1½-2 minutes 2½-3 minutes 3½-4½ minutes	Place bacon slices on microwavable roast rack. Cover with paper towels. After cooking, let stand 1 minute.
Chops (5-7 oz. each) 2 chops 4 chops	3	18-20 minutes per pound 15-17 minutes per pound	Place chops in microwavable baking dish. Add desired seasonings and cover with vented plastic wrap. Cook until no longer pink or until internal temperature reaches 170°F. Turn chops over halfway through cooking. Let stand covered 5 minutes. (Temperature may rise about 10°F).
Loin Roast, rolled, boneless (3 ½- 4 ½ lbs.)	3	25-27 minutes per pound (165°F)	Place roast in cooking bag in microwavable dish. Add seasonings and browning agent if desired. Close bag loosely with microwavable closure or string. After cooking, let stand in bag 15 minutes. (Temperature may rise about 10°F.) Internal temperature of pork should reach 170°F before serving.
Sausage links, Fresh or Frozen, defrosted (1-2 oz. each) 2 links 4 links 6 links 10 links (8 oz. pkg.)	HI	45-60 seconds 1-1½ minutes 1½-2 minutes 1¾-2 minutes	Pierce links and place on microwavable roast rack. Cover with waxed paper or paper towel. Turn over halfway through cooking. After cooking, let stand covered 1 minute.

COOKING

Poultry

Cooking Poultry: General Directions

- Prepare the poultry for cooking.
 - Defrost completely.
 - Arrange poultry pieces with thicker pieces at the outside edge of the baking dish. When cooking legs, arrange them like the spokes of a wheel.
 - Cover the baking dish with waxed paper to reduce splattering.
 - Use a browning agent or cook with a sauce to give a browned appearance.
- Watch the poultry as it cooks.
 - Drain and discard juices as they accumulate.
 - Shield thin or bony pieces with small strips of aluminum foil to prevent overcooking. Keep foil **at least 1 inch** from the oven walls and other pieces of foil.
- The poultry is done when it is no longer pink and the juices run clear. When done, the temperature in the thigh meat should be 180-185°F.
- Let the poultry stand after cooking covered with foil for 10 minutes.

The Poultry Cooking Table below provides detailed directions, Power Level, and Cooking Time settings for most cuts and types of poultry.

Poultry Cooking Table

POULTRY	POWER LEVEL	COOKING TIME	DIRECTIONS
Chicken pieces (2 1/2-3 lbs).	HI	4 1/2-5 1/2 minutes per pound	Wash, shake the water off, and go on with cooking. Place pieces in a single layer in a microwavable baking dish with thicker pieces to the outside. Brush with butter or browning agent and seasonings if desired. Cover with waxed paper. Cook until no longer pink and juices run clear. Let stand covered 5 minutes.
Chicken whole (3-3 1/2 lbs)	HI	12-13 minutes per pound	Before cooking, wash and shake off water. Place breast side down on a microwavable roast rack. Brush with butter, or browning agent and seasoning if desired. Cover with waxed paper. Cook 1/3 of estimated time. Turn breast side up, brush with butter, or browning agent. Replace waxed paper. Cook 1/3 of estimated time again. Shield if necessary. Cook remaining 1/3 of estimated time or until no longer pink and juices run clear. Let stand covered with foil 10 minutes. (The temperature may rise about 10°F.) The temperature in the high should be 180°F-185°F when the poultry is done.
Cornish Hens Whole (1-1 1/2 lbs. each)	HI	6-7 minutes per pound	Wash, shake the water off, and go on with cooking. Tie wings to body of hen and the legs to tail. Place hens breast side down on microwavable rack. Cover with waxed paper. Turn breast side up halfway through cooking. Shield bone ends of drumsticks with foil. Remove and discard drippings. Brush with butter or browning agent and seasonings if desired. Cook until no longer pink and juices run clear. Remove hens from microwave when they reach desired temperature. Let stand covered with foil 5 minutes. (Temperature may rise about 10°F). Temperature in breast should be 170°F before serving.

COOKING

Pasta And Rice

Microwave cooking and conventional cooking of pasta, rice, and cereal require about the same amount of time, but the microwave is a more convenient method because you can cook and serve in the same dish.

There is no stirring needed and leftover pasta tastes just like fresh cooked when reheated in the microwave oven.

Cooking Pasta and Rice: Tips and Techniques

- If you are planning to use rice or pasta in a casserole, undercook it so it is still firm.
- Allow for standing time with rice, but not for pasta.
- The Pasta and Rice Cooking Tables below provide specific directions, with Power Level and cooking time settings for most common types of pasta and rice.

Pasta Cooking Table

TYPE OF PASTA	POWER LEVEL	COOKING TIME	DIRECTIONS
Spaghetti 4 cups water. Add 8 oz. spaghetti	HI 5	9 to 10 minutes 7 1/2 to 8 1/2 minutes	Combine hot tap water and salt, if desired. Use a 2-quart microwavable baking dish and cover with vented plastic wrap for spaghetti and lasagna noodles. Use microwavable lid or vented plastic wrap for macaroni and egg noodles. Cook at Power Level HI as directed in chart or until water boils. Stir in pasta; cook covered at Power Level 5 as directed in chart or until tender. Drain in a colander.
Macaroni 3 cups water. Add 2 cups macaroni	HI 5	6 to 7 minutes 5 1/2 to 6 1/2 minutes	
Lasagna noodles 4 cups water. Add 8 oz. lasagna noodles	HI 5	7 to 8 minutes 11 to 12 1/2 minutes	
Egg noodles 6 cups water. Add 4 cups noodles	HI 5	8 to 10 minutes 5 1/2 to 6 1/2 minutes	

Rice Cooking Table

TYPE OF RICE	POWER LEVEL	COOKING TIME	DIRECTIONS
Long grain 2 1/4 cups water. Add 1 cup rice	HI 5	4 1/2 to 5 1/2 minutes 14 minutes	Combine hot tap water and salt, if desired, in 2 quart microwavable casserole. Cover with microwavable lid or vented plastic wrap. Cook as directed in chart at Power Level HI or until water boils. Stir in rice and any seasonings. Cook covered as directed in chart at Power Level 5 or until water is absorbed and rice is tender. Let stand covered 5 to 10 minutes. Fluff with fork.
Brown 2 1/2 cups water. Add 1 cup rice	HI 5	4 1/2 to 5 1/2 minutes 28 minutes	
Long grain and wild rice mix 2 1/3 cups water. Add 6 oz. pkg.	HI 5	4 1/2 to 5 minutes 24 minutes	
Quick cooking 1 cup water. Add 1 cup rice	HI	2 to 3 minutes	Cook water until it boils. Stir rice into boiling water and let stand, covered 5 to 10 minutes or until water is absorbed and rice is tender. Fluff with fork.

MAINTENANCE

CARE AND CLEANING

For best performance and safety, keep the oven clean inside and outside. Take special care to keep the inner door panel and the oven front frame free of food or grease build-up.

Never use rough powder or pads. Wipe the microwave oven inside and out, including the hood bottom cover, with a soft cloth and a warm(not hot) mild detergent solution. Then rinse and wipe dry. Use a chrome cleaner and polish on chrome, metal and aluminum surfaces. Wipe spatters immediately with a wet paper towel, especially after cooking chicken or bacon. Clean your oven weekly or more often, if needed.


METAL RACK

Wash the metal rack with a mild soap and a soft or nylon scrub brush. Dry completely. Do not use abrasive scrubbers or cleaners to clean rack.


CLEANING THE GREASE FILTERS

The grease filters should be removed and cleaned often, at least once a month.


1. To remove grease filters, slide each filter to the side. Pull filters downward and push to the other side. The filter will drop out.

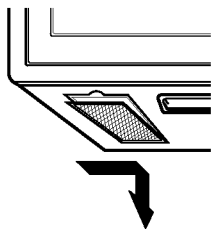

2. Soak grease filters in hot water and a mild detergent. Rinse well and shake to dry. **Do not use ammonia or place in a dishwasher. The aluminum will darken.**

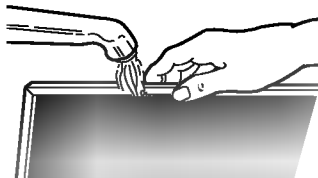

3. To reinstall the filters, slide it into the side slot, then push up and toward oven center to lock.

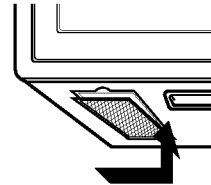


NOTE: **Do not** operate the hood without the filters in place.


CHARCOAL FILTER REPLACEMENT

If your oven is vented inside, the charcoal filter should be replaced every 6 to 12 months, and more often if necessary. The charcoal filter cannot be cleaned. To order a new charcoal filter, contact the Service Center.


1. Remove the two vent grille mounting screws. (2 middle screws)

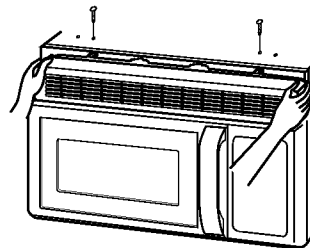

2. Tip the grille forward, then lift it out
3. Remove old filter.

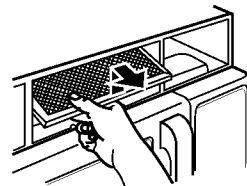

4. Slide a new charcoal filter into place. The filter should rest at the angle shown and set the clock.

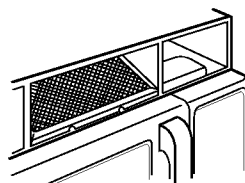


5. Slide the bottom of the vent cover into place. Push the top until it snaps into place. Replace the mounting screws. Turn the power back on at the main power supply and set the clock.

MAINTENANCE

COOKTOP/NIGHT LIGHT REPLACEMENT


1. Unplug oven or turn off power at the main power supply.

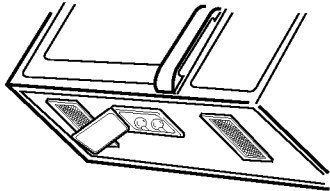


2. Remove the bulb cover mounting screws.
3. Replace bulb(s) with 30 watt appliance bulb(s).
4. Replace bulb cover, and mount screw.
5. Turn the power back on at the main power supply.

OVEN LIGHT REPLACEMENT

1. Unplug oven or turn off power at the main power supply.
2. Remove the vent cover mounting screws. (2 middle screws)
3. Tip the cover forward, then lift out to remove.

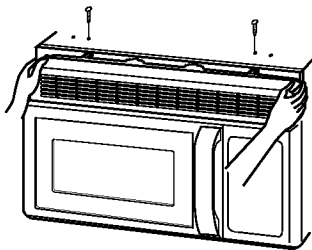

4. Lift up the bulb holder.

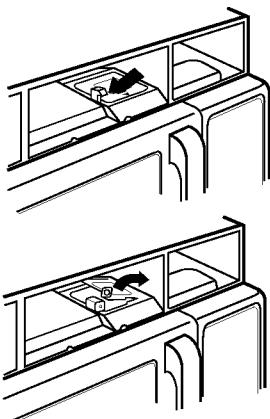

5. Replace bulb with a 30 watt appliance bulb.
6. Replace the bulb holder.
7. Slide the top of the vent cover into place. Push the bottom until it snaps into place. Replace the mounting screws. Turn the power back on at the main power supply.

QUESTIONS AND ANSWERS

Q. Can I use a rack in my microwave oven so that I may reheat or cook in two levels at a time?

A. Only use the rack that is supplied with your microwave oven. Use of any other rack can result in poor cooking performance and/or arcing and may damage your oven.

Q. Can I use either metal or aluminum pans in my microwave oven?

A. Usable metal includes aluminum foil for shielding (use small, flat pieces), and shallow foil trays (if tray is 3/4 inch deep and filled with food to absorb microwave energy). Never allow metal to touch walls or door.

Q. Sometimes the door of my microwave oven appears wavy. Is this normal?

A. This appearance is normal and does not affect the operation of your oven.

Q. What are the humming noises that I hear when my microwave oven is operating?

A. You hear the sound of the transformer when the magnetron tube cycles on and off.

Q. Why does the dish become hot when I microwave food in it? I thought that this should not happen.

A. As the food becomes hot it will conduct the heat to the dish. Use hot pads to remove food after cooking.

Q. What does "standing time" mean?

A. "Standing time" means that food should be taken out of the oven and covered for additional time after cooking. This process allows the cooking to finish, saves energy and frees the oven for other purpose.

Q. Can I pop popcorn in my microwave oven? How do I get the best results?

A. Yes. Pop packaged microwave popcorn following manufacturer's guidelines or use the preprogrammed Popcorn pad. Do not use regular paper bags. Use the "listening test" by stopping the oven as soon as the popping slows to a "pop" every one or two seconds. Do not try to repop unpopped kernels. You can also use special microwave poppers. When using a popper, be sure to follow manufacturer's directions. Do not pop popcorn in glass utensils.

Q. Why does steam come out of the air exhaust vent?

A. Steam is normally produced during cooking. The microwave oven has been designed to vent this steam out the top vent.

MAINTENANCE

MICROWAVE UTENSIL GUIDE

USE	DO NOT USE
<p>OVENPROOF GLASS (treated for high intensity heat): utility dishes, loaf dishes, pie plates, cake plates, liquid measuring cups, casseroles and bowls without metallic trim.</p> <p>CHINA: bowls, cups, serving plates and platters without metallic trim.</p> <p>PLASTIC: Plastic wrap (as a cover)-- lay the plastic wrap loosely over the dish and press it to the sides. Vent plastic wrap by turning back one edge slightly to allow excess steam to escape. The dish should be deep enough so that the plastic wrap will not touch the food. As the food heats it may melt the plastic wrap wherever the wrap touches the food. Use plastic dishes, cups, semirigid freezer containers and plastic bags only for short cooking time. Use these with care because the plastic may soften from the heat of the food.</p> <p>PAPER: Paper towels, waxed paper, paper napkins and paper plates with no metallic trim or design. Look for the manufacturer's label for use in the microwave oven.</p>	<p>METAL UTENSILS: Metal shields the food from microwave energy and produces uneven cooking. Also avoid metal skewers, thermometers or foil trays. Metal utensils can cause arcing, which can damage your microwave oven.</p> <p>METAL DECORATION: Metal-trimmed or metal-banded dinnerware, casserole dishes, etc. The metal trim interferes with normal cooking and may damage the oven.</p> <p>ALUMINUM FOIL: Avoid large sheets of aluminum foil because they hinder cooking and may cause harmful arcing. Use small pieces of foil to shield poultry legs and wings. Keep ALL aluminum foil at least 1 inch from the side walls and door of the oven.</p> <p>WOOD: Wooden bowls and boards will dry out and may split or crack when you use them in the microwave oven. Baskets react in the same way.</p> <p>TIGHTLY COVERED UTENSILS: Be sure to leave openings for steam to escape from covered utensils. Pierce plastic pouches of vegetables or other food items before cooking. Tightly closed pouches could explode.</p> <p>BROWN PAPER: Avoid using brown paper bags. They absorb too much heat and could burn.</p> <p>FLAWED OR CHIPPED UTENSILS: Any utensil that is cracked, flawed or chipped may break in the oven.</p> <p>METAL TWIST TIES: Remove metal twist ties from plastic or paper bags. They become hot and could cause a fire.</p>

BEFORE CALLING FOR SERVICE

Check the following list to be sure a service call is really necessary. A quick reference of this manual as

If nothing on the oven operates:

- check for a blown circuit fuse or a tripped main circuit breaker.
- check if oven is properly connected to electric circuit in house.
- check that controls are set properly.

If the oven interior light does not work:

- the light bulb is loose or defective.

If oven will not cook:

- check that control panel was programmed correctly.
- check that door is firmly closed.
- check that Start Pad was touched.
- check that probe was inserted correctly into receptacle.
- check that timer wasn't started instead of a cook function.

If oven takes longer than normal to cook or cooks too rapidly:

- be sure the Power Level is programmed properly.

If the time of day clock does not always keep correct time:

- check that the power cord is fully inserted into the outlet receptacle.
- be sure the oven is the only appliance on the electrical circuit.

well as reviewing additional information on items to check, may prevent an unneeded service call.

If food cooks unevenly:

- be sure food is evenly shaped.
- be sure food is completely defrosted before cooking.
- check placement of aluminum strips used to prevent overcooking.

If food is undercooked:

- check recipe to be sure all directions (amount, time, & power levels) were correctly followed.
- be sure microwave oven is on a separate circuit.
- be sure food is completely defrosted before cooking.

If food is overcooked:

- check recipe to be sure all directions (amount, power level, time, size of dish) were followed.

If arcing (sparks) occur:

- be sure microwavable dishes were used.
- be sure wire twist ties weren't used.
- be sure oven wasn't operated when empty.
- make sure metal rack (if used) is properly installed on 4 supports.

If the Display shows a time counting down but the oven is not cooking:

- check that door is firmly closed.
- check that Timer wasn't started instead of a cooking function.

BEFORE CALLING FOR SERVICE

You can often correct operating problems yourself. If your microwave oven fails to work properly, locate the operating problem in the chart below and try the solutions marked for each problem. If the microwave oven still does not work properly, contact the nearest Service Centre. Service Centers are fully equipped to handle your service requirements.

PROBLEM	SOLUTION
Oven will not start	Is power cord plugged in? Is door closed? Cooking time not set. Temperature not set or probe not plugged in.
Arcing or Sparking	Use approved cookware only. Properly position temperature probe. Do not operate with oven empty.
Time of day incorrect	Reset time of day.
Probe Light Flashes	Is temperature probe properly plugged in?
Unevenly Cooked Foods	Use approved cookware only. Turn or stir food. Completely defrost food.
Overcooked Foods	Properly position temperature probe. Use correct time. / Power level setting. Use correct temp setting.
Undercooked Foods	Use approved cookware only. Properly position temperature probe. Completely defrost food. Use correct time. / Power level setting. Use correct temp setting. Check see that oven ventilation ports are not restricted.
Improper Defrosting	Use approved cookware only. Turn or stir food. Use correct time. / Power level setting.
Oven Lamp does not Light	Is power cord plugged in? Is door closed? Cooking time not set. Is light bulb burned out?

CENTRE DE SERVICE AUTORISÉ INDEPENDANT PAR
LG ELECTRONICS CANADA, INC.

AUTHORIZED INDEPENDENT SERVICE CENTERS

not all listed service centres repair all product, please see product code listed below

BRITISH COLUMBIA & NORTHWEST TERRITORIES

CRANBROOK
 DANNYS HOME
 ENTERTAINMENT
 11B 14TH AVE S
 VIC 2W9 (604) 426-7413
 A1 A2 A3 B1 B2 B3 B5 E1 E5

FORT ST-JOHN
 DIVERSIFIED
 ELECTRONICS
 10607-101 ST AVENUE
 V1J 5J4 (604) 785-9119
 B1 B2 B3

KAMLOOPS
 GIDDENS SERVICES LTD.
 1613 VALLEYVIEW DRIVE
 V2C 4B4 (604) 372-8842
 A1 A2 A3 A4 B1 B2 B3 C1 E1
 E2 E4 E5

KAMLOOPS
 JOHNS ELECTRIC REPAIR
 CENTER
 773 VICTORIA STREET
 V2C 2B5 (604) 374-0388
 A1 A2 A3 B1 B2 B3 C1 E1 E5

KELOWNA
 VALLEY DIG ITRONICS
 SERVICE LTD
 2453 HIGHWAY 97 NORTH
 V1X 4J2 (604) 763-8366
 A1 A2 A3 A4 B1 B2 B3 C1 E1
 E5 Z1

KITIMAT
 WINGS ELECTRONICS
 161 CITY CENTRE
 V8C 1T6 (604) 632-4247
 A1 A2 A3 A4 B1 B2 B3 B5 C1
 C2 E1 E5

LANGLEY
 A.A.A TV SERVICE
 19-9316-194TH STREET
 V3T 4W2 (604) 888-7777
 A1 A2 A3 A4 B1 B2 B3 B5 E1
 Z1

LANGLEY
 FRASER VALLEY VIDEO
 REPAIR
 21271-40TH STREET
 V3A 4P5 (604) 530-6094
 A1 A2 A3 A4 B3 Z1

MAPLE RIDGE
 HANEY TV & SOUND
 SERVICE
 11781 FRASER ST
 V2X 6C6 (604) 467-4955
 A1 A2 A3 B1 B2 B3 B5 C1 E1
 E5

NANAIMO
 KEBB ELECTRONICS
 CLINIC LTD
 1609A BOWEN RD
 V9S 1G5 (604) 754-6335
 A1 A2 A3 A4 B1 B3 C1 E1

PORT ALBERNI
 QUALITY ELECTRONICS
 LTD.
 4414 MARGARET STREET
 V9Y 6G6 (604) 724-3422
 A1 A2 A3 A4 B1 B2 B3 B5 E1
 E5

POWELL RIVER
 DIAMOND TV AND RADIO
 4844 JOYCE AVE
 V8A 3B8 (604) 485-5793
 A1 A2 A3 B1 B2 B3 C1 E1 E5

PRINCE GEORGE
 ABC TV & STEREO
 1-1839 1ST AVENUE
 V2L 2Y8 (604) 564-9018
 A1 A2 A3 B1 B2 B3 B5 C1 E1
 Z1

RICHMOND
 ELTEX ELECTRONIC
 SERVICES
 4351 NO.3 ROAD
 V6X 2X8 (604) 270-8480
 A1 A2 A3 A4 B1 B2 B3 B4 C1
 E1 E2 E5 F2

RICHMOND
 MICROTCH SERVICE
 CORP.
 130-2188 5 ROAD
 V6X 2T1 (604) 276-8324
 B5

RICHMOND
 RR VIDEO MASTER LTD
 5471 MINORU BLVD
 V6X 2B1 (604) 270-7288
 A1 A2 A3 A4 B1 B2 B3 Z1

SECHELT
 BEACON ELECTRONICS
 RR 1 HEATHER RD
 VON 3A0 (604) 885-5963
 A1 A2 A3 A4 B1 B2 B3 B5 E1
 E5

SURREY
 GUILDFORD ELECTRONICS
 LTD
 113-9547 152ND ST S
 V3R 5Y5 (604) 581-2272
 A1 A2 A3 A4 B1 B2 B3 B5 C1
 E1 E5 Z1

TERRACE
 ELECTRONICS PLUS
 4617 LAZELLE AVE
 V8G 1S3 (604) 635-4577
 A1 A2 A3 A4 B1 B2 B3 B5 C1
 C2 E1

TERRACE
 THE TV SHOP
 4807 HAMER AVE
 V8G 2E5 (604) 635-4695
 A1 A2 A3 A4 B1 B3 E1

VANCOUVER
 VANCOUVER MICRO
 SERVICE
 2643 KINGSWAY
 V5R 4H4 (604) 433-2446
 A1 A2 A3 A4 B1 B2 B3 B5 C1
 E1 E5

VICTORIA
 AMP SERVICE CENTRE
 101 3347 OAK ST.
 V8X 1R2 (604) 475-3065
 A1 A2 A3 A4 B1 B2 B3 B4 C1
 E1

VICTORIA
 BC SOUND & RADIO
 SERVICE
 1805 FORT STREET
 V8R 1J6 (604) 595-4225
 A1 A2 A3 A4 B1 B2 B3 C1 C2
 E1 E5

NORTHWEST TERRITORIES
YELLOWKNIFE
 ARCTIC APPLIANCE
 SERVICE
 4310-50TH AVE
 X1A 1B5 (403) 920-4511
 E1 E2 E4 E5

ALBERTA

CALGARY
 ABBA ELECTRONICS
 1916 37TH STREET SW
 T3E 3A3 (403) 240-2669
 A1 A2 A3 A4 B1 B2 B3 B5 E1
 E2

CALGARY
 CITY-WIDE ELECTRONICS
 311-36 AVE SE
 T2G 1W1 (403) 243-0925
 A1 A2 A3 A4 B1 B2 B3 C1 E1

CALGARY
 MICROTECH
 2735-39 AVE NE 100
 T3E 5R9 (403) 250-7041
 A1 A2 A3 A4 B1 B3 C1 E1

CALGARY
 NATIONAL ELECT SERVICE
 ASC 2
 1266-73 AVENUE S.E.
 T2H 2V5 (403) 252-6988
 A1 A2 A3 A4 B1 B2 B3 B5 C1
 E1 E5

CALGARY
 SOUTHLAND CROSSING TV
 9827-C HORTON SW
 T2V 2X5 (403) 255-9647
 A1 A2 A3 B1 B2 B3 B4 C1 E1
 E2 E5 F2

CAMROSE
 ELECTRONIC SERVICES
 4612-49 AVE
 T4V 0M6 (403) 672-3601
 B1 E1 E2 Z1

CANMORE
 MOUNTAIN ELECTRONIC
 SERVICES
 BOX 2459 1316 RAILWAY
 AVE TOL 0M0 (403) 678-6448
 A1 A2 A3 B1 B2 B3 B5 C1 C2
 E1 E2 E5

EDMONTON
 STERLING T.V. AND VIDEO
 15608-116 AVE
 T5M 3S5 (403) 455-8725
 A1 A2 A3 A4 B1 B2 B3 B5 C1
 E1 E5

EDMONTON
 VIDED TECH
 5310-89 ST
 T6E 5P9 (403) 468-5856
 A1 A2 A3 A4 B1 B3 C1 E1

GRAND CENTRE
 CENTRE TV AND
 APPLIANCE SERV
 5804-50TH AVE
 T0A 1T1 (403) 594-2425
 A1 A2 A3 A4 B1 B3 B5 C1

GRANDE PRAIRIE
 G.P. ELECTRONICS
 SERVICE
 10702-100TH STREET
 T8V 3X8 (403) 539-4240
 A1 A2 A3 A4 B1 B3 B5 C1

GRANDE PRAIRIE
 T.V. KORNER
 9827-97TH AVE
 T8V 0M9 (403) 539-4805
 A1 A2 A3 A4 B1 B2 B3 B5 C1
 C2 E1

INNISFAIL
 VIDEOTRONICS SERVICE
 NO 3, 4912-52 STREET
 T4G 1S7 (403) 227-4111
 A1 A2 A3 B1 B2 B3 C1 E1 E2

LETHBRIDGE
 FAITH ELECTRONICS LTD.
 1422-2 AVE SOUTH
 T1J 0E9 (403) 327-2977
 A1 A2 A3 A4 B1 B2 B3 C1 E1
 E5 Z1

LETHBRIDGE
 PRO TELEVISION SALES
 1815-2nd AVENUE SOUTH
 T1J 0E8 (403) 328-4977
 A1 A2 A3 B1 B2 B3 E1

MEDICINE HAT
 GUST'S RADIO TV
 913 SOUTH RAILWAY ST. S.E.
 T1A 2W3 (403) 526-6815
 A1 A2 A3 A4 B1 B2 B3

MEDICINE HAT
 TEL-RAY TELEVISION
 683 SOUTH RAILWAY
 STREET SE
 T1A 2V8 (403) 526-4588
 A1 A2 A3 B1 B3 E1

PEERS
 KARLS TV SERVICE
 C.2. SITE 19, RR1
 T0E 1W7 (403) 693-3737
 B1 B2 B3 Z1

RED DEER
 MIDWAY APPLIANCE
 SERVICE
 BAY 11-7895 49 TH AVE
 T4N 6K2 (403) 342-1353
 E1 E2 E3 E4 E5

RED DEER
 TOWN & COUNTRY
 RADIO & TV
 4A 4999-76 STREET
 T4P 1T5 (403) 347-4388
 A1 A2 A3 B1 B2 B3 E1 E5

VERMILION
 VERMILION COMMUNITY
 T.V. BOX 786
 T0B 4M0 (403) 853-5007
 A1 A2 A3 B1 B2 B3 C1 E1
 E5

SASKATCHEWAN

CARROT RIVER
 CHANNEL 16
 ELECTRONICS BOX 416
 S0E 0L0 (306) 768-3784
 A1 A2 A3 B1 B2 B3 C1 C2

KINDERSLEY
 STEVE'S T.V. & RADIO
 SERVICE
 BOX 2728 304 2ND AVE W.
 S0L 1S0 (306) 463-2930
 A1 A2 B1 B3 E1

KINISTHO
 TOM'S TV & RADIO
 SERVICE BOX 369
 SOJ 1H0 (306) 864-2244
 A1 A2 A3 B1 B2 E1 E5

LLOYDMINSTER
 CLAUDE'S T.V. SERVICE
 4912-49 AVENUE
 S9V 0T6 (306) 825-9441
 B1 E1

MEADOW LAKE
 CLAUDE'S ELECTRONIC
 REPAIR
 BOX 3184
 S0M 1V0 (306) 236-3160
 A1 A2 A3 A4 B1 B3 B5 E1

N BATTLEFORD
 SPECTRONIC SERVICE LTD.
 11204 RAILWAY AVE.E.
 S9A 2R7 (306) 446-2345
 B1 B2 B3 E1

NORTH BA TTFLEFORD
 TWIN CITY TV & RADIO LTD
 1922-100 TH STREET
 S9A 0X3 (306) 446-2322
 A1 A2 A3 A4 B1 B2 B3 C1 B5
 E1

PRINCE ALBERT
 ALS ELECTRONIC SERVICE
 LTD.
 127A 16 TH ST W
 S6V 3V2 (306) 763-7790
 A1 A2 A3 A4 B1 B2 B3 E1 E5

PRINCE ALBERT
 GALAXY ELECTRONICS LTD.
 1306 CENTRAL AVE
 S6V 4W3 (306) 764-7377
 A1 A2 A3 A4 B1 B2 B3 B5
 E1 E5

SASKA TOON
 AAA TV DOCTOR
 2207 & 2209 FIRST AVE.
 NORTH S7K 2A4 (306) 242-
 1797
 A1 A2 A3 A4 B1 B2 B3 B5 C1
 E1 E5

SASKA TOON
 TRICOM ELECTRONICS
 1926 ALBERTA AVENUE
 S7K 1R9 (306) 653-3913
 A1 A2 A3 A4 B1 B2 B3 E1 E5

SASKA TOON
 WESTWAY APPLIANCE
 SERVICE INC
 5-1622 ONTARIO AVE
 S7K 1S8 (306) 652-1550
 E1

YORKTON
 DALIN ELECTRONICS
 80 SMITH STREET
 S3N 0J4 (306) 783-3420
 A1 A2 A3 B1 B3 C1 E1

YORKTON
 BONSAI'S APPLIANCE
 REPAIR LTD.
 76 7TH AVE S., BOX 160
 S3N 2V7 (306) 783-8991
 E1 E2 E4 E5

CENTRE DE SERVICE AUTORISÉ INDEPENDANT PAR
LG ELECTRONICS CANADA, INC.

AUTHORIZED INDEPENDENT SERVICE CENTERS

not all listed service centres repair all product, please see product code listed below

MANITOBA

BRANDON TELEVISION CITY 1639 ROSSER AVE R7A 0M9 (204) 728-1232 A1 A2 A3 A4 B1 B2 B3 C1 C2 E1 E2	WINNIPEG AUTEK LAO LTD 488 ST. ANNES ROAD R2M 3E1 (204) 256-4048 A1 A2 A3 A4 B1 B3 C1 C2 E1	WINNIPEG MM ELECTRONICS SYSTEMS LTD 695 LOGAN AVE R3E 1M5 (204) 788-4450 A1 A2 A3 A4 B1 B3 B5 C1 E1	WINNIPEG T.R. ELECTRONIC SERVICES 1646 ST-JAMES STREET R3H 0L3 (204) 772-6834 A1 A2 A3 A4 B1 B2 B3 B4 E1 E5	WINNIPEG THE VIDED RE-FIT SHOP 3147 PORTAGE AVE R3K 0W4 (204) 831-0862 A1 A2 A3 B1 B2 B3 E1 Z1
PORTAGE LA PRAIRIE REEVES SERVICES 446 TUPPER STREET NORTH R1N 1X5 (204) 857-7233 A1 A2 A3 B1 B2 B3 C1 C2 E1 Z1	WINNIPEG JAPAN AUDIO 1037 ERIN STREET R3G 2X1 (204) 775-0494 A1 A2 A3 A4 B1 B2 C1 E1 E5 F2	WINNIPEG SUPERIOR APPLIANCE SERVICE LTD 729 WALL STREET R3G 2T6 (204) 775-8677 B1 B2 B3 Z1		

ONTARIO

AJAX DUNBARTON RADIO AND TV LTD 29 HARWOOD AVE SOUTH 3 L1S 2B8 (905) 686-3957 A1 A2 A3 A4 B1 B2 B3 E1 Z1	ELGINBURG HALL ELECTRONIC SERVICE 2162 UNITY RD. K0H 1M0 (613) 541-0808 A1 A2 A3 A4 B1 B2 B3 B5	MARKHAM MULTI-ELECTRONICS SERVICE 190 DON PARK ROAD UNITS L3F 2V8 (905) 475-5068 B3 B4	NORTH BAY R.J. ELECTRONICS 101 FERRIS DRIVE P1A 8Z4 (705) 474-0830 A1 A2 A3 A4 B1 B2 C1 E1 E5	PORT RERRY PICTURE PERFECT TV SERVICE 72 WATER STREET L9L 1J2 (905) 985-9500 A1 A2 A3 A4 B1 B2 B3 E1 Z1
BARRIE NORTHERN ELECTRONIC SERVICES 165 WELLINGTON ST W UNIT 2A L4N 1L7 (705) 733-2195 A1 A2 A3 A4 B1 B2 B3 C1 C2 E1	ELLIOT LAKE SUPERIOR AUDIO AND VIDEO 184 ONTARIO AVE. P5A 1Y4 (705) 848-2366 A1 A2 A3 A4 B1 B2 B3 C1 E1 E5	MARKHAM RAMTEL INC 39 RIVIERA DRIVE UNIT 11 L3R 8N4 (905) 940-3166 B5	OSHAWA VCR CLINIC 1300 KING ST. E 26 L1H 8J4 (905) 723-6373 B1 B3 E1	RICHMOND HILL ONE STDP ELECTRONICS SERVICE 85 WEST WILMOT ST. #7 L4B 1K7 (905) 882-0700 F1
BELLEVILLE CONSUMERS ELECTRONICS 257 NORTH FRONT ST K8P 3C3 (613) 966-3599 A1 A2 A3 A4 B1 B2 B3 C1 C2 E1	HAMILTON ALL BEST AUDIO VIDEO LTD. 70 NEBO ROAD, UNIT 3 L8W 2E3 (905) 575-3486 A1 A2 A3 A4 B1 B2 B3 C1 E1 E2 E3 E5	MARKHAM RELIABLE AUDIO 550 ALDEN ROAD UNIT 104 L3R 6A8 (905) 477-1222 A1 A2 A3 A4 B1 B2 B3 E1 E5	OTTAWA REGIONAL HOME APPLIANCE 1221 NEWMARKET ST K1B 3V1 (613) 741-6520 A1 A2 A3 B1 B2 B3 E1 E2 E3 E4 E5	SARNIA DUAL ELECTRONICS 153 MITTON STREET, NORTH N7T 6G9 (519) 344-2323 A1 A2 A3 A4 B1 B2 B3 E1 E5 Z1
BELLEVILLE MILLER ELECT. SERVICING CO. MAITLAND PLAZA, UNIT 3 K8N 4Z5 (613) 969-5299 A1 A2 A3 A4 B1 B2 B3 E1 E5 Z1	HAMILTON COLTECH ELECTRONICS INC 306 KENORA AVE L8E 2W2 (905) 361-5506 A1 A2 A3 A4 B1 B2 B3 C1 E1	MISSISSAUGA CENTECH ELECTRONICS 1330 MIDWAY BLVD., UNIT 3 L5T 2G8 (905) 564-8585 A1 A2 A3 B1 B3 C1 E1 F1 F2	OTTAWA (GLOUCESTER) HOME ELECTRONICS CENTER LTD 5310 CANOTEC UNIT 34 K1J 9N5 (613) 746-7700 A1 A2 A3 A4 B1 B2 B3 C1 E1 E2 E4 E5	SARNIA KEELANS SERVICE CENTRE 190 MAXWELL STREET N7T 5C3 (519) 337-7557 A1 A2 A3 A4 B1 B2 B3 E1 E2 E3 E4 E5 Z1
CAMBRIDGE CAMBRIDGE ELECTRONICS LTD 645 KING STE N3H 3N7 (519) 653-2120 A1 A2 A3 A4 B1 B2 B3 B5 C1 C2	HORNEPAYNE BOZEC ELECTRIC 90 FRONT ST POM 1Z0 (807) 868-3023 EI E2 E4 E5	MISSISSAUGA NUMBER ONE ELECTRONICS 1535 MEYERSIDE DRIVE UNIT 17 L5T 1M9 (905) 564-1100 A1 A2 A3 A4 B1 B2 B3 C1 E1 E2 E5	OTTAWA (NEPEAN) CAMSERV 52AIIITARES DR UNIT 16 K2E 7Z1 (613) 226-3375 B3 B4 B5	SCARBOROUGH AAB-TECH ELECTRONICS INC 1050 MCNICOLL AVE UNIT 10 M1W 2L8 (416) 490-0200 A1 A2 A3 A4 B1 B2 B3 C1 E1 E5
CAMBRIDGE PRESTON TV AND RADIO 238 LOWTHER ST N N3H 1Y1 (519) 653-0130 A1 A2 A3 B1 B2 B3 B5 E1	KAPUSKASING MICHEL T.V. SERVICE 110 BRUNELLE NORTH P5N 2M2 (705) 335-5223 A1 A2 A3 A4 B1 B2 B3 B5 C1 E1 Z1	MISSISSAUGA KODAN ELECTRONICS 3045 SOUTH CREEK RD.50 L4X 2X7 (905) 625-5613 A1 A2 A3 A4 B1 B2 B3 B4 C1 E1 E5 Z1	OTTAWA (NEPEAN) HOME ELECTRONICS CENTRE 3-1950 MERIVALE RD K2G 5T5 (613) 723-9194 A1 A2 A3 A4 B1 B2 B3 C1 C2 E1 E2 E4 E5	SCARBOROUGH CONSUMERS ELECTRONICS 87 THORN MOUNT DRIVE 33 M1B 5S5 (416) 281-8411 A1 A2 A3 A4 B1 B2 B3 B4 C1 E3 E4 E5
COBOURG RON LINTON APPLIANCE SERVICE 434 KING ST W K9A 2N7 (805) 372-8761 E1 E2 E4 E5	KINGSTON DEPOT CONSUMER SERVICE LTD 607 GARDINERS RD K7M 3Y4 (613) 384-1660 A1 A2 A3 B1 B2 B3 C1 E1 E2 E3 E5	MISSISSAUGA WINDWOOD VIDEO INC 3080 NINDWOOD DRIVE L5N 2K5 (905) 542-0333 A1 A2 A3 A4 B1 B2 B3 B5 C1 C2 E1 E2 E3 E4 E5	OTTAWA (NEPEAN) TELE SERVICE ELECTRONICS LTD 1891 MERIVALE ROAD K2G 1E5 (613) 224-7748 A1 A2 A3 A4 B1 B2 B3 B4 E1 E5 F2 Z1	SIMCOE K.C. ELECTRONIC SERVICE 40 SYDENHAM ST. N3Y 1R7 (519) 428-2803 A1 A2 A3 A4 B1 B2 B3 E1 E5
COBOURG UNITED TELEVISION COBOURG LTD. 66 KING STREET EAST K9A 1K9 (905) 372-6832 A1 A2 A3 A4 B1 B2 B3 E1 E5	KINGSTON MONTGOMERY ELECTRONICS 3079 PRINCESS STREET RR 3 L7L 4V2 (613) 389-2846 A1 A2 A3 A4 B1 B2 B3 E1 E2 E5	NEWMARKET HEXTECH CONSUMER ELECTRICS 731 DAVIS DR. L3Y 2R2 (905) 830-6797 A1 A2 A3 A4 B1 B2 B3 E1 E5	OWEN SOUND HOME ELECTRONICS REPAIR 180B 12TH ST E N4K 1B7 (519) 371-3808 A1 A2 A3 B1 B2 B3 E1	SIoux LOOKOUT ADI'S ELECTRONICS BOX 582 P8T 1A8 (807) 737-2946 A1 A2 A3 B1 B2 B3
CORNWALL CURRIER REPAIR SERVICE 360 BALMORAL AVE K6H 6K1 (613) 932-8235 EI E2 E3 E4 E5	KITCHENER TOP TECH ELECTRONICS (KITCHEN) 907 FREDERICK STREET N2B 2B9 (519) 578-7600 Z1	NIAGRA FALLS RK ENTERPRISES 6355 ARMSTRONG DRIVE L2H 2L8 (905) 374-0780 B3	PEMBROKE MURRAY LEACH APPLIANCE 152 MUD LAKE RD K8A 6W4 (613) 732-4871 E1 E3 E4 E5	SUDBURY KINGWAY ELECTRONICS LTD. 1106 KINGWAY ROAD P3B 2E5 (705) 566-9290 A1 A2 A3 A4 B1 B2 B3
CORNWALL TIM'S ELECTRONICS 1124 PAULOTREET K6H 6H5 (613) 933-4037 A1 A2 A3 B1 B2 B3 C1 E1 E5	LONDON ADVANCED AUDIO 8 VI DEB SERVICE 60 MEG DRIVE, UNIT 14 N6E 3T6 (519) 686-4334 A1 A2 A3 A4 B1 B2 B3 C1 E1	NORTH BAY ADRIENS APPLIANCE SERVICE 1374 FRANKLIN ST P1A 2S2 (705) 474-1755 EI E3 E4 E5	PEMBROKE MURRAY LEACH APPLIANCE 152 MUD LAKE RD K8A 6W4 (613) 732-4871 E1 E3 E4 E5	SUDBURY STRIBBERS ELECTRONICS 1899 LASALLE BLVD P3A 2A3 (705) 566-5177 A1 A2 A3 A4 B1 B2 B3 E1 E5
DOWNSVIEW RAYJAC ELECTRONICS 701 PETROLIA ROAD M3J 2N6 (416) 661-5237 A1 A2 A3 A4 B1 B3 B5 C1 E1 Z1	LONDON TOP TECH ELECTRONICS (LONDON) 310 ADELAIDE ST SOUTH N5Z 3L2 (519) 686-6515 A1 A2 A3 A4 B1 B2 B3 Z1	NORTH BAY J.E.F. ELECTRONICS LTD 430 OAK STREET EAST P1B 1A5 (705) 476-2644 B1 Z1	PETERBOROUGH BILL HAYES RADIO & TV 213 HUNTER STREET W K9H 2L1 (705) 742-0056 A1 A2 A3 A4 B1 B2 B3 B5 C1 E1 E5	

CENTRE DE SERVICE AUTORISÉ INDEPENDANT PAR
LG ELECTRONICS CANADA, INC.

AUTHORIZED INDEPENDENT SERVICE CENTERS

not all listed service centres repair all product, please see product code listed below

ONTARIO

THUNDER BAY

S & R ELECTRONICS
805 W FREDERICA ST
P7E 3X4 (807) 475-4956
A1 A2 A3 A4 B1 B2 B3 C1 E1
E5

THUNDER BAY

SOUND STEREO SERVICE
189 SOUTH ALGOMA
STREET
P7B 3C1 (807) 344-6763
A1 A2 A3 A4 B3 C1 Z1

TILLSONBURG

LES BOYS LTD
3 SIMCOE STREET
N4G 2H4 (519) 842-5904
E1 E2 E4 E5

TILLSONBURG

VATCHER APPLIANCE
SERVICE
108B CONCESSION ST.
EAST
N4G 1P7 (519) 688-9030
E1 E3 E4 E5

TORONTO

DOWNTOWN AUDIO AND
VIDEOELT
457 BATHURST ST.
M5T 2S9 (416) 594-1468
A1 A2 A3 B1 B5 C1 Z1

TILLSONBURG

LES BOYS LTD
3 SIMCOE STREET
N4G 2H4 (519) 842-5904
E1 E2 E4 E5

TORONTO

DOWNTOWN
ELECTRONICS, JOHN LU
1643 ST CLAIR AVE W
M6N 1H7 (416) 653-2828
A1 A2 A3 A4 B1 B2 B5 C1 C2
E1 E5

WATERLOO

A-V ELECTRONICS
SERVICES 450 WEBER ST N
N2L 4E7 (519) 884-8660
A1 A2 A3 A4 B1 B3 B5 E1 F2

WATERLOO

NARA ELECTRONICS LTD.
372 KING STREET NORTH
N2J 2Z3 (519) 888-9696
A1 A2 A3 A4 B1 B3 B5 E1 F2

WATERLOO

WATERLOO APPLIANCE
SERVICE
90 FROBISHER DRIVE
N2V 2A1 (519) 884-2507
E1 E3 E4 E5

WAWA

SUPERIOR ELECTRIC
18 KLONDIKE ST BOX 834
POS 1KO (705) 856-2864
E1 E2 E3 54 E5

WHITBY

VIEWCOM ELECTRONICS
INC.
133-1/2 BROCK ST. NORTH
L1H 4H3 (905) 430-0954
A1 A2 A3 A4 B1 B3 C1

WINDSOR

CRESCENT TELEVISION
LTD.
3033 MARENTETTE AVENUE
N8X 4G1 (519) 969-1622
A1 A2 A3 A4 B1 B2 B3 B4 C1
E1 E5 Z1

WINDSOR

FACTORY APPLIANCE
SERVICE
3647 RIBERDY RD
N8W 3V9 (519) 972-0558
E1 E3 E4 E5

WINDSOR

P. L. G. ELECTRONICS
3314 WALKER RD
N8W 3S1 (519) 972-7666
A1 A2 A3 B1 B2 B3 C1 E1 E5

QUEBEC

ALMA

LOUIS DION INC
25 BOUL AUGER O
G8B 2A6 (418) 662-3073
E3 E4 E5

AMOS

A.P. ELECTRONIQUE ENR
92 RUE BEAUDRY
J9T 3V2 (819) 732-0844
A1 A2 A3

ANJOU

CIRCUITS ELECTRONIQUE
(6060) ENC
8155 LARREY
H1J 2L5 (514) 352-4111
A1 A2 A3 A4 B1 B2 B3 C1 C2
E1

BAIE COMEAU

ELECTROTECH
1680 BOUL LAFLECHE
G5C 1C9 (418) 589-7515
A1 A2 A3 A4 B1 B2 B3 C1 E1

BEAUPORT

ATELIER AUDIO VIDEO
J.F.M. INC
660 AVE. ROYALE
G1E 1Y7 (418) 666-8182
A1 A2 A3 A4 B1 B2 B3 C1 C2
E1 E2

BRIGHAM

SERVICE LAROUETTE INC
224 RUE DECELLES
JOE 1J0 (514) 777-0770
E1 E2 E3 E4 E5

CHICOUTIMI

CLAUDE GIRARD TV ENR
786 RUE ST-PAUL
G7J 3B7 (418) 549-8767
A1 A2 A3 A4 B1 B2 B3 E1 E5
Z1

CHICOUTIMI

TELEVIDEO AS. INC 2147
BOULEVARD TALBOT
G7H 5B1 (418) 696-2264
A1 A2 A3 A4 B1 B2 B3 E1 Z1

CHOMEDY LAVAL

B & K AUDIO SERVICE
2025 BOUL FORTIN
H7S 1P4 (514) 667-0491
A1 A2 A3 B1 B2 B3 B5 C1 E1
E5

DOLBEAU

VF ELECTRONIQUE ENR
1849 BOUL WALLBERG
G8L 1J1 (418) 276-8191
A1 A2 A3 B1 B2 B3 C1 C2 E1
E5

DRUMMONVILLE

MORISSETTE SERVICE INC
4571 BLVD ST JOSEPH
J2A 1B4 (819) 472-2469
E1 E4 E5

DRUMMONVILLE

ROSS ELECTRONIQUE INC.
985, BOUL. JEAN DE
BREBOELIF
J2B 4T2 (819) 477-1522
A1 A2 A3 A4 B1 B2 B3 B5 C1
E1 Z1

OUPARQUET

GAETAN LACASSE
SERVICE
1675 RGV11 CP161
J0Z 1W0 (819) 948-2248
E2 E4 E5

GATINEAU

COSMO-TECH SERVICES
INC.
868 MALONEY BLVD EAST
J8P 1H1 (819) 663-4496
A1 A2 A3 A4 B1 B2 B3 E1 E2
E3 E4 E5

GRANBY

LA CLINIQUE DU SON INC
78 ASSOMPTION
J2G 3S1 (514) 375-2323
A1 A3 B1 B2 B3 B5 E1 E5

IBERVILLE

ALAIN BONNEAU
TELEVISION INC
21 RANG OT-EDOLIARD
J2X 5G3 (514) 347-0563
A1 A2 A3 A4 B1 B2 B3 B5 E1
E5

JOLIETTE

B.G. ELECTRONIQUE
150 ST. PIERRE SUD
J6E 5Y7 (514) 759-3091
A1 A2 A3 A4 B1 B2 B3 E1 E5

JONQUIERRE

SERVICE TV ARVIDA INC.
2343 MATHIAS
G7S 3V6 (418) 548-3059
A1 A2 A3 B1B2 B3 B5 C1 E1
E5

LA MALBAIE

ALAIN MURRAY
ELECTRONIOLIE
11 RUECIMON
G5A 1E5 (418) 665-3590
A1 A2 A3 B1 B2 B3 B5 C1 Z1

LATUQUE

LED PEPIN TV ENR.
639 DESBIENS
G9X 2K2 (819) 523-3243
A1 A2 A3 B1 B2 B3 C1

LACHINE

CENTRE DE SERVICE DEFI
INC.
10500 COIE DE LIESSE STE 55
H8T 1A4 (514) 633-9313
A1 A2 A3 A4 B1 B2 B3 B5 E1
E2 E5

LEMOYNE

VIDEOSUD
200 CHARRON
J4R 2K9 (514) 671-9572
A1 A2 A3 A4 B1 B2 E1

LEVIS

SELECTROTEC
4717 BOUL. DE LA RIVE
SUD
G6W 1H5 (418) 835-3966
A1 A2 A3 A4 B1 B2 B3 C1 E1

MANIWAKI

SERVICE FLANSBERRY
INC.
375 BOUL DESJARDINS
J9E 2E6 (819) 449-2212
E1 E3 E4 E5

MATANE

FORTIN TV SERVICE
273 RUE ST-PIERRE
G4W 2B7 (418) 562-3571
A1 A2 A3 B1 B2 B3 C1 C2 E1
E5 Z1

MISTASSINI

SERVICE SERGE MICHAUD
122 RUE BOUDREAULT
GOW 2C0 (418) 276-1282
E1 E2 E3 E4 E5

MONT LAURIER

SERVITRUIQUE ENR
335 BOUL DES RUISSEAUX
J9L 3G6 (819) 623-7143
A1 A2 A3 A4 B1 B3 E1

MONTREAL

AUDIC VIDEO RD INC
375 DECARIE
H4L 3K7 (514) 336-2222
A1 A2 A3 A4 B1 B2 B3 B4 E1
E5

MT. ROYAL (WEST MONTREAL)

SOLACMAR INC
5785 PARE STREET
H4P 1S1 (514) 341-1431
A1 A2 A3 A4 B1 B2 B3 E1 E5

QUEBEC

ASTRO-SERVICE
ELECTRON IOUE.
2665 BOUL PERE LELIEVRE
G1P 2X9 (418) 687-2787
A1 A2 A3 B1 B2 B3 B5 C1 E1
E5

QUEBEC

AUDYO EEAUDOIN TV INC
670 BOUVIER SUITE 108
G2J 1A7 (418) 623-8960
A1 A2 A3 A4 B1 B2 B3 C1 C2
E1 E5

REPENTIGNY

ATELIERS G PAGUETTE INC
104 LAROCHE
J6A 7M5 (514) 645-6744
A1 A2 A3 B1 B2 E1 E2

REPENTIGNY

MICROVISION
336 NOTRE-DAME, 3
J6A 2S2 (514) 654-5774
A1 A2 A3 A4 B1 B2 B3 B5 C1
E1

RIMOUSKI

M.S.P ELECTRONIOLIE INC.
273 ST GERMAN EST
G5L 1B8 (418) 722-8373
A1 A2 A3 A4 B1 B2 B3 B5 E1

RIVIERS DU LOUP

ELECTRON63UE MERCIER
L'TEE
162 RUE FRASER
G5R 1C8 (418) 862-7269
A1 A2 A3 B1 B2 C1 C2 E1 E5

SEPT ILES

TECHSERV INC
10 RUE PERE DUVET
G4R 3N2 (418) 962-2391
A1 A2 A3 B1 C1

SEPT ILES

ELECTRO-REF SERVICES
161 PERE DIVET
G4R 3P8 (418) 962-9186
E1 E4 E5

SHERBROOKE

JACOLIES BERGERON TECH
2226 KING ST W
J1J 2E8 (819) 569-1676
A1 A2 A3 A4 B1 B2 B3 B5 E1

ST JEROME

POIRIER RADIO SERVICE
506 RUE ST. GEORGES
J7Z 5B3 (514) 438-3375
A1 A2 A3 A4 B1 B3 E1

ST EUSTACHE

SERVICE OS TV RIVE NORD
307 GRANDE COTE
J7P 1C6 (514) 623-6060
A1 A2 A3 B1 B2 E1 E5

ST GABRIEL DE BRANDON

RICHARD HENRICHON
ELECTRON IOUE
37 BOULEVARD HOULE
JOK 2N0 (514) 835-2218
A1 A2 A3 B1 B2 E1

ST HYACINTHE

CENTRE SERVICE PLUS INC
2145 STE ANNE SUITE 101
J2S 5H5 (514) 771-1492
A1 A2 A3 A4 B1 B2 B3

ST LAURENT

HECOTRON LTEE
4800 COTE VERTLI
H4S 1V9 (514) 331-5720
A1 A2 A3 A4 B1 B2 B3 C1 E1
E5

ST PIERRE LES BECOUSTS

J.B. ELECTRONIOLIE ENR
599 MARIE VICTORIN
GOX 2Z0 (819) 263-2559
A1 A2 A3 A4 B1 B2 B3 C1 E1
E5

ST. AGAPIT

SERVICE DE TELE
JACOUIS CHABOT
C.P. 460
G0S 1Z0 (418) 888-3857
A1 A2 A3 B1 B2 B3 E1

STE CECILE DE MILTON

MICHAUD VIDEO TV
284 PRINCIPALE
J0E 2C0 (514) 777-2814
A1 A2 A3 A4 B1 B2 B3

TROIS RIVIERE-OUEST

LA8TRONIC
5115 BOUL JEAN XXIII
G8Z 4A5 (819) 373-0066
A1 A2 A3 A4 B1 B2 B3 C1 E1
E2

VAL D'OR

VAL DOR REFRIGERATION
LTEE.
1273 5IEME RUE
J0P 4A1 (819) 825-2505

VALLEYFIELO

LES ENTREPRISES
ELECTRONOUS
193 RUE MADEN
J6S 3V7 (514) 373-5466
A1 A2 A3 B1 B2 B3 E1 Z1

VICTORVILLE

ACTION L.M. SERVICE INC.
310 ST. GEORGES
G6P 3A2 (819) 751-0992
E1 E2 E3 E4 E5

VICTORVILLE

GERARD MICHAUD
ELECTRONIOUE
88 NOTRE DAME EST
G6P 3Z6 (819) 758-1877
A1 A2 A3 A4 B1 B2 B3 C1 E1
E5

WINDSOR

WINDSOR ELECTRONIOUS
INC.
74-2IEME AVENUE
J1S 1Z3 (819) 845-4202
A1 A2 A3 A4 B1 B2 B3 E1 E5

CENTRE DE SERVICE AUTORISÉ INDEPENDANT PAR
LG ELECTRONICS CANADA, INC.

AUTHORIZED INDEPENDENT SERVICE CENTERS

not all listed service centres repair all product, please see product code listed below

NEW BRUNSWICK

BATHURST

ALS TV AND RADIO
 579 PATTERSON CRES
 E2A 1Z9 (506) 546-5763
 B1 E1

BERESFORD

BOUCHARD APPLIANCE
 REPAIRS BOX 4062
 E0B 1H0 (506) 548-3938
 E1 E2 E4 E5

BERTRAND

MM REPARATION
 ELECTRONIQUE
 RR 1 SITE 22 BTE 4
 E0B 1J0 (506) 727-7884
 A1 A2 A3 B1 B2 C1 C2

CAMPBELLTON

B & G IDEAL SERVICE LTD
 81 WATER STREET
 E3N 1A9 (506) 753-5474
 A1 A2 A3 B1 B3 B5 E1

EDMUNDSTON

PICARD SERVICE INC.
 2-47E AVENUE
 E3V 3B8 (506) 739-9475
 E1 E2 E3 E4 E5

EDMUNSTON

DATA ELECTRONICS
 25 HILL STREET
 E3V 1H7 (506) 735-4073
 A1 A2 A3 B1 B2 B3 B5 C1 E1

FREDERICTON

CYGNUS TECHNOLOGY
 LTD
 154 HAIN STREET
 E3A 1C8 (506) 459-4606
 A1 A2 A3 A4 B1 B2 B3 B5 E1

GRAND FALLS

DONALD PICARD
 746 3RD AVE C.P. 743
 E0J 1M0 (506) 473-5496
 B1 B2 B3

MONCTON

B.J.W. ELECTRONICS LTD
 59 PACIFIC AVE.
 E1E 2G2 (506) 857-2118
 A1 A2 A3 A4 B1 B2 B3 C1 E1
 E5 Z1

MONCTON

CHAMPLAIN ELECTRONICS
 LTD
 247 LEWISVILLE RD
 E1A 6T1 (506) 854-6663
 A1 A2 A3 A4 B1 B2 B3 E1 E5

OROMOCTO

HARTS TV
 9 SMITH ST RR3
 E2V 2G3 (506) 357-9785
 A1 A2 A3 A4 B1 B3 B5 C1 E1

SACKVILLE

TANTRAMAR
 ELECTRONICS
 70 CRESENT ST BOX 1686
 E0A 3C0 (506) 536-3953
 A1 A2 A3 B1 B2 B3 B5 E1 E5

ST JOHN

GALBRAITH ELECTRONICS
 LTD
 646-FAIRVILLE BLVD
 E2M 3M2 (506) 635-0317
 A1 A2 A3 B1 B2 B3 E1 E5

WOODSTOCK

PLOOM ELECTRONICS
 BOX
 798 LOWER WOODSTOCK
 E0J 2B0 (506) 328-3205
 A1 A2 A3 B1 B3 C1 E1

NOVA SCOTIA

ANTIGONISH

MIKE'S HOME FURNISHING
 89 ST. ANDREWS STREET
 B2G 2G9 (902) 863-2886
 A1 A2 A3 B1 B2 B3 C1 C2

BRIDGEWATER

HERLIN ELECTRONICS
 209 HIGH ST SUITE A
 B4V 1W2 (902) 543-1313
 A1 A2 A3 A4 B1 B3 B5 E1

COLDBROOK

N & B EATON MARKETING
 LTD
 2687 POPLARD DRIVE
 B4R 1A9 (902) 679-1852
 A1 A2 A3 B1 B2 B3 C1 E1 E5

DARTMOUTH

E.P. BLIGHT 169 MAIN
 STREET
 B2X 1S1 (902) 434-8306
 A1 A2 A3 B1 B2 B3 B5 C1 C2
 E1 Z1

DARTMOUTH (HALIFAX)

MUNRO ELECTRONIS
 SERVICE
 75 AKERLEY BLVD UNIT J
 B3B 1R7 (902) 468-4991
 A1 A2 A3 A4 B1 B2 B3 B5 E1
 E3

KINGSTON

GE KENNEDY ELECTRONIC
 REPAIR 1050
 WHITTINGTON DRIVE
 B0P 1R0 (902) 765-6448
 A1 A2 A3 A4 B1 B2 E1

NEW MAINS

VIDEO WORLD
 1009 KENTUCKY COURT
 B4N 4N1 (902) 681-7577
 B4

YARMOUTH

BLUENOSE ELECTRONICS
 19 FIRST STREET
 B5A 1S9 (902) 742-8885
 B1 B2 B3 Z1

PEL

CHARLETTETOWN
 GALLANT ELECTRONICS
 96 MOUNT EDWARD ROAD
 PO 2961
 C1A 8C5 (902) 892-3100
 A1 A2 A3 A4 B1 B2 B3

NEW FOUNDLAND

CORNER BROOK

A-1 ELECTRONICS
 98 WEST STREET
 A2H 2Z3 (709) 634-1581
 A1 A2 A3 A4 B1 B2 B3 B5 C1
 E1 Z1

PASADENA

WILSON TV SERVICE
 6 ELMWOOD CRESCENT
 A0L 1K0 (709) 686-2617
 A1 A2 A3 B1 B2

WABUSH

CLIFFS TV SERVICE
 WABUSH PLAZA. BOX 785
 A0R 1B0 (709) 282-3941
 A1 A2 A3 B1 B2 B3 C1 E1 E5

PRODUCT TYPE CODES.

AUDIO

"A1" = Portable Radio/Tape
 "A2" = Home Audio
 "A3" = HiFi Audio
 "A4" = Compact Disc

VIDEO

"B1" = Television
 "B2" = In Home Service
 "B3" = VCR & Accessories
 "B4" = Camcorder

AUTOMOTIVE

"C1" = Radio/Tape/Amp.
 "C2" = Removal & Installation

APPLIANCE

"E1" = Microwave Oven
 "E2" = Bread Bakery
 "E3" = Air Conditioner
 "E4" = Refrigerator
 "E5" = In Home Service

BUSINESS EQUIPMENT

"F1" = Telephone & Attach
 "F2" = Fax
 "B5" = Computer Monitors

IDENTIFICATION DES CONDES

AUDIO

"A1" = Radio Portatif/Cassette
 "A2" = Audio maison
 "A3" = Audio Hi-Fi
 "A4" = Lecteur audionumerique

VIDEO

"B1" = Téléviseur
 "B2" = Service maison
 "B3" = Magnétoscope & accessoires
 "B4" = Caméscope

AUTOMOTIVE

"C1" = Autoradio/lecteur/Ampli.
 "C2" = Installation

APAREIL MENAGER

"E1" = Four micro-ondes
 "E2" = Four a pain
 "E3" = Air conditioné
 "E4" = Réfrigérateur
 "E5" = Service maison

EN AFFAIRES

"F1" = Téléphone & access.
 "F2" = Télécopieur
 "B5" = Moniteurs d'ordinateur