

Contents

1. Important Safety Instructions.....	4
2. Parts of the Cellular Telephone.....	7
3. Installation Instructions.....	8
1. <u>Installing the SIM Card</u>	8
2. <u>Removing the SIM Card</u>	9
3. <u>Installing the Battery</u>	9
4. <u>Removing the Battery</u>	9
5. <u>Connecting the Charger</u>	10
4. Selection Keys.....	11
1. <u>Keypad Description</u>	11
2. <u>Alphanumeric Mapping</u>	14
3. <u>Display Indicators</u>	16
5. Basic Operating Instructions.....	18
1. <u>Making a Call</u>	18
2. <u>Access Codes/PIN Codes</u>	18
3. <u>Answering a Call</u>	18
4. <u>Adjusting the Earpiece Volume</u>	19
5. <u>Redialing a Number</u>	19
6. <u>Speed Dialing</u>	19
7. <u>Hold</u>	19
6. Menu Functions.....	20
1. <u>How to Use the Menu Functions</u>	20
2. <u>Menu Structure</u>	21
7. Menu Functions & Descriptions.....	23
1. <u>Phone book</u>	23
Search.....	23
Add new.....	24
Delete.....	24
Find in phone.....	24
Add in phone.....	25
Erase in phone.....	25
Check capacity.....	25
Own number.....	25
Caller group.....	25
2. <u>Messages</u>	27
Read Messages.....	27
Send Messages.....	28
Send default.....	28
Delete.....	28
Free count.....	28

Setup	29	Set alarm 1.....	35
VM <i>S</i> (voice mail service) number.....	29	Reset alarm 1.....	35
Auto display.....	29	Set alarm 2.....	35
SMS center.....	29	Reset alarm 2.....	35
Valid time.....	29	Set display	35
Status Report.....	30	Language.....	35
Listen to VM.....	30	Call wait.....	35
Broadcast.....	30	Anykey answer.....	35
Read Messages.....	30	Auto redial.....	36
Auto display.....	30	Present ID.....	36
Filter.....	31	Greetings.....	37
Backlighting.....	37	LCD contrast.....	37
Auto answer.....	37	Reset settings.....	37
Reset settings.....	37		
3. <u>Audio Profile</u>	32	5. <u>Call Info</u>	38
Adapt.....	32	Last call.....	38
Key sound.....	32	Total calls.....	38
Finger sound.....	33	Auto display.....	38
Finger volume.....	33	1-minute beep.....	39
Vibrator.....	33	Charge info.....	39
Info tones.....	33	Total charge.....	39
SMS alert tone.....	33	Max charge.....	39
Service tone.....	33	Unit price.....	39
Auto display.....	39	Auto display.....	39
Call records.....	39	Call records.....	39
4. <u>Settings</u>	34		
Volume.....	34		
Clock.....	34		
Set time.....	34		
Set date.....	34		

Not reachable.....	40	Sel. sequence.....	45
No reply.....	41	<u>9.Advanced.....</u>	<u>46</u>
All calls.....	41	Edit melody.....	46
Busy.....	41	Edit.....	46
Cancel all.....	41	Tempo.....	46
		Play.....	46
		Clear.....	47
7.Security.....	42	Calculator.....	47
Bar calls.....	42	Calendar.....	47
Outgoing.....	42	Noting Function.....	47
Out Int'l(international).....	42	World clock.....	47
Out ex. home.....	42	Games.....	48
Incoming.....	42	Hot keys.....	48
Incoming if ab.(abroad).....	42	Undefined.....	48
Cancel all.....	43	Listen to VM.....	48
Change password.....	43	Flash dial.....	48
Fixed numbers.....	43	Key lock.....	48
PIN1 change.....	43	Audio Profile.....	49
PIN1 enable.....	43	Read Messages.....	49
PIN1 disable.....	43	Calendar.....	49
PIN2 change.....	43	Present ID.....	49
Key lock.....	44	1-minute beep.....	49
SIM lock.....	44		
Set lock.....	44	<u>10.How to use MENU during making a call.....</u>	<u>49</u>
Clear lock.....	44		
Change PCK.....	44	8.Battery.....	52
8.Network.....	45	9.Care and Maintenance.....	54
New search.....	45		

1. Important Safety Instructions

Please be careful to follow the important safety information.



Traffic Safety

Avoid using a hand-held telephone while driving a vehicle. For road safety, park the vehicle before using a hand-held telephone or use a hands-free kit.



Operating Environment

Mobile radio transmitting equipment, including cellular telephones, may cause

interference. Therefore, it is recommended that you follow any special regulations in any area. Switch off your cellular phone whenever it is forbidden to use it.



Do Not Use in Hospitals

The use of cellular telephones may interfere with the functionality of some medical devices in the hospitals. Remember to follow special regulations enforced in the area and switch off your phone when it is necessary.



Do Not Use in Airplanes

The use of cellular telephones in an aircraft may disrupt radio transmission and signals. This, therefore, may be dangerous to the operation of the aircraft. Be sure to switch off your cellular telephone when in an aircraft.



Do Not Use in Gas Stations

It is advisable that users switch off their cellular telephones when refueling is in progress.



Do Not Use in Explosive Sites

Restrictions on the use of cellular telephones should be observed in chemical plants, fuel dis-

tribution areas, and where blasting operations are in progress.



Standard Usage

For the satisfactory operation of your cellular telephone, the equipment should be used in the normal operating position. Do not touch the antenna while making a call.



Appropriate Maintenance

Only qualified and authorized personnel should service your cellular telephone. Faulty installation or repair may be hazardous.



Accessories

Use only accessories approved by the phone manufacturer.



Emergency Calls(SOS)

Making an emergency call to '112' can be made from your cellular telephone in the network service areas. When making an emergency call, you must be sure to give all the necessary information, such as your name, your cellular telephone number, and the location of the crisis, as accurately as possible.

 
 




2. Parts of the Cellular Telephone

 Warning: Please do not pull out the antenna at any time.

Each part of the phone is listed below:

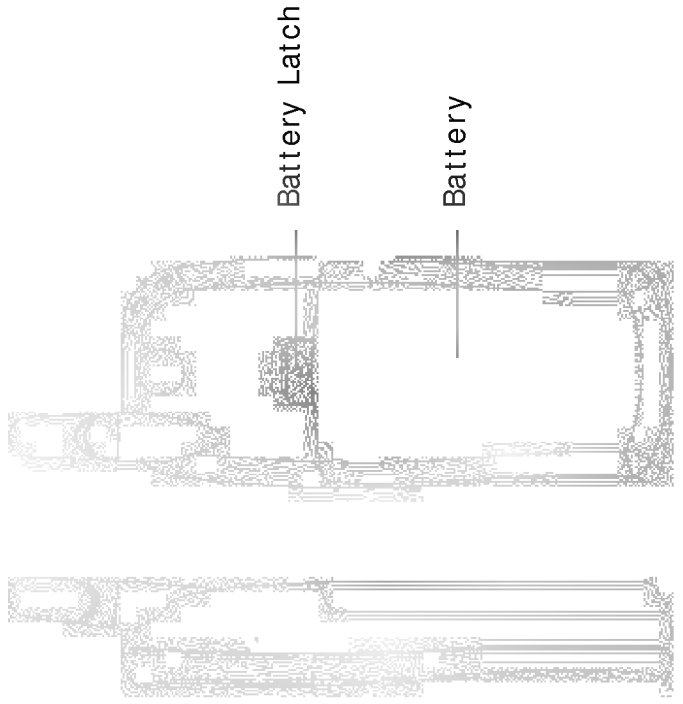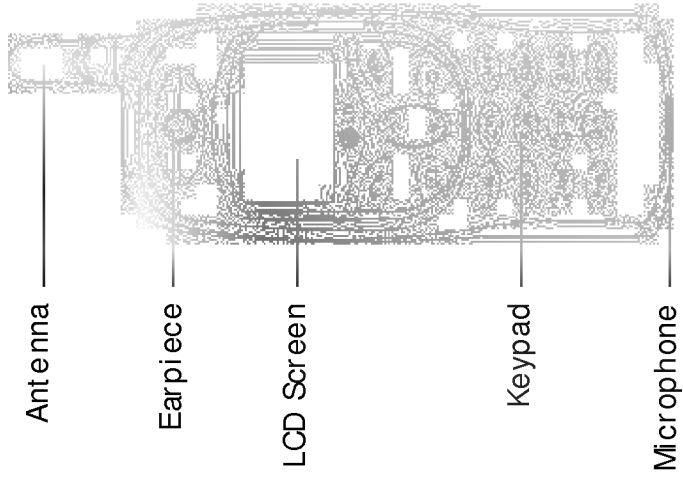



3. Installation Instructions

1. Installing the SIM Card

The following contains simple steps on how to install and remove the SIM card and the battery, as well as on how to connect the charger to the cellular telephone.
 (Note: This cellular telephone is compatible only with a miniature SIM card.)

Prior to installing the SIM card, be sure that the phone is switched off. To install the SIM card:

1. Remove the battery. Follow instructions on how to remove the battery.
2. Place the card inside the SIM holder so that the golden connectors are facing downwards.





2. Removing the SIM Card

To remove the SIM card:

1. Remove the battery. Follow instructions on how to remove the battery.
2. Pull out the SIM card slowly towards the right.

connector.

2. Push the battery back until you hear a "click".

4. Removing the Battery

1. Switch off the cellular telephone.
2. Press the latch on the top of the battery connector.

3. Installing the Battery

1. Press the latch on the top of the battery

3. Pull the battery pack.

4. Lift up the battery.



5. Connecting the Charger

 
To connect the charger to the cellular phone:

1. Install the battery. Follow instructions on how to install the battery.
2. Connect the charger to the cellular phone according to the figure shown below.
3. Use a compatible or appropriate charger for the phone.

100V~240V




4. Do not remove your battery or SIM card while charging.

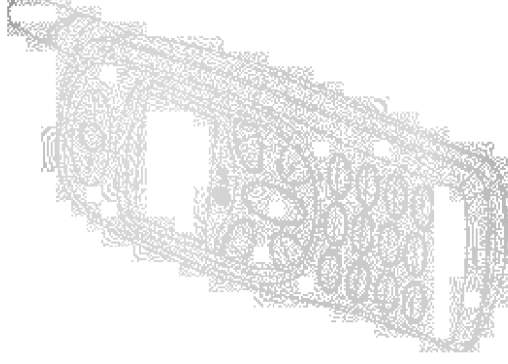



4. Selection Keys

 1. Keypad Description

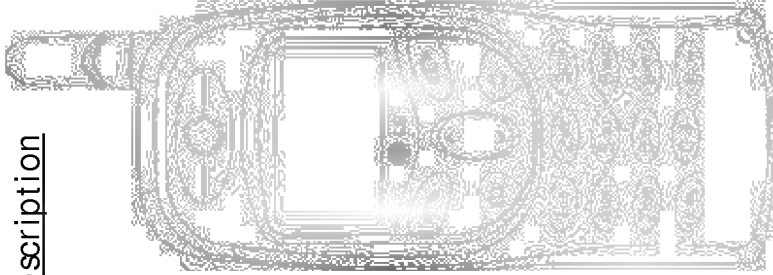

The Positive key, which functions as an OK key, executes confirmation, makes/ answers a call, redials, and makes a selection.




 

The Negative key, which functions as a No key, ends an active call, abandons the command, and makes an exit. This key is also used as the power key.



The shortcut key to enter into the phonebook menu.



 


The Clear key deletes characters, cancels key presses and exits the menu to go back to the standby mode. Pressing the  key deletes the digits one by one, while pressing and holding  clears all characters from the display. Pressing  during a call can also mute the voice temporarily. Pressing it again will cancel the mute function.




The up/down cursor keys scroll through menus and submenus, options and settings.



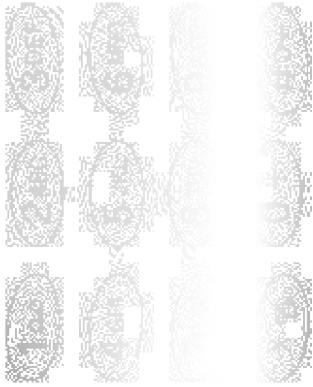




The alphanumeric character keys are used for editing short messages, names and telephone numbers in the phonebook.




Press and hold the  key until the "0" is changed into "+" for the international prefix. ("+" character is used as a substitute for international access code)



The  and  are special function keys. Keying in 1-3 digits in standby mode then pressing  can help you find corresponding telephone numbers in the phonebook. Also used to key lock by pressing this key for a long time.



The  is used for supplementary network functions. Also used to enter to vibration mode by pressing this key for a long time.



 


1. Switching between upper and lower case letters depends upon the duration of the key press.
2. Pressing a number key in the editing mode will result in a (upper case) character appearing on the display. To key in lower case letters, simply press the key with the desired character and hold it until the letter appears in lower case.
3. All further keys will remain in lower case until you press and hold a letter key again, which will return you to the upper case mode.





3. Display Indicators

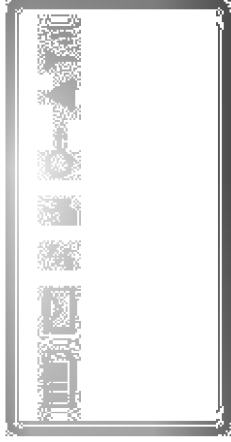

Indicates that the phone is using a "roaming" network.



Indicates that the phone keypad is locked. Please follow the instructions appearing on the display.



Normal: Indicates that a new short message is received.

Inverted: Indicates that the message memory is full by turning into dark color. It is recommended that you erase unwanted messages.

The following icons will be shown on the display as different functions are activated.



Shows the charge level of the battery. The more bars you see, the more power you have left. The bar scrolls up and down when charging.





Shows the signal strength at your current location. The higher the bar, the better the signal received.



Indicates the alarm has been set.



Indicates the handsfree kit has been inserted.



Indicates the incoming ringer is switched off. (silent activated)



Indicates an incoming call.



Indicates an outgoing call.



Indicates an active call.



Indicates the vibrator has been set.



5. Basic Operating Instructions

1. Making a Call

Key in the telephone number, the area code, and press  to send.

2. Access Codes/ PIN Codes

PIN1 and PIN2 (4 to 8 digits)

A PIN1 (Personal Identification Number) code is supplied to your phone and the SIM card by network providers to prevent unauthorized use.

With your SIM card inserted, your PIN1 code will be required every time you switch on your phone.

If a wrong PIN1 code is entered three consecu-


tive times, the phone becomes locked. To unlock, you must use the PUK1(Personal Unblocking Key) code which you get from your operator.

A PIN2 code is for other functions, such as fixed dialing and call barring.

PUK and PUK2 (8 digits)

To enable a locked PIN1/ PIN2 code again, the PUK1 (Personal Unblocking Key) PUK2 code is required. Check with your network provider for the code.


3. Answering a Call

On receiving a call, press  to answer the




call. Press  to end the call.

If the "Any key answer" is activated, press ANY KEY (except for ) to answer the call.

4. Adjusting the Earpiece Volume


Press  to increase or decrease the volume after entering the volume menu during a call.

5. Redialing a Number



Press  to enter the redial mode. Use  to select the number you want to redial. When you want to dial out, use the  key.

6. Speed Dialing

You can enter a phone number that is stored in

the phonebook by simply pressing the position of the number followed by the  key.

7. Hold (operator supported feature)

Pressing  allows you to put an active call on hold while you make another call. When the second call is connected, pressing the  again allows you to switch between the two calls.





 

If there is another incoming call, the display will show a menu for user to reject (to reject the incoming call), swap (to swap the active and held call), end held (to end the held call and switch incoming call to held), end active (to end active call and switch incoming call to active).



6. Menu Functions



1. How to Use the Menu Functions






The menu contains various functions that allow you to do fine-tuning and make adjustments.

- Pressing  directs you to the phonebook operation.
- Pressing  down key brings you into the menu facility.
- Pressing  allows you to scroll through the menus.
- Pressing  brings you into the menu and allows you to select a submenu item.
- Pressing  returns you to the previous menu.
- Pressing  exits the menu facility.



       2. Menu Structure

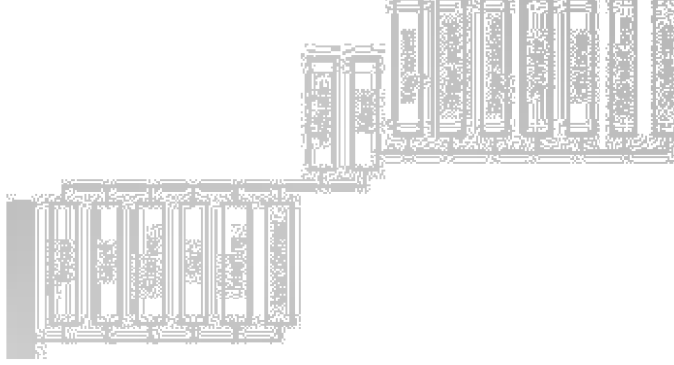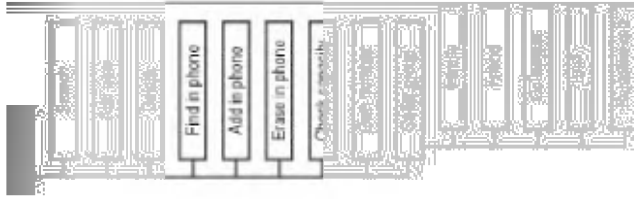

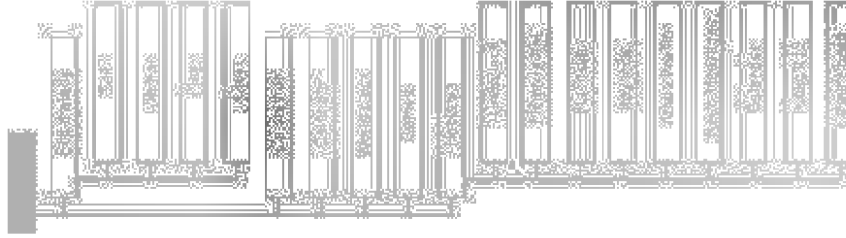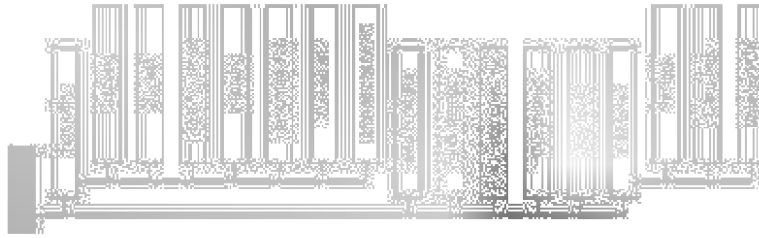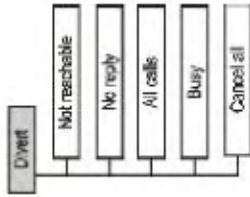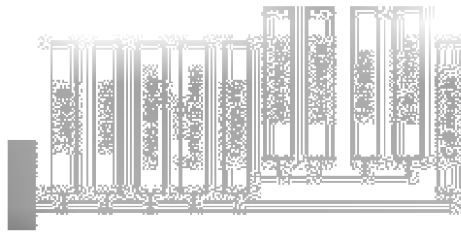





7. Menu Functions & Descriptions

1. Phone book

 
 
You can store and edit all the names and telephone numbers in your SIM card and 40 sets of names and telephone numbers in your phone.

Search

You can view or search for a name by simply keying in the name. The first matched record, according to the sequence of names you originally entered into the menu, will be shown. To modify or edit an item, simply press  (Options) to enter into the submenu, select  to edit.

The following describes the operation of each

menu:

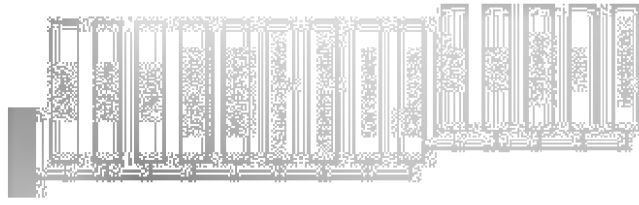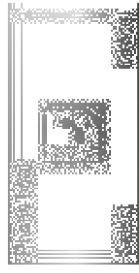






Add new

Selecting this menu allows you to create and store names and telephone numbers in the notepad memory of your phonebook. The notepad memory contains the names and telephone numbers that you have stored. If you would like to edit an existing number in the phonebook, simply key in the new number and it will automatically override the previously existing number.

Keying in a new number in an already filled space or location will also automatically override whatever information exists.

The fields containing names and telephone numbers can be edited by the standard editing procedures for alpha and numeric entries.

You can scroll or move between fields using the  key. The dialogue can be stored by pressing , or  to cancel.

Delete

Press  to delete any item in the phonebook's entry list. Press  to cancel.

Find in phone

This menu is the same as search menu when the phonebook is stored in the phone.





Add in phone

This menu is the same as the Add new menu when the phonebook is to be stored in the phone.

Erase in phone

This menu is the same as the delete menu when the phonebook is stored in the phone.

Check capacity

This menu allows you to check the size of the phonebook which is stored either in the SIM or the phone itself.

Own number


You can view your personal phone number.


Caller group

This menu allows you to distinguish between various types of callers already listed in the existing phonebook by different incoming ringer tones.

After entering the menu, you can set the ringer

and the icon for each group by using  to

scroll to each group and then pressing  to select from the different ringers and icon settings.

 
To create a map in the phonebook of each different group in the search submenu, press  to select Options and then enter the caller





group menu. You may then choose which group you wish to assign to a particular phone number already stored in the phonebook. Whenever an incoming number is matched with a number stored in the phonebook, the selected ringer or icon will be activated automatically.



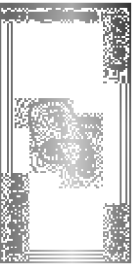





2. Messages


Read Messages

Selecting this menu allows you to enter into a submenu that consists of 2 items: incoming and outgoing.


Selecting one of these 2 items will present you with a list of message headers that are currently stored in your SIM card.  indicates whether a message is unread or unsent.  indicates whether a message is read or sent.

Pressing  moves you one level back in the menu. Pressing  allows you to view the com-

plete text of the selected message. Pressing  allows you to scroll through the texts.

The  (Options) key brings up a submenu, which could be either Delete or Write message. If a message is incoming, other Options menus (Delete, Forward, Reply, Call) are available to you.


Send Messages

Selecting this menu allows you to input an address to which you would like to send a message, together with a short message content. To view different items in the submenu, including Send, Send & Store, and Save, press .

Send default

Selecting this menu allows you to select a default message content from a list rather than one you have entered yourself. This will save you a lot of time. The rest of the operation is the same as the send function.

Delete

This menu provides the same lists as described in the Read menu, with the exception of the  key denoting a delete confirm dialog.

Free count

This menu tells you how much memory space in the SIM card is free or not available. The dis-

play will show total count and free count of SMS in SIM card.

Setup

The following items can be set:


- VMS(voice mail service) number

This menu allows you to enter the voice mail address in a normal number edit field. If a Phase 2 SIMcard is installed, the number will be stored here; otherwise, it will be stored in the phone. It allows you to set a new or change an existing voice mailbox number.

- Auto display

This menu controls actions when incoming mes-

sages come in. If it is switched on, you have the option to read the message immediately.

If it is switched off, you are notified by a  indicator on the display.

- SMS center

This menu item allows you to enter the short text messages or "SMS" can be sent to and received by the phone from other users through the network's message service, although this service may not necessarily be supported by your network.

- Valid time

This menu allows you to specify the length of time for which your outgoing messages are to

be stored at the message service center or network service. Select the period in which the service center is to attempt to deliver the message. If, however, nothing is selected, the phone will automatically choose a sensible default value for you.

- **Status Report**

This menu allows you to receive a confirmation note from your network on whether your message has been safely received by a recipient. You may turn on or off this function by selecting ON/ OFF on the display.

Listen to VM

This menu allows you to enter your voice mailbox and listen to your voice mail.

Broadcast

Cell broadcast short messages are spread by the network service to all handsets in a cell.

- **Read Messages**

This allows you to read the last broadcast message received. The phone stores this last message only when it is switched on.

- **Auto display**

This allows you to switch the auto-display function on/off. When the function is set on, broad-

cast messages will automatically be displayed. None

Using the arrow keys allows you to scroll through the message. Pressing OK or NO allows you to exit. Broadcast messages automatically disappear after a short period of time. Receives no message.

● Filter

This allows you to select the type of cell broadcast message you want to receive. The filter menu contains a list of codes for types of CB messages, which are defined by the network service.

All

Receives all broadcast messages.



 
3. Audio Profile

All the audio settings are grouped and you can choose the most suitable group according to your requirement. There are 6 different groups: Typical, Silent, Outdoor, Car, Meeting, and User defined. To activate one, you just select the group you want and then select the “Activate” menu. To modify the settings, you just select the group and then select the “Adapt” menu.

Adapt


- Key sound

You can set the volume of the keypad tones on/ off.

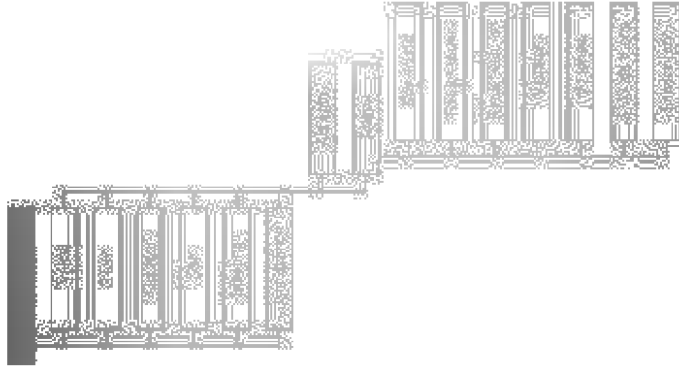




- Ringer sound

Using the  key allows you to select the ringing tone pattern. There are 23 different ringing tones or melodies for your selection.

- Ringer volume

Using the  key allows you to adjust the volume of the ringing tone.

- Vibrator

You may switch on/off the vibrator.

- Info tones

These are control information beeps that inform you of various conditions, such as low battery condition.

 
- SMS alert tone

This menu switches on or off an information tone when an incoming SMS (short text messages) message comes in.

- Service tone

When this function is set on, the phone will generate a tone when a network is available.



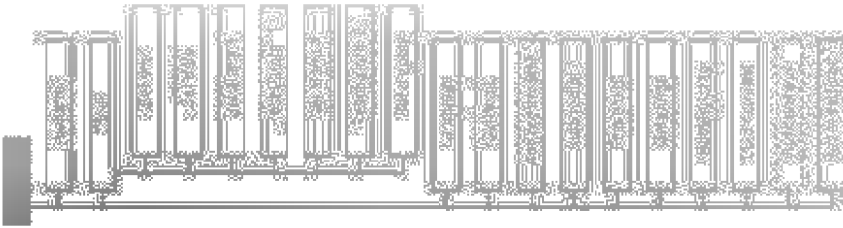

4. Settings

Volume

You can press  to increase or decrease the earpiece volume.

Clock

The clock contains the date and alarm functions. It allows you to set the time and the alarm.

● Set time

This allows you to set the time. The format is <hh:mm>, and based on 24 hours format.

● Set date

This allows you to set the date. The format is <dd/mm/yy>.



Note: The date cannot be set earlier than 01.

01.99

- Set alarm 1

This allows you to set the alarm 1.

- Reset alarm 1

This allows you to reset the alarm 1.

- Set alarm 2

This allows you to set the alarm 2.

- Reset alarm 2

This allows you to reset the alarm 2.

- Set display

You can change the format of the time display.


Language


This allows you to switch between different languages and to select a language for the display texts.

Call wait (operator supported feature)

This allows you to activate/deactivate the call waiting function. Pressing  allows you to listen to the incoming call when you have a call in progress.

Anykey answer

When this function is not set on or is disabled, you can answer an incoming call only by pressing . If, however, this function is set on or

is enabled, you can answer an incoming call by pressing any key on the phone, with the exception of .

Auto redial

This allows you to set the auto redial function on/off. When this function is set on, any unsuccessful attempts to make a call will prompt the phone to display a message asking if you want an auto redial of the number. "Yes" allows it to do an auto redial after 10 seconds, up to 10 times until it succeeds. "No" prompts the phone not to do any auto redial, and the prompter disappears.

The auto-redial request can be cancelled at

any time, such as when you are calling another number, or even while the redial timer is still running.

Present ID (operator supported feature)

This invokes or overrules the supplementary CLIR (Calling Line Identification Restriction) service, which makes it possible for the calling party to prevent your identity from being revealed to the called party.

- On: Your phone number can be concealed to a recipient.
- Off: Your phone number can be revealed to a recipient.



Greetings

This menu allows you to set a greeting for the display texts when the phone is switched on.

Backlighting

This function allows you to set the lighting on for 15 seconds after a key is pressed or when an incoming call is detected.

LCD contrast

You can adjust the LCD contrast.

Auto answer

 
This menu is displayed on the window and is functioned only when the hands-free kit or car kit is connected. Also, this allows you to set

the auto answer function ON/OFF. When this function is set on, any incoming call will be accepted automatically.

Reset settings

This resets all settings to the factory defaults.



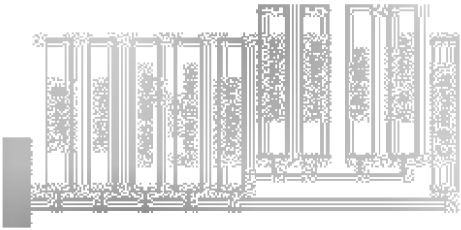

5. Call Info

This menu records the charges and the length of time or duration of all incoming and outgoing calls in hours, minutes, and seconds.

Last call

This displays the duration of the last call.

Total calls

This displays the total duration of all incoming and outgoing calls.

Auto display

This allows you to choose if you would like the duration to be displayed after ending a call.






1-minute beep

This sends you a warning every minute when you have a call in progress.

Charge info

Charges will be displayed after ending a call if your network service provides this information.


● Total charge

This displays the total charge of all the calls. Pressing  allows you to reset the value.

● Max charge

This allows you to set a maximum limit to your total cost. You cannot dial any number if you go over your limit.


● Unit price

This allows you to enter the price. Pressing  allows you to select different entry fields.

● Auto display

This allows you to choose if you would like the duration to be displayed after ending a call.

Call records

This function allows you to keep the information of the last 20 calls in your phone. You can use  to scroll through the records. Using

 allows you to enter the submenu in order to dial or to store a record in the phonebook.








6. Divert (operator supported feature)

This allows you to direct incoming calls from your phone number to another. (The phone number is assigned to the network but not to the phone.)

Not reachable

This allows you to divert incoming calls when your phone is beyond the network service area or when it is switched off. You can activate or deactivate this function simply by pressing  or . Pressing  allows you to exit this function.








No reply

This allows you to divert incoming calls when you don't respond to them.

All calls

This allows you to divert all incoming calls. You can activate or deactivate this function simply by pressing  or . Pressing  allows you to exit this function.

 
Busy

This allows you to divert calls when your phone is busy.

Cancel all

This cancels or switches off divert modes that are activated.



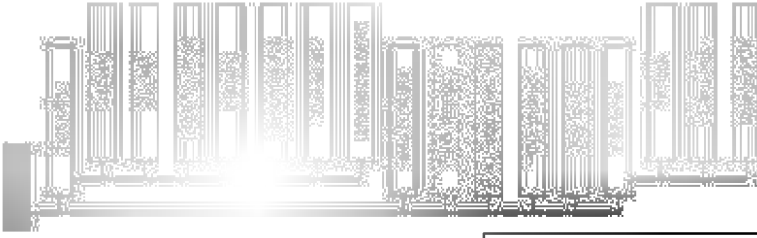

Note:
While PIN1 is enabled, 'PIN1 change' and 'PIN1 disable' appear on the screen in regular order. And PIN1 cannot be changed while PIN1 is disabled.

7. Security

Bar calls

This restricts incoming and outgoing calls.

- Outgoing

No outgoing calls.

- Out Int'l (international)

No outgoing international calls.

- Out ex. Home

No (outgoing) international calls if abroad (roaming). Only local and home country.

- Incoming

No incoming calls.

- Incoming if ab (abroad)

No incoming calls if abroad (roaming).

- Cancel all

Cancel all call barring.

Note: This service may sometimes not be supported by your network. Also, a network code is required to access this service.

- Change password

To ask network changing password of barring function.

Fixed numbers

This function dials only the numbers in the fixed dialing phonebook. (It requires a PIN2 number).

PIN1 change

Changes the PIN1 number and only appear when

PIN1 is enabled.

PIN1 enable

This enables the PIN1 to activate by inputting PIN no. When you switch the power on, the phone will prompt you to input the PIN1 number.

PIN1 disable


Cancels the PIN1 action by inputting PIN no.

PIN2 change

Changes the PIN2 number.

Note: The sequence of PIN1 enable/disable and PIN1/ PIN2 change can be changed according to the setting of PIN1 enable/disable.

Key lock

This allows you to lock the phone's keypad to prevent accidental key presses. When activated all the keys are automatically disabled 10 seconds after the last key presses. They can be enabled again either by an incoming call, or by simply pressing the Any key, followed by a number  .

SIM Lock

This function allows you to lock the phone with a specific SIM card. This feature is designed to prevent use of your phone by another person's SIM cards.

- Set lock

To activate the SIM lock function.

- Clear lock

To deactivate the SIM lock function, the PCK (personal control key) should be entered.

- Change PCK

This allows you to change the PCK code.

Note: The factory default PCK is (0000).



8. Network

This menu allows you to select and register with the network that you want the phone to use.

 
New search

You can search available networks and manually select one of them.

Sel. sequence

You can add to, delete from, and change the networks that are available in the list.



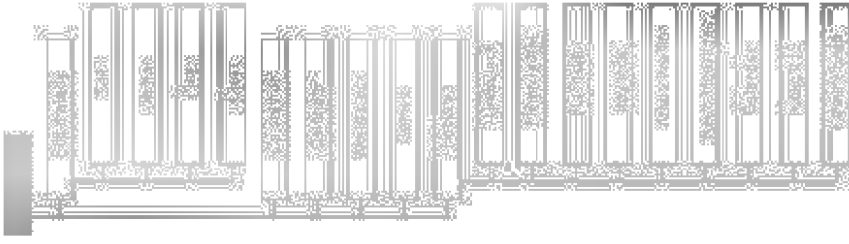

9. Advanced

Edit melody

This function allows you to create one new melody at the end of the ringer sound menu selection.

● Edit

This menu allows you to add or modify each note of the pre-defined ringer one by one.

● Tempo

This menu allows you to select the playing duration of each note of the pre-defined ringer.

● Play

This menu allows you to play the pre-defined ringer.





- Clear

This menu allows you to delete the pre-defined ringer.

Calculator


You can do simple additions, subtractions, multiplications, and divisions.

You may press  to select different operations; however, by holding  can be used to do additions.

Calendar

This function allows you to check calendar information.

- Noting Function

The function allows you to set up to 9 different notes at different selected date. You need to use the up/down key to select the date. After choosing the date, you can then use  key to browse the noting menu. There are four menu items to allow you to use the noting function: View day, Make note, Erase notes, and View all. You can make a note to set alarm at exact date/time or to send a short message to any specific phone number.

World clock

This function allows you to change the clock





when you are travelling around the world. You can choose any city where you are and the clock will be set automatically.

Games

Here we provide some games. You can refer to help the function on the menu.

Hot keys

You can set each number key a specified function by this menu, for example, flash dial etc. To establish the specified function, you can press and hold the number key when the phone is in idle mode.

When entering this menu, you can press  to view the function of each hot key. Pressing  will allow you to assign a new function to the key. The available functions are:

- Undefined

It means the hot key has no function.

- Listen to VM

Call your voice-mail box.

- Flash dial

Call a specified number. You can input the number by yourself or choose it from the phonebook.

- Key lock

Switch enable/disable the keylock.



- **Audio Profile**

Select a specified audio profile, for example, the silent mode.

- **Read Messages**

Go directly to the read menu.

- **Calendar**

Go directly to the calendar menu.

- **Present ID**

Go directly to the Present ID menu if you subscribe the network service.

- **1-minute beep**

This sends you a warning every minute when you have a call in progress.


10. How to use MENU during making a call

You may use some functions while you are calling the other party/parties. They are Volume, Conference, Names, Local names, Call records, Send Message, and Read Message.

Note: Please refer to the table content if you like to know any details on the functions mentioned above apart from Conference.

Volume



You can press  to increase or decrease the talking volume.



Conference

- *End Call*

This allows you to select and end a call among the multi-party call. This allows you to hold the current active call.

- *Swap*

To hold the current active call, and to change the currently held-call to an active-call.

- *Hold*

To hold a current active-call.

- *Un-hold*

To retrieve a current held-call, and to change it to an active call.

- *Join*

To change a current active-call to multi-party

call (current+held). Maximum call numbers are determined by network operator.

- *Private*

While multi-party calls are taken a place, you may select a call among the calls and change to an active-call. Then the other calls will become held-calls.

Names



You can view or search for a name which store in SIM, then do the feature like "Search" function in the phonebook (See P.23).

Local names


This menu is the same at the search menu unless the phonebook is stored in the phone.



Call records



This function allows you to keep the information of the last 20 calls in your phone. You can use  to scroll through the records. Using  allows you to enter the submenu in order to dial or to store a record in the phonebook.




Send Message

Selecting this menu allows you to input an address to which you would like to send a message, together with a short message content. To view different items in the submenu, including Send, Send & Store, and Save, press .

Read Message

Selecting this menu allows you to enter into a submenu that consists of 2 items: incoming and outgoing.

Selecting one of these 2 items will present you with a list of message headers that are currently stored in your SIM card.  indicates whether a message is unread or unsent.  indicates whether a message is read or sent.

Pressing  moves you one level back in the menu. Pressing  allows you to view the complete text of the selected message. Pressing  allows you to scroll through the texts.



8. Battery

- The phone is powered by a rechargeable battery, which can be recharged many times. However, the battery's performance will gradually be reduced with substantial use. Charge the battery when the power is weak. Remember that you will achieve better operation times when you regularly charge and discharge batteries.
- When a charger is not in use, disconnect it from its power source. Do not leave the battery connected to the charger for over a week. Overcharging may shorten a battery's life.
- Extreme temperature affects the ability of your battery to charge. It may require cooling or warming up first. If a battery temperature exceeds 40°C (104°F), it will not be charged.
- Do not use any damaged or worn-out batteries.
- Use the battery for its intended purpose. Avoid a battery short circuit. Short-circuiting of batteries occurs when a metallic object makes a direct connection on the terminals (+ / -).
- Do not leave the battery in extremely hot or cold places. This shortens battery life. A



battery exposed to hot or cold temperature will not allow the phone to function properly, even when the battery is fully charged. Keep the battery in cool places (between 15 °C to 25°C or 50°F to 77°F).

- Recycle used batteries. Do not dispose of batteries in a fire.





9. Care and Maintenance

Please treat your cellular phone with great care. The suggestions below will help you in taking care of your phone.

- Keep the phone and all its parts, as well as accessories, out of children's reach.
- Keep the phone dry because liquids contain minerals that will corrode electronic circuits.
- Keep the phone away from hot areas. High temperatures can shorten the life of electronic devices, melt plastics, and damage batteries.
- Keep the phone away from extremely cold areas.

- Do not attempt to open the phone or take it apart. Non-expert handling may damage the phone.
- Do not use harsh or damaging chemicals, cleaning solvents, or strong detergents to clean the phone. Simply wipe it with a soft dry or slightly dampened cloth.
- Use the battery type specified in the instructions, or as provided by the manufacturer.

