



Video Cassette Recorder

OWNER'S MANUAL

MODEL: EC470W/EC270W



**Before connecting, operating or adjusting this product,
please read this instruction booklet carefully and completely.**

Precaution & features Information



Position your VCR so that no bright light or sunlight falls directly onto it.

Care should be taken not to expose your VCR to any unnecessary vibration, moisture, dust or heat.

During electrical storms it is advisable to unplug both the aerial cable and mains plug to prevent accidental damage to your VCR and TV.

**Do not operate your VCR if it is damaged.
Your VCR should not be repaired by anyone
except qualified service personnel.**

Never remove the back cover of your VCR as this can expose you to very high voltage and other hazards. If your VCR does not operate properly, please check the Troubleshooting Check List (see p. 29). If your VCR still does not operate properly, unplug it and call your dealer.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.



Just to name a few examples of the extraordinary features:

- ez (easy) operations (see p. 26)
- Programmable 99 channel memory with Frequency synthesised tuner
- ACMS (Automatic Channel Memory System)
- 7 event/1 month programmable timer
- LP - Long Play - recording & playback
- Shuttle Controls (EC470W)
- ICON OSD (On Screen Display)
- Super Multi System
 - PAL (B/G, D/K)/SECAM (B/G, D/K)
 - MESECAM/NTSC 3.58/NTSC 4.43
 - NTSC Playback on PAL TV
- Logic & Picture Search
- Child Lock
- Auto Power on and Play
- Fine still, Frame advance & Fixed Slow functions (EC470W)
- Real Time Counter
- Quick Start function
- Auto Tracking System



Welcome to LG

Thank you for buying this LG video cassette recorder Model EC470W/EC270W.

Description	2 - 5	Advanced Operations	19 - 26
Precaution & Features information	2	Recording TV programmes	19 - 20
Remote Control Location & functions	4	Timer Recording Using On Screen Display	21 - 22
Your VCR's Controls	5	On Screen Display	23
Setting Up	6 - 14	Tape Counter Memory Stop	24
Connecting to your TV	6	Child Lock	24
Tuning in a video channel on your TV	7 - 8	Memory Shut-Off	25
How to Using the main menu	9	Self-Diagnosis	25
Tuning in TV Stations Automatically	10	ez (easy) operations	26
Tuning in TV Stations Manually	11 - 12	Helpful Hints	27 - 29
Changing the order of TV Stations	13	Controlling the TV	27
Deleting TV Stations	14	Tape Copying	28
Basic Operations	15 - 18	Specifications	28
Playback a tape	15 - 16	Troubleshooting Check List	29
To set the Colour System	17		
Setting the Clock Manually	18		


Table of Contents

Remote Control Location & functions

To install batteries:


Your REMOTE CONTROL HANDSET is powered by two AAA type batteries.

1. To insert them, push the tab backwards and lift off the cover of the handset.
2. Put the two batteries into the compartment making sure the + and - are correctly positioned.
3. Replace the cover.

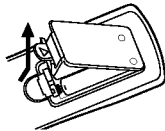


Your video recorder (VCR) is designed so that almost all of its features can be controlled from the REMOTE CONTROL HANDSET. Some features can also be controlled from the FRONT PANEL of the video recorder. The maximum operating distance that you may control your video recorder is about 7.5 metres (25 feet). It must also be within an angle of 30 degrees either side of the REMOTE SENSOR on the front of your video recorder.

To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the remote control handset for an extended period of time. Do not use batteries of differing age or type. Always discard batteries safely.

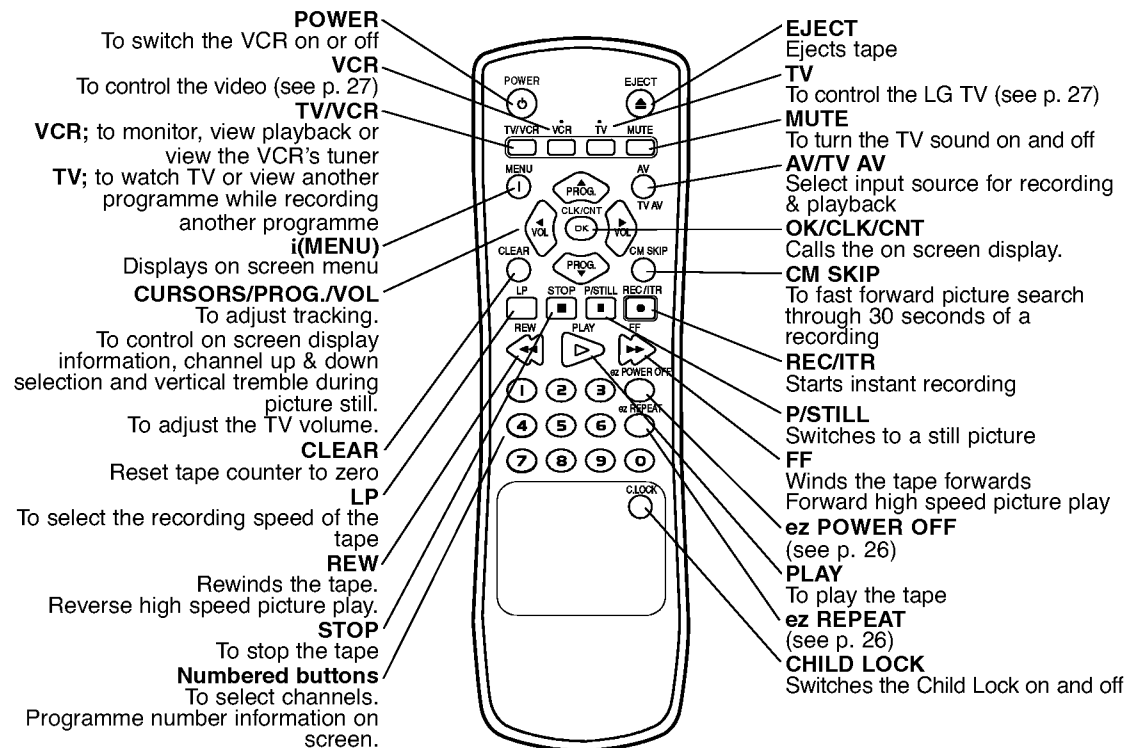



Each button on your VCR has the same function as its corresponding button on the remote control handset.

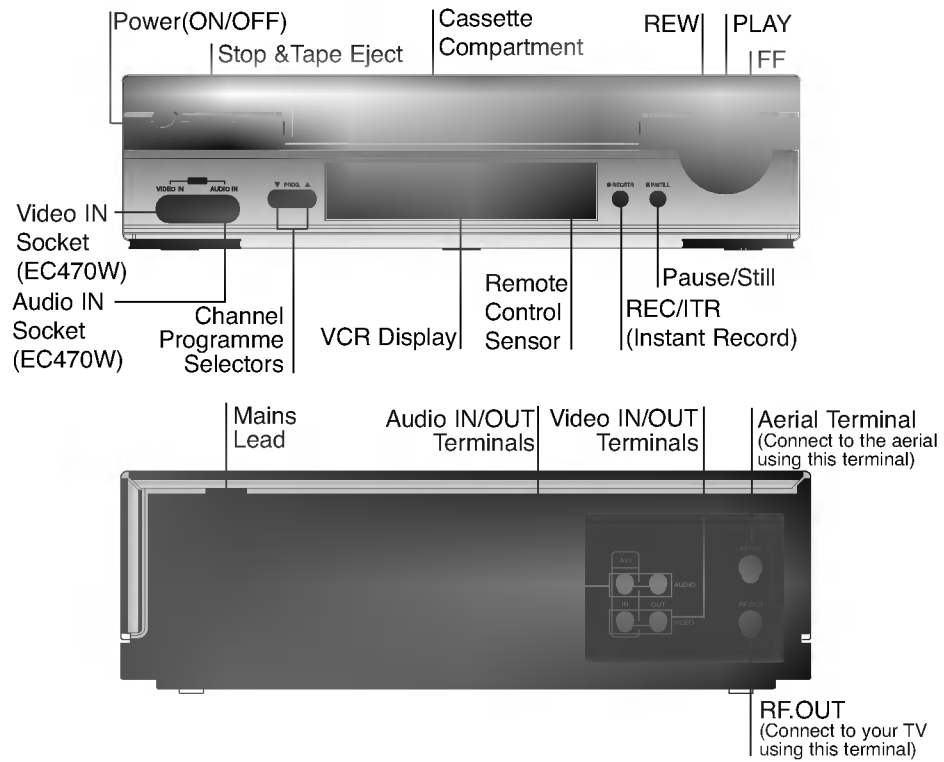


Your VCR's Controls

Connections To a TV


Using your VCR very first time

Following picture will display on the TV screen when you have just connected your video recorder for the very first time.

To make tuning TV stations, please follow stages 3 to 4 as shown "ACMS" (see p. 10).

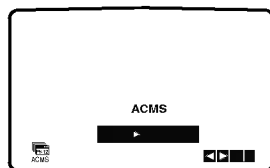

Make sure all connections are made with both your VCR and additional appliance unplugged from the mains to avoid damaging your equipment. Connecting a VCR using a RCA lead is one of the best ways to achieve optimum sound and picture quality from video-tape playback.

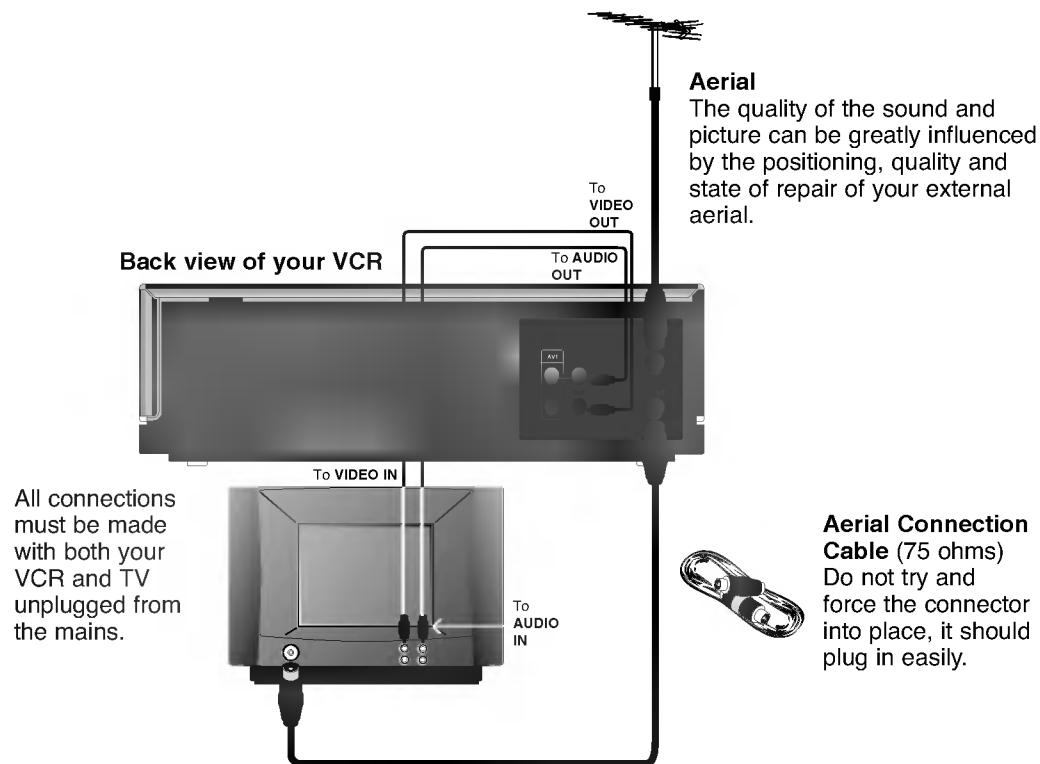



Your TV receives signals from the video recorder (VCR) like another TV station. You have to select a channel number on your TV and tune it in so that you may watch video tapes.


If you have used **AUDIO** and **VIDEO** cables then your TV should already have a dedicated video channel built into it, usually called **AV**.

1

Make sure that you have correctly installed your VCR as described earlier in this book.


Press **POWER** to turn on your VCR.

Turn on your TV.

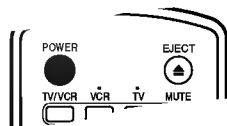

2

Insert a pre-recorded video tape into your VCR and press **PLAY** on the remote control.

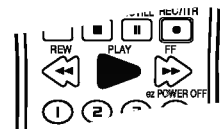

Select a TV channel number on which you wish to watch video's.

Don't worry if you don't have a video-tape to play at this stage!

If you switch your VCR on and continue stages **3 ~ 4**, instead of seeing video playback tune your TV until you see the test pattern screen.

3

Tune this channel until the video picture is sharp and the sound is clear.

If you have used a **AUDIO** and **VIDEO** cables you will not have to tune your TV, simply select the **AV** channel. The **AV** channel is already pre-tuned for optimum video playback on your TV.

4

Store this channel on your TV.

You will need to look at the TV instruction book if you do not know how to do this.

Tuning in a Video channel On your TV

The output frequency of this video recorder (VCR) is set at UHF channel 36. If channel 36 is already used by another TV station, or if the picture is distorted, you can change the transmitter channel of your VCR. Stages 5 ~ 8 will show you how to change the output frequency of your VCR.



Make sure that you have correctly installed your VCR and successfully tuned in a dedicated video channel on your TV. If you do not tune in a dedicated video channel on your TV you will be unable to view and record video tapes!

5

Only carry out stages 5 ~ 8 if you cannot obtain clear video playback as described in stages 1 ~ 4.

Select a TV channel number on which you wish to watch video's.

Make sure that your VCR is in standby by pressing **POWER** on the remote control. (only the clock will be displayed.)

6

Press **PROG. ▲** or **▼** on the front of your VCR for more than 4 seconds.

RF36 will appear in the VCR display.

7

Press **PROG. ▲** or **▼** to select another video channel.


You may select any channel number between 22 and 68.

You can also set it to "OFF" if there is any interference when your TV is connected to the VCR with a RCA lead.

8

Select a TV channel number on which you wish to watch video's.

Tune this channel so that the test pattern screen appears.

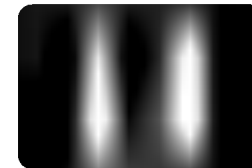

Store this channel on your TV.


Press **POWER** on the front of your VCR when you have finished.



This VCR can easily be programmed by using the menus displayed on screen.
The menus are controlled from the REMOTE CONTROL HANDSET.

1


Switch on your TV set and video recorder by pressing the **POWER** button.

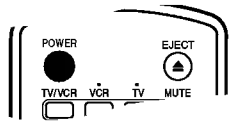

2

Press **i** button.


The main menu will appear on the TV screen.

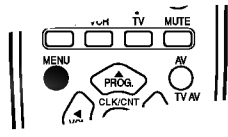

3



Press **◀** and **▶** to select the desired menu.

Press **OK** and press **▲** or **▼** to select.

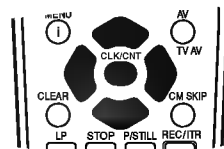

4

Press **i** to remove the menus from the TV screen.

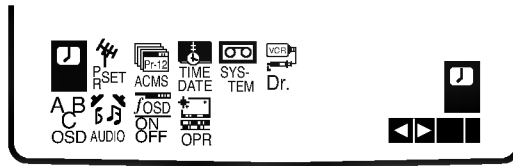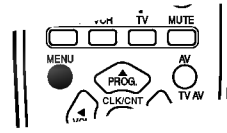

- **REC** - Timer recording setting (see p. 21 to 22).
- **PR SET** - Manual tuning setting (see p. 11 to 12).
- **ACMS** - ACMS (Automatic Channel Memory System) (see p. 10).
- **TIME DATE** - Date & clock setting (see p. 18).
- **SYSTEM** - To set the Colour TV System (see p. 17).
- **Dr.** - To check a problem with your VCR (see p. 25).

- **ABC OSD** - To change the language setting for OSD (see right).
- **AUDIO** - To select the channel of audio output according to your TV type ("B/G" for PAL B/G TV, "D/K" for PAL D/K TV, "I/I" for PAL I/I).
- **F.OSD ON/OFF** - To display the operational mode of your VCR (see p. 23).
- **OPR** - To improve the playback picture (see p. 16).
(Please note you may only see OPR when playing a tape.)

LANGUAGE SELECTION

You can select the language among English, Russian, Deutsch, Français and Polski.

How to Using the main menu


Tuning in TV stations Automatically



If the TV broadcast signal is weak your VCR may not detect the necessary information and will be unable to store them correctly. To overcome this problem please turn to the **MANUAL TUNING** section on page 11 to 12.

1

Press **POWER** to turn on your VCR.

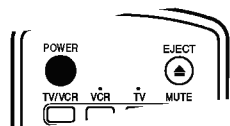



2

Press **i**.

The main menu will appear on the TV screen.

Press **◀** or **▶** to select the **ACMS**.



Press **OK**.

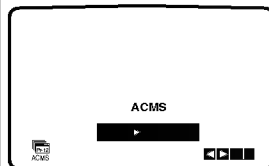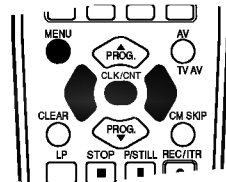

3

Press **◀** or **▶** to select the desired TV system according to in your area (I/I, B/G and D/K).



Press **OK** again to start the automatic tuning process.

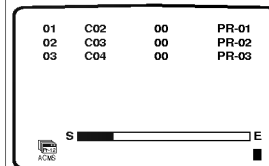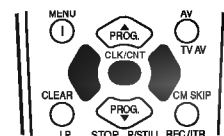

4

The TV station table will appear when tuning is complete.

Press **i** to save your settings.

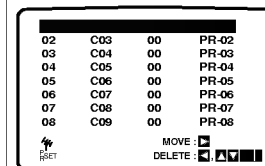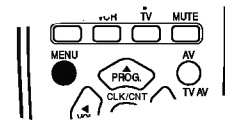

Tuning in TV stations Manually



In certain areas of the country broadcast signals may be too weak for your VCR's automatic tuning process to find or assign TV stations correctly. You must tune in these weaker broadcast stations manually in order for your VCR to store them.

1

Press **i**.

The main menu will appear on the TV screen.

Press **◀** or **▶** to select the **PR SET**.

Press **OK**.

PR	CH	MFT	STATION
01	█	00	PR-01

CHANNEL/CABLE : AV

2

Press **i**.

TV station table will appear.

Press **▲** or **▼** to select the programme number you want to tune. (for example, PR 09)

Press **OK**.

02	C03	00	PR-02
03	C04	00	PR-03
04	C05	00	PR-04
05	C06	00	PR-05
06	C07	00	PR-06
07	C08	00	PR-07
08	C09	00	PR-08

MOVE: **▶**
DELETE: **◀**

3

Press **OK** and press **◀** or **▶** to select the desired TV system according to in your area (I/I, B/G and D/K).

Press **OK** and press **AV** to select **C** (Standard stations) or **S** (Cable stations): C02 - C69, S01 - S41.

Enter the channel number of station that you want to tune with the **numbered buttons** or use **▲** or **▼** to find the required station.

4

Searching will stop when it locates a station.



Press **▶** to select **MFT**. Press **▲** or **▼** to adjust.

PR	CH	MFT	STATION
09	C 10	█	

CHANNEL/CABLE : AV

5

Press **▶** to select **STATION** and press **OK**.

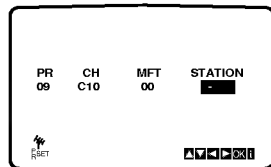
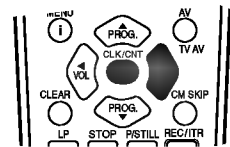


6

Press **▲** or **▼** to select **letters** and **numbers** for the new station name.

Press **◀** or **▶** to move back and forth between characters.



Press **OK**.

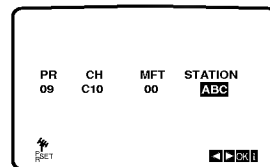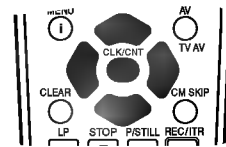

7

Press **i**, confirm the station placement.

Press **i** again.

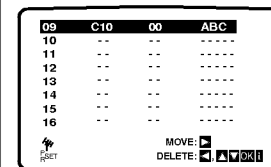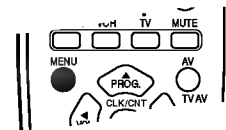

8

Your new TV station has now been tuned into your VCR.

If you wish to manually tune other stations repeat stages 1 - 7.

Changing the order of TV stations



After tuning TV stations into your VCR you may wish to **change** the order in which they are stored without having to retune them against! The instructions given on this page will show you how you can simply move them into your desired order.



1

Press **i**.

The main menu will appear on the TV screen.

Press **◀** or **▶** to select the **PR SET**.

Press **OK**.


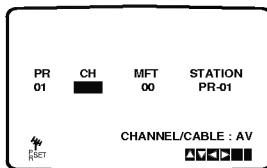
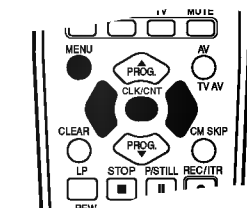


2

Press **i**.



Press **▲** or **▼** to select the **programme number** you want to move (for example, PR 03).

Press **▶**.

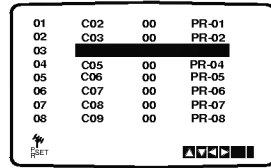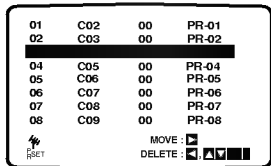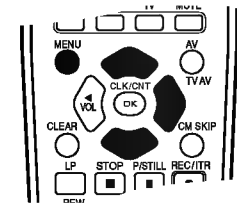

3

Press **▲** or **▼** to select the **programme number** you want to move to (for example, PR 05).

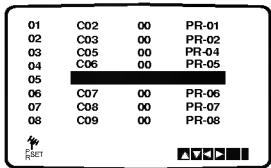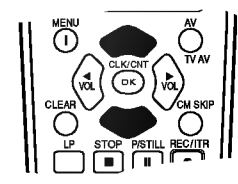



4

Press **OK**.

The selected **programme** will be moved to the **new programme number**.


If you wish to move other TV stations repeat stages 1 - 4.

Press **i** to remove the menus from the TV screen.

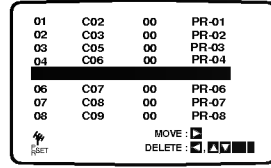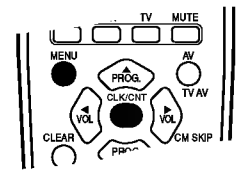


Deleting TV Stations

How to selecting Stored TV stations:
 Stored TV stations can be selected in either of two ways.
 Press PROG. ▲ or ▼ to select different stations that are tuned into your VCR.

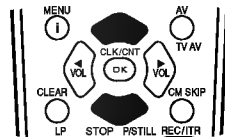



You may also directly select stations using the numbered buttons on the remote control.

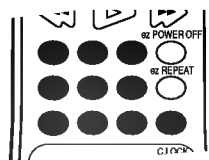

After tuning TV stations into your VCR you may wish to **delete** a station.
 The instructions given on this page will show you how easily delete any unwanted TV stations.



1

Press **i**.
 The main menu will appear on the TV screen.
 Press ◀ or ▶ to select the PR SET.
 Press **OK**.

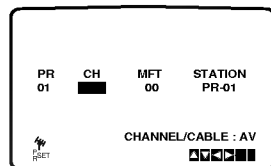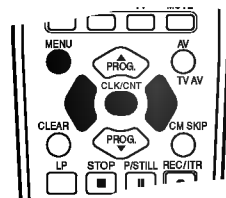



2

Press **i**.
 Press ▲ or ▼ to select the **programme number** you want to delete.
 (for example, PR 03)

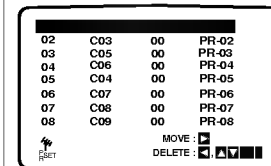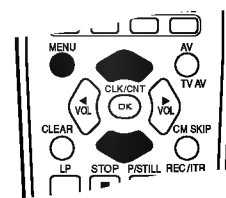


3

Press ◀.
 After a short while, the selected station will be deleted.
 The following stations are resorted automatically.

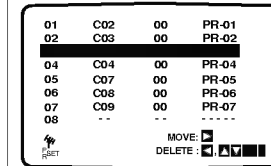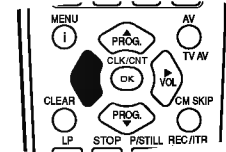

4

Press **i** to remove the menus from the TV screen.
 If you wish to delete other TV stations repeat stages 1 - 3.

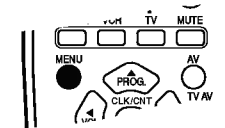

Playback a tape



You will only be able to load and eject video cassettes when your VCR is plugged into the mains. Your VCR may also playback recordings from NTSC tapes (on PAL TV).

Getting a better picture

 
When a cassette is inserted and playback started, the automatic tracking function works to get the best possible picture automatically. If the quality of the recording is poor, repeatedly press ▼ or ▲ on the remote control to manually adjust the tracking until any distortions have been removed.

1

Make sure that you have correctly connected your VCR as described earlier in this book.


Turn on your TV.

Press **POWER** to turn on your VCR.




Insert the video cassette into your VCR.

 The video cassette should have the window side facing up and the arrow facing away from you.



2

 Press **PLAY** to start playing your tape.



If you load a video cassette which has had its record protection tab removed playback of the cassette will start automatically.

 
AUTO TRACKING

Your VCR will automatically adjust the tracking to give the best picture quality.

3


Press **P/STILL** to still a picture.

Press **P/STILL** repeatedly to advance the tape frame by frame (EC470W).



Tapes can be paused for up to 5 minutes. After 5 minutes your VCR will stop the tape to prevent damaging the tape or your VCR .

Still picture quality can be improved slightly by pressing ▲ or ▼ (EC470W).

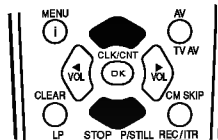

4


Press **PLAY** to continue playing your tape.

Picture search:

During playing back press either **FF** or **REW** to this will enable you to rapidly wind the tape (7 times normal playback) see where you are on the tape.

Logic search:

During fast forwarding or rewinding press and hold **FF** or **REW** the picture will be played back at 7 times normal playback speed.

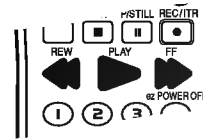

Picture search will only continue for about 3 minutes, after which your VCR will return to normal playback. During picture search, logic search, and CM Skip the sound is muted and there will be some noise streaks on the picture.

5

Slow motion playback, Shuttle (EC470W):

During playing back or still picture press ◀ or ▶.

You can reach the following playback speeds.

(-7xplay, -3xplay, -play, still, 1/19 slow, play, 2xplay, 7xplay)


To switch off the slow motion and shuttle, press the desired function.

During slow motion and shuttle, the noise bars may appear on the picture according to the status of tape.


If distortions can be seen in the picture, reduce them with ▲ or ▼.

6

Press **STOP** to end playback.

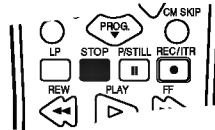

Press **EJECT**.

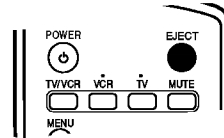


If the end of the tape is reached, your VCR will stop playback automatically, rewind, stop, eject the tape and place itself into power off mode.

CM (Commercial Message) Skip:

This feature enables you during playback of a tape to skip a commercial break in a few seconds, then resume normal playback.

 While tape is playing press **CM SKIP** on the remote control to skip commercial (or another programme material).



Repeatedly press **CM SKIP** to skip:

- 1 Press 30 seconds
- 2 Press 60 seconds
- 3 Press 90 seconds
- 4 Press 120 seconds
- 5 Press 150 seconds
- 6 Press 180 seconds

OPR (Optimum Picture Response):

This feature automatically improves playback picture quality by adjusting your VCR to the condition of the tape.

Press **i**.

Press ◀ or ▶ to select **OPR**.

Press **OK**.



Press ▲ or ▼ repeatedly to select: **OFF, SOFT** or **SHARP**.

Please note you may only see **OPR** when playing a tape.

Press **i** to remove menus from the TV screen.



To set the colour system

Press **i**.
The main menu will appear on the TV screen.

Press **◀** or **▶** to select the **SYSTEM** and press **OK**.

Press **▲** or **▼** to select according to the **COLOUR** system used.

Press **i** to remove the menus from the TV screen.

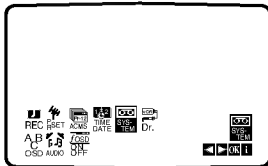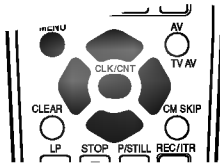


PAL settings

To record or play

AUTO:
Allows PAL or MESECAM signals to be distinguished automatically.

PAL:
Use when receiving PAL signals or use when playing back a tape recorded in PAL system.

MESECAM:
Use when receiving MESECAM signals or use when playing back a tape recorded in MESECAM system.

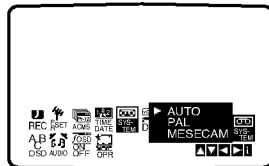


NTSC settings

During playback:

NTSC PB:
Use when playing back a tape recorded in the NTSC system on PAL TV.

NTSC 3.58:
Use when playing back a tape recorded in the NTSC system in 3.58 mode.


NTSC 4.43:
Use when playing back a tape recorded in the NTSC system in 4.43 mode.

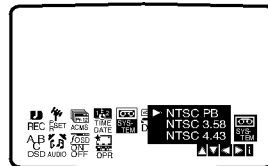

Set NTSC to record (Line Recording)

NTSC 3.58: Use when recording NTSC 3.58 signals.

NTSC 4.43: Use when recording NTSC 4.43 signals.

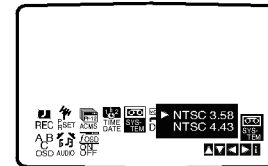

Setting the clock

Manually





The clock in your VCR controls time and date settings for your VCR.

1

Press **i**.

Press **◀** or **▶** to select **TIME DATE**.

Press **OK**.

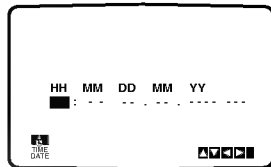
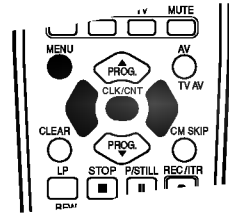


2

Use the **numbered buttons** on the remote control to alter the **HOURS, MINUTES, DAY, MONTH** and **YEAR**.



Please note your VCR uses a 24 hour clock. e.g. 1pm will be displayed as 13:00.

The day of the week will appear automatically when you enter the year.

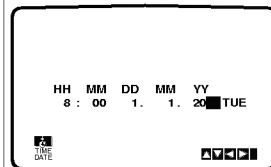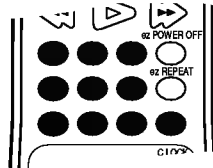

3


If you make a mistake press **◀** or **▶** and enter the correct details.

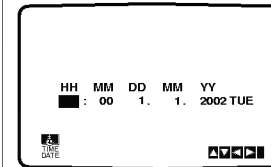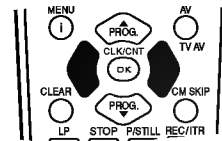

4

Press **i**.

Your new clock settings are stored and will appear on your video recorder's display.

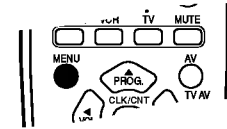




Your VCR allows you to make recordings using a variety of simple methods:
Instant Timer Recording (ITR) start recording immediately for a set period of time or until the video cassette runs out.

1

Make sure that you have correctly connected your VCR as described earlier in this book.


Press **POWER** to turn on your VCR.

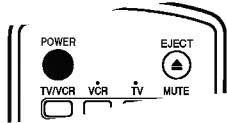

2


Insert a video cassette with protection tab into your VCR.

 The video cassette should have the window side facing up and the arrow facing away from you.




3

Press PROG. ▲ or ▼ to select the **programme number** you wish to record.

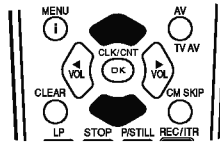


You may also directly select programme number using the **numbered buttons** on the remote control.

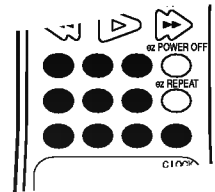

4

 If you wish to record external video from a sky decoder or satellite receiver using the VIDEO IN and AUDIO IN set the pre-set number to "AV1" or "AV2" by pressing the "AV" button.




AV 1 Sound and Picture recording using the VIDEO IN and AUDIO IN on the back of your VCR.

AV 2 Sound and Picture recording using the VIDEO IN and AUDIO IN on the front of your VCR (EC470W).

Recording TV programmes


If you do not wish to record on a tape (this can happen quite easily by accident!) remove the protection tab on the back edge of the video cassette.

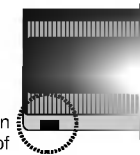

It is possible to record on a video cassette with the record protection tab removed by covering the hole with self adhesive tape.



Remember you can record one programme while watching another by starting your instant recording, press **TV/VCR** to select TV mode and then selecting a different channel on your **TV**.

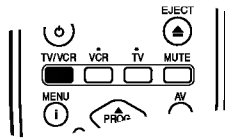


Your VCR incorporates Long Play (LP) which enables you to record up to twice the amount of time on a video cassette. For example an E-180 will record up to 180 minutes using Standard Play (SP); using LP you will be able to record up to 360 minutes. **Please note** there will be a slight loss in picture and sound quality when using LP.

5

Press **LP** if you wish to record in Long Play or Standard Play.

SP will produce improved picture and sound quality, however LP will provide twice as much recording time as SP. SP or LP will be displayed in your VCR display to let you know which you have selected.

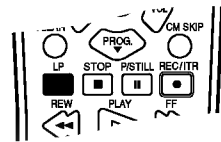


6

Press **REC/ITR** to start recording.

RECORD will appear on the TV screen.

Press **REC/ITR** several times. Each successive press will increase the record time by 30 minutes until you reach a maximum of 9 hours.

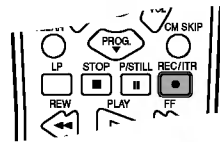


7

Press **P/STILL** to avoid recording unwanted scenes.

Press **P/STILL** to continue recording.

Tapes can be paused for up to 5 minutes; RECP will be displayed when a tape is paused. After 5 minutes your VCR will stop recording to prevent damaging the tape or your VCR.

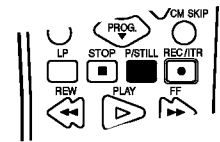



8

Press **STOP** to end recording.

Press **EJECT**.

EJECT will appear on the TV screen for a few seconds.

If the end of the tape is reached, your VCR will stop recording automatically, rewind, stop, eject the tape and place itself into power off.

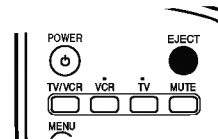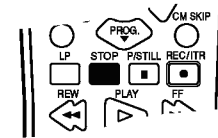




You may easily display the current time or tape counter, amount of tape left, day, month, year, day of week, programme channel, and operational mode of your VCR will appear on the TV screen. If a recording is taking place these On Screen Displays will not be recorded onto the tape.


1

Press **OK/CLK/CNT** to display.

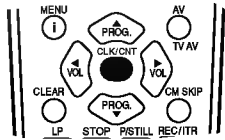

VCR Function/
Tape Speed/
System

Channel
Programme

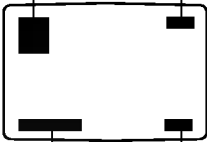


Day/Month/
Year/Day of
Week

Clock/Tape
Counter &
Amount of
Tape Left

Press **OK/CLK/CNT** repeatedly to cycle through the display options. The tape counter and amount of tape left will appear if there is a tape loaded.

2

Press **OK/CLK/CNT** again to remove all displays from the TV screen.

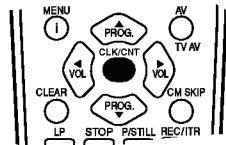

If you have set the OSD ON/OFF to OFF in the main menu, function OSD(On Screen Display) will not be displayed.

On Screen Display

Tape Counter Memory Stop

Child Lock




The **Digital Tape Counter** can be displayed on your TV screen instead of the time by pressing **OK/CLK/CNT** on the remote control. The Digital Tape Counter indicates the relative positions of recordings on the tape.

1

Press **OK/CLK/CNT**. Press **CLEAR** to set the counter to 0:00:00.

Press **PLAY** or start recording.

The tape counter will display the actual play time in hours, minutes and seconds.

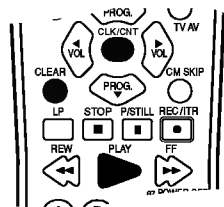


2

Press **STOP** when playback or recording is complete.

Press **REW**.

The tape will rewind and automatically stop when the counter returns to 0:00:00.

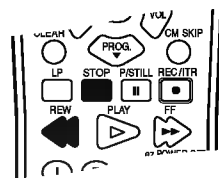

The control buttons on the front of the VCR can be switched off so that your VCR can only be operated using the remote control.

1


Press **C.LOCK**.

SAFE will appear on the TV screen for a few seconds.

SAFE will appear in your video recorder's display for a few seconds.

None of the buttons on the front of your VCR will work (except **EJECT**).

If any buttons on the front of your VCR are pressed **SAFE** will appear in your video recorder's display and on the TV screen for a few seconds.

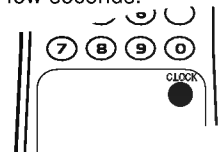

2

Press **C.LOCK** again to switch off the child lock.

OFF will appear in your video recorder's display for a few seconds.

Memory Shut-Off

Self-Diagnosis


Automatic Memory Shut-Off

This feature of your VCR enables you to switch off your VCR automatically after tape rewind has been completed.



1

Press **POWER** during tape rewind.

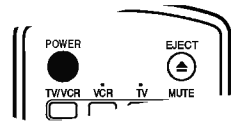

2

The tape will rewind to the beginning and your VCR will automatically switch itself off.

Self-Diagnosis (VIDEO DOCTOR)

This feature informs you that there is a problem with your VCR. These error messages will appear on the TV screen and in your video recorder's display.



1

Switch on your VCR.

Press **i**.

Press **◀** or **▶** to select **Dr.**

Press **OK**.

2

Press **▲** or **▼** to check a problem.

HEAD STATUS

- **PLEASE CLEAN:**
Clean your video heads.

TAPE STATUS

- **NOT RECORDABLE:**
Insert a tape with its protection tab in place



NO. OF TIMER PROGRAMME

- **2**
Shows the number of timer recording.

NEXT TIMER PROGRAMME

- **PR-01 26 10:00~11:00 SP**
Shows the current status of timer recording.

Press **i**.

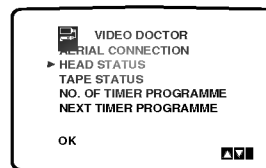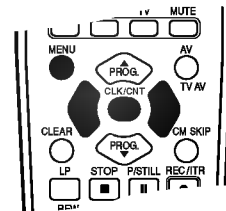

ez (easy) operations




ez (easy) power off : The sequence of “Stop → Rewind → Eject → Power Off” is operated automatically by pressing **ez POWER OFF**.


ez (easy) repeat : By pressing & holding **ez REPEAT** during play back, the holding section is replayed twice automatically.

ez (easy) power off

During play back press **ez POWER OFF**.

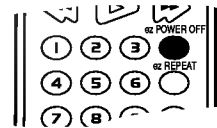


Your VCR will be operated as the following ;

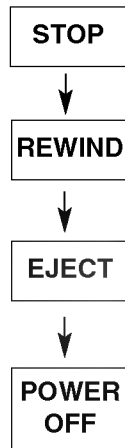

ez (easy) repeat

During play back, press & hold **ez REPEAT** at the point where repeat play is to be concluded. Then, your VCR will go into reverse search.

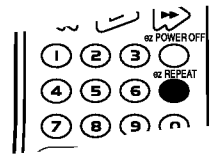

Release **ez REPEAT** at the point where repeat play is to start.

The holding section is replayed twice automatically.

Pressing **PLAY** again during repeat play, will return to normal play.



ez (easy) operation

If you press **PLAY, FF, REW, EJECT** or **REC/ITR** button when the power of this unit is off and a tape is inserted. The power turns on automatically and then the appropriate operation will work as below.

Press	Operation
PLAY	Power On → Play back the tape
FF	Power On → Fast-forward the tape
REW	Power On → Rewind the tape
EJECT	Eject the tape → Power Off
REC/ITR	Power On → Enter pause record mode If a cassette with no safety tab is loaded, the cassette will be ejected automatically.

Controlling the TV




Your remote control is capable of operating your VCR as well as limited functions of LG TV. Follow the instructions below to operate for your LG TV.

1


Before using the remote control, press the **VCR** or **TV** button to select the device to be operated.

To switch the remote control mode (to operate a different device), be sure to press the **VCR** or **TV** button first.

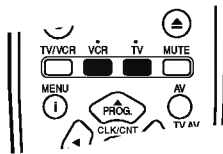

2

The **POWER**, **PROG.(▲/▼)**, **VOL(◀▶)**, **MUTE** and **TV AV** buttons on remote control are activated for controlling LG TV.

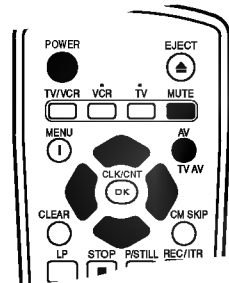

3

Setting Remote Control Codes for LG TV

- This remote control supports two remote control codes for LG TV: Code 1 and Code 2.
- When the unit is shipped from the factory, the remote control is set to Code 1.
If your LG TV is not operated, set the remote control to Code 2.
- To set the remote control to Code 2, hold down both the **TV** button and “**2**” number button on the remote control. (If the batteries in the remote control are replaced while the remote control is set to Code 2, the setting will revert Code 1.)
- To set the remote control back to Code 1, hold down both the **TV** button and “**1**” number button on the remote control.



If the remote control does not operate your particular TV, try one of the other code or use the remote control originally supplied with the LG TV.

Due to the variety of codes used by manufacturer, OUR COMPANY cannot guarantee that the remote control will operate every model of the LG TV.


Tape Copying

Specifications

The design and specifications are subject to change without notice.

A second VCR (for tape copying) should be connected to the AUDIO IN and VIDEO IN terminals on the front of your VCR (EC470W) or from the back of your VCR. Remember to select the appropriate audio/video mode by pressing the **AV** button on the remote control.

Back view of your VCR
Place the blank video tape that you wish to record **ON** into this VCR

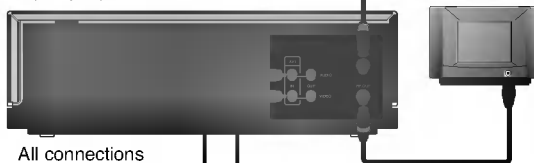

All connections must be made with both your VCR's and TV unplugged from the mains

RCA Lead
If you use a RCA lead picture quality will be improved

Back view of playing VCR
Place the video tape that you wish to record **FROM** into this VCR

General

Power	110-240V~, 50/60Hz.
Power consumption	Approx. 12 Watts (Energy saving mode: 3 Watts)
Video Head System	Double azimuth 4 heads, helical scanning (EC470W). Rotary 2 heads, helical scanning (EC270W).
Tape speed	23.39 mm/sec (SP mode)/ 11.69 mm/sec (LP mode).
Tape format	Tape width 12.7 mm (0.5 inch).
Maximum recording time	4 hours (SP mode, E-240 tape)/ 8 hours (LP mode, E-240 tape).
Rewind time	Approx. 65(±10) sec.(E-180 tape).
Dimensions	360 x 94.5 x 230 mm (W x H x D)
Weight	3.2 Kg.
Operating temperature	5°C - 35°C
Operating humidity	Less than 80%.
Timer	24 hours display type.

Video

Television system	CCIR standard (625 lines, 50 fields)
Recording format	PAL/SECAM colour signal PAL/MESECAM/NTSC 3.58/ NTSC 4.43
RF Reception	PAL/SECAM (B/G, D/K, I/I)
RF Output	PAL K/G
Input level	VIDEO IN (RCA type) 1.0 Vp-p, 75 Ohm, unbalanced
Output level	VIDEO OUT (RCA type) 1.0 Vp-p, 75 Ohm, unbalanced
Signal to noise ratio	More than 43 dBm.
RF Modulator	UHF 22-68 (Adjustable)

Audio

Input level	AUDIO IN (RCA type) -6.0 dBm, more than 47 kohms
Output level	-6.0 dBm, less than 1 kohms
Track	Mono track
Frequency response	100 Hz-10 kHz (-6/+3 dBm)
Signal to noise ratio	More than 43 dB (at SP mode)



Video Head Cleaning

Dirt accumulating on the head after a long period of time can cause the playback picture to become blurred or broken up. High quality video cassette tapes will not normally deposit dirt onto the video head, but old or damaged tapes might. Clean the video heads with a commercially available video heads cleaning tape.

Symptom	Check points	Symptom	Check points
No picture & no sound	<p>Is the mains plug plugged in and switched on?</p> <p>Is the TV switched on?</p> <p>Try another channel, maybe a weak signal.</p> <p>Check aerial is it plugged in? Check aerial, is the lead broken or damaged?</p> <p>Have you tuned in a dedicated channel on your TV to watch video on?</p> <p>If you have used a RCA lead to connect your VCR and TV have you selected the AV channel on your TV?</p> <p>Check tuning, carry out Automatic Tuning again</p>	Video cassette cannot be inserted	<p>Is the cassette compartment empty?</p> <p>Are you trying to insert the cassette the right way round?</p>
No playback or poor picture	<p>Are the TV channels tuned in properly?</p> <p>Have you tried using another cassette?</p> <p>Can you minimise the noise bars to an acceptable level with the ▲ or ▼ buttons?</p>	Remote control does not work	<p>Is the mains plug plugged in and switched on?</p> <p>Is the VCR switched on</p> <p>Check the batteries in remote control.</p>
TV programmes cannot be recorded	<p>Can you get a picture on the TV?</p> <p>Are the aerial leads and special RF connector lead between your VCR and TV connected?</p> <p>Are the TV channels tuned in properly; are they tuned in order?</p> <p>Has the safety tab on the video cassette been removed to prevent recording?</p> <p>Try another station, maybe a weak signal</p> <p>Check aerial is it plugged into TV?</p>	The top of the playback picture is unstable	<p>Is the video cassette damaged, have you tried using another one?</p> <p>Adjust the horizontal control on your TV.</p> <p>Check aerial is it plugged into VCR?</p> <p>Check aerial, is the lead broken or damaged?</p> <p>Check for local interference</p>
		Auto Play does not work	<p>Has the safety tab been removed from the video cassette?</p>

Troubleshooting Check List



P/N:3834RP0079R