



HI-FI MICRO CD COMPONENT SYSTEM OWNER'S MANUAL

**MODELS: FFH-1920AD, FE-1920E
FFH-1950AD, FE-1950E
FFH-1960AD, FE-1960E**

Please read this manual carefully before operating


the unit.

Some illustrations are subject to change
without prior notice or improvement.



for CE region

Precautions

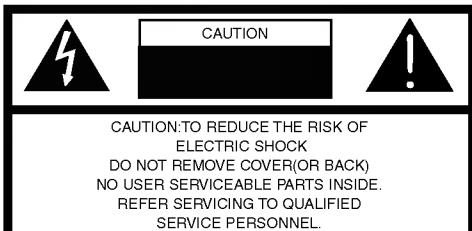

Explanation Graphical Symbols:



The lightning flash with arrowhead symbol, within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING:

TO REDUCE THE RISK OF FIRE OF ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE. To avoid electrical shock, do not open the cabinet. Refer servicing to qualified personnel only.



Use of controls or adjustments or performance of procedures other than those specified herein may result in hazardous radiation exposure.

The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

(FOR THE CUSTOMERS IN EUROPE)

If this product is marked with the CE-symbol, it means which is conforms to EMC regulation 89/336/EEC.



Laser component in this product is capable of emitting radiation exceeding the limit for Class 1.

CAUTION: INVISIBLE LASER RADIATION WHEN OPEN AND INTERLOCKS DEFEATED. AVOID EXPOSURE TO BEAM.

WARNING: OSYNLIG LASERSTRÄLNING NÄR DENNA DEL ÄR ÖPPNAD STRÄLEN ÄR FARLIG.

Attention: Quand l'appareil est ouvert, ne pas s'exposer aux radiations invisibles du faisceau laser.

This label is located on the interior.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASSE 1 LASER APPARAT
CLASSE 1 PRODUIT LASER

This Compact Disc player is classified as a CLASS 1 LASER product. The CLASS 1 LASER PRODUCT label is located on the exterior.

(FOR CUSTOMERS IN CANADA)

CAUTION: TO PREVENT ELECTRIC SHOCK, DO NOT USE THIS (POLARIZED) PLUG WITH AN EXTENSION CORD, RECEPTACLE, OR OTHER OUTLET UNLESS THE BLADES CAN BE FULLY INSERTED TO PREVENT BLADE EXPOSURE.

This class B digital apparatus meets all requirements of the Canadian Interference-Causing Equipment Regulations.

Warning:

Do not install this equipment in a confined space such a book case or similar unit.

WARNING:

SHOCK HAZARD - DO NOT OPEN

MISE EN GARDE:

Pour éviter les chocs électriques, n'utilisez pas cette fiche (polarisée) avec une rallonge, un réceptacle ou une autre prise si vous ne pouvez pas y insérer les bouches à fond.

MISE EN GARSDE

Cet appareil numérique de la classe B respecte toutes les exigences de Règlement sur le matériel brouilleur de Canada.

AVERTISSEMENT

RISQUE DE CHOC ELECTRIQUE-PAS OUVRIR

Note to CATV system Installer:

This reminder is provided to call the CATV system installer's attention to Article 820-40 of the NEC that provides guidelines for proper grounding and, in particular, specifies that the cable ground shall be connected to the grounding system of the building, as close to the point of cable entry as practical.

(FOR CUSTOMERS IN THE UNITED STATES OF AMERICA)

NOTE:

The interference potential to the device.

This equipment generates and uses radio frequency energy and if not installed and used properly, that is in strict accordance with the manufacturer's instructions, may cause interference to radio and television reception. It has been type tested and found to comply with the limits for a Class B computing device in accordance with the specifications in subparts J of Part 15 of FCC Rules, which are designed to provide reasonable protection against such interference in a residential installation. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reposition or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

(FOR CUSTOMERS IN THE UNITED KINGDOM)

WIRING INSTRUCTIONS

This appliance is supplied with a BS1363 approved 3 amp fused mains plug. When replacing the fuse always use a 3 amp BS1362 approved type. Never use this plug with the fuse cover omitted. To obtain a replacement fuse cover contact your supplying dealer or "LG ELECTRONICS U.K.LTD".

If the mains sockets in your home differ, or are not suitable for the type of plug supplied, then the plug should be removed and a suitable type fitted. Please refer to the wiring instructions below:

Warning: The mains plug severed from the mains lead of this appliance must be destroyed. A mains plug with bared wires is hazardous if engaged in a mains output line socket.

IMPORTANT

The wires in this mains lead are coloured in accordance with the following codes:

Blue	:	Neutral
Brown	:	Live

As the colour of the wires in the mains lead of this appliance may not correspond with the coloured markings identifying the terminals in your plug, proceed as follows:

The wire which is coloured blue must be connected to the terminal which is marked with the letter N or coloured black.

The wire which is coloured brown must be connected to the terminal which is marked with the letter L or coloured red.

If a 13 amp BS1363 plug or any other type of plug is used, 3 amp BS1362 approved fuse must be fitted either in the plug or at the distribution board.

Warning:

Do not connect either wire to the earth pin, marked with the letter E or with the earth symbol + or coloured green or green and yellow.

Table of Contents

INTRODUCTION

Precautions	2
Table of Contents	3
Before Use	4
Safety Precautions	4
Notes on Discs	4
Notes on Remote Control	4
Front Panel/ Rear Panel	5
Remote Control	6
Display Window	6
Connections	7
Speaker System Connection	7
Antenna (Aerial) Connections	7

BEFORE OPERATION

Setting the Voltage (OPTIONAL)	8
Setting the CLOCK	8
Sleep Function	8
Timer Function	9
Audio Adjustment	10
Volume Adjustment	10
Sound Quality Adjustment	10
MUTE	10
SURROUND	10
XDSS (Extreme Dynamic Sound System)	10
Reception of RDS (Radio Data System) Stations	10
Auxiliary Function	10

OPERATION

Presetting the radio stations	11
Listening to the radio	11
Tape Playback	12
Basic Playback	12
To Stop Play	12
Tape Counter Reset	12
To Play Fast Rewind or Fast Forward	12
Recording	12
Basic Setting	12
Recording from Radio, CD or Auxiliary source	12
CD to Tape Synchronized Recording	12
CD Playback	13
Basic Playback	13
To Pause Play	13
To Stop Play	13
To Skipping the Track	13
To Play Fast Rewind or Fast Forward	13
To Repeat Play	13
To Program Play	14

REFERENCE

Troubleshooting	14
Specification	15

About the symbols for instructions

-  Indicates hazards likely to cause harm to the unit itself or other material damage.
-  Indicates special operating features of this unit.
-  Indicates tips and hints for making the task easier.

Before Use

Safety Precautions

Handling the unit

When shipping the unit

The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packed at the factory.

To keep the surface clean

Do not use volatile liquids, such as insecticide spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface.

Cleaning the unit

To clean the cabinet

Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents, such as alcohol, benzine, or thinner, as these might damage the surface of the unit.

 
Notes on Discs

Handling discs

Do not touch the playback side of the disc.

Hold the disc by the edges so that fingerprints will not get on the surface.

Do not stick paper or tape on the disc.




Storing discs

After playing, store the disc in its case.

Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

Cleaning discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.

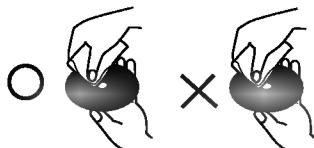

Do not use strong solvents such as alcohol, benzine, thinner, commercially available cleaners, or anti-static spray intended for analog records.

 
Notes on Remote Control

Remote Control Operation Range

Point the remote control at the remote sensor and press the buttons.

- **Distance:** About 23 ft (7 m) from the front of the remote sensor.
- **Angle:** About 30° in each direction of the front of the remote sensor.


Remote control battery installation



Caution


Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).

Front Panel/ Rear Panel

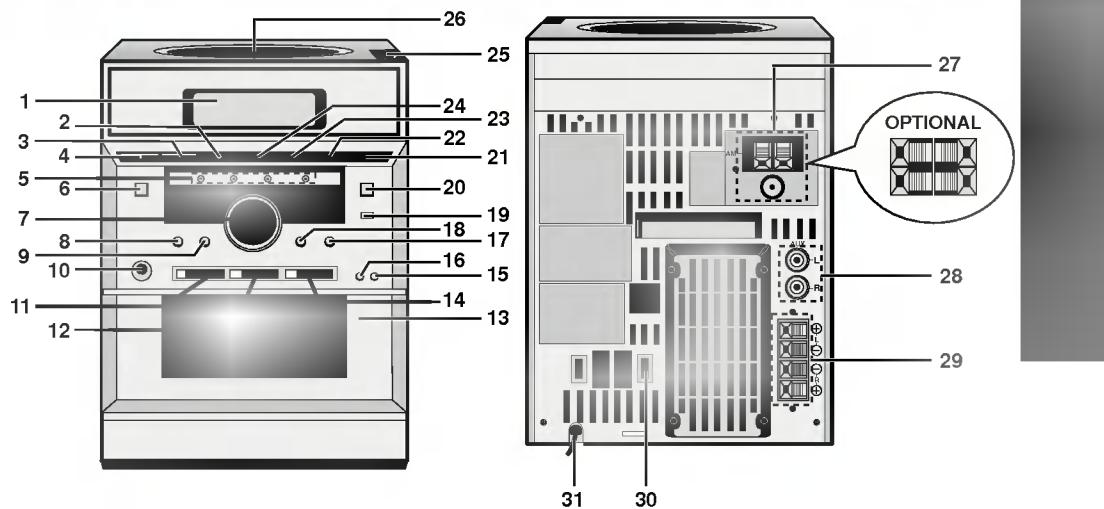


1. DISPLAY
2. • BACKWARD PLAY (◀) button : OPTIONAL
3. • PRESET (-) button
4. • PLAY MODE button : OPTIONAL
5. • COUNTER RESET button : OPTIONAL
6. RECORD/ RECORD PAUSE (●.REC/II) button
7. TUNER/ CD/ TAPE/ AUX indicators
8. POWER (○ STANDBY/ON) button
9. VOLUME (-)/(+) knob
10. CD SYNC. button
11. EQUALIZER (EQ) button
12. ▲ PUSH EJECT position -DECK
13. XDSS button
14. TIMER button
15. CLOCK button
16. MODE/RIF button
17. RDS button
18. • COUNTER RESET button (COUNTER) : OPTIONAL
19. AM/ FM SELECT (BAND) button
20. FUNCTION SELECT (FUNCTION) button (TUNER/ CD/ TAPE/ AUX)
21. • TUNING (+) button - TUNER
22. • TUNING (-) button - TUNER
23. • SKIP (▶◀) button - CD
24. • SEARCH (+) button - CD
25. • SEARCH (-) button - CD
26. • FAST FORWARD PLAY (▶▶) button -TAPE/ CD
27. • FAST REWIND PLAY (◀◀) button -TAPE/ CD
28. • FORWARD PLAY (▶) button
29. • PRESET (+) button
30. • STOP (■) button
31. • CLEAR button
32. CD OPEN(▲) button
33. CD DOOR
34. ANTENNA TERMINAL
35. AUXILIARY INPUT SOCKET
36. SPEAKER TERMINAL
37. VOLTAGE SELECT SWITCH : OPTIONAL
38. POWER CORD

Remote Control

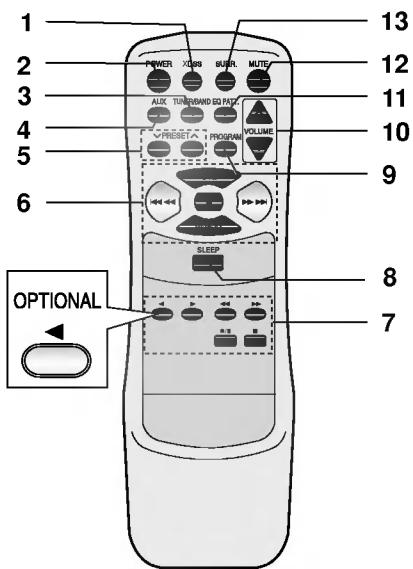


1. XDSS button
2. POWER button
3. TUNER/ BAND button
4. AUX button
5. PRESET (V/A) button
6. CD FUNCTION buttons
 - PLAY/PAUSE (▶/II) button
 - CD STOP (■) button
 - SKIP (◀/▶) button
 - FAST REWIND/ FAST FORWARD PLAY (◀◀/▶▶) button
 - REPEAT button
7. TAPE FUNCTION buttons
 - RECORD/ RECORD PAUSE button (●/II)
 - BACKWARD PLAY button (◀) : OPTIONAL
 - FORWARD PLAY (▶) button
 - TAPE STOP button (■)
 - FAST FORWARD PLAY (▶▶) button
 - FAST REWIND PLAY (◀◀) button
8. SLEEP button
9. PROGRAM button
10. VOLUME CONTROL (V/A) button
11. EQUALIZER PATTERN (EQ PATT.) button
12. MUTE button
13. SURROUND (SURR.) button

Display Window

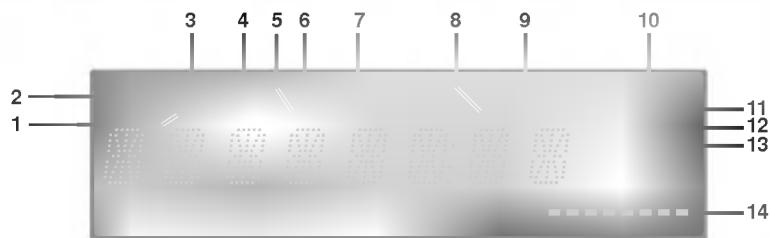

1. MUTE indicator
2. CD PLAY/PAUSE indicator
3. XDSS (Extreme Dynamic Sound System) indicator
4. TIMER indicator
5. CD SYNCHRO RECORDING indicator
6. SLEEP indicator
7. PROGRAM indicator
8. RDS indicator
9. FM STEREO indicator
10. CD REPEAT indicator
11. RECORD/ RECORD PAUSE indicator
12. TAPE PLAY DIRECTION indicator
13. PLAY MODE indicator (OPTIONAL)
14. • VOLUME indicator
 - SOUND LEVEL METER

Connections

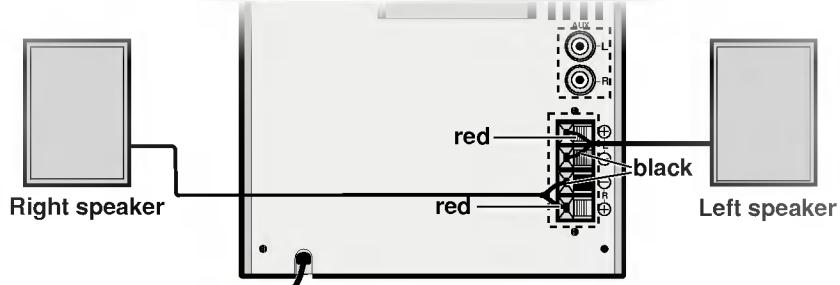


Notes

- Be sure to match the speaker cord to the appropriate terminal on the components: + to + and – to –. If the cords are reversed, the sound will be distorted and will lack base.
- If you use front speakers with low maximum input rating, adjust the volume carefully to avoid excessive output on the speakers.
- Do not disassemble the front cover of supplied speaker.

Antenna (Aerial) Connections

Connect the supplied FM/AM antennas for listening to the radio.

- Connect the AM loop antenna to the AM antenna connector.
- Connect the FM wire antenna (or FM "T" antenna) to the FM $75\Omega/300\Omega$ coaxial connector.

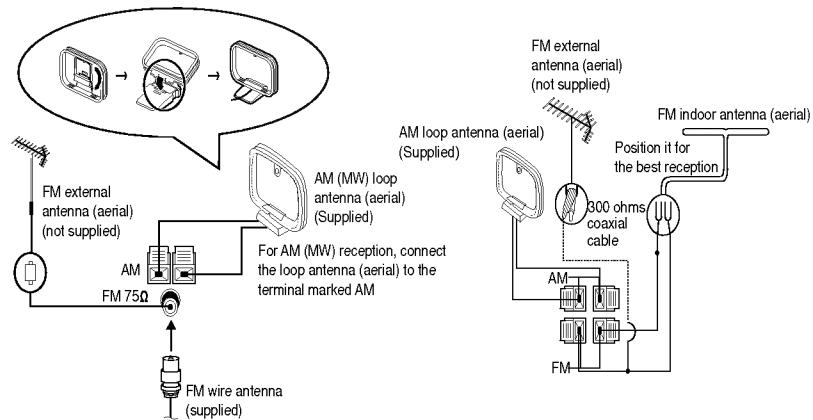

Notes

- To prevent noise pickup, keep the AM loop antenna away from the unit and other components.
- Be sure to fully extend the FM wire antenna.
- After connecting the FM wire antenna, keep it as horizontal as possible.

Setting the Voltage (OPTIONAL)

If your set is equipped with a voltage selector at the back side, be sure to set it to your local power supplied before connecting the AC power cord.

Setting the CLOCK

- 1** Press **CLOCK**.
(If the clock requires setting, press and hold **CLOCK** for more than 2 seconds.)
- The hours begin to flash.
- 2** Select a 24 hour cycle or 12 hour cycle by pressing **PRESET (-)/(+)**.



or



- 3** Press **SET** to confirm the selected hour cycle.

- 4** Use **PRESET (-)/(+)** to set the correct hours.
- 5** Press **SET**.
- 6** Use **PRESET (-)/(+)** to set the correct minutes.
- 7** Press **SET** and the correct time is shown on the display.
- 8** Press **CLOCK** at any time to display the time for about 3 seconds.

Sleep Function

When the sleep timer is used, the power is automatically turned off after the specified time has elapsed.

- 1** To specify the time delay before the power is turned off, press **SLEEP**.
In the display window you can see **SLEEP 90** for about 5 seconds. This means that the system turns off automatically after 90 minutes.
Each time the button is pressed the time interval before it turns off is reduced by 10 minutes. i.e. 80...70... etc.
Select the desired time to turn off.
- 2** To check the remaining time until the power is turned off.
While the sleep function is active press **SLEEP** briefly. The time remaining until it turns off is displayed for about 5 seconds.

Note

If you press **SLEEP** while the sleep time is displayed, the **SLEEP** time is reset.

To cancel the sleep timer mode

If you wish to stop the function, press the **SLEEP** button repeatedly until **10** appears, and then press **SLEEP** once again while **10** is displayed.

Timer Function

With the TIMER function you can have the radio reception and recording, CD play, tape play or auxiliary source play and recording turned on and off at the time desired.

- 1** Press CLOCK to check the current time.
- 2** Press "TIMER" to enter the timer setting mode.
(If you want to correct the previous memorized TIMER setting, press and hold the "TIMER" button more than 2 seconds.)
The previous memorized timer on time and "TIMER" appears in the display. Each function : TUNER-CD-TAPE flashes in the display window in turn.
- 3** Press SET when the desired function is flashing.
- 4** If you select the TUNER:
PLAY and REC flash in the display window alternately for about 3 seconds. Press SET to confirm the desired operating mode.
REC: TUNER recording and play
PLAY: TUNER play only
 - If you have selected the CD or TAPE, ignore step 4.
- 5** When you have selected the TUNER:
Select the previous memorized preset number with PRESET (-)/(+) and press SET.
The hour "ON" display flashes.
 - If you have selected the CD or TAPE, ignore step 5.
- 6** Set the hour to switch on by pressing PRESET (-)/(+).
- 7** Press SET to confirm the hour to switch on.
The minute "ON" display flashes.
- 8** Set the minute to switch on by pressing PRESET (-)/(+).
- 9** Press SET to confirm the minute to switch on.
The hour "OFF" now flashes in the display.
- 10** Set the hour to switch off by pressing PRESET (-)/(+).
- 11** Press SET.
- 12** Set the minute to switch off by pressing PRESET (-)/(+).
- 13** Press SET.
- 14** Adjust the volume level by pressing PRESET (-)/(+).
- 15** Press SET.
"TIMER" appears in the display window and the timer setting has been completed.
- 16** Switch the system off.
The selected function is automatically switched on and off at the time set.

To cancel or check the timer

Each time the "TIMER" button is pressed you can select the timer set or cancel. You can also check the timer setting status.

To activate or check the timer, press the "TIMER" button so that "TIMER" appears in the display window.
To cancel the TIMER, press the "TIMER" button so that "TIMER" disappears in the display window.

Audio Adjustment

Volume Adjustment

- Turn **VOLUME (-)/(+)** knob clockwise to increase the sound level, or counterclockwise to decrease it.
- Press **VOLUME CONTROL (Λ)** to increase the sound level, or press the **VOLUME CONTROL (Λ)** to decrease it on the remote control.

Sound Quality Adjustment

• To activate stereo sound

You can choose between 4 fixed sound impressions. Select a desired sound mode by using the **EQ.PATT (EQ)** on the remote control button.

FLAT : linear frequency response

ROCK : more bass, more treble

POP : less bass, less treble

CLASSIC : for orchestral music

• Headphone Socket

Connect a stereo headphone plug (Ø 3.5mm) into the headphone jack.

The speakers are automatically disconnected when you plug in the headphones (not supplied).

MUTE

Press **MUTE** to mute your unit.

You can mute your unit in order, for example, to answer the telephone, "MUTE" indicator flashes in the display window.

SURROUND

To activate surround mode

You can choose between 3 fixed sound impressions. Select a desired surround mode by using **SURROUND**.

SURROUND 1 ON → SURROUND 2 ON → SURROUND OFF



XDSS (Extreme Dynamic Sound System)

Press **XDSS** to reinforce treble, bass and surround effect.

The "XDSS ON" or "XDSS OFF" indicator lights up. To cancel it press **XDSS** again.

Reception of RDS (Radio Data System) Stations

What is RDS?

RDS (Radio Data System) is a system gradually being introduced on FM in many countries, where by an inaudible stream of data is transmitted in addition to the normal radio signal. This data contains various information including station/ transmitter identification, traffic information and a list of alternative frequencies for the radio station being received.

1 Press **FUNCTION** repeatedly to appear **TUNER** indicator (or **TUNER/BAND** on the remote control) and then press **BAND** to select FM.

2 Select a desired station by pressing **TUNING (-)/(+)**.

When the RDS transmission is received, the display shows the program service name (PS) after RDS indicator appears.

3 Press the **RDS** to recall the frequency.

Notes

- RDS is only available for FM reception.
- The PS (PROGRAM SERVICE) NAME is displayed automatically when a RDS station is received.

Auxiliary Function

1 Connect an auxiliary device i.e. TV or VCR, via the rear mounted **AUX** phone sockets.

2 Press **AUX**.

Note

You can also record from the auxiliary input source, see Recording Section.

Presetting the radio stations

You can preset 30 stations for FM and AM. Before tuning, make sure that you have turned down the volume to the minimum.

- 1** Press **FUNCTION** repeatedly to appear **TUNER** indicator (or **TUNER/BAND** on the remote control).
- 2** Press **BAND** to select the FM or AM you want in the display window.
Every time you press **BAND**, FM and AM changes alternately.
- 3** Press **TUNING (-)/(+)** on the front panel until the frequency indication starts to change, then release.
Scanning stops when the unit tunes in a station.
- 4** Press **PROG./MEMORY**(or **PROGRAM** on the remote control).
A preset number will flash in the display window.

Notes

- **Tuning in automatically**
Press **TUNING(-)/(+)** for more than 0.5 seconds.
- **Tuning in manually**
Press **TUNING(-)/(+)** briefly and repeatedly.

5 Press **PRESET (-)/(+)** (or **PRESET (V/Δ)** on the remote control) to select the preset number you want.

6 Press **PROG./MEMORY** (or **PROGRAM** on the remote control) again.
- The station is stored.

7 Repeat steps 3 to 6 to store other stations.

To clear all the memorized stations

Press and hold **PROG./MEMORY** on the front panel for about two seconds, "CLEAR" appears in the display window and then press **PROG./MEMORY** again, the stations are cleared.

For your reference

If all stations have already been entered, **FULL** message will appear in the display window for a moment and then a preset number will flash. To change the preset number, follow the steps 5-6.

To recall presets

Press and hold **PRESET (-)/(+)** (or **PRESET (V/Δ)** on the remote control) until the desired preset number appears or press it repeatedly.

Listening to the radio

- 1** Press **FUNCTION** repeatedly to appear **TUNER** indicator (or **TUNER/BAND** on the remote control) and then press **BAND** to select the FM or AM you want in the display window.
The last received station is tuned in.
- 2** Press **PRESET (-)/(+)** (or **PRESET (V/Δ)** on the remote control) repeatedly to select the preset station you want.
- Each time you press the button, the unit tunes in one preset station at a time.
- 3** Adjust the volume by rotating **VOLUME (-)/(+)** KNOB (or pressing **VOLUME (V/Δ)** on the remote control) repeatedly.

To listen to non-preset radio stations

- Use manual or automatic tuning in step 2.
- For automatic tuning, press and hold **TUNING (-)/(+)** on the front panel.

To turn off the radio

Press **POWER** to turn the unit off or select another function mode (CD, TAPE or AUX).

For your reference

- If an FM program is noisy
Press **MODE/RIF** so that "STEREO" disappears in the display window. There will be no stereo effect, but the reception will improve. Press **MODE/RIF** again to restore the stereo effect.
- To improve reception
Reposition the supplied antennas.

Notes

- Use **MODE/RIF** (Radio Interference Filter) function to switch to mono reception if stereo reception is distorted by noise.
- When recording the MW(AM) or LW broadcast, beat noises may occur. If it does, press **MODE/RIF** once.

Tape Playback

You can use only normal tape.

Basic Playback

- 1** Press FUNCTION repeatedly to appear TAPE indicator.
("NO TAPE" appears in the display window.)
- 2** Open cassette deck by pushing **▲ PUSH EJECT position.**
- 3** Insert a cassette with the tape side to the bottom and then close deck.
- 4** Press PLAY (► or ◀: OPTIONAL).

To Stop Play

Press STOP(■) during playback.

Tape Counter Reset

Press COUNTER during playback.
Playing time appears "TP - 0000" in display window.

To Play Fast Rewind or Fast Forward

After pressing ◀◀/▶▶ on the front panel or the remote control during playback, press PLAY (►) at the point you want.

AUTO STOP DECK

After auto stop deck plays only front side, the unit stops automatically.

AUTO REVERSE DECK:OPTIONAL

You can select direction of the cassette you want by pressing PLAY MODE.

Pressing	Display	Function
Once	◀	After the cassette plays front or reverse (backward play) side, stops automatically.
Twice	◀▶	After the cassette plays front and reverse side, stops automatically.
Three times	◀◀▶▶	After the cassette plays six times repeatedly front and reverse side, stops automatically.

Recording

Wind the tape to the point recording starts. (Use only normal tapes.)

Basic Setting

- 1** Press FUNCTION repeatedly to appear the CD or TUNER indicator.
- 2** Open the cassette deck and insert a blank cassette into the cassette compartment.
To set the recording direction :OPTIONAL
Press PLAY MODE repeatedly to set the recording direction.

Recording from Radio, CD or Auxiliary source

- 1** Press ●REC/II (or ●/II on the remote control), and then play the CD or TUNER function.
"●REC" flashes and holds the cassette in pause mode.
- 2** Press ●REC/II or PLAY(►) (or ●/II or PLAY(►) on the remote control).
The recording begins.

To pause recording

Press ●REC/II or ●/II again. "●REC" flashes in display window.

To stop recording

Press TAPE STOP(■).

CD to Tape Synchronized Recording

The CD synchro recording function dubs a complete CD and programmed titles automatically into a cassette.

- 1** Press CD SYNC. in stop mode.
"●REC" flashes and "CD SYNC" displays in the display window.
- 2** The synchronized recording is started automatically after about 8 seconds.

Notes

- If you wish to record from the desired track, select the desired track with SKIP ▲◀/▶▼ before commencing CD synchro recording.
- The function change is not possible during recording.

CD Playback

Basic Playback

- 1** Press FUNCTION repeatedly to appear CD indicator.
If no disc is loaded then "NO DISC" is displayed.
- 2** Press CD OPEN (▲) and place the disc into the disc tray.
- Note**
To load an 8cm(3 inch) disc, put it onto the inner circle of the tray.
- 3** Press CD OPEN (▲) to close the disc compartment.
- 4** Press PLAY (►) or PLAY/ PAUSE (►/II) on the remote control.

To Pause Play

Press CD PAUSE (CD II) or PLAY/ PAUSE (►/II) on the remote control during playback.
Press this button again it to resume play.

To Stop Play

Press STOP(■) during playback.

To Skipping the Track

- Press the SKIP (►►) button to go to the next track.
- When the SKIP (◀◀) button is pressed once midway through a track, the player returns to the start of that track. When it is pressed again, a track is skipped each time the button is pressed.

To Play Fast Rewind or Fast Forward

After pressing ▶◀/►► on the front panel or the remote control during playback, press PLAY (►) at the point you want.

To Repeat Play

To play one track repeatedly
Press REPEAT once during playback.
- "REPEAT 1" appears in the display.

To play all tracks repeatedly

Press REPEAT again during playback.
- "REPEAT ALL" appears in the display.

To cancel repeat play

Press REPEAT once more during playback.
- "Repeat indicator" disappears.

To Program Play

You can arrange the order of the tracks on the discs and create your own program. The program can contain up to 20 tracks.

- 1** Press PROG./MEMORY (or PROGRAM on the remote control) on the stop mode.
- 2** Press SKIP(◀◀ / ►►) to select the track.
- 3** Press PROG./MEMORY (or PROGRAM on the remote control).
- 4** Repeat 1~3.
- 5** Press PLAY(►) (or PLAY/ PAUSE (►/II) on the remote control).

To check program contents

Press PROG./MEMORY (or PROGRAM on the remote control) on the stop mode.
- A track and program number will be displayed.

To clear program contents

Press PROG./MEMORY (or PROGRAM on the remote control) on the stop mode. And then press CLEAR on the front panel or STOP(■) on the remote control.

To add program contents

1. Press PROG./MEMORY (or PROGRAM on the remote control) repeatedly on the program stop mode until "Track Number" blinks.
2. Repeat 2~5.

To modify program contents

1. Press the PROG./MEMORY (or PROGRAM on the remote control) to display program number you want to modify.
2. Repeat 2~4.

Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptom	Cause	Correction
No power.	<ul style="list-style-type: none">The power cord is disconnected.	<ul style="list-style-type: none">Plug the power cord into the wall outlet securely.
No sound.	<ul style="list-style-type: none">The audio cables are not connected securely.	<ul style="list-style-type: none">Connect the audio cable into the jacks securely.
	<ul style="list-style-type: none">The power of the external source equipment is switched off.	<ul style="list-style-type: none">Switch on the external source equipment.
	<ul style="list-style-type: none">The Digital Audio Output is set to the wrong position.	<ul style="list-style-type: none">Set the Digital Audio Output to the correct position, then turn on the unit again by pressing POWER.
The unit does not start playback.	<ul style="list-style-type: none">No disc is inserted.	<ul style="list-style-type: none">Insert a disc.
	<ul style="list-style-type: none">An unplayable disc is inserted.	<ul style="list-style-type: none">Insert a playable disc.
	<ul style="list-style-type: none">The disc is placed upside down.	<ul style="list-style-type: none">Place the disc with the playback side down.
	<ul style="list-style-type: none">The disc is not placed within the guide.	<ul style="list-style-type: none">Place the disc on the disc tray correctly inside the guide.
	<ul style="list-style-type: none">The disc is dirty.	<ul style="list-style-type: none">Clean the disc.
The remote control does not work properly.	<ul style="list-style-type: none">The remote control is not pointed at the remote sensor of the unit.	<ul style="list-style-type: none">Point the remote control at the remote sensor of the unit.
	<ul style="list-style-type: none">The remote control is too far from the unit.	<ul style="list-style-type: none">Operate the remote control within about 23 ft (7 m).
	<ul style="list-style-type: none">There is an obstacle in the path of the remote control and the unit.	<ul style="list-style-type: none">Remove the obstacle.
	<ul style="list-style-type: none">The batteries in the remote control are exhausted.	<ul style="list-style-type: none">Replace the batteries with new ones.

Specifications

SECTION	MODEL	FFH-1920AD	FFH-1950AD	FFH-1960AD	
[General]	Power supply	Refer to the back panel of the unit.			
	Power consumption	30W	40W	50W	
	Mass	3.50kg	4.35kg	4.50kg	
	External dimensions (WxHxD)	161 X 254 X 249.5mm			
[CD]	Frequency response	40 - 18000 Hz			
	Signal-to-noise ratio	60 dB	70 dB	70 dB	
	Dynamic range	60 dB	70 dB	70 dB	
[Tuner]	FM	Tuning Range	87.5 - 108.0 MHz		
		Intermediate Frequency	10.7 MHz		
		Signal to Noise Ratio	55/50 dB	60/55 dB	60/55 dB
		Frequency Response	60 - 10000 Hz		
[AM (MW)]	AM (MW)	Tuning Range	522 - 1611 kHz OR 530 - 1610 kHz		
		Intermediate Frequency	450 kHz		
		Signal to Noise Ratio	35 dB		
		Frequency Response	100 - 1800 Hz		
[Amp]	Amp	Output Power	5W	15W	25W
		T.H.D	0.5%	0.15%	0.15%
		Frequency Response	60 - 20000 Hz	42 - 25000 Hz	42 - 25000 Hz
		Signal-to-noise ratio	60 dB	80 dB	80 dB
[TAPE]	Tape	Tape Speed	4.75cm/sec		
		Wow Flutter	0.25% (MTT-111, JIS-WTD)		
		F.F/REW Time	120sec (C-60)		
		Frequency Response	250 - 8000Hz		
		Signal to Noise Ratio	43dB		
		Channel Separation	50dB(P/B)/45dB(R/P)		
		Erase Ratio	55dB (MTT-5511)		
[Speakers]	Speaker		FE-1920E	FE-1950E	FE-1960E
		Type	1 Way 1 Speaker	1 Way 1 Speaker	2 Way 2 Speaker
		Impedance	4 Ω	4 Ω	6 Ω
		Frequency Response	90 - 20000 Hz	75 - 20000 Hz	70 - 20000 Hz
		Sound Pressure Level	86 dB/W (1m)	86 dB/W (1m)	87 dB/W (1m)
		Rated Input Power	5 W	15 W	25 W
		Max. Input Power	10 W	30W	50 W
		Net Dimensions (WxHxD)	150x254x171mm	150x254x191mm	150x254x197mm
		Net Weight (1EA)	1.56kg	1.80kg	1.96kg

* Designs and specifications are subject to change without notice.



LG Electronics Inc.

P/NO : 3828R-A056P