



website : <http://www.lg.ca>

e-mail : <http://www.LGService.com/techsup.html>

WASHING MACHINE OWNER'S MANUAL

MODEL : WF-T8500TP

S/N :

Thank you for purchasing LG Fully Automatic Washer.
Please read your owner's manual carefully, it provides
instructions on safe installation, use, and maintenance.

Retain this manual for future reference.

Record the serial number of your washing machine above.



website : <http://www.lg.ca>

e-mail : <http://www.LGService.com/techsup.html>

LAVE-LINGE

MANUEL D'UTILISATION

MODÈLE : WF-T8500TP

S/N :

Nous vous remercions de l'achat du Lave-Linge Automatique LG. Lire ce manuel attentivement avant d'utiliser l'appareil. Il contient, en effet, des instructions relatives à l'installation, l'utilisation et l'entretien, en toute sécurité, de ce dernier.

Le conserver pour toute consultation ultérieure.

Noter le numéro de série du lave-linge.

Read this manual

Inside you will find many helpful hints on how to use and maintain your washer properly. Just a little preventive care on your part can save you a great deal of time and money over the life of your washer. You will find many answers to common problems in the Troubleshooting section. If you review our chart of Troubleshooting first, you may not need to call for service at all.

Identification of Parts		4
Before Starting to Wash	How To Remove Stains	5
	Preparation Before Washing	6
	Water Level and Temperature	7
	Use of Detergent	8
	Use of Softener and Bleach	9
Operating Instructions	Function of Each Button	10
	Normal Wash	12
	Economy Wash	12
	Heavy Wash	12
	Wool Wash	12
	Speedy Soak Wash	12
Additional Function Options	Delay Start Wash	13
	Washing Option	14
	Other Useful Functions	15
Installation Instructions	Placing and Leveling	16
	Connecting Hose	17
	Grounding Instructions	18
Troubleshooting		21
Specifications		25

Important Safety Information

READ ALL INSTRUCTIONS BEFORE USE



For your safety, the information in this manual must be followed to minimize the risk of fire or explosion, electric shock, or to prevent property damage, personal injury, or loss of life.

IMPORTANT SAFETY INSTRUCTIONS

WARNING : To reduce the risk of fire, electric shock, or injury to persons when using the washer, follow basic precautions, including the following:

- Read all instructions before using the washer.
- Do not wash articles that have been previously cleaned in, washed in, soaked in, or spotted with gasoline, dry cleaning solvents, or other flammable or explosive substances, as they give off vapors that could ignite or explode.
- Do not add gasoline, dry cleaning solvents, or other flammable or explosive substances to the wash water. These substances give off vapors that could ignite or explode.
- Under certain conditions, hydrogen gas may be produced in a hot water system that has not been used for 2 weeks or more. **HYDROGEN GAS IS EXPLOSIVE**. If the hot water system has not been used for such a period, before using the washing machine, turn on all hot water faucets and let the water flow from each for several minutes. This will release any accumulated hydrogen gas. As the gas is flammable, do not smoke or use an open flame during this time.
- Do not allow children to play on or in the washer. Close supervision of children is necessary when the washer is used near children.
- Before the washer is removed from service or discarded, remove the lid to prevent children from hiding inside.
- Do not reach into the washer if the basket or agitator is moving.
- Do not install or store the washer where it will be exposed to the weather.
- Do not tamper with controls.
- Do not repair or replace any part of the washer or attempt any servicing unless specifically recommended in the user-maintenance instructions or published user-repair instructions that you understand and have the skills to carry out.
- See Installation Instructions for grounding requirements.

SAVE THESE INSTRUCTIONS


GROUNDING INSTRUCTIONS

This appliance must be grounded. In the event of malfunction or breakdown, grounding will reduce the risk of electric shock by providing a path of least resistance for electric current. This appliance is equipped with a cord having an equipment-grounding conductor and grounding plug. The plug must be plugged into an appropriate outlet that is properly installed and grounded in accordance with all local codes and ordinances.

Do not use an adapter or otherwise defeat the grounding plug.


If you don't have the proper outlet, consult an electrician.

WARNING : Improper connection of the equipment-grounding conductor can result in risk of electric shock. Check with a qualified electrician or serviceman if you are in doubt as to whether the appliance is properly grounded. Do not modify the plug provided with the appliance - if it does not fit the outlet, have a proper outlet installed by a qualified electrician.

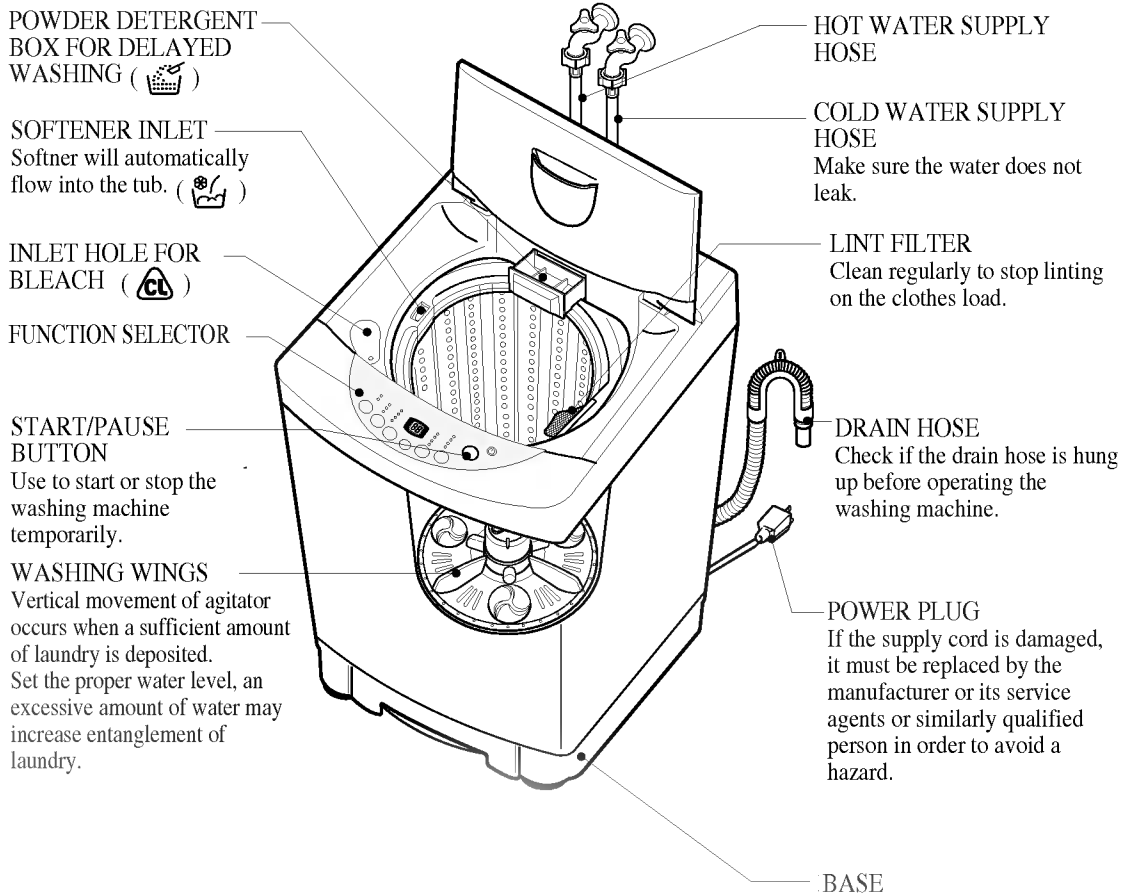


Accessories

 Leg Stopper
(Option)




2 Pieces

Inlet hose

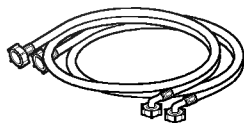


1 Each for cold and hot water

Drain hose

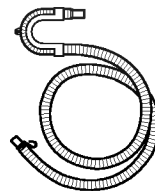

Tie strap

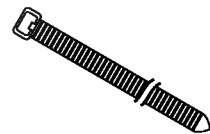

to secure drain hose to standpipe, inlet hose or laundry tub

How To Remove Stains

Pretreating dirt and stains

Brush a little washing detergent dissolved in water onto stains, collars, and cuffs to help shift dirt. The secret of stain treatment is immediate action. When an accident happens, plunge the stained area into cold water, or sponge it down. This prevents the stain from setting. Wash as soon as possible afterwards.

- Treat stains **AS SOON AS POSSIBLE**. The longer they are left, the harder they are to remove.
- Always consider the type of fabric you are treating to make sure you do not use a water temperature that is too hot or a treatment that will alter the color of the fabric. It pays to pre-wash products and solvents on an inconspicuous part of the garment first.
- Place the garment being treated on an absorbent cloth (e.g. on an old towel). Work from the reverse side of the stain, as this can force the stain off the fabric instead of through it.
- Use cold or warm water on unknown stains as hot water can set some stains.
- Some stains are not easily seen when the fabric is wet. Do air dry the stained garment to be sure the stain has been removed, as heat from a dryer may set the stain.
- Take care with stain removal treatments as they are often flammable and highly poisonous. Do not use them in your washer as they may damage the paint or plastic components.
- Some pretreatment sprays or liquids can damage your washer's control panel.

• Diaper sanitizers are very corrosive to metal surfaces. **DO NOT** soak diapers in sanitizers in your washer or tip the contents of the diaper bucket into your machine. Rinse and wring diapers out thoroughly before placing them in your machine.

• Scrape off any excess baby cream, such as Vaseline from the diapers before washing and handwash to prevent the cream being transferred to other items in the wash.

Preparation Before Washing

* Look for a care label on your clothes. This will tell you about the fabric content of your garment and how it should be washed. (Refer to p. 26.)



Sort clothes into loads that can be washed with the same wash cycle, water temperature and spin speed.

To get the best results, different fabrics need to be washed in different ways.

- **SOIL** (Heavy, Normal, Light) Separate clothes according to the type and amount of soil.
- **COLOR** (Whites, Lights, Darks) Separate white fabrics from colored fabrics.
- **LINT** (Lint producers, Collectors) Separate lint producers and lint collectors.

Lint Producers

Terry cloth, Chenile, Towels, Nappies, Diapers

Lint Collectors

Synthetics, Corduroy, Permanent Press, Socks



- **Check all pockets to make sure that they are empty.** Things such as nails, hairclips, matches, pens, coins, and keys can damage both your washer and your clothes.
- **Mend any torn garments or loose buttons.** Tears or holes may become larger during washing.
- Remove belts, underwires, etc. to prevent damage to the machine or your clothes.
- **Pretreat any dirt and stains.**
- Make sure the clothes are washable in water.
- Check the washing instructions on care label (Refer to p. 26.)



Do not wash fabrics containing flammable materials (waxes, cleaning fluids, etc.).

Load Size

The water level should just cover the clothes. Adjust the load size accordingly. Loosely load clothes no higher than the top row of holes in the washer tub. To add items after washer has started, press Start button and submerge additional items. Close the lid and press Start button again to restart.

Light and Large-sized clothing

Clothes like downs and woollens are light weight, large and float easily. Use a nylon net and wash them in a small amount of water.

If the laundry floats during the wash cycle, it may become damaged.

 
Use dissolved detergent to prevent the detergent from clumping.



Long laundry items

Use nylon nets for long, delicate items.

For laundry with long strings or long length, a net will prevent tangling during washing.



Fasten zippers, hook, and strings to make sure that these items don't snag on other clothes.

※ Nylon net is not supplied by LG.



Fire Hazard

Never place items in the washer that are dampened with gasoline or other flammable fluids. No washer can completely remove oil. Do not dry anything that has ever had any type of oil on it (including cooking oils). Doing so can result in death, explosion, or fire.

Water Level and Temperature

- This machine detects the quantity of laundry automatically, then sets the water level and proper amount of detergent.
- When you select a wash program, the water level and amount of detergent (to be used) will be shown on the control panel.
- When the water level is automatically detected, it may differ depending on the quantity of laundry even though the same water level is indicated on the control panel.



- If you do not specify the water level 'Large' will be automatically selected.

Water Temperature

- You can change the water temperature by pressing the WATER TEMP. button. (refer to p10)
The temperature of the water impacts the effectiveness of all laundry additives and, therefore, which results in wash performance. We recommend the water temperature as follows :



HOT 120-140°F ; White items, diapers, underclothes, and heavily soiled, colorfast items.

WARM 85-105°F ; Most items

COLD * 65-75°F ; Lightly soiled items

- * When washing in cold water, additional steps may be needed:
- Adjust detergent amount and pre-dissolve detergent in warm water
 - Pretreat spots and stains
 - Soak heavily soiled items
 - Use appropriate bleach

- Temperature below 65°F (18°C) will not activate laundry additives and may cause lint, residue, poor cleaning, etc. In addition, detergent manufactures and care labels define cold water as 80~85°F (26.5~29.5°C).

If the temperature of the water in the tub is cold to your hands, the detergent will not be activated and clean effectively.

Use of Detergent

- We recommend powdered detergent, or liquid detergent diluted with water. (manufacturer's recommended ratio)
- Soap or granulated soap powders should not be used in your washing machine to prevent build-up.
- When washing woolens, remember to use a detergent suitable for washing woolens.

- Follow the detergent package directions.
- Using too little detergent is a common cause of laundry problems.
- Use more detergent if you have hard water, large loads, greasy or oily soils, or lower water temperature.
- The correct amount of detergent will vary depending on the amount of soil in your clothes. (Jeans and work clothes may be needed more detergent while bath towels are less.)
- For liquid and concentrated detergent, follow the recommendations of the detergent manufacturer.

To see if you are using the correct amount of detergent, lift the lid of your machine about half-way through the wash. There should be a thin layer of foam over the surface of the water. Lots of foam may look good, but it does not contribute to cleaning your clothes. No foam means not enough detergent has been used; soil and lint can settle back on the clothes or the washing machine.


Attention

If excessive detergent is used, the rinse will not be as clean and efficient. Also, it could cause environmental pollution, so use detergent accordingly.

- Some detergents **MUST** be fully dissolved before adding to your machine to get the best wash results. Check the instructions on the detergent packet.

If you use powdered detergent, it is essential that the required amount be fully dissolved in very hot water before being added to warm or hot water for the actual wash. Pre-dissolving detergent in warm water when washing in cold water can improve its performance.

- Open the detergent box and deposit the appropriate amount of detergent .

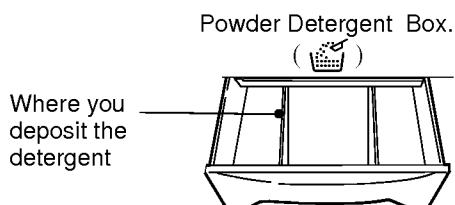


Use of Softener and Bleach

Using Softener

- Do not use concentrated fabric softener. This may cause some problems in automatic dispensing.
- For more details refer to the softener product instructions for use.

- Add 60ml (2 oz.) of fabric softener in the dispenser when starting the washer. It will be dispensed into the final rinse at the proper time. See the attention, below, for using concentrated fabric softener in the dispenser.

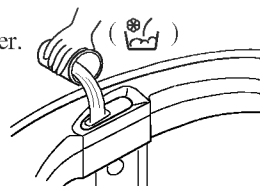


Attention

- Don't use softener with detergent. Softener is dispensed into the last rinse water.
- When using concentrated softener, dilute 1 oz. (30ml) of softener with 1 oz. (30ml) of fresh water.
- When filling dispenser, do not splash or overfill. It may stain clothes.
- Never pour fabric softener directly on clothes. It may stain them.
- If spotting occurs, wet and rub dishwashing liquid (or mild bar soap) and rewash.

Using Bleach

Check fabric care labels for special instructions.

- Separate the laundry to be bleached.
- Measure liquid bleach carefully, following instructions on the bottle.
- Before starting the washer, pour measured amount of bleach directly into bleach dispenser.
- Avoid splashing or over-filling dispenser. If you prefer to use powdered bleach, add it into the wash basket with your detergent.
- The dispenser dilutes liquid bleach before it reaches into your wash load.

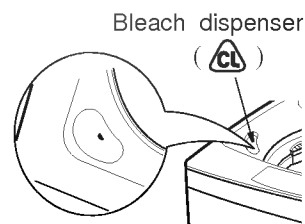


Attention

- Never pour undiluted liquid bleach directly onto clothes or into the wash basket. This may affect decolorization or damage of laundry.
- Do not mix chlorine bleach with ammonia or acids such as vinegar and/or rust remover. Mixing can produce a toxic gas which may cause death.
- Do not pour powdered bleach into bleach dispenser.
- Powdered bleach should be dissolved with water and then be deposited into the tub.
- For more details refer to the product instructions for use.

Fully automatic control

- The Normal program is used for average day-to-day washing.
- Press the POWER button to turn power on.
- Load clothes.
- Press the START/PAUSE button.
- The water level lights will scroll up and down while the washer is working out to find the optimum water level for your load.
- Add detergent, bleach, and softener as desired into the appropriate dispenser.
- Close the lid.

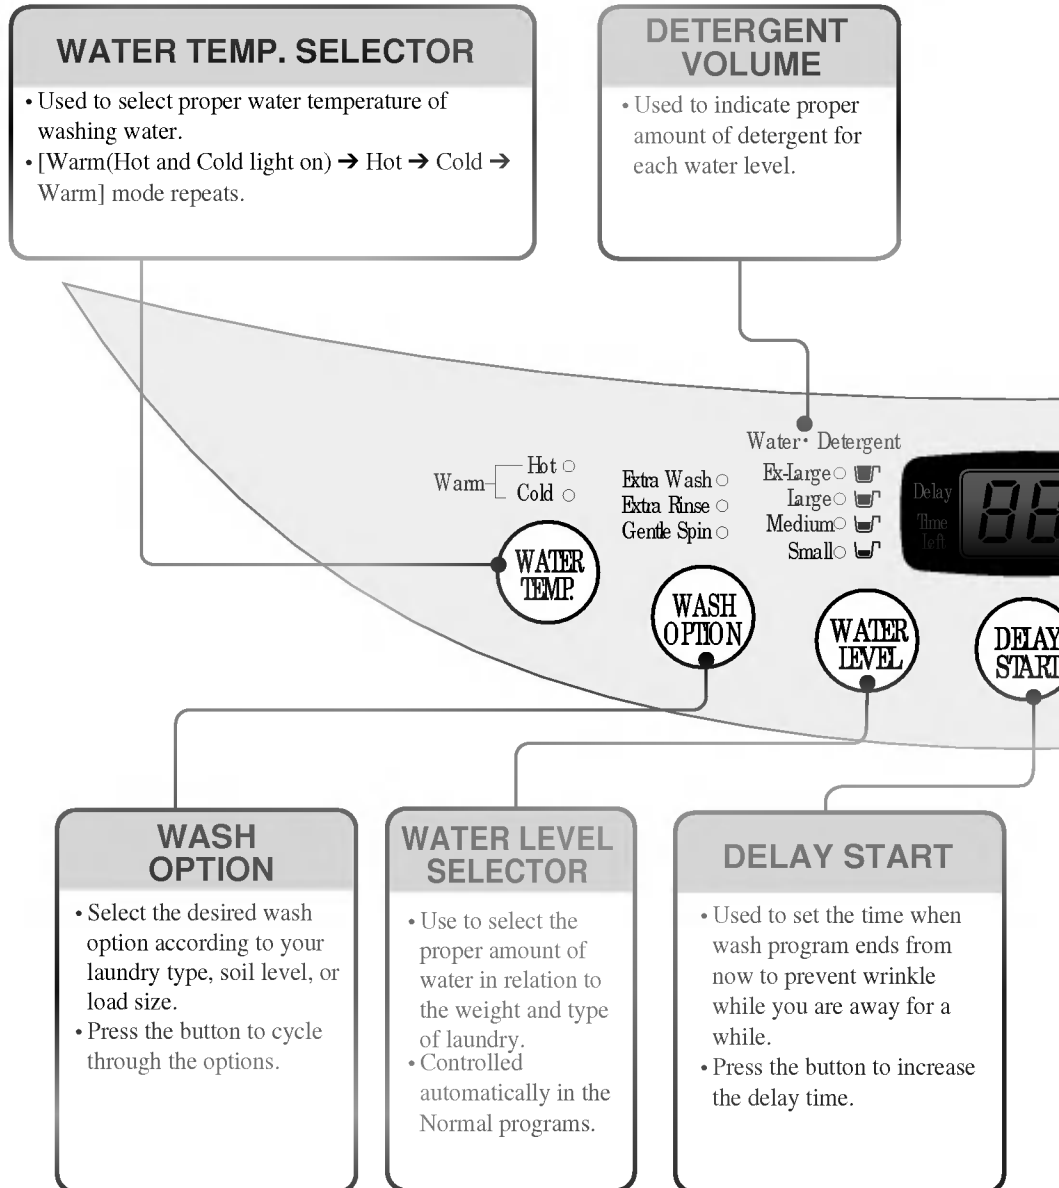


* To change cycles during the process of cycle.

- **Step 1.** Press START/PAUSE button.
- **Step 2.** Select desired cycle or function.
- **Step 3.** Press START/PAUSE button to restart the washer at the beginning of the new cycle.

Manual control

Other programs are selected as follows :

- Press the POWER button to turn power on.
- Load clothes.
- Add detergent, bleach, and softener as desired in the appropriate dispenses.
- Select water temperature, water level, process, program, and wash options as described below.
- Close the lid and press the START/PAUSE button.

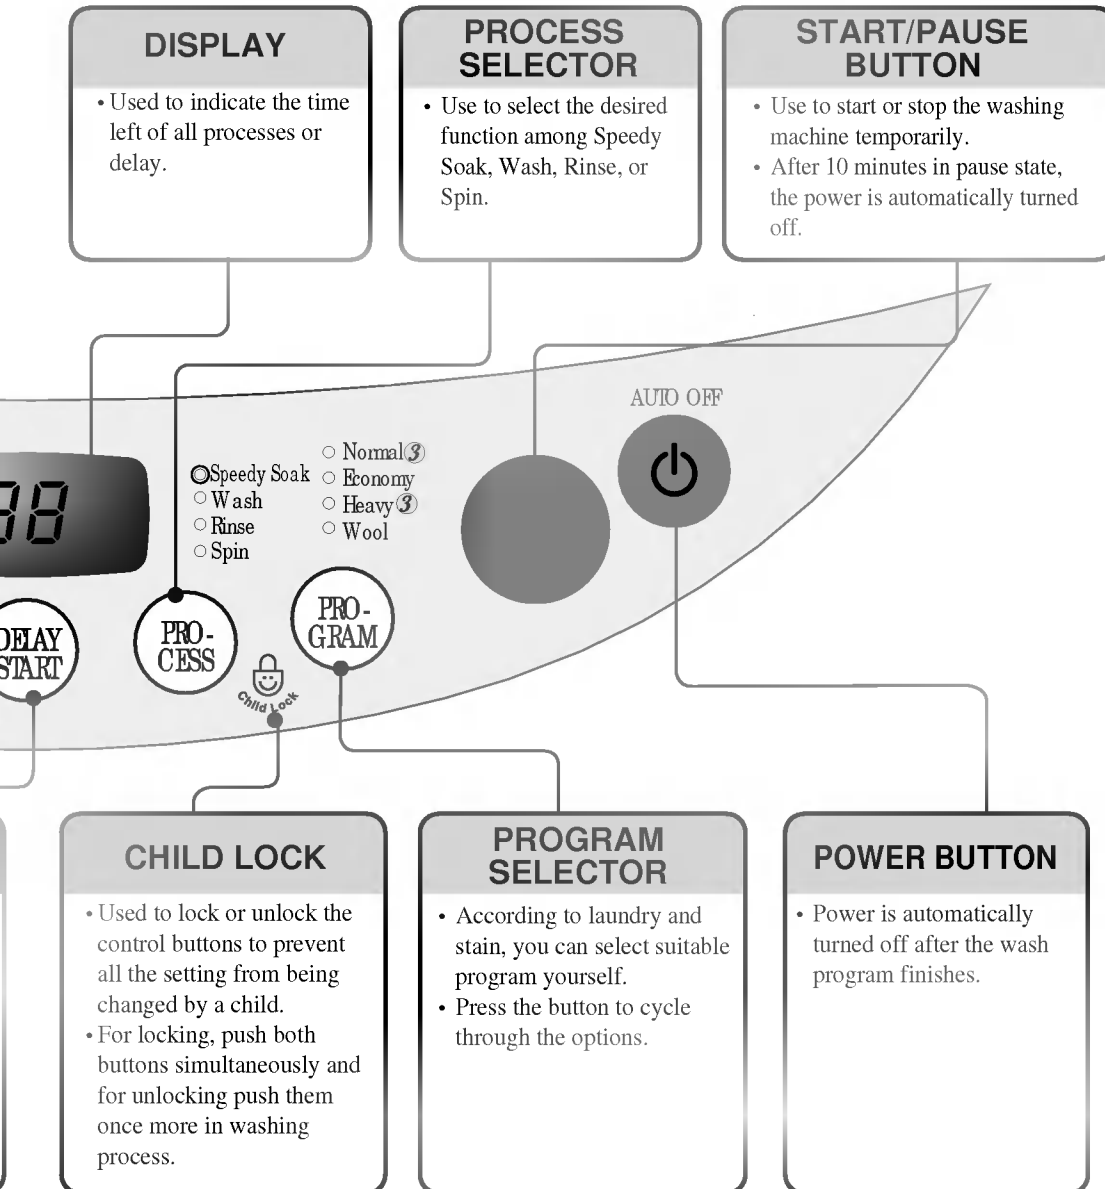

※ ③ : 3 step works at large and medium water level of Normal and Heavy program.

Press the **POWER** button to turn the power on.



Press the **PROGRAM** button to select the washing program.



Use this program for normal clothes except woolen clothes and lingerie.

Economy wash can be selected to wash lightly soiled clothes of less than 4½ lb. (2.0 kg) in a short time.

Thick and heavy clothes or those which are excessively dirty like jeans or working uniforms can be washed.

Delicate clothes (lingerie, woolens, etc.) which may be easily damaged can be washed.

- Before washing your woolens, check the care label for the washing instructions.
(Machine washable woolens have been specifically modified to prevent felting when they are machine washed.
Most handknitted garments are not made of machine washable wool so we recommend that you wash them with hand.)
- When washing woolens, use a mild detergent recommended for washing wool.
- Hand washed woolens may be spun in the washing machine to reduce the time to dry.
- To dry woolens lay down them flat on a towel and pat into shape. Dry woolens out of direct sunlight.
(The heat and tumble action of a dryer may cause shrinkage or felting of woolen garments.)
Some underlaid woolens and sheepskin products machine may cause pump blockages during washing.
- Ensure that the whole article is suitable for machine washing and not just the backing material.

Speedy Soak Wash

Speed Soak Wash can be selected to wash heavily soiled laundry by soaking in water for an extended period to remove dirt and grime.

Speedy Soak Wash cannot be selected for the Economy and Wool wash program.

Add the laundry and press the **START/PAUSE** button.



- When you press the START/PAUSE button the light will blink.

Add the detergent.

- The appropriate quantity of detergent is marked next to the water level of **Water** and **Detergent**.
- When the lid is open the machine will not operate and an alarm signal will remind you to close the lid

Close the lid.

- Water will be supplied for up to 2 minutes after the start of the wash to supplement the water which the laundry has absorbed.

Delay Start wash is used to delay the finishing time of the operation. The hours to be delayed can be set by the user accordingly. The time on the display is the finishing time, not the start time.

Press the **POWER** button to turn power on.

AUTO OFF



Press the **PROGRAM** button to select the washing program.



- Select the program for laundry on the control panel. You cannot use DELAY START with the woolen setting.

Press the **DELAY START** button to set the time when the delayed washing is to be completed.



- The time changes as following order (3 → 4 → 5 → ... → 12 → 14 → 16 → ... → 48 → 3 Hours).



Add the laundry and press the **START/PAUSE** button.



- When you press the START/PAUSE button, the light will blink.

Add the detergent.

- The appropriate amount of detergent is marked at the Water f tDetergent on the water level button.

Close the lid.

- Water will be supplied 2 minutes into the wash cycle to supplement the water the laundry has absorbed.

Finish

The washing will be finished according to the delayed time.

- If the lid is open, the machine will not work and an alarm signal will alarm to remind you to close the lid.
- To select washing program, process, water level, wash option, or water temperature manually, press the DELAY START button and select the desired option. Then press the START/PAUSE button.
- When the laundry cannot be taken out immediately after the wash program ends, it is better to omit the spinning program. The laundry will be wrinkled if it is left for a long time after spinning.

When you only need the Wash, Wash/Rinse or Rinse cycles, these can be set manually.

Press the **AUTO OFF** (Power) button to turn power on.



Press the **PROCESS** button until below desired option light is on. (Refer to p. 11.)

『Wash』, 『Wash+Rinse』, 『Rinse』, 『Rinse+Spin』, 『Spin』 only options



- When you want to only drain, wait until the water in the washing tub drains completely and then turn off the power.

Press the **WATER LEVEL** button.

- Control the water level according to the amount of laundry.
- If you do not choose anything, it is set the 'Large' water level automatically. (Refer to p. 10.)



Add the laundry into the washing tub.

Press the **START/PAUSE** button.



Add the detergent if required and close the lid.

- When spin option is not selected, the water will not be drained off after the process is completed . When you want the water to drain only, wait until the water in the wash tub finishes draining and turn off the power.
- If you do not specify the water level, then Large will be selected automatically.
- If **Rinse** only is selected, the process will start from water supply.

Child Lock Function

You can use the child lock option, if you want to lock all the buttons to prevent all the setting from being changed by a child.

Press the **POWER** button.



• Turn Power on.

Press the **START/PAUSE** button to start washing after all washing conditions are set according to this manual.



Press both **PROCESS** and **PROGRAM** button simultaneously while wash is proceeding, then all the keys are locked the wash or until unlocking them.



To unlock this function during the wash, press both **PROCESS** and **PROGRAM** button simultaneously again.

• [CL] and the remaining time are alternatively shown on the display.
([CL] means Controls Locked.)

Wash Option

One or more wash options can be selectable for every washing program.
Wash program is changed as follows according to selected wash options.

- **Extra Wash** : It gives additional 3 min wash. (Except for Speedy and Wool)
- **Extra Rinse** : It gives additional one deep rinse. (Except for Speedy and Wool)
- **Gentle Spin** : It gives gentle spin instead of normal spin. (Set for Wool automatically)

Mute Option

If you want to use the washing machine without alarm signal sounds, press both the **WATER LEVEL** and **PROCESS** buttons simultaneously.


To make buzzer work, press both the **WATER LEVEL** and **PROCESS** buttons simultaneously one more time.

Please ensure that the transit restraint has been removed before operating your machine.

Place the machine on a flat and firm surface which allows proper clearance.

Concrete flooring is best. Washer should not be installed on rugs or exposed to the weather.

We suggest a minimum clearance of 1" from right and left sides and 4" from rear wall.

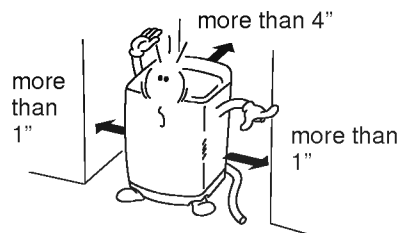


If the washer is installed on a uneven, weak or tilted floor causing excessive vibration, spin failure or “*UE*” error can happen to it.

It must be placed on a firm and level floor to prevent spin failure.

■ Washer with Casters

An insecure installation may cause walking during spin cycles because the washer has casters for convenience to move.


To protect it from walking, place the leg stoppers, which are provided as a accessory, under the two front legs of washer as shown in the figure.

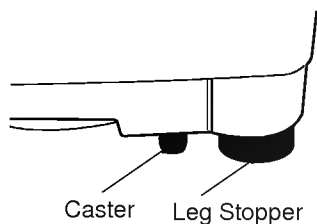

Check that the machine is level and securely installed not to move.

Open the lid and look from above to see if it is same as shown beside.

Top view of the machine

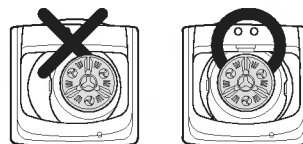


Water Supply Hose

Connect the water supply hose to the tap.


Push the water supply hose up so that the sealing washer within the hose can adhere completely to the tap.

Tighten it by screwing to the right.

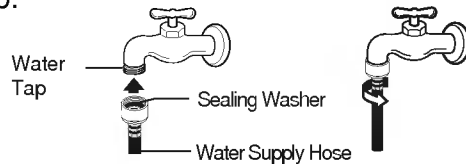


Connect water supply hose to the machine.

Check to see if there is a sealing washer inside the connector.

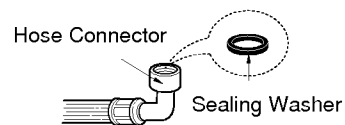

Connect the water supply hose to inlet valve of the washing machine, and then lock it by turning the hose connecting part.

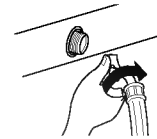


Check water leakage.

After connecting the hose, open the tap to check for any water leakage.




 Fit the end of the drain hose to the outlet of the drain pump of washer and tighten the clamp.



Put the other end of the drain hose over the standpipe or wash tub.

To prevent accidental dislodging secure the drain hose to the standpipe, inlet hose or laundry tub with the tie strap provided in the parts package.

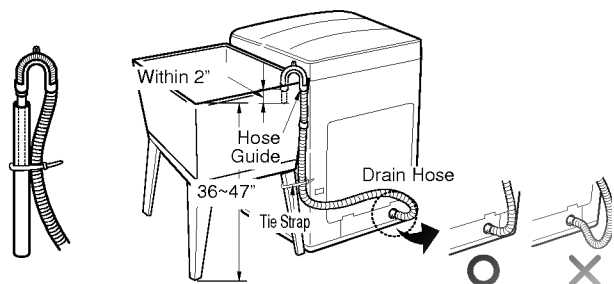

- To prevent siphoning, the drain hose should not be extended more than 2" from the end of the hose guide.
- The discharge height should be approximately 36 ~ 47" from the floor.


Grounding Instructions With Ground Insert Space Terminal

If the AC current outlet has no ground terminal, then separate grounding is required.

Note that AC power outlet configurations may differ from country to country.

If your outlet has no ground terminal or does not match your plug on the washer, consult an electrician.

DO NOT change or modify the plug or the outlet.

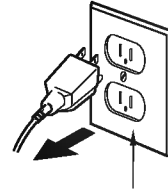

Outlet with ground terminal.
(may vary)

- To prevent a explosion, do not connect ground to a gas pipe.
- Do not connect ground to telephone wires or lightning rods. This may be dangerous during electrical storms.
- Connecting ground to plastics has no effect.



Electrical Shock Hazard

Plug into a grounded 3 prong outlet.

Do not remove ground prong.

Do not use an adapter.

Do not use an extension cord.

Failure to follow these instructions can result in death, fire, or electrical shock.

User Maintenance Instructions

- Turn off taps to prevent the chance of flooding.
- Always unplug the power cord when not in use.

Wash Inner-Tub Leave the lid open after washing to allow moisture to evaporate. If you want to clean the inner-tub use a clean soft cloth dampened with liquid detergent, then rinse. (Do not use harsh or gritty cleaners.)

Inlet Hoses Exterior Hoses connecting washer to faucet should be replaced every 5 years. Immediately wipe off any spills. Wipe with damp cloth. Try not to hit surface with sharp objects.

Long Vacations Be sure water supply is shut off at faucets. Drain all water from hoses if weather will be below freezing.

These might damage your washing machine

- Concentrated bleaches and diaper sanitizer will cause damage to the paintwork and components of your washer.
- Hydrocarbon solvents i.e. gasoline, paint thinners and lacquer thinners, etc. can dissolve plastic and blister paint. (Be careful when washing garments stained with these solvents as they are flammable DO NOT put them in washer or dryer.)
- Some pretreatment sprays or liquids can damage your washer's control panel.
- Use of dyes in your washer may cause staining of the plastic components. The dye will not damage the machine but we suggest you thoroughly clean your washer afterwards. We do not recommend the use of dye strippers in your washer.
- Do not use your washer lid as a work surface.

If you wish to use fabric softener, we recommend

- Clean your machine regularly.
- Cold water washing increases the chance of this build-up occurring. We recommend a warm or hot wash at regular intervals e.g. approx. every 5th wash.
- Fabric softener of thinner consistency is less likely to leave residue on the dispenser and contribute to build-up.

Note

Scum is the name given to the waxy build-up that can occur within any washer when the fabric softener comes into contact with detergent.

This build-up is not brought about by fault from the machine. If scum is allowed in the machine, it can result in stains on your clothes or an unpleasant smell in your washer.

How to clean the inside of your washing machine

If you use fabric softener or do regular cold water washing, it is important that you occasionally clean the inside of your machine.

- Fill your machine with hot water. Add chlorine bleach or equivalent for cleaner. Measure the amount of cleaner carefully by instructions on the bottle.
- Select Wash cycle and operate. Repeat it 2 or 3 times.
- Stop the machine, open the lid, and leave it to soak overnight.
- After soaking, drain the machine and run the machine through a regular cycle. We do not recommend that you wash clothes during this procedure.

User Maintenance Instructions

 
To Clean the Filter in the Inlet Valve

In case the water supply is impure, check substances like stone or sand in the filter. If the filter is clogged with dirt, water cannot flow into the washer. Clean the filter regularly. (The figure of power cord and water tap may vary by country.)


Close the tap before turning off the power. Select both hot/cold and then press the [START/PAUSE] button to remove water remaining in the water hose completely.



Turn off the power and disconnect the power cord.



After disconnecting the water supply hose, remove the filter from the inlet valve by hand or with tools. Then remove dirt with a brush, etc.

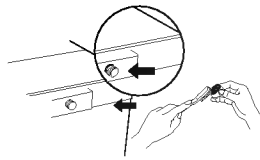

Replace the filter into the water inlet after cleaning it.

Before cleaning the filter, water remaining in the water supply hose should be emptied.

To Clean the Lint Filter

Pull out the lint filter from the tub in the direction shown below.



Turn the net inside out to remove dirt and rinse it with water.



Replace the filter to the original location. Push the lip of the filter until a pop sound is heard.




Note


- If the lint filter is worn out or damaged, contact a LG Service Center for new one.
- The amount of collected lint depends on the load size and type.
Clean the lint filters when cleaning is needed.

To Clean the Pump Casing


Place a towel on the floor under the drain pump cap. Excess water may flow out.

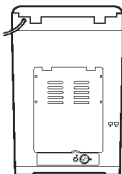


Turn the cap counter-clockwise and pull it out.

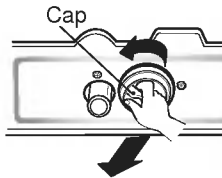

Remove any foreign objects and fluff inside pump casing and from the filter.

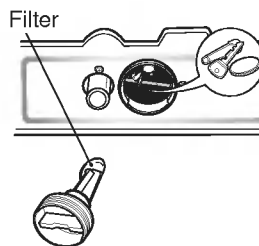

Replace the cap. Insert the filter along the guide ribs inside the pump casing. Filter must face the guide ribs inside pump casing and securely turn the cap clockwise.

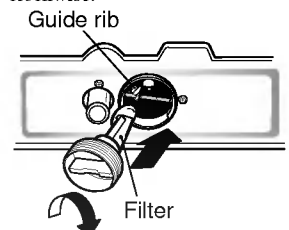

Check it if water leaks after reassembling. (The gasket is in the cap)

Look for your problem below, then check the things we suggest. More often than not, this will give you the answer to your problem, and you'll be able to carry on without having to telephone your service center.






WASH PROBLEM

Problem	Possible Causes	What To Do
Lint or residue on clothes	<p>Incorrect sorting</p> <p>Wash time too long</p> <p>Natural By-product When Washing Certain Items</p>	<ul style="list-style-type: none"> • Separate lint producers from lint collectors. • Wash small loads for a shorter time than larger loads. • Some lint is normal. Using the dryer should remove any lint not removed by the washer.
Detergent on clothes	Detergent not dissolving	<ul style="list-style-type: none"> • Use warmer water for wash. • Try pre-dissolving the detergent in warm water. • Try a liquid detergent.
Black spots on clothes	<p>Incorrect use of fabric softener</p> <p>Dye transfer</p> <p>Not enough detergent used</p> <p>A build-up caused by the interaction of fabric softener and detergent can flake off and marks on clothes.</p>	<ul style="list-style-type: none"> • When filling dispenser, do not splash or overfill. • Never pour fabric softener directly on clothes. • Pre-treat stain and rewash. • Separate whites or lightly colored items from dark colors. <ul style="list-style-type: none"> - Wash and dry non-colorfast clothes separately. • Insufficient detergent for the amount of soil on the clothes can result in black marks on clothes. • Cleaning the inside of your washing machine. (Refer to p. 19.)
Fabric damage (snags, holes, tears, rips or excessive wear)	<p>Pins, snaps, hooks, sharp buttons, belt buckles, zippers, and sharp objects left in pockets</p> <p><u>Chemical Damage</u></p> <p>a. Chlorine Bleach</p> <p>b. Battery Acid</p> <p>c. Hydrogen Peroxide</p> <p>d. Skin & Hair Care Products</p> <p><u>Non-chemical Damage</u></p> <p>a. Age & Normal Use</p> <p>b. Poor Construction</p> <p>c. Overloading</p> <p>d. Mice & Insects</p> <p>e. Sunlight</p>	<p>Fasten snaps, hooks, buttons, and zippers.</p> <p>Remove any loose support wires.</p> <p>Remove objects in pockets and sharp buttons.</p> <p>Turn knits (which snag easily) inside out.</p> <p>Dilute bleach or use the dispenser (Refer to p. 9.)</p> <p>Use caution around battery acids or skin and hair care products - these can remove color and cause holes or tears in fabrics.</p> <p>Check construction carefully when purchasing.</p> <p>Mend any damage before laundering.</p>

WASH PROBLEM

Problem	Possible Causes	What To Do
The laundry isn't clean	Water temperature is too cold.	<ul style="list-style-type: none"> • Use warmer water temperature
	Water temperature is not correct	<ul style="list-style-type: none"> • Select the wash temperature according to soil type. For example, blood and mud are better in cold water, while oily soils are better in warmer water.
	Stain is not pretreated	<ul style="list-style-type: none"> • Brush a little detergent dissolved in water or liquid detergent or suitable prewash product onto stains, collars, and cuffs to help shift dirt. • Wash stains as soon as possible. The longer they are left the harder to be removed.
	Washer is overloaded	<ul style="list-style-type: none"> • Select load size to match clothes load.
	Incorrect sorting	<ul style="list-style-type: none"> • White clothes are better washed separately. Separate light and heavily soiled items, as clothes can pick up soil from dirty washed water. • Various size of load mixture is recommended (e.g. full loads of sheets may not wash that well).
	Insufficient detergent	<ul style="list-style-type: none"> • Detergent for load size or amount of soil is not enough. Hard water requires more detergent than soft water.
Pilling	Result of normal wear on poly-cotton blends and fuzzy fabrics	<ul style="list-style-type: none"> • While this is not caused by the washer, you can slow the pilling process by washing garments inside out.
Grayed or yellowed clothes	Not enough detergent	Use more detergent (especially with larger loads).
	Water is not hot enough	Make sure water heater is delivering water at 120°F.
	Washer is overloaded	Select load size to match clothes load.
	Dye transfer	Sort clothes by color. If fabric label states wash separately, unstable dyes may be indicated.
Washer makes Noise	Gulping sound after drain and before spin.	This is normal.
	Load is unbalanced	Redistribute load
	Washer is not level	Level washer (Refer to p. 16.)
	Floor not strong enough to support washer	Relocate washer (Refer to p. 16.)

OPERATION PROBLEM

Symptom	Error Message	Check up
Water Supply Failure		<ul style="list-style-type: none"> • Is the water tap shut off? • Is the water supply cut off ? • Is the tap or water supply hose frozen ? • Is the water pressure low or is the filter of the inlet valve clogged with impurities? • Is the Cold hose connected to Hot inlet valve? • Are the hot and cold supply hoses connected to the proper inlets?
Drainage Failure		<ul style="list-style-type: none"> • Is the drain hose positioned correctly? • Is the drain hose bent or placed too high? • Is the internal part of the hose or drain pump clogged with impurities? • Check if electric power has gone off.
Spin Failure		<ul style="list-style-type: none"> • Is the laundry evenly balanced? • Is the washing machine placed on a flat surface?
Door (Lid) Open		<ul style="list-style-type: none"> • Is the lid closed?
Others		<ul style="list-style-type: none"> • Ask for help at the Service Center. <p>Call (888)542-2623[LG-CANADA]</p>

visit our web site/<http://www.lg.ca>

LG Electronics

LIMITED WARRANTY **United States of America & Canada**

LG Electronics will repair or at its option replace, without charge, your product which proves to be defective in material or workmanship under normal use during the warranty period listed below from the date of original purchase.

This warranty is good only to the original purchaser of the product during the warranty period as long as it is in the U.S including Alaska, Hawaii, and U.S. Territories, and all Canadian Provinces.

LG Washing Machine Warranty Period

<u>Product</u>	<u>Parts</u>	<u>Labor</u>
All Parts	2 Years	2 Years (In-Home Service)
Motor, Controller	3 Years	2 Years (In-Home Service)
Drum Tub, Pulley Belt	5 Years	2 Years (In-Home Service)

No other express warranty is applicable to this product. THE DURATION OF ANY IMPLIED WARRANTIES, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY, IS LIMITED TO THE DURATION OF THE EXPRESS WARRANTY HEREIN. LG ELECTRONICS SHALL NOT BE LIABLE FOR THE LOSS OF USE OF THE PRODUCT, INCONVIENCE, LOSS OR ANY OTHER DAMAGES, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OF OR INABILITY TO USE, THIS PRODUCT OR FOR ANY BREACH OF ANY EXPRESS OR IMPLIED WARRANTY, INCLUDING THE IMPLIED WARRANTY OF MERCHANTABILITY APPLICABLE TO THIS PRODUCT.

Some States / Provinces do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts; so these limitations or exclusions may not apply to you. This warranty gives you specific legal rights and you may also have other rights which vary from state to state or province to province.

THE ABOVE WARRANTY DOES NOT APPLY TO:

1. Service trips to your home to deliver and pickup, install, instruct, or replace house fuses or correct house wiring or plumbing, or correction of unauthorized repairs..
2. Damage to the product caused by accident, pests, fire, floods, or acts of God.
3. Repairs when your LG product is used in other than normal, single-family household use.
4. Damage resulting from accident, alteration, misuse, abuse, or improper installation.

Therefore, these costs are paid by the consumer.

If the product is installed outside the normal service area, any cost of transportation involved in the repair of the product, or the replacement of defective parts, shall be borne by the owner.

CUSTOMER ASSISTANCE NUMBERS:

To obtain Warranty Coverage: Retain your Bill of Sales to prove date of purchase.

A Copy of your Sales Receipt must be submitted at the time warranty service is provided.

To obtain Product or Customer Call 1-888-542-2623(LG-CANADA)

Service Assistance:


Press the appropriate menu option, and have your product type (Washer), model number, serial number, and Postal Code ready.

**To obtain the nearest
Authorized Service Center**

By Internet :

<http://www.lg.ca>

Specifications

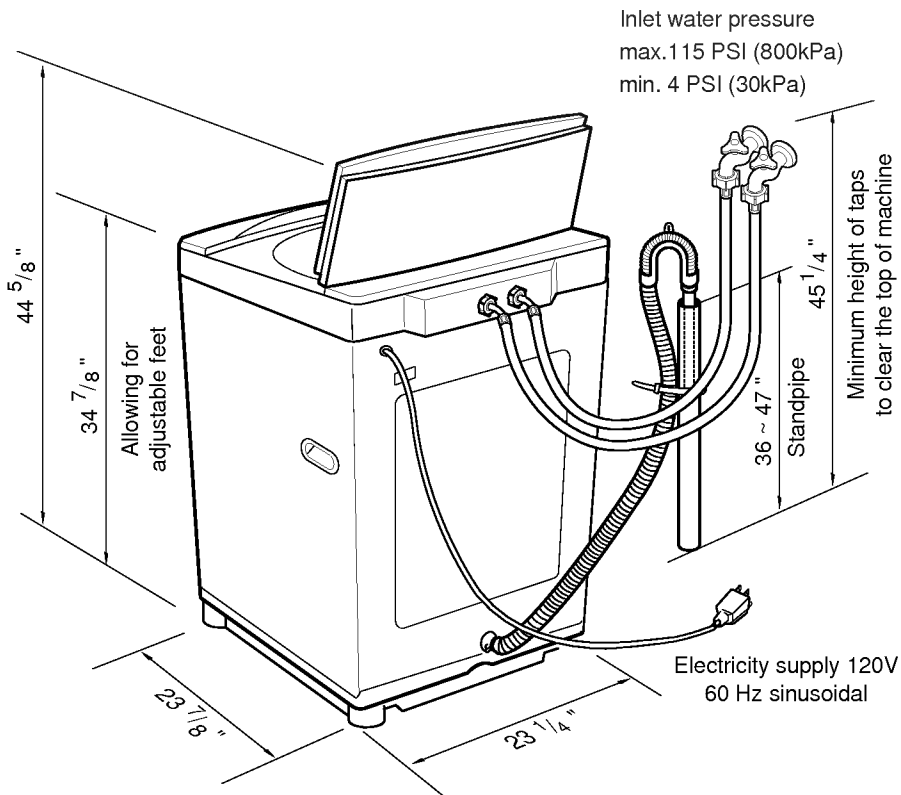

Model	WF-T8500TP
Type	Fully automatic washer
Tub capacity	2.6 cu.ft.
Washing capacity	14 ¹ / ₃ lbs. (6.5 kg)
Electrical ratings	120V, 60Hz
Standard amount of water (EX-LARGE water level)	Approx. 19-3/4 gal. (75L)
Standard amount of water used (EX-LARGE water level)	Approx. 39-5/8 gal. (150L)
Washing system	Drum rotating system
Water tap pressure	4~115 PSI (30-800kPa)
Outer dimension	23-1/4 (W) X 23-7/8 (D) X 36-1/2 (H) in.
	590 (W) X 606 (D) X 928 (H) mm
Weight	90-2/5 lbs. (41kg)

Fabric Care Labels

Below are fabric care label “symbols” that affect the clothing you will be laundering.

WASH LABELS

<i>Machine wash cycle</i>						
	Normal	Permanent Press/ wrinkle resistant	Gentle/ delicate	Hand wash	Do not wash	Do not wring
<i>Water temperature</i>						
	Hot (50 °C/120 °F)	Warm (40 °C/105 °F)	Cold/cool (30 °C/85 °F)			

DRY LABELS

<i>Tumble dry</i>						
	Dry	Normal	Permanent Press/ wrinkle resistant	Gentle/ delicate	Do not tumble dry	Do not dry (used with do not wash)
<i>Heat setting</i>						
	High	Medium	Low	No heat/air		
<i>Special instructions</i>						
	Line dry/ hang to dry	Drip dry	Dry flat	In the shade		

BLEACH LABELS

<i>Bleach symbols</i>			
	Any bleach (when needed)	Only non-chlorine bleach (when needed)	Do not bleach

IRON LABELS

<i>Iron-dry or steam</i>						
	Iron	High	Medium	Low	Do not iron	No Steam

DRYCLEAN

<i>Dryclean-Normal cycle</i>					
	Dryclean	Any solvent	Any solvent except trichloroethylene	Petroleum Solvent only	Do not dryclean
<i>Professional dryclean</i>					
	Reduce moisture	Short cycle	No Steam finishing	Low heat	