

型號：G7030



繁體中文
ENGLISH



Revision 1.1
PRINTED IN KOREA

P/N : MMBB0095306



CE 0168

GPRS 機

用戶手冊

型號：G7030

使用手機前，請務必詳讀本手冊。
並小心保管本手冊，以備日後
參考之用。



所有無線電接收器都有可能對鄰近的電子裝置造成干擾。



在飛機上，GSM手機必須保持關機。



在加油站、儲油槽、化學工廠或爆破場地附近，請勿啟動手機。



在醫院內請務必關機；心律調整器和助聽器等醫療電子裝置可能會受到干擾。



手機可能會對電視機、收音機、音響等造成輕微的干擾。



駕駛時，請勿使用手持行動電話。



請勿自行拆開手機或電池。



手機內附有組件小配件。為可避免小孩誤吞的高險，請將手機放置於小孩觸摸不到的地方。



勿在手機濕時觸摸充電器。



安全須知



請務必使用指定的充電和充電器，否則可能會損壞手機。



未經認證的充電器無法令電池安全充電。



請務必使用指定的充電和充電器，否則可能會損壞手機。



緊急撥號號碼未能適用於所有網路。請勿將手機用作緊急救援的主要通訊工具。

重要資訊

本用戶指南內含有關本手機之操作與使用的**重要**資訊。請務必仔細閱讀所有資訊，以能發揮最高的手機性能，並防止手機遭受任何損壞或不當使用。未經本用戶指南印明確許可的任何變更或安裝，將可能使您喪失產品保固的權利。



暴露於無線電波和比吸收率(SAR)的訊息

此G7030型號手機設計符合有關無線電波輻射的標準。這些標準是基於科學的研究後制定的，並且已包含有一定的安全裕量，以確保不同年齡和健康狀況的人群的安全。

- 行動電話的輻射標準採用的計算單位被稱為「比吸收率」(“Specific Absorption Rate” or “SAR”)。在測試比吸收率(SAR)時，均採用標準測試方式，測試手機在不同時段內的最大認可輻射功率操作時的比吸收率(SAR)。
- 即使不同型號LG手機的比吸收率(SAR)可能有所差異，但它們都符合暴露於無線電波的相關國際標準。
- 根據國際非電離輻射防護委員會(INCRP)所發展的標準，適用於公眾的無線電話比吸收率(SAR)限制是平均10克組織2.0瓦特/公斤(W/kg)，而SAR在台灣的限制標準為1.6瓦特/公斤。
- LG G7030經政府認可的實驗室測試後，此型號的最高比吸收率(SAR)值為 1.25瓦特/公斤。
- 減少電波影響，請妥善使用手機！



目 錄

產品概觀

產品包裝內容	10
手機部位圖解	11
手機正面	11
手機背面	12
手機LCD彩色小螢幕	13
按鍵介紹	14
鍵盤介紹	14
側鍵	15
按鍵介紹	16
半全數字鍵	16

螢幕上的資訊

螢幕上的資訊	17
螢幕顯示	17
螢幕上的顯示	18

使用前的準備

安裝	19
插入 SIM 卡	19
安裝電池	19
為電池充電	20
移開充電器	21
開機步驟	22
開始使用手機	22
關機	22
存取碼	23
PIN 碼 (4-8 碼)	23
PIN2 碼 (4-8 碼)	23
PUK 碼 (4-8 碼)	23
PUK 碼 (4-8 碼)	23
保密碼 (4-8 碼)	23



通話中功能表	24
撥打音訊	24
叫☎ [發送鍵] 打音訊	24
國際音訊	24
從音訊簿撥號	24
快速撥號	24

值叫功能表

音訊簿	25
功能表	26
訊息 [功能表 1]	28
簡訊 [功能表 1-1]	28
收件箱 [功能表 1-2]	28
發信箱 [功能表 1-3]	35
區域廣播 [功能表 1-4]	36
語音訊息 [功能表 1-5]	38
傳送報告 [功能表 1-6]	38
常用短語 [功能表 1-7]	38
設定 [功能表 1-8]	39
通話記錄 [功能表 2]	40
未接來音 [功能表 2-1]	40
已接來音 [功能表 2-2]	40
已撥音訊 [功能表 2-3]	40
刪除近期通話 [功能表 2-4]	41
通話時間 [功能表 2-5]	41
通話計劃 [功能表 2-6]	42
呼叫設定 [功能表 2-7]	42
GPRS訊息 [功能表 2-8]	43
情景模式 [功能表 3]	44
震動 [功能表 3-1]	44
靜音 [功能表 3-2]	44
標準 [功能表 3-3]	44



目 錄

大聲 [功能表 3-4]	45
聽筒 [功能表 3-5]	45
重叫 [功能表 3-6]	45
設定 [功能表 4]	47
鬧鐘 [功能表 4-1]	47
日期和時間 [功能表 4-2]	47
手機設定 [功能表 4-3]	48
通話設定 [功能表 4-4]	49
保密設定 [功能表 4-5]	53
網路設定 [功能表 4-6]	55
GPRS設定 [功能表 4-7]	56
恢復原廠設定 [功能表 4-8]	56
來電轉接 [功能表 5]	57
所有語音通話 [功能表 5-1]	57
忙線時 [功能表 5-2]	57
無人接聽時 [功能表 5-3]	57
無網路或關機時 [功能表 5-4]	57
所有數據通話 [功能表 5-5]	57
所有傳真通話 [功能表 5-6]	57
取消全部轉接 [功能表 5-7]	58
語音簿 [功能表 6]	59
戶型表 [功能表 6-1]	59
備忘錄 [功能表 6-2]	59
音語簿 [功能表 6-3]	60
娛樂樂器 [功能表 7]	66
遊戲 [功能表 7-1]	66
計算機 [功能表 7-1]	66
我的資料夾 [功能表 7-3]	66
單位換算器 [功能表 7-4]	67
時區設置 [功能表 7-5]	67
錄音器 [功能表 7-6]	67
答錄機 [功能表 7-7]	67
紅外線 [功能表 7-8]	69



行動網 [功能表 8]	70
主頁 [功能表 8-1]	70
書籤 [功能表 8-2]	70
加 ² 訊息 [功能表 8-3]	70
情報模式 [功能表 8-4]	71
進 ² URL [功能表 8-5]	73
緩存 [功能表 8-6]	73
WAP 資訊 [功能表 8-7]	74
直設情報模式 [功能表 8-8]	74
網上功能表	75
SIM卡服務	76

其他功能

如何偵測數據通訊及傳真通訊	77
發送數據或傳真通訊	77
接收數據或傳真通訊	77
多方通話功能	78
1. 通話時	78
2. 多方通話前會議通話	80
保養與維護	82
技術數據	84

 


產品包裝內容

請檢查您是否備有下列配件。



手機



2顆標準電池



 
磁持充電機



使用手冊



佩固卡



數據傳輸組件/CD



 
旅行充電器

注意


- 本手冊之內容及規格如有更改，恕不另行通知。
- 以上附件可能區域的不同而有所變化，請向您區域內之LG服務代理商查詢。



手機正圖

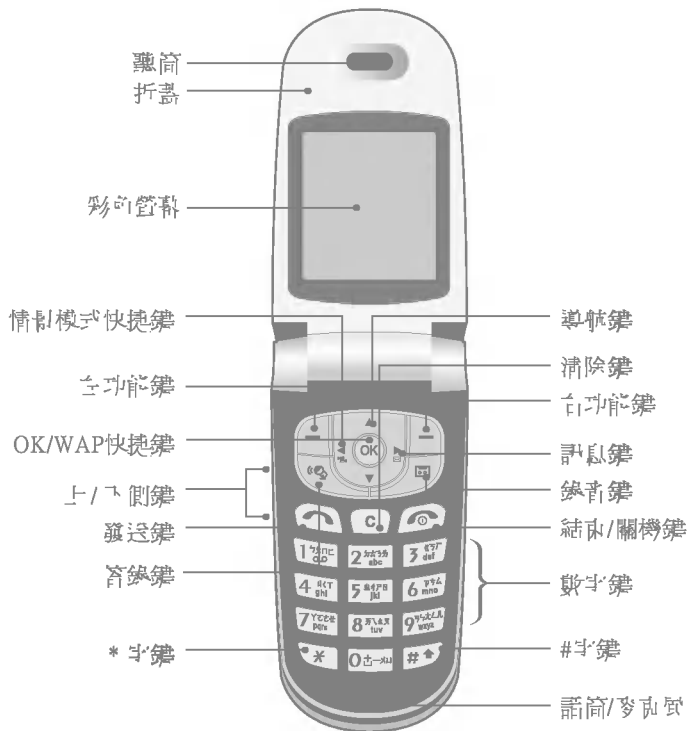

手機背面

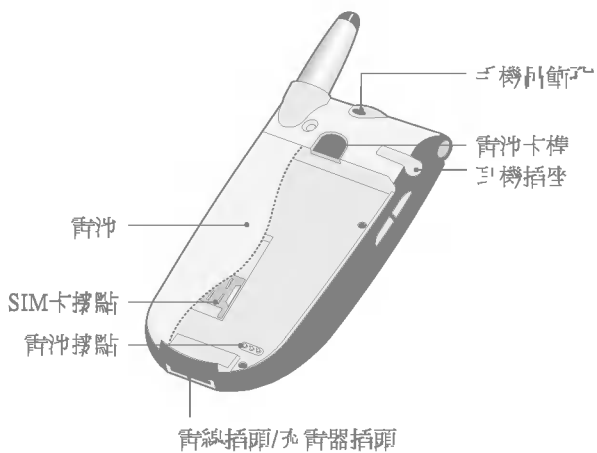 

手機LCD彩的小螢幕



您不用打開折蓋即可看到接收文字訊息或語音訊息的螢幕圖示。
此外，您還可以在接到來電時查看來電者的相關資訊(姓名及電話)。

注意

- 如果接聽電話時，對方姓名的電話號碼未存在電話簿中，螢幕上會顯示「新來電」。



按鍵介紹

以下介紹本手機各個按鍵：

鍵盤介紹

	說明
	<p>多功能鍵/自功能鍵 按鍵的功能會在螢幕上顯示。</p>
	<p>導航鍵 可在姓名、電話號碼、功能表或設定選項中翻閱。</p> <p>確認鍵 可直接進入情報模式功能表，長按該鍵可進入振動模式。</p> <p>訊息鍵 可直接進入訊息功能表。</p> <p>OK / WAP功能鍵 按該鍵可直接連接到WAP。</p>
	<p>錄音鍵 長按可進入答錄機功能，長按可進入錄音功能。</p>
	<p>C字鍵 按此鍵可刪除您所輸入的字元。</p>
	<p>撥號鍵 您可撥打電話及按聽來電。如果您按此鍵之前未輸入電話號碼，手機上會顯示最近撥出的電話號碼。</p>
	<p>數字鍵 在待機模式下，這些按鍵可撥打號碼；在編輯模式下則可輸入數字或文字。若您長按住這些按鍵：</p> <ul style="list-style-type: none"> •  鍵可撥打國際電話。 •  至  鍵可快速撥號。 •  鍵可撥打語音信箱。

說明



結束/開機鍵

用來結束或拒接一通電話。此鍵也可當作開機鍵，按住此鍵幾秒即可開機。

側鍵

說明



上/下側鍵

您可在待機模式下調整快捷音響，在通話中狀態下您則可調整聽筒音響。當折疊合上時，按上下側鍵中的任何一鍵時，手機外螢幕將會顯示時間/日期。

字字數字鍵

下列表中所示為各個字字數字鍵的對應關係。

	說明
	. ! ' 1 , - ? @ _
	A B C 2 Ä Å Æ Ç a b c ä å æ ç
	D E F 3 È É Ê d e f è é ê
	G H I 4 Ï Î Ï g h i ï î ï
	J K L 5 j k l
	M N O 6 Ñ Ö Ó Ô Õ œ m n o ñ ö ó ô õ œ
	P Q R S 7 p q r s ß
	T U V 8 Ü Û Ú ü v ü ù ú
	W X Y Z 9 w x y z
	[空格鍵] 0 Ø ø



您的手機螢幕上會出現一些圖示，下列表格將說明這些圖示各代表的意義。

螢幕圖示

	說明
	顯示網路訊號的強度。
	簡訊已接道。
	表示您正在使用漫遊服務。
	您可使用GPRS服務。
	鬧鐘已設好，並已啟動。
	顯示簡訊的狀態。
	您收到一個文字訊息。
	您收到一個語音留言訊息(若您有申請語音訊息服務)
	所有音響提示已被關閉。
	您收到一個電子郵件。
	音效設定檔中的大聲功能表。
	音效設定檔中的靜音功能表。
	音效設定檔中的聽筒功能表。
	音效設定檔中的喇叭功能表。
	音效設定檔中的標準功能表。
	您可使用WAP使用Push簡訊服務。
	您可查看您的日曆表。
	您有一則新的答錄機留言訊息。




螢幕上的資訊

螢幕上的圖示

	說明
	訊息
	通話記錄
	情境模式
	設定
	來電轉接
	通話簿
	娛樂工具
	行動網
	SIM卡服務



 1. 插入 SIM 卡

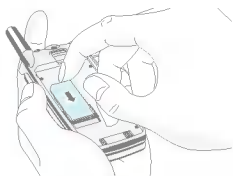


拆出手機背面的 SIM 卡座。按照以下步驟安裝 SIM 卡。

1. 如果電池已裝在手機內，先將電池取出。
2. 將 SIM 卡插入 SIM 卡座的銀色 SIM 卡座底下，金針接觸面向下，方向向前。
3. 如果您需要取出 SIM 卡，請用姆指按著 SIM 卡的上半部，然後小心地推出 SIM 卡座。


注意

- 安裝之前，請務必確保手機已關機，並將電池取出。
- SIM 卡的金針接觸面容易刮損。握住及安裝 SIM 卡時請特別小心。請遵從 SIM 卡的操作指示。

 2. 安裝電池

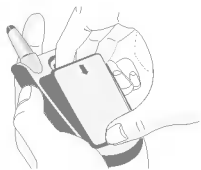

 1. 將電池放在手機背面。

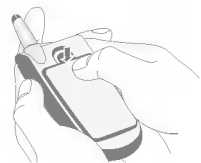


2. 將電池推入手機，直到您聽到卡階一聲。

3. 充電沖孔器

將旅行充電器連接至手機之前，您必須先安裝好電池。



 1. 將旅行充電器的一端接頭插入手機底端。

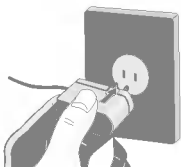

2. 將充電器的另一端連接至家用的交流電源插座。

注意：請使用TA-25G型系列充電器。



警告

- 請勿強行推進接頭，這樣可能會損壞手機及/或旅行充電器。



4. 移開充電器



雙卡旅行充電器接頭兩側的按鍵即可從手機取出充電器。


警告!

- 在使用手機之前，請先將隨機附送的電池充滿電。
- 在充電期間，請勿移除您的電池或SIM卡。
- 在未開機狀態下連接旅行充電器，螢幕上會顯示「正在充電」。只有當電池完全充電時，背照燈會亮起，卻不顯示「正在充電」。
- 在手機充電時，電池的格數會持續開動在充電完成後停止前進。

開機步驟

1. 開始使用手機



1. 按住  鍵，直到您聽到一個嘟嘟聲為止。
2. 如果您尚未設定PIN碼的話，此時可能會輸入PIN碼。
3. 當您的手機連上網路時，網路名稱會很快顯示在螢幕上。

2. 關機

在待機模式下，按住  鍵，直到您聽到一個嘟嘟聲為止。



您可利用本書所介紹的存取碼來防止您的手機遭人盜用。這些存取碼（除 PUK 和 PUK2 碼之外）都可使用「更改密碼」功能表 [4-5-4]。

PIN 碼 (4-8 碼)

PIN 碼（私人識別碼）可保護您的 SIM 卡免受他人盜用。PIN 碼通常是隨 SIM 卡提供的。當 PIN 碼被設定為啟用時，每一次開機時，手機都會要求您輸入 PIN 碼。相反的，當 PIN 碼被設定為關閉時，您的手機不會要求 PIN 碼而會直接連接網路。

PIN2 碼 (4-8 碼)

PIN2 碼是您使用某些功能之前必須輸入的密碼，例如通話計費、固定撥號等。此 PIN2 碼可能會隨一些 SIM 卡提供。您的 SIM 卡須能支援這些功能，您方可使用 (PIN2 碼詳情請詢問當地系統業者)。

PUK 碼 (4-8 碼)

PUK 碼（私人解鎖碼）可用來解開已被鎖的 PIN 碼。此 PUK 碼可能會隨一些 SIM 卡提供。若無，請向您當地的系統服務業者或服務供應商索取此碼。如您遺失此碼，也請聯絡您的系統服務業者或服務供應商。

PUK 碼 (4-8 碼)

PUK 碼（私人解鎖碼）可用來解開已被鎖的 PIN 碼。此 PUK 碼可能會隨一些 SIM 卡提供。若無，請向您當地的系統服務業者或服務供應商索取此碼。如您遺失此碼，也請聯絡您的系統服務業者或服務供應商。

保密碼 (4-8 碼)

保密碼可防止您的手機遭人盜用。此密碼通常隨手機一起提供。當您關閉除所有手機記錄或啟動「恢復原廠設定」目錄時，將需使用此保密碼。預設的密碼是“0000”。

通話功能表

撥打青話

1. 輸入青話號碼（加上區碼）。如修改螢幕上的號碼時，請按 [C] 鍵將游標向左移，或按 [D] 鍵將游標向右移。
2. 按 [OK] 鍵以撥出號碼。
3. 如結束通話時，按 [END] 鍵。

用 [發送鍵] 打青話

1. 按 [發送鍵]，您可用查看最近未接、已接及曾撥的青話號碼。
2. 選擇列表中的您欲撥打的號碼。
3. 按 [發送鍵]。

國際青話

1. 按 [05-91] 鍵以輸入國際撥號前碼。“+”號可取代國際撥號前碼。
2. 輸入區碼、區碼和青話號碼。
3. 按 [OK] 鍵。

從青話簿撥號

1. 在待機模式下，按 [電話簿]。
2. 當螢幕上顯示青話簿的目錄時，請按 [選擇] 鍵來搜尋。
3. 依姓名或號碼搜找到您撥號的項目之後，按 [OK] 鍵撥號。

快速撥號

請參閱 **青話簿 - 快速撥號** [功能表 6-3-4] 的詳細說明。



如欲選擇電話簿的一個功能表，請在待機模式下按 **[電話簿]**，然後翻閱至您想抄的功能項目。

說 明	
1. 搜尋	供您搜尋某一姓名、電話號碼。
2. 加上新	供您增加新的姓名及電話號碼。
3. 本群者群組	供您顯示群組列表同時您可自行編輯群組名稱，並為每個群組設定鈴聲、圖片。
4. 快速撥號	供您指定最多8個（數字鍵 [2-9] - [9] ）單鍵撥號的電話號碼。
5. 記憶設定	供您設定記憶體片及設定通過自選、姓名、電話號碼的搜尋方式。
6. 全部刪除	供您刪除手機電話簿或SIM卡電話簿中的所有資料。
7. 全部複製	供您複製手機電話簿的記錄至SIM卡，或從SIM卡複製至手機電話簿。
8. 訊息提示	訊息提示 供您查看記憶查詢狀態、SDN（服務號碼）私人號碼列表。



功能表



1 訊息

- 1 簡訊
- 2 收件箱
- 3 發信箱
- 4 區域廣播
- 5 語音訊息
- 6 傳送轉音
- 7 呼叫短語
- 8 設定



3 控制模式

- 1 震動
- 2 靜音
- 3 標準
- 4 大聲
- 5 聽筒
- 6 靜音



2 通話記錄

- 1 未接來電
- 2 已接來電
- 3 已撥出通話
- 4 刪除近期通話
- 5 通話時間
- 6 通話計費
- 7 呼叫設定
- 8 GPRS訊息



4 設定

- 1 鬧鐘
- 2 日期和時間
- 3 手機設定
- 4 通話設定
- 5 保密設定
- 6 網路設定
- 7 GPRS設定
- 8 恢復原廠設定



5 來電轉接

- 1 所有語音通話
- 2 忙線時
- 3 無人接聽時
- 4 無網路或關機時
- 5 所有數據通話
- 6 所有傳真通話
- 7 取消全部轉接



6 簡訊簿

- 1 行程表
- 2 備忘錄
- 3 簡訊簿



7 娛樂樂器

- 1 遊戲
- 2 計算機
- 3 我的資料夾
- 4 單鍵按鍵器
- 5 時區設置
- 6 錄音器
- 7 音錄機
- 8 紅外線



8 互聯網

- 1 首頁
- 2 書籤
- 3 加多訊息
- 4 情報模式
- 5 進到 URL
- 6 緩存
- 7 WAP 查詢
- 8 重設情報模式



9 SIM卡服務

- 本功能表內含視
SIM卡及網路服務



 


訊息 [功能表 1]

本功能表包含SMS（短訊服務）、語音訊息及網路服務訊息的相關功能。

寫訊息 [功能表 1-1]

您可以編寫及修改最多480個字元的訊息。此外，您還可刪除字元數。

1. 按  [選擇] 進入 **寫訊息** 功能表。
2. 如果您寫一段新訊息，請選擇功能表中的 **寫訊息**。
3. 利用eZi中文輸入法輸入訊息。詳細說明請參閱eZi中文輸入法的章節(第31頁)。
4. 當您正在寫訊息時， 鍵將會變成符號標示。
5. 寫完訊息時，請按  [選項]。接著就會顯示以下選項功能表。

發送

發送文字訊息。

1. 如果您發送文字訊息，請輸入您要發送的號碼。
2. 您的手機會要求您輸入收信人電話號碼。
3. 訊息發送之後，您的手機會詢問您是否要儲存您所編寫的訊息。

儲存

您的手機會詢問您是否要儲存您所編寫的訊息。

常用短語

常用短語是預設的訊息。當您在編輯訊息時，可從列表中選出一個常用短語加入您的訊息。



使用名片

名片的項目是姓名、手機、公司、傳真及電子郵件。您可以將名片加入訊息。

EMS服務

您的系統服務商須提供此項服務，您才可使用EMS功能。

附加圖片

如果您想在發送訊息時附加圖片，您可透過EMS進行傳送同時您可選擇手機內建之圖片作為傳送的樣本。

附加動畫

如果您想在發送訊息時附加動畫，您可透過EMS進行傳送同時您可選擇手機內建之動畫作為傳送的樣本。

附加聲音

如果您想在發送訊息時附加音樂，您可透過EMS進行傳送。

注意

- 因為G7030手機與其他手機的EMS格式未必相若，故您可能無法利用EMS收發其他廠牌手機訊息。

插卡號碼

當您輸入訊息時，您可以將儲存在SIM卡或手機的電話簿內的電話號碼。如果這個號碼是存在手機內的，您還可選擇插卡住宅電話、公司電話和電子郵件地址。



訊息 [功能表 1]

eZi字典

- **加⁺新** (適用於英⁺輸⁺)

如果您想增加您辭典的字，您可以按一下與個字的按鍵以輸入這些字。

1. 進⁺功能表。
2. 翻閱至**加⁺新**，然後按 [選擇]。
3. 輸⁺一個字，然後按 [加⁺]。

- **顯示字典** (適用於英⁺輸⁺)

您可以查看已經儲存於字典中的字列表。

1. 進⁺功能表。
2. 翻閱至**顯示字典**，然後按 [選擇]。
3. 您可以檢查字典列表。
4. 如果您想刪除一個字，請按 [刪除]。
5. 如果您想刪除列表中所有的字，請按 [選擇] 選擇列表底端的全部刪除。



如何使用的eZi中文

eZi中文輸入法可讓您輕鬆且快速地輸入文字。要輸入每個字元，您只需按一下字元鍵，最後您即可獲得您輸入的字。因此，您不需要輸入所有字元均能輸出一個字。

• 如何更換模式

本手機有4種輸入模式：eZi模式、數字模式、大寫模式以及小寫模式。如果您要更改模式，請按 **[#*]** 鍵。

• 如何在eZi 模式下使用



1. 按 **[]** [選擇] 以選擇訊息。
2. 按 **[]** [選擇] 翻閱至 舊訊息。
3. 在eZi中文模式下，您只需按一下鍵盤上代表一個字元的按鍵。此外，您可按 **[0-9]** 鍵建立空格。
4. 輸入訊息後，按 **[]** [確認]。

5. 如果您想刪除此或儲存該訊息，請按 **[]** [選項]。

例子

• 如何輸出“Tomorrow”個字，只需依順序按下

[8 3 T M O R O W] → **[6 3 T M O W]** → **[6 3 T M O]** → **[6 3 T M O]** → **[7 T C E E E]** 鍵即可。

注意

1. 您可按 **[*]** 鍵更改語言。
2. 當您按下相關的按鍵時，**[]** 鍵的功能會改成「更改」。此時您可按 **[]** [返回]更改大小寫的格式。
例如：you → y.o.u. → Y.O.U. → YOU。



訊息 [功能表 1]

- 如何在數字模式下使用



您可在這個模式下輸入一個數字，按 **##** 鍵可更換成另一個模式。

- 如何在大字模式下使用



大字模式下有兩個可模式。您可按 **##** 鍵可換可模式。
您可輸入一個大字。

- 如何在小寫模式下使用



您可輸入一個小寫字。

注意

1. 如果您想輸入空格，請按 **0 空格** 鍵。
2. 如要刪除一個字，請使用 **C** 鍵。



日文 eZi 輸入法

1) 筆劃 (Stroke)：如任何可筆劃來選擇日文。

日文會隨著您逐一輸入每一筆日文筆劃時漸漸顯示出來。您可以用 **[*]** 鍵和 **[#]** 鍵來查看其 **[05-ml]** 文字選擇，並按鍵選擇不同的字。此外，您還可以用 **[C]** 鍵和 **[D]** 鍵來找尋更多的不同的文字。

例) 如輸入「您好」，請依次按數字鍵：**[3]** 鍵，**[2]** 鍵 **[3]** 鍵；然後您缺可以看見四個「你」。現在，您可以用 **[#]** 鍵來移動游標，再按 **[05-ml]** 鍵選擇「你」然後在您選取第一個文字之後隨即出現幾個不同的文字。現在，您可以用 **[*]** 鍵選取「好」字。

按鍵	筆劃	按鍵	筆劃
[1] <small>1 ABC</small>	一	[6] <small>6 PPK</small>)
[2] <small>2 BVC</small>	丨	[7] <small>7 TCC</small>	丿
[3] <small>3 CV</small>	丿	[8] <small>8 VLV</small>	?
[4] <small>4 CV</small>	丶	[9] <small>9 VLV</small>	乙
[5] <small>5 VCV</small>	フ	[05-ml]	選擇鍵

注意

- **[8]** 鍵可以引導使用者在輸入第一個筆劃之後直接找到不同的字。因此，當您在輸入第一個筆劃之後按 **[8]** 鍵，缺可以從螢幕上所顯示的文字表中選取您所需的文字。



訊息 [功能表 1]

2) 拼音(Pinyin)：

「拼音」可根據中文字的漢語拼音來找出一個字。

拼音：您可以在輸入漢音的第一個字之後直接找到您認得的字。

例) 如輸入「國語」，請依次按數字鍵：**4** 鍵和 **8** 鍵，螢幕上就會出現「guo」字的漢音。若您選擇「guo」時，將出現一個包含所有相同漢音的字符列表供您選擇。然後您可以從中選擇「國」字。接著，在您選擇第一個字符之後隨即出現幾個不同的字符。現在，您可以利用 **#** 鍵選擇「語」字。

按鍵	英文字母	按鍵	英文字母
1 1234567890		6 7890	MNO
2 1234567890	ABC	7 1234567890	PQRS
3 1234567890	DEF	8 1234567890	TUV
4 1234567890	GHI	9 1234567890	WXYZ
5 1234567890	JKL	0 00-00	選擇鍵

<拼音字彙表>

3) 注音(Bopomofo)：





利用ㄅㄆㄇㄏㄏㄨㄢㄨㄢㄨㄢ輸入ㄉㄨㄛ，您可以聽到相同音字。

例如您輸入「你好」，請按 **2** 及 **6** 鍵。接著，按 **#** 找尋「你」字。再按 **0** [選擇] 鍵來選擇它。

按鍵	注音	按鍵	注音
1 1234567890	ㄅㄆㄇㄏ	7 1234567890	ㄩㄛㄜㄝㄞ
2 1234567890	ㄉㄊㄋㄌ	8 1234567890	ㄩㄝㄨㄛㄨㄜ
3 1234567890	ㄍㄎㄏ	9 1234567890	ㄉㄌㄍㄎㄏ
4 1234567890	ㄐㄑㄒ	0 00-00	一ㄨㄛ
5 1234567890	ㄅㄆㄇㄏ	0 OK	選擇鍵
6 1234567890	ㄉㄊㄋㄌ		



收件箱 [功能表 1-2]

當您收到一封文字訊息時 ，您的手機會顯示來信符號，並將訊息存入收件列表中。利用  鍵、 鍵翻閱至您所存的訊息。此外，您還可以在列表左端看到一個 **全部刪除**，利用來刪除所有已收到的訊息。當您在讀取訊息時，按  [選項] 鍵可進入現有的選項。

回覆 [功能表 1-2-1]

您可以將訊息回信給寄信人。

轉發 [功能表 1-2-2]

您可以將選取的訊息轉發給其他人。

刪除 [功能表 1-2-3]

刪除選取的訊息。

提取號碼 [功能表 1-2-4]

如果選取的訊息內含一個電話號碼，您可以將號碼插入並存入電話簿。此外，您還可以利用這個號碼撥打電話。

儲存附件 [功能表 1-2-5]

您可以將附件檔儲存起來，例如符號、圖片、動畫及音訊。

覆寄 [功能表 1-2-6]

您可以自動覆寄給發送這封訊息的寄信人。



訊息 [功能表 1]

發信箱 [功能表 1-3]

當您進入本功能表時，會看到一個發信列表。利用 鍵、 鍵翻閱至您所想的訊息，然後按 鍵查看訊息。可進入現有的選項，按 鍵。此外，您還可以在列表底端看到一個全部刪除，可列表刪除所有發出訊息。

您在讀取訊息時，按 [選項] 可進入現有的選項。

轉發 [功能表 1-3-1]

您可將選取的訊息轉發給其他人。

刪除 [功能表 1-3-2]

刪除選取的訊息。

提取號碼 [功能表 1-3-3]

如果選取的訊息內含一個電話號碼，您可將號碼插入出來並存入電話簿。此外，您還可利此號碼撥打電話。

注意

- 如果您輸入數字時有空格，接收方可分別查看。
如：在下列“12345 67890”中，該號碼將在發信箱中顯示為1, 12345 2, 67890

區域廣播 [功能表 1-4]

(須視網絡及所請的服務能否支援而定)

區域廣播訊息 (CB Message) 是通過網絡發送給 GSM 手機的特定的文字訊息。您可提供一般資訊，例如天氣預報、交通新聞、計程車、藥房及服務等等。每一類資訊都有自己的號碼，可供您聯絡服務供應商。當您收到廣播訊息時，可依次列步驟讀取：



接收 [功能表 1-4-1]

- 是

若您選擇本功能表，您的手機將可接收區域廣播訊息。



 
- 否

若您選擇本功能表，您的手機將無法接收區域廣播訊息。

收件箱 [功能表 1-4-2]

您可用讀取和刪除收到的CB訊息。

題目 [功能表 1-4-3]

如果您想建立新的檔案名稱，按  [選擇]。您可用按  [選擇] 選擇新的檔案。如果您已經使用檔案功能，您可按  [選項] 進行刪除、編輯和。

平音提示 [功能表 1-4-4]




- 是

若您選擇本功能表，您的手機在收到區域廣播訊息時將會發出一聲響聲。

- 否

若您選擇本功能表，您的手機在收到區域廣播訊息時將不會發出一聲響聲。

自動顯示 [功能表 1-4-5]

1. 當您收到區域廣播訊息時，它會顯示在螢幕上。您可用翻閱  鍵、 鍵用讀取訊息。
2. 讀完訊息之後，按  鍵返回待機模式。此外，您還可用在收到其他訊息之前，將它儲存起來。



訊息 [功能表 1]

語言 [功能表 1-4-6]

您可以選擇您要使用的語言。然後您的手機將用您所選取的語言顯示收到的區域廣播訊息。

語音訊息 [功能表 1-5]

您可以在這裡聽取語音留言訊息，並取得語音信箱號碼。

聽取留言訊息 [功能表 1-5-1]

如您聽取語音留言訊息，可撥音訊至語音信箱中心。

留言信箱號碼 [功能表 1-5-2]

如果您的網路服務供應商可支援這項功能，您就可另聽取語音信箱。當您收到新的語音留言訊息時，螢幕上將會顯示一個符號。請向您的網路服務供應商瞭解他們的服務詳情，以便能適當地設定手機。

傳送報告 [功能表 1-6]

您可以檢查您的訊息是否已成功發出。

常用短語 [功能表 1-7]

這個選項可引來修改預設的訊息。您將可看到列表中自10個預設訊息。在您修改之前，您可以儲存6個常用短語。但是您不可更改這些短語。其中則為<空>。

- **修改**：您可以修改常用短語。
- **刪除**：您可以刪除常用短語。
- **發送**：您可以發送常用短語。



設定 [功能表 1-8]

訊息中心號碼 [功能表 1-8-1]

您可以用輸入訊息中心號碼。

訊息類型 [功能表 1-8-2]

文本、語音、傳真、傳呼、X.400、電子郵件、ERMES

通常，訊息類型會被設定為文本。您可以用將您的文本轉換為接收設備適用的基本格式。請洽詢您的服務供應商以瞭解您是否可使用此功能。

訊息有效期 [功能表 1-8-3]

這項網路服務可讓您設定訊息中心儲存您的訊息，並不斷嘗試為您傳送訊息的時限。

傳送報告 [功能表 1-8-4]

您可以用檢查您的訊息是否已成功發出。

回覆付費 [功能表 1-8-5]

當您發送一封訊息時，這項功能可讓收信人回覆您的訊息，並將回覆費用計入您的電話帳單。

記憶查詢 [功能表 1-8-6]

若您選擇本功能表，手機會顯示不同的記憶查詢和總記憶查詢。總記憶查詢是SIM卡內手機記憶的總和。



通話記錄 [功能表 2]

如果您的系統服務商支援來電識別功能，您將可以查詢未接來電、已接來電和撥出電話記錄。

在未接來電、已接來電和撥出電話選項中，您可以：

- 撥打該號碼
- 將號碼保存到手機中
- 查看來電日期與時間
- 修改、刪除列表中的號碼或將其保存在手機中

未接來電 [功能表 2-1]

本功能表顯示最近未接的來電號碼。您可以撥出此號碼，儲存或查看日期與時間。

已接來電 [功能表 2-2]

本功能表顯示最近已接的來電號碼。您可以撥出此號碼，儲存或查看日期與時間。

已撥電話 [功能表 2-3]

本功能表顯示最近撥出的電話號碼。您可以撥出此號碼，儲存或查看日期與時間。

各目錄中的子目錄

查看細節

您可以查看已接來電、未接來電、已撥電話的細節。

刪除

您可以刪除號碼記錄。



儲存

您可以用儲存撥出單的號碼資料。

撥號

您可以用撥出這個電話號碼。

檢視自己號碼

您可以用查看存在電話簿中的號碼。

寄訊息

您可以用送訊息給此號碼。

刪除近期通話 [功能表 2-4]

您可以用刪除所有的通話記錄。


通話時間 [功能表 2-5]

此功能表可讓您查看最後通話、所有通話、叫接來音和撥出電話的確實通話時間。同時您亦可將通話計時器清除。


最後通話 [功能表 2-5-1]

如果按  (重設)，您可用刪除最後通話時間。

叫接來音 [功能表 2-5-2]

如果按  (重設)，您可用刪除叫接來音時間。但您需先輸入保密碼。


叫撥電話 [功能表 2-5-3]

如果按  (重設)，您可用刪除撥出電話時間。但您需先輸入保密碼。



通話記錄 [功能表 2]

累計時間 [功能表 2-5-4]

如按  [重話]，您即可刪除最後通話/只接來電/撥出電話時間。但使用此功能您需輸入保密碼。

通話計費 [功能表 2-6]

您可在這些子功能表中查看您的通話時間及通話費明。

上次通話計費 [功能表 2-6-1]

此功能可提供您查看最後通話費明，若您欲清除則須輸入 PIN2 碼。

所有通話計費 [功能表 2-6-2]

此功能可提供您查詢最後通話、所有通話的費明、通話餘額費明，若您欲清除則須輸入 PIN2 碼。

注意

- 由於網路功能、計費整數捨去及稅率的多寡而定，實際通話費可能會有些出入。

費明設定 [功能表 2-7]

通話費明限制 [功能表 2-7-1]

此網路服務功能可讓您按條計費單位或貨幣單位限制通話費。如果您選擇剩餘金額，手機將在待機模式下顯示費明。以尚未超過特定費明，您即可撥打或接聽電話。



設定單率 [功能表 2-7-2]

您可以設定貨幣類型及單位價格。請聯絡您的服務供應商以取得單計費的單位價格。如欲在本目錄中選擇貨幣或單位，您必須有PIN2碼。

自動顯示 [功能表 2-7-3]

此選項設定為自動時，在待機模式下將顯示費明。通話結束時，將顯示最後通話費明。

GPRS訊息 [功能表 2-8]

您可以查詢網路上透過GPRS傳送的傳輸點。此外，您還可以查看您的連線多久。

1. 按 **OK** [確認] 或 **ESC** [選擇] 鍵。
1. 透過按軸查詢您想看的資料。選擇包括如下：

WAP [功能表 2-8-1]

您可以查詢使用WAP的期間的資料 查對空閒連線時間。

- 上次傳輸 [功能表 2-8-1-1]
- 全部傳輸 [功能表 2-8-1-2]

外接設備 [功能表 2-8-2]

您可以利用外接設備(例如音頻連接埠)，查看透過GPRS傳輸的數據量和[上網時間。



總數據 [功能表 2-8-3]

您可以查看透過WAP和外接設備傳輸的總資料量。



情景模式 [功能表 3]

在本功能表中，您可以依照不同的事件、環境及來電音訊調整及自定手機的提示音。

1. 在待機模式下，按  [功能表]。
2. 按  直接進入情景模式。

震動 [功能表 3-1]

啓動 [功能表 3-1-1]

如果您需開震動模式，您可以將情景模式設為震動模式。

靜音 [功能表 3-2]

啓動 [功能表 3-2-1]

如果您正處於一個寧靜的場合，您可以將情景模式設為靜音模式。

更改 [功能表 3-2-2]

您可以更改情景模式的功能表的值。

標準 [功能表 3-3]

啓動 [功能表 3-3-1]

您可以將情景模式設為標準模式。

更改 [功能表 3-3-2]

您可以更改情景模式的功能表的值。



大聲 [功能表 3-4]

啓動 [功能表 3-4-1]

如果您正處於一個嘈雜的環境中，您可以將情景模式設為大聲模式。

更改 [功能表 3-4-2]

您可以更改情景模式的功能表的值。

聽筒 [功能表 3-5]

當您啓動聽筒磁提組件時，您可以將情景模式設為聽筒模式。

更改

您可以更改情景模式的功能表的設定值。

前叫 [功能表 3-6]

當您啓動磁提組件時，您可以將情景模式設為前叫模式。

更改

您可以更改情景模式的功能表的設定值。

音效情景模式的功能表群組 [功能表 3-x-x]

音效情景模式功能表包含下列的功能表。

來電鈴聲類型 [功能表 3-x-x-1]

可提供您在不同環境下設定不同的來電提示方式。

鈴聲、震動、同時響震、先震後響、關閉。

鈴聲類型 [功能表 3-x-x-2]

您可以根據不同的環境設定不同的鈴聲。



情景模式 [功能表 3]

鈴聲音劃 [功能表 3-x-x-3]

可設定不同環境下的鈴聲音劃。

短訊提示音類型 [功能表 3-x-x-4]

當收到簡訊訊息時，根據不同環境發出提示音：響一次、
定時響鈴、震動、同時震響、關閉。

訊息提示音類型 [功能表 3-x-x-5]

當收到訊息時，根據不同環境設定訊息提示音。

按鍵音劃 [功能表 3-x-x-6]

根據不同的環境下設定按鍵音。

您可依照自己喜好與習慣設定下列功能：

1. 在待機模式下按音劃上/下鍵即可進行調整。
2. 進入功能表依您目前的情景進行按鍵音劃調整。

注意

自動接聽

- 可供您設定自動接聽來電以配合環境狀況。請注意，
只有靜音和聽筒模式。
 - 關閉：即使您的手機在響，手機也不會自動接聽電話。
 - 5秒後：5秒後手機將會自動接聽。
 - 10秒後：10秒後手機將會自動接聽。



鬧鐘 [功能表 4-1]

您可以用在本功能表中設定手機在特定時間發出鬧鈴。

• 啟動

您可以用設定鬧鈴的時間[小時/分鐘]

1. 進入功能表。
2. 按 [Ⓞ、Ⓢ] [開/關] 選擇開啓。
3. 如果您想設定啟動鬧鈴時間，按 [Ⓞ、Ⓢ]。
4. 按 [Ⓞ、Ⓢ] 選擇重複時間：一次、每1日、每週3日或4日。
5. 按 [Ⓞ] [設定]。

• 關閉

您可以用取消鬧鈴。

1. 進入功能表。
2. 按 [Ⓞ、Ⓢ] [開/關] 選擇關閉。
3. 您可以查看訊息“鬧鈴關閉”。

日期和時間 [功能表 4-2]

手機本身已內建時鐘功能，在此功能中您可以用設定時間格式為12小時或24小時。

時間設定 [功能表 4-2-1]

在此功能表中，您可以用設定手機時間。

1. 按 [Ⓞ] [選擇] 選擇設定時間。
2. 輸入您剛設定的時間。
3. 按 [Ⓞ] [設定]。



設定 [功能表 4]

時間格式 [功能表 4-2-2]

您可以選擇時間格式為12小時或24小時。

1. 按 [選擇] 進入選項，同時選擇您想的時間格式。
2. 按 [選擇] 選擇您想用的12小時或24小時格式。

日期設定 [功能表 4-2-3]

在此功能表中，您可以設定手機日期。

1. 進入功能表。
2. 按 [選擇] 選擇設定日期。
3. 輸入您想設定的日期。
4. 按 [設定]。

日期格式 [功能表 4-2-4]

在此功能表中，您可以設定日期格式。

- 年/月/日
- 日/月/年
- 月/日/年

手機設定 [功能表 4-3]

此項功能可提供您進行手機語言、待機圖片、外觀牆圖片、背景燈及螢幕顯示對比等進行功能修改。

語言 [功能表 4-3-1]

此功能表中讓您選擇手機操作時的語言。如果選擇自動設定，將根據您目前SIM卡選擇的語言。如果手機不支援SIM卡上的語言則會設定為英文。



待機圖片 [功能表 4-3-2]

您可以用按 (C)、(D) 選擇您要的圖片。

外螢幕 [功能表 4-3-3]

您可以用為外螢幕設定不同的功能。

- 我的顯示幕 [功能表 4-3-3-1]
您可以用設定圖片。
- 顯示時間 [功能表 4-3-3-2]
您可以用設定外螢幕顯示的時間長度。
- 字型顯示 [功能表 4-3-3-3]
您可以用設定外螢幕字型顯示的顯示。

背光燈 [功能表 4-3-4]

您可以用設定按鍵及主螢幕的背光燈光啟動的時間。

螢幕對比度 [功能表 4-3-5]

您可以用按 (C)、(D) 設定您想要的亮度。

通話設定 [功能表 4-4]

在設的功能表中，按  [選擇]。



擡聽模式 [功能表 4-4-1]

- 翻開折蓋 [功能表 4-4-1-1]
如果開啟此功能選項，您只可以在翻開折蓋時擡聽來電。
 - 是：您可以用啟動此功能
 - 否：您可以用關閉此功能



設定 [功能表 4]

- 按任意鍵 [功能表 4-4-1-2]

如果您選擇此項功能，您可以按任意鍵擄聽來音，但
， 此二鍵除外。

- 僅限發語鍵 [功能表 4-4-1-3]

如果您選擇此項功能，您只能透過[發送]鍵來擄聽來音。

發送本機號碼 [功能表 4-4-2]

(此功能需與網路系統商有提供才能使用)

設定此功能後，您可以將本機號碼送給收話方。

- 依網路設定 [功能表 4-4-2-1]

如果您使用此功能，您可以根據兩條服務網路，例如，網路1
或網路2，發送您的本機號碼。

- 開啓 [功能表 4-4-2-2]

如果您使用此功能，您可以將本機號碼發送給第三者。即是擄
收方本機將顯示您的本機號碼。

- 關閉 [功能表 4-4-2-3]

如果您使用此功能，您可以將不呼叫發送您的本機號碼。本機
折疊已經打開時，您只能按 [C、D] 鍵擄聽。



來電等候服務 [功能表 4-4-3]

(視網路而定)

若您可使用此服務，將可接聽等待中的來電。

- 啟動 [功能表 4-4-3-1]
啟動相關的服務。
- 取消 [功能表 4-4-3-2]
關閉相關的服務。
- 檢視狀態 [功能表 4-4-3-3]
查詢此服務的狀態。

自動重撥 [功能表 4-4-4]

- 開啓 [功能表 4-4-4-1]
當這項功能被啟動時，您的手機將會在撥音未接通之後嘗試重撥最多10次。
- 關閉 [功能表 4-4-4-2]
您的手機將不會在撥音未接通之後嘗試重撥。

每分鐘提示 [功能表 4-4-5]

如果您選擇開啓，手機會在通話中每隔一分鐘發出響聲提醒您通話時間。



設定 [功能表 4]

現用電話線路 [功能表 4-4-6]

只有當服務供應商支援雙線路服務時，才可使用這項功能。您的手機可撥出兩個獨立的電話號碼。這項功能可讓您選擇目前使用的手機號碼。如果您的服務供應商支援這項功能，則螢幕上將顯示如下功能表。

1. 線路1：選擇線路1為目前的手機號碼。
2. 線路2：選擇線路2為目前的手機號碼。

注意

- 如果您在支援雙線服務的範圍內選擇線路2，您將無法撥出電話。

封閉叫話群組 [功能表 4-4-7]

(須有網路功能設定)

使用此功能可以限制手機撥出屬於某個叫話群組的號碼。當使用此功能時，每個撥出的電話會連接一個群組目錄，如果已經指定一個群組目錄，他將適用於所有撥出電話。如果沒有指定群組目錄，網路會使用優先目錄（一個儲存在網路印的特定目錄）。

預設：設定所選的封閉叫話群組目錄。

開啓：啟動並編輯封閉叫話群組名稱和封閉叫話群組目錄。






關閉：刪除所有的封閉叫話群組。



保密設定 [功能表 4-5]

PIN碼 [功能表 4-5-1]

在本功能表中，您可以設定手機在開機時詢問SIM卡的PIN碼。如果這項功能已被啟動，您將會被要求輸入PIN碼。

1. 在待機模式下按  [功能表]。
2. 按  鍵直接進入，或利用  鍵或  鍵進入設定。
3. 翻閱至 **保密設定** 功能表。
4. 按  [選擇] 以選擇PIN碼。
5. 您可以看到以下功能表：
 - **開啓**：啓動PIN碼要求。
 - **關閉**：停用PIN碼要求。

通話限制服務 [功能表 4-5-2]

(須視網路功能而定)

通話限制服務可防止您的手機撥打或接聽特定類別的來電。這項功能需要通話限制密碼，您將可看到以下功能表。

- **所有撥出** [功能表 4-5-2-1]
限制撥出所有電話的服務。
- **國際漫遊時通話** [功能表 4-5-2-2]
限制撥出所有國際電話的服務。
- **限制日本國** [功能表 4-5-2-3]
限制撥出所有開往網路以外的電話（國際漫遊）服務。
- **來電** [功能表 4-5-2-4]
限制接聽所有來電的服務。



設定 [功能表 4]

- 暫停遊時來電 [功能表 4-5-2-5]
限制漫遊時接聽所有來電的服務。
- 所有數據通話 [功能表 4-5-2-6]
您可以用限制所有數據來電。
- 所有傳真通話 [功能表 4-5-2-7]
您可以用限制所有傳真來電。
- 取消所有限制 [功能表 4-5-2-8]
您可以用取消所有通話限制功能。

通話限制服務可功能表

- 啟動 [功能表 4-5-2-x-1]
您需向您的系統服務商提出申請即可使用。
- 取消 [功能表 4-5-2-x-2]
您可以用取消此功能。
- 直話狀態 [功能表 4-5-2-x-3]
您可以用直話通話限制服務目前的狀態。






注意

- 如果您使用通話限制您必須申請網路密碼。









固定撥號 [功能表 4-5-3] (視SIM卡而定)

您可以用限制撥出電話時只能撥打特定的電話號碼。這些號碼由您的PIN2碼提供保護的。

1. 在待機模式下按  [功能表]。
2. 按  鍵頁面接進²，或按  鍵及  鍵進² 設定。
3. 翻閱至 **固定撥號** 功能表。
4. 按  [選擇] 以選擇 **固定撥號**。
5. 如果PIN2碼是正確的，您將查看以下功能表：
 - **啓動**：您可以用限制撥出電話時只能撥打選取的電話號碼。
 - **關閉**：您將不受限制地撥打任何電話號碼。
 - **號碼表**：您將查看儲存作為固定撥號的號碼表。

更改密碼 [功能表 4-5-4]

您可以用更改存取密碼：PIN碼、PIN2碼、保密密碼。

1. 在待機模式下按  [功能表]。
2. 按  鍵頁面接進²，或按  鍵及  鍵進² 設定。
3. 翻閱至 **固定撥號** 功能表。
4. 選擇 **更改密碼** 按  [選擇]。
5. 如果您要更改PIN碼/PIN2碼/保密密碼，請輸入您的舊密碼，然後按  [確認]。
6. 然後再輸入新的PIN碼/PIN2碼/安全密碼，並確認。

網路設定 [功能表 4-6]

您可以用自動或手動地選擇您的連接的網路。通常，手機將自動方式選擇網路。



設定 [功能表 4]

自動 [功能表 4-6-1]

手機會自動選擇所處區域內可用的網路。

手動 [功能表 4-6-2]

手機將搜尋並顯示出一個可用網路列表。如果您想利用使用的網路與您的開戶網路服務商(無論其漫遊協議，您亦可)選擇這個網路。

GPRS 設定 [功能表 4-7]

當您使用GPRS連結行動網時，您可建立數據通訊。為可動用GPRS，您必須先設定下列選項：

終端類型 [功能表 4-7-1]

- 雙重 [功能表 4-7-1-1]
- 只適用於GPRS [功能表 4-7-1-2]
- 只適用於GSM [功能表 4-7-1-3]

接收GPRS傳輸 [功能表 4-7-2]

- 自動 [功能表 4-7-2-1]
- 手動 [功能表 4-7-2-2]

外接設備 [功能表 4-7-3]

當您利用外接設備透過GPRS使用行動網時，您可用設定包含APN、IP地址、DNS、使用者ID和密碼並可設定5經上網帳號您的網服務商可提供您相關上網訊息。

恢復原廠設定 [功能表 4-8]

您可用選擇本功能表，將手機重設回預設的設定值。此外，您必須有保護密碼才可啟動這項功能。



外音轉接 [功能表 5]

(視網路及您訂購的服務而定)

外音轉接服務可讓您將接到的語音通話、傳真通話及數據通話轉接至其他號碼。相關詳情請洽詢您的服務供應商。

1. 在待機模式下，按  鍵 [功能表 1]。
2. 按  直接進入或使叫 [C 和 D] 進入外音轉接。

所有語音通話 [功能表 5-1]

無條件轉接所有語音通話。

忙線時 [功能表 5-2]

當手機正在進行通話時轉接語音通話。

無人接聽時 [功能表 5-3]

當手機或關機或在網路範圍外時轉接語音通話。

無網路或關機時 [功能表 5-4]

當您未接聽時轉接語音通話。

所有數據通話 [功能表 5-5]

無條件轉接至一個含齊繫連線的號碼。

所有傳真通話 [功能表 5-6]

(視網路及您訂購的服務而定)

無條件轉接至一個含齊繫連線的號碼。



來電轉接 [功能表 5]

(視網路及您申請的服務而定)

子功能表 [功能表 5-x-x]

來電轉接功能表亦包含下列子功能表。

啓動 [功能表 5-x-1]

啓動對應的服務。

- 進入留言信箱

轉接至語音信箱中心。此功能不包含在所有數據通話及所有傳真通話功能表內。

- 其他號碼

輸入要轉接的號碼。

- 常用號碼

您最常撥最近被轉接的號碼。

取消 [功能表 5-x-2]

關閉相關服務。

檢視狀態 [功能表 5-x-3]

查看相關服務狀態。

取消全部轉接 [功能表 5-7]

取消所有通話轉接服務。



行程表 [功能表 6-1]

當您進入本功能表時，螢幕上將會顯示一個日曆。在畫面上方是日期和提示圖案的部份。當您更改日期時，行程表也將根據日期而更新。同時，行程表會使用日期游標標示出特定的日期。如果您在行程表中看到任何感線，表示當天有安排行程。這項功能可提醒您您的行程表及備忘錄。如果您以為某個日期設定了鬧鈴提示，手機會發出鬧鈴。

切換日、月、年的步驟：

修改 [功能表 6-1-1]

您可在選擇的日期上增加提示，也可刪除提示。

刪除 [功能表 6-1-2]

您最多可添加30筆提示，每筆提示字數為30個字元。

加上新 [功能表 6-1-3]

您可用刪除已設定的提示。



查看所有行程表 [功能表 6-1-4]

顯示所有行程表中已設定的提示。

進入日期 [功能表 6-1-5]

您可用查詢已經輸入的日期。

備忘錄 [功能表 6-2]

1. 將游標移至備忘錄選項。
2. 按  [選擇]。
3. 輸入一筆備忘錄，然後按  [儲存]。
4. 您可用查看所有的功能表。

修改 [功能表 6-2-1]

您可用編輯所選擇的備忘錄。



電話簿 [功能表 6]

加入新 [功能表 6-2-2]

您可輸入一個新備忘，最多可有20個備忘紀錄，每個備忘最多個字元。

刪除 [功能表 6-2-3]

您可刪除選擇的備忘紀錄。

全部刪除 [功能表 6-2-4]

您可刪除之前設定的所有備忘紀錄。

電話簿 [功能表 6-3]

搜尋 [功能表 6-3-1]

(從電話簿撥號)

1. 首先，在待機模式下按 鍵 [電話簿] 打開電話簿。
2. 然後，按 鍵 [選擇] 進入搜尋。
3. 您可依姓名的電話來尋找一項記錄。
4. 選擇 鍵 [列表]。
5. 如果您想修改、刪除、複製一項記錄，請將語音附加到一項記錄，請選擇 鍵 [選項]。螢幕上會顯示下列目錄。
 - 修改 : 按 鍵選擇，可修改姓名、電話號碼、電子郵件和傳真。
 - 查看細節 : 您可用查看姓名和號碼的詳細內容。
 - 刪除 : 您可刪除一項記錄。
 - 存到SIM/電話 : 您可用將記錄由SIM卡複製至手機或由手機複製至SIM卡。
 - 撥號 : 您可用選擇的記錄直接撥號。
 - 新訊息 : 您可用編寫一個訊息。



新增 [功能表 6-3-2]

您可以用此功能增加新的電話簿記錄。

手機記憶最多可容納255個記錄。SIM卡的記憶容數則由行動電話服務供應商決定。

您也可以在手機記憶內儲存最多20個字元的姓名，也可儲存在SIM卡內。SIM卡的字元儲存容數依SIM卡而定。

1. 在待機模式下，按 鍵[電話簿]打開電話簿。您也可以按助聽 、 移至電話簿功能表。
2. 翻閱至新增¹，然後按 鍵[選擇]引進¹此功能。

- SIM卡：您可輸入新姓名及電話號碼作為一筆記錄。

- a. 輸入您要增加的姓名。

- b. 按 鍵[確認]，然後輸入一個號碼。

- c. 按 鍵選擇群組。

- d. 按 鍵[儲存]。

- 手機：您可輸入姓名、電話號碼及電郵地址。

- a. 輸入您要添加的姓名。

- b. 按 鍵[確認]。

- c. 按 鍵和 鍵逐一輸入移動電話號碼、住宅號碼、公司號碼及傳真號碼。此外，您也可以輸入¹ 電郵地址。按 鍵[確認]。

- d. 按 鍵和 鍵再設定記錄的群組。

- e. 按 鍵[儲存]。



語音簿 [功能表 6]

來電者群組 [功能表 6-3-3]

您總共可建立 6 個群組。

1. 在待機模式下按 **[]** 鍵 [語音簿] 以進入語音簿。
2. 翻閱至來電者群組，然後按 **[]** 鍵 [選擇] 以進入本目錄。
3. 螢幕上將顯示每一個群組列表：家庭，重新命名，明多，同事，群組 1，群組 2，其他。
4. 按 **[]** 鍵 [選項] 以選擇您要管理的群組名稱。
5. 然後，螢幕上將顯示如下的可功能表。

- 成員列表

- 重新命名

您可以用更改群組名稱。

- 群組鈴聲設定

您可以用按照群組設定來電鈴聲。

- 群組圖示

您可以用按照群組設定圖示。



快速撥號 [功能表 6-3-4]

您可以指定數字鍵 **2** 至 **9** 的任一鍵至姓名列表內的一項記錄。按住該鍵2至3秒，您即可直接撥號。

1. 先在待機模式下按 **[]** 鍵 [青語簿] 開啓青語簿。您也可以直接在待機模式下按鍵直接 **[]** 進入 **日程表 - 青語簿**。
2. 翻閱至 **快速撥號**，然後按 **[]** 鍵 [選擇] 進入本目錄。
3. 螢幕上將顯示快速撥號列表。
4. 如果您想增加快速撥號，請選擇 **<空>**。然後，您可以在青語簿內搜尋姓名。
5. 如果您想選擇配對快速撥號的姓名，您可以看到如下目錄。
 - 更改：您可以更改配對快速撥號的青語簿記錄。
 - 刪除：您可以刪除被配對成快速撥號的青語號碼。

記憶設定 [功能表 6-3-5]

您可以設定手機的SIM卡作為優先儲存。

1. 在待機模式下按 **[]** 鍵 [青語簿] 開啓青語簿。
2. 翻閱至設定，然後按 **[]** 鍵 [選擇] 進入。
3. 然後，螢幕上將顯示如下的目錄。
4. 按 **[]** [確認] 選擇SIM卡或手機。



語音簿 [功能表 6]

全部刪除 [功能表 6-3-6]

您可以用刪除SIM卡、手機中的所有語錄。這功能需設定密碼。

1. 在待機模式下按 **[]** 鍵 [音語簿] 開啟音語簿。
2. 翻閱至全部刪除，然後按 **[]** 鍵 [選擇]。
3. 然後，選擇一個您想刪除的語錄：SIM卡、手機。
4. 接著，您需輸入手機密碼。
5. 按 **[]** 鍵 [選擇]，或按 **[]** 鍵 [返回] 取消。

全部複製 [功能表 6-3-7]

您可以用將語錄從SIM卡記憶複製/移動至手機記憶，或者從手機記憶複製/移動至SIM卡記憶。

1. 先在待機模式下按 **[]** 鍵 [音語簿] 打開音語簿。
2. 翻閱至全部複製，然後按 **[]** 鍵 [選擇] 開啟本目錄。
3. 螢幕上將顯示如下的子目錄。

- SIM卡存至手機 [功能表 6-3-7-1]

您可以用將語錄從SIM卡複製至手機記憶。

- 手機存至SIM卡 [功能表 6-3-7-2]

您可以用將語錄從手機記憶複製至SIM卡。

- 保留取卡設定 [功能表 6-3-7-x-1]
- 刪除取卡設定 [功能表 6-3-7-x-2]



訊息提示 [功能表 6-3-8]

- 特別服務號碼 [功能表 6-3-8-1]

利用這項功能可進入您的服務供應商提供的特殊服務列表 (如果SIM卡支援此項功能)。

1. 在待機模式下按 鍵 [青語簿] 以開啓青語簿。
2. 翻閱至 **訊息提示**，然後按 鍵 [選擇] 進入本功能表。
3. 翻閱至 **特別服務號碼**，然後按 鍵 [確認] 進入本功能表。
4. 螢幕上將顯示可用的服務名稱。
5. 用 鍵及 鍵選擇一項服務。按 鍵 [發送]。

- 記憶查詢 [功能表 6-3-8-2]

這項功能可讓您查看您的青語簿有多少可叫叫的記憶查詢。

1. 在待機模式下按 鍵 [青語簿] 以開啓青語簿。
2. 翻閱至 **訊息提示**，然後按 鍵 [選擇] 進入本功能表。
3. 翻閱至 **記憶查詢**，然後按 鍵 [選擇] 進入本功能表。

- 本機號碼 (視SIM卡而定) [功能表 6-3-8-3]

您可在SIM卡中查詢您的本機號碼。



娛樂樂工具 [功能表 7]

遊戲 [功能表 7-1]

您可以用查看、刪除及控制下載的遊戲。

計算機 [功能表 7-2]

此工具包含標準的計算功能，例如 +、-、*、÷：加、減、乘、除。

1. 按數字鍵輸入數字。
2. 利用 、、、 導覽鍵選擇運算符號。
3. 然後，輸入數字，隨後輸入該運算符號。
4. 您可以用按 (結果) 或 (確認) 鍵來查看結果。
5. 如果您想繼續計算，請重複以上步驟。
6. 利用 (重設) 鍵清除任何數字或符號。如果您想結束計算步驟，請按 鍵。

巧的資料夾 [功能表 7-3]

您可以用查看、刪除及控制下載的檔案。

圖片 [功能表 7-3-1]

動畫 [功能表 7-3-2]

音樂 [功能表 7-3-3]










與一個主副目錄的巧功能表

- 編輯標題 [功能表 7-3-x-1]
您可以用修改某一個下載檔案的標題。
- 刪除 [功能表 7-3-x-2]
您可以用刪除某一個下載檔案。
- 全部刪除 [功能表 7-3-x-3]
您可以用刪除所有下載檔案。




 

單位換算器 [功能表 7-4]

這項功能可將任何測量數目換算成您要的單位。總共可換算成4種單位：長度、面積、重量及體積。

1. 您可按下  [單位] 鍵從這4種單位中選擇一種。
2. 利用 、 鍵來選擇目前的數值，接著您可利用 、 鍵來設定您要輸入的單位。
3. 按下  (或 ) 選擇要轉換的單位。
4. 在空白位數輸入數值。
5. 如果您想結束換算，請按  或  [返回]。

時區設置 [功能表 7-5]

您可查看世界各城市的時間。另外，您也可將目前的時間設定成您選取的城市時間。

1. 按 、 鍵以選擇屬於時區 [] 的城市。
2. 您可將目前的時間設定成您選取的城市時間，按  [返回] 鍵退出功能表。

錄音器 [功能表 7-6]

您可儲存及播放3段語音訊息，每一段最長可錄製30秒。

答錄機 [功能表 7-7]

啟動這項功能則可讓您的手機擁有自動答錄的功能，手機可提供三組留言設定、三組語音設定另外二組可自訂錄製留言語音。



娛樂樂器 [功能表 7]

取消 [功能表 7-7-1]

當您想取消自動答錄功能時，您可使用此功能進行取消答錄機。

標準 [功能表 7-7-2]

如果您啟動此項功能，機器將會以“標準”的留言訊息，自動接聽電話。您亦可使用“談聽”功能談聽答錄留言語音。

會議 [功能表 7-7-3]

如果您啟動此項功能，機器將會以“會議”的留言訊息，自動接聽電話。您亦可使用“談聽”功能談聽答錄留言語音。

開前 [功能表 7-7-4]

如果您啟動此項功能，機器將會以“開前”的留言訊息，自動接聽電話。您亦可使用“談聽”功能談聽答錄留言語音。

使用者自定1 [功能表 7-7-5]

在啟動此項功能前您必須事先錄至一道新的答錄留言語音，待您錄製完成後，您亦可使用“談聽”功能談聽您自定的答錄留言語音。

使用者自定2 [功能表 7-7-6]

在啟動此項功能前您必須事先錄至一道新的答錄留言語音，待您錄製完成後，您亦可使用“談聽”功能談聽您自定的答錄留言語音。



錄音訊息 [功能表 7-7-7]

此功能除提供您收聽答錄機留言訊息，另外亦提供您下列功能：

1. 聽取留言訊息。
2. 儲存號碼：您可儲存來電者號碼。
3. 刪除：您可刪除留言語音訊息。
4. 撥號：您可直接撥出對方電話。
5. 複訊息：您可利用簡訊回覆對方訊息。

鈴聲間隔 [功能表 7-7-8]

此功能提供您設定答錄機撥聽時間，其格式如下：

1. 響一 聲之後。
2. 響三 聲之後。
3. 響五 聲之後。

紅外線 [功能表 7-8]

啟動這項功能，即可透過紅外線使用PC同步化功能(PC-sync)。因此同時您無法同時使用附掛聽筒及紅外線的功能。

PC 同步化

電腦同步是一個透過數據傳輸線在電腦與手機之間交換數據的程序。因此，如果您想使用這項功能，您必須購買相關配件套件。如需更多資訊，請參閱光碟內的電腦同步說明檔案。



行動網 [功能表 8]

本手機可支援無線應用協定(WAP)為基礎的服務。您可存取您的開戶網絡支援的服務。服務目錄可供您獲取各種資訊，例如新聞、天氣預報及航宇時間表等。

主頁 [功能表 8-1]

返回主頁。主頁是目前啓用之上網設定所定義的網站。若啓用的上網設定尚未定義主頁，服務供應商將為您定義一個主頁。

書籤 [功能表 8-2]

您最多可儲存50個書籤。翻閱至您的書籤並按  [選項]，并操作以下功能選項：

- **連接**：連接至您選取的書籤。
- **加上新**：您可主動增加新的書籤。
- **修改**：修改選擇之書籤的內容。
- **刪除**：從書籤刪除選取的書籤。

提示

- 如果您尚未儲存任何書籤，只有「增加」目錄可供使用。

增加訊息 [功能表 8-3]

您可管理使用Push服務的收信箱及訊息。

收件箱 [功能表 8-3-1]

您可主動取或刪除Push訊息。

接收 [功能表 8-3-2]

您可利用這個選項設定是否接收訊息。



情景模式 [功能表 8-4]

您最多可建立5個上網設定，而且每次只能啟動其中一個。翻閱至您所使用的上網設定，跟著按  以操作所有的功能選項。

啟動 [功能表 8-4-1]

啟動所選擇的上網設定。

設定 [功能表 8-4-2]

修改及變更所選擇之上網設定的WAP設定。

• 主頁 [功能表 8-4-2-1]

此設定可讓您輸入可用作主頁使用的URL網址。您不需要在每一個URL網址前面輸入“http://”因為WAP瀏覽器會自動為您添加。

• 顯示圖像 [功能表 8-4-2-2]

您可選擇是否顯示WAP網頁上的圖像。

• 連接類型 [功能表 8-4-2-3]

連接類型選項包含暫時連接或持續連接，依您使用的間道而定。

- 固定連續：連接主導的服務
- 短暫：無連接的服務

• 保密設定 [功能表 8-4-2-4]

根據間道而定，這個選項可設定為「無」或「安全」。如果您希望安全地連接，請選擇安全。否則，請選擇無。您的間道必須支援這個選項。

• 間道訊息 [功能表 8-4-2-5]

幾乎所有WAP間道都不需要用戶名及密碼。如果您的間道沒有提供用戶名及密碼，應該是自您的網路提供。同時，在瀏覽WAP網站之前必須先設定好用戶名及密碼。



行動網 [功能表 8]

• 連接方式 [功能表 8-4-2-6]

您可設定連接方式：數據或GPRS。

- 數據
- GPRS

功能表[8-4-2-7]選單之設定項目將依照您所選擇的**連接方式**進行變更。

• 資料設定 [功能表 8-4-2-7]

IP 地址：輸入您的資料之WAP閘道的IP地址。

撥號：輸入您的資料之WAP閘道須撥打的電話號碼。

用戶名：您的撥號伺服器（而非WAP閘道）將用此用戶名來確認您的身份。

密碼：您的撥號伺服器（而非WAP閘道）將用此密碼來確認您的身份。

連接類型：選擇數據通訊的類型：類比或數碼（ISDN）。

連接速度：數據連接的速度。

• GPRS設定 [功能表 8-4-2-7]

只有當您選擇GPRS作為載送器服務時，此服務設定才會出現。

IP 地址：輸入您的資料之WAP閘道的IP地址。

網路接點：輸入GPRS的網路接點。

使用者名稱：使用者名稱認證於網路接點。

密碼：網路接點要求輸入您的密碼。

• 連接時間計時器 [功能表 8-4-2-8]

當您設定限制時間（30至300秒）之後，如果未輸入或傳送數據時，服務將會中斷。



重新命名 [功能表 8-4-3]

修改上網設定檔的名稱。

電子郵件伺服器 [功能表 8-4-4]

儲存您經常使用的電子郵件的URL網址。

- **連接**
連接到您設定成電子郵件伺服器的URL。
- **修改地址**
輸入電子郵件的URL網址。

進¹ URL [功能表 8-5]

您可直接移至您想瀏覽的網站。在此功能表下，您也可修改網址。

緩存 [功能表 8-6]

您可刪除緩存記錄的門卷，或更改緩存模式。

清空緩存 [功能表 8-6-1]

緩存記錄中的所有門卷都會被刪除。



行動網 [功能表 8]

緩存查詢 [功能表 8-6-2]

您可修改查詢緩存的時間。

- 經常 [功能表 8-6-2-1]
每次當URL被載入或被導覽時?詢緩存。
- 啓動時查詢 [功能表 8-6-2-2]
只有在啓動WAP時查詢緩存。
- 關閉 [功能表 8-6-2-3]
從不查詢緩存。在此設定下，緩存可被視為關閉。

WAP 資訊 [功能表 8-7]

您可查看有關G7030WAP的設定。

重設情報模式 [功能表 8-8]

您可將上網設定重設回原廠設定值。



您可以在線上查看以下這些功能表：

■ 訂閱

與 [功能表 8-1] 相同。

■ 重新下載

重新下載當前的網訂。

■ 書籤

與 [功能表 8-2] 相同。

■ 加入至書籤

將當前的網站設成書籤。您還可以用修改書籤標題。

■ 進入 URL

與 [功能表 8-5] 相同。

■ 進入電子郵件伺服器

連接當前的 URL 作為電子郵件伺服器。

■ 設成電子郵件伺服器

將當前的 URL 設成電子郵件伺服器。

■ 清空緩存

您可以清空緩存記憶的內容。



SIM卡服務 [功能表 9]

您的服務供應商可透過SIM卡提供特殊的應用服務，例如家庭銀行、股市等等。如果您申請這類服務，該服務名稱將會出現在銀的屏端現在。SIM卡服務目錄，您的手機即可應付未來的應用需求，而且可支援您的服務供應商提供新增的服務。欲知詳情，請聯絡您的服務供應商。



如欲使用數據或傳真服務，您需有一個通訊軟體，例如一個數據或傳真程式。在啟用這些功能之前，您必須先將手機連接至一部電腦，以確保您的手機可連接一部英否的裝置。

發送數據或傳真通訊

1. 將手機連接至您的電腦。
2. 啟動通訊軟體之後，撥個號碼，然後發出一份數據或傳真。
3. 發出數據或傳真之後，您可直接關閉通訊軟體、按[結束]。

接收數據或傳真通訊

如欲使用不同的語音、數據和傳真電話號碼，本手機可識別不同的通訊類別。

接收數據或傳真通訊 — 個別號碼 (多號碼)

使用數據或傳真服務時，螢幕上會顯示您目前接收的通訊類別。

接收數據或傳真通訊的步驟如下：

1. 將手機連接至您的電腦。
2. 啟動通訊軟體之後，接聽來電，然後接收數據或傳真（如果不是自動接聽）。
3. 接收數據或傳真之後，您可直接關閉通訊軟體、按[結束]。

電腦同步

電腦同步是一個透過數據傳輸線在電腦與手機之間交換數據的程式。因此，如欲使用此項功能，您必須購買相關配件。如需更多資訊，請參閱光碟內的電腦同步說明檔案。



多方通話功能

在通話期間，顯示在手機螢幕上的功能表不同於待機畫面下的項設功能表，我們接下來介紹一些通話中的功能選項。

1. 通話時

1-1 保留一個通話

您可以保留一個通話，再直接按鍵[發送]恢復通話。當您撥打或接聽通話之後，按[發送]可保留通話。保留通話之後，再按[發送]即可恢復通話。

1-2 撥打第二個通話

您可以從通話簿撥打第二個通話的號碼。按[通話簿]，然後選擇撥號。若您在通話中將撥打的號碼存到通話簿，按[通話簿]，然後選擇即可重新號碼。

1-3 在兩個通話之間切換

如果您想在兩個通話之間切換，請選擇[選項]，然後選擇[切換]，再直接按[發送]。

您可以按上/下箭號鍵選定其中一個通話。如果您想結束其中一個通話，先選定您想結束的通話，然後按[結束]。

1-4 接聽來電

當手機發出響鈴時，按[發送]即可接聽來電。

手機可以在您正在通話時向您發出來電提示。您的顯示屏會響起一個嘟嘟音，然後螢幕上會顯示有第二個來電正在等待中。

若已啟動來電等候功能，您可以按[發送]或選擇[接聽]，以保留第一個通話並接聽第二個通話。

您可以選擇[功能表]，再選擇結束並接聽，以結束當前的通話並接聽等候中的通話。



1-5 拒接來電

當您在通話時，只須按[結束]即可拒接來電。

若您正在通話中，可按[功能表]並選擇`多通話/結束通話`或按[結束]來拒接第一個來電。

1-6 在通話時控制音響

您可以在通話時按[選項]再選擇音響。

1-7 將聽筒靜音

在通話期間按[選項]，然後選擇靜音，可將您的手機聽筒靜音。如作復手機靜音時，請按[取消靜音]。

手機被靜音時，來電者無法聽到您的聲音，不過您仍可聽到他們的聲音。

1-8 在通話時開啓雙音多頻音

在通話時開啓雙音多頻音，例如，可讓您的手機使用自動總機接線系統，選擇[選項]，再選擇 DTMF開啓。如關閉雙音多頻音時，請按相同步驟關閉。

1-9 叫出訊息的「SIM卡二號組」

(螢幕上名稱顯示網絡商之SIM卡)

在通話中功能表下選擇[選項]，然後選擇訊息的「SIM卡二號組」(螢幕上名稱顯示網絡商之SIM卡)，您即可到達「訊息」及「SIM卡二號組」主功能表選項。只有當您的手機內的SIM卡可支援SIM卡二號組服務時，SIM卡二號組功能表才會出現在螢幕上。



多方通話功能

2. 多方通話或會議通話

若您的網絡服務供應商能支援多方通話或會議服務，此功能將使您可同時與超過一位來電者對話。

若啓動多方通話，您必須至少有一個電話正在通話中及一個電話保留中，同時這兩個電話都可被撥聽。啓動多方通話之後，啓動者可增加、結束或掛出（即從多方通話中掛出，但仍與您連線）任何一個電話。這些選項都包含在通話中功能表內。

一經多方通話可容許最多5位通話者。通話開始之後，您將擁有此多方通話的控制權，只有您可增加其他通話者到這經多方通話。

2-1 撥打第二個電話

您可在通話時撥打第二個電話。如欲撥打第二個電話，請輸入其電話號碼，然後按[發送]。當您撥通第二個電話時，第一個電話會自動被保留。隨着，您可選擇[選項]，然後選擇[+]按在兩個電話之間切換。

2-2 啓動多方通話

您可選擇[選項]，然後選擇多方通話/全都加¹，將一個保留中的通話聯結至當前正在進行的通話，以形成一經多方通話。

2-3 保留多方通話

如欲保留多方通話，選擇[選項]，然後選擇多方通話/全都保留。

2-4 恢復保留中的多方通話

如欲恢復保留中的多方通話，請選擇[選項]，然後選擇多方通話/全都加¹。

2-5 將另一個電話加¹多方通話

若欲將當前進行中的通話加¹保留中的多方通話，請選擇[選項]，然後選擇多方通話/全都加¹。



2-6 顯示多方通話中的通話者

您可按  鍵和  鍵在手機螢幕上逐一顯示組成多方通話的各個通話者號碼。

2-7 保留多方通話中其中一位通話者的通話

如果您想保留多方通話中其中一位通話者的通話（其號碼目前顯示在螢幕上），請選擇[選項]，然後選擇多方通話/排除。

2-8 在多方通話中進行私人通話

如果您想與多方通話中其中一位通話者進行私人通話，首先將該通話者的電話號碼顯示在螢幕上，然後選擇鍵[選項]，再選擇多方通話/私人通話，將所有其他通話者的通話保留。

2-9 結束多方通話

按[結束]將所有結束螢幕上目前顯示的多方通話者之通話。如果您結束一組多方通話，請按[選項]，然後選擇多方通話/結束多方通話。

選擇[選項]，然後選擇多方通話/全都結束，將會結束所有進行中及保留中的通話。

2-10 轉移(ECT)

如果您目前有一個電話正在保留中，另一個正在進行中，您可以將其其中一位通話者聯結到另一位通話者，然後退出該個電話。若採用此方式轉移通話，請從通話中的功能表選擇多方通話/轉移的選項。



保養與維護

使用本主機時，請務必遵循以下的基本安全注意事項。

- 請勿用潮濕的工具碰觸充電器接頭。
- 請勿自行拆開本主機。（需維修時，請交由合格的服務技術人員處理。）
- 主機應遠離香煙、收音機或個人音響等電子設備。
- 主機應遠離熱源，例如散熱器或電爐附近。
- 切勿拋擲本主機。
- 避免讓主機承受機械性震盪或撞擊。
- 若用印裝紙或保鮮紙包裹本主機，主機的表面塗層可能會受損。
- 請使用乾布來清潔主機外部。（請勿使用苯、稀釋劑或酒精等溶劑）。
- 請勿讓本主機經過掃帚、塵霧或塵埃。
- 請勿讓主機接近信用卡或其他附有磁帶的卡，否則可能損壞磁帶內的資料。
- 請勿讓任何物體撞擊屏幕，以免損壞機身。
- 請勿讓主機受潮或弄濕。
- 使用如磁帶、主機等配件時請份外小心，如無必要，請勿觸摸三線。



■ 香沖保養

- 香沖在重新充香之前必須先空放香。與其他香沖系統不同的是，本香沖的性能不會受到副機效應的影響。
- 您只可使用LG香沖和充香器。LG充香器是特別為發揮香沖最長壽命而設計的。
- 請勿自行拆開香沖或造成香沖短路。
- 請保持香沖金屬接觸面的清潔。
- 當香沖無法再發揮令人滿意的性能時，請更換香沖。此香沖可重複充香數次，直到它不能再更換為止。
- 如果香沖經過長時間未使用，應重新充香以發揮最大的效力。
- 請勿將香沖和香器置於日光下曝曬，或在高濕度下使用，例如在浴室門。
- 請勿將香沖保存在太熱或太冷的地方，如此可能會損耗香沖的性能。



技術數據

一般資料

產品名稱 : G7030

系統 : GSM 900/DCS 1800

環境溫度

最高 : +55 °C

最低 : -10 °C





備忘錄

ENGLISH

GPRS Phone

USER'S MANUAL

MODEL: G7030

Please read this manual carefully
before operating your set.
Retain it for future reference.

For Your Safety



All radio transmitters carry risks of interference with electronics in close proximity.



Mobile Phones must be switched off at all times in an aircraft.



Avoid pointing active infrared port at eyes.



Do not use your phone near petrol stations, fuel depots, chemical plants or blasting operations.



Switch off the phone in any area where required by special regulations. For example, do not use your phone in hospitals as it may affect sensitive medical equipment.



Minor interference may affect TVs, radios, PCs, etc.



Do not hold the phone in your hand while driving.



Do not dismantle the phone or battery.



Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.



For Your Safety



Do not touch the charger or phone with wet hands.



For your safety, use ONLY specified ORIGINAL batteries and chargers.

Please note:



Batteries should be disposed of in accordance with relevant legislation.



Only use ORIGINAL accessories to avoid damage to your phone.



Emergency call may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls.

Important Information

This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.



Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model G7030 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).
- The highest SAR value for this model phone which tested by DASY3 for use at the ear is 1.25 W/kg (1g).



Contents

Overview

Package contents	10
Parts of the Phone	11
• the front	11
• the back	12
• Sub LCD of the phone	13
Key Description	14
• Side Keys	15
• Alphanumeric Keys	16


Display Information

Display Information	17
• On-Screen Icons	17
• Top Menu Icons	18

Getting Started

Installation	19
• Inserting the SIM Card	19
• Installing the Battery	19
• Charging the Battery	20
• Disconnecting the charger	21
Powering On Sequence	22
• To get started with the phone	22
• To turn off the phone	22
Access Codes	23
• PIN code (4 to 8 digits)	23
• PIN2 code (4 to 8 digits)	23
• PUK code (4 to 8 digits)	23
• PUK2 code (4 to 8 digits)	24
• Security code (4 to 8 digits)	24



Making and Answering calls	25
• Making a call	25
• Making a call by  [Send key]	25
• International Calls	25
• Making a call using the Phonebook	25
• Making call by Speed dials	25

Menu Description

Phonebook	26
Menu Tree	27
Messages [Menu 1]	29
• Write message [Menu 1-1]	29
• Inbox [Menu 1-2]	34
• Outbox [Menu 1-3]	35
• Info service [Menu 1-4]	36
• Voice messages [Menu 1-5]	37
• Delivery reports [Menu 1-6]	38
• Templates [Menu 1-7]	38
• Settings [Menu 1-8]	38
Call register [Menu 2]	40
• Missed calls [Menu 2-1]	40
• Received calls [Menu 2-2]	40
• Dialed calls [Menu 2-3]	40
• Clear recent calls [Menu 2-4]	41
• Call durations [Menu 2-5]	41
• Call costs [Menu 2-6]	42
• Cost settings [Menu 2-7]	43
• GPRS information [Menu 2-8]	43



Contents

Profiles [Menu 3]	45
• Vibrate only [Menu 3-1]	45
• Quiet [Menu 3-2]	45
• General [Menu 3-3]	45
• Loud [Menu 3-4]	46
• Headset [Menu 3-5]	46
• Car [Menu 3-6]	46
Settings [Menu 4]	48
• Alarm clock [Menu 4-1]	48
• Date & Time [Menu 4-2]	48
• Phone settings [Menu 4-3]	50
• Call settings [Menu 4-4]	51
• Security settings [Menu 4-5]	54
• Network settings [Menu 4-6]	57
• GPRS settings [Menu 4-7]	57
• Restore factory settings [Menu 4-8]	58
Call divert [Menu 5]	59
• All voice calls [Menu 5-1]	59
• If busy [Menu 5-2]	59
• If not answered [Menu 5-3]	59
• If out of reach [Menu 5-4]	59
• All data calls [Menu 5-5]	59
• All fax calls [Menu 5-6]	59
• Cancel all diverts [Menu 5-7]	60
Organizer [Menu 6]	61
• Schedule [Menu 6-1]	61
• Memo [Menu 6-2]	62
• Phonebook [Menu 6-3]	63

Fun & Tools [Menu 7]	69
• Game [Menu 7-1]	69
• Calculator [Menu 7-2]	69
• My folder [Menu 7-3]	69
• Unit converter [Menu 7-4]	70
• World time [Menu 7-5]	70
• Voice recorder [Menu 7-6]	70
• Answering phone [Menu 7-7]	70
• Infrared [Menu 7-8]	71
Internet [Menu 8]	72
• Home [Menu 8-1]	72
• Bookmarks [Menu 8-2]	72
• Push messages [Menu 8-3]	72
• Profiles [Menu 8-4]	73
• Go to URL [Menu 8-5]	75
• Cache settings [Menu 8-6]	75
• WAP information [Menu 8-7]	76
• Reset profiles [Menu 8-8]	76
Internet On-line menu	77
SIM service [Menu 9]	78
How to Use Data and Fax call	79
In call Menu	80
1. During a call	80
2. Multiparty or Conference Calls	82
Care and Maintenance	84
Technical data	86

 


Package contents

Check to make sure that you have all the parts shown below.



Handset



2 Standard Batteries



 
Portable Handsfree



Card(s)



User's manual



CD/Data Kit



Travel Adapter

 
Notice

- The package contents may vary in different regions. Please check with LG service agent in your region for enquiry.

Parts of the Phone




the front

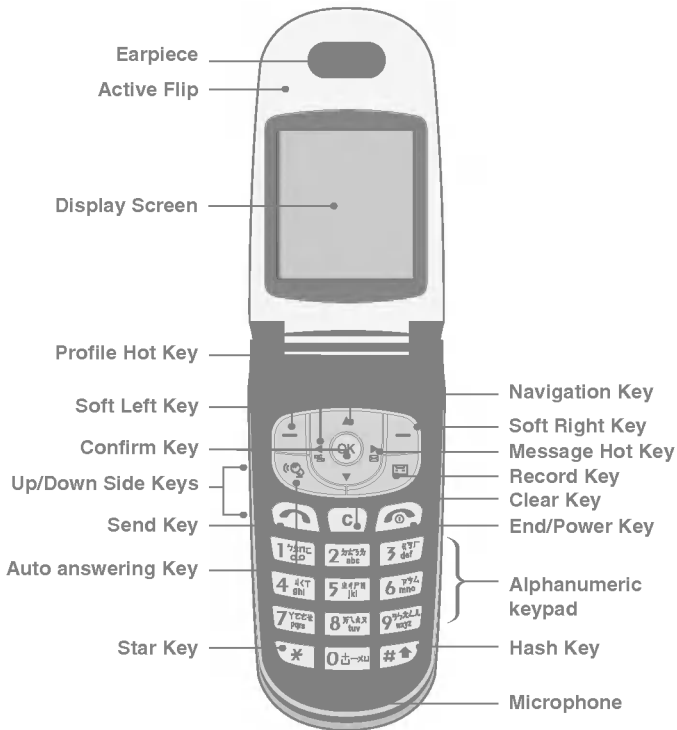




Parts of the Phone

 the back

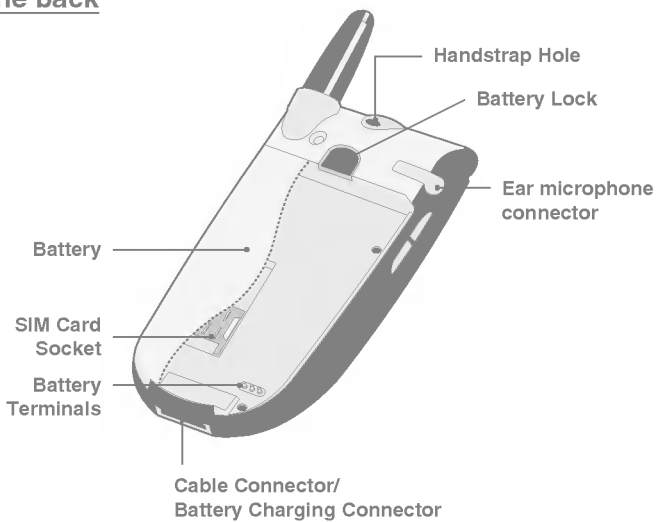



Sub LCD of the phone

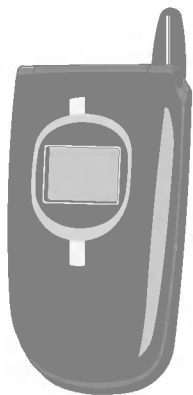 

You can view the icon of receiving text message or voicemail even not flipping the phone open. In addition, you can check the name and number for incoming calls.

Notice




 




- If the name or number of entry is not saved in phone book, "New call" will be displayed when receiving a call.









Key Description

The following shows key components of the phone.


Keypad Description

	Description
	Soft Left Key / Soft Right Key Each of these keys performs the function indicated by the text on the display immediately above it.
	Navigation Keys Left navigation key Used to Profile hot key and Menu options key. Right navigation key Used to Message hot key and Menu options key. Up/Down navigation key Used to search name of Phonebook and Menu options key. Confirm key You can go WAP directly if you press this key for a long time.
	Auto answering Key / Record Key You can directly go to answering phone menu by pressing  . You can use voice memo by pressing and holding  for a few seconds.
	You can delete the characters you input by pressing  .
	Send Key You can dial a phone number and answer a call. If you press this key without entering a number, your phone shows the most recently dialled, received, and missed numbers.



	Description
	Numeric Keys These keys are used mainly to dial in standby mode and enter numbers or characters in editing mode. When you press these keys for a long time. <ul style="list-style-type: none">• Used to call for international call by .• Used to call Speed dials by from  to .• Used to check voicemail by .
	END/PWR Key Used to end or reject a call. This key is also used as Power Key pressing and holding this key for a few seconds.

Side Keys






 




	Description
	Up/Down Side Key You can adjust the volume of key tone in standby mode and the volume of earpiece during a call. With the flip closed, pressing one of these keys shows the current time and date on the sub LCD. When you receive a message, you can read the message on the sub LCD using these keys.



Key Description

Alphanumeric Keys

 The alphabetic and numerical keypad mapping relation are listed as the following table.



















	Description
	.!'1, - ? @ _
	A B C 2 Ä Å Á Â Ã Ä Å Æ Ç a b c ä å á â ã ä å ç
	D E F 3 È É Ê Ë d e f è é ê ë
	G H I 4 Ì Í Î Ï g h i ì í î ï
	J K L 5 j k l
	M N O 6 Ñ Ò Ó Ô Õ Ö m n o ñ ò ó ô õ ö ø
	P Q R S 7 p q r s ß
	T U V 8 Û Ü Ú Û t u v ü ú û ü
	W X Y Z 9 w x y z
	[Space Key] 0 Ø ø

Display Information



The screen displays several icons the following describe each of them you may see on the phone.





On-Screen Icons

	Description
	Tells you the strength of the network signal.
	Call is connected.
	Shows that you are using a roaming service.
	You can use GPRS service.
	The alarm has been set and is on.
	Tells you the status of the battery.
	You have received a text message.
	You have received a voice message.
	You can set the vibration mode.
	You have received e-mail.
	Loud menu in Profiles.
	Quiet menu in Profiles.
	Headset menu in Profiles.
	Car menu in Profiles.
	General menu in Profiles.
	Shows that you can use push message service.
	You can set your own schedule.
	Shows that you have new recorded messages.




Display Information

Top Menu Icons

	Description
	Messages
	Call register
	Profiles
	Settings
	Call divert
	Organiser
	Fun & Tools
	Internet
	SIM service (Dependent on SIM card)



 1. Inserting the SIM Card

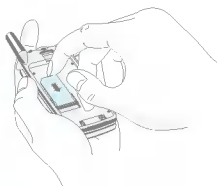


Locate the SIM card socket in the back of the phone. Follow the steps below to install the SIM card.

1. Remove the battery if attached.
2. Slide the SIM card into the slot, under the silvery holders, with the golden connectors facing down and the cut corner to the right.


Notice

- Before installing always make sure that the phone is switched off and remove the battery.
- The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card when you handle and install. Follow the instructions supplied with the SIM card.

 2. Installing the Battery

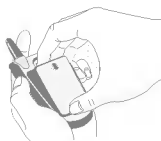

 1. Place the battery on the back of the phone.

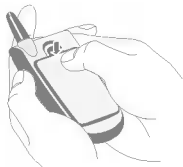

2. Push it until you hear a click.



 
Installation

3. Charging the Battery

To connect the travel adapter to the phone, you must have installed the battery.



1. Insert one end of the travel adapter into the bottom of the phone.

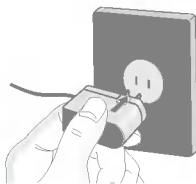

2. Connect the other end of the travel adapter to an AC wall outlet.

NOTE: Use only Travel charger type TA-25G series.



Warning

- Do not force the connector as this may damage the phone and/or the travel adapter.



4. Disconnecting the charger

Disconnect the travel adapter from the phone by pressing its side buttons.



Note

- The battery delivered with your phone has to be fully charged before using it.
- Do not remove your battery or the SIM card while charging.
- The moving bars of battery icon will stop after charging completely.

 
Note


- In the case the battery is not properly charged,
 1. After turning on/off the phone using the power key, please try to recharge it.
 2. When the battery is attached to the phone, please detach it from the phone. And then place it back to the phone and try to recharge it.



Powering On Sequence

1. To get started with the phone

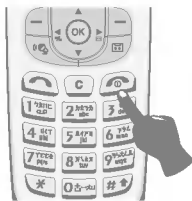

1. Press and hold  [Power/End Key] until you hear a tone.
2. Depending on setting **PIN code request** [Menu 4-5-1], you can enter it or not.
3. If your phone connects to a network, the network name will be displayed shortly.

2. To turn off the phone

In standby mode, press and hold  key until you hear a tone.



You can use the access codes described in this section to avoid unauthorized use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using **Change codes** [Menu 4-5-4].

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorized use. The PIN code is usually supplied with the SIM card. When **PIN code request** is set **Enable**, your phone will request the PIN code every time it is switched on. On the contrary, when **PIN code request** is set **Disable**, your phone connects to the network directly without PIN code.

PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access some functions such as Advice of call charge, Fixed Dial number. These functions are only available if supported by your SIM card.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your local service provider for the code. If you lose the code, also contact your service provider.



Access Codes

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your service provider.

Security code (4 to 8 digits)

The security code protects the unauthorized use of your phone. It is usually supplied with the phone. This code is required to delete all phone entries and to activate “Restore factory settings” menu. The default number is “0000”. You also can change it in Security settings menu.

Making and Answering calls



Making a call

1. Key in phone number including the area code. To edit a number on the display, press [←, →] to move the cursor to the left or right. If you want to delete a character, press [C].
2. Press [Call] to call the number.
3. Press [End] to end the call.

Making a call by [Call] [Send key]

1. Press [Call] [Send key], and then you can check the latest missed, received, and dialled phone numbers.
2. Select the number you want on the list.
3. Press [Call] [Send key].

International Calls

1. Press and hold the [0 5-out] key for the international prefix. "+" character may replace with the international access code.
2. Enter the country code, area code, and the phone number.
3. Press [Call].

Making a call using the Phonebook

1. In standby mode, press [Names].
2. When the menu is displayed, you select **Search** by pressing [Select].
3. If you find out the desired item through searching by a name or a number, press [Call] to call.


Making call by Speed dials



See the menu **Phonebook – Speed dials** [Menu 6-3-4] in detail.



Phonebook



To select a menu in phonebook, press  [Names] in standby mode and then scroll to a desired item. You can also access this menu through **Organiser**.

	Description
1. Search	Allows you to search for a specific name and number.
2. Add new	Allows you to add new names and numbers.
3 Caller groups	Allows you to show group list, and select it. You can edit its name, and set a ring and icon for each Group.
4. Speed dials	Allows you to assign up to 8 ( - ) one-touch dial allocations.
5. Set memory	Allows you to select memory.
6. Delete all	Allows you to erase all data in SIM or Phone memory.
7. Copy all	Allows you to copy entries from your Phone memory to SIM card or from SIM card to Phone memory.
8 Information	Allows you to check the status of memory, SDN (Service Dial Number), and Own number.



1 Messages

- 1 Write message
- 2 Inbox
- 3 Outbox
- 4 Info service
- 5 Voice messages
- 6 Delivery reports
- 7 Templates
- 8 Settings



2 Call register

- 1 Missed calls
- 2 Received calls
- 3 Dialed calls
- 4 Clear recent calls
- 5 Call durations
- 6 Call costs
- 7 Cost settings
- 8 GPRS information



3 Profiles

- 1 Vibrate only
- 2 Quiet
- 3 General
- 4 Loud
- 5 Headset
- 6 Car



4 Settings

- 1 Alarm clock
- 2 Date & Time
- 3 Phone settings
- 4 Call settings
- 5 Security settings
- 6 Network settings
- 7 GPRS settings
- 8 Restore factory settings



Menu Tree



5 Call divert

- 1 All voice calls
- 2 If busy
- 3 If not answered
- 4 If out of reach
- 5 All data calls
- 6 All fax calls
- 7 Cancel all divers



6 Organizer

- 1 Schedule
- 2 Memo
- 3 Phonebook



7 Fun & Tools

- 1 Game
- 2 Calculator
- 3 My folder
- 4 Unit converter
- 5 World time
- 6 Voice recorder
- 7 Answering phone
- 8 Infrared



8 Internet

- 1 Home
- 2 Bookmarks
- 3 Push messages
- 4 Profiles
- 5 Go to URL
- 6 Cache settings
- 7 WAP information
- 8 Reset profiles



9 SIM service

This menu depends on SIM and the network services.



Messages [Menu 1]



This menu includes functions related to SMS (Short Message Service), voice mail, as well as the network's service messages.



Write message [Menu 1-1]

You can write and edit text message up to 480 characters. In addition, you can check the page number in writing message.

1. Enter the **Messages** menu by pressing  [Select].
2. If you want to write a new message, select **Write message** in the menu.
3. Input the message.
4. When you finish writing the message, press  [Options]. Then following option menu will be displayed.

Send

Sends the text message.

1. Enter the phone number to send the message.
2. Press  [OK]. If you don't want to send it, press  [Back].

Save

Stores the message in Outbox.

If you want to save it in Outbox, press  [Select].

Insert template

The template is pre-defined message. You can select one of the templates and add it to the message you will send.



Messages [Menu 1]

EMS function

You can use EMS only if the network supports this service.

Attach picture

If you want to append the picture on sending message, you can select it through EMS. You can also select one of the various pictures.

Attach animation

If you want to append the animation on sending message, you can select it through EMS. In addition, You can select the one of 15 animations which you want.

Attach sound

If you want to append the sound on sending message, you can select it through EMS.

Note

- You may not send or receive the message through EMS due to the incompatibility between G7030 phone and the others.

Insert number



When you enter message, you can insert the phone number stored in the SIM card or in the phone. If the number is stored in the phone, you can also insert home number and office number.




eZi dictionary

You can add, delete and edit a word in eZi dictionary. If you save it in a dictionary, this word has a high priority than others.


• How to add a word in a dictionary

1. Scroll to highlight **eZi dictionary**.
2. **<No entry>** message will be displayed when nothing is saved.
Once a word is saved in a dictionary, you can view the word list.
3. Press  [Add] .
4. After entering a word, press  [OK].

• How to delete a word from a dictionary

1. Scroll to highlight **eZi dictionary**.
2. Select a word you want to delete, and then press  [Options].
3. Select **Delete** menu.

• How to edit a word in a dictionary

1. Scroll to highlight **eZi dictionary**.
2. Select a word you want to edit, and then press  [Options].
3. Select **Edit** menu.



Messages [Menu 1]

How to Use eZi text

eZi text mode allows you to type a word easily and quickly. Simply pressing each key once for each character, you can get the word you want. Therefore, you don't need to input all characters to make a word.

• How to change mode

There are 4 modes. : **eZi mode**, **Numeric mode**, **Letter mode (Capital and Small)**. You can change and choose one among the editor modes by pressing .

1. How to write a message in eZi mode

1. Select **Messages** by pressing [Select].
2. Select **Write message** by pressing [Select].
3. In eZi text mode, you just press a key marked a character on the keypad. In addition, you can space out by pressing key.

 


Example

- For making "Tomorrow", you just press → → → → in sequence.

4. After writing the message, press [Options].

Note




1. To change the language, press key. You can check the selected language below the text box.
2. Once you press the corresponding key, key will be changed to "Change". Then you can change the capital form with [Change]. For example : You → you → y.o.u. → Y.O.U. → YOU. After selecting the desired form by pressing [OK], key will return to "Symbol".



2. Numeric mode



To enter numbers, select this mode using  key.

3. Letter mode

In this mode, you can input letters. There are capital letter mode and small letter mode.







Note

1. If you want to space, press .
2. To delete a letter, use  key.



Messages [Menu 1]


Inbox [Menu 1-2]

When you receive a text message, the symbol  is displayed on the screen. You can save it in the incoming message list. Select the desired message by scrolling ,  you can delete all incoming messages by selecting **Delete all** at the bottom of the list. After reading the message, press  [Options] to access the available options.

Reply [Menu 1-2-1]

You can reply to the incoming message, if you press  [Select].

Forward [Menu 1-2-2]

You can forward the selected message to other party, if you press  [Select].

Delete [Menu 1-2-3]

You can delete the message if you press  [Select].

Get number [Menu 1-2-4]

If the message has the number, you can not only extract it but also save it in the phonebook. You can also call to this number.

Save attachments [Menu 1-2-5]






You can save attachments such as pictures, sound, or animation. (This option is shown only when there is any attachment.)

Return call [Menu 1-2-6]

You can call back to sender by pressing  [Send].



Outbox [Menu 1-3]

When you enter this menu, you can see the outgoing message list. You can select the desired message by scrolling  ,  and press  [Select] to read it. And if you want to exit from **Outbox** menu, press  [Back]. In addition, you can delete all outgoing messages by selecting **Delete all** menu at the bottom of the list. After reading a message, press  [Options] to access the following submenus.

Forward [Menu 1-3-1]

You can forward the message to other party.

Delete [Menu 1-3-2]

You can delete the message.

Get number [Menu 1-3-3]

If the message has the phone number, you can not only extract it but also save it in the phonebook. You can call to this number.

Note

- If you space out as inputting numbers, the receiver can check them respectively.



Messages [Menu 1]

Info service [Menu 1-4]

Cell Broadcast messages (CB message) are text ones that are sent by the network to GSM phone users. The network provides general information such as weather reports, traffic news, tax, pharmacies, and stock prices. Each type of information has the number; therefore, you can contact service provider. When you receive CB message, you can view the submenus below:




Receive [Menu 1-4-1]

- **Yes** : If you select this menu, your phone will receive the Cell Broadcast message.
- **No** : If you select this menu, your phone will not receive the Cell Broadcast message.

Inbox [Menu 1-4-2]

You can read and delete received CB messages.

Topics [Menu 1-4-3]



If you want to create new topics, press  [Select]. Then, you select New topics menu by  [Select]. If you have already topics, you can delete, edit, and activate by pressing  [Options].

Alert [Menu 1-4-4]

- **On**
When Cell broadcast message is arrived, your phone will inform you by beep.
- **Off**
When Cell broadcast message is arrived, your phone will not beep.



Auto display [Menu 1-4-5]

When you receive CB message, it is automatically displayed on the window. You can read it by scrolling  ,  .


- **On**

The message will be displayed on the screen automatically.

- **Off**

The message will not be displayed on the screen automatically.

Language [Menu 1-4-6] (Dependent upon the Network)

You can select the language pressing  [Select]. Then, the cell broadcast message will be displayed in the language that you selected. If you use all languages supported by phone, select **Automatic** at the bottom of the list.

Voice messages [Menu 1-5]

Listen to voice messages [Menu 1-5-1]

In this menu, you can listen to your voice messages. If the address of voicemail centre is already saved in phone, your phone connects it automatically. Otherwise, the phone requires entering the address.

Voice mailbox number [Menu 1-5-2]

You can input voice mailbox address number.



Messages [Menu 1]

Delivery reports [Menu 1-6]

You can read and delete delivery report messages.

Templates [Menu 1-7]

You can see 10 pre-defined messages in the list. You can view templates already saved in a list before editing it. You can change those ones. The rest ones are **<Empty>**. You can add the new one.

Edit [Menu 1-7-1]

You can edit a template.

Delete [Menu 1-7-2]

You can delete a template.

Send [Menu 1-7-3]

You can send the text message with a template.

Settings [Menu 1-8]

Message centre number [Menu 1-8-1]

You can input the address of message centre.

Message types [Menu 1-8-2]

Text, Voice, Fax, Paging, X.400, E-mail, ERMES

Usually, the type of message is set to **Text** type. You can replace your text with the alternative formats, which are suitable for the device that will be received the message. Contact your service provider for the availability of this function.



Validity period [Menu 1-8-3]

This network service allows you to set how long your text messages will be stored at the message center.

Delivery reports [Menu 1-8-4]

If you set **Yes** in this menu, you can check whether your message is sent to the other party successfully or not.

Pay for reply [Menu 1-8-5]

When the other party replies to your message, you can pay for this.

Check memory [Menu 1-8-6]

If you select this menu, you can check the used and total memories. The total memory is the sum of SIM and Phone memory.



Call register [Menu 2]

(Dependent on the network service)

You can check the record of missed, received, and dialled calls only if the network supports the Calling Line Identification (CLI) within the service area. In the options of missed calls, received calls, and dialled numbers you can:

- Call by this number.
- Save the number in the phonebook.
- View the date and the time of the call.
- Edit, delete or save the number from the list in phonebook.

Missed calls [Menu 2-1]

This function allows you to view the list of the latest 10 phone numbers you didn't receive.

Received calls [Menu 2-2]

This function allows you to view the list of the latest 20 phone numbers you have received.

Dialled calls [Menu 2-3]

This function allows you to view the list of 20 phone numbers that you have recently called or tried to call.

Submenus in each menu:

View detail

You can check the phone number of missed, received or dialled calls in detail.

Delete

You can delete the record of the phone number.



Save

You can save the phone number.

Call

You can make a call to the number.

View other number

You can check the phone numbers saved in phonebook.

Write message

You can send a message to the number.

Clear recent calls [Menu 2-4]

This function allows you to delete missed, dialled or received call lists. You can also delete all call lists at a time.

Call durations [Menu 2-5]

This function allows you to view the duration of incoming and outgoing calls. You can clear the duration record by using Reset key after entering the security code.

Last call [Menu 2-5-1]

If you press  [Reset], you can delete last call duration.

Received calls [Menu 2-5-2]

If you press  [Reset], you can delete received call duration. You need to input Security code.




Call register [Menu 2]

(Dependent on the network service)

Dialled calls [Menu 2-5-3]

If you press  [Reset], you can delete outgoing call duration. You need to input Security code.

All calls [Menu 2-5-4]

If you press  [Reset], you can delete the duration of last call, received call, and outgoing call. You need to input Security code.

Call costs [Menu 2-6]

This network service allows you to check the last call cost and total call cost. To clear the counters, you need the PIN 2 Code.

Last call's cost [Menu 2-6-1]

This function allows you to reset the Last call's cost. You need to input PIN2 code.

All calls' cost [Menu 2-6-2]

This function allows you to reset the All calls' cost. You need to input PIN2 code.

Note

- The actual cost invoiced for calls by your service provider may vary depending upon network features, rounding-off for billing, taxes, etc.



Cost settings [Menu 2-7]

Call cost's limit [Menu 2-7-1]

This network service allows you to limit the costs of your calls to the number of charging units or units of currency. If you select on the number of remaining, the cost will be displayed in standby mode. You can make or receive a call as far as the specified cost limit is not exceeded.

Set tariff [Menu 2-7-2]



The phone can change units and currency name. Contact your service provider for charging unit price. You may need the PIN2 code to select the currency or unit in this menu.

Auto display [Menu 2-7-3]

When setting **On**, show the reminder cost in standby mode. When call end, show the last call costs.

GPRS information [Menu 2-8]

You can check the amount of data transferred over the network through GPRS. In addition, you can also view how much time you are online.

1. Press  [OK] or  [Select].
2. Scroll to the information you want to check. Your options include the following:



Call register [Menu 2]

(Dependent on the network service)

WAP [Menu 2-8-1]

You can check the data volume and the duration through WAP.

- **Last session [Menu 2-8-1-1]**
- **All session [Menu 2-8-1-2]**

External device [Menu 2-8-2]

You can check the data volume and the duration through GPRS by using external device such as serial port.


Total data [Menu 2-8-3]

You can check the total amount of data through WAP and external device.

Profiles [Menu 3]



In this menu, you can adjust and customize the phone tones for different events, environments and caller's group. (e.g. When you are in a car, you can choose the Car profile)

1. Press  [Menu] in standby mode.
2. Press  for direct access to enter **Profiles**.

Vibrate only [Menu 3-1]

Activate [Menu 3-1-1]

You can adjust the profile to Vibration if you need vibration mode.

Quiet [Menu 3-2]

Activate [Menu 3-2-1]

You can adjust the profile to Quiet if you are in a quiet place.

Personalise [Menu 3-2-2]

You can change the values of Profile submenus.

General [Menu 3-3]

Activate [Menu 3-3-1]

You can adjust the profile to General if you need General mode.

Personalise [Menu 3-3-2]

You can change the values of Profile submenus.



Profiles [Menu 3]

Loud [Menu 3-4]

Activate [Menu 3-4-1]

You can adjust the profile to Loud if you are in a noisy environment.

Personalise [Menu 3-4-2]

You can change the values of Profile submenus.

Headset [Menu 3-5]

You can adjust the profile to Headset when you put on a headset.

Personalise

You can change the values of Profiles submenus.

Car [Menu 3-6]

You can adjust the profile to Car when you activate Handsfree Kit.

Personalise

You can change the values of Profile submenus.

Note

- If you connect headset or handsfree kit to the phone, each profile menu related to them will be displayed automatically.



A Group of Personalise submenus [Menu 3-x-x]

Each **Personalise** menu has the submenus as shown below.

Incoming alert type [Menu 3-x-x-1]

Allows to set the incoming call alert type for adjusting environment.
Ring, Vibrate, Ring & vib., Ring after vib., Off.

Ring tone [Menu 3-x-x-2]

Allows to set the ring tone for adjusting environment.

Ring volume [Menu 3-x-x-3]

Allows to set the ring volume for adjusting environment.

Message alert type [Menu 3-x-x-4]

Allows to alert when receiving a message for adjusting environment.
Ring once, Ring periodic, Vibrate, Ring & vib., Off.

Message tone [Menu 3-x-x-5]

Allows to set the message alert tone for adjusting environment.

Key volume [Menu 3-x-x-6]

Allows to set the keypad tone for adjusting environment.



Note

Automatic answer

- This function will be activated only when your phone is connected to the handsfree kit or headset.
- **Off** : The phone will not answer automatically.
- **After 5 sec** : After 5 seconds, the phone will answer automatically.
- **After 10 sec** : After 10 seconds, the phone will answer automatically.



Settings [Menu 4]

Alarm clock [Menu 4-1]

You can set an alarm to go off on your phone.

• **To set the alarm:**

1. Enter the menu.
2. Select **On** using [⏪, ⏩].
3. Press ⏴ to move the cursor. Select AM or PM using [⏪, ⏩].
4. Set the alarm time using the numeric keypad. You can move the cursor using [⏪, ⏩] in the alarm time space.
5. Press ⏴ to move the cursor to the next option. Select one from **Once**, **Daily**, **Weekly**, and **Monthly** using [⏪, ⏩].
6. Press [⏴] [Set]. You see the prompt, "Alarm is set".

• **To deactivate the alarm:**

1. Enter the menu.
2. Select **Off** using [⏪, ⏩], then press [⏴] [Set].
3. You see the prompt, "Alarm off".

Date & Time [Menu 4-2]

The phone has its own clock. In this menu you can set the time format between 12-hour and 24-hour.

Set the time [Menu 4-2-1]



You can set time of your phone in this menu.

1. Select **Set the time** by pressing [⏴] [Select].
2. Enter the number you want to set the time.
3. Press [⏴] [Set].





Time format [Menu 4-2-2]

You can select time format between 12-hour and 24-hour.

1. Scroll to highlight **Time format** by pressing  [Select].
2. Select 12 hour or 24 hour you want by pressing  [Select].

Set the date [Menu 4-2-3]

In this menu, you can set the date of your phone.

1. Enter the menu.
2. Select **Set the date** by pressing  [Select].
3. Enter the number you want to set the date.
4. Press  [Set].

Date format [Menu 4-2-4]

You can set the Date format in this menu.

[Y: Year, M: Month, D: Day]

- YYYY/MM/DD
- DD/MM/YYYY
- MM/DD/YYYY



Settings [Menu 4]

Phone settings [Menu 4-3]

You can set the phone as you want. Scroll to highlight **Phone settings** menu, and then press [Select].

Language [Menu 4-3-1]

This menu provides you with selection of the language. If **Automatic** is set, the language is chosen based on the current SIM card. English will be set if the language on the SIM card is not supported in the phone.

Wallpaper [Menu 4-3-2]

You can select one of the pictures by pressing [Left, Right].

Sub LCD [Menu 4-3-3]

You can set the various functions of sub LCD.

- **My display [Menu 4-3-3-1]**

You can set the graphic item.

- **Sliding time [Menu 4-3-3-2]**

You can set the interval of the sliding screen.

- **Font colour [Menu 4-3-3-3]**

You can set the colour of font displayed on Sub LCD.

Backlight [Menu 4-3-4]


You can set the light-up duration you want every time you press a key or open the flip.

Contrast [Menu 4-3-5]

You can set the brightness of LCD you want by pressing [Left, Right].



Call settings [Menu 4-4]

You can set the menu relevant to a call by pressing  [Select] in **Settings** menu.

Answer mode[Menu 4-4-1]

- **Flip open [Menu 4-4-1-1]**

If you select this menu, you can receive an incoming call when only opening folder.

- **Press any key [Menu 4-4-1-2]**

If you select this menu, you can receive an incoming call by pressing any key except ,  key.

- **Send only [Menu 4-4-1-3]**

If you select this menu, you can receive a call only by pressing send key.

Own number sending [Menu 4-4-2] (network and subscription dependent)

You can send your phone number to the other party dependent on setting this function.

- **Set by network [Menu 4-4-2-1]**

If you select this, you can send your phone number depending on two line service such as line 1 or line 2.

- **On [Menu 4-4-2-2]**

If you select this, you can send your phone number to the other party. That is, your phone number will be displayed on receiver's phone.

- **Off [Menu 4-4-2-3]**

If you select this, you can't send your phone number.



Settings [Menu 4]

Call wait service [Menu 4-4-3]

If this service is enabled, you can accept a waiting (incoming) call. If this service is disabled, you cannot recognize the waiting (incoming) call.

- **Activate [Menu 4-4-3-1]**

Activating the corresponding service.

- **Cancel [Menu 4-4-3-2]**

Deactivating the corresponding service.

- **View status [Menu 4-4-3-3]**

Checking the status of the service.

Automatic redial [Menu 4-4-4]

- **On [Menu 4-4-4-1]**

When this function is activated, your phone will try to make a call in case of failing to connect.

- **Off [Menu 4-4-4-2]**

Your phone will not make any attempts to connect the call after failing to connect.

Minute minder [Menu 4-4-5]

If you select **On**, you can check the call duration by beep sound every minute during a call.



Phone line in use [Menu 4-4-6]

This function is only used if **Two-line service** is supported by the Service Provider. Two independent phone numbers are registered for the phone. This function provides you with the selection of the currently used phone number.

1. **Line 1** : Select Line 1 as the current phone number.
2. **Line 2** : Select Line 2 as the current phone number.

Note

- If you select Line 2 in the area where alternative line service is not supported, you can't make a call.

Closed user group [Menu 4-4-7] (network dependent)

Use this function to restrict usage of the phone calls with numbers that belong to certain user groups. When this function is used, every outgoing and incoming call is associated with a group index. If a group index is specified, it is used for all outgoing calls. If no group index is specified, the network will use the preferential index (a specific index that is stored in the network).

1. **Preset** : Setting the selected CUG Index.
2. **On** : Activating and editing the CUG Index.
3. **Off** : Deleting the selected CUG.



Settings [Menu 4]

Security settings [Menu 4-5]

PIN code request [Menu 4-5-1]

In this menu, you can set the phone to ask for the PIN code of your SIM card when the phone is switched on. If this function is activated, you'll be requested to enter the PIN code.

1. Press [Menu] in standby mode.
2. Press key for direct access or use and to enter **Settings**.
3. Scroll to highlight **Security settings** menu.
4. Select **PIN code request** by pressing [Select].
5. You can view the following submenus.
 - **Enable** : You can activate this function.
 - **Disable** : You can cancel setting this function.

Call barring service [Menu 4-5-2] (Network dependent)

The Call barring service prevents your phone from making or receiving certain category of calls. This function requires the call barring password. You can view the following submenus.

- **All outgoing calls [Menu 4-5-2-1]**
You can bar all outgoing calls.
- **Outgoing international [Menu 4-5-2-2]**
You can bar outgoing international calls.
- **Outg. intl roam (Outgoing international roaming) [Menu 4-5-2-3]**
You can bar outgoing international roaming call.



- **Incoming calls [Menu 4-5-2-4]**
You can bar incoming calls.
- **Inc. when roam (Incoming calls when roaming) [Menu 4-5-2-5]**
You can bar incoming calls when roaming.
- **All data calls [Menu 4-5-2-6]**
You can bar all data calls.
- **All fax calls [Menu 4-5-2-7]**
You can bar all fax calls.
- **Cancel all barrings [Menu 4-5-2-8]**
You can cancel all call barring services.

The Submenus of Call Barring Service

- **Activate [Menu 4-5-2-x-1]**
If you apply call barring service to service provider, you can use it.
- **Cancel [Menu 4-5-2-x-2]**
You can cancel the function.
- **View status [Menu 4-5-2-x-3]**
You can check the current status of call barring service.



Note

- To use Call barring service, you must input the network password.



Settings [Menu 4]

Fixed dial number [Menu 4-5-3] (SIM dependent)

You can restrict your outgoing calls to selected phone numbers. The numbers are protected by your PIN2 code.

1. Press [Menu] in standby mode.
2. Press key for direct access or use and to enter **Settings**.
3. Scroll to highlight **Security settings** menu.
4. Select **Fixed dial number** by pressing [Select].
5. Input PIN2 code, and then press [OK].
6. If the PIN2 code is correct, you can view the following submenus.
 - **Enable** : You can restrict your outgoing calls to selected phone numbers.
 - **Disable** : You can call without restricting phone numbers.
 - **Number list** : You can view fixed dial numbers and add, edit, delete.

Change codes [Menu 4-5-4]

You can change the access codes: Security code, PIN1 code, PIN2 code, Barring password .

1. Press [Menu] in standby mode.
2. Press key for direct access or use and to enter **Settings**.
3. Scroll to highlight **Security settings** menu.
4. Select **Change codes** by pressing [Select].
5. If you want to change the Security code/PIN/PIN2/ Barring password, press [OK].
6. Input new Security code/PIN/PIN2/Barring password (Network Dependent).



Network settings [Menu 4-6]

You can select the network, which you will be registered either automatically or manually. Usually, the network selection is set **Automatic**.

Automatic [Menu 4-6-1]

The phone automatically selects available network in the area.

Manual [Menu 4-6-2]

The phone will find the list of available networks and show you them. Then you can select the network that you want to use if this network has a roaming agreement with your home network operator.

GPRS settings [Menu 4-7]

When you use GPRS to connect to the Internet, you can make a data call. In order to use GPRS, you set the following options.

Terminal type [Menu 4-7-1]

- **Dual [Menu 4-7-1-1]**
- **GPRS only [Menu 4-7-1-2]**
- **GSM only [Menu 4-7-1-3]**

Incoming GPRS session [Menu 4-7-2]

- **Automatic [Menu 4-7-2-1]**
- **Manual [Menu 4-7-2-2]**



Settings [Menu 4]

External device [Menu 4-7-3]

When you use Internet via GPRS by using external device, you can set APN, IP address, DNS, User ID, and password as to 5 profiles. Otherwise, you may be offered those information by network.

Restore factory settings [Menu 4-8]


 
You can set the handset to the default configuration by selecting the Settings/Factory reset option. You need a security code to activate this function.



Call divert [Menu 5]

(network and subscription dependent)

The Call divert service allows you to divert incoming voice calls, fax calls, and data calls to another number. For more information, contact your service provider.

1. Press  [Menu] in standby mode.
2. Press  for direct access or use {< and >} to enter **Call divert**.

All voice calls [Menu 5-1]

Diverts voice calls unconditionally.

If busy [Menu 5-2]

Diverts voice calls when the phone is in progress.

If not answered [Menu 5-3]

Diverts voice calls which you do not answer.

If out of reach [Menu 5-4]

Diverts voice calls when the phone is switched off or out of service area.

All data calls [Menu 5-5]

Diverts to a number with a PC connection unconditionally.

All fax calls [Menu 5-6] (network and subscription dependent)

Diverts to a number with a fax connection unconditionally.



Call divert [Menu 5]

(network and subscription dependent)

The submenus [Menu 5-x-x]

Call Divert menu has the submenus as shown below.

Activate [Menu 5-x-1]

Activating the corresponding service.

- **To voice mailbox**

Forwards to message center. This function is not included in **All data calls** and **All fax calls menus**.

- **To other number**

Inputs the number for diverting.

- **Favorite number**

Stores the latest five numbers.

Cancel [Menu 5-x-2]

Deactivating the corresponding service.

View status [Menu 5-x-3]

Checking the status of the corresponding service.

Cancel all diverts [Menu 5-7]

Cancels all call divert service.



Schedule [Menu 6-1]

When you enter this menu Calendar will show up. On top of the screen there are sections for date and icons. You can change the day, month and year by using [←, →]. Whenever you change the date, the calendar will be updated according to the date. And square cursor will be located on the date. If a date is shown in different color, it means there are schedule notes on that day. This function helps to remind you of meetings, memorial days, or what to do. When you add schedule notes on a day, you can view the following submenus.

Edit [Menu 6-1-1]

You can add the notes on the selected date and change it.

Delete [Menu 6-1-2]

You can delete the notes you've already set.

Add new [Menu 6-1-3]

You can input maximum 30 characters and 30 notes.

View all schedules [Menu 6-1-4]

Shows the notes that are set for all schedules.



Go to date [Menu 6-1-5]

You can check the date you've already input.



Organizer [Menu 6]

Memo [Menu 6-2]

1. Scroll to highlight **Memo**.
2. Press  [Select].
3. Input a memo and then press  [Save].
4. You can view the following submenus.

Edit [Menu 6-2-1]

You can edit the selected memo.

Add new [Menu 6-2-2]

You can add a new memo up to 20 memos and 40 characters.

Delete [Menu 6-2-3]

You can delete the selected memo.

Delete all [Menu 6-2-4]

You can delete all the memos you made before.



Phonebook [Menu 6-3]

You can create a personal phonebook by saving phone numbers and accompanying names. An easy to make calls is by recalling the phone numbers and names saved in your phonebook.

Search [Menu 6-3-1] (Calling from phonebook)

1. Open the phonebook first by pressing [Names] in standby mode. You can also go **Organizer – Phonebook** by scrolling , .
2. **Search** pressing [Select] to enter.
3. You can find an entry by name.
4. Select [List].
5. If you want to edit, view, delete, copy and call by the entry, select [Options]. The below menu will be displayed.
 - **Edit** : You can edit the name, number, E-mail, and fax by pressing [Select].
 - **View detail** : You can view the name and number in detail.
 - **Delete** : You can delete an entry.
 - **Save to SIM/ phone** : You can copy an entry from SIM to phone or from phone to SIM.
 - **Call** : You can call by the chosen entry.
 - **Write message** : You can send a message to the entry.



Organizer [Menu 6]

Add new [Menu 6-3-2]

You can add phonebook entry using this function. There are 2 memories: Phone memory and SIM memory. To select the memory, go to **Set memory** [Menu 6-3-5]. The Phone memory capacity is 255 entries. You can enter up to 20 characters in each name in the Phone memory. But in the SIM card, it depends on the SIM card.

1. Open the phonebook first by pressing [Names] in standby mode. You can also go **Phonebook** by scrolling , .
2. Scroll to highlight **Add new**, and press [Select] to enter.

• SIM :

You can add name, number, and group setting for an entry.

- a. Write a name to add.
- b. Press . Then you can input a number.
- c. Press . Then you can select one of the groups by using , .
- d. Press [Save].

• Phone :




You can add name, number (mobile, home, office), E-mail address, group and memo.

- a. Write a name to add.
- b. Press .
- c. You can select the number entry you want to input using , and then press .
- d. You can select a group by pressing , .
- e. Press [Save].



Caller groups [Menu 6-3-3]

There are 6 groups and others you can make lists to.

1. Press  [Names] to enter into the phonebook in standby mode.
2. Scroll to **Caller groups** then press  [Select] to enter this menu.
3. Every Group list will be displayed: **Family, VIP, Friends, Colleague, Group 1, Group 2, Others.**
4. Select Group name that you want to manage by pressing  [Options].
5. Then submenus below will be displayed except **Others**.

- **Member list**

You can edit, copy or call the caller group.

- **Rename**

You can edit a group name.

- **Group ring tone**

You can choose ring sound of each group.

- **Group icon**

You can select Icon of each group.



Organizer [Menu 6]

Speed dials [Menu 6-3-4]

You can associate any of the keys **2** (VIR) to **9** (VIR) with a Name list entry. You can call directly by pressing this key for 2-3 seconds.

1. Open the phonebook first by pressing **☰** [Names] in standby mode. You can also go Phonebook menu by scrolling [**⏪**, **⏩**].
2. Scroll to **Speed dials**, then press **☑** [Select] to enter this menu.
3. Every Speed dial will be displayed.
4. If you want to add Speed dial, select **<Empty>**. Then, you can search the name in phonebook.
5. If you select allocated name by speed dial, you can view following the submenus.
 - **Change** : You can change the allocation of speed dial.
 - **Delete** : You can delete the allocated speed dial number.

Set memory [Menu 6-3-5]

You can set the preferred memory between SIM memory and Phone memory.

1. Open the phonebook first by pressing **☰** [Names] in standby mode.
2. Scroll to **Set memory**, then press **☑** [Select] to enter.
3. Select SIM or Phone, then press **☑** [Select].



Delete all [Menu 6-3-6]

You can delete all entries in **SIM, Phone**. This function requires Security code.

1. Press **[Names]** to enter the phonebook in standby mode.
2. Scroll to **Delete all**, then press **[Select]**.
3. Then select a memory to erase: **SIM, Phone**.
4. And then you will be requested to enter Security code.
5. Press **[Select]** or, press **[Back]** to cancel.

Copy all [Menu 6-3-7]

You can copy/move entries from SIM card memory to Phone memory or from Phone memory to SIM card memory.

1. Open the phonebook first by pressing **[Names]** in standby mode.
2. Scroll to **Copy all**, then press **[Select]** to enter this menu.
3. Then submenus below will be displayed.

- **SIM to Phone [Menu 6-3-7-1]**

You can copy the entry from SIM Card to Phone memory.

- **Phone to SIM [Menu 6-3-7-2]**

You can copy the entry from Phone memory to SIM Card.

- **Keep original [Menu 6-3-7-x-1]**

Both original and relocated entries are kept in memories.

- **Delete original [Menu 6-3-7-x-2]**

Original entry is deleted whereas relocated entry remains in the memory.








Organizer [Menu 6]

Information [Menu 6-3-8]

You can select a service dial number, check memory and own number list


- **Service dial number**

Use this function to access a particular list of services provided by your network operator (if supported by the SIM card).

1. Open the phonebook first by pressing  [Names] in standby mode.
2. Scroll to **Information** and scroll to service dial number, then press  [Select] to enter.
3. The names of the available services will be shown.
4. Use  ,  and to select a service, press  [Send].

- **Check memory**

This feature allows you to see how many free and in-use are in your phonebook.

1. Open the phonebook first by pressing  [Names] in standby mode. You can also go **Phonebook** menu by scrolling  ,  . Select **Information** by pressing  [Select].
2. Scroll to **Check memory**, and then press  [Select] to enter this menu.

- **Own number (SIM dependent)**

You can check your own number in SIM card.

If own number is empty, you can add new one. You can also edit and delete it.











Game [Menu 7-1]

You can enjoy the games in a phone.

Calculator [Menu 7-2]

This contains the standard functions such as +, -, *, ÷ : **Addition, Subtraction, Multiplication, and Division.**

1. Input the numbers using numeric keys.
2. Use a  ,  ,  ,  to select a sign for calculation.
3. Then input the numbers followed by the sign.
4. You can view the result by pressing  [Result] key or  [OK] key.
5. If you want to continue the calculation, repeat the process.
6. Use  [Reset] key to erase any numbers or signs. Press  key if you want to end the calculation process.

My folder [Menu 7-3]

You can view, delete, and control download contents.

Picture [Menu 7-3-1]

Animation [Menu 7-3-2]

Sound [Menu 7-3-3]

The Submenus for each main one [Menu 7-3-x-x]

- **Edit title [Menu 7-3-x-1]**
You can edit the title for each download content.
- **Delete [Menu 7-3-x-2]**
You can delete each download content.



Fun & Tools [Menu 7]

- **Delete all [Menu 7-3-x-3]**

You can delete all download contents.

Unit converter [Menu 7-4]

This converts any measurement into a unit you want. There are 4 types that can be converted into units: **Length, Surface, Weight, and Volume.**

1. You can select one of four unit types by pressing \square [Unit] key. You can also move the cursor using $\overline{\square}$, $\underline{\square}$ and then select the type using $\{ \llcorner , \triangleright \}$.
2. Select the current value by using $\overline{\square}$, $\underline{\square}$ and then, you can set the standard unit by using $\{ \llcorner , \triangleright \}$.
3. Select the unit to convert by using $\{ \llcorner , \triangleright \}$.
4. Input the numbers in blank.
5. Press \square or \square [Back] if you want to finish the process.

World time [Menu 7-5]

You can view the time for each city around the world. Also, you can set the current time to the city time you select.

1. Select the city belonged to the time zone by pressing $\{ \llcorner , \triangleright \}$ key.
2. You can set the current time to the city time you select. Press \square [Back] key to exit the menu.

Voice recorder [Menu 7-6]

You can save and play 3 voice messages and each one can be recorded up to 30 seconds.

Answering phone [Menu 7-7]

You can activate answering machine on the condition of adjusting each environment as follows:



Cancel [Menu 7-7-1]

You can cancel the function.

General [Menu 7-7-2]

If you activate this, callers will hear the General voice guide.

Meeting [Menu 7-7-3]

If you activate this, callers will hear the Meeting voice guide.

Driving [Menu 7-7-4]

If you activate this, callers will hear the Driving voice guide.

User define [Menu 7-7-5 / 7-7-6]

You can record your own voice guide. If you activate this, callers will hear the voice guide.

Recorded messages [Menu 7-7-7]

You can check recorded messages.

Ringling duration [Menu 7-7-8]

You can set the ringing time before the answering system answers incoming calls. The system can answer calls after 1 ring, 3 rings, or 5 rings.

Infrared [Menu 7-8]

If you activate this function, you can use PC-sync by infrared. In addition, you can't use Handsfree and infrared function at the same time.

PC Sync!

- PC Sync is a program for data exchange PC and a phone by a data cable. About more detail for using guide refers to PC Sync Help file in CD.




Internet [Menu 8]

Your phone supports internet services based on Wireless Application Protocol (WAP). You can access services supported by your network. The services menu allows you to get the information such as news, weather forecast, and flight time.

Home [Menu 8-1]

You can connect the defined homepage in the activated profile.

Bookmarks [Menu 8-2]

You can save up to 50 bookmarks. Scroll to the desired bookmark and press  [Options] key to operate the following options.

- **Connect** : Connect to selected bookmark.
- **Add new** : Save a new bookmark manually.
- **Edit** : Edit the title and address of bookmark.
- **Delete** : Erase the selected bookmark.

Note

- If any bookmarks are not saved yet, only "Add new" menu is available.

Push messages [Menu 8-3]

You can manage an inbox and a message for using push service.

Inbox [Menu 8-3-1]


You can read or delete the push messages.

Receive [Menu 8-3-2]

You can set the option whether you will receive the message or not.



Profiles [Menu 8-4]

You can make up to 5 profiles and activate only one out of them. Scroll to desired profile  and press to access available options.

Activate [Menu 8-4-1]

Activate the selected profile.

Settings [Menu 8-4-2]

Edit and change WAP settings of selected profile.

- **Homepage [Menu 8-4-2-1]**

This setting allows you to enter the address (URL) of site you want to use as homepage. You do not need to type "http://" at the front of each URL the WAP Browser will automatically add it.

- **Display image [Menu 8-4-2-2]**

You can select whether images on WAP cards are displayed or not.

- **Connect type [Menu 8-4-2-3]**

There are 2 connection types. Depending the gateway you are using, you can select one of them.

Continuous : Connection-oriented service

Temporary : Connectionless service

- **Secure setting [Menu 8-4-2-4]**

You can select None or Secure depending on the gateway. The gateway should support this option.

- **Gateway information [Menu 8-4-2-5]**

Most WAP gateways do not request user ID and password. If the gateway doesn't have ones, these should be provided by the network. In addition, they must be set before browsing WAP sites.



Internet [Menu 8]

- **Bearer [Menu 8-4-2-6]**

You can select Data or GPRS as the bearer.

- Data
- GPRS

The next menu [Menu 8-4-2-7] depends on the selected bearer.

- **Data settings [Menu 8-4-2-7]**

- IP address** : Enter the IP address of the WAP gateway you access.
- Dial up number** : Enter the telephone number to dial to access your WAP gateway.
- User ID** : The user's identity for your dial-up server (and NOT the WAP gateway).
- Password** : The password required by your dial-up server (and NOT the WAP gateway) to identify you.
- Call type** : Select the type of data call: Analogue or Digital (ISDN).
- Call speed** : The speed of your data connection.

- **GPRS settings [Menu 8-4-2-7]**

- IP address** : Enter the IP address of the WAP gateway you access.
- APN** : Input the Access point name to connect to the external network.
- User ID** : The user's identity for your dial-up server (and NOT the WAP gateway).
- Password** : The password required by your dial-up server (and NOT the WAP gateway) to identify you.



- **Linger time [Menu 8-4-2-8]**

After setting the limited time (30~300 sec.), the service will be disconnected if there was no inputting or transferring data.

Rename [Menu 8-4-3]

Edit the Profile Name.

E-mail server [Menu 8-4-4]

Save the URL address of the E-mail that you frequently use.

- **Connect**

Connect to the URL that you configured as the E-mail server.

- **Edit address**

Enter the URL address of the E-mail.

Go to URL [Menu 8-5]

You can move to the site that you want. You need to type URL address of the site before connection.

Cache settings [Menu 8-6]

You can remove the contents of Cache memory or change the Cache mode.

Clear cache [Menu 8-6-1]

The contents of Cache memory will be removed.



Internet [Menu 8]

Cache check [Menu 8-6-2]

You can check Cache memory.

- **Always [Menu 8-6-2-1]**

The cache is always checked whenever URL loading or navigating.

- **Start only [Menu 8-6-2-2]**

The cache is only checked when the WAP is started.

- **Off [Menu 8-6-2-3]**

The cache is never checked.

WAP information [Menu 8-7]

You can view the information about G7030 WAP.

Reset profiles [Menu 8-8]

You can reset all setting values to the factory default.



If you are on line, you can view the following menus.

■ **Home**

This is the same as [Menu 8-1].

■ **Reload**

This reloads the current page.

■ **Bookmarks**

This is the same as [Menu 8-2].

■ **Save as bookmarks**

Save the current URL as a bookmark. You can also edit the bookmark title.

■ **Go to URL**

Same as [Menu 8-5].

■ **Go to e-mail server**

Connect the current URL as an E-mail server.

■ **Set as e-mail server**

Save the current URL as an E-mail server.

■ **Clear cache**

Remove the contents of cache memory.



SIM service [Menu 9]

Your service provider can offer special application through SIM card, such as home banking, stock market, etc. If you are registered for one of these services, the service name will appear at the end of the Main Menu. With the SIM Services menu your phone is future-proof and will support additions to your service provider's service. For more information contact your service provider.

How to Use Data and Fax call



To be able to data or fax service, you need the communicate software such as a data or a fax program. Before using these functions, you need to connect your phone to a computer or make sure that your phone is in connection with a compatible device.

Sending Data or Fax Calls

1. Connect your computer to the phone.
2. After starting the communicate software, make a call and transmit a data or fax.
3. After the data or fax transmission, you can end the call by just ending of the communicate software, pressing [End].

Receiving Data or Fax Calls

If you have separate numbers for voice, data and fax calls, your phone recognizes the type of call.

Receiving Data or Fax Calls – Separate numbers (Multi-numbers)

To use a data or a fax service, the display shows which type of call you are receiving.

To receive a data or fax call.

1. Connect your computer to the phone.
2. After starting the communicate software, accept a call and receive a data or fax (if it is not answered automatically).
3. After the data or fax reception, you can end the call by just ending of the communicate software, pressing [End].

PC Sync

PC Sync is a program for data exchange PC & Phone by data cable. Therefore, if you want to use this function, you have to buy accessory kit. About more detail for using guide refers to PC Sync Help file on the PC Sync CD.



In call Menu

During a call, the following menus will be displayed, not in a standby mode.

1 During a call

1-1 Putting a Call on Hold

You can place a call on hold or retrieve by just pressing the [Send] key. When a call is made or answered, press the [Send] key to place it on hold. When a call is held, press the [Send] key to make it active.

1-2 Making a Second Call

You can get a dial number from phonebook to make a second call. Press [Names] key then select **Search**. To save the dial number into phonebook during call, press [Names] key then select **Add new**.

1-3 Swapping Between Two Calls

To switch between two calls, select the [Options] key, then select Swap or just press [Send] key.

You can make one of two calls focused by pressing up/down arrow key. If you want to end one of two calls, make the call you want to end focused, then press [End] key when the call you want to end is focused.

1-4 Answering an Incoming Call

To answer an incoming call, simply press the [Send] key.

The handset is also able to warn you of an incoming call while you are already in a call. A tone sounds in the earpiece, and the display will show that a second call is waiting. If Call Waiting is on, you can put the first call on hold and answer the second, by pressing [Send] or by selecting the [Answer] key.

You can end the current call and answer the waiting call by selecting the [Menu] key, then **End & Answer**.



1-5 Rejecting an Incoming Call

You can reject an incoming call without answering by simply pressing the [End] key.

When in a call you can reject an incoming call (1st call) by pressing the [Menu] key and selecting **Multiparty/End and Answer** or by pressing [End] key.

1-6 Controlling the volume during a call

You can control the volume during a call by pressing [Options] key and selecting Volume followed by  or .

1-7 Muting the Microphone

You can mute the microphone during a call by pressing the [Options] key then selecting **Mute**. The handset can be unmuted by pressing the [Unmute].

When the handset is muted, the caller cannot hear you, but you can still hear them.

1-8 Switching DTMF Tones on During a Call

To turn DTMF tones on during a call, for example, to allow your handset to make use of an automated switchboard, select the [Options] key, then **DTMF On**. DTMF tones can be turned off the same way.

1-9 Calling up the messages or SIM Tool Kit

The Messages and SIM Tool kit main menu options can be reached from the in-call menu by selecting the [Options] key, then **Messages or SIM Tool Kit** (Screen name depends on the network operator's SIM). SIM Tool kit menu is shown only when SIM in the handset supports SIM Tool kit service.



In call Menu

2 Multiparty or Conference Calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network service provider supports this feature.

A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls may be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the in-call menu and are listed in Section.

The maximum callers in a multiparty call is five. Once started, you are in control of the multiparty call, and only you can add calls to the multiparty call.

2-1 Making a Second Call

You can make a second call while you are already in a call. To do this, enter the second number and press [Send]. When you get second call the first call is automatically put on hold. You can swap between calls by selecting the [Options] key then **Swap**.

2-2 Setting up a Multiparty Call

You can connect a call on hold to the currently active call to form a multiparty call by selecting the [Options] key then **Multiparty/Join all**.

2-3 Putting the Multiparty Call on Hold

To put a multiparty call on hold, select the [Options] key then **Multiparty/Hold all**.





2-4 De-activate the Multiparty Call on Hold

To de-activate a multiparty call on hold, select the [Options] key then **Multiparty/Join all**.

2-5 Adding Calls to the Multiparty Call

To join an active call to the held multiparty call, select the [Options] key then **Multiparty/Join all**.

2-6 Displaying Callers in a Multiparty Call

To scroll through the numbers of the callers who make up a multiparty call on the handset screen, press  and  keys.

2-7 Putting a Member of a Multiparty Call on Hold

To place one selected caller (whose number is currently displayed on-screen) of a multiparty call on hold, select the [Options] key then **Multiparty/Exclude**.

2-9 Ending a Multiparty Call

The currently displayed caller of a multiparty call can be disconnected by pressing the [End] key. To end a multiparty call, press the [Options] key then select **Multiparty/End multiparty**.

Selecting the [Options] key then **Multiparty/End all**, will end all the active and held calls.

2-10 Explicit Call Transfer (ECT)

If you have one caller on hold and another active call, you may connect one call party to another call party and then leave the call. This is done by selecting the **Multiparty/Transfer** option from the in-call menu.



Care and Maintenance

When using this unit, basic safety precautions as below should be always followed.

- Do not touch the adapter with wet hands.
- Do not disassemble this unit. (Take it to a qualified service technician when repair work is required.)
- Away from electrical appliance such as a TV, radio or personal computer.
- The unit should be situated from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit. (Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can be affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously. Do not touch the antenna unnecessarily.



□ Caring for the Battery

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.



Technical data

General

Product name : G7030

System : GSM 900 / DCS 1800

Ambient temperatures

Max : +55°C

Min : -10°C

Declaration of Conformity



LG Electronics

This model complies with the essential requirements of Article 3 of the R&TTE 1999/5/EC Directive, if used for its intended use.

1. Health (Article 3.1.a of the R&TTE Directive)
2. Safety (Article 3.1.a of the R&TTE Directive)
3. Electromagnetic compatibility (Article 3.1.b of the R&TTE Directive)
4. Efficient use of the radio frequency spectrum (Article 3.2 of the R&TTE Directive)

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned articles of the directive.

If available, write the contact person(s)

Mr. Jin Seog, Kim
LG Amsterdam Branch Office
Capronilaan 6, 1119 NR Schiphol-rijk,
The Netherlands
(Tel.) +31-20-655 7774

Mr. Ji Jong, Jeon
LG Electronics Inc. GSM Division
Emerald BD, 1042 Hogye-Dong, Dongan-Gu
Anyang-city, Kyuonngki-Do
431-080, Korea

CE 0168



Memo

Memo





Memo
