

Life's Good LG

G7050

繁體中文  
ENGLISH



CE 0168

說明書內容或許會與您所使用的手機稍微差異，當您使用手機上有任何疑問時！  
請您洽詢當地客服中心或代理商，本公司保留說明書修改權利，恕不另行通知。



# G7050

使用說明  
繁體中文

如果您需要相關商品服務，

歡迎您與客服中心聯絡 0800898899

或者您可以瀏覽 LG 台灣網站

網址：<http://www.lge.com.tw>

# 目錄

|           |    |             |    |
|-----------|----|-------------|----|
| 簡介        | 8  | 撥打電話        | 22 |
| 使用手機安全須知  | 9  | 使用發話鍵撥出電話   | 22 |
| 手機介紹      | 13 | 撥打國際電話      | 22 |
| 手機外觀說明    | 13 | 結束通話        | 22 |
| 手機外觀說明    | 14 | 使用電話簿撥打電話   | 22 |
| 螢幕顯示訊息    | 15 | 調整通話音訊      | 23 |
|           |    | 撥聽來電        | 23 |
| 開始使用      | 17 | 嘈雜模式 (快速)   | 23 |
| 裝上SIM卡及電池 | 17 | 顯示網路訊號強度    | 23 |
| 為電池充電     | 18 | 輸入文字        | 23 |
| 取下充電器     | 19 |             |    |
|           |    | 電話簿         | 27 |
| 開啟或關閉您的手機 | 19 | 來電功能表       | 27 |
| 開啟您的手機    | 19 | 撥打第2個電話     | 27 |
| 關閉您的手機    | 19 |             |    |
|           |    | 多方通話或電話會議   | 28 |
| 密碼鎖       | 20 |             |    |
| PIN碼      | 20 | 功能表結構       | 30 |
| PIN2碼     | 20 | 手機功能設定選項    | 33 |
| PUK碼      | 20 | 情景模式        | 34 |
| PUK2碼     | 20 | 選擇情景模式      | 34 |
| 手機密碼      | 20 | 更改情景模式內各    | 34 |
|           |    | 情景模式 - 重新命名 | 35 |
| 來電轉接密碼    | 20 |             |    |
|           |    | 通話記錄        | 36 |
| 一般功能      | 22 | 未接來電        | 36 |
| 撥打電話與撥聽來電 | 22 | 已接來電        | 36 |

|           |    |             |    |
|-----------|----|-------------|----|
| 已撥電話      | 37 | 語音列表        | 47 |
| 刪除最近通話    | 37 | 群組          | 47 |
| 通話時間      | 37 | 全部複製        | 48 |
| 通話計劃      | 38 | 全部刪除        | 48 |
| 計劃設定      | 38 | 設定          | 48 |
| GPRS 訊息   | 38 | 訊息提示        | 48 |
|           |    |             |    |
| 娛樂與工作     | 39 | 訊息          | 49 |
| 遊戲        | 39 | 一般簡訊        | 49 |
| 我的資料夾     | 39 | 簡訊          | 49 |
| 單位轉換器     | 39 | 收信箱         | 50 |
| 計算機       | 40 | 發信箱         | 51 |
| 時區設定      | 40 | 草稿          | 51 |
| 語音備忘錄     | 41 | 設定          | 51 |
| 錄音        | 41 | 刪除          | 52 |
| 檢視語音和錄音清單 | 41 |             |    |
|           |    | 多媒體簡訊 (MMS) | 52 |
| 啟動紅外線     | 42 | 將多媒體簡訊      | 52 |
|           |    | 收信箱         | 53 |
| 公事包       | 43 | 發信箱         | 54 |
| 行程表       | 43 | 草稿          | 54 |
| 備忘錄       | 44 | 設定          | 55 |
| 電話簿       | 45 |             |    |
| 尋找        | 45 | 語音信箱        | 56 |
| 新增        | 46 | 收聽語音信箱      | 56 |
| 快速撥號      | 46 | 語音信箱號碼      | 56 |

|         |    |        |    |
|---------|----|--------|----|
| 區域廣播    | 56 | 行動網    | 64 |
| 接收      | 56 | 首頁     | 65 |
| 收信箱     | 56 | 書簿     | 65 |
| 主題      | 56 | Push訊息 | 65 |
| 鬧鈴提示    | 57 | 接收     | 65 |
| 自動顯示    | 57 |        |    |
| 語言      | 57 | 網路設定   | 66 |
|         |    | 轉到URL  | 66 |
| 常用短語    | 57 | 暫停設定   | 66 |
| 一般簡訊    | 57 | 清除暫停   | 66 |
| 多媒體簡訊   | 58 | 查詢暫停   | 66 |
|         |    |        |    |
| 名片      | 58 | 安全認證   | 67 |
| 記憶體狀態   | 58 | 直設網路設定 | 67 |
|         |    | 瀏覽器版本  | 67 |
| 照相機     | 59 |        |    |
| 照相      | 59 | 設定     | 68 |
| 連續拍攝    | 60 | 鬧鐘     | 68 |
| 我的相簿    | 60 | 日期和時間  | 68 |
| 設定      | 61 | 日期設定   | 68 |
|         |    | 日期格式   | 68 |
| Java™   | 62 | 設定時間   | 68 |
| 應用程式    | 62 | 時間格式   | 69 |
| 下載      | 62 |        |    |
| 查看資訊    | 63 | 手機設定   | 69 |
| 記憶體狀態   | 63 | 顯示設定   | 69 |
| Java 版本 | 63 | 語言     | 69 |

|           |    |        |    |
|-----------|----|--------|----|
| 通話設定      | 69 | 恢復原廠設定 | 76 |
| 來電轉接      | 69 |        |    |
| 接聽模式      | 70 | 行動增值服務 | 77 |
| 發送本機號碼    | 70 | 使用開啓集  | 78 |
| 來電等候      | 70 | 配件     | 81 |
| 每分鐘提示     | 71 | 技術資料   | 83 |
| 語音撥號      | 71 |        |    |
| 自動直撥      | 71 |        |    |
| 選擇網路      | 71 |        |    |
| 封閉閉叫詳細    | 72 |        |    |
|           |    |        |    |
| 保密設定      | 72 |        |    |
| 語音PIN碼    | 72 |        |    |
| 手機鎖       | 72 |        |    |
| 按鍵鎖       | 73 |        |    |
| 通話限制服務    | 73 |        |    |
| 固定撥號(FDN) | 74 |        |    |
| 限制密碼      | 74 |        |    |
|           |    |        |    |
| 網路設定      | 75 |        |    |
| 自動        | 75 |        |    |
| 手動        | 75 |        |    |
| 優先網路      | 75 |        |    |
|           |    |        |    |
| GPRS 設定   | 76 |        |    |
| GPRS 連接   | 76 |        |    |
| 外部裝置      | 76 |        |    |

恭喜您購買LG7050手機，本機型起採用最新的數位行動通訊的技術的行動電話。

您的手機安全須知



本操作手冊包含有關您的手機操作的所有資訊。請您於使用前務必閱讀才能將您的手機發揮最大功能，並避免造成損壞或不當使用，請詳讀本手冊的所有內容。若對手機進行本手冊未明載之任何改造，將導致保固權益喪失。

並避免造成損壞或不當使用，請詳讀本手冊的所有內容。若對手機進行本手冊未明載之任何改造，將導致保固權益喪失。

## Exposure to radio frequency energy

### 暴露於無線電波和比吸收(SAR)的訊息

此G7050型號手機設計符合有關無線電波輻射的要求。這訊息是基於科學的研究後制定的，並受到符合一定的安全觀查度，以確保不同年齡有健康狀況的人群的安全。

- 行動電話的輻射標準採用的計算單位被稱為「比吸收率」(“Specific Absorption Rate” or “SAR”)。在測量比吸收率(SAR)，均採用標準測量方式，測量手機在不同波段中最高認可發射功率操作時的比吸收率(SAR)。
- 儘管不同型號LG手機的比吸收率(SAR)可能有所差異，但他們都符合暴露於無線電波的相關國際標準。
- 根據國際非電磁輻射防護委員會(INCRP)所發製的標準，適用於公眾的無線電話比吸收率(SAR)限制是平均10瓦組織2.0瓦特/公斤(W/kg)，而SAR在台灣的限制標準為1.6瓦特/公斤。
- LG G7050 經政府認可的實驗室測試後，此型號的最高比吸收率(SAR)值為1.11瓦特/公斤。
- 減少電磁波影響，請妥善使用手機!

## 使用手機維護安全須知

注意：請務必使用相同機型的配件如電池、旅行充電器。避免手機造成損害導致保固失效。

- 請勿自行拆解手機，若手機需維修時請送至LG授權的維修服務中心處理。使用手機時可能造成電視、收音機、音響等輕微干擾，故使用時請遠離。
- 手機應遠離熱源，例如散熱器或音響附近。
- 切勿拋擲本手機。
- 避免讓手機承受機械性震盪或撞擊。
- 若用包裝紙或保鮮紙包裹本手機，手機的表面塗層可能會受損。
- 請使用乾布來清潔手機外部。  
(請勿使用如酒精、稀釋劑或酒精等溶劑。)
- 請勿讓本手機接觸蠟燭煙霧或塵埃。
- 請勿讓手機接近信用卡或其他附有磁帶的卡，否則可能損壞磁帶內的資訊。
- 請勿讓硬物碰撞顯示幕，以免損壞機身。
- 請勿讓手機至於潮濕環境中。
- 使用如磁帶到機等配件時請份外小心。如無必要，請勿觸摸天線。

## 影響電話使用

為了您的手機能隨時保持最佳效能，請您參考下列說明：

- 當您與人通話時請握好手機並將您的聲音直接傳入麥克風，天線的角度最好能高過您的肩膀，以避開手機通話受到干擾。
- 使用手機通話時請勿觸碰天線，若您握著天線通話將可能造成您的通話時間縮短。
- 如果您的手機支援紅外線裝置，請勿將此裝置照射眼睛。

## 電子產品

行動電話可能會干擾附近的電子設備。

- 請勿在醫院使用手機，以免對敏感的醫療設備造成影響。
- 行動電話可能會對助聽器造成干擾。
- 行動電話可能會對監視器，電視，收音機，音響...等電子裝置造成干擾。

## 道路安全須知

請確認當地的法令是否允許您在車上使用行動電話，並遵循下列原則：

- 開車時切勿手持行動電話。
- 請務必專心開車。
- 如果可能，請使用磁帶裝置。
- 開車時需撥電話或接聽電話請將汽車停靠在路邊。
- 無線電話可能會對您車上的電子設備造成影響，如收音機...等。
- 如果您的汽車配備安全氣囊，請勿在其附近放置物件或安裝無線設備。不當操作將會導致嚴重傷害。

## 舉例區域

舉例作參考進入範圍，請勿使用電話。  
觀察禁止告示並遵守任何相關條例。

## 具有潛在爆炸危險的環境

- 請勿在加油站使用電話。請勿在汽油及化學品附近使用電話。
- 不要將行動電話及配件與易燃氣體、液體或爆炸物置於同一車廂內一起運送或儲存。

## 在飛機上

無線電波可能會造成飛行意外，請注意下列事項。

- 搭機前請務必關閉您的手機。
- 未經空服人員許可，在起飛降陸時請勿使用。

## 兒童安全

手機應置於兒童不易取得的安全地方。手機包括組件配件，如具拆解，可能會有阻塞之虞。


## 緊急通話

緊急通話不一定能適用於全部的行動電話網路。此外，您不能依賴於依賴於使用緊急撥號功能。相關資訊請洽詢您的網路系統服務商。

## 電池使用與保養

- 電池充電前，必須完全放電。與其他系統不同的是，本電池的性能不會受到記憶效應的影響。
- 您只能使用LG電池和充電器。LG充電器是經過特別設計為發揮電池最長壽命而設計的。
- 請勿自行拆開電池造成電池短路。
- 請保持電池的金屬接觸面的清潔。
- 當電池無法再發揮令人滿意的效能時，請更換電池。此電池可重複充電數百次，直到它被自動更換為止。
- 如與電池經過長時間未使用，應重新充電以發揮最大的效力。
- 請勿將電池充電器至於日光下曝曬，或在潮濕度下使用，例如在浴室門。
- 請勿將電池保存在太熱或太冷的地方，如此可能會損壞電池的效能。

## 手機外觀說明

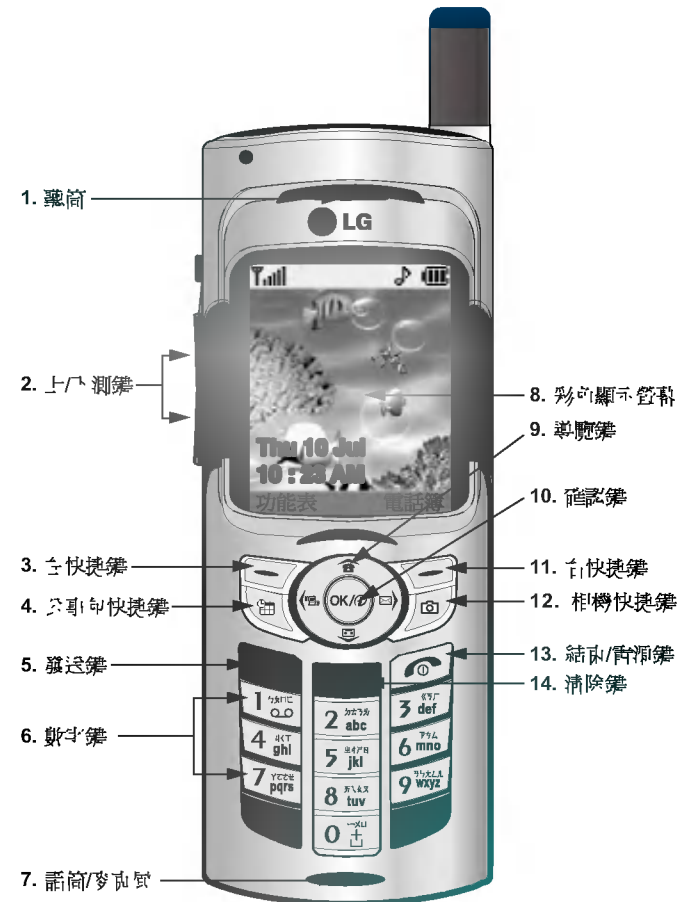

## 手機外觀說明

- 1. 聽筒**
- 2. 上/下 測鍵**
  - 於一般待機時可調整按鍵音響。
  - 通話中可調整通話音響。
  - 當滑蓋蓋起時，可查看日期與時間。
- 3. 11. 左快捷鍵/右快捷鍵:** 左/右快捷鍵的功能請參考螢幕上的指示值引。
- 4. 訊息鍵:** 無需按動即可直接進入訊息功能表(包含訊息, 語音訊息, Push 訊息, 行程表或鬧鐘)。
- 5. 撥送鍵:** 撥出通話和接聽通話。如果您按此鍵後未輸入號碼, 手機會顯示最近撥出、已接聽和未接聽的通話號碼。
- 6. 數字鍵:** 這些按鍵之引明可在待機模式下進行撥號, 以及在編輯模式下輸入數字或字元。
- 7. 麥拉質:** 在通話時按左快捷鍵[選項] 鍵, 然後選取靜音, 可使麥拉質或靜音。按左快捷鍵[取消靜音], 可取消手機靜音。手機靜音時, 來電者將聽不見您的聲音, 但您仍可聽見來電者的聲音。(請參考 28 頁。)
- 8. 彩鈴顯示螢幕:** 顯示手機狀態圖示, 功能表項目, 行動網荷訊, 圖片...等資訊
- 9. 導覽鍵:** 引明快捷鍵功能快速進入功能表
  - 上導覽鍵: 引於拾聽姓名、通話號碼...等通話簿查詢
  - 下導覽鍵: 可直接進入語音訊息功能, 擊住此鍵即可直接進入錄音
  - 左導覽鍵: 可直接讓您設定個人情制模式
  - 右導覽鍵: 可直接進入訊息功能選項
- 10. 確認鍵:** 選擇功能表後引明此進行確認。
- 12. 相機快捷鍵:** 引明此鍵您引明快速進入拍照功能
- 13. 結束/音源鍵:** 引於結束或拒接通話。此鍵亦可當作音源鍵使用, 引於按住此鍵數秒即可開機或關機。

- 14. 清除鍵:** 引刪除字元, 返回功能表。

## 螢幕顯示訊息

手機螢幕上會顯示多種圖示, 下表將說明這些圖示代表的意義:

### 螢幕圖示

| 圖示  | 說明              |
|---|-----------------|
|    | 顯示網路訊號強度。       |
|    | 通話已接通。          |
|    | 表示正在使用漫遊服務。     |
|    | 引明使用 GPRS 服務。   |
|    | 鬧鐘已經設定在處於靜音的狀態。 |
|    | 顯示通話狀態。         |
|    | 收到文字訊息。         |
|    | 收到語音留言。         |
|    | 收到多媒體簡訊。        |
|   | 情制模式中的「震動」功能表。  |
|  | 收到電子郵件訊息。       |
|  | 情制模式中的「大聲」功能表。  |
|  | 情制模式中的「靜音」功能表。  |
|  | 情制模式中的「到機」功能表。  |
|  | 情制模式中的「汽前」功能表。  |
|  | 情制模式中的「一般」功能表。  |



正在使用push訊息服務。

提示您個人個人行程表所設定的日期。


正在使用WAP服務。

正在使用GPRS服務。

正在輸入保密密碼。


## 裝上SIM卡及電池

1. 請確認手機為關機狀態後再取下電池取下電池時請先按下滑動卡榫並以45度角將電池取出。

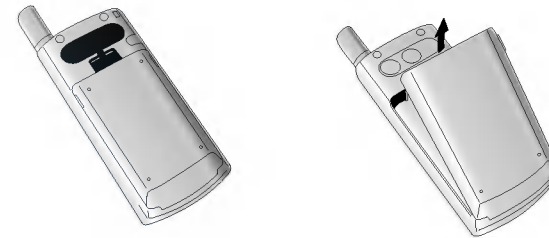

- !** 請注意 取下電池時請確保手機為關機狀態不然可能會對手機造成傷害。

2. 將SIM卡插入卡座，請將SIM卡的金的接觸點面向下，截面向前的方式，將SIM卡滑入至銀的卡座上。

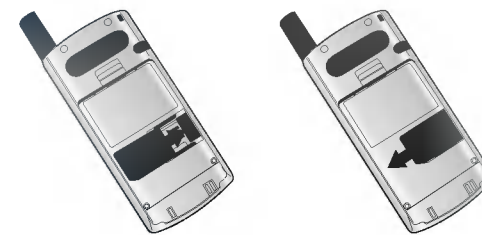

插入SIM卡

取出SIM卡

- !** 請注意 由於SIM卡金屬部份非常易損壞，所以請務必小心放置。


3. 取出電池時請壓下電池卡扣並輕拉電池前緣的凹槽將電池取出。



### 為電池充電

請務必使用原廠提供的充電器為您的手機充電。

1. 手機和連接旅行充電器前，必須先裝入電池並將充電插頭插入手機底部的固定座，請確認充電插頭上的箭頭朝上並連上手機。
2. 請將旅行充電器的另一端插入電源插座。

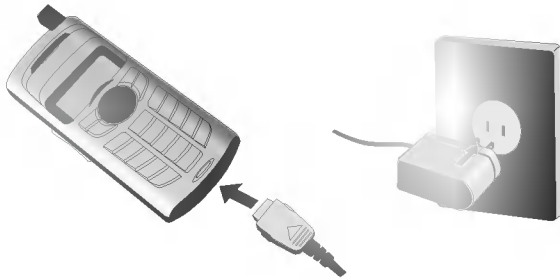


- ⚠ 請注意** 使用非原廠充電器可能造成手機損毀並喪失您個人手機保固的權益。請勿插入插頭，以免損壞手機或旅行充電器。

### 取下充電器

請務必使用原廠提供的充電器為您的手機充電。


1. 電池完全充電後，手機螢幕上電池圖示的移動式指示列將會停止動作並於螢幕上顯示“電池已充滿”。
2. 取下充電器，如圖所示按下旅行側的三個按鍵即可將旅行充電器取下。

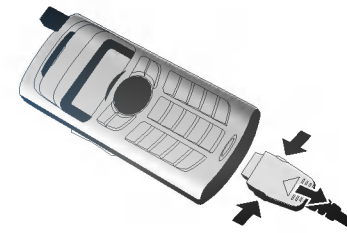

- ⚠ 請注意**
- 請確認電池已經充滿，才將其從您第一次使用時。
  - 不要在充電期間取出電池或SIM卡。
  - 如果您的電池無法重新充電，請您先使用手機關機幾分鐘後再重新充電。


### 開啓與關閉您的手機

#### 開啓您的手機

1. 將電池裝上您的手機並將旅行充電器或前上型充電器接上您的手機。
2. 按下  數秒直到手機螢幕開啓。
3. 並依您的PIN碼設定來輸入您的PIN碼。

- ⚠ 請注意** 如同其他無線產品一樣，您的手機開機時請不要靠近您的接觸天線。

#### 關閉您的手機

1. 按下  數秒直到手機螢幕關閉。

## 密碼鎖

使用本書節所述之密碼鎖，可避免他人盜用您的手機。密碼鎖(PUK和PUK2碼除外) 可在使用[功能表9.5.6]變更密碼功能時參考74頁。

### PIN碼(4 至8 位數字)

PIN碼(個人識別碼) 能保護您的SIM卡免受他人盜用。通常PIN碼會隨SIM卡一起提供。當PIN碼設定為啟用時，每次開機時，手機將會要求您輸入PIN碼。相反的，若PIN碼設定為關閉時，手機不需輸入PIN碼則會自動連接網路。

### PIN2碼(4 至8 位數字)

有些SIM卡會附隨提供PIN2碼，需輸入此密碼才能使用某些功能如音訊帳單通知、固定撥號等。這些功能僅在SIM卡支援的情況下才能使用。

### PUK碼(4 至8 位數字)

若變更已被鎖定的PIN碼，必須輸入PUK (PIN開鎖密碼) 碼。PUK碼可能會隨SIM卡一起提供。如果沒有，請洽當地電信公司索取備用密碼。如果遺失該密碼，也可向電信公司索取。

### PUK2碼(4 至8 位數字)

有些SIM卡會附隨提供PUK2碼，輸入此密碼才能變更已被鎖定的PIN2碼。如果遺失該密碼，也可向電信公司索取。

### 手機密碼(4 至8 位數字)

手機密碼可防止手機遭受他人竊用。此密碼會隨手機提供。若刪除所有手機的資料輸入至啟用「恢復原廠設定」功能表時，必須輸入此密碼。預設密碼為“0000”。

## 來電轉接密碼





來電轉接密碼提供您使用來電轉接服務，詳細說明請參考73頁。

# G7050





## 撥打電話與接聽來電

 

### 撥打電話

1. 請確定您的手機是開機狀態。
2. 輸入電話號碼，包括區碼。如要編寫號碼請您使用左側導覽鍵，您可使用左側導覽鍵移動字元至您想編寫的位置，按下清除鍵一次可清除一個字元 (  ) 和全都清除您則需按。
  - ▶ 長按清除鍵 (  ) 清除全部的字元。
3. 按下發話鍵 (  ) 撥出電話。
4. 如結束通話，可長按 (  ) 結束通話或按下快捷鍵。您可利用關閉滑蓋的功能結束通話。


### 使用發送鍵撥出電話

1. 在待機模式中，按下發送鍵 (  )，您可檢視最近通話資料包括已撥、已撥回及未接來電紀錄。
2. 您可使用導覽鍵上下移動選擇您想撥出的號碼。
3. 按下 。

### 撥打國際電話

1. 按住  鍵再撥打國際撥號碼。「+」字元可取代國際撥號碼
2. 輸入區碼、區碼及電話號碼
3. 按下 。


### 結束通話

當您結束通話時，請按下 (  ) 鍵。

### 使用電話簿撥打電話

您可使用姓名及電話於SIM卡或手機的詞彙觀中，所以您可使用透過電話簿的資料輕鬆的撥出電話。更多詳細的資料請參閱45-46頁。

### 調整通話音量


如果您想在通話中調整通話音量，請您使用側鍵 (  )。按上鍵增加音量按下鍵降低音量。

**!** 請注意 在待機時按下上/下側鍵，您將只是調整按鍵音量的大小。

### 接聽來電

當您收到來電時手機會響鈴並且會有來電顯示於螢幕上閃動。如果來電者是已辨識則來電者(姓名的電話號碼)將會顯示於螢幕上。

1. 使用滑蓋接聽來電。  
(若手機已經設定接聽模式為滑蓋接聽 請參閱70頁)


**!** 注意 過手機接聽模式設定為任意鍵接聽(請參閱70頁)，則按下任一鍵即可接聽來電此時按下功能鍵則可拒接來電 (  )。

**!** 注意

- ▶ 拒接來電!，您不需打開滑蓋只需按下手機左側側鍵即可拒接來電。
- ▶ 您可在通話中繼續使用電話簿及其他功能表。

2. 結束通話，蓋上滑蓋或按下。

### 禮儀模式 (快速)

在滑蓋關閉的狀態中(您可使用按下左側鍵 (  )) 即可禮儀模式拒接來電。

### 顯示網路訊號強度

您可透過螢幕上的訊號強度圖示檢視目前手機收訊狀況。訊號強度依手機的收訊的狀況，而改變特別是在大樓內收訊狀況可能不佳，此時只須您向窗外移動收訊狀況即可獲得改善。

### 輸入文字

您可使用手機按鍵輸入字元。例如，儲存電話簿中的聯絡人姓名，簡訊訊息，新增個人簡候語或在行程表中安排行程活動。

下列的輸入方式將適用於本手機。

### T9 輸入

在 T9 模式下，您只需按對應的字母鍵一次。T9 輸入將內建字彙為基準為您組合相近的字，當然您也可在字彙中新增新詞。

### ABC 模式


在此模式輸入字元時您需依鍵盤上字元編排順序，按下列鍵一，二，三...以此類推直到您所需的字元出現。

### 123 模式 (數字模式)

在此模式時您僅能按鍵盤上的數字進行輸入，以結束 123 輸入模式，請按 **☛** 鍵。

### 輸入文字輸入模式

1. 您可用快捷鍵顯示下列的圖示，了解您目前的輸入狀態。
2. 要輸入文字請按 **☛** 鍵，在輸入法的切換，您可參考螢幕右側圖示說明。

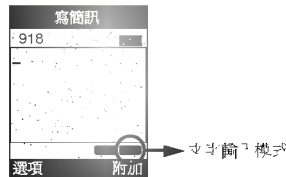

### ► 使用 T9 模式

使用 T9 輸入法輸入字元可節省您的輸入的步驟，在您第一次輸入字元時手機會顯示您所輸入的字元並與內建字彙進行字彙組合，當然您也可在字彙中新增新詞，作為個人字彙使用。

1. 使用快捷鍵 2 至快捷鍵 9 輸入字元。一個字元只需按一次快捷鍵。
  - 正確字彙將依您所輸入字元而顯示。
  - 如果字彙仍然不正確，您可用快捷鍵導覽進行選擇正確的字彙。

舉例：輸入 **☛** **4** **6** **6** **3** 則出現 Good  
 輸入 **☛** **4** **6** **6** **3** 按下 **[導覽鍵]** 則出現 Home

- 如果您在 T9 找不到想輸入的字元您可用切換回 ABC 模式。

- 當您在 T9 輸入模式下。您可用快捷鍵 **[選項]** 進行選擇 T9 語言的輸入法，在此選項您也可關閉 T9 功能。一般輸入時 T9 預設為關閉。

2. 刪除或編輯已輸入文字。
3. 您可用快捷鍵 **[C]** 字彙輸入空格。刪除文字請按快捷鍵 **[C]** 字彙。
  - 一直按著 **[C]** 字彙將所有輸入的字清除。

**!** 請注意 如果您不想儲存所輸入的字，您只需按 **[C]** 即可返回待機模式。


- 1) **ST (筆劃輸入法)**：如您使用筆劃輸入法選擇中文字元。當您選擇完各個筆劃字根後，中文字元就會顯示出來。使用 **[左]** 及 **[右]** 鍵來查看其他字元選項，並按 **[OK]** 加入選擇。同樣地，使用 **[左]**、**[右]**、**[上]** 及 **[下]** 鍵來移動多個不同字元。

例如：要輸入「你好」，請順序按數字鍵 **1**、**2** 及 **3**，然後您將會看到第一個字元「你」。現在，按 **[OK]** 然後再按 **1** 鍵選擇「好」。



- 2) **注音符 (Bopomofo)**：依照注音符號可讓您輸入您所需要的中文字。詳細的輸入方法介紹以及鍵盤對照表，請參考下列說明：

例如：要輸入「ㄅ」，請順序按數字鍵 **1** 及 **0**，然後「ㄅ」將出現在外部編輯螢幕。因為許多字元均具有相同的注音符號。所以您應從其中選擇字元「ㄅ」(按 **[OK]** 然後再按 **3**)。在選擇第一個字元後，接著會出現其他的各種字元。您可用相同方法選擇「ㄅ」(按 **[OK]** 然後再按 **2**)。

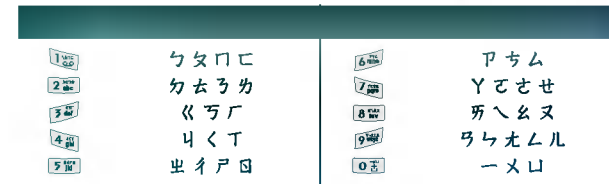

### ► 使用 ABC 輸入模式

您可以使用鍵盤上數字鍵 [2-9] 至 [9] 輸入字元。

1. 依鍵盤上字元排列順序之指示按下按鍵:

- 按一次選擇第一個字元
- 按二次選擇第二個字元
- 依此類推

2. 刪掉字格，請按一次按鍵 [0]。刪除文字請按一次 [c] 字鍵。  
一次按數 [c] 字鍵將所有輸入的字元清除。

❗ 注意 相關按鍵清單請參考下列表格。

|   |           |           |
|---|-----------|-----------|
| 1 | .,-?!'@:1 | .,-?!'@:1 |
| 2 | ABC2      | abc2      |
| 3 | DEF3      | def3      |
| 4 | GHI4      | ghi4      |
| 5 | JKL5      | jkl5      |
| 6 | MNO6      | mno6      |
| 7 | PQRS7     | pqr7      |
| 8 | TUV8      | tuv8      |
| 9 | WXYZ9     | wxyz9     |
| 0 | Space key | Space key |

### ► 使用 123(數字) 輸入模式

數字輸入模式可在一般簡訊(簡訊號碼，例如)輸入數字。

您可以在數字輸入模式中按下任何您想輸入的數字。

## 簡訊簿

您可以儲存聯絡人簡訊於SIM卡中，此外您一次同時可儲存255個號碼於手機記憶體中。

SIM卡與簡訊簿儲存方式類似。(相關操作說明請參考45-48頁說明)

## 來電功能表

通話時手機螢幕上顯示的功能表，與待機螢幕上顯示的預設功能表不同，並與下列項目差別，請按下列功能鍵[選項]選擇。

### 撥打第2個簡訊

您可以從簡訊簿取得一個撥號號碼，再撥打第二個簡訊。按快捷鍵 [簡訊簿]，然後選擇尋找。通話時，如欲將撥號號碼儲存到簡訊簿，請按快捷鍵 [簡訊簿]，然後選擇 [新增]。

### 切換通話


您可以使用快捷鍵在二個通話中切換通話。


### 撥聽來電

撥聽來電時您只需按下 [來電] 鍵。同時當您已經在通話中，機身能夠閃閃聲通知您有另一個來電。此功能稱為「來電等候」，僅在網路支援時才可使用。如欲得知何種型號傳呼此功能的詳細資訊，請參閱來電等候功能表 9.4.4]在70頁。

如欲啟用來電等候功能，您可以按 [來電] 鍵或按快捷鍵 [撥聽] 兩個字樣，保留第一通簡訊並撥聽第二通簡訊。您可以依本選型快捷鍵 結束該撥聽正在等候的來電。

## 本會拒接

在下接聽的情況下拒接來電您可按  鍵。

在通話中您可利用快捷鍵[功能表]選擇 多方通話/拒接來電或按  鍵拒接。

## 麥克風靜音

在通話時按快捷鍵[選項]鍵，然後選取靜音，可使麥克風靜音。按快捷鍵[取消靜音]，可取消靜音。當靜音時，來電者將聽不見您的聲音，但您仍可聽見來電者的聲音。


## 在通話中開啓雙音多頻音

可在通話中開啓雙音多頻功能(例如：讓手機使用自動轉換功能)，請依次選取快捷鍵[選項] 雙音多頻開啓。使用相同方法可關閉雙音多頻功能。

## 多方通話或電話會議

如果您的網絡系統商支援多方通話或電話會議服務，您即可使用此功能同時與超過一個來電者通話。在啓動多方通話，您必須至少有一個電話正在通話中以及一個電話保留中，同時這兩個電話都可被接聽。啓動多方通話之後，啓動者可新增、切換或隔離(即從多方通話中關閉，但仍與您連線)任何一個電話。這些選項都包含在通話中功能表內。多方通話中的來電者人數最多為三人。啓動多方通話後，您可對其進行控制，並只可您才可新增通話。

## 撥打第二個電話

您可在通話時撥打第二個電話。在撥打第二個電話，請輸入第二個號碼，然後按  鍵[發送]。在您撥打第二個電話時，第一個電話將被自動保留。您可依次選取快捷鍵[選項]進行切換，在兩個電話之間切換。

## 設定多方通話

您可依次選取[選項]與多方通話/全都加入，將一個或多個保留通話連接到目前的通話，形成一組多方通話。

## 保留多方通話

在保留多方通話，請依次選取快捷鍵[選項]與多方通話/全都保留。

## 啓則保留中的多方通話

在啓則保留中的多方通話，請依次選取快捷鍵[選項]選擇與多方通話/全都加入。

## 新增通話到多方通話

新增通話到多方通話，將目前通話加入到被保留的各方通話中，請依次選取快捷鍵[選項]選擇與多方通話/全都加入。


## 顯示多方通話中的通話者

可在手機螢幕上捲動查看參與多方通話的來電者號碼，使用上/下導航鍵進行瀏覽。

## 在多方通話中進行私人通話

與多方通話中的某個通話者進行私人通話，請先使其號碼顯示在螢幕上，然後依次選取快捷鍵[選項]與多方通話/私人通話保留所有其他來電。

## 結束多方通話

按  鍵即可撥目前顯示的各方通話來電。在結束多方通話，請按快捷鍵[選項]，然後選取多方通話/結束多方通話。再選取多方通話/全都結束後，將會結束所有進行中與保留中的通話。

# 功能表結構

請參考下列圖示，將可提供您瞭解功能表的結構：

- ▶ 數字編號為一項功能表的選項。
- ▶ 提供您快速的翻找功能表。

您可用透過快捷鍵進入「功能表」並使用導覽鍵選擇您想要的功能，您也可用使用快捷鍵進入「功能表」加上數字鍵快速的方式進入各項功能。

## 1. 情境模式 (參考 34頁)

- ▶ 1.1 震動
  - ▶ 1.1.1 開啟
- ▶ 1.2 靜音
  - ▶ 1.2.1 開啟
  - ▶ 1.2.2 關閉
  - ▶ 1.2.3 重新命名
- ▶ 1.3 一擊
  - ▶ 1.3.1 開啟
  - ▶ 1.3.2 關閉
  - ▶ 1.3.3 重新命名
- ▶ 1.4 大螢幕
  - ▶ 1.4.1 開啟
  - ▶ 1.4.2 關閉
  - ▶ 1.4.3 重新命名
- ▶ 1.5 相機
  - ▶ 1.5.1 關閉
- ▶ 1.6 汽球
  - ▶ 1.6.1 關閉

## 2. 通話紀錄 (參考 36頁)

- ▶ 2.1 未接來電
- ▶ 2.2 已接來電
- ▶ 2.3 已撥出通話
- ▶ 2.4 刪除最近通話
  - ▶ 2.4.1 未接來電
  - ▶ 2.4.2 已接來電
  - ▶ 2.4.3 已撥出通話
  - ▶ 2.4.4 所有通話
- ▶ 2.5 通話時間
  - ▶ 2.5.1 最後通話
  - ▶ 2.5.2 已接來電
  - ▶ 2.5.3 已撥出通話
  - ▶ 2.5.4 所有通話
- ▶ \* 2.6 通話詳覽
  - ▶ 2.6.1 上次通話詳覽
  - ▶ 2.6.2 所有通話詳覽
- ▶ \* 2.7 通話詳覽
  - ▶ 2.7.1 通話詳覽限制
  - ▶ 2.7.2 設定詳本
  - ▶ 2.7.3 自動顯示
- ▶ 2.8 GPRS 訊息
  - ▶ 2.8.1 WAP 訊息
  - ▶ 2.8.2 外部裝置
  - ▶ 2.8.3 總數按

## 3. 娛樂&遊戲 (參考 39頁)

- ▶ 3.1 遊戲
- ▶ 3.2 巧的資料夾
  - ▶ 3.2.1 圖片
  - ▶ 3.2.2 動畫
  - ▶ 3.2.3 聲音
- ▶ 3.3 習性轉換器
- ▶ 3.4 計算機
- ▶ 3.5 網路設置
- ▶ 3.6 語音訊息錄
- ▶ 3.7 習性定外紙

## 4. 公用工具 (參考 43頁)

- ▶ 4.1 行程表
- ▶ 4.2 訊息錄
- ▶ 4.3 宵語簿
  - ▶ 4.3.1 翻抄
  - ▶ 4.3.2 新增
  - ▶ 4.3.3 快速撥號
  - ▶ 4.3.4 語音列表
  - ▶ 4.3.5 音訊
  - ▶ 4.3.6 全都複製
  - ▶ 4.3.7 全都刪除
  - ▶ 4.3.8 設定
  - ▶ 4.3.9 訊息提示

## 5. 訊息 (參考 49頁)

- ▶ 5.1 一般簡訊
  - ▶ 5.1.1 寫簡訊
  - ▶ 5.1.2 非信箱
  - ▶ 5.1.3 發信箱
  - ▶ 5.1.4 草稿
  - ▶ 5.1.5 設定
  - ▶ 5.1.6 刪除

## 5. 訊息 (續前項目)

- ▶ 5.2 多媒體簡訊
  - ▶ 5.2.1 寫多媒體簡訊
  - ▶ 5.2.2 非信箱
  - ▶ 5.2.3 發信箱
  - ▶ 5.2.4 草稿
  - ▶ 5.2.5 設定
- ▶ \* 5.3 語音信箱
  - ▶ 5.3.1 非撥語音信箱
  - ▶ 5.3.2 語音信箱號碼
- ▶ \* 5.4 區域選擇
  - ▶ 5.4.1 據此
  - ▶ 5.4.2 非信箱
  - ▶ 5.4.3 主題
  - ▶ 5.4.4 圖鈴提示
  - ▶ 5.4.5 自動顯示
  - ▶ 5.4.6 語音
- ▶ 5.5 常用短語
  - ▶ 5.5.1 一般簡訊
  - ▶ 5.5.2 多媒體簡訊
- ▶ 5.6 名片
- ▶ 5.7 訊息檔狀態
  - ▶ 5.7.1 一般簡訊
  - ▶ 5.7.2 多媒體簡訊

## 6. 照相機 (參考 59頁)

- ▶ 6.1 照相
- ▶ 6.2 連續拍攝
- ▶ 6.3 巧的相簿
  - ▶ 6.4 設定
    - ▶ 6.4.1 相片格式
    - ▶ 6.4.2 連續拍攝
    - ▶ 6.4.3 快門聲音

## 7. Java™ (參考 62頁)

- 7.1 應用程式
- 7.2 下載
- 7.3 查看資訊
  - 7.3.1 設備狀態
  - 7.3.2 Java 版本

## 8. 行動網 (參考 64頁)

- 8.1 首頁
- 8.2 書籤
- 8.3 Push 群組
  - 8.3.1 收信箱
  - 8.3.2 接收
- 8.4 網路設定
- 8.5 轉到URL
- 8.6 聲音設定
  - 8.6.1 清除聲音
  - 8.6.2 重設聲音
- 8.7 安全保護
- 8.8 重設網路設定
  - 8.8.1 是
  - 8.8.2 否
- 8.9 瀏覽器版本

## 9. 設定 (參考 68頁)

- 9.1 鬧鐘
- 9.2 日期和時間
  - 9.2.1 設定日期
  - 9.2.2 日期格式
  - 9.2.3 設定時間
  - 9.2.4 時間格式

## 9. 設定 (續前項E)


- 9.3 手機設定
  - 9.3.1 顯示設定
  - 9.3.2 語言
- 9.4 通話設定
  - 9.4.1 本音轉接
  - 9.4.2 接聽模式
  - 9.4.3 發送本機號碼
  - 9.4.4 本音等候
  - 9.4.5 每分鐘提示
  - 9.4.6 語音撥號
  - 9.4.7 自動直撥
  - 9.4.8 選擇網路
  - 9.4.9 封閉的詳細
- 9.5 保密設定
  - 9.5.1 需PIN碼
  - 9.5.2 手機鎖
  - 9.5.3 按鍵鎖
  - 9.5.4 通話限制服務
  - 9.5.5 固定撥號
  - 9.5.6 限制密碼
- 9.6 網路設定
  - 9.6.1 自動
  - 9.6.2 手動
  - 9.6.3 優先網路
- 9.7 GPRS設定
  - 9.7.1 GPRS連接
  - 9.7.2 外部裝置
- 9.8 恢復原廠設定

## 10. 行動增值服務 (參考 77頁)

本功能表內皆提供SIM卡及網路服務可選。

手機提供您自行更改相關設定。相關功能可搭配二個快捷鍵，如圖所示，您可輕易的檢視每一個功能表與功能表的設定狀態。

(說明)

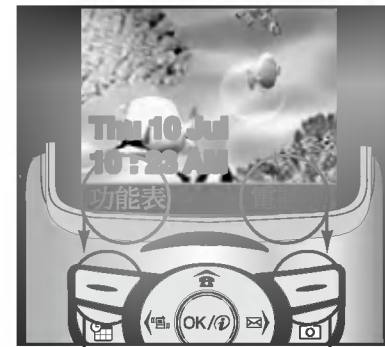

請按「左」快捷鍵可直  
接進入功能表選項

請按「右」快捷鍵可  
啟動相對應的功能

\*: 上述為一般手機功能規格

在情劇模式中, 您可針對不同的場合、環境、群組修改您的鈴聲聲音。手機總共提供 16 種不同環境情劇模式: 震動, 靜音, 一般, 鈴聲, 到機旁, 汽車。您可在修改每一種情劇模式的設定。

請按下列功能表鍵(☰)使用導覽鍵選擇您所使用的的情劇模式。

### 選取情劇模式 (功能表 1.X.1)

1. 進入情劇模式選擇印。
2. 用上/下導覽鍵捲動螢幕至您想啟動的情劇模式後按下列OK鍵或印全快捷鍵 [確認]。
3. 完成後, 請選擇啟動。

### 更改情劇模式內容 (功能表 1.X.2)

用上/下導覽鍵捲動螢幕至您想啟動的情劇模式後按下列OK鍵或印全快捷鍵 [確認], 選擇更改情劇模式相關設定。

- [1] **來電提示類型:** 可根據不同環境選取來電提示類型, 如鈴聲、震動等。
- [2] **鈴聲類型:** 可根據不同環境設定不同的鈴聲。  
您可使用上/下導覽鍵選取鈴聲清單印所有鈴聲並選擇您想設定的鈴聲。
- [3] **鈴聲音量:** 可根據不同環境設定不同的鈴聲音量。
- [4] **簡訊提示類型:** 可根據不同環境, 設定收到訊息時的來電提示。
- [5] **簡訊提示音:** 可選擇收到訊息的提示音。
- [6] **按鍵聲音:** 可根據不同的環境選取不同的按鍵音。
- [7] **按鍵音量:** 可根據不同環境設定不同的按鍵音量。
- [8] **確認音音量:** 您可根據不同環境設定不同的音效果量。
- [9] **開/關機音:** 您可根據不同環境設定不同的音源開啓/關閉音。
- [10] **自動捲動:** (只有在手機接上到機或汽車時持續顯示)  
您可使用啟動自動捲動功能, 選擇自動捲動的所需時間。

### 情劇模式 - 重新命名 (功能表 1.X.3)

您可使用更改除震動、到機及汽車...等情劇模式的預設操作模式名稱。

1. 如欲更改情劇模式名稱, 在情劇模式的目錄下用上/下導覽鍵選擇您想更改的情劇模式, 選擇後按下列OK鍵或印全快捷鍵並選擇重新命名。
2. 輸入您想重新命名的名稱後按下列OK鍵或印全快捷鍵 [儲存]。

此功能表可顯示最近未接聽的電話號碼。您可以撥打這些電話號碼、儲存，以及查看日期與時間，但需視您的網路系統商是否提供來電識別功能而已(CLI)。

如適網路系統商能提供系統服務您將可同時檢視來電的姓名與號碼並且可同時檢視通話時間與日期。

按下列功能表( )並使用導覽鍵選擇通話紀錄。

## 未接來電 功能表 2.1

此功能表可顯示最近未接聽的10通電話號碼。在您按下快捷鍵後 [選項]，您還可：

- 查看細節如來電號碼已經存在電話冊。
- 儲存號碼到電話簿的通話簿印。
- 傳送簡訊。
- 刪除此通話紀錄。

**注意** 您也可刪除所有最近通話紀錄(請參考功能表 2.4)。

## 已接來電 功能表 2.2

此功能表可顯示最近已接聽的10通電話號碼。在您按下快捷鍵後 [選項]，您還可：

- 查看細節如來電號碼已經存在電話冊。
- 儲存號碼到電話簿的通話簿印。
- 傳送簡訊。
- 刪除此通話紀錄。

**注意** 您也可刪除所有最近通話紀錄(請參考功能表 2.4)。

## 已撥電話 功能表 2.3

此功能表可顯示最近已撥聽的10通電話號碼(已撥或未成功撥號)。

在您按下快捷鍵後 [選項]，您還可：

- 查看細節如來電號碼已經存在電話冊。
- 儲存號碼到電話簿的通話簿印。
- 傳送簡訊。
- 刪除此通話紀錄。

**注意** 您也可刪除所有最近通話紀錄(請參考功能表 2.4)。

## 刪除最近通話 功能表 2.4

您可刪除最近保留在未接來電、已接來電、已撥電話或全部通話列表記錄印的電話號碼。

## 通話時間 功能表 2.5

此功能表可顯示您所撥出與接收的通話時間並且可將通話時間重新設定。您可使用上下導覽鍵移動游標進行選擇。選擇完最後按 [OK] 鍵或快捷鍵 [頁碼] 針對您所選擇的項目重新設定所有通話時間。為了避免不斷的換頁功能您必須輸入您的PIN2碼才能完成設定。

| 通話時間     |    |
|----------|----|
| 1 最後通話   |    |
| 2 已接來電   |    |
| 3 已撥電話   |    |
| 4 所有通話   |    |
| 00:00:00 |    |
| 重設       | 返回 |

- **最後通話**: 最後通話的時間
- **已接來電**: 已接來電的時間
- **已撥電話**: 已撥電話的時間
- **所有通話**: 所有通話時間

**注意** 系統商對實際通話時間與限制會隨網路功能、限制與捨入計算、稅額等而有所不同。

## 通話計費

功能表 2.6

此項服務您可用設定幣別與單價但請洽詢系統供應商以瞭解計費單價。和在此功能表中選取幣別或單價，您可能會被輸入 PIN2 碼。

**注意** 系統商對實際通話計費限制會隨網絡功能、帳單四捨五入計算、稅額等而有所不同。

## 計費設定

功能表 2.7

• **通話計費限制:** 此網絡服務可讓您將通話計費限制在選定的計費金額內。如果您選取開啟，將會顯示剩餘金額。如果您選取更改，則可變更金額限制。但是您必須輸入您的 PIN2 碼您才可進行更改。

• **設定幣別:** 您可用設定目前帳本的貨幣類型與金額。設定幣別與單價。請洽詢系統供應商以瞭解計費單價。和在此功能表中選取幣別或單價，您可能會被輸入 PIN2 碼。

**注意** 在所有金額全部到期時，除緊急電話以外，您將無法撥打任何電話。您需重新輸入 PIN2 碼才能設定通話計費限制，視 SIM 卡而定。

• **自動顯示:** 此網絡服務可讓您自動查看上次通話的帳目。若設定為開啟，則可在通話結束後自動顯示帳目。

## GPRS 訊息

功能表 2.8

您可用檢視所有透過 GPRS 網絡傳輸的數據，此外，您可用您 GPRS 的上限時間。

(GPRS 所代表的是整合型封包無線傳輸服務。)

### 1) WAP 訊息

您可用檢視在 WAP 上所使用的資料對照時間。

在功能表中，在左快捷鍵[查看]或者 OK 清除所有資料。

### 2) 外部裝置

您可用檢視外部裝置所使用 GPRS 的資料對照時間，例如一邊通話連接埠。

### 3) 總數據

您可用檢視所有透過 WAP 與外部裝置的數據使用數量。

按下列功能表( )並用引導鍵選擇娛樂菜單選項。

## 遊戲

功能表 3.1

您可用盡情享受手機給您的遊戲。相關資訊您可參考手機螢幕上的說明。

## 我的資料夾

功能表 3.2


我的資料夾包含 3 個功能: 圖片、動畫與聲音。您可用查看、聆聽、刪除或重新命名已下載的資料。您可用透過 WAP 網址或 MMS 及 SMS 下載圖片、動畫及聲音，下載後的資料您可進行傳送給他人或進行修改或刪除。您可用將資料夾內的動畫圖集設成您的待機圖片。在聲音部分，則可將您下載的鈴聲設成來電鈴聲。

## 單位轉換器

功能表 3.3

轉換測量單位。轉換單位類型共有 4 種: 長度、面積、重量及數值。

1. 您可用按快捷鍵[單位]鍵選取四種單位類型的其中一種。
2. 使用上下導覽鍵選擇標準值。
3. 按左/右導覽鍵選擇要轉換的單位。
4. 移動導覽鍵至單位轉換選項。
5. 按左/右導覽鍵選擇要轉換的單位。
6. 輸入您要轉換的數值。

**注意** 您可用使用  鍵輸入小數點。

## 計算機

功能表 3.4




含標準功能，如+、-、x、÷：加、減、乘及加、減、乘除。

手機本身提供您簡易的計算機功能，相關操作如下所述：

### 使用計算機

1. 按下數字鍵輸入數字。

2. 使用導覽鍵選取計算符號。

**注意** 要清除輸入錯誤的數字請按  鍵。  
要輸入小數點的數字請按  鍵。  
要輸入負數字請按  鍵。

3. 按下 [結果] 查看結果，請按下全快捷鍵 [結果] 或者按 OK 鍵返回。

4. 按下全快捷鍵 [清除] 清除數字并重複上述程序。

## 時區設置

功能表 3.5

您可以在查看世界時 158 個城市的時間，請使用左側導覽鍵移動游標。

手機登錄上城市名稱以及目前該城市的日期與時間。

選擇目前您所在的時區設置方式如下：

1. 按下左側導覽鍵移動游標選取該城市所屬時區。

2. 您也可以在按下全功能鍵 [設定] 把您選取的城市時間設定為目前的時間。

**注意** 網絡狀態可能會影響時區設置功能。

## 語音備忘錄


功能表 3.6

語音備忘錄功能可容許您錄製長達 30 秒的語音紀錄，您總共可用錄製 3 則語音訊息。

您可用使用全快捷鍵播放已錄製的語音訊息或可進行刪除已錄製的語音訊息或者錄製新的語音訊息。

**注意** 在一般待機模式中，您可用按下導覽鍵直接可語音訊息功能。錄製新的語音訊息。

### 錄音

1. 在一般待機模式中按下  導覽鍵直接可語音訊息功能。

2. 開始錄音後，將顯示錄製中的訊息剩餘時間。

3. 如果您已結束錄音，請按下全快捷鍵 [儲存]。

**注意** 如果目前手機的記憶體已滿您則必須刪除一些舊的語音訊息後您才可用重新錄製。


• **播放:** 您可用播放已錄製完成的語音訊息，螢幕上方也會顯示錄製的日期與時間。

• **刪除:** 您可用刪除語音訊息。

• **新錄音:** 您可用錄製新的語音訊息。

• **全部刪除:** 您可用刪除全部的語音訊息，請使用全快捷鍵選擇 [是] 進行清除。

### 檢視語音紀錄清單

您可用在待機模式中按 。檢視已錄製完成的語音訊息紀錄。

您可用進行播放或刪除語音紀錄。

## 啟動紅外線


功能表 3.7

如要啟用此功能，您可以使用紅外線進行PC同步處理。使紅外線方式如下：

- 安裝紅外線驅動程式與數據傳輸程式。
- 安裝網路撥號軟體。
- 設定您的上網組態並啟用您的PC上紅外線裝置通訊連接埠。
- 啟動手機上的紅外線裝置，您可以在手機上的屏幕上看到紅外線II的圖示。
- 進行網路撥號。

如果在30秒內手機的紅外線組件與PC的紅外線組件沒有連接成功，手機將會自動停止紅外線功能回應。

相關更多的訊息請聯絡您的網路系統商。

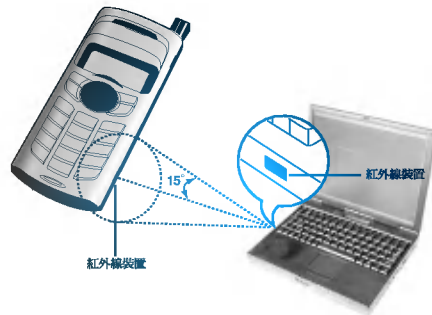

**注意** PC Sync 是一套程式，可透過數據傳輸線在PC和手機間交換資料。詳情請參考光碟內的PC Sync Help 檔案指引。

按下功能表鍵(☰)。並使用導覽鍵選擇日期區。

## 行程表

功能表 4.1

進入此功能表，行程表即顯示在螢幕最上方有日期區，另外，在螢幕底部，有圖示區(行程表、備忘錄)。每次觸碰日期時，行程表就會擦除此行程更新。若該特定日期會以框游標加以標示。如果在行程表上方指示列出該日期，則表示當日已有行程的備忘錄。此功能有助於提醒您行程或備忘錄。如您為該項設定此項功能，手機到時將會發出鬧鈴聲。

### • 檢視

顯示所選日期的行程。按下 [選項] 即可進行。

### • 修改

修改目前的行程。

### • 刪除

刪除目前的行程。

### • 新增

最多可以新增20則訊息，每則訊息最多可以編輯39個字元。(中文則為21個字元)

### • 行程提醒

回到提醒選項。

### • 行程鬧鐘

手機的鬧鈴將可以依您所需求提供鬧鈴提示。

### • 查看所有行程表

顯示您設定的所有行程。使用瀏覽行程清單。您可以使用上下導覽鍵來使用瀏覽相同的功能表。

### • 進入日期

您可以使用上下導覽鍵移動輸入日期並直接進入特定的日期。

• 刪除舊紀錄

您可刪除合適的行程紀錄。

• 全部刪除

您可刪除全部的行程紀錄，但在刪除前您需進行確認。

**備忘錄**

功能表 4.2

您可進行新增，修改，刪除存在備忘錄上的資料。

1. 使用上下導覽鍵將的螢幕上到備忘錄。
2. 按下左快捷鍵 [新增]。
3. 輸入備忘錄內容後並按下左快捷鍵 [選項]。

您可執行下列步驟如下。

- ▶ **儲存:** 您可儲存備忘錄。
- ▶ **T9 語言:** 選擇您在備忘錄中的輸入法。
- ▶ **退出編輯器:** 您可利用此功能退出回到備忘錄。

當您的手機已經有儲存的備忘錄資料時，

1. 選擇備忘錄。
2. 按下左快捷鍵 [選擇]。
3. 按下左快捷鍵 [選項]。

進入選項後您可選擇。

- ▶ **修改:** 您可進行備忘錄編輯。
- ▶ **刪除:** 您可刪除備忘錄。
- ▶ **新增:** 您可新增一至筆備忘錄。最多可新增20則訊息，每則訊息最多可編輯40個字元(中文則為21個字元)。
- ▶ **全部刪除:** 刪除所有備忘錄資料。您必須進行確認刪除資料。

**簡訊簿**

功能表 4.3

您可儲存聯絡人簡訊於SIM卡中，此外您一次同時可儲存255個號碼於手機記憶體中。

SIM卡與簡訊簿儲存方式類似相關操作如下：

- 在待機模式下，按下快捷鍵 [功能表] 開啟簡訊簿，並選擇 **繁體中文** → **簡訊簿**。
- 或者，在待機模式下，按下快捷鍵 [簡訊簿]。

**尋找**

(功能表 4.3.1)

1. 在待機模式下，按下快捷鍵 [簡訊簿]。按下左快捷鍵直接 [尋找]。此時您必須輸入要尋找的名稱。

2. 輸入您尋找的名稱的字前後，按下左快捷鍵 [尋找]。

**ⓘ 請注意** 您可利用透過將的螢幕的方式瀏覽簡訊簿資料。

3. 在您搜尋到您尋找的聯絡人資料後，您可直接按 [發送簡訊] 撥出簡訊。或按下左快捷鍵 [選項] 相關選項如下。

- **查看詳細:** 檢視聯絡人相關資料。
- **修改:** 修改聯絡人姓名，簡訊及群組。
- **刪除:** 刪除此筆資料。
- **寄一般簡訊:** 傳送簡訊。
- **寄多媒體簡訊:** 傳送多媒體簡訊。
- **複製:** 複製此筆聯絡人資料到手機記憶體或SIM卡。
- **發送語音:** 錄製發送撥號語音。

## 新增

(功能表 4.3.2)

您可以新增語簿資料。

手機記憶容量為255筆。SIM卡記憶容量會隨系統供應商而異。相關語簿記憶體設定請參考 [功能表 4.3.8.1]。您可以儲存聯絡人名稱將近20個字元 (儲存在手機記憶體(約10個中文字)，而SIM卡的部分則取決於SIM卡記憶體容量(一般約7個中文字)。

1. 在待機模式下按下快捷鍵[語簿]進入語簿功能。
2. 捲動螢幕選項至新增，並按下 [確認]。
3. 您可以選擇新增的資料將儲存於SIM卡或手機的記憶體。相關記憶體設定，請參考記憶體設定[功能表 4.3.8.1]。(參考 48頁說明。)

### • 新增至SIM卡

您可以輸入新增的聯絡人的姓名與語音並選擇群組至SIM卡記憶體。(依SIM卡而定)

### • 新增至手機

您可以輸入新增的聯絡人的姓名與語音，電子郵件號碼並選擇群組至手機記憶體。

## 快速撥號

(功能表 4.3.3)

您可以使用數字鍵2至9作為快速撥號鍵。

在您完成快速撥號鍵設定後您只需按住數字鍵約2~3秒後即可進行撥號。

1. 在待機模式下按下快捷鍵[語簿]進入語簿功能。
2. 捲動螢幕選項至快速撥號，並按下 [確認]。
3. 按下快捷鍵[+]新增一組快速撥號號碼。並透過翻轉的方式選擇您要設定的語音號碼。
4. 您可以使用快捷鍵選項進行更改，刪除，通話，簡訊，或媒體簡訊。

## 語音列表

(功能表 4.3.4)

查看所有包含聲控設定的語音號碼。您可以直接按下 [語音] 進行撥號。使用上/下導鍵選擇語音號碼並按快捷鍵[選項]後，您可以參考相關子目錄：

- **播放:** 播放附加在語音號碼上的聲控語音。
- **更改:** 變更聲控語音。
- **刪除:** 刪除聲控語音。
- **通話:** 選擇此功能表可撥出語音。
- **新增:** 新增一組語音撥號。
- **全部刪除:** 刪除所有語音撥號資料。

ⓘ **請注意** 您可以使用約10組的語音撥號號碼。

## 群組

(功能表 4.3.5)

每個群組可列出最多20個成員。共有7個群組清單可供設定。

1. 選擇群組清單清單即可將包含下列名稱: 家人, 私人, 朋友, 同事, 群組 1, 群組 2 及其他。
2. 使用快捷鍵的選項設定您群組的功能, 相關子功能表如下。
  - **成員列表:** 顯示選定的群組成員。
  - **本群組鈴聲:** 您可指定群組成員的本群鈴聲。
  - **群組顯示:** 您可針對群組選擇圖示。
  - **新增號碼:** 新增群組成員。每個群組成員不得超過20個。
  - **刪除號碼:** 從群組成員清單中移除成員。但是, 姓名與號碼仍將會保留在語簿中。
  - **重新命名:** 變更群組名稱。

## 全部複製

(功能表 4.3.6)

您可以用項目從SIM卡記憶體複製/移到手機記憶體，反之亦然。

- ▶ **SIM卡存至手機**: 將項目從SIM卡複製到手機記憶體。
- ▶ **手機存至SIM卡**: 將項目從手機記憶體複製到SIM卡。

您可以用查看下列功能表。

- **保留取號碼**: 複製時，保留取號碼。
- **刪除取號碼**: 複製時，清除取號碼。

## 全部刪除

(功能表 4.3.7)

刪除SIM卡、手機及聲控撥號的所有項目。除語音列表外，此功能需秘輸入安全密碼。

## 設定

(功能表 4.3.8)

### 記憶設定

您可以用設定SIM卡或手機的語音簿資料儲存的位置。如果您選的儲存方式為自選則每次您新增一新聯絡人資料時，手機將會詢問您一次您想新的存放位置。

### 撥打方式

您可以用設定姓名或號碼作為語音簿的撥打方式，但如果您所選擇的撥打方式為自選則每次您撥打聯絡人資料時手機將會詢問您一次您想新的撥打方式。

### 訊息提示

(功能表 4.3.9)

- ▶ **記憶體狀態**: 您可以用檢視目前手機與SIM卡的記憶容對。
- ▶ **本機號碼 (依SIM卡功能而定)**: 顯示您SIM卡的手機號碼。


按下列功能表(快捷鍵) (☰) 並用便用導覽鍵進行選擇訊息功能。

## 一般簡訊

(功能表 5.1)

此功能表包括一般簡訊 (簡訊服務)、語音訊息以及網路服務訊息之相關功能。語音信箱及簡訊功能屬於系統網路功能請與您的系統網路服務商確認是否提供此項功能。

 當此圖示出現時 ，代表您有新語音訊息。

當此圖示出現時 ，代表您收到新的簡訊。

如與手機顯示「記憶體已滿」，您和刪除在收信箱中的一些訊息或媒體及應用程式以釋放空間。

## 簡訊

(功能表 5.1.1)

您可以用編寫及修改文字訊息、查看訊息頁數約6頁(大約918字元)。

1. 輸入您的簡訊。相關簡訊輸入的訊息請參考24至26頁(輸入說明)。
2. 當您完成簡訊內容後，您和刪除在收信箱中的一些訊息或媒體及應用程式以釋放空間。請按下列快捷鍵[選項]您可以用選擇下列功能。

- ▶ **發送**: 輸入傳送號碼時從語音簿中選擇傳送號碼或者您可以用最近撥號清單中選擇號碼。您可以用將此簡訊同時傳送給5個人。請按下列快捷鍵[選項]。您可以用選擇下列功能。

- 1 發送(此選項必須在您輸入傳送號碼後才會出現)
- 2 最近撥號
- 3 翻抄

- ▶ **儲存到草稿**: 將訊息儲存到草稿您和隨時在進行傳送。

- ▶ **T9 語音**: 選擇T9 語音輸入方式，T9語音輸入提供您英文、簡體中文、繁體中文，您可以用傳到T9輸入法。更多便用說明請參考24至26頁的說明。

- ▶ **清除文字**: 清除所有輸入的文字。

- ▶ **退出**: 結束簡訊功能表。

3. 在您完成簡訊內容後，您可以用便用快捷鍵[附加]增加附件。

- ▶ **符號**: 您可以用加一些特殊的符號。


- ▶ **圖片:** 您可在選擇在訊息中附加(如始內建圖片)起從我的文件夾中選取可下載的圖片。
- ▶ **動畫:** 您可在如駱型簡訊中插入動畫(EMS)。您可在手機內建的15組動畫中選擇圖文作為傳送的內容。
- ▶ **聲音:** 您可在選擇喜好的聲音附加至訊息中。
- ▶ **簡訊短語:** 簡訊短語是預設的訊息，您可在列表中添加適合的簡訊短語。
- ▶ **電話號碼:** 您可在附加電話簿中的電話號碼。
- ▶ **名片:** 您可在將名片加入簡訊。

## 收信箱 (功能表 5.1.2)

在您收到訊息時會顯示訊息符號。

閱讀訊息請按功能表鍵並選擇 **訊息** → **一般簡訊** → **收信箱**。

或者，您也可在一般待機模式中按下列導覽鍵( )進入。

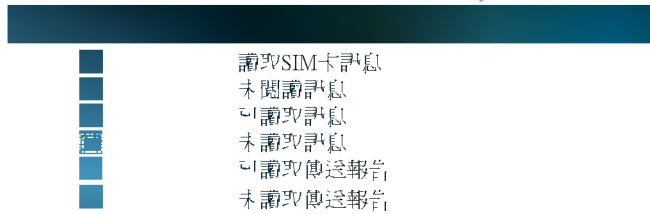

**! 請注意** SIM 訊息指動用儲存在SIM卡中的訊息。

閱讀簡訊後相關操作說明如下，請按下列快捷鍵[選項]。

- ▶ **回覆:** 回覆寄信者。
- ▶ **轉發:** 將選取的訊息轉寄給其他人。
- ▶ **覆音:** 撥打寄信者電話。
- ▶ **儲存訊息資料:** 取用相片、聲音與文字、它們將儲存在我的文件夾或電話簿中。
- ▶ **刪除:** 刪除目前訊息。

## 發信箱 (功能表 5.1.3)

您可在發信箱中查看已傳送與未傳送的訊息。對於已傳送的訊息，您可在查看傳送狀態。



您可在透過下列功能進行。

- ▶ **轉發:** 將目前訊息轉寄給其他人。
- ▶ **刪除:** 刪除目前訊息。

## 草稿 (功能表 5.1.4)

在此功能表中您可用鼠标上/下導覽鍵以捲動的方式檢視草稿清單中的所有文件，草稿清單內包含有：

- ▶ **發送:** 您可在將此訊息傳送給其他人。
- ▶ **刪除:** 刪除此訊息。

## 設定 (功能表 5.1.5)

您可在設定一般簡訊相關功能。

- ▶ **訊息類型:** 文字、語音、傳真、國內傳呼、X.400、電子郵件、ERMES 這些訊息的類型會設為文字。您可在將文字轉換為其他格式。有關能否使用此功能，請洽詢系統商。
- ▶ **訊息有效日期:** 此網路服務可讓您設定訊息由本機儲存文字訊息的期限，可選的週期共有1個小時，6個小時，1天，1週與最長限制。
- ▶ **簡訊首創:** 您可在內建3張信紙中任選一張作為簡訊首創。
- ▶ **狀態報告:** 如果設定為啟動，可在查看訊息是否傳送成功。
- ▶ **互相服務回覆:** 在傳送訊息時啟用此功能，寄信者或收件者給您回覆，而費用由您支付。

- ▶ **訊息中心號碼:** 如果您想傳送文字訊息，則可透過此功能表接收簡訊中心地址。
- ▶ **傳送方式設定:** 選擇GPRS或GSM，作為連接數據率要收報的依據，相關訊息請與您的網路系統商洽。

刪除 (功能表 5.1.6)

您可用刪除簡訊中心讀取全部訊息。

多媒體簡訊 (MMS) (功能表 5.2)

多媒體簡訊可包含一般文字、圖片與聲音。但您的網路服務業者必須提供此項服務方可使用。並且發送端或是接收方的手機必須有此項功能您才可接收與傳送多媒體簡訊或電子郵件。

簡多媒體簡訊 (功能表 5.2.1)

1. 使用方向快捷鍵輸入您的訊息文字。您可用閃爍輸入模式輸入符號，數字與表情符號。在您完成後按下快捷鍵[完成]。
2. 加入文字、圖片與聲音。您可用閃爍上/下導覽鍵進行選擇項目。
3. 您可用移動游標加入幻燈片選項加入幻燈片。按下OK鍵或方向快捷鍵[選擇]進行增加或您可用閃爍快捷鍵[功能表]增加幻燈片。
  - ❶ 注意：最多可用同時加入9張幻燈片。
4. 在多媒體簡訊編輯的狀態下按下快捷鍵[功能表]。相關選項如下：
  - **發送:** 可發送至多個號碼與電子郵件。
  - **預覽:** 可檢視您發送的多媒體內容。
  - **儲存:** 將此多媒體簡訊存至草稿匣。
  - **刪除:** 刪除此多媒體簡訊。
  - **設定:** 設定幻燈片播放時間或簡訊內容的顯示位置(前、後、上、下)。
  - **新增頁:** 在每幻燈片的前或後一張插入一張新的幻燈片。
  - **刪除頁:** 刪除選擇的幻燈片。

收信箱 (功能表 5.2.2)

在您收到簡訊提示時，您可用透過下列圖示辨別訊息狀態。

| 圖示 | 說明        |
|----|-----------|
|    | 已讀多媒體簡訊   |
|    | 未讀多媒體簡訊   |
|    | 已讀多媒體簡訊通報 |
|    | 未讀多媒體簡訊通報 |

如果您的手機顯示「緊急間接受新訊息」，您必須刪除某些儲存在手機中的簡訊，多媒體訊息將重選別程式。

- **計時停止:** 當您收到一封包含多張幻燈片多媒體簡訊時，您可用個別計時停止功能，因為一般情況下圖片將會自動播放，但如果您使用此項功能時，您則必須按下快捷鍵[下一張]後才可用看到下一張圖片。
- **前一頁:** 顯示前一張幻燈片。
- **直播:** 重新播放多媒體簡訊。
- **儲存訊息:** 儲存此訊息作為草稿或副本。
- **儲存項目:** 取得圖片、聲音與文字。將它們儲存在我的文件夾。
- **詳細資料:** 檢取接收訊息之相關資訊。
- **回覆:** 回覆給發信者。
- **全部回覆:** 回覆給所有的發信者。
- **刪除訊息:** 刪除目前的訊息。
- **轉寄:** 轉發此訊息給其他人。

### 發信箱

(功能表 5.2.3)

您可以在發信箱內查看已傳送與未傳送的訊息。對於已傳送的訊息，您可以在查看傳送狀態。

| 圖示  | 說明  |
|---|-----|
|  | 已傳送 |

- **計時停止**: 當您收到一封包含多張幻燈片多媒體簡訊時，您可以使用計時停止功能，因為一般情況下圖片將會自動播放，但如果您使用此項功能時，您則必須按下快捷鍵[下一張]後才可以看到下一張圖片。
- **前一頁**: 顯示前一張幻燈片。
- **重播**: 重新播放多媒體簡訊。
- **儲存訊息**: 儲存此訊息作為縮本。
- **儲存項目**: 取單相片、聲音與文字。將它們儲存在我的文件夾或音訊簿內。
- **詳細資料**: 查看接收的訊息之相關資訊：寄件者地址、主旨(僅限於多媒體訊息)、訊息日期與時間、類型與大小。
- **回覆**: 回覆給發信者。
- **全都回覆**: 回覆給所有的發信者。
- **刪除訊息**: 刪除目前的訊息。
- **轉寄**: 轉寄此訊息給其他人。

### 草稿

(功能表 5.2.4)

您可以使用此項功能，製作5組以上類別的多媒體草稿作為多媒體縮本。您可以在參考下列功能選項。

- **發送**: 可發送至多個號碼與電子郵件。
- **預覽**: 可檢視您的草稿內的多媒體內容。
- **儲存**: 將此多媒體簡訊存至草稿縮本內。

- **刪除**: 刪除此多媒體簡訊。
- **設定**: 設定幻燈片播放時間或簡訊內容的顯示位置(置前、置中、置後)。
- **增加幻燈片**: 在原有幻燈片的前後各一張插入一張新的幻燈片。
- **刪除幻燈片**: 刪除選擇的幻燈片。

### 設定

(功能表 5.2.5)

透過此項功能，您可以在更改多媒體訊息相關設定。

請參考下列選項。


- ▶ **訊息主題**: 輸入訊息主題。
- ▶ **幻燈片播放時間**: 設定每一張幻燈片播放時間。
- ▶ **內容編排**: 設定多媒體內容顯示的位置。
- ▶ **有效期**: 此網路服務可讓您設定訊息由中心可儲存文字訊息的期限。
- ▶ **自動下載**  
 開啟: 自動下載訊息。  
 確認: 您需進行確認才可下載訊息。  
 關閉: 延期下載訊息。
- ▶ **訊息中心網址**: 您需依照您所使用的行動電話系統輸入，相關參數如下。
- ▶ **網路設定**: 請參考67頁之說明。

各系統業者多媒體訊息網址如下：

- 請您於設定GPRS 與MMS 時依據您所使用的系統業者設定網路
- Chunghwa MMS (中華電信):http://mms.emome.net:8082
- FET MMS (遠傳電信):http://mms
- TWN GSM (台灣大哥大):http://mms
- Mobitai (訊信通訊):http://mms.mobeelife.net/mms/wapenc
- TransAsia (遠東電信):http://mms

## 語音信箱

功能表 5.3

此項功能提供您快速的進入您的語音信箱服務。如果您的網路系統商支援此功能，則您可以接收留言。當新的留言到達時，螢幕上會顯示  符號。請向您的網路系統商洽詢他們服務的詳細資料，並依照相關業者設定調整手機。

### 收藏語音信箱

功能表 5.3.1

如果您已經設定好語音信箱號碼，您可以按一下快捷鍵或[OK]鍵即可收藏語音留言。當然您也可以直接在待機模式中按住[1]鍵收藏留言。

### 語音信箱號碼

功能表 5.3.2

您可以輸入您的語音信箱中心號碼。

## 區域廣播

功能表 5.4

簡訊服務訊息是由網路傳送給GSM 手机的文字訊息。網路提供如天氣報導、交通新聞、稅務、醫療和股市行情等一般簡訊。每類簡訊均有代碼；因此，您可以輸入簡訊的特定代碼則可洽詢電信系統商。如果收到簡訊服務訊息，您可以在看到代表您收到訊息的快顯訊息，再查看直接顯示的簡訊服務訊息。

### 接收

功能表 5.4.1

此功能可以让您選擇是否接收區域廣播訊息。

### 收信箱

功能表 5.4.2

您可以在透過清單檢視區域廣播訊息的內省。

### 主題

(取決於網路和您所申請的服務)

功能表 5.4.3

您可以使用快捷鍵[選項]新增標題至手機圖徽，如與目前內省標題您也可以使用快捷鍵[選項]關閉，編輯或者刪除此標題。

### 簡訊提示

功能表 5.4.4

收到簡訊服務訊息代碼時，您的手機將會發出響聲。

### 自動顯示

功能表 5.4.5

自動顯示可接收訊息。

### 語言

(取決於網路和您所申請的服務)

功能表 5.4.6

您可以選擇所需的語言。然後簡訊服務訊息將會以您選取的語言顯示。

## 簡訊短語

功能表 5.5

您可以建立簡訊版本。您也可以將預先定義的版本變更為自訂的好內省。手機內建支援多媒體簡訊版本。您可以新增及修改其內省。

### 一般簡訊

功能表 5.5.1

- 請覆音！
- 對不起！我遲到了，我馬上到！
- 您現在在哪裡？
- 我在路上。
- 非常緊急。請速回撥！
- 我在您。

您可以使用下列選項。

- ▶ **修改:** 您可以使用此功能修改文字簡本。
- ▶ **刪除:** 刪除文字簡本內的簡本。
- ▶ **用一般簡訊發送:** 用一般簡訊發送此簡本。
- ▶ **用多媒體簡訊發送:** 用多媒體簡訊發送此簡本。
- ▶ **新增:** 新增一則文字簡本。

## 多媒體簡訊

功能表 5.5.2

- **發送**：用多媒體簡訊發送此副本，支援同時發送至多個號碼與電子郵件。
- **預覽**：可檢視您和草稿中的多媒體內容。
- **儲存**：將此多媒體簡訊存至草稿的副本中。
- **刪除**：刪除此多媒體簡訊。
- **設定**：設定幻燈片播放時間或簡訊內容的顯示位置（上方、側面、下方）。
- **新增頁**：在取幻燈片的前或後+ 張插+ 一張新的幻燈片。
- **刪除頁**：刪除選擇的幻燈片。
- **新增圖片**：在目前圖片的前或後+ 張插+ 一張新的圖片
- **新增聲音**：在目前聲音的前或後+ 段插+ 一段新的聲音

## 名片

功能表 5.6

製作本人名片。主和內容包括姓名，電話號碼，傳真號碼及電子郵件。

- ▶ **修改**：修改名片內容。
- ▶ **刪除**：刪除此名片。
- ▶ **用一般簡訊發送**：用一般簡訊發送名片。
- ▶ **用多媒體簡訊發送**：用多媒體簡訊發送名片。

## 記憶體狀態

功能表 5.7

檢視一般簡訊與多媒體簡訊目前的容對。

G7050手機本身內建有數位照相功能。它能提供您數位變焦，彩色的外階設定，以及連續拍攝的照相功能。

## 照相

功能表 6.1

在待機模式下按下快捷鍵[功能表]鍵選擇照相機 → 照相，或者直接按下相機快捷鍵(圖)進入照相模式。

1. 將鏡頭對準拍攝物後，按下[OK]鍵或按下側鍵即可照相。

❗ **注意** 在照相的模式中，您可用按下快捷鍵即可進入[彩的相階]中。

2. "儲存" 如下圖所示。所拍攝的照片將會自動儲存。

❗ **注意** 您可用在螢幕上方看到記憶體容對。

3. 否則您和儲存拍攝的照片請按[OK]鍵或快捷鍵[確認]。或者用快捷鍵[刪除]刪除照片。

<在您拍照前的選項如下>

您可用使用拍照預覽畫面時感下的功能選項。



1. **數位變焦**：您可用使用上下導覽鍵接近或遠拍攝物。

2. **彩的/外階設定**：您可用使用左右導覽鍵選擇照片值別彩的或外階拍攝。

3. **OK**：按下 [OK]鍵進行拍照。

4. **記憶體容對指示**：顯示您目前的可用的記憶容對。如果記憶容對不足，照片的格式將會自動縮減。

❗ **注意** 記憶容對已滿將會顯示"記憶體已滿"，此時您將不能再進行拍照。請必須刪除一些舊照片後才可再拍照。

5. **OSD (在螢幕顯示)**：請於照相模式下按下側鍵螢幕上將會顯示相片格式與照相狀態(單張或連續拍攝)。

## 連續拍攝

功能表 6.2

按下功能表  鍵並選擇照相機 → 連續拍攝。

此功能提供您可以連續拍攝照片，但連續拍攝的張數將依您所選擇的照片格式而定，照片的格式可於設定功能表中設定。

### <連續拍攝前功能表選單>


您可以參考下列圖示操作。



1. **數位變焦**: 使用上/下導覽鍵進行變焦。
2. **彩色外階設定**: 使用左/右導覽鍵進行外階設定。
3. **OK**: 按下 [OK] 鍵進入連續拍攝。
4. **記憶體狀態指示**: 您可以透過指示了解記憶體容量。  
**!** **注意** 如果記憶體已滿，螢幕上將會顯示“記憶體已滿”此時您必須刪除一些舊照片後才可以再進行照相。


## 我的相簿

功能表 6.3

按下功能表  鍵並選擇照相機 → 我的相簿


您可以檢視已拍的照片外您還可以:

 1. 使用導覽鍵進行選擇您可以至螢幕檢視的照片。
2. 按下 [OK] 鍵。
3. 按下全功能鍵[選單]後,您將可以使用下列功能。
  1. **重新檢視**: 您可以檢視照片。
  2. **刪除**: 您可以刪除照片。
  3. **傳送多媒體簡訊**: 您可以直接以多媒體傳送此照片, 多媒體操作請參考52頁。
  4. **設為待機圖片**: 將此照片設為待機圖片。

5. **幻燈片播放**: 此功能將會自動播放所有存在我的相簿中的所有照片, 要停止播放請按  鍵。
  6. **重新命名**: 您可以更改照片名稱。
  7. **全部刪除**: 刪除相簿中的所有照片。
  8. **相片資訊**: 您可以檢視照片的名稱, 日期及拍攝日期。
4. 回到照相模式請按右快捷鍵 [返回]。

## 設定

功能表 6.4

按下功能表  鍵並選擇照相機 → 設定。

您可以設定下列功能。

- ▶ **照片格式**: 您可以選擇您的照相的照片格式。
- !** **注意** 照片格式越大所拍攝的照片品質較佳但相對的會使用較多的記憶空間。
- ▶ **連續拍攝**: 選擇連續拍攝的張數。
- !** **注意** 連續拍攝的張數多數是依照片格式大小而定。
- ▶ **快門聲音**: 您可以選擇是否使用快門聲音。

Java 程式道別是由 Sun 公司研發。它是一種全球道別的應用程式，手機可透過行動網下載 Java 應用程式。

## 應用程式

功能表 7.1

應用程式功能表目前將會顯示目前您已經下載 Java 程式，當然您也可以用執行或刪除以及檢視 Java 程式的相關資訊。

您可以用參考下列功能：

- ▶ **開啟**: 執行此 Java 應用程式。
- ▶ **刪除**: 刪除此 Java 應用程式。
- ▶ **詳細資料**: 顯示此 Java 程式的相關資料，包括程式名稱，程式大小，程式版本，供應商名稱...等資訊。

## 下載

功能表 7.2

您可以用透過行動網進行 Java 下載程式，下載程式時您必須有相關下載書籤地址資料，您除可以用新增下載書籤外您均檢視或修改目前書籤的相關資料。

- ▶ **連接**: 透過行動網將路徑直接連接到此書籤,您即可進行 Java 程式下載。
- ▶ **檢視**: 檢視書籤的相關上網設定。
- ▶ **修改**: 您可以用對此書籤進行內容修改。
- ▶ **刪除**: 您可以用刪除此書籤。
- ▶ **新增**: 您可以用新增 Java 下載的書籤。

**注意** 在您選擇連接 Java 提供廠商的網站後，您可以在 Java 提供廠商所提供的程式中選擇您想下載的程式,並且將此 Java 程式安裝至您的手機，手機在安裝程式後將會自動執行程式並且會與行動網網路連接，所以如與您選擇下載 Java 程式您必須與連接行動網。

## 查看資訊

功能表 7.3

使用行動網下載的程式將會被儲存於手機的記憶體中，如果您的手機有記憶體空間不足限制，您將不能向下載任何 Java 程式。您可以用透過此功能檢視手機記憶體空間。

## 記憶體狀態

(功能表 7.3.1)

檢視目前手機的記憶體狀態。

## Java 版本

(功能表 7.3.2)


檢視目前手機 Java 版本。

按下功能表(☰)並使用導覽鍵選擇行動網。

本手機可支援以無線廣域網(WAP)為基礎的服務。您可存取您的開戶網路支援的服務。服務功能表可讓您獲取各種資訊，例如新聞、天氣預報及航班時間表等。

使用此項功能您必須申請行動網服務，相關申請作業請您與您的網路系統業者查詢相關服務內容。

當手機與行動網連接時首頁將會出現於螢幕上，但相關顯示內容則依照服務提供商的設定。

在您使用行動網時若您想結束瀏覽，您可以按下  鍵，返回一般待機模式。

### 行動網瀏覽

您可以使用手機按鍵功能瀏覽行動網。

### 使用手機按鍵

當手機瀏覽行動網網頁時，按鍵功能將有所不同。

|       |            |
|-------|------------|
| 上下導覽鍵 | 可捲動每一頁網頁內容 |
| C 鍵   | 返回上一頁      |
| OK 鍵  | 確認         |

### 使用WAP瀏覽器功能

您可以透過WAP瀏覽器任意的瀏覽網頁。

**注意** WAP瀏覽器可能會因為您的瀏覽器版本不同而功能不同。

### 首頁

功能表 8.1

連線到首頁。首頁是目前啟用之上網設定中定義的網站。若啟用的上網設定中未定義首頁，通訊系統商將為您定義一個首頁。

### 書籤

功能表 8.2

您可以設定目前瀏覽的網頁作為書籤或建立一個書籤。

您的手機中預先預設一些書籤，在您設定書籤時您同時也該留意網頁安全限制的問題。

### 電子郵件伺服器

- **連接**：連接到您預設的電子郵件伺服器。
- **編輯電子郵件地址**：您可以編輯電子郵件地址。

### Push 訊息

功能表 8.3

Push 訊息的資訊包含：訊息標題、文字說明或存取下載服務的網址。您可以透過相關資訊連線到特定網站或透過行動網下載服務。使用此項功能您必須申請行動網服務，相關申請作業請您與您的網路系統業者查詢相關服務內容。

- **資訊**：顯示接收到Push訊息的資訊。
- **下載**：您可以讀取或刪除Push訊息。
- **刪除**：您可以刪除選定的Push訊息。

### 接收

(功能表 8.3.1)

您可以利用這個選項設定是否接收訊息。

## 網路設定

功能表 8.4

在大多上網前請您洽詢網路系統服務商。上網設定的內容如下。

- ▶ **啟動:** 啟動所選擇的上網模式設定。
- ▶ **設定:** 修改及變更所選擇的上網設定的WAP設定。
- ▶ **重新命名:** 您可用變更上網設定名稱。
- ▶ **刪除:** 您可用刪除上網設定。
- ▶ **新增:** 您可用增加上網設定。

**注意** 更改上網設定內容可能會影響多媒體功能。

## 轉到URL

功能表 8.5

直接連接至想瀏覽的網站。您需輸入特定的URL

## 暫存設定

功能表 8.6

移除快速瀏覽儲存頁面的內容或變更快速存取模式。

### 清除暫存

(功能表 8.6.1)

移除快速瀏覽儲存頁面的內容。

### 查詢暫存

(功能表 8.6.2)

設定是否檢查快速瀏覽。

**注意** 快速瀏覽資料僅是暫存於記憶體中。

**請注意**

相關台灣GPRS 設定資料可在資料夾內，您只需依您所使用的SIM 卡選擇您的系統服務商即可！

Chunghwa GPRS (中華電信)

FET GPRS (遠傳電信)

TWN GSM GPRS (台灣大哥大)

Mobitai GPRS (東信電信)

TransAsia GPRS (遠東電信)

## 安全認證

功能表 8.7

顯示可用認證清單。

## 重設網路設定

功能表 8.8

重設操作模式以恢復原始設定。

## 瀏覽器版本

功能表 8.9

顯示 WAP 瀏覽器版本。

在待機模式下按快捷鍵[功能表]，並用導引導覽鍵選擇鬧鐘設定。

### 鬧鐘 功能表 9.1

此功能提供您可在特定的時間提供您鬧鐘提示，相關操作如下所示。

**開啟:** 開啟鬧鐘功能。

1. 進入鬧鐘功能表。
2. 使用左/右導覽鍵將選項改為[開啟]。
3. 然後輸入設定的鬧鐘時間。
4. 使用左/右導覽鍵選擇鬧鐘週期：一次，每日，每週，每月。
5. 選擇設定的鬧鐘鈴聲：使用左/右導覽鍵選擇設定的鬧鐘鈴聲。

**關閉:** 關閉鬧鐘功能。

### 日期和時間 功能表 9.2

此功能可讓您調整手機的日期與時間。

及設定與日期時間有關的功能。

#### 日期設定 (功能表 9.2.1)

此功能可讓您調整手機的日期，如月與年。您亦可透過日期格式進行調整顯示格式。

#### 日期格式 (功能表 9.2.2)

年/月/日

日/月/年

日/日/年

#### 設定時間 (功能表 9.2.3)

此功能可讓您調整時間選項。並可讓您選擇時間顯示格式輸入目前的时间。

### 時間格式 (功能表 9.2.4)

24 小時

12 小時

### 手機設定 功能表 9.3

設定手機的相關功能。

#### 顯示設定 (功能表 9.3.1)

- ▶ **待機圖片:** 選擇在待機模式下的待機圖片。
- ▶ **功能表顯示:** 手機提供您6種不同的功能表顯示供您選擇。
- ▶ **背光燈:** 設定內部螢幕的背光顯示時間若使用關閉此項功能將可稍微的增加待機/通話時間。
- ▶ **螢幕對比度:** 使用左/右導覽鍵可調整LCD螢幕的對比度。
- ▶ **網路名稱:** 此功能可提供您是否對於待機時顯示系統網路名稱。

#### 語言 (功能表 9.3.2)

變更手機顯示文字的語言。此操作亦會影響語言輸入模式。

### 通話設定 功能表 9.4

此項功能提供您更改手機的轉接設定。

#### 來電轉接 (功能表 9.4.1)

來電轉接服務可讓您將撥入的語音信箱，傳真語音和數據語音轉接到另一個號碼。詳細資訊請洽詢系統供應商。

來電轉接功能表內含下列功能表。

**所有語音通話:** 無條件轉接語音語音。

**忙線時:** 線路繁忙時轉接語音語音。

**無回應時:** 無人接聽時轉接語音語音。

**無網路或關機時:** 關機或不在服務區域內時轉接語音語音。

**轉接所有數據來電：**無條件轉接至連接一個含齊撥通線的號碼。

**轉接所有傳真來電：**無條件轉接至連接一個傳真的號碼。



來電轉接功能表內含下列功能表：

- ▶ **啓動：**啓用相關服務。
  - **語音信箱：**轉接至語音信箱。此功能未在轉接所有數據通話和轉接所有傳真通話功能表中顯示。
  - **其他號碼：**輸入欲轉接號碼。
  - **呼叫號碼：**您可用設定5個近期呼叫的號碼。
- ▶ **取消：**傳回相關服務。
- ▶ **查詢狀態：**查看相關服務狀態。

**取消全部轉接：**取消所有轉接設定。

## 接聽模式 (功能表 9.4.2)

選擇您想使用的接聽模式。

- ▶ **打開滑蓋：**如選取此功能表，則只能使用打開滑蓋方式接聽來電。
- ▶ **按任何鍵：**如選取此功能表，則除可[結束/取消]  聲音快捷鍵以外的按鍵  接聽來電。
- ▶ **僅聽話鍵：**如選取此功能表，則只能利用按聽話鍵的方式接聽來電。

## 發送本機號碼 (功能表 9.4.3)

此項服務取決於網路和您所訂的務，若您的系統服務商支援此服務您將可用選擇在您撥出電話的同時是否送出您個人的電話號碼。

## 來電等候 (取決於網路) (功能表 9.4.4)

當您正在通話中若有插換電話，網路系統將會提示您即將休您的設定如選取啓動，可用接聽待接來電，如選取關閉，則無法識別待接來電，若想了解來電等待的狀態您可查詢狀態則可顯示來電等候的狀態。


## 每分鐘提示 (功能表 9.4.5)

如選取開關，通話時，手機將在每分鐘發出響聲，則可提示您通話時間。

## 語音撥號 (功能表 9.4.6)

您可用藉由聲控的方式撥出電話但您必須事先錄製好聯絡人的語音標簿。

在您使用語音撥號前，您必須注意：

- 語音標簿並非由語言而成，而是由您的聲頻作為識別。
- 請於安靜的環境中錄製語音標簿，避免可能的聲音干擾。
- 當您使用或錄製語音標簿時請勿能讓手機靠近臉頰。
- 過短及類似的語音標簿可能造成識別上的困擾。所以儘可能避免使用。
- ▶ **自動：**任何時候，您只須打開滑折蓋，即可進入語音撥號。
- ▶ **手動：**按  住向下鍵則進入語音撥號模式。

**注意** 語音撥號時您必須說出與您所錄製的語音標簿相同的語音，當您在吵雜環境中可能會造成使用上的困擾，所以您可能會因各種語音撥號作為識別撥號。

## 自動重撥 (功能表 9.4.7)

開啓，啓用此功能時，手機會在撥號失敗後自動重撥5次。

## 選擇網路 (功能表 9.4.8)

使用此功能必須在您的系統服務業者能提供雙線服務的前提下，您才可用使用此項服務。

- ▶ **線路 1：**選擇線路 1 作為目前使用線路。
- ▶ **線路 2：**選擇線路 2 作為目前使用線路。

**注意** 如選取選擇線路 2 作為目前使用的線路，而您的系統商並不提供此項服務時，則您將無法撥出電話。

## 關閉群組

(功能表 9.4.8)

值別此功能可用限制手機撥出屬於某個群組的號碼。當值別此功能時，每個撥出的電話會連接一個群組目錄，如未指定任何群組目錄，則將適用於所有撥出電話。如未指定群組目錄，網路會值別優先目錄（一個儲存在網路中的特定目錄）。

- ▶ **預設:** 設定中選擇的群組指引。
- ▶ **開啟:** 您可用編碼群組指引並開啟群組功能。
- ▶ **關閉:** 刪除預設群組。

## 保密設定

(功能表 9.5)

不同的密碼是為可保護您的手機避防他人攔阻。更多密碼值別上功能請參考20頁之說明。

### 需PIN碼

(功能表 9.5.1)

在此功能表中，您可用設定手機在電源開時需輸入SIM卡的PIN碼。如未開啟此功能，您將需輸入PIN碼。

**注意** 在您取消需PIN碼功能前您必須先輸入正確的PIN碼。

您將可用以下選項：

- **開啟:** 您必須於每次開機時輸入PIN碼。
- **關閉:** 每次開機時可直接連接網路。

### 手機鎖

(功能表 9.5.2)

值別手機鎖可避防他人攔阻您的手機。如將手機鎖設為開，每次開機時手機均會要求輸入安全密碼。如將手機鎖設為「自動」，手機只會在您更換SIM卡時才要求輸入安全密碼。安全密碼預設值為0000。如若您更改手機密碼，[功能表 9.5.6.1]。當您的目前密碼可輸入，您則可用手機直到關機為止。

手機鎖相關功能如下：

#### 1 開機時

- ▶ **開啟:** 手機將於每次開機時要求輸入密碼。
- ▶ **關閉:** 關閉手機鎖功能。
- ▶ **SIM卡更換時:** 只有值別不同的SIM卡時才要求輸入密碼。

#### 2 上鎖

- ▶ 當值此項功能時會要求輸入密碼，並於正確密碼輸入完成後立即上鎖狀態。此時如與您取消手機上鎖狀態，您必須按下快捷鍵(解鎖)並輸入正確的密碼上鎖的狀態才可解除。如果您的手機在上鎖的狀態下關機則開機時上鎖的狀態仍會維持。

### 按鍵鎖

(功能表 9.5.3)

此功能僅能在滑蓋蓋起來時才能使用。

#### 1 自動

- ▶ 在您選擇按鍵自動上鎖模式時，手機將於滑蓋蓋起來後25秒上鎖。
- ▶ 解除按鍵鎖，您需按快捷鍵(解鎖)後並按下米字鍵(\*)或者您也可直接打開滑蓋即可解除按鍵鎖。

#### 2 立即

- ▶ 在您選擇按鍵立即上鎖模式時，手機將於滑蓋蓋起來後立即上鎖。
- ▶ 解除按鍵鎖，您需按快捷鍵(解鎖)後並按下米字鍵(\*)或者您也可直接打開滑蓋即可解除按鍵鎖。

### 通話限制服務 (依網路服務設定)

(功能表 9.5.4)

通話限制服務能防止手機撥出或接收特定類型的電話。此功能需限制通話密碼。

可用查看以下功能表：

- ▶ **所有撥出電話:** 限制撥出任何電話。
- ▶ **撥出國際電話:** 限制撥出任何國際電話。
- ▶ **國際漫遊時撥打電話:** 除取回網路外，限制撥出任何國際電話。

- ▶ **所有來電**: 限制任何來電。
- ▶ **國際漫遊時來電**: 漫遊時限制任何來電。
- ▶ **全部取消**: 取消所有通話限制。
- ▶ **更改密碼**: 變更通話限制密碼。

**注意** 通話限制功能不能諮詢額外向您的網路服務業者提出申請。

### 固定撥號(FDN) (非SIM卡是否提供此項功能) (功能表 9.5.5)

限制手機只能撥打特定的電話號碼。這些號碼受PIN2 密碼保護。請依下列選項選擇:

- ▶ **啓動**: 限制手機只能撥打儲存在電話簿中的電話號碼。您必須輸入PIN2碼才能啓動。
- ▶ **關閉**: 您只能撥打任何號碼。
- ▶ **呼叫列表**: 查看設定為固定撥號的號碼清單。

**請注意** 並不是所有的SIM卡都有PIN2碼的功能。如果您的SIM沒有此功能，此項功能表將不會顯示。

### 更改密碼 (功能表 9.5.6)

更改密碼功能可讓您變更目前所設定的密碼。在您變更密碼時您必須先輸入一次目前所使用的密碼後，才能在輸入新的密碼。但您必須到一次輸入新的密碼進行確認後才完成變更程序。

此項功能可適用於：**安全密碼**，**PIN1碼**，**PIN2碼**

**注意** PIN 碼: 身份識別號碼

## 網路設定

功能表 9.6

網路設定功能將能提供您網路狀態，您可選取自動或手動的方式登入的網路。

**注意** 如果網路不支援漫遊功能，您將只能使用漫遊服務。

### 自動 (功能表 9.6.1)

如果選擇自動模式，手機會自動搜尋並選擇網路。選擇自動後，則使電源關閉後重新啓動，手機也會設定為自動。

### 手動 (功能表 9.6.2)

機將尋找可用的網路清單，然後顯示在螢幕上。您只能選取所偵測到的網路，但這個網路必須與您的主網路商之間有漫遊協定。如果機無法存取該選取的網路，您只能選擇其他網路。如果關機，手機會重新設定為自動。

### 優先網路 (功能表 9.6.3)

您只能設定優先登入的網路清單，手機會先嘗試登入該網路，然後到嘗試登錄到其他網路。此清單是透過手機的已知網路預先清單而建立的。

### GPRS 設定

功能表 9.7

GPRS(General Packet Radio Service)技術將能提供您的手機透過行動電話網路傳送或接收數據資料。GPRS網路傳輸資料的方式與一般實際網路方式一樣。

在您使用GPRS服務前您必須準備。

- 您需要向申請GPRS服務。相關GPRS申請及使用方式請洽詢您的網路系統服務商。
- 您必須設定GPRS相關上網參數。

### GPRS 連接

(功能表 9.7.1)

如果在選項中您所選擇的為開機則當您進入支援GPRS網路服務時GPRS將會被啟動，此時如論您是傳送接收電子郵件或多媒體簡訊都將透過GPRS傳送。如過您選擇是 前開機時，此時手機只有在應用程式開始時才會啟動GPRS網路服務，並且在您結束應用程式後GPRS會自動關閉。

**注意** 如與手機並不是在GPRS的服務區域內而您已經選擇自動連接此時手機將會定期地進行連結。

### 外部裝置

(功能表 9.7.2)

當您透過GPRS網路使用外部裝置時，您必須設定下列6個參數設定：重新命名，APN，P地址，DNS，使用者名稱，密碼。

### 恢復原廠設定

功能表 9.8

啓用所有原廠預設值。

您必須執行下列步驟才能啓用此功能。

1. 選擇恢復原廠設定功能選項。
2. 輸入4位數的安全密碼

**注意** 預設為 0000。與密碼功能請參考 74頁。




# 行動增值服務


功能表 10

此功能表將顯示您的SIM卡功能是否支援，並可提供您 銀行轉帳，股票資訊...等增值服務。相關訊息請洽詢您所使用的網路服務商。

下列開答將能協助您在使用手機上的操作問題。

**問題** 我該如何檢查叫撥電話，未接電話或叫接電話。  
**解答** 請於待機中按下發送鍵

**問題** 我該如何清除通話紀錄。  
**解答** 按下左功能鍵後按   。

**問題** 我該如何查詢存在記憶體中的號碼。  
**解答** 按下左功能鍵後按 。

**問題** 當此顯示一直存在手機的螢幕上消失該怎麼辦。  
**解答** 請先檢查您手機目前的位置是否已超出行動電話網路服務範圍，如果此顯示持續出現您可能已关机，並且於2分鐘後再開機，如過狀態並未能改善請於別的區域再行測試。

**問題** 在特定的區域時通話狀態不佳或通話斷斷續續。  
**解答** 在手機的訊號強度指示顯示較弱的區域中，收訊狀況將可能受到影響，此時建議您最好能移動到訊號較佳的區域使用手機避開通話受到影響。

**問題** 當通話狀態不佳或通話斷斷續續時。  
**解答** 在手機的訊號強度指示顯示較弱的區域中，收訊狀況將可能受到影響，此時建議您最好能移動到訊號較佳的區域使用手機避開通話受到影響。

**問題** 手機螢幕無顯示。  
**解答** 請更換電池再開機測試，如更換電池後手機仍無反應請再將電池拆開後再試觀看。

**問題** 在某些特定的區域中通話有回音。  
**解答** 此種狀況被稱為回音現象，也發生於音量大高或者是因為手機太接近其他的通話設備。

**問題** 手機發燙。  
**解答** 在長期間的通話或使用行動網/遊戲等，可能會導致手機發燙...此為正常現象請放心使用。

**問題** 手機未響鈴聲置有螢幕開動。  
**解答** 請檢查您目前的情報模式設定是否為震動或靜音，若是請將此設為一般的大聲。

### 問題 解答

電池的待機時間越來越短。

電池屬於消耗性商品，他本身亦有使用期限限制，舊電池的效能只有原來的一半時，建議您最進行更換。

### 問題 解答

電池的使用時間越來越短。

如果電池的使用時間變短，可能是因為使用者使用方式不同而有所變化，如較大的通話量或長期於弱訊區使用電話。

### 問題 解答

來電號碼無顯示。

請確認來電號碼是否已事先存於電話簿中，若無您則將其儲存。

### 問題 解答

手機不能使用。

請確認手機是否開機(按3秒)?您目前是否處於正確的網絡中?您是否已設定轉接功能。

### 問題 解答

手機鎖, PIN碼或 PUK碼, 密碼密碼遺失怎麼辦?

預設的手機鎖密碼為 "0000", 如果您忘記或遺失密碼請至 LG 授權的維修中心聯絡, 如與您忘記或遺失 PIN 或 puk 密碼請至您的系統服務商客服中心聯絡。

手機配件有多種配件。您可以依據個人需求選擇所需配件，以下配件可能因為區域不同而有所差異，詳情請諮詢我們區域服務或代理商。

#### 旅行充電器

您可以在辦公室或旅行時使用旅行充電器充電。



#### 電池

標準電池。



 
#### 車上斷電器充電器

您可以在車上為手機充電。




#### 磁碟充電

連接手機後可充電。操作



#### 數據傳輸配件/光碟

 您可以使用數據傳輸配件連接 PC 進行通訊。



## 配件

- ❗ 注意
- ・請務必使用原廠LG配件。
- ・不使用原廠配件可能會導致保固失效。

## 技術資料

### 一般資料

---

產品名稱 : G7050  
系統 : GSM900 / DCS1800

### 環境溫度

---

最高 : +55  
最低 : -10



# G7050

User Guide

ENGLISH

# Table of contents

|   |    |   |    |
|---|----|---|----|
| <b>Introduction</b> □□□□□□□□                        | 8  | <b>General functions</b> □□□□                     | 24 |
| <b>Guidelines for safe and efficient use</b> □□□□□□ | 9  | <b>Making and answering calls</b> □               | 24 |
| <b>Your phone</b> □□□□□□□□                          | 14 | Making a call □□□□□□□□                            | 24 |
| <b>Phone components</b> □□□□                        | 14 | Making a call using the send key □□□□□□□□□□       | 24 |
| <b>Your phone's features</b> □□□□                   | 15 | Making an international call □                    | 24 |
| <b>Display information</b> □□□□                     | 16 | Ending a call □□□□□□□□                            | 24 |
| <b>Getting started</b> □□□□□□                       | 18 | Making a call from the Phonebook □□□□□□□□         | 25 |
| Installing the SIM card and the handset battery □□  | 18 | Adjusting the volume □□□□                         | 25 |
| Charging the battery □□□□                           | 19 | Answering a call □□□□□□                           | 25 |
| Disconnecting the adapter □                         | 20 | Manner mode (Quick) □□□                           | 26 |
| <b>Turning your phone on and off</b> □□□□□□□□□□     | 21 | Signal strength □□□□□□                            | 26 |
| Turning your phone ON □□□□                          | 21 | Entering text □□□□□□□□                            | 26 |
| Turning your phone OFF □□                           | 21 | <b>Phonebook</b> □□□□□□□□                         | 30 |
| <b>Access codes</b> □□□□□□□□                        | 21 | <b>In-call menu</b> □□□□□□□□                      | 30 |
| PIN code □□□□□□□□□□                                 | 21 | During a call □□□□□□□□                            | 30 |
| PIN2 code □□□□□□□□□□                                | 22 | <b>Multiparty or conference calls</b> □□□□□□□□    | 32 |
| PUK code □□□□□□□□□□                                 | 22 | <b>Menu tree</b> □□□□□□□□□□                       | 34 |
| PUK2 code □□□□□□□□□□                                | 22 | <b>Selecting functions and options</b> □□□□□□□□□□ | 37 |
| Security code □□□□□□□□                              | 22 | <b>Profiles</b> □□□□□□□□□□                        | 38 |
| <b>Barring password</b> □□□□□□                      | 22 | Changing the profile □□□□                         | 38 |

|   |    |                                       |    |
|---|----|---------------------------------------|----|
| Customising profiles - Personalise □□□□□□□□ | 38 | <b>Organizer</b> □□□□□□□□□□           | 48 |
| Customising profiles - Rename □□□□□□□□□□    | 39 | <b>Schedule</b> □□□□□□□□□□            | 48 |
| <b>Call register</b> □□□□□□□□               | 40 | <b>Memo</b> □□□□□□□□□□□□              | 49 |
| <b>Missed calls</b> □□□□□□□□□□              | 40 | <b>Phonebook</b> □□□□□□□□□□           | 50 |
| <b>Received calls</b> □□□□□□□□□□            | 40 | Search □□□□□□□□□□□□                   | 50 |
| <b>Dialled calls</b> □□□□□□□□□□             | 41 | Add new □□□□□□□□□□□□                  | 51 |
| <b>Delete recent calls</b> □□□□□□□□         | 41 | Speed dials □□□□□□□□□□                | 51 |
| <b>Call durations</b> □□□□□□□□□□            | 41 | Voice list □□□□□□□□□□□□               | 52 |
| <b>Call costs</b> □□□□□□□□□□□□              | 42 | Caller groups □□□□□□□□□□              | 52 |
| <b>Cost settings</b> □□□□□□□□□□             | 42 | Copy all □□□□□□□□□□□□                 | 53 |
| <b>GPRS information</b> □□□□□□□□            | 43 | Delete all □□□□□□□□□□□□               | 53 |
| <b>Fun &amp; Tools</b> □□□□□□□□□□           | 44 | Settings □□□□□□□□□□□□                 | 54 |
| <b>Game</b> □□□□□□□□□□□□□□                  | 44 | Information □□□□□□□□□□                | 54 |
| <b>My folder</b> □□□□□□□□□□□□               | 44 | <b>Messages</b> □□□□□□□□□□□□          | 55 |
| <b>Unit converter</b> □□□□□□□□□□            | 44 | <b>Text messages</b> □□□□□□□□         | 55 |
| <b>Calculator</b> □□□□□□□□□□□□              | 45 | Write message □□□□□□□□                | 55 |
| <b>World time</b> □□□□□□□□□□□□              | 45 | Inbox □□□□□□□□□□□□□□                  | 57 |
| <b>Voice recorder</b> □□□□□□□□□□            | 46 | Outbox □□□□□□□□□□□□□□                 | 58 |
| Record □□□□□□□□□□□□□□                       | 46 | Draft □□□□□□□□□□□□□□                  | 58 |
| View list □□□□□□□□□□□□                      | 46 | Settings □□□□□□□□□□□□                 | 58 |
| <b>Infrared</b> □□□□□□□□□□□□                | 47 | Delete □□□□□□□□□□□□□□                 | 59 |
|   |    | <b>Multimedia messages (MMS)</b> □□□□ | 60 |
|   |    | Write □□□□□□□□□□□□□□                  | 60 |
|   |    | Inbox □□□□□□□□□□□□□□                  | 61 |

|  |                                       |                                       |                                      |                                   |
|--|---------------------------------------|---------------------------------------|--------------------------------------|-----------------------------------|
| Outbox □□□□□□□□□□ 62                   | <b>My photos</b> □□□□□□□□□□ 69        | <b>Settings</b> □□□□□□□□□□ 70         | <b>Settings</b> □□□□□□□□□□ 78        | Call barring service □□□□ 85      |
| Draft □□□□□□□□□□ 62                    | <b>Settings</b> □□□□□□□□□□ 70         | <b>Java™</b> □□□□□□□□□□ 71            | <b>Alarm clock</b> □□□□□□□□ 78       | Fixed dial number (FDN) □□ 86     |
| Settings □□□□□□□□□□ 63                 | <b>Applications</b> □□□□□□□□□□ 71     | <b>Download</b> □□□□□□□□□□ 72         | <b>Date &amp; Time</b> □□□□□□□□ 78   | Change codes □□□□□□ 86            |
| <b>Voice messages</b> □□□□□□ 64        | <b>View Information</b> □□□□□□ 73     | Memory Status □□□□□□ 73               | Set date □□□□□□□□□□ 78               | <b>Network settings</b> □□□□□□ 87 |
| Listen to voice messages □□ 64         | Java Version □□□□□□□□ 73              | <b>Internet</b> □□□□□□□□□□ 74         | Date format □□□□□□□□□□ 78            | Automatic □□□□□□□□□□ 87           |
| Voice mailbox number □□□ 64            | <b>Home</b> □□□□□□□□□□□□ 75           | <b>Bookmarks</b> □□□□□□□□□□ 75        | Set time □□□□□□□□□□ 79               | Manual □□□□□□□□□□□□ 87            |
| <b>Info service</b> □□□□□□□□□□ 64      | <b>Profiles</b> □□□□□□□□□□□□ 76       | <b>Go to URL</b> □□□□□□□□□□□□ 77      | Time format □□□□□□□□□□ 79            | Preferred □□□□□□□□□□□□ 87         |
| Receive □□□□□□□□□□ 64                  | <b>Cache settings</b> □□□□□□□□ 77     | Clear cache □□□□□□□□□□ 77             | <b>Phone settings</b> □□□□□□□□ 79    | <b>GPRS settings</b> □□□□□□□□ 87  |
| Inbox □□□□□□□□□□□□ 65                  | Cache check □□□□□□□□□□ 77             | <b>Security certificates</b> □□□□□ 77 | Display settings □□□□□□□□ 79         | GPRS attach □□□□□□□□□□ 88         |
| Topics □□□□□□□□□□□□ 65                 | <b>Reset profiles</b> □□□□□□□□ 77     | <b>WAP information</b> □□□□□□ 77      | Languages □□□□□□□□□□ 79              | External device □□□□□□□□ 88       |
| Alert □□□□□□□□□□□□□□ 65                | <b>Security certificates</b> □□□□□ 77 |                                       | <b>Call settings</b> □□□□□□□□□□ 80   | <b>Reset settings</b> □□□□□□□□ 88 |
| Auto display □□□□□□□□□□ 65             |                                       |                                       | Call divert □□□□□□□□□□ 80            | <b>SIM service</b> □□□□□□□□□□ 89  |
| Languages □□□□□□□□□□□□ 65              |                                       |                                       | Answer mode □□□□□□□□□□ 81            | <b>Q&amp;A</b> □□□□□□□□□□□□□□ 90  |
| <b>Templates</b> □□□□□□□□□□□□ 66       |                                       |                                       | Send my number □□□□□□□□ 81           | <b>Accessories</b> □□□□□□□□□□ 93  |
| Text □□□□□□□□□□□□□□□□ 66               |                                       |                                       | Call waiting □□□□□□□□□□ 81           | <b>Technical data</b> □□□□□□□□ 95 |
| Multimedia □□□□□□□□□□□□ 66             |                                       |                                       | Minute minder □□□□□□□□□□ 81          |                                   |
| <b>Name card</b> □□□□□□□□□□□□□□ 67     |                                       |                                       | Voice dial □□□□□□□□□□□□ 81           |                                   |
| <b>Check memory</b> □□□□□□□□□□ 67      |                                       |                                       | Auto redial □□□□□□□□□□□□ 82          |                                   |
| <b>Camera</b> □□□□□□□□□□□□□□□□ 68      |                                       |                                       | Phone line in use □□□□□□□□ 82        |                                   |
| <b>Take picture</b> □□□□□□□□□□□□□□ 68  |                                       |                                       | Closed user group □□□□□□□□ 83        |                                   |
| <b>Multi burst</b> □□□□□□□□□□□□□□□□ 69 |                                       |                                       | <b>Security settings</b> □□□□□□□□ 83 |                                   |
|  |                                       |                                       | PIN code request □□□□□□□□ 83         |                                   |
|  |                                       |                                       | Phone lock □□□□□□□□□□□□ 84           |                                   |
|  |                                       |                                       | Key lock □□□□□□□□□□□□□□ 84           |                                   |

Congratulations on your purchase of the advanced and compact G7050 mobile phone, designed to operate with the latest digital mobile communication technology.



This user's guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

## **Exposure to radio frequency energy**

---

### **Radio wave exposure and Specific Absorption Rate (SAR) information**

This mobile phone model G7050 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY3 for use at the ear is 1.1 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).

## Product care and maintenance

---

**Warning: Use only batteries, charger and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.**

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliance such as a TV, radio or personal computer.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit.  
(Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously.  
Do not touch the antenna unnecessarily.

## Efficient phone operation

---

To enjoy optimum performance with minimum power consumption please:

- Hold the phone as you speak to any other telephone.  
While speaking directly into the microphone, angle the antenna in a direction up and over your shoulder. If the antenna is extendable/ retractable, it should be extended during a call.
- Do not hold the antenna when the phone is in use. If you hold it, it can affect call quality, it also may cause the phone to operate as a higher power level than needed and shorten talk and standby times.
- If your mobile phone supports infrared, never direct the infrared ray at anyone's eye.

## Electronics devices

---

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over the pacemaker, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

## Road safety

---

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your motor vehicle such as car stereo, safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause serious injury due to improper performance.

## Blasting area

---

Do not use the phone where blasting is in progress. Observe restrictions, and follow any regulations or rules.

## Potentially explosive atmospheres

---

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

## In aircraft

---

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

## Children

---

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

## Emergency calls

---

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

---

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.

## Phone components



## Your phone's features

### 1. Earpiece

### 2. Side keys

- Controls the volume of key tone in standby mode with the sliding keypad down.
- Controls the earpiece volume during a phone call.
- With the sliding keypad up, pressing one of these displays the current time and date by turns.

**3, 11. Left soft key / Right soft key:** Each of these keys performs the function indicated by the text on the screen immediately above it.

**4. Scheduler key:** A shortcut key to the Schedule menu.

**5. Send key:** Dials a phone number and answers incoming calls. You can also quickly access the latest incoming, outgoing and missed calls by pressing the key in standby mode.

**6. Alphanumeric keys:** Enter numbers, letters and some special characters.

**7. Microphone:** Can be muted during a call for privacy. (See page 31.)

**8. LCD screen:** Displays phone status icons, menu items, Web information, pictures and more in full colour.

**9. Navigation keys:** Use for quick access to phone functions.

- Up navigation key: By pressing this key in standby mode, you can search the phonebook by name.
- Down navigation key: You can go directly to the voice recording menu. Holding this key down directly starts voice recording.
- Left navigation key: A shortcut key to the Profile menu.
- Right navigation key: A shortcut key to the message inbox.

**10. Confirm key:** Selects menu options and confirms actions.

**12. Camera key:** Press this key to use the camera feature. Directly goes to the camera mode.

**13. End/Power key:** Used to end a call or reject a call and also to go back to standby mode. Hold this key down to turn the phone on/off.

**14. Clear key:** Deletes a character by each press. Hold the key down to clear all input all input. Also use this key to go back to the previous screen.

## Display information

The table below describes various display indicators or icons that appear on the phone's display screen.

### On-Screen Icons



Indicates the strength of the network signal.



Indicates a call is in progress.



Indicates that you are roaming on another network.



Indicates that GPRS service is available.



Indicates the alarm has been set and is on.



Indicates the status of the battery charge.



Indicates the receipt of a text message.



Indicates the receipt of a voice message.



Indicates the receipt of a MMS message.



Indicates that the vibration ringer has been set.



Indicates the receipt of an e-mail message.



Indicates the Loud profile is activated.



Indicates the Silent profile is activated.



Indicates the Headset profile is activated.



Indicates the Car profile is activated.



Indicates the General profile is activated.



Indicates that you can use the push message service.



Indicates that you have a schedule for the selected day in the schedule menu.



Indicates that the phone is accessing the WAP.



Indicates that you are using GPRS.



Indicates that you entered the security page.

## Installing the SIM card and the handset battery

1. Make sure the power is off before you remove the battery. Press the battery release latch up and remove the battery from the phone at a 45 degree angle.



2. Insert the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.




To insert the SIM card



To remove the SIM card

- ! Note** The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.


3. Position the lugs on the bottom of the battery into the retaining holder. Then, push the top half of the battery into position until the latch clicks.

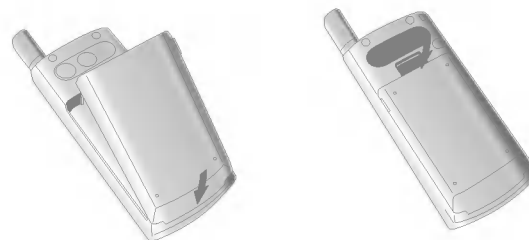

## Charging the battery

Only use the mains adapter supplied with your phone.


1. With the battery in position on the phone, connect the lead from the travel adapter to the bottom of the phone. Make sure that the arrow on the lead connector is facing towards the front of the phone.
2. Connect the other end of the adapter to the power outlet.

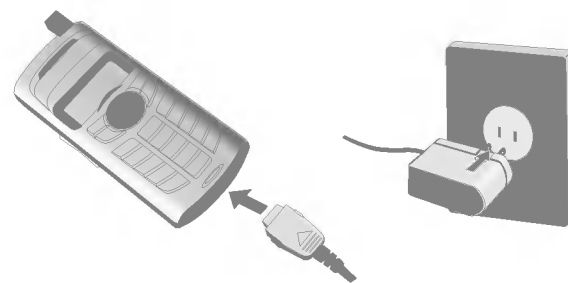

- ! Caution** Use of unauthorised accessories could damage your phone and invalidate your warranty. Do not force the connector as this may damage the phone and/or the mains adapter.

## Disconnecting the adapter

1. When charging is finished, the moving bars of the battery icon stop and 'Full' is displayed on the screen.
2. Unplug the adapter from the power outlet. Disconnect the adapter from the phone by pressing the grey tabs on both sides of the connector and pull the connector out.

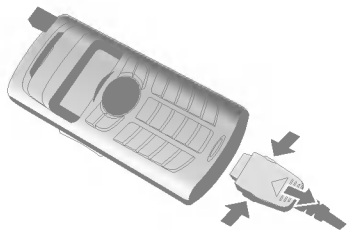


- ! Note**
- Ensure the battery is fully charged before first using the phone.
  - Do not remove the battery or SIM card while charging.
  - In the case the battery is not properly charged, please turn the phone off and on using the power key, then recharge the battery. After detaching and reattaching the battery, please recharge the battery.

## Turning your phone on and off

---

### Turning your phone ON

1. Install a battery to the handset and connect the phone to an external power source such as the travel adapter, cigarette lighter adapter or hands-free car kit. Or install a charged battery pack to the handset.
2. Press  for a few seconds until the LCD screen is turned on.
3. Depending on the status of the **PIN code request** setting you may need to enter your PIN code.

**! Note** Like any other radio devices, avoid any unnecessary contact with the antenna while your phone is on.

### Turning your phone OFF

1. Press  for a few seconds until the LCD screen is turned off.

## Access codes

---

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu 9.5.6]. See page 86.

### PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. When the **PIN code request** is set to **Enable**, your phone will request the PIN code every time the phone is switched on. When the **PIN code request** is set to **Disable**, your phone connects to the network directly without the PIN code.

## **PIN2 code (4 to 8 digits)**

The PIN2 code, supplied with some SIM cards, is required to access functions such as **Advice of Call Charge** and **Fixed dial number**. These functions are only available if supported by your SIM card. Check with your network for further information.

## **PUK code (4 to 8 digits)**

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, also contact your network operator.

## **PUK2 code (4 to 8 digits)**

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your network operator.

## **Security code (4 to 8 digits)**

The security code protects the unauthorised use of your phone. The default security code is set to **'0000'** and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the **Security settings** menu.

## **Barring password**

---

The barring password is required when you use the **Call barring** function. You obtain the password from your network operator when you subscribe to this function. See page 85 for further details.





# G7050





CE 0168

## Making and answering calls



### Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code. To edit a number on the LCD screen, press the right/left navigation keys to move the cursor to the desired position or simply press the clear key (  ) to erase one digit at a time.
  - ▶ Press and hold the clear key (  ) to erase the entire number.
3. Press the send key (  ) to call the number.
4. To end the call, press the end key (  ) or the right soft key. You can also end the call by sliding the keypad up.

### Making a call using the send key

1. In standby mode, press the send key (  ), and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation key.
3. Press .

### Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press .


### Ending a call

When you have finished your call, press the end (  ) key.

### Making a call from the phonebook

You can save the names and phone numbers dialed regularly in the SIM card and/or phone memory, which is Phonebook. You can dial a number by simply looking up the desired name in the Phonebook. For further details on the Phonebook feature, please refer to page 50-51.



### Adjusting the volume

If you want to adjust the earpiece volume during a call, use the side keys (  ). Press the up side key to increase and down side key to decrease the volume.

**Note** In standby mode with the sliding keypad down, pressing the side keys adjusts the key tone volume.

### Answering a call


When you receive a call, the phone rings and the flashing phone icon appears on the screen. If the caller can be identified, the caller's phone number (or name if saved in the phonebook) is displayed.

1. To answer an incoming call, slide the keypad down.  
(When **Slide down** has been set as the answer mode. See page 81.)
  - Note** If Any key has been set as the answer mode (see page 81), any key press will answer a call except for the  or the right soft key.
  - Note**
    - ▶ To reject an incoming call, press and hold one of the side keys on the left side of the phone without sliding the keypad down.
    - ▶ You can answer a call while using the Phonebook or other menu features.
2. To end the call, slide the keypad up or press the .

## Manner mode (Quick)

You can activate the manner mode by pressing and holding down one of the side keys (  ) in the state of sliding keypad up.

## Signal strength

You can check the strength of your signal by the signal indicator (  ) on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

## Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text.

The following text input methods are available in the phone.


### T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.


### ABC mode


This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.

### 123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.




## Changing the text input mode

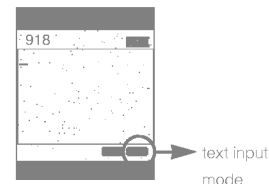1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the lower right corner of the LCD screen.
2. Change the text input mode by pressing . You can check the current text input mode in the lower right corner of the LCD screen.



### ► Using the T9 mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys   to . Press one key per letter.
  - The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
  - If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.

Example: Press     to type **Good**  
Press      to type **Home**

- If the desired word is missing from the word choice list, add it using the ABC mode.

– You can select the language of the T9 mode. Press the left soft key [Option], then select **T9 languages**. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.

2. Enter the whole word before editing or deleting any keystrokes.

3. Complete each word with a space by pressing the  key.

To delete letters, press . Press and hold down  to erase entire words.




**Note** To exit from the text input mode without saving your input, press . The phone goes back to standby mode.

### ► Using the ABC mode

Use the  to  keys to enter your text.

1. Press the key labelled with the required letter:

- ▶ Once for the first letter
- ▶ Twice for the second letter
- ▶ And so on

2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the whole display.

**Note** Refer to the table below for more information on the characters available using the alphanumeric keys.

|   |                  |                  |
|---|------------------|------------------|
| 1 | ., - ? ! ' @ : 1 | ., - ? ! ' @ : 1 |
| 2 | A B C 2          | a b c 2          |
| 3 | D E F 3          | d e f 3          |
| 4 | G H I 4          | g h i 4          |
| 5 | J K L 5          | j k l 5          |
| 6 | M N O 6          | m n o 6          |
| 7 | P Q R S 7        | p q r s 7        |
| 8 | T U V 8          | t u v 8          |
| 9 | W X Y Z 9        | w x y z 9        |
| 0 | Space key        | Space key        |

### ► Using the 123(Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

## Phonebook

---

You can store phone numbers and their corresponding names in the memory of your SIM card.

In addition, you can store up to 255 numbers and names in the phone memory.

The SIM card and phone are both used in the same way in the **Phonebook** menu. (Refer to page 50-54 for details.)

## In-call menu

---

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

### During a call

The menu displayed on the handset screen during a call is different to the default main menu displayed when in standby mode, and the options are described below.


### Making a second call

You can get a number you wish to dial from the phonebook to make a second call. Press the right soft key then select **Search**. To save the dialled number into the phonebook during a call, press the right soft key then select **Add new**.


### Switching between two calls

To switch between two calls, press the left soft key then select **Swap**.


### Answering an incoming call


To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting.

This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see **Call waiting** [Menu 9.4.4] on page 81.

If **Call waiting** is activated, you can put the first call on hold and answer the second, by pressing  or by selecting left soft key, then **Hold & Answer**. You can end the current call and answer the waiting call by selecting left soft key and then **End & Answer**.

### Rejecting an incoming call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the left soft key [Menu] key and selecting the **Conference/Reject** or by pressing the .

### Muting the microphone

You can mute the microphone during a call by pressing the [Menu] key then selecting **Mute on**. The handset can be unmuted by selecting **Mute off**. When the handset is muted, the caller cannot hear you, but you can still hear them.

### Switching DTMF tones on during a call


To turn DTMF tones on during a call, press the left soft key, and then select **DTMF on**. DTMF tones can be turned off the same way. DTMF tones allow your phone to make use of an automated switchboard.

## Multiparty or conference calls

---

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network operator supports this feature. A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls can be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add callers to the multiparty call.

### Making a second call

You can make a second call while currently on a call. Enter the second number and press the  key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the left soft key then selecting **Swap**.

### Setting up a conference call

Place one call on hold and while the active call is on, press the left soft key and then select the **Conference/Join all**.

### Putting a conference call on hold

Press the left soft key, then select the **Conference/Hold all**.

### Activate the conference call on hold

Press the left soft key, then select the **Conference/Join all**.

### Adding calls to the conference call

To add a call to an existing conference call, press the left soft key, then select the **Conference/Join all**.


## Displaying callers in a conference call

To scroll through the numbers of the callers who make up a conference call on the handset screen, use the up/down navigation keys.

### Taking a private call during a conference call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the **Conference/Private** to put all the other callers on hold.

### Ending a conference call

The currently displayed caller from a conference call can be disconnected by pressing the  key. To end a conference call, press the left soft key, then select the **Conference/End multiparty**. After pressing the left soft key, selecting **Conference/End all** will end all the active and on-hold calls.

# Menu tree

The following illustration shows the available menu structure and indicates the:

- ▶ Number assigned to each menu option.
- ▶ Page where you can find the feature description.

You can go to the desired menu using the left soft key [Menu], navigation keys and [OK] key. And you can also take a shortcut by pressing the corresponding menu key of desired menu after pressing the left soft key [Menu].

## 1. Profiles (see page 38)

- ▶ **1.1 Vibrate only**
  - ▶ 1.1.1 Activate
- ▶ **1.2 Silent**
  - ▶ 1.2.1 Activate
  - ▶ 1.2.2 Personalize
  - ▶ 1.2.3 Rename
- ▶ **1.3 General**
  - ▶ 1.3.1 Activate
  - ▶ 1.3.2 Personalize
  - ▶ 1.3.3 Rename
- ▶ **1.4 Loud**
  - ▶ 1.4.1 Activate
  - ▶ 1.4.2 Personalize
  - ▶ 1.4.3 Rename
- ▶ **1.5 Headset**
  - ▶ 1.5.1 Personalize
- ▶ **1.6 Car**
  - ▶ 1.6.1 Personalize

## 2. Call register (see page 40)

- ▶ **2.1 Missed calls**
- ▶ **2.2 Received calls**
- ▶ **2.3 Dialed calls**
- ▶ **2.4 Delete recent calls**
  - ▶ 2.4.1 Missed calls
  - ▶ 2.4.2 Received calls
  - ▶ 2.4.3 Dialed calls
  - ▶ 2.4.4 All calls
- ▶ **2.5 Call durations**
  - ▶ 2.5.1 Last call
  - ▶ 2.5.2 Received calls
  - ▶ 2.5.3 Dialed calls
  - ▶ 2.5.4 All calls
- ▶ \* **2.6 Call costs**
  - ▶ 2.6.1 Last call's cost
  - ▶ 2.6.2 All calls' cost
- ▶ \* **2.7 Cost settings**
  - ▶ 2.7.1 Call cost's limit
  - ▶ 2.7.2 Set tariff
  - ▶ 2.7.3 Auto display
- ▶ **2.8 GPRS information**
  - ▶ 2.8.1 WAP information
  - ▶ 2.8.2 External device
  - ▶ 2.8.3 Total data

## 3. Fun & Tools (see page 44)

- ▶ **3.1 Game**
- ▶ **3.2 My folder**
  - ▶ 3.2.1 Picture
  - ▶ 3.2.2 Animation
  - ▶ 3.2.3 Sound
- ▶ **3.3 Unit converter**
- ▶ **3.4 Calculator**
- ▶ **3.5 World time**
- ▶ **3.6 Voice recorder**
- ▶ **3.7 Infrared**

## 4. Organizer (see page 48)

- ▶ **4.1 Schedule**
- ▶ **4.2 Memo**
- ▶ **4.3 Phone book**
  - ▶ 4.3.1 Search
  - ▶ 4.3.2 Add new
  - ▶ 4.3.3 Speed dials
  - ▶ 4.3.4 Voice list
  - ▶ 4.3.5 Caller groups
  - ▶ 4.3.6 Copy all
  - ▶ 4.3.7 Delete all
  - ▶ 4.3.8 Settings
  - ▶ 4.3.9 Information

## 5. Messages (see page 55)

- ▶ **5.1 Text messages**
  - ▶ 5.1.1 Write message
  - ▶ 5.1.2 Inbox
  - ▶ 5.1.3 Outbox
  - ▶ 5.1.4 Draft
  - ▶ 5.1.5 Settings
  - ▶ 5.1.6 Delete

## 5. Messages (continued)

- ▶ **5.2 Multimedia messages**
  - ▶ 5.2.1 Write
  - ▶ 5.2.2 Inbox
  - ▶ 5.2.3 Outbox
  - ▶ 5.2.4 Draft
  - ▶ 5.2.5 Settings
- ▶ \* **5.3 Voice messages**
  - ▶ 5.3.1 Listen to voice messages
  - ▶ 5.3.2 Voice mailbox number
- ▶ \* **5.4 Info service**
  - ▶ 5.4.1 Receive
  - ▶ 5.4.2 Inbox
  - ▶ 5.4.3 Topics
  - ▶ 5.4.4 Alert
  - ▶ 5.4.5 Auto display
  - ▶ 5.4.6 Languages
- ▶ **5.5 Templates**
  - ▶ 5.5.1 Text
  - ▶ 5.5.2 Multimedia
- ▶ **5.6 Name card**
- ▶ **5.7 Check memory**
  - ▶ 5.7.1 Text
  - ▶ 5.7.2 Multimedia

## 6. Camera (see page 68)

- ▶ **6.1 Take picture**
- ▶ **6.2 Multi burst**
- ▶ **6.3 My photos**
- ▶ **6.4 Settings**
  - ▶ 6.4.1 Image size
  - ▶ 6.4.2 Multi burst
  - ▶ 6.4.3 Shutter sound

## 7. Java (see page 71)

- ▶ **7.1 Applications**
- ▶ **7.2 Download**
- ▶ **7.3 View information**
  - ▶ 7.3.1 Memory status
  - ▶ 7.3.2 Java version

## 8. Internet (see page 74)

- ▶ **8.1 Home**
- ▶ **8.2 Bookmarks**
- ▶ **8.3 Push messages**
  - ▶ 8.3.1 Inbox
  - ▶ 8.3.2 Receive
- ▶ **8.4 Profiles**
- ▶ **8.5 Go to URL**
- ▶ **8.6 Cache settings**
  - ▶ 8.6.1 Clear cache
  - ▶ 8.6.2 Cache check
- ▶ **8.7 Security certificates**
- ▶ **8.8 Reset profiles**
  - ▶ 8.8.1 Yes
  - ▶ 8.8.2 No
- ▶ **8.9 WAP information**

## 9. Settings (see page 78)



- ▶ **9.1 Alarm clock**
- ▶ **9.2 Date & Time**
  - ▶ 9.2.1 Set date
  - ▶ 9.2.2 Date format
  - ▶ \*9.2.3 Set time
  - ▶ 9.2.4 Time format

## 9. Settings (continued)

- ▶ **9.3 Phone settings**
  - ▶ 9.3.1 Display settings
  - ▶ 9.3.2 Languages
- ▶ **9.4 Call settings**
  - ▶ \*9.4.1 Call divert
  - ▶ 9.4.2 Answer mode
  - ▶ \*9.4.3 Send my number
  - ▶ \*9.4.4 Call waiting
  - ▶ 9.4.5 Minute minder
  - ▶ 9.4.6 Voice dial
  - ▶ 9.4.7 Auto redial
  - ▶ 9.4.8 Phone line in use
  - ▶ \*9.4.9 Closed user group
- ▶ **9.5 Security settings**
  - ▶ 9.5.1 PIN code request
  - ▶ 9.5.2 Phone lock
  - ▶ 9.5.3 Key lock
  - ▶ \*9.5.4 Call barring service
  - ▶ 9.5.5 Fixed dial number
  - ▶ 9.5.6 Change codes
- ▶ \***9.6 Network settings**
  - ▶ 9.6.1 Automatic
  - ▶ 9.6.2 Manual
  - ▶ 9.6.3 Preferred
- ▶ **9.7 GPRS settings**
  - ▶ 9.7.1 GPRS attach
  - ▶ 9.7.2 External device
- ▶ **9.8 Reset settings**


## 10. SIM service (see page 89)

This menu depends on the SIM card and network services.

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked [  ] and [  ]. Each menu and sub-menu lets you view and alter the settings of a particular function

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.

(e.g.)

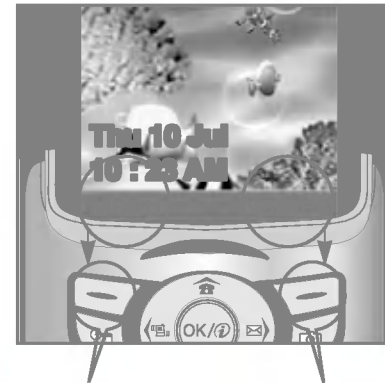


Press the left soft key to access the available menu.

Press the right soft key to activate the corresponding action.

In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

There are six preset profiles: **Vibrate Only**, **Silent**, **General**, **Loud**, **Headset** and **Car**. Each profile can be personalised.

Press the Menu key (  ) and select **Profiles** using navigation keys.

### Changing the profile (Menu 1.X.1)

1. A list of profiles is displayed.
2. In the **Profile** list, scroll to the profile you want to activate and press the left soft key [Select] or OK key.
3. Then, select **Activate**.

### Customising profiles - Personalise (Menu 1.X.2)

Scroll to the desired profile in the Profile list. After pressing the OK key or the left soft key, select **Personalise**. The profile setting option opens. Set the option as required.

- [1] **Incoming call alert:** Set the alert type for incoming calls.
- [2] **Ringtone:** Select the desired ring tone from the list.  
Scroll through the list using up/down navigation keys.  
You can hear the desired tone prior to making a selection.
- [3] **Ringtone volume:** Set the volume of the ringing tone.
- [4] **Message alert type:** Set the alert type for messages.
- [5] **Message alert tone:** Select the alert tone for messages.
- [6] **Keypad tone:** Select the desired keypad tone.
- [7] **Keypad volume:** Set the volume of keypad tone.
- [8] **Effect sound volume:** Set the volume of effect sound.
- [9] **Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.

- [0] **Automatic answer:** (only in **Headset** profile and **Car** profile) You can activate the automatic answer feature.  
Select the time before answering automatically.


### Customising profiles - Rename (Menu 1.X.3)

You can rename a profile and give it any name you want.

- Vibrate only**, **Headset** and **Car** profiles cannot be renamed.
1. To change the name of a profile, scroll to the profile in the profile list and after pressing the OK key or the left soft key, select **Rename**.
  2. Key in the desired name and press the OK key or the left soft key [Save].

You can check the record of missed, received, and dialled calls only if the network supports Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times and costs.

Press the Menu key (  ) and select **Call register** using navigation keys.

## Missed calls Menu 2.1

This option lets you view the last 10 unanswered calls. After pressing the left soft key [Option], you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number.
- Delete the call from the list.

**Note** You can delete all the call records from the list using the **Delete recent calls** menu [Menu 2.4].

## Received calls Menu 2.2

This option lets you view the last 10 incoming calls. After pressing the left soft key [Option], you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number
- Delete the call from the list

**Note** You can delete all the call records from the list using the **Delete recent calls** menu [Menu 2.4].

## Dialled calls Menu 2.3

This option lets you view the last 10 outgoing calls (called or attempted). Using the [Option] key, you can also:

- View the number if available and call it or save it in the phonebook.
- Enter a new name for the number and save in the phonebook.
- Send a message to this number
- Delete the call from the list


**Note** You can delete all the call records from the list using the **Delete recent calls** menu [Menu 2.4].

## Delete recent calls Menu 2.4

Use this to delete the missed call list, received call list, or dialled call list. You can also delete all call lists at a time selecting **All calls**.

## Call durations Menu 2.5

Use this to view the duration of your incoming and outgoing calls. You can check each call duration at the bottom of screen while scrolling using the up/down navigation keys. Pressing the [OK] key or the left soft key [Reset] resets the call timer of selected call. To prevent accidental reset, you are requested to enter the PIN2 code.

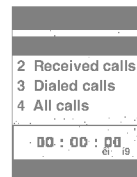

- **Last call:** Length of the last call
- **Received calls:** Length of the incoming calls
- **Dialled Calls:** Length of the outgoing calls
- **All calls:** Total length of all calls made or received calls since the timer was last reset.

**Notice** The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, etc.

## Call costs

*Menu 2.6*

This network service allows you to check the last call cost and the total call cost. The call cost is displayed on the bottom of the LCD screen. To reset the call cost, press the left soft key [Reset] or the OK key. You are requested to enter the PIN2 code.

- ❗ **Note** The actual cost invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, taxes, etc.

## Cost settings

*Menu 2.7*

- **Call cost's limit:** This network service allows you to limit the cost of your calls to the number of charging units or units of currency. You can make or receive a call up to the specified cost limit. You can change the call cost's limit after entering the PIN2 code.
- **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the **Currency** or **1 Unit** in this menu, you need the PIN2 code.
- ❗ **Note** When all units have been used, no calls can be made except emergency calls. Depending on the SIM card, you need the PIN2 code to set a call cost limit.
- **Auto display:** This network service allows you to see automatically the cost of your last call. If you select **On** in **Auto display** menu, you can see the cost of the last call when the call is released.

## GPRS information

*Menu 2.8*

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online. (GPRS stands for General Packet Radio Service.)

### 1) WAP information

You can check the data volume and the time spent using WAP.


On the selected menu, pressing the left soft key [Reset] or the OK key clears the counter.

### 2) External device

You can check the data volume and the time spent using GPRS with an external device such as a serial port.

### 3) Total data

You can check the total amount of data through WAP and the external device.

Press the Menu key (  ) and select **Fun & Tools** using navigation keys.

## Game

*Menu 3.1*

You can enjoy a game on the phone. For further details, use the on-screen instruction or help menu.

## My folder

*Menu 3.2*

**My folder** has 3 folders: Picture, Animation and Sound. You can view, delete, or control downloaded contents. You can get pictures, animation or sounds from WAP site, MMS or SMS. While you're checking each content, you can send it via SMS or MMS, edit or delete it. You can set one in the Picture folder or Animation folder as the wallpaper. For sounds, you can set the desired sound as the ring tone.

## Unit converter

*Menu 3.3*

This converts any measurement from one unit to another.

There are 4 types that can be converted into units: Length, Surface, Weight and Volume.

1. Select one of four unit types by pressing the left soft key [Unit].
2. Move to the current unit section by pressing the down navigation key.
3. Select the unit you want to convert using the left/right navigation keys.
4. Move to the Convert unit section by pressing the down navigation key.
5. Select the unit you want to convert to, using the left/right navigation keys.
6. Input numbers using the numeric keys. Conversion is calculated automatically.




**!** **Note** You can input a decimal number by pressing the  key.

## Calculator

*Menu 3.4*

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division. (You can enter numbers up to the second decimal place)

### Using the calculator

1. Enter the first number using the numeric keys.
2. Press the corresponding navigation key to select a mathematical function.
  - !** **Note** To erase any mistakes and clear the display, press the  key. To include a decimal point, press the  key. To include a minus sign, press the  key.
3. To calculate the result, press the left soft key [Result] or OK key.
4. After calculation, press the left soft key [Reset] to return to the initial state.

## World time

*Menu 3.5*

You can check the current time of Greenwich Mean Time (GMT) and 58 major cities around the world, using the left/right navigation keys.

The screen shows the city name, current date and time.

To select the time zone in which you are located, proceed as follows:

1. Select the city corresponding to your time zone by pressing the left/right navigation keys one or more times. The local date and time are displayed.
2. If you want to change the time display in standby mode to the selected time, press the left soft key [Options]. And select **Set**.
  - !** **Note** The time zone setting of each city in World time menu may be affected by network condition.

## Voice recorder


Menu 3.6

You can record a memo. You can record up to 3 voice memos up to a maximum of 30 seconds each.

You can play or delete the recorded memo or record new voice memo using the left soft key [Option] key.

**Note** In standby mode, you can go directly to the Voice recorder menu by pressing the down navigation key.


### Record

1. Press and hold down  key in standby mode.
2. Once recording is started, the message 'Recording...' and the remaining time is displayed.
3. When you finish recording, press left soft key [Save].

**Note** If all memo locations are full, you must delete an old memo before recording a new one.

- **Play:** Allows you to play back all memos recorded, starting with the most recent memo. The screen displays the Date and time when the memo was recorded.
- **Delete:** Allows you to delete a specific memo.
- **Record new:** Allows you to record a memo.
- **Delete all:** Allows you to delete all memos. Press the left soft key [Yes] to confirm.


### View list

The phone shows the voice memo title which you have recorded by pressing  in standby mode. You can **Play**, or **Delete** the recorded voice memo.

## Infrared


Menu 3.7

This feature allows you to send or receive data/fax through the infrared port. To use an infrared connection:


- Install the modem driver for receiving or sending the data/fax.
- Install the network dial-up software supplied by your network provider or fax application program for a fax call on your PC.
- Configure and activate an IrDA-compliant infrared port on your PC.
- Activate the infrared feature on the phone; the  symbol appears on the right side at the bottom of the display.
- Call the network service number given to you by the service provider.

If there is no communication between your phone and the IrDA-compliant device within 30 seconds of activation of the feature, it is automatically deactivated.

For further details, contact your network provider.

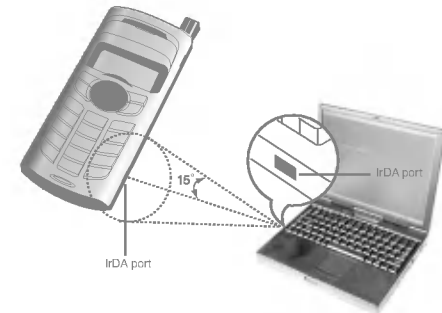

**Note** PC Sync is a program for data exchange between PC and the phone by a data cable. Therefore, if you want to use this function, you need to buy the accessory kit. For more information, you can use the PC Sync Help file on the CD.

Press the Menu key (  ). Select **Organizer**, using navigation keys.

## Schedule

*Menu 4.1*

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move to another date using navigation keys. If a date is shown in a different colour, it means that there is a schedule or memo for that day. This function reminds you of your schedule and memos. The phone will sound an alarm tone if you set the phone to do so.

### • View

Shows the note for the chosen day. Press [Options] to delete or edit the note you selected.

### • Edit

Use this to edit the schedule.

### • Delete

Use this to delete the schedule

### • Add new

You can edit a maximum of 30 characters and take up to 20 notes.

### • Calendar

Goes back to the calendar.

### • Scheduler tone

The phone can sound an alarm tone when the scheduled date and time for an event has been reached with this option.

### • View all schedules

Shows the notes that are set for all days. Use the up/down navigation keys to browse through the note lists.

### • Go to date

Use this to jump to a specific date. Enter the date using the numeric keys and the left/right navigation keys

### • Delete past

You can delete expired schedule notes that have already been notified.

### • Delete all

Use this to delete all schedules. You are asked to confirm this action.

## Memo

*Menu 4.2*

You can write, edit and delete a memo on a specific date.

**1.** Scroll to highlight Memo.

**2.** Press the left soft key [Add].

**3.** Input the memo and then press the left soft key [Options].

The following options are available.

▶ **Save:** Allows you to save the memo.

▶ **T9 languages:** Select the T9 language to use in the memo.

▶ **Exit editor:** Allows you to exit from the memo editor.

After a memo is already input in your phone,

**1.** Select a memo.

**2.** Press the left soft key [Select].

**3.** Press the left soft key [Options].

The following options are available.

▶ **Edit:** You can edit the selected memo.

▶ **Delete:** Deletes the selected memo.

- ▶ **Add New:** Use this to add a new memo. The phone can store up to 20 memos and 40 characters for each memo.
- ▶ **Delete All:** Deletes all memos. You are asked to confirm this action.

## Phonebook

*Menu 4.3*

You can save phone numbers and their corresponding names in the memory of your SIM card. In addition, you can save up to 255 numbers and names in the phone memory.

- Press the left soft key [Menu] in standby mode, then select **Organizer → Phonebook**.
- Or, press the right soft key [Names] in standby mode.

### Search

*(Menu 4.3.1)*

1. In standby mode, press right soft key [Names]. Select **Search**. You are asked to enter a name.
  2. Enter the start of the name that you wish to find and press left soft key [Search].
- !** **Note** You can also scroll through the phonebook from the beginning, by pressing the left soft key [Search] directly.
3. After finding the desired name, you can make a call to the number by pressing the [send] key. Or press the left key [Option] to use the following options.
- **View detail:** To view details of the selected name.
  - **Edit:** Edits the name, number, and the listing group.
  - **Delete:** Deletes the phonebook entry.
  - **Write text message:** Use this to write a text message to the name.
  - **Write multimedia message:** Use this to write a multimedia message to the name.

- **Copy:** Use this to copy the phonebook entry from SIM to the phone memory or vice versa.
- **Voice:** Records the name of the selected phonebook entry for voice-activated dialling.

### Add new

*(Menu 4.3.2)*

You can add a phonebook entry using this function.

There are 2 memories: Phone memory and SIM memory. To select the memory, go to **Set memory** [Menu 4.3.8.1]. The phone memory capacity is 255 entries. You can enter up to 20 characters in each name in the phone memory. The SIM card memory capacity depends on the SIM card.

1. Open the **Phonebook** first by pressing the right soft key [Names] in standby mode.
  2. Scroll to highlight **Add new**, and press [Select]
  3. You can add new phonebook entries to SIM memory or the phone memory. To select the memory, go to **Set memory** [Menu 4.3.8.1]. (Refer to page 54.)
- **Adding new entries into SIM memory**  
You can enter a name and number, and select the required group. (Depends on the SIM)
  - **Adding new entries into the phone memory**  
You can enter a name, numbers, E-mail address and memo, and select the required group.

### Speed dials

*(Menu 4.3.3)*

You can assign any of the keys 2 to 9 with a name list entry. You can call directly by pressing this key for 2-3 seconds.

1. Open the **Phonebook** first by pressing the right soft key [Names] in standby mode.
2. Scroll to **Speed dials**, then press [Select].

3. To add a number to **Speed dials**, press the left soft key [Add]. Search the name through the phonebook.
4. You can change or delete a speed dial number, make a call or send a message by pressing the left soft key [Option].

## Voice list

(Menu 4.3.4)

You can check all the phone numbers which have voice-activated dialling assigned to them. You can also call directly by pressing the [Send] key. After selecting a phone number using up/down navigation keys and press the left soft key [Option]. You can see the following submenus.

- **Play:** Plays back the voice tag assigned to the phone number.
- **Change:** Changes the voice tag assigned to the phone number.
- **Delete:** Deletes the voice assigned to the phone number.
- **Call:** Makes a call to the selected number.
- **Add new:** Adds a new phone number for voice-activated dialling.
- **Delete all:** Deletes all voice-activated dialling numbers.

**Note** You can enter up to 10 phone numbers for voice dial.

## Caller groups

(Menu 4.3.5)

There are 6 pre-defined groups, as well as one additional group labelled **Others**, where you can create lists.

1. Select **Caller groups**. Every group list will be displayed: **Family, VIP, Friends, Colleague, Group 1, Group 2,** and **Others**.
  2. Select the group name that you want to manage by pressing the left soft key [Option]. The following submenus will be displayed except for **Others**.
- **Member list:** Displays the member list in the group.

- **Group ring tone:** Use this to select the ring tone to be used when you receive a voice phone call from a person in the group.
- **Group icon:** Use this to select the graphic icon to be displayed when you receive a call from a person in the group.
- **Add member:** Add a member to the group.
- **Delete member:** Delete a member from the group.
- **Rename:** Assigns a new name to the group.

## Copy all

(Menu 4.3.6)

You can copy/move entries from the SIM card memory to the phone memory and vice versa.


- ▶ **SIM to Phone:** Use this to copy the entry from the SIM Card to Phone memory.
- ▶ **Phone to SIM:** Use this to copy the entry from the Phone memory to the SIM Card.

The following options are available.

- **Keep original:** When copying, the original dial numbers are kept.
- **Delete original:** When copying, the original dial numbers will be erased.

## Delete all

(Menu 4.3.7)

You can delete all entries in SIM, Phone, and Voice list. Except for **Voice list**, this function requires the security code. Press  to return to standby mode.

## Settings

(Menu 4.3.8)

### Set memory

You can select the memory for the Phonebook feature between the SIM and the phone. If you select **Variable**, when adding entry, the phone will ask where to save the number.


### Search by

You can set the phone to search by **name** or **number**, when you search the Phonebook. If you select **Variable**, the phone will ask how to search when you search the Phonebook.

## Information


(Menu 4.3.9)

► **Service dial number (SIM dependent):** Use this to view the list of Service Dialling Numbers (SDN) assigned by your network operator (if supported by the SIM card). Such numbers include the emergency, directory enquiries and voice mail numbers.

1. Select the Service dial number option.
2. The names of the available services will be shown.
3. Use the up/down navigation keys to select a service. Press .

► **Check memory:** You can check the current memory status of the SIM card and phone memory.

► **Own number (SIM dependent):** Use this to display your phone number in the SIM card.




Press the Menu key (  ) and select **Messages** using navigation keys.

## Text messages

Menu 5.1

Your phone receives voice mail notification messages and Short Message Service(SMS) messages.

Voice mail and SMS are network services. Please contact your network operator for more information.

When the  icon appears, you have received voice mail. When the  icon appears, you have received a new text message. If the message memory is full, a message is displayed, the  icon flashes and you cannot receive any new messages. Use the **Delete** option in the **Inbox** menu to delete obsolete messages. Once there is space in the message memory, any undelivered SMS messages will be received (provided sufficient space is available).

## Write message

(Menu 5.1.1)

You can write and edit text messages up to 6 pages. (approximately 918 characters)

1. Key in your message. For details on how to enter text, refer to page 26 through 29 (Entering Text).
2. After you complete the message, to select the required option, press the left soft key [Option].

The following options are available.

► **Send to number:** Enter the number or select the number from the phonebook or the recent numbers. You can send a message up to 5 phone numbers at a time. Press the left soft key [Options]. The following options will be displayed.

- 1 Send (It only shows after a phone number is entered)
- 2 Recent numbers
- 3 Search

- ▶ **Save to draft:** Allows you to save the message so that it can be sent later.
  - ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'. For further details on the T9 mode, refer to page 26 through 28.
  - ▶ **Clear text:** Erases the whole text.
  - ▶ **Exit:** Allows you to exit from the **Write message** menu.
3. You can also send attachments with the message by pressing the right soft key [Attach], while you're entering a message.
- ▶ **Symbol:** You can attach special characters.
  - ▶ **Picture:** You can send and receive text messages that contain pictures, known as 'picture messages'. Several preset pictures are available in the phone and they can be replaced with new ones received from other sources.
  - ▶ **Animation:** Attaching an animation in a message can be done through EMS (Enhanced Messaging Service). You can select any of 15 animations in the phone.
  - ▶ **Sound:** If available, you can attach a sound available for a short message.
  - ▶ **Text template:** You can use text templates already set in the phone.
  - ▶ **Phone number:** You can add phone numbers in the message.
  - ▶ **Name card:** You can attach your name card.


## Inbox







(Menu 5.1.2)

Received text messages and page messages can be searched and the contents can be viewed.

Received messages are displayed in date order.

Press the menu key and select **Messages** → **Text message** → **Inbox**.

Or, you can take a shortcut by pressing the right navigation key (  ) in standby mode.

- |   |                        |
|---|------------------------|
|  | Read SIM message       |
|  | Unread SIM message     |
|  | Read message           |
|  | Unread message         |
|  | Read delivery report   |
|  | Unread delivery report |

**Note** SIM message refers the message saved in the SIM memory. And the network distinguishes an incoming message into the SIM message or just message.



Each received message has the following options available. Press the left soft key [Options].

- ▶ **Reply:** Replies to the received message.
- ▶ **Forward:** Forwards a received message to other recipients.
- ▶ **Return call:** Calls the sender's phone.
- ▶ **Extract:** Extracts a picture, sound, text web page or email address from the message. These will be saved in My folder, Phonebook, or bookmarks.
- ▶ **Delete:** Deletes the selected message from the Inbox.

## Outbox

(Menu 5.1.3)

You can view the list and contents of sent messages in this menu and can also verify if the transmission was successful.

| Icon  | Description      |
|---|------------------|
|  | Sent SIM message |
|  | Sent message     |

The following options are available.

- ▶ **Forward:** Forwards the current message to other recipients.
- ▶ **Delete:** Deletes the selected message from the Outbox.

## Draft

(Menu 5.1.4)

In this menu, you can see the message list saved as draft. Scroll through the list using the up/down navigation keys. Each draft has the following options.

- ▶ **Send:** Sends the selected message to other recipients.
- ▶ **Delete:** Deletes the selected message.

## Settings

(Menu 5.1.5)

This menu lets you set up default SMS information.

- ▶ **Message types:** Sets the default message type between Text and Voice. The network can convert the messages into the selected format.
- ▶ **Valid period:** Sets the length of time for which your text messages will be saved at the SMS center while attempts are made to deliver them to the recipient. Possible values are 30 minutes, 1 hour, 6 hours, 1 day, 1 week and the maximum authorised by your network operator.
- ▶ **Paper:** You can insert one of 3 wallpaper images to a text message.

- ▶ **Delivery reports:** Activates or deactivates the report function. When this function is activated, the network informs you whether or not your message has been delivered.
- ▶ **Reply with same service:** Allows the recipient of your SMS message to send you a reply via your message centre, if the service is provided by the network.
- ▶ **Message centre number:** Saves or changes the number of your SMS centre when sending text messages. You must obtain this number from your service provider.
- ▶ **Bearer setting:** Selects GPRS or GSM. Contact your network operator or service provider for information related to setting a selected bearer, pricing and connection speed.

## Delete

(Menu 5.1.6)

You can delete all messages in the message memory or delete only read messages.

## Multimedia messages (MMS)


Menu 5.2

A multimedia message can contain text, images, and/or sound clips.

This feature can be used only if it is supported by your network operator or service provider. Only devices that offer compatible multimedia message or e-mail features can receive and send multimedia messages.

### Write

(Menu 5.2.1)

1. Key in the text message. Using the right soft key, you can input symbols, numbers and emoticons, or use T9 input mode. After the text message input, press the left soft key [Done].
2. Add an image and/or sound. You can move to the next section using the up/down navigation.
3. You can add a slide by moving the cursor on , then pressing the OK key or the left soft key [Select]. You can also add a slide using the right soft key [Menu].
  - Note** Up to 9 slides are affordable.
4. Press the right soft key [Menu]. The following options are available.
  - **Send:** Supports multiple numbers and email addresses.
  - **Preview:** Displays the multimedia message you wish to send.
  - **Save:** Saves the multimedia message in draft or as a template.
  - **Delete:** Deletes the MMS message.
  - **Settings:** Sets the slide show duration or aligns the message contents right, left, top or bottom.
  - **Add Slide:** Adds a slide before or after the current slide.
  - **Remove Slide:** Deletes the selected slide.

## Inbox

(Menu 5.2.2)

You will be alerted when you have received messages. They will be saved in the Inbox. You can identify each message by icons.

For details, see the icon description below.

| Icon  | Description                         |
|---|-------------------------------------|
|  | Read multimedia messages            |
|  | Unread multimedia messages          |
|  | Read notified multimedia messages   |
|  | Unread notified multimedia messages |

If the phone has 'No space for messages', you can make space by deleting messages, media and applications.

- **Timer stop:** The Timer stop menu is displayed when you receive a message including various pictures. Usually, the pictures are sequentially displayed automatically. However, if you select this menu, you can see the next picture by pressing the left soft key [Next] manually.
- **Previous slide:** Displays the previous page.
- **Replay:** Replays multimedia messages.
- **Delete message:** Deletes the current message.
- **Reply:** Replies to the sender.
- **Reply all:** Replies to all senders.
- **Forward:** Forwards the selected message to other recipients.
- **Save message:** Saves a multimedia message in draft form or as a template.
- **Save item:** Extracts pictures or sounds. They will be saved in My folder or Phonebook.
- **Detail:** Displays information about received messages; Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.

## Outbox

(Menu 5.2.3)

Use this to see sent messages. For each sent message, you can see the delivery status.

| Icon  | Description |
|---|-------------|
|  | Sent        |

- **Timer stop:** Usually, the pictures are in the form of an automatic slide show. However, if you select this menu, you can see the next picture by pressing the left soft key [Next] manually.
- **Previous slide:** Displays the previous page.
- **Replay:** Replays the current message.
- **Delete message:** Deletes the current message.
- **Forward:** Forwards the current message to other recipients.
- **Save message:** Saves a multimedia message in draft form or as a template.
- **Save item:** Saves items such as images, sound and attachments to a message.
- **Detail:** Displays information about the outbox messages: Subject (only for Multimedia message), Message date & time, Message type, Message size.
- **Reply:** Replies to the current message.
- **Reply all:** Replies to all recipients of the selected message.

## Draft

(Menu 5.2.4)

Using this menu, you can preset up to five multimedia messages that you use most frequently. This menu shows the preset multimedia message list.

The following options are available.

- **Send:** Supports multiple member and email addresses.

- **Preview:** To see the draft multimedia message.
- **Save:** Saves multimedia messages in draft form or as templates.
- **Delete:** Deletes the message.
- **Settings:** Select to set the slide duration or align the message contents to the right, left, top or bottom.
- **Add slide:** Adds a slide before or after the current slide.
- **Remove slide:** Removes the highlighted slide.

## Settings

(Menu 5.2.5)

Via this menu, you can set up the default multimedia message information.

The following options are available.

- ▶ **Message title:** Enter the message title.
- ▶ **Slide duration:** Set the duration of each slide.
- ▶ **Alignment:** Set the alignment of messages.
- ▶ **Valid period:** Set the duration for keeping messages on the network server.
- ▶ **Auto download**
  - On:** If you select this, messages are downloaded automatically on receipt.
  - Confirm:** Requires you to confirm you want to download the message.
  - Off:** Defers downloading messages.
- ▶ **Message centre URL:** Enter the address of an MMS server to use the MMS service.
- ▶ **Profiles:** See page 76 for further information.

## Voice messages

Menu 5.3

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).

Before using this feature, you must enter the voice server number obtained from your network operator.

When new voice message is received, the **☎** symbol will be displayed on the screen. Please check with your network provider for details of their service in order to configure the handset correctly.

### Listen to voice messages

(Menu 5.3.1)

Once this option has been selected, simply press the left soft key [OK] to listen to voice messages. You can also hold down the [1] key in standby mode to listen to voice messages.

### Voice mailbox number

(Menu 5.3.2)

You can input and set the voice mailbox number.

## Info service

Menu 5.4

Info service messages are text messages sent by the network to mobile phone users. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of information is associated with a number, which can be obtained from the network operator. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly. In standby mode, the following options are available when viewing info service messages.

### Receive

(Menu 5.4.1)

Use this to enable or disable the reception of broadcast messages.

## Inbox

(Menu 5.4.2)

The list of received broadcast messages can be searched and the contents viewed.

### Topics

**(Dependent to network and subscription)** (Menu 5.4.3)

To create new topics, press the left soft key [Option] then select **Add new**. If you already have topics, you can deactivate, edit, or delete them by using the left soft key [Options].

### Alert

(Menu 5.4.4)

Set alert on or off for a new broadcast message.

### Auto display

(Menu 5.4.5)

If you select this option **On**, all received broadcast messages will be automatically displayed.

### Languages

**(Dependent to network and subscription)** (Menu 5.4.6)

This option lets you select the preferred languages. Cell broadcast messages will be displayed in the selected language. If you use all languages supported by the phone, select **Automatic** at the end of the list.

## Templates

*Menu 5.5*

There are pre-defined messages in the list. You can view and edit the template messages or create new messages. Two types of templates are available: Text and Multimedia.

### Text

*(Menu 5.5.1)*

- **Please call me back.**
- **I'm late. I will be there at...**
- **Where are you now?**
- **I'm on the way.**
- **Top urgent. Please contact.**
- **I love you.**

The following options are available.

- ▶ **Edit:** Use this to write a new message or edit the selected template message from the text template list.
- ▶ **Delete:** Deletes the selected template message from the text template list.
- ▶ **Send via text message:** Use this to send the selected template message by SMS.
- ▶ **Send via multimedia message:** Use this to send the selected template message by MMS.
- ▶ **Add new:** Use this to create new template.

### Multimedia

*(Menu 5.5.2)*

- **Send:** Sends the multimedia template. Supports multiple numbers and email addresses.
- **Preview:** Displays the draft multimedia message.
- **Save:** Saves multimedia messages in draft form or as templates.
- **Delete:** Deletes the multimedia template.

- **Settings:** Sets the timer for slide, text, or to align the message contents right, left, top and bottom.
- **Add Slide:** Adds a slide before or after the current slide.
- **Remove Slide:** Deletes the highlighted slide.
- **Add Image:** Use this to add an image before or after the current image.
- **Add Sound:** Adds a sound before or after the current sound.

## Name card

*Menu 5.6*

This option helps you to make your own name card. Key in the name, mobile phone number, office number, Fax number, and E-mail address.

- ▶ **Edit:** Use this to write a new message or edit the selected name card.
- ▶ **Delete:** Use this to delete the selected name card.
- ▶ **Send via text message:** Use this to send the selected name card by SMS.
- ▶ **Send via multimedia message:** Sends the selected name card by MMS.

## Check memory

*Menu 5.7*


You can check the current memory status for SMS and MMS.

The G7050 has a built-in camera. It supports Zoom, Colour/Grey settings, and Multi burst functions.

## Take picture

Menu 6.1

Press the Menu key (  ) and select **Camera** → **Take picture**.

Or, press the camera key (  ) in standby mode.

1. Focus on the subject to capture, then press the [OK] key or the down side key.

**Note** In the preview mode, you can immediately go to My photos by pressing the left soft key [Photos].

2. 'Saved' is displayed below the captured image. The captured image is then automatically saved.

**Note** The remaining memory is shown in the bottom right of the image.

3. Press the [OK] key to continue taking pictures. Or press the right soft key [Delete] to delete the image.

### <Options before taking a picture>

You will see the following icons at the bottom of the preview screen.



1. **Zoom:** You can zoom in or out using up/down navigation keys.

2. **Color/Grey setting:** Select Colour or Grey mode by using the left/right navigation keys.

3. **OK:** Press the [OK] key to capture an image.

4. **Memory bar:** Shows the remaining memory. If there is insufficient memory, the image size is automatically reduced.

**Note** If the memory is full, 'Memory full' is displayed and you cannot take any more picture. Create space by deleting old images.

5. **OSD (On Screen Display):** Press the up side key to check the image size and the shot mode (still shot or multi shot). Press the up side key again to hide the display.

## Multi burst

Menu 6.2

Press the Menu key (  ) and select **Camera** → **Multi burst**.

You can take a series of pictures depending on the number of multi bursts and the image size you set in the **Settings** menu.

### <Options before taking multi bursts>

You will see the following icons at the bottom of the preview screen.



1. **Zoom:** You can zoom in or out using the up/down navigation keys.

2. **Colour/Grey settings:** Select Colour or Grey mode by using the left/right navigation keys.

3. **OK:** Press the [OK] key to capture a series of images.

4. **Memory bar:** Shows the remaining memory and the set number of multi bursts. If there is insufficient memory, the number of multi bursts will decrease.

**Note** If the memory is full, 'Memory full' is displayed and you cannot take any more picture. Create space by deleting old images.


## My photos

Menu 6.3

Press the Menu key (  ) and select **Camera** → **My photos**.

You can view, organise and send pictures saved in your phone.

1. Use the navigation keys to select the picture you want a full screen view of. You will see the name of the image on top of the LCD screen.

2. Press the [OK] key.
3. Press the left soft key [Options] to access the following submenus.
  - **Normal view/Grid view:** You can view the selected image.
  - **Delete:** Deletes the selected image.
  - **Send via MMS:** Sends MMS picture messages using the selected image. See page 60 about writing MMS message.
  - **Set as wallpaper:** Set the selected image as wallpaper.
  - **Slide show:** Plays back every image in succession, in order. To stop the slide show playback, press the  key.
  - **Rename:** You can change the title of the selected image.
  - **Delete all:** Deletes all images in your phone.
  - **Picture information:** You can check the title, size, date and time of the selected image.
4. To go back to the Camera menu, press the right soft key [Back].

## Settings

*Menu 6.4*

Press the Menu  key and select **Camera** → **Settings**.

You can set the following options.

▶ **Image size:** Select the desired image size to be captured.

❗ **Note** The larger the image size, the better the image quality. However, this will use more memory.

▶ **Multi burst:** Select the number of images to be captured in **Multi burst** mode.

❗ **Note** This will be limited by the remaining memory and the selected image size.

▶ **Shutter sound:** Select shutter sound on or off.

Java is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard Netscape or MS Internet Explorer browsers, Java MIDlet can be downloaded using the WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed within the Applications menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD and .JAR formats.

❗ **Note** The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.

❗ **Warning** Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment. The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.

## Applications

*Menu 7.1*

Application menu displays the list of Java programs downloaded using the WAP. All previous downloaded programs can be selected, deleted, or viewed in detail within the Application menu. From the list within the Application menu, the following options are available:

▶ **Open:** Open the selected program. The list includes all Java programs installed in the phone.

▶ **Delete:** Delete the selected program. Once deleted, you will not be able to restore the program unless it is downloaded again using the WAP.

▶ **Details:** Display detailed information on the selected program. This includes the program name, program size, program version, vendor information and the website address or the URL.

## Download

*Menu 7.2*

When a new Java program is downloaded using the WAP, the address from which a download takes place is known as a bookmark. The Java menu includes a bookmark list for downloading Java programs and this bookmark list can be viewed from the Download menu. You can connect, view, edit, delete, and add new bookmarks.

- ▶ **Connect:** Selected address in the bookmark is used for data connection. After successful connection, desired Java program can be downloaded from the list.
- ▶ **View:** Detailed information on a bookmark can be viewed such as the address of bookmark, name of profile, and user ID required for connecting to certain sites.
- ▶ **Edit:** Selected bookmark can be edited. Editing a bookmark is done in the order of URL → Title → Profile(Access Point) → User ID → Password. When creating a new bookmark, same order is followed. The service provider can require user ID and password information, but if none is provided, no input is necessary.
- ▶ **Delete:** Selected bookmark is deleted. All bookmarks can be deleted completely from the bookmark list screen. Deleted bookmark cannot be restored so caution is required when deleting bookmarks.
- ▶ **Add new:** New bookmark is added. The same order used during Edit bookmark applies to Add new bookmark. Select the Add new option from the bookmark menu or when no bookmark exists, then the Add new can be selected from the bookmark list screen.

- ❗ **Note** After selecting the Connect function to access the Java MIDlet Provider's server, you may choose one of many Java programs to download and install into your phone. Once connected to the server, the Go button can be pressed to view the JAD information on a desired program. The Get button will begin the download and install process. The download and install process will take place simultaneously and once download is complete you can immediately run the Java program. The installed Java program can be selected to run at a later time from the Application menu.

## View information

*Menu 7.3*

The downloaded programs using the WAP are stored in the phone memory. There is a maximum memory capacity in a phone and once you exceed this memory, you will not be able to store any more programs. The View Information menu allows you to check the available memory capacity in a phone.

### Memory Status


*(Menu 7.3.1)*

Displays maximum memory capacity and total available memory information.

### Java Version

*(Menu 7.3.2)*


Displays current Java version.

Press the Menu key (  ) and select **Internet** using navigation keys.


You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Please contact your network operator to open your Internet account. To use the Web Browser, you must indicate your phone number via the **Own number** menu option (See page 54 for further details.).

To launch the browser in standby mode, press and hold down the  key.

Once connected, the homepage is displayed. The content depends on the service provider.

You can access any website page by entering its URL address. To exit the browser at any time, press the  key. The phone will return to the standby mode.

## Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP browser menu.

## Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

up/down navigation keys

Scrolls each line of the content area

C key

Returns to the previous page

OK key

Selects options and confirms actions.

## Using the WAP browser menu

There are various menu options available when surfing the Wireless Web.

**Note** The WAP browser menus may vary, depending on your browser version.

### Home

*Menu 8.1*

Connect to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

### Bookmarks

*Menu 8.2*

Set the current page as a new bookmark or move an established bookmark.

Your phone may have some pre-installed bookmarks for sites not affiliated with LG. LG does not warrant or endorse these sites. If you choose to access them, you should use the same security or content precautions as you would with any site.

### E-mail server

- **Connect:** Connects to the E-mail server that you configured.
- **Edit address:** Edit the E-mail address.

## Push messages

*Menu 8.3*

### Inbox

*(Menu 8.3.1)*

You can order Push messages from WAP service providers. Push messages are notifications of, for example, news headlines and they can contain a text message or the address of a WAP service. For availability and subscription, contact your WAP service provider. Service providers can update an existing Push message every time a new Push message is received. Messages can be updated even if you have moved them to another folder. When Push messages expire, they are deleted automatically.

- **Information:** Shows the information of received push messages.
- **Load:** Connects to a specific site using the information in the received push message.
- **Delete:** Deletes the selected push message.

### Receive

*(Menu 8.3.2)*

You can choose whether or not you wish to receive push messages.

## Profiles

*Menu 8.4*

For more information, consult your network operator.

Each profile has submenus as follows:

- ▶ **Activate:** Activates the selected profile.
- ▶ **Settings:** Use this to edit and change WAP settings for the selected profile.
- ▶ **Rename:** You can change the selected profile's name.
- ▶ **Delete:** Deletes the selected profile from the list.
- ▶ **New profile:** You can add a new profile

**!** **Note** The changes using these options may affect the MMS function.

## Go to URL

*Menu 8.5*

You can connect directly to the site you want. To do this, you need to enter a specific URL.

## Cache settings

*Menu 8.6*

The information or services you have accessed are saved in the cache memory of the phone.

### Clear cache

*(Menu 8.6.1)*

Removes all context saved in cache.

### Cache check

*(Menu 8.6.2)*

Set a value whether a connection attempt is made through cache or not.

**!** **Note** A cache is a buffer memory, which is used to save data temporarily.

## Security certificates

*Menu 8.7*

A list of the available certificates is shown.

## Reset profiles

*Menu 8.8*

You can reset profiles to return to original settings.

## WAP information

*Menu 8.9*

The WAP browser version is displayed.

Press the Menu key (  ) and select **Settings** using navigation keys.

## Alarm clock

*Menu 9.1*

Set the alarm to ring at a specific time. In the **Alarm Clock** menu, the following options are available.

**On:** Set the alarm time.

1. Enter the menu.
2. Select [On] by the left/right navigation key.
3. Enter the alarm time using the numeric keys.
4. Using the left/right navigation keys, select one of the alarm options: Once, Daily, Weekly, and Monthly.
5. Alarm melody section: select the desired alarm melody using the left/right navigation keys.

**Off:** Deactivates the alarm.

## Date & Time

*Menu 9.2*

This option lets you change the current time and date displayed.

The following options are available.

### Set date

*(Menu 9.2.1)*

Use this to enter the day, month and year. You can change the date format via the **Date format** menu option.

### Date format

*(Menu 9.2.2)*

YYYY/MM/DD (year/month/day)

DD/MM/YYYY (day/month/year)

MM/DD/YYYY (month/day/year)

### Set time

*(Menu 9.2.3)*

Use this to enter the current time. You can choose the time format via the **Time format** menu option.

### Time format

*(Menu 9.2.4)*

24 hours

12 hours

## Phone settings

*Menu 9.3*

Many features of your phone can be customised to suit your preferences. All of these features are accessed via the **Phone settings** menu.

### Display settings

*(Menu 9.3.1)*

- ▶ **Wallpaper:** Use this to set up the display on the LCD screen in the standby mode.
- ▶ **Menu colour:** Your Phone provides you with 6 menu colour themes. Set the menu colour by scrolling and pressing the Select key.
- ▶ **Backlight:** Use this to select whether or not the phone uses the backlight. A small increase in standby/talk time can be achieved by turning the backlight off.

You set each backlight option for the keypad in the up/down position independently.

- ▶ **Contrast:** Adjust the contrast of the LCD screen using the left/right navigation keys.

### Languages

*(Menu 9.3.2)*

You can select the display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used. English will be set if the language on the SIM card is not supported by the phone.

## Call settings

Menu 9.4

To change the settings for call diverting.

### Call divert

(Menu 9.4.1)

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your network operator. Select one of the divert options, for example, select **If busy** to divert voice calls when your number is busy or when you reject incoming calls.

The following options are available.

**All voice calls:** Diverts all voice calls unconditionally.

**If busy:** Diverts voice calls when the phone is in use.

**If no reply:** Diverts voice calls which you do not answer.

**If out of reach:** Diverts voice calls when the phone is switched off or out of coverage.

**All data calls:** Diverts to a number with a PC connection unconditionally.

**All fax calls:** Diverts to a number with a fax connection unconditionally.

Each option has the following menu:



- ▶ **Activate:** Activates the corresponding service.
  - **To voice mail:** Forwards to message centre. This function does not apply to **All data calls** and **All fax calls** menus.
  - **To other number:** Input the number for call diverting.
  - **Favorite number:** You can check recent five diverted numbers.
- ▶ **Cancel:** Cancels the selected call divert.
- ▶ **View status:** You can check the status of the service.

**Cancel all:** Cancels all call divert settings.

### Answer mode

(Menu 9.4.2)

Select the desired mode to answer a call.

- ▶ **Slide down:** When the phone rings, you can answer a call simply by sliding down the keypad.
- ▶ **Any key:** When the phone rings, you can answer a call by pressing any key except the  key and the right soft key (  ).
- ▶ **Only send key:** You can answer a call only by pressing the send key.

### Send my number

(Menu 9.4.3)

This network service lets you decide whether your phone number is displayed (On) or hidden (Off) from the person you are calling. Select **Set by network** to reset the phone to the setting that you have agreed upon with your service provider.

### Call waiting (Network Service)

(Menu 9.4.4)

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **View status**, to check if the function is active or not.

### Minute minder

(Menu 9.4.5)

When set to On, the phone will beep every minute during an outgoing call to keep you informed of the length of the call.

### Voice dial

(Menu 9.4.6)

You can make a phone call by speaking a voice tag that has been added to a contact card. Any spoken word(s) can be a voice tag. Before using voice-activated dialling, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.

- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.
- When recording a voice tag or making a call by saying a voice tag, the loudspeaker is in use. Hold the phone at a short distance away from your mouth and face so that the proximity sensor does not turn the loudspeaker off.
- Very short names are not accepted. Use long enough names and avoid similar names for different numbers.

▶ **Automatic:** Use this to enter voice-activated dialling mode whenever you slide the keypad down.

▶ **Manual:** Use this to enter voice-activated dialling mode by holding the star[\*/voice]  key.

**!** **Note** You must say the name exactly as you said when you recorded it. This may be difficult, for example, in a noisy environment or during an emergency, so you should not rely solely upon voice-activated dialling in all circumstances.

## Auto redial *(Menu 9.4.7)*

Select **On**, and your phone will make a maximum of five attempts to connect the call after an unsuccessful call attempt.

## Phone line in use *(Menu 9.4.8)*

This function is only used if **Two-line service** is supported by the Service Provider. Two independent phone numbers are registered for the phone. This function provides you with the selection of the currently used phone number.

▶ **Line 1:** Select Line 1 as the current phone number.

▶ **Line 2:** Select Line 2 as the current phone number.

**!** **Note** If you select Line 2 in the area where alternative line service is not supported, you can't make a call.

## Closed user group *(Menu 9.4.9)*

This is a network service that specifies the group of people who you can call and who can call you. For more information, contact your network operator or service provider. If a group index is specified, it is used for all outgoing calls. If no group index is specified, the network will use the preferential index.

(A specific index is stored in the network.)

▶ **Preset:** Sets the selected CUG index.

▶ **On:** You can edit the CUG index and activate it.

▶ **Off:** Deletes the selected CUG.

## Security settings *Menu 9.5*

Various passwords are used to protect certain features of your phone. Refer to page 21-22 for the various passwords.

### PIN code request *(Menu 9.5.1)*

When the **PIN code request** feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

**!** **Note** Before disabling the PIN code request feature, you must enter your PIN.

The following options are available:

• **Enable:** You must enter the PIN each time the phone is switched on.

• **Disable:** The phone connects directly to the network when you switch it on.

## Phone lock

(Menu 9.5.2)

When the **Phone lock** feature is enabled, the phone is locked and you must enter the phone password each time the phone is switched on. The password is factory set to **0000**. To change the phone password, refer to the **Change codes – Security code** menu option [Menu 9.5.6.1]. Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available:

### 1 Power On

- ▶ **Enable:** You are required to enter the phone password when you switch the phone on.
- ▶ **Disable:** You do not need to enter the phone password when you switch the phone on.
- ▶ **If SIM changed:** Your phone will request security code only when you change your SIM card.

### 2 Once

- ▶ After entering the correct security code, the phone will lock after going into the idle state. If you want to disable this phone lock, you should enter the right security code after pressing the right soft key. If you power off in the phone lock state, when the phone is next powered on, the phone is in the lock state.

## Key lock

(Menu 9.5.3)

This function is only available in the status of the sliding keypad up.

### 1 Automatic

- ▶ After setting up the automatic mode, then phone is in lock state after 25 seconds in standby mode with the sliding keypad up.
- ▶ To deactivate key lock, you should press the left soft key [Unlock] plus star(\*) key or slide the keypad down.

### 2 Once

- ▶ Selecting **Once** puts the phone immediately in the lock state in standby mode with the sliding keypad up.
- ▶ To deactivate key lock, you should press the left soft key [Unlock] plus star(\*) key or slide the keypad down.

## Call barring service (Network dependent) (Menu 9.5.4)

Call barring lets you restrict the making and receiving of calls with your phone. For this function, you need the barring password, which you can obtain from your service provider.

The following options are available:

- ▶ **All outgoing:** No call can be made.
- ▶ **Outgoing international:** International calls cannot be made.
- ▶ **Outgoing international except home country:** When abroad, calls can be made only to numbers within the current country and to your home country, the country where your home network provider is located.
- ▶ **All incoming:** No call can be received.
- ▶ **Incoming when abroad:** Calls cannot be received when you are using your phone outside your home service area.
- ▶ **Cancel all barrings:** All call barring settings are deactivated; calls can be made and received normally.
- ▶ **Change password:** Use this to set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one. Once you have entered a new password, you are asked to confirm it by entering it again.

- ▶ **Note** To use **Call barring service**, you must input the network password. When calls are barred, calls may be possible to certain emergency numbers on some networks.

**Fixed dial number (FDN) (SIM dependent)** *(Menu 9.5.5)*

Use this to restrict your outgoing calls to selected phone numbers, if this function is supported by your SIM card. The PIN2 code is required.

The following options are available:

- ▶ **Activate:** Use this to only call phone numbers saved in the phonebook. You must enter your PIN2 code.
- ▶ **Cancel:** Allows you to call any number.
- ▶ **Number list:** Use this to view the numbers saved as fixed dial numbers.

**Note** Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

**Change codes** *(Menu 9.5.6)*

The **Change codes** feature lets you change your current password to a new one. You must enter the current password before you can specify a new one.

Use this to change the access codes: **Security code**, **PIN1 code**, **PIN2 code**

**Note** PIN: Personal Identification Number

**Network settings** *Menu 9.6*

The **Network settings** feature enables you to indicate whether the network used when roaming(outside your home area) is selected automatically, manually or preferably.

**Note** You can select a network other than your home network only if it has a valid roaming agreement with your home network.

**Automatic** *(Menu 9.6.1)*

Use this to set the phone to automatically search for and select one of the cellular networks available in your area. The phone will default back to **Automatic** if it is switched off.

**Manual** *(Menu 9.6.2)*

If you want to select the desired network manually from a list of network. If the connection to the manually selected network is lost, the phone will sound an error tone and ask you to select a network again. The selected network must have a roaming agreement with your home network, that is, the operator whose SIM card is in your phone. The phone will let you select another network if the phone fails to access the selected network. If you switch off the phone, the phone will be reset to **Automatic**.

**Preferred** *(Menu 9.6.3)*

You can set a list of preferred networks the handset should attempt to register with first, before attempting to register to any other networks. This list is created from the handset's predefined list of known networks.

**GPRS settings** *Menu 9.7*

GPRS(General Packet Radio Service) is a technology that allows mobile phones to be used for sending and receiving data over the mobile network. GPRS is a data bearer that enables wireless access to data network such as the Internet.

Before you can use GPRS technology

- You need to subscribe to the GPRS service.  
For availability and subscription to GPRS service, contact your network operator or service provider.
- You need to save the GPRS settings for the applications used over GPRS.

## GPRS attach

*(Menu 9.7.1)*

If you select **Power on** and you are in a network that supports GPRS, the phone registers to the GPRS network and sending short messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker. If you select **When needed**, the phone will use a GPRS connection only if you start an application or action that needs it. The GPRS connection is closed after it is no longer required by any application.

- !** **Note** If there is no GPRS coverage and you have chosen Automatic, the phone will periodically try to establish a connection.

## External device

*(Menu 9.7.2)*

When you use Internet via GPRS by using external device, you can set the following six profiles: **Rename**, **APN**, **IP address**, **DNS**, **User ID**, and **Password**.

## Reset settings

*Menu 9.8*

You can reset your phone to its default configuration. To do so, proceed, as follows.

1. Select the **Reset settings** menu option.
2. Enter the 4-digit security code.

- !** **Note** The security code is preset to 0000. To change this, refer to page 86.

# SIM service

Your service provider can offer special application through SIM card, such as home banking, stock market, etc. If you are registered for one of these services, the service name will appear at the end of the main menu. With the SIM service menu, your phone is future-proof and will support additions to your service provider's service. For further information, contact your service provider.

Please check to see if any problem which you may have with your phone is described here before taking it for service or calling a service engineer.

**Q** How do I view the list of outgoing calls, incoming calls and missed calls?

**A** Press .


**Q** How do I clear all call history?

**A** Press the left soft key and then   .

**Q** How do I view all numbers saved in the memory?

**A** Press the right soft key and then .

**Q**  does not disappear from the screen.

**A** Check whether you are in a service area. If you continue to see , turn off the power and wait for approximately 2 minutes before turning it back on. If there is no change, relocate to another area and check again.

**Q** Connection is poor or is not audible in certain areas.

**A** In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

**Q** Connection is poor even when established.

**A** In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

**Q** LCD does not turn on.

**A** Remove and replace the battery and turn on the power. If the phone still does not turn on, charge the battery and try again.

**Q** An echo can be heard during connection with a certain telephone in a certain area.

**A** It is called 'Echo Phenomenon'. It occurs if the volume is too high or caused by special properties (semi electronic telephone exchange) of the machine on the other end.

**Q** The phone gets warm.

**A** During long calls, or if games/Internet are used for a long time, the phone may become hot. This is perfectly normal and has no effect upon the life of the product or performance.

**Q** The bell does not ring, or lamp or LCD blinks only.

**A** The phone is set to 'Vibrate' or 'Silent' in the Profiles menu. Please select 'General' or 'Loud'

**Q** Standby duration of the phone gradually becomes shorter.

**A** Batteries have a limited life. When the battery lasts for half its original time, it requires replacement. Only use authorised replacement parts.

**Q** Usage time of battery becomes shorter.

**A** If the battery time is short, it may be due to the user environment, or large volume of calls, or weak signals.

**Q** No number is dialled when you recall a phonebook entry.

**A** Check that the numbers have been saved correctly, by using the phonebook Search feature. Resave them, if necessary.

**Q** You cannot be contacted.

**A** Is your phone switched on (  pressed for more than three seconds)? Are you accessing the right cellular network? Have you set an incoming call barring option?

**Q** I cannot find the lock, PIN, or PUK code, or password?

**A** The default lock code is '0000'. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.

There are a variety of accessories available for your mobile phone. You can select these according to your personal communication requirements. Consult your local dealer for availability.

### Supplied adapter

This adapter lets you charge the while at home or in the office.



 
### Battery

Standard battery is available.




### Cigarette lighter adapter

Operate the phone and trickle charge the phone's battery from your vehicle.




### Headset

 Allows hands-free operation. Includes earpiece and microphone.



### Data cable kit

 Connects your phone to a PC.



- ! Note**
- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
  - Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.

# Technical data

## General

---

**Product name** : G7050

**System** : GSM900 / DCS1800

## Ambient temperatures

---

**Max** : +55°C

**Min** : -10°C

# Declaration of Conformity



This model complies with the essential requirements of Article 3 of the R&TTE 1999/5/EC Directive, if used for its intended use.

1. Health (Article 3.1.a of the R&TTE Directive)
2. Safety (Article 3.1.a of the R&TTE Directive)
3. Electromagnetic compatibility (Article 3.1.b of the R&TTE Directive)
4. Efficient use of the radio frequency spectrum (Article 3.2 of the R&TTE Directive)

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned articles of the directive.

if available, write the contact person(s)

Mr. Jin Seog, Kim  
LG Amsterdam Branch Office  
Capronilaan 6, 1119 NR Schiphol-rijk,  
The Netherlands  
(Tel.) +31-20-655 7774

Mr. Ji Jong, Jaon  
LG Electronics Inc. GSM Division  
Emerald BD, 1042 Hogye-Dong, Dongan-Gu  
Anyang-city, Kyuonki-Do  
431-080, Korea

# CE 0168







