



Colour Television

OWNER'S MANUAL

Please read this manual carefully before operating your set.
Retain it for future reference.
Record model number and serial number of the set.
See the label attached on the back cover and quote this
information to your dealer when you require service.

Model number :
Serial number :

P/NO : 3828VA0 (C023D, 124B TX)

Contents

Installation	3
Location and function of controls	4
Remote control handset	
Battery installation	
Front panel / Side panel	
Basic operation	7
On and off / Programme selection	
Volume adjustment / Quick view	
Mute function / Auto Demonstration	
TV Swivel function (option)	
On screen language selection (option)	
On screen menus	8
Menu selection	
Setting up TV stations	9
Auto programme tuning	
Manual programme tuning	
Fine Tuning / Programme edit	
Favorite programme	
Calling the programme table	
Picture adjustment	14
PSM (Picture Status Memory)	
Picture adjustment / Eye (option)	
Turbo picture selection (option)	
Sound adjustment (option)	16
SSM (Sound Status Memory)	
AVL (Auto Volume Leveler) (option)	
Adjusting Sound Control (User option)	
Turbo sound selection (option)	
Sound output selection	
Stereo/Dual reception (option)	
NICAM reception (option)	
Other functions	19
TV and AV modes	
Child lock / Auto sleep	
Blue back (option)	
Sleep timer	
Timer (option)	21
Setting the clock	
Setting the On/Off timer	
Connection of external equipment	22
Aerial socket	
Audio-L/R(or Audio)/Video in/out sockets (option)	
Component in sockets (option)	
Headphone socket (option)	
Troubleshooting check list	Back cover

Installation

Power

This set operates on an AC mains supply, the voltage is as indicated on the label on the back cover. Never apply DC power to the set. In the event of thunderstorms or powercuts, please pull out the aerial and mains plugs.

Warning

To prevent fire or shock hazard, do not expose the set to rain or moisture.

Service

Never remove the back cover of the set as this can expose you to very high voltage and other hazards. If the set does not operate properly, unplug it and call your dealer.

Aerial

Connect the aerial cable to the socket marked $75\ \Omega$ on the back cover. For the best reception an outdoor aerial should be used.

Location

Position your set so that no bright light or sunlight falls directly onto the screen. Care should be taken not to expose the set to any unnecessary vibration, moisture, dust or heat. Also ensure that the set is placed in a position to allow a free flow of air. Do not cover the ventilation openings on the back cover.

 
Do not place anything containing liquid on top of the set, this may cause a fire or could give an electric shock.

Location and function of controls

All the functions can be controlled with the remote control handset. Some functions can also be adjusted with the buttons on the front panel of the set.

Remote control handset

Before you use the remote control handset, please install the batteries. See the next page.

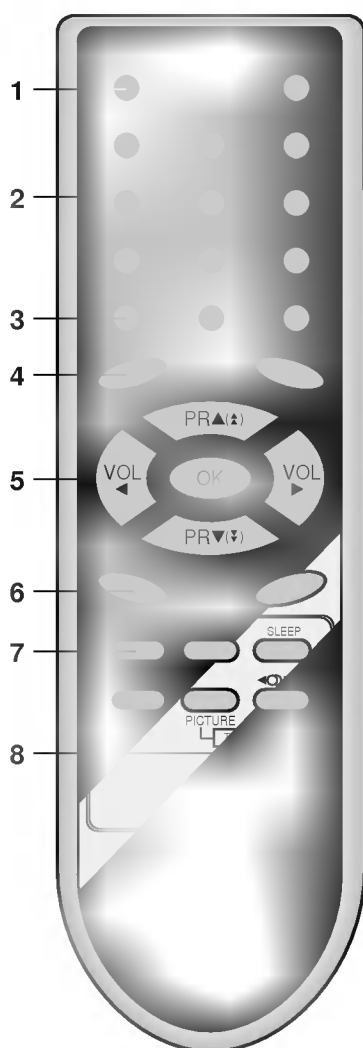

1. **POWER**
switches the set on from standby or off to standby.
2. **NUMBER BUTTONS**
switches the set on from standby or directly select a number.
3. **MENU**
selects a menu.
4. **EYE/★ (option)**
switches the eye function on or off.
5. **▲ (▲) / ▼ (▼) (Programme Up/Down)**
selects a programme or a menu item.
switches the set on from standby.
scans programmes automatically.
◀ / ▶ (Volume Up/Down)
adjusts the volume.
adjusts menu settings.
OK
accepts your selection or displays the current mode.
6. **Q.VIEW**
returns to the previously viewed programme.
selects a favorite programme.
7. **PSM (Picture Status Memory)**
recalls your preferred picture setting.
8. **TURBO PICTURE / SOUND BUTTON (option)**
selects Turbo picture and sound.

 
Location and function of controls

- 9. MUTE**
switches the sound on or off.
- 10. TV/AV**
selects TV or AV mode.
clears the menu from the screen.
switches the set on from standby.
- 11. I/II/★ (option)**
selects the language during dual language broadcast. (option)
selects the sound output.
- 12. LIST**
displays the programme table.
- 13. SLEEP**
sets the sleep timer.
- 14. SSM/★ (option) (Sound Status Memory)**
recalls your preferred sound setting.
- 15. SURROUND (◀▶/★) (option)**
selects surround sound.


★ : No function

Battery installation

The remote control handset is powered by two AAA type batteries. To load the batteries, turn the remote control handset over and open the battery compartment. Install two batteries as indicated by the polarity symbols (⊕ and ⊖) marked inside the compartment.

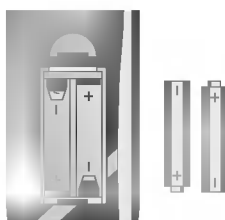

 
Note : To avoid damage from possible battery leakage, remove the batteries if you do not plan to use the remote control handset for an extended period of time.

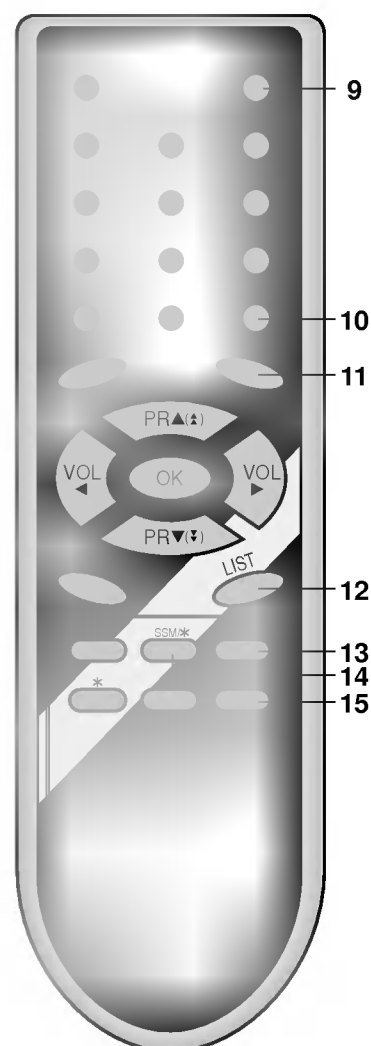


Location and function of controls

Front panel

 
RD-20/21CC60 series

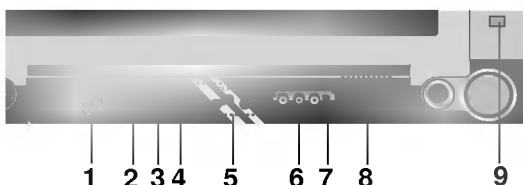

RD-21FB20 series

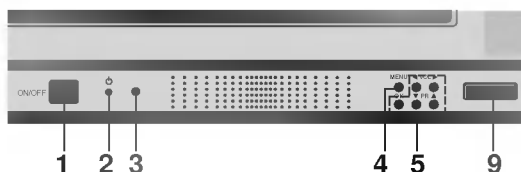 


RD-15/21FB50 series

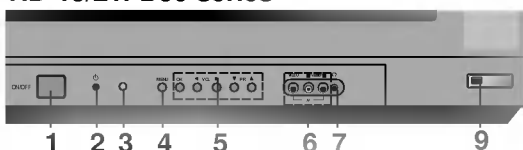 

RD-14CA80 series



 
RD-21FB30 series

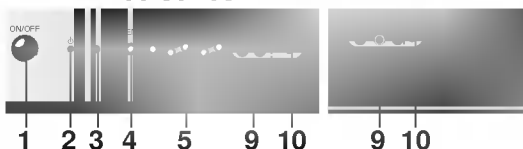


RD-21FA30/31/32 series



 RD-15Q90/91/92 series

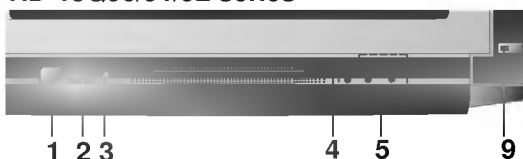

RD-17/21FB70 series

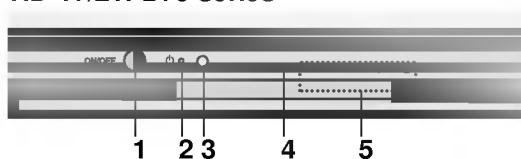 

1. **MAIN POWER (ON/OFF)**
switches the set on or off.
2. **POWER/STANDBY INDICATOR**
illuminates brightly when the set is in standby mode.
dims when the set is switched on.
3. **REMOTE CONTROL SENSOR**
4. **MENU**
selects a menu.
5. **OK**
accepts your selection or displays the current mode.
◀ / ▶ (Volume Up/Down)
adjusts the volume.
adjusts menu settings.
▲ / ▼ (Programme Up/Down)
selects a programme or a menu item.
switches the set on from standby.
6. **AUDIO - L/R (or AUDIO) / VIDEO IN SOCKETS (AV) (option)**
Connect the audio/video out sockets of external equipment to these sockets.
7. **HEADPHONE SOCKET (option)**
Connect the headphone plug to this socket.
8. **TURBO SOUND / PICTURE (option)**
switches Turbo sound or Turbo picture function on or off.
9. **EYE (option)**
adjusts picture according to the surrounding conditions.

Basic operation

On and off

1. Press the main power button to switch the set on.
2. If the set is in standby mode, press the **POWER**, **▲ / ▼**, **TV/AV** or **NUMBER** buttons on the remote control handset to switch it on fully.
3. Press the **POWER** button on the remote control handset.
The set reverts to standby mode.
4. Press the main power button again to switch the set off.

Note : If, while the set is switched on, the mains plug is disconnected the set will switch to standby or power on when the mains plug is replaced in the mains power socket.

Programme selection

You can select a programme number with the **▲ / ▼** or **NUMBER** buttons.

Volume adjustment

Press the **◀ / ▶** button to adjust the volume.

Quick view

Press the **Q.VIEW** button to view the last programme you were watching.

Note : This function works only when **FAVORITE CH.** is set to **OFF**. Otherwise each press of this button will select a stored favorite programme.

Mute function

Press the **MUTE** button. The sound is switched off and the display  appears.

You can cancel it by pressing the **MUTE**, **◀ / ▶**, **SSM/★**, **I/II/★**, **◀▶/★** or **TURBO SOUND** button.

Auto Demonstration

To review all the menus programmed in the set, press the **OK** button of the front panel control for about 5 seconds. To stop auto demonstration, press any button of the front panel control and **POWER** button of the remote control.

TV Swivel function (option)

 
In some models, you can manually turn TV set at left or right direction by 15 or 20 degrees, so that the watching degree is suitable for your position.

Note : Swivel panel is fixed in the hole at the swivel panel on the back of the set by small bar(Swivel fixer). To operate this function, pull it out.

On screen language selection (option)

The menu can be displayed on the screen in desired language. First select your language.

1. Press the **MENU** button to select the Station menu.
2. Press the **▶** button and then **▲ / ▼** button to select **LANGUAGE**.
3. Press the **▶** button and then **▲ / ▼** button to select your desired language.
All the on screen displays will appear in the selected language.
Press the **OK** or **◀** button to select the station menu.
4. Press the **TV/AV** button to return to normal TV viewing.

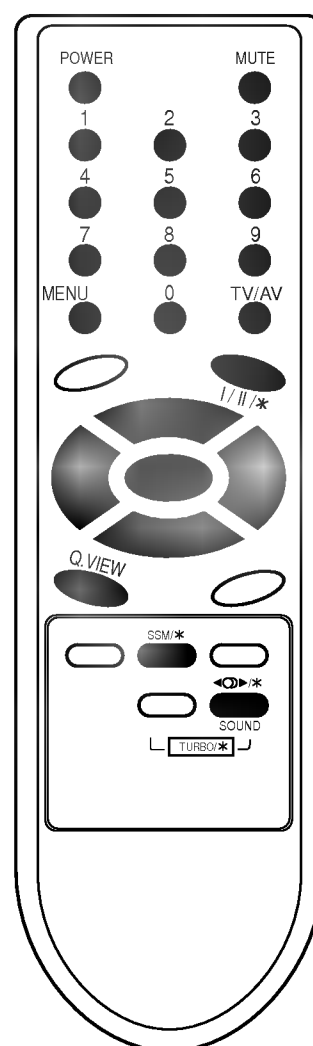

On screen menus

The dialogue between you and your set takes place on screen with an operator menu. The buttons required for the operating steps are also displayed.

 
 
Menu selection

1. Press the **MENU** button and then **▲** / **▼** button to display each menu.
2. Press the **▶** button and then **▲** / **▼** button to select a menu item.
3. Press the **▶** button to display the sub menu or the pull-down menu.
4. Change the setting of an item in the sub or pull-down menu with **◀** / **▶** or **▲** / **▼**.

You can move to the higher level menu by pressing the **OK** or **◀** button and to move to the lower level menu by pressing the **▶** button.

Note :

- a. In the AV mode, the Station menu is not displayed.
- b. In the teletext mode, menus are not displayed.
- c. In mono models, the Sound menu does not appear.
- d. In some models, the **SSM**, **AVL**, **WOOFER**, **TREBLE** or **BASS** will not display.

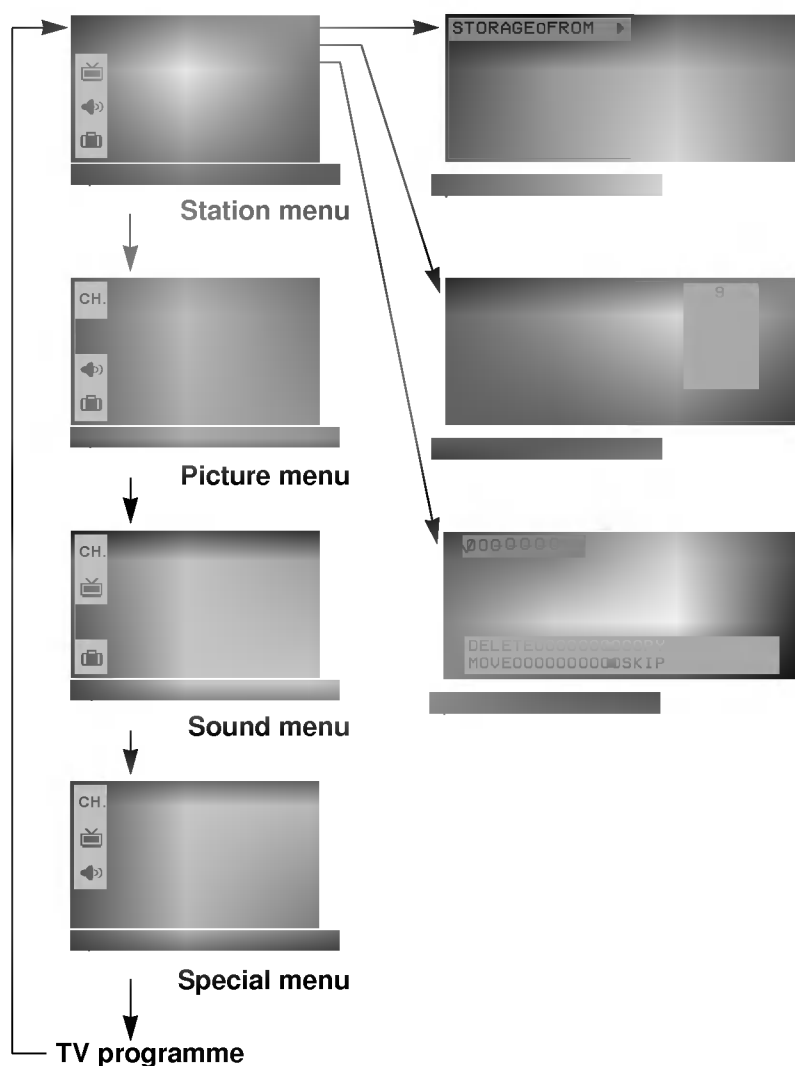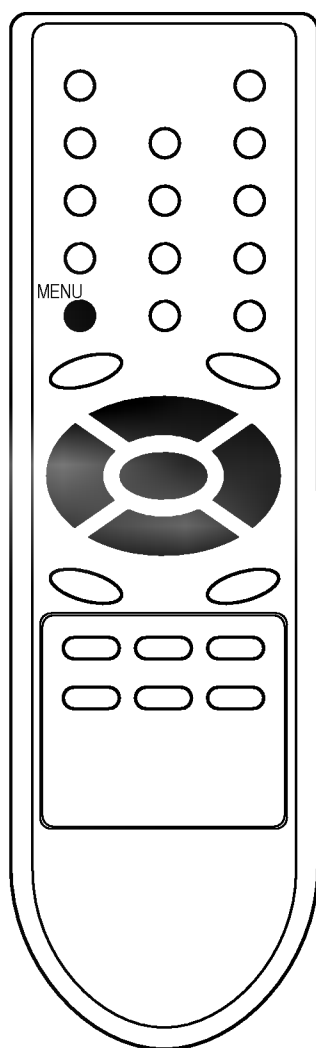

Setting up TV stations

Up to 100 TV stations can be stored by programme numbers (0 to 99). Once you have preset the stations, you will be able to use the ▲ / ▼ or NUMBER buttons to scan the stations you programmed. Stations can be tuned using automatic or manual modes.



Station Menu

Auto programme tuning

All stations that can be received are stored by this method. It is recommended that you use auto programme during installation of this set.

1. Press the **MENU** button and then ▲ / ▼ button to select the Station menu.
2. Press the ► button and then ▲ / ▼ button to select **AUTO PROGRAM**.
3. Press the ► button to display the **AUTO PROGRAM** menu.
4. Press the ► button.
5. Press the ▲ / ▼ button to select **STORAGE FROM**.

 


6. Press the ► button. Select the beginning programme number with the ◀ / ▶ button or NUMBER buttons on the **STORAGE FROM** pull-down menu. Any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.
8. Press the **OK** button.
9. Press the ▲ / ▼ button to select **NORMAL** or **TURBO**.


Option: In some models, you can only select **START**.

Note :

- a. **TURBO** is further faster than **NORMAL** and in some models, these searches will automatically store all receivable stations.
 - b. If the programmed station has poor quality sound, select the system again in the **MANUAL PROG.** menu.
10. Press the ► button to begin auto programming. All receivable stations are stored.

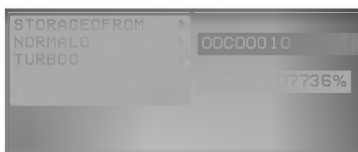


(Normal search)

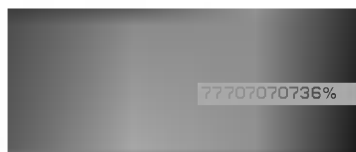 

(Turbo search)


To stop auto programming, press the **MENU** button. When auto programming is completed, the **PROG. EDIT** menu appears on the screen. See the 'Programme edit' section to edit the stored programme.

 11. Press the **TV/AV** button to return to normal TV viewing.

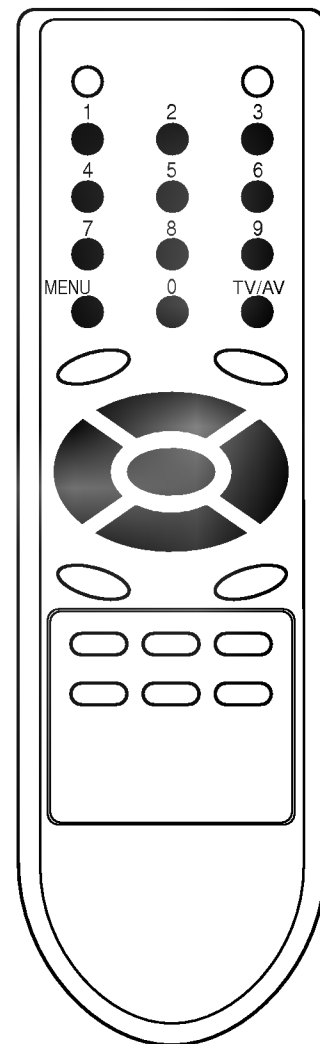

Setting up TV stations

 Station Menu ^{1.}

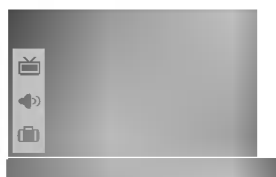

Auto programme scan


To automatically scan the pictures of stored programmes, press the **▲** (▲) or **▼** (▼) button for about 3 seconds. The picture of stored programmes appears on the screen one by one.

To stop auto programme scanning, press any button except VCR buttons.

Manual programme tuning

Manual programme lets you manually tune and arrange the stations in whatever order you desire. Also you can assign a station name with five characters to each programme number.

 
1. Press the **MENU** button and then **▲** / **▼** button to select the Station menu.
2. Press the **▶** button and then **▲** / **▼** button to select **MANUAL PROG.**
3. Press the **▶** button to display the **MANUAL PROG.** menu.

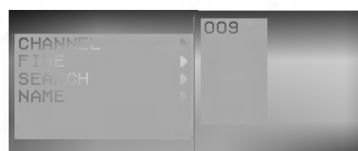

4. Press the **▲** / **▼** button to select **PR.**
5. Press the **▶** button to select the programme number. Select the desired programme number (0 to 99) with the **◀** / **▶** button or **NUMBER** buttons on the **PR.** pull-down menu. Any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.
6. Press the **OK** button.
7. Press the **▲** / **▼** button to select **CHANNEL**.
8. Press the **▶** button. Press the **▲** / **▼** button to select **V/UHF** or **CABLE** on the **CHANNEL** pull-down menu. If possible, select the channel number directly with the number buttons. Any number under 10 is entered with a numeric '0' (or '00') in front of it, i.e. '05' (or '005') for 5.
9. Press the **OK** or **◀** button.
10. Press the **▲** / **▼** button to select **SEARCH**.
11. Press the **▶** button. Press the **◀** / **▶** button to commence searching on the **SEARCH** pull-down menu. If a station is found the search will stop.



 12. To store another station, repeat steps 4 to 11.
13. Press the **TV/AV** button to return to normal TV viewing.

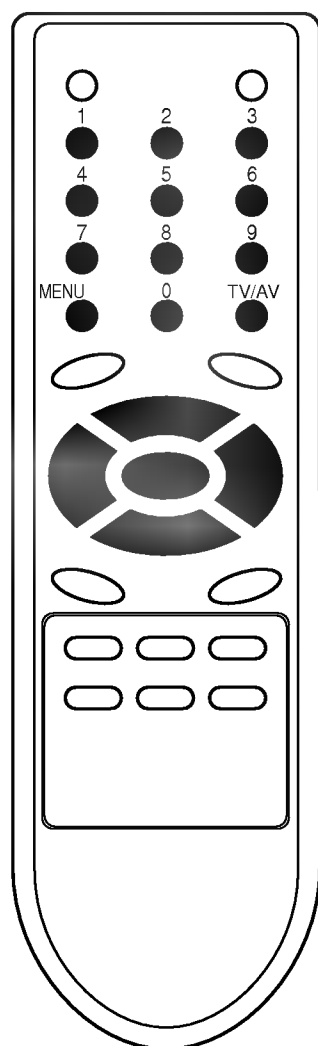

Setting up TV stations

Assigning a station name

1. Repeat the 'Manual programme tuning' steps 1 to 3.
2. Press the ▲ / ▼ button to select **NAME**.
3. Press the ► button on the **NAME** pull-down menu.
4. Press the ▲ button. You can use a blank, +, -, the numeric 0 to 9 and the alphabet A to Z.
With the ▼ button you can select in the opposite direction.
5. Select the next position by pressing the ◀ / ▶ button and then take your choice of the second character, and so on.
6. Press the **OK** button.
7. Press the **TV/AV** button to return to normal TV viewing.



 
Fine tuning

Normally fine tuning is only necessary if reception is poor.

1. Repeat the 'Manual programme tuning' steps 1 to 3.
2. Press the ▲ / ▼ button to select **FINE**.
3. Press the ► button.
4. Press the ◀ / ▶ button to fine tune for the best picture and sound on the **FINE** pull-down menu.



5. Press the **OK** button.
6. Press the **TV/AV** button to return to normal TV viewing.
The finely tuned programme will be indicated by a gray number during programme selection.

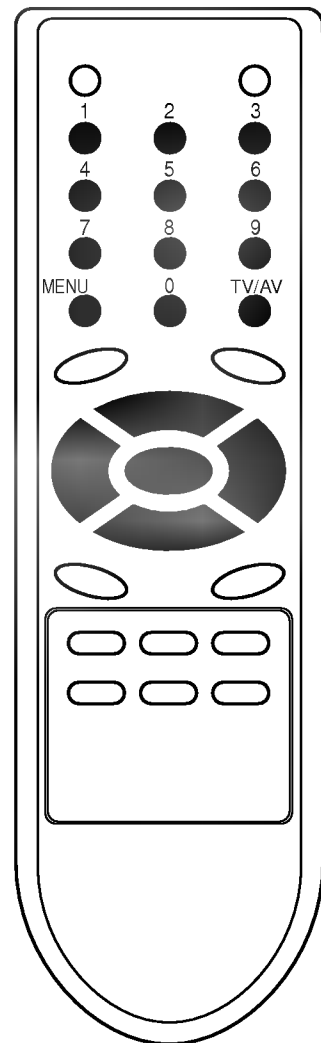

Setting up TV stations

 
Station Menu



Programme edit

This function enables you to delete or skip the stored programmes. Also you can move some stations to other programme numbers or insert a blank station data into the selected programme number.

1. Press the **MENU** button and then **▲ / ▼** button to select the Station menu.
2. Press the **►** button and then **▲ / ▼** button to select **PROG. EDIT**.
3. Press the **►** button to display the **PROG. EDIT** menu.

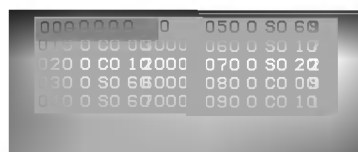

Deleting a programme

1. Select a programme to be deleted with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **RED** button twice.
The selected programme is deleted, all the following programmes are shifted up one position.



Copying a programme

1. Select a programme to be copied with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **GREEN** button.
All the following programmes are shifted down one position.

Moving a programme

 
1. Select a programme to be moved with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **YELLOW** button.
3. Move the programme to the desired programme number with the **▲ / ▼** or **◀ / ▶** button.
4. Press the **YELLOW** button again to release this function.

Skipping a programme number

1. Select a programme number to be skipped with the **▲ / ▼** or **◀ / ▶** button.
2. Press the **BLUE** button. The skipped programme turns to blue.
3. Press the **BLUE** button again to release the skipped programme.

When a programme number is skipped it means that you will be unable to select it using the **▲ / ▼** button during normal TV viewing. If you want to select the skipped programme, directly enter the programme number with the **NUMBER** buttons or select it in the programme edit or table menu.

Press the **TV/AV** button to return to normal TV viewing.

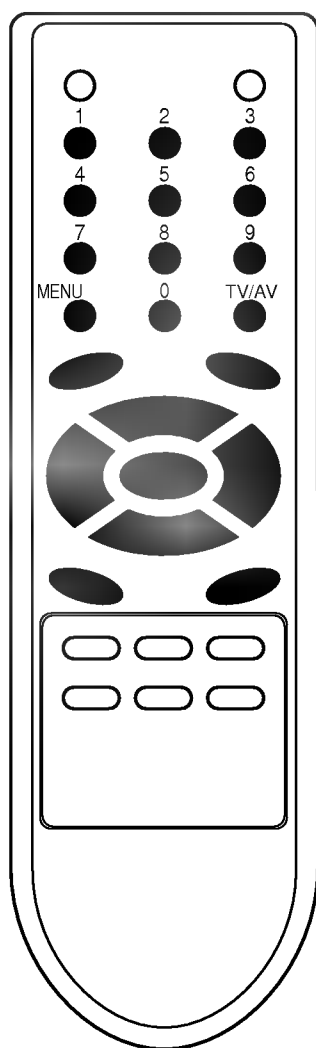

Setting up TV stations

Favorite programme

This function lets you select your favorite programmes directly.

1. Press the **MENU** button and then **▲ / ▼** button to select the Station menu.
2. Press the **►** button and then **▲ / ▼** button to select **FAVORITE CH.**
3. Press the **►** button to display the **FAVORITE CH.** menu.



4. Press the **▲ / ▼** button to select -- ----.
5. Select a desired programme with the **◀ / ▶** button or **NUMBER** buttons. Any number under 10 is entered with a numeric '0' in front of it, i.e. '05' for 5.
6. To store another programme, repeat steps 4 to 5. You can store up to 5 programmes.
7. Press the **OK** button.
8. Press the **TV/AV** button to return to normal TV viewing.

Repeatedly press the **Q.VIEW** button to select stored favorite programmes.

Note : This function doesn't work when **FAVORITE CH.** is set to **OFF**.

Calling the programme table

You can check the programmes stored in the memory by displaying the programme table.

Displaying programme table

Press the **LIST** button to display the **Programme table** menu.

The programme table appears on the screen. One programme table contains ten programmes as below.



Note :

- a. You may find some blue programmes. They have been set up to be skipped by auto programming or in the programme edit mode.
- b. Some programmes with the channel number shown in the programme table indicate there is no station name assigned.

Selecting a programme in the programme table

Select a programme with the **▲ / ▼** or **◀ / ▶** button.

Then press the **OK** button.

The set switches to the chosen programme number.

Paging through a programme table

There are 10 programme table pages in which contain 100 programmes.

 
Pressing the **▲ / ▼** or **◀ / ▶** button repeatedly turns the pages.

Press the **TV/AV** button to return to normal TV viewing.



Picture adjustment

Picture Menu

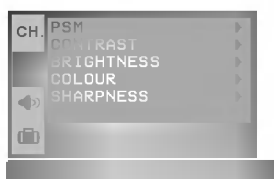


PSM (Picture Status Memory)

1. Press the **MENU** button and then **▲ / ▼** button to select the Picture menu.
2. Press the **▶** button and then **▲ / ▼** button to select **PSM**.
3. Press the **▶** button and then **▲ / ▼** button to select a picture setting on the **PSM** pull-down menu.



4. Press the **OK** or **◀** button.
5. Press the **TV/AV** button to return to normal TV viewing.

 
You can also recall a desired picture (**DYNAMIC**, **STANDARD**, **MILD**, **GAME** or **USER**) with **PSM** button on the remote control. The picture **DYNAMIC**, **STANDARD**, **MILD** and **GAME** are programmed for good picture reproduction at the factory and cannot be changed.

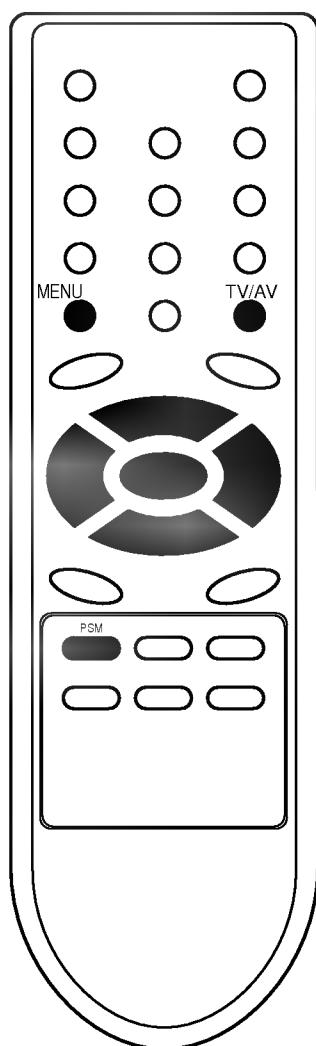

Picture adjustment

You can adjust picture contrast, brightness, colour intensity, sharpness and tint (NTSC AV only) to the levels you prefer.

 1. Press the **MENU** button and then **▲ / ▼** button to select the Picture menu.
2. Press the **▶** button and then **▲ / ▼** button to select **CONTRAST**, **BRIGHTNESS**, **COLOUR** or **SHARPNESS**.

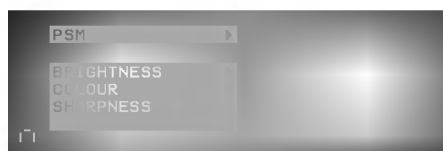

3. Press the **▶** button and then **◀ / ▶** button to make appropriate adjustments on the each sub menu.



 
4. Press the **OK** button to store it for the picture user.
5. Press the **TV/AV** button to return to normal TV viewing.

Picture adjustment

Eye (option)

On some models, the set will automatically adjust the picture according to the surrounding conditions. This will enable you to enjoy the most suitable picture according to the surroundings.

Press the **EYE/★** button to switch the eye function on or off.

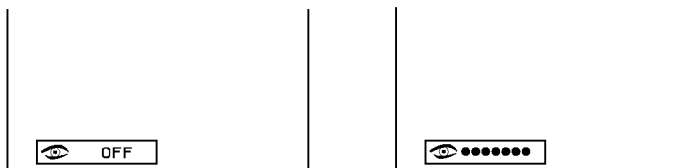

When the eye function is on, the most suitable picture is automatically adjusted according to the surrounding conditions.

 
At this time the display **•••••** in green does not appear continuously but the display **•••••** in yellow appears each time the picture condition changes.

Note : If you press the **PSM** or **TURBO PICTURE** button with the eye function, the eye function is automatically switched off.

Turbo picture selection (option)

When this function is on, the picture will be more brilliant and distinct picture than normal picture. You can enjoy the Turbo picture so much better than normal picture.


Repeatedly press the **TURBO PICTURE** button to switch on or off.

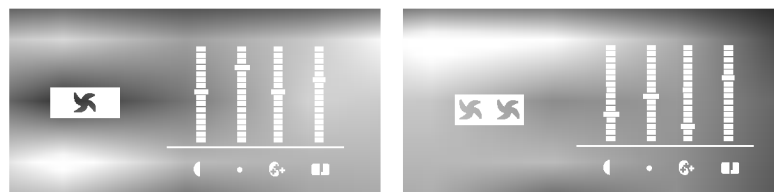

(Turbo Picture off)


(Turbo Picture on)

 Note : If you press the **PSM** or **EYE/★** button with the Turbo picture function, the Turbo picture function is automatically switched off.

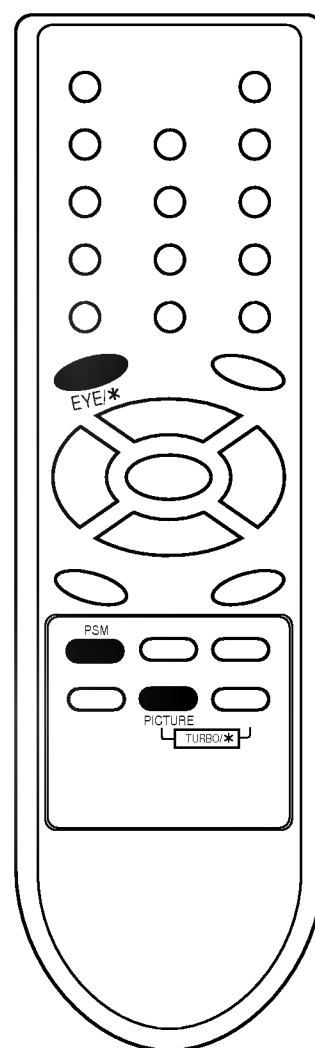

Sound adjustment (option)

 
Sound Menu

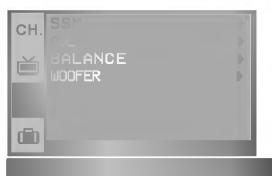

SSM (Sound Status Memory) (option)


You can select your preferred sound setting; Flat, Music, Movie or Speech and you can also adjust the sound frequency of equalizer.

 1. Press the **MENU** button and then **▲ / ▼** button to select the Sound menu.
2. Press the **▶** button and then **▲ / ▼** button to select **SSM**.
3. Press the **▶** button and then **▲ / ▼** button to select a sound setting on the **SSM** pull-down menu.

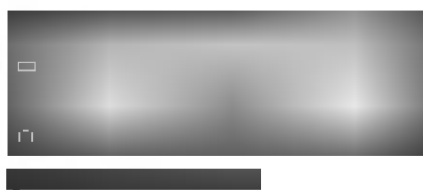

Sound Frequency Adjustment

 - a. Press the **▶** button in **USER** to display the **USER** sub menu.




- b. Select a sound band by pressing the **◀ / ▶** button.
- c. Make appropriate sound level with the **▲ / ▼** button.
- d. Press the **OK** button to store it for the sound **USER**.

Press the **TV/AV** button to return to normal TV viewing.

You can also recall a desired sound (**FLAT**, **MUSIC**, **MOVIE**, **SPEECH** or **USER**) with **SSM/★** button on the remote control. The sound **FLAT**, **MUSIC**, **MOVIE** and **SPEECH** are programmed for good sound reproduction at the factory and cannot be changed.

 Note : If you press the **SSM/★** button after making appropriate adjustment on the **USER** sub menu, the display **USER** automatically appears even though you have already set a factory preset setting; **FLAT**, **MUSIC**, **MOVIE** or **SPEECH**.

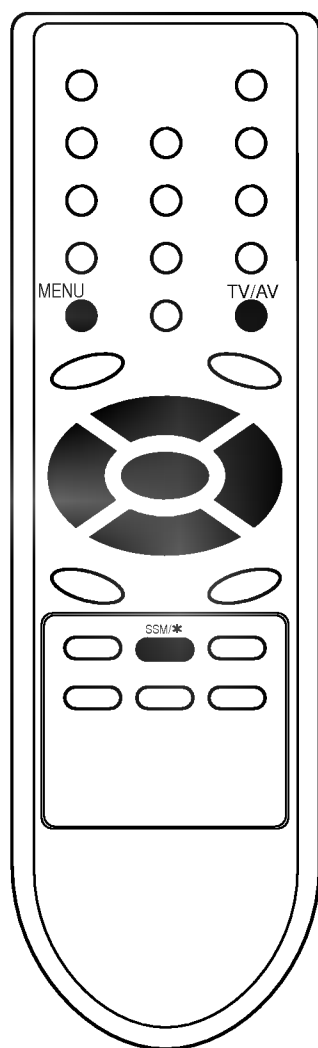

Sound adjustment (option)

AVL (Auto Volume Leveler) (option)

 
This feature maintains an equal volume level; even if you change channels.

1. Press the **MENU** button and then use **▲** / **▼** button to select the **SOUND** menu.
2. Press the **▶** button and then use **▲** / **▼** button to select **AVL**.
3. Press the **▶** button and then use **▲** / **▼** button to select **ON** or **OFF**.
4. Press the **TV/AV** button to return to normal TV viewing.



Adjusting Sound Control (User option)

1. Press the **MENU** button and then **▲** / **▼** button to select the Sound menu.
2. Press the **▶** button and then **▲** / **▼** button to select the desired sound item; **BALANCE**, **WOOFER**, **TREBLE** or **BASS**.
3. Press the **▶** button and then use **◀** / **▶** button to make appropriate adjustments.

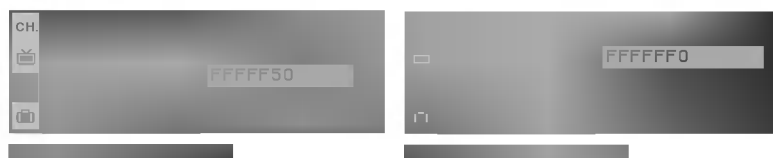

4. Press the **TV/AV** button to return to normal TV viewing.

 
Turbo sound selection (option)

When this function is on, the sound will be more emphasized and amplified sound than normal sound. You can enjoy the Turbo Sound so much better than normal Sound.

Repeatedly press the **TURBO SOUND** button to switch on or off.



(Turbo Sound off)



(Turbo Sound on)

Sound output selection (option)

 
In AV mode, you can select output sound for the left and right loudspeakers.

Repeatedly press the **I/II/★** button to select the sound output.

L+R : Audio signal from audio L input is sent to left loud-speaker and audio signal from audio R input is sent to right loud-speaker.

L+L : Audio signal from audio L input is sent to left and right loud-speakers.

R+R : Audio signal from audio R input is sent to left and right loud-speakers.

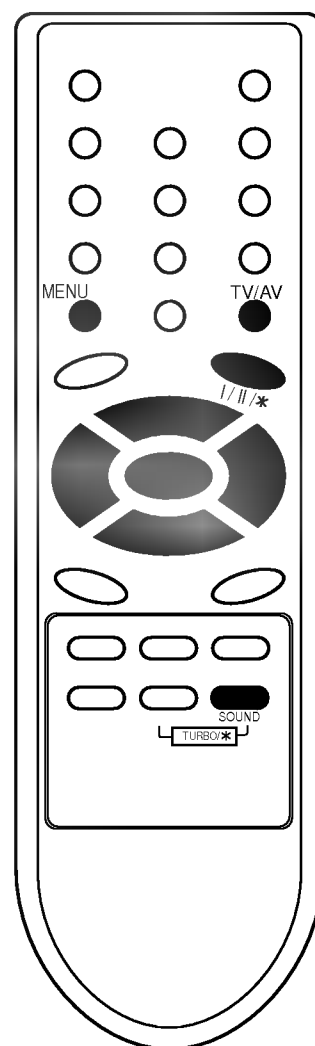


Sound adjustment (option)

Stereo/Dual reception (option)

When a programme is selected, the sound information for the station appears after the programme number and station name disappear.

Broadcast	On Screen Display
Mono	MONO
Stereo	STEREO
Dual	DUAL I

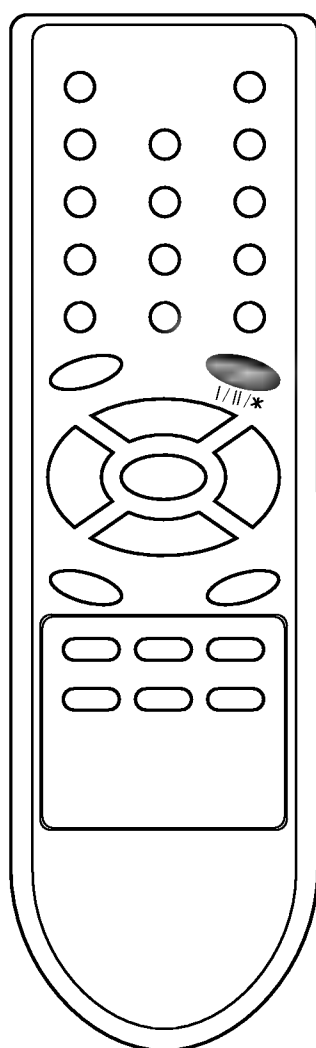 

Mono sound selection

In stereo reception if the stereo signal is weak, you can switch to mono by pressing the **I/II/*** button twice. In mono reception the depth of sound is improved. To switch back to stereo, press the **I/II/*** button twice again.

Language selection for dual language broadcast

If a programme received in two languages (dual language), you can switch to **DUAL I**, **DUAL II** or **DUAL I+II** by pressing the **I/II/*** button repeatedly.

DUAL I sends the primary broadcast language to the loudspeakers.

DUAL II sends the secondary broadcast language to the loudspeakers.

DUAL I+II sends a separate language to each loudspeaker.

NICAM reception (option)

If your set is equipped with the receiver for NICAM reception, the high quality NICAM (Near Instantaneous Companding Audio Multiplex) digital sound can be received.

Sound output can be selected according to the type of received broadcast as follows by pressing the **I/II/*** button repeatedly.

 
1. When NICAM mono is received, you can select **NICAM MONO** or FM MONO.
2. When NICAM stereo is received, you can select **NICAM STEREO** or FM MONO. If the stereo signal is weak, switch to FM mono.
3. When NICAM dual is received, you can select **NICAM DUAL I**, **NICAM DUAL II** or **NICAM DUAL I+II** or **MONO**. When FM mono is selected the display **MONO** appears on the screen.

Other functions

TV and AV modes


Inputs can be set for TV or AV mode. AV mode is used when a video cassette recorder (VCR), or other equipment is connected to the set.

Note : When a VCR is connected via the aerial socket the set is used in TV mode. See the 'Connection of external equipment' section.

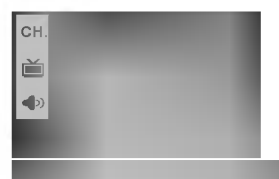

Special Menu

 1. Press the **MENU** button and then **▲ / ▼** button to select the Special menu.
2. Press the **▶** button and then **▲ / ▼** button to select **INPUT**.
3. Press the **▶** button and then **▲ / ▼** button to select **TV, AV1, AV2** or **COMPONENT** (option) on the **Input** pull-down menu.

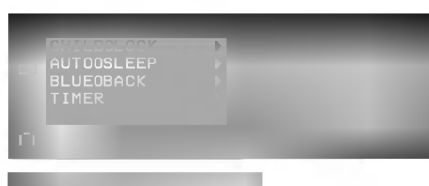

AV1 : VCR connected to the **AV1** sockets on the set
AV2 : VCR connected to the **AV2** sockets on the set
COMPONENT : DVD connected to the **COMPONENT** sockets on the set (option)

4. Press the **TV/AV** button to return to normal TV viewing.

Alternatively you can select the TV or AV mode by pressing the **TV/AV** button.

In AV mode, to return to TV mode, press the **▲ / ▼** or **NUMBER** buttons.

 
Child lock

The TV can be set so that the remote control handset is needed to control it. This feature can be used to prevent unauthorized viewing.

1. Press the **MENU** button and then **▲ / ▼** button to select the Special menu.
2. Press the **▶** button and then **▲ / ▼** button to select **CHILD LOCK**.
3. Press the **▶** button and then **▲ / ▼** button to select **ON** or **OFF** on the **CHILD LOCK** pull-down menu.
4. Press the **TV/AV** button to return to normal TV viewing.



With the lock on, the display **CHILD LOCK** appears on the screen if any button on the front panel is pressed while viewing the TV.

Note : The display **CHILD LOCK** will not appear on the screen if any button on the front panel is pressed while displaying the menus.

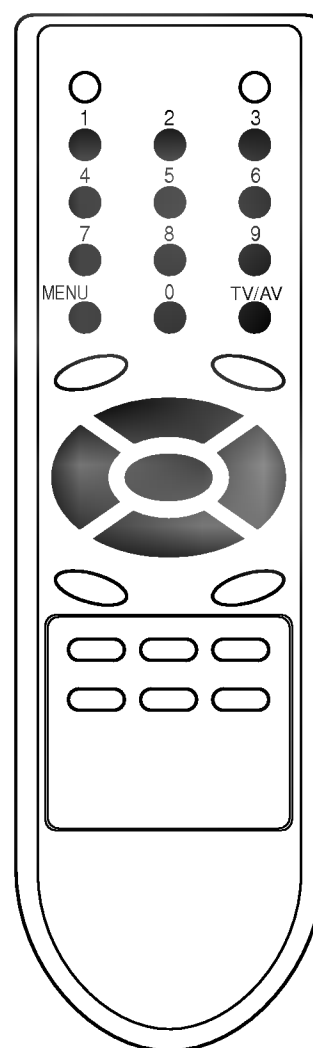

Other functions

  Special Menu

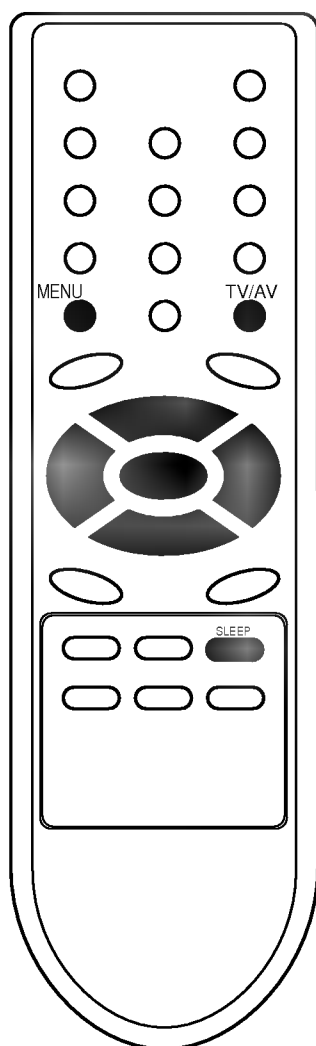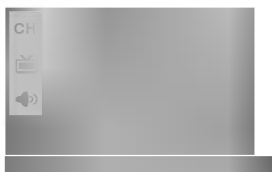

Auto sleep

If you select **ON** on the **AUTO SLEEP** pull-down menu, the set will automatically switch itself to standby mode approximately ten minutes after a TV station stops broadcasting.

1. Press the **MENU** button and then **▲** / **▼** button to select the Special menu.
2. Press the **▶** button and then **▲** / **▼** button to select **AUTO SLEEP**.
3. Press the **▶** button and then **▲** / **▼** button to select **ON** or **OFF** on the **AUTO SLEEP** pull-down menu.
4. Press the **TV/AV** button to return to normal TV viewing.

Blue back (option)

If you select **ON** on the **BLUE BACK** pull-down menu, the blue background appears on the screen when there is no or poor signal.

1. Press the **MENU** button and then **▲** / **▼** button to select the Special menu.
2. Press the **▶** button and then **▲** / **▼** button to select **BLUE BACK**.
3. Press the **▶** button and then **▲** / **▼** button to select **ON** or **OFF** on the **BLUE BACK** pull-down menu.
4. Press the **TV/AV** button to return to normal TV viewing.

Sleep timer

You don't have to remember to switch the set off before you go to sleep. The sleep timer automatically switches the set to standby after the preset time elapses.

Press the **SLEEP** button to select the number of minutes. The display **SLEEP - - -** will appear on the screen, followed by **10, 20, 30, 60, 90, 120, 180** and **240**. The timer begins to count down from the number of minutes selected.

 
Note :

- To view the remaining sleep time, press the **SLEEP** button once.*
- To cancel the sleep time, repeatedly press the **SLEEP** button until the display **SLEEP - - -** appears.*
- When you switch the set off, the set releases the preset sleep time.*

Timer (option)

Setting the clock

1. Press the **MENU** button and then **▲ / ▼** button to select the Special menu.
2. Press the **►** button and then **▲ / ▼** button to select **TIMER**.
3. Press the **►** button and then **▲ / ▼** button to select **CLOCK**.

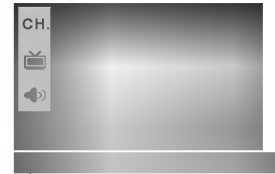

Special Menu



4. Press the **►** button and then **▲ / ▼** button to adjust the hour.
5. Press the **►** button and then **▲ / ▼** button to adjust the minute.
6. Press the **OK** button.
7. Press the **TV/AV** button to return to normal TV viewing.

 
Setting the On/Off timer

By using this function, the set automatically switches on or off at a preset time. You must set the time correctly before using on/off time function.

1. Press the **MENU** button and then **▲ / ▼** button to select the Special menu.
2. Press the **►** button and then **▲ / ▼** button to select **TIMER**.
3. Press the **►** button and then **▲ / ▼** button to select **OFF-TIMER** or **ON-TIMER**.



4. Press the **►** button and then **▲ / ▼** button to adjust the hour.
5. Press the **►** button and then **▲ / ▼** button to adjust the minute.
6. **Only ON-TIMER function;** Press the **►** button and then **▲ / ▼** button to adjust programme number and volume level.
7. Press the **OK** button.
8. Press the **TV/AV** button to return to normal TV viewing.

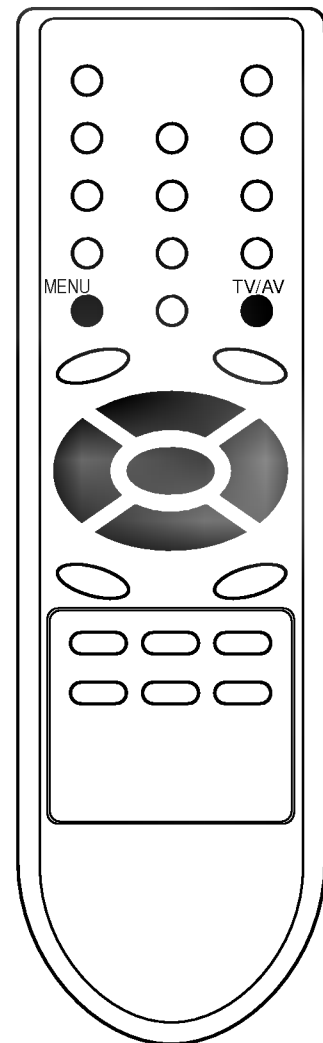


Note :

- ON-TIMER** works only in standby mode.
- To view the remaining on/off time, select the Time menu.
- To cancel the set on/off time, set the on/off timer to **HOLD**.
- When you switch the main power off, the **CLOCK** is reset and the **ON/OFF-TIMER** is off.

Connection of external equipment


You can connect additional equipment, such as VCRs, camcorders etc. to your set.

 Here shown may be somewhat different from your set.

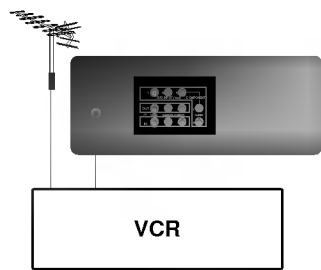


Aerial socket

 1. Connect the RF out socket of the VCR to the aerial socket on the back of the set.
2. Connect the aerial cable to the RF aerial in socket of the VCR.
3. Store the VCR channel on the programme number 0 using the 'Manual programme tuning' section.
4. Select the programme number where the VCR channel is stored.
5. Press the **PLAY** button on the VCR.

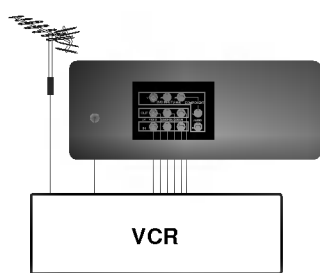

Audio-L/R(or Audio)/Video in/out sockets (option)

 1. Connect the audio/video out sockets of the VCR to the Audio-L/R(or Audio)/video in sockets of the set and in sockets of the VCR to out sockets of the set.
2. If the VCR is connected to the AV sockets on the set, press the **TV/AV** button to select **AV1** or **AV2**.
3. Press the **PLAY** button on the VCR.
The VCR playback picture appears on the screen.

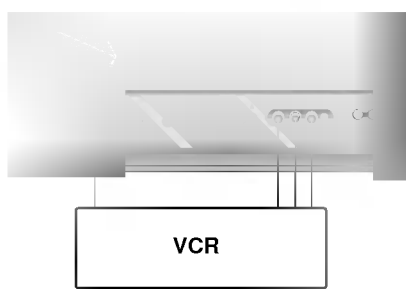


You can also record programmes received by the TV on video tape via audio/video out sockets.

Connection of external equipment

Component in sockets (option)

 1. Connect the COMPONENT video output sockets (Y Cb Cr, Y Pb Pr or Y B-Y R-Y) of the COMPONENT (480i) to the COMPONENT DVD INPUT sockets (Y P_B P_R) on the set.
2. Connect the audio cable from the COMPONENT to COMPONENT AUDIO sockets on the set.
3. Press the **TV/AV** button to select **COMPONENT**.
4. Press the **PLAY** button on the COMPONENT.
The COMPONENT playback picture appears on the screen.

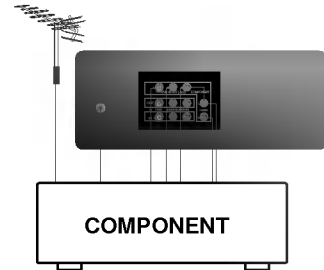


Headphone socket (option)

Only models which have a headphone socket can perform this function.

Insert the headphone plug to the headphone socket of the set.

 You can listen to the sound through the headphone and the Woofer speaker (option). Reduce the woofer speaker volume to listen to the sound through the headphone.

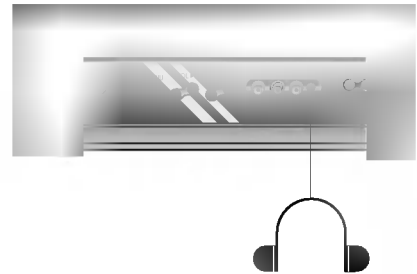

To adjust the headphone volume, press the ◀ / ▶ button.

If you press the **MUTE** button, the sound from the headphone's is switched off.

Troubleshooting check list

Symptoms

No picture, no sound

Sound OK, poor picture

Picture OK, poor sound

Picture blurred

 
Lines or streaks in picture

Poor reception on some channels


No colour

Poor colour

Remote control does not work

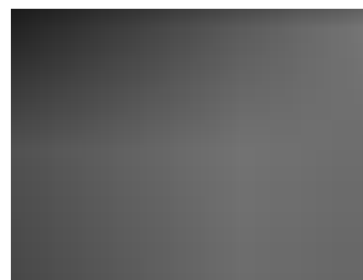

 Check these items and try to adjust these

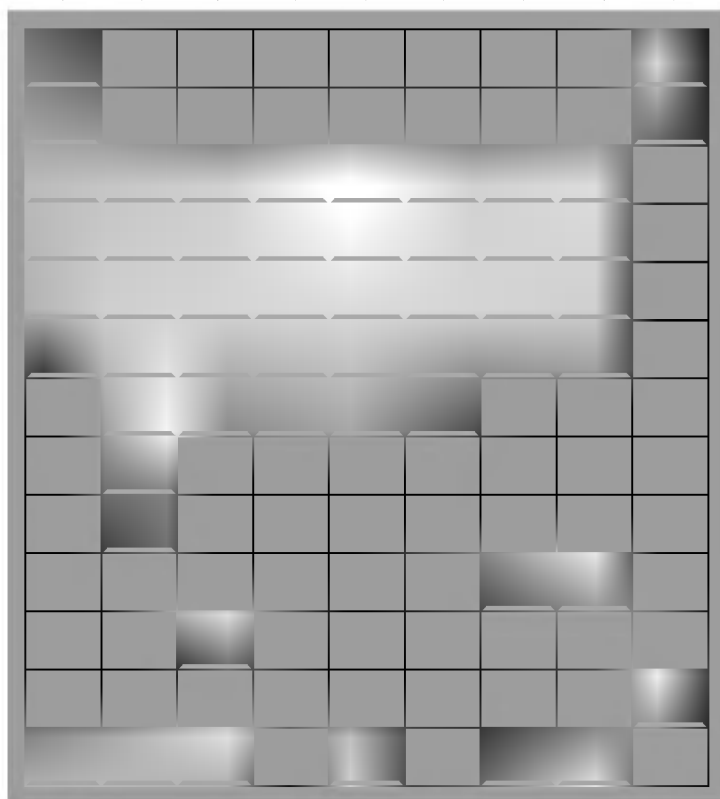

The mains plug-(plugged in and switched on)

Is the TV switched on

Try another channel (weak signal)

Check aerial (plugged into TV?)

Check aerial (broken lead?)

Check aerial

Check for local interference

Adjust contrast

Adjust brightness

Adjust colour

Adjust volume

Check the batteries in remote control

Check Audio/Video sockets (VCR only)
