



Part No. MMBB0124007

ISSUE 1.0
PRINTED IN KOREA

型號：T5100



繁體中文
ENGLISH



使用手冊

GPRS與MMS手機

使用手冊

型號：T5100

在您使用行動電話之前，請仔細閱讀本手冊。
請保存本手冊以便將來參考。

G • P • R • S • & • M • M • S • P • H • O • N • E

GPRS與MMS手機

使用手冊

型號: T5100

在您使用行動電話之前，請仔細閱讀本手冊。
請保存本手冊以便將來參考。



簡介

恭喜您購買 T5100 行動電話，本機型手機外形小巧、功能強大，專為使用最新的數位行動通訊技術而設計。



- 本使用手冊包含使用與操作手機的重要資訊，請仔細閱讀所有資訊，以使用手機發揮最大效能，並避免因造成手機損壞而使用不當。若對手機進行本手冊未明確表示同意之任何變更或修改，將會導致設備保固權益喪失。

如果您需要相關商品服務，
歡迎您與各服務中心聯絡 0800898899
或者您可直接瀏覽LG台灣網站
網址：<http://www.lge.com.tw>

安全、高能效型手機的原則



請閱讀下列簡易原則，違反下列規程可能會造成高風險的觸犯法律。詳細資訊如本刊物所述。

曝露於無線電頻率能量

無線電波輻射和電磁波能量吸收率(SAR)的計算

此 T5100 型號手機的設計符合有關無線電波輻射的安全要求。此要求根據科學原則而制定，並具有一些的安全範圍，可確保不同年齡和健康狀況的人體安全。

- 無線電波輻射標準所採用的計算單位稱為「電磁波能量吸收率」(Specific Absorption Rate, SAR)。測量的 SAR 所採用的是標準方式，即測量手機在所有可測時段內的最高認可輻射功率操作時的 SAR。
- 由於不同型號 LG 手機的 SAR 等級會有所差異，但所有手機的設計均符合無線電波輻射的相關標準。
- 根據國際非電離輻射防護委員會(INCRP)所發展的標準，適用於公眾的無線電波能量吸收率(SAR)限制是平均10克組織2.0瓦特/公斤(W/kg)，而SAR在台灣的限制標準為1.6瓦特/公斤。
- T5100經政府認可的實驗室測試後，此型號的最高吸收率(SAR)值為1.28瓦特/公斤。
- 減少電波影響，請妥善使用手機！



安全、高效使用手機的原則

產品保養與維護

警告：請僅使用此特定手機型號所認可的電池、充電器及配件。使用任何其他類型將會導致相關的手機保固權益喪失，並可能損壞手機。

- 請勿自行拆卸本裝置。在需要進行維修時，請由合格的維修技術人員維修。
- 手機應遠離氧氣設備，如氧瓶、收音機或個人電腦。
- 手機應遠離熱源，如散熱器或電鍋附近。
- 請勿讓手機掉落。
- 避免讓手機承受機械震動或撞擊。
- 如果印刷裝帶含有乙炔基的物品包裝手機，手機表面的塗層可能會受損。
- 請使用乾布來清潔手機外觀（請勿使用如苯、稀釋劑或酒精等溶劑）。
- 請勿將本裝置置於濃煙或塵埃中。
- 請勿將手機和信用卡或其他磁卡放在一起，否則可能會損壞磁條內的資訊。
- 請勿用尖銳物品觸碰螢幕，以免損壞手機。
- 請勿將手機置於液體或潮濕環境中。
- 請小心使用如耳機等配件。



高致手機操作

為利可最少電量保持最佳效能，請注意下列事項：

- 在您與人通話時請握好手機，調整天線的角度使其高過您的肩膀，然後直接對著麥克風通話。如果天線不用時，請在通話過程中將天線拉出。
- 如果行動電話支援紅外線功能，請勿將紅外線光束直接照射眼睛。

警告裝置

所有行動電話都可能受到干擾，從而影響其效能。

- 未經許可，請勿在醫療設備旁邊使用行動電話。請勿將手機置於心率調整器上，如胸前口袋中。
- 行動電話可能會對某些助聽器造成干擾。
- 少量干擾也可能會對電視、收音機、音響等造成影響。

道路安全

請查閱您所在區域當地對於使用行動電話的法令與規定。

- 開車時請勿使用手持行動電話。
- 請務必專心開車。
- 如有可能，請使用免持裝置。
- 如開車狀態不許可，請在路邊停車，然後再撥打或接聽電話。
- 無線電波可能會對您車上的電子系統造成影響，如汽車音響、安全設備。
- 如果您的汽車配備安全氣囊，請勿在其附近裝設或放置手持無線設備。不當操作將會導致嚴重傷害。



安全、高效使用手機的原則

爆炸區域

請勿於正在進行爆破作業的區域使用手機。

請參閱禁止告示，並遵守有關規章條例。

具有潛在爆炸危險的環境

- 請勿在加油站使用手機。請勿在汽油操作舉動附近使用手機。
- 請勿使用放置有行動電話零件的汽車道途或在其內存放可燃性的氣體、液體或爆炸物。

在飛機上

無線裝置會對飛機造成干擾。

- 搭機前請務必關閉您的行動電話。
- 未經空服人員許可，飛機在地面停機時也請勿使用。

兒童安全

請將手機置於兒童不易接觸的安全地方。手機有許多細小零件，若經拆解誤食，可能會造成阻塞窒息意外。

緊急電話

緊急電話不一定適用於所有行動電話網路。

因此，請勿過於依賴手機來撥打緊急電話。詳情請諮詢您當地的服務供應商。



香沖奇蹟案例表

- 香沖充香前，無須先空放香。與其他香沖系統不同的是，本香沖的性能不會受到記憶效應的影響。
- 儘量使用LG香沖和充電器。LG充電器能最大程度延長香沖壽命。
- 請勿自行拆開香沖而造成香沖短路。
- 請保持香沖金屬接觸點的清潔。
- 如果香沖效能明顯降低，請更換香沖。此香沖可重複充電數百次，直到需更換香沖為止。
- 如果長時間未使用香沖，請重新充電以取得最大效能。
- 請勿將香沖充電器置於日光下曝曬，也不應置於潮濕環境（如浴室）。
- 請勿將香沖置於太熱或太冷的地方，否則可能會降低香沖效能。



目錄

T5100 功能	12
• 手機圖解	12
• 具有DSC外觀的1.3百萬像素數位照相機	17
• 顯示資訊	20
入門指南	22
• 安裝 SIM 卡與手機電池	22
• 為電池充電	24
• 取出充電器	25
• 開啓/關閉手機電源	26
• 存取碼	26
• 限制密碼	27
一般功能	28
• 撥打與接聽電話	28
• 輸入文字	30
• 電話簿	35
• 通話中功能表	35
• 多方通話	37
功能表結構	39
選擇功能表選項	41
情景模式 [功能表1]	42
• 震動 [功能表1-1]	42
• 靜音 [功能表1-2]	42
• 一般 [功能表1-3]	42
• 大聲 [功能表1-4]	42



• 到機 [功能表1-5]	42
• 汽車 [功能表1-6]	42
通話記錄 [功能表2]	44
• 未接來電 [功能表2-1]	44
• 回撥來電 [功能表2-2]	45
• 回撥再話 [功能表2-3]	45
• 刪除最近來電 [功能表2-4]	46
• 通話時間 [功能表2-5]	46
• 通話計劃 [功能表2-6]	47
• 計劃設定 [功能表2-7]	47
• GPRS訊息 [功能表2-8]	48
我的工具箱 [功能表3]	49
• 我的資料夾 [功能表3-1]	49
• 珍藏夾 [功能表3-2]	50
• 單位按算器 [功能表3-3]	51
• 計算機 [功能表3-4]	51
• 時區設置 [功能表3-5]	52
• 語音備忘錄 [功能表3-6]	53
• 群動紅外線 [功能表3-7]	53
打印 [功能表4]	55
• 再話簿 [功能表4-1]	55
• 鬧鐘 [功能表4-2]	59
• 日程表 [功能表4-3]	60
• 備忘錄 [功能表4-4]	62



目錄

訊息 [功能表5]	63
• 一般簡訊 [功能表5-1]	63
• 多媒體簡訊(MMS) [功能表5-2]	67
• 語音信箱 [功能表5-3]	72
• 區域廣播 [功能表5-4]	72
• 簡本 [功能表5-5]	73
• 名片 [功能表5-6]	75
• 訊息欄狀態 [功能表5-7]	75
數位影像功能 [功能表6]	76
• 拍攝 [功能表6-1]	76
• 拍攝影片 [功能表6-2]	80
• 相框拍攝 [功能表6-3]	81
• 我的相簿 [功能表6-4]	81
• 我的影片 [功能表6-5]	84
• 設定 [功能表6-6]	85
• 訊息欄狀態 [功能表6-7]	85
遊戲與MP3 [功能表7]	86
• MP3播放器 [功能表7-1]	86
• 遊戲 [功能表7-2]	89
• Java [功能表7-3]	89



行動網架加值服務 [功能表8]	92
• 行動網 [功能表8-1]	92
• SIM卡服務 [功能表8-2]	96
設定 [功能表 9]	97
• 日期與時間 [功能表9-1]	97
• 通話設定 [功能表9-2]	98
• 手機設定 [功能表9-3]	101
• 保密設定 [功能表9-4]	102
• 網路設定 [功能表9-5]	105
• GPRS設定 [功能表9-6]	105
• 重設和原廠設定 [功能表9-7]	106
問題解答	107
配件	110
技術資料	112



T5100功能

手機圖解

前視圖



1. 上下側向按鍵

- 按住此鍵可在外螢幕上顯示目前的時間。
- 在折蓋翻開的待機模式下，控制按鍵音的音量。
- 控制通話過程中的聽筒音量。
- 可則於照相機預覽模式下的放大/縮小。
- 控制影片、MP3或遊戲播放過程中的音量。

2. 充電器接頭：用於連接充電所用的充電器。此接頭也可用於連接 USB 纜線，以便則電腦同步程式。

3. 喇叭


4. 外螢幕



後視圖

6. MP3 播放器/行動網/
照相機設定功能表鍵

5. 側面照相機鍵

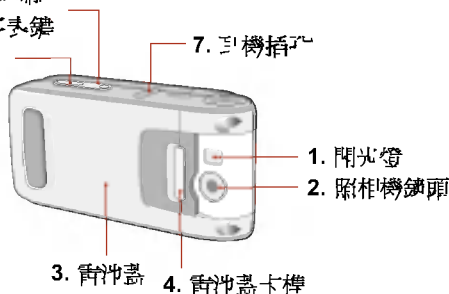

1. 閃光燈



附註

- 如果照相機鏡頭上有水霧，將會影響影像品質。

2. 照相機鏡頭

3. 電池蓋

4. 電池蓋卡榫：按下此卡榫可打開電池蓋。

5. 側面照相機鍵：按住此按鍵可開啓照相機模式。使用此按鍵可進行拍攝。

6. MP3 播放器/行動網/照相機設定功能表鍵

- 在手機折疊合上時，按住此按鍵可開啓/關閉 MP3 播放器。
- 打開手機後，長按此按鍵可連線至行動網。
- (照相機) 在預覽模式下，按下此鍵可開啓照相機設定功能表並確認選項。

7. 耳機插孔：用來連接耳機。

 


T5100功能

折蓋翻開視圖





1. 雜筒
2. LCD螢幕：月全彩顯示狀態圖示、功能表項目、網路登錄、圖片等。
3. 照相機鏡頭
4. 確認/行動網鑰：選擇功能表選項並確認動作。
* 在待機模式下，按下此按鍵可連線至行動網。
5. 麥克風：在通話過程中按下此鍵可靜音月用保密（請參閱第 36 頁）。
6. 12. 快捷鍵/快捷鍵：各個鍵可執行螢幕上即時顯示文字所示的功能。
7. 行程表鍵：「行程表」功能表快捷鍵。
8. 撥話鍵：用於撥打電話號碼與接聽來電。在待機模式下，按下此按鍵可快速存取最近來電、已撥電話及未接來電。
9. 特殊功能鍵 (XCL)
 - 在待機模式下，按住此按鍵可進行語音撥號。
 - 定時拍攝：在照相機拍攝模式下，按下此按鍵可啟用/停用定時拍攝。您可設定所需的延遲時間，使用計時器模式功能表 [功能表 6-6-4] 即可（請參閱第 85 頁）。
10. 開光燈：在預覽模式下，按下  可開啓/關閉開光燈。您可設定所需的開光燈模式，使用開光燈模式功能表 [功能表 6-6-5] 即可（請參閱第 85 頁）。



T5100功能

11. **導聽鍵**：用於聆聽功能表和移動游標。這些按鍵還可用於快速存取下列功能。
 - 上導聽鍵：在待機模式下，按下此按鍵可在電話簿中按名稱搜尋。
 - 下導聽鍵：「珍藏夾」功能表快捷鍵。
 - 左導聽鍵：「情報模式」功能表快捷鍵。
 - 右導聽鍵：訊息收信箱快捷鍵。
13. **數位影像功能鍵**：用於照相機功能。
 - 在待機模式下，按一下此按鍵，可存取「數位影像功能」功能表。
 - 長按此按鍵可直接開啓觀相窗，然後可用此按鍵拍照。
14. **清除鍵**：每按一下可刪除一個字元。按住此按鍵可清除輸入的所有內容。此按鍵也用於返回以前的螢幕。
15. **結束/背源鍵**：用於結束通話、拒接來電以及返回待機模式。按住此按鍵可開啓/關閉手機背源。
16. **取數字元鍵**：用於輸入數字、字型及部分特殊字元。
17. **特殊功能鍵 (#,*)**
 - 按住可在電話號碼中輸入暫停鍵。
 - 開光燈：在照相機拍攝模式下，按下此按鍵可開啓/關閉開光燈。
18. **手機開鎖**



具有DSC外觀的1.3百萬像素數位照相機

靈活的 LCD 螢幕可向逆時針方向旋轉180度，其功能類似於翻屏相機，可讓您輕鬆順暢地進行拍攝。將折疊轉至180度時，您可將主 LCD 螢幕作為外部螢幕使用。此時手機可用作數位照相機。



附註

- 請勿強行旋轉 LCD 螢幕。請勿向順時針方向旋轉 LCD 螢幕。




此狀態可讓您進行自拍。



T5100功能

在折疊合上狀態下，將折蓋旋轉180度，即可將電話叫作數位照相機。

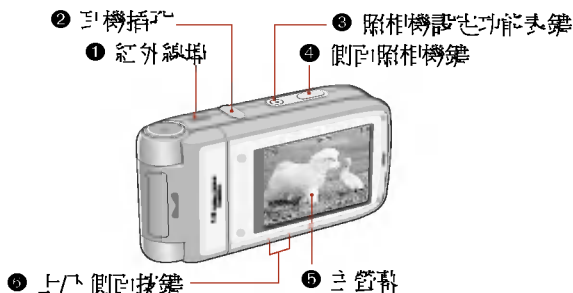

- 1 紅外線埠
- 2 耳機插孔
- 3 照相機設定功能表/確認鍵：在預覽模式下，用於開啟照相機設定功能表並確認選擇。



附註

- 在折疊合上時，長按此鍵可播放 MP3 檔案。
- 4 側面照相機鍵：按住此按鍵可開啟照相機模式，按下此按鍵可進行拍攝。
 - 5 主螢幕：在拍照時，功能類似於觀測窗。
 - 6 上下側面按鍵：用於向左或向右移動游標，此按鍵還用於放大/縮小。

在折疊合上狀態下拍照

1. 將折蓋旋轉180度，以將主螢幕作為外部螢幕使用。
2. 按住側向照相機鍵(❶)2秒以上，可開啟照相機模式與預覽螢幕。



附註

- 在預覽模式下，超過1分鐘未執行任何按鍵操作，將會關閉照相機模式並會返回待機模式。

3. 對準目標進行拍攝，然後按下側向照相機鍵(❶)。拍攝的影像會自動儲存到我的相簿^[功能表 6-4]中(請參閱第81頁的我的相簿)。
4. 在拍攝前，按下照相機設定功能表鍵(❷)可設定下列選項。



① ② ③ ④ ⑤ ⑥ ⑦

- ① **亮度**：共有6個等級可用。
- ② **白平衡**：共有5個設定可用：
「自動」、「日光」、「室內螢光」、「陰天」及「日光燈」。
- ③ **解析度**：選擇所需解析度。請參閱第79頁。

- ④ **解析度**：選擇所需解析度。請參閱第81頁。
- ⑤ **拍攝模式**：在「單張拍攝」與「連續拍攝」之間選擇。
- ⑥ **相簿**：在拍照後，可使用此鍵查看拍攝的影像。
- ⑦ **退出**：選擇此鍵可結束設定功能表。



T5100功能

在各設定功能表之間移動，請使用上/下側向按鍵 (❶)。
反白顯示功能表後，按下照相機設定功能表鍵 (❷) 以開啟功能表。使用上/下側向按鍵 (❸) 選擇所需的值，然後按下照相機設定功能表鍵 (❹) 以確認。

顯示符號

下表說明手機顯示幕上出現的各種顯示指示符號。

螢幕顯示

符號	說明
	表示網路訊號強度。
	表示正在通話。
	表示正在其他網路中漫遊。
	表示 GPRS 服務可用。
	表示相機功能已啟用開鎖。
	表示震動震動狀態。
	表示收到一般簡訊。
	表示收到語音訊息。
	表示收到多媒體簡訊。
	表示來電轉接功能已啟動。
	表示「震動」情境模式已啟動。
	表示「大聲」情境模式已啟動。



符號	說明
	表示「靜音」情景模式已啟動。
	表示「耳機」情景模式已啟動。
	表示「汽車」情景模式已啟動。
	表示「一般」情景模式已啟動。
	表示目前使用 Push 訊息服務。
	表示您在行程功能表目前一項排定日期的行程。
	表示手機正在存取 WAP。
	表示正在使用 GPRS。
	表示進行了安全鎖定。




開機指南

安裝 SIM 卡與取出電池

取出電池之前，請確定已關閉手機電源。

1. 取出電池蓋。

按下電池釋放卡榫，將電池蓋向手機底部滑動。取出電池蓋。

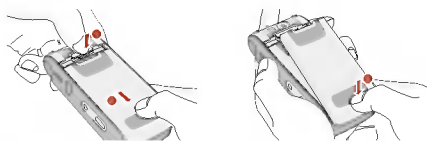


附註

- 手機電源關閉時取下電池，可能會導致手機操作故障。

2. 取出電池。

握住電池頂邊，並將電池從電池槽中取出。

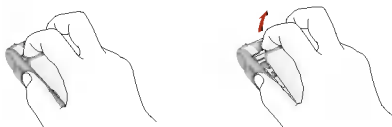




3. 裝 SIM 卡。

將 SIM 卡插入插槽。將 SIM 卡插入 SIM 卡插槽。確定 SIM 卡正確插入，SIM 卡的金屬接觸點必須向下。取出 SIM 卡時，向下輕按 SIM 卡，然後向相反方向拔出。



插入 SIM 卡。

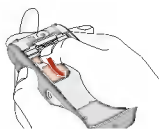


取出 SIM 卡。



附註

- SIM 卡的金屬接觸點容易刮壞，請特別小心使用 SIM 卡。請按照 SIM 卡隨附的指示操作。

4. 裝上電池。

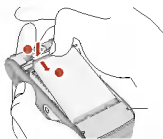

先將電池底部插入電池槽的左邊，然後將電池頂部向下按，直到電池卡住。



開機指南

5. 重新裝回電池蓋。



將電池蓋裝回原位，然後向內滑動直到卡榫卡入為止。

為電池充電

請儘使用手機隨附的充電器。




1. 在手機中裝上電池，將充電器接頭連接至手機左側。打開充電器接頭蓋，並將其旋轉 180 度。確保接頭上的箭頭正對著手機。



附註

- 打開手機充電器接頭蓋時，請勿折疊該橡皮蓋。

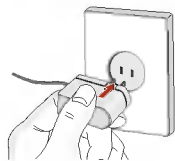

2. 將充電器另一端連接至手機插座。



注意

- 使用未經授權的配件可能會損壞手機，並會導致保固權益喪失。
- 請勿強行插入連接埠，否則可能會損壞手機或充電器。



附註

- 連接充電器後，螢幕上會顯示「充電中」，如果電池已完全充電，可能需隔一段時間才會顯示此訊息。

取出充電器



1. 充電完成後，電池圖示中的狀態條會停止移動，手機螢幕上將會顯示「已滿」。
2. 由鑰匙充電器與充電插座的連接埠。同時按下充電器接頭兩側的外側彈片，然後將接頭拔出，即可斷開充電器與手機的連接。




附註

- 首次使用手機時，請確保電池已完全充電。
- 在充電過程中，請勿取出電池或SIM卡。
- 如果電池未完全充電，請將充電器關閉然後重新開啓手機充電，並重新為電池充電。取出然後重新裝回電池後，請為電池重新充電。




開啓/關閉手機音源

開啓手機音源

1. 在手機安裝📶音源，然後將手機連接到外部音源（如充電器、前點點聲器或音源設備或配件），再在手機安裝📶充電音源。
2. 按住  幾秒鐘，直到 LCD 螢幕的音源開啓。
3. 視需📶PIN 碼設定📶的狀態而定，您可能需📶輸入 PIN 碼。

關閉手機音源

1. 按住  幾秒鐘，直到 LCD 螢幕的音源關閉。

存取碼

您可使用本節節目說明的存取碼，以防止他人未經授權使用您的📶。您可變更存取碼 (PUK 碼與 PUK2 碼除外)：使用 **📶密碼功能** [功能表 9-4-5] 即可。請參閱第 104 頁。

PIN 碼 (4 到 8 位數)

PIN (個人識別碼) 碼可防止他人未經授權使用您的 SIM 卡。PIN 碼通常隨 SIM 卡一同提供。如果將需📶PIN 碼設為 **📶**，則在每次開機時，📶均會要求輸入 PIN 碼。如果將需📶PIN 碼設為 **📶**，則無需輸入 PIN 碼，📶機會直接連接到網路。



PIN2 碼 (4 到 8 位數)

需啟用 PIN2 碼 (部分 SIM 卡中隨附) 來存取如**通話計費通知**和**固定撥號**等功能。僅在 SIM 卡支援這類功能的情況下才可用。請諮詢網路月取單頁更多資訊。

PUK2 碼 (4 到 8 位數)

需啟用 PUK (PIN 解鎖碼) 碼才能更改鎖定的 PIN 碼。PUK 碼可能隨 SIM 卡一同提供。如果 SIM 卡中未提供，請諮詢系統業者月取單 PUK 碼。如果遺失此碼，也請與系統業者聯絡。

PUK2 碼 (4 到 8 位數)

需啟用 PUK2 碼 (部分 SIM 卡中隨附) 才能更改鎖定的 PIN2 碼。如果遺失此碼，也請與系統業者聯絡。

安全密碼 (4 到 8 位數)

安全密碼可用於防止他人未經授權使用您的手機。

預設安全密碼可設為「0000」，刪除任何手機記錄以及啟動恢復原廠設定功能時都需啟用安全密碼。另外，啟動或關閉手機鎖定功能也需啟用安全密碼，以防止他人未經授權使用您的手機。安全密碼預設值可在**保密設定**功能表中修改。

限制密碼

使用**通話限制**功能時需啟用限制密碼。在您開啟此功能時，系統業者會提供您此密碼。請參閱第 103 頁月取單詳細資料。



一般功能

撥打緊急接聽電話

撥打電話

1. 確定已開啓手機電源。
2. 輸入電話號碼 (包括區碼)。如在 LCD 螢幕上編輯號碼，請按下列導航鍵以將游標移至所需位置，或僅需按下列清除鍵 (C) 一次清除一個數字。
 - ▶ 按住清除鍵 (C) 可清除整個號碼。
3. 按下撥話鍵 (☎) 以撥打電話。
4. 如結束通話，請按下結束鍵 (☎) 或快捷鍵。您也可合上折蓋以結束通話。

使用撥話鍵撥打電話

1. 在待機模式下，按下撥話鍵 (☎)，最近來電、已撥電話及未接來電將會顯示。
2. 使用上下導航鍵選擇所需的號碼。
3. 按下 ☎。

撥打國際電話

1. 按 (057) 鍵以輸入國際前碼。「+」字元會自動選取國際碼。
2. 依次輸入國際碼、區碼及電話號碼。
3. 按下 ☎。

結束通話

結束通話之後，請按下列結束 (☎) 鍵。



從青語簿撥打電話

您可以將經常撥打的名稱與青語號碼儲存在SIM卡裏/或手機記憶體(即青語簿)中。您只需在青語簿中尋找所需的名稱即可撥打電話。取得有關青語簿功能的詳細資料，請參閱第 55-59 頁。

調整音量

如果您在通話時調整聽筒音量，請使用側向按鍵(⏮)。按 \uparrow 側向按鍵可提高音量，按 \downarrow 側向按鍵可降低音量。



附註

- 在待機模式下，按 \downarrow 側向按鍵可調整按鍵音的音量。

接聽來電

收到來電時，手機會響鈴。如果能夠識別來電者，來電者的青語號碼將會顯示(如果青語簿中儲存了其名稱與影像，則會顯示名稱與影像)。本手機支援照片來電者 ID 功能。

1. 接聽來電，請打開手機。(將**翻開折蓋**設定為接聽模式時。請參閱第 99 頁 [功能表 9-2-2]。)




附註

- 如果將**任意鍵**設定為接聽模式(請參閱第 99 頁)，則按下除全音快捷鍵之外的任意鍵，均會接聽來電。



一般功能

- ▶ 翻拍撥來電，無需打開手機，按住手機左側的任一側面按鍵即可。
 - ▶ 使用電話簿或其功能表功能時可撥聽來電。
2. 翻結束通話，請合上折蓋或按下  鍵。

視象模式 (快速)

打開手機後，按住左導覽鍵 (M) 可啟動視象模式。

訊號強度

透過手機 LCD 螢幕上的訊號指示 (◀▶) 可查看訊號強度。訊號強度會不斷變化，尤其是在建築物內時。靠近窗戶可提升撥聽效果。

輸入文字

使用手機按鍵可輸入英數字元。

例如：在電話簿中儲存名稱、撰寫訊息、建立個人簡候語或在行事曆中排定事件等，都需輸入文字。

本手機提供以下文字輸入法。

T9 模式

 
此模式可讓您用每個字只按一個按鍵的方式來輸入文字。鍵盤上的每個按鍵都具有多個字型。T9 模式會自動將按鍵與內部字型進行比較以判斷正確的字型，因此需按下的按鍵遠遠少於傳統 ABC 模式。這也稱為預測文字功能。

ABC 模式

此模式可讓您輸入字型，方式為按一下、兩下、三下或多下標記有所需字型的按鍵，直到所需字型出現為止。



 
123 模式 (數字模式)

以每個數字按一個按鍵的方式來鍵入數字。在在文字輸入欄位中變更為 123 模式，請按下  鍵直到顯示 123 模式。

變更為文字輸入模式

 



文字輸入模式

1. 在您處於在文字輸入模式的欄位時，您會發現 LCD 螢幕的右側會出現文字輸入模式指示。
2. 按下  以變更為文字輸入模式。您可以用在 LCD 螢幕的右側檢查目前所用的文字輸入模式。

► 使用 T9 模式

T9 預測文字輸入模式使您只需按下最少的按鍵即可輕鬆輸入文字。在您按下每個按鍵時，有機會根據內建字典開始顯示出認為您剛鍵入的字元。您也可以用在字典中新增文字。新增文字後，文字會發生變化，以及改變字典中最前端的待選字。

1. 處於 T9 預測文字輸入模式時，按下按鍵  至  即可開始輸入文字。每個字元按一個按鍵。
 - 文字會隨鍵入的字元而變化。完整鍵入文字之前，請忽略螢幕上顯示的內容。
 - 完整鍵入文字後，如果所顯示的文字不正確，請按一下或多下導航鍵以捲動尋找其他文字選項。



一般功能



範例

- 按 $\overline{4 \text{ 數字}}$ $\overline{6 \text{ 符號}}$ $\overline{6 \text{ 數字}}$ $\overline{3 \text{ 數字}}$ 可鍵入 Good。
- 按 $\overline{4 \text{ 數字}}$ $\overline{6 \text{ 符號}}$ $\overline{6 \text{ 數字}}$ $\overline{3 \text{ 數字}}$ [導覽鍵] 可鍵入 Home。

- 如果文字選項清單中沒有所需的文字，請使用 ABC 模式新增該文字。
- 您可以用選擇 T9 模式的語言。請按下左快捷鍵 [選項]，選擇 T9 語言，然後選擇所需的 T9 模式語言。您也可以選擇停用 T9 以關閉 T9 模式。本手機的預設值為啟用 T9 模式。

2. 輸入整個文字然後再編輯或刪除任何按鍵。

3. 按 $\overline{0 \text{ 數字}}$ 鍵輸入空格以完成每個文字輸入。

- ▶ 要刪除文字，請按 \overline{C} 。按住 \overline{C} 可清除整個文字。



附註

- 要退出文字輸入模式而不儲存輸入內容，請按 $\overline{0 \text{ 數字}}$ 。手機將返回待機模式。

▶ 中文輸入法

1. ST(筆劃輸入法)：如何使用筆劃輸入法選取中文字。當您逐一輸入各別筆劃字根後，中文字元便會顯示出來。

使用 $\overline{[\text{及}]}$ 鍵來查看其中文字元選項，並按 \overline{OK} 即可選取。

同樣地，使用 $\overline{[\text{及}]}$ 、 $\overline{[\text{及}]}$ 及 $\overline{[\text{及}]}$ 鍵來尋找其他不同字元。

例如) 要輸入「你好」，請順時按數字鍵 $\overline{3 \text{ 數字}}$ 、 $\overline{2 \text{ 數字}}$ 及 $\overline{3 \text{ 數字}}$ ，然後您將會看到首個字元「你」。現在，按 \overline{OK} 然後再按 $\overline{1 \text{ 數字}}$ 鍵選取「好」。



按鍵	筆劃	按鍵	筆劃
	一		7
	丨		? (通配符號)
	丿		選擇鍵
	丶		

<筆劃表>

2. 注音輸入法 (Bopomofo)：依據注音符號的讀音輸入您所需詞的由來字。詳細的輸入方法介紹及鍵盤對照表，請參考以下說明：

例如) 輸入「必必」，請順序按數字鍵 及 ，然後「ㄅ」將出現在外部編輯螢幕。因為許多字元均具有相同的注音方式。所以您應從其中選取字元「必」(按 然後再按)。在選取第一個字元後，接著會出現其他各種字元。您可以相同方法選取「必」(按 然後再按)。

按鍵	注音	按鍵	注音
	ㄅ ㄆ ㄇ ㄊ		ㄆ ㄑ ㄓ
	ㄆ ㄑ ㄓ		ㄚ ㄛ ㄜ ㄝ
	ㄍ ㄎ ㄌ		ㄎ ㄏ ㄏ ㄨ
	ㄌ ㄍ ㄎ		ㄎ ㄑ ㄑ ㄌ ㄌ
	ㄊ ㄊ ㄊ ㄊ		一 ㄨ ㄌ



一般功能

▶ 簡便 ABC 模式

使用按鍵 至 輸入文字。

1. 按下列標記自所需字型的按鍵：

- 按下列鍵輸入第一個字型
- 按兩下列鍵輸入第二個字型
- 依此類推

2. 刪除空格，請按下列 鍵。刪除字型，請按下列 鍵。按住 鍵可清除整個顯示內容。

! 附註：請參閱下表以取得更多的有關使用英數字元鍵時可顯示的字型。

按鍵	按順序顯示的字元	
	大寫	小寫
	.,-?!'@:1	.,-?!'@:1
	ABC2	abc2
	DEF3	def3
	GHI4	ghi
	JKL5	jkl5
	MNO6	mno6
	PQRS7	pqrs7
	TUV8	tuv8
	WXYZ9	wxyz9
	空格鍵, 0 (長按)	空格鍵, 0 (長按)



► 簡碼 123 (數字) 模式

123 模式可讓您在一般簡碼中輸入數字 (如簡碼號碼)。

請按下與所需數字相對應的按鍵，然後即可自動切換回適當的文字輸入模式。

簡碼簿

您可用簡碼簿將簡碼號碼及其相應名稱儲存在 SIM 卡記憶體中。此外，您還可用在手機記憶體中最多儲存 255 個號碼與名稱。

在簡碼簿功能表中，SIM 卡與手機記憶體的簡碼方式相同 (請參閱第 55-59 頁的詳細說明)。

通話中功能表

本手機提供可在通話時使用的多種控制功能。可在通話時存取這些功能，請按下快捷鍵 [選項]。

通話時

通話時手機螢幕上顯示的功能表，不同於待機模式下顯示的預設主功能表，其包含的選項如下所述。

撥打第二通話

您可用簡碼簿中取出的撥打的簡碼號碼，再撥打第二通話。請按下快捷鍵，然後執行**撥打**。可在通話時將已撥號碼儲存在簡碼簿中，請按下快捷鍵，然後選擇**新增**。


在兩通話之間切換


可在兩通話之間切換，請按下快捷鍵，然後選擇**切換**。





一般功能

接聽來電

您在手機響鈴時接聽來電，僅需按下  鍵即可。在通話時，手機還能提醒您收到來電。此時，聽筒會發出鈴聲，且螢幕上會顯示第二通電話正在等待接聽。此功能亦稱為**來電等候**，在網路多接時才可使用。若您想有關如何啟動或關閉此功能的詳細資料，請參閱第 99 頁的**來電等候** [功能表 9-2-4]。

如果您啟動**來電等候**，按下  鍵或在選擇主快捷鍵及保留並接聽，可保留第一通電話並接聽第二通電話。您在選擇主快捷鍵及結束並接聽，可結束目前通話並接聽待接來電。

拒接來電

按下  鍵即可拒接來電。在通話時，按下主快捷鍵 [功能表] 並選擇**多方通話/拒接**或按下  即可拒接來電。

使麥克風靜音

在通話時按下 [功能表] 鍵並選擇**靜音開啓**可使麥克風靜音。選擇**靜音關閉**即可消去機靜音。靜音開啓時，來電者聽不到您的聲音，但您仍可聽到對方的聲音。

通話時開啓 DTMF音


您在通話時開啓 DTMF 音，請按下主快捷鍵，然後選擇**DTMF 開啓**。使用相同方式可關閉 DTMF 音。DTMF 音可讓手機表示并可自動交換機。



多方通話

如果系統業者支援此功能，多方通話服務可讓您同時與多個來電者通話。僅在您擁有第一道正在接聽的來電及一道保留中的通話，且這兩道通話均可接聽時，才可建立多方通話。建立多方通話後，建立該通話的一方可新增、自斷或隔離(即從多方通話中移除，但仍與您保持連接)通話。這些選項均在「通話中」功能表中進行選擇。加入多方通話的來電者人數最多為五人。開始多方通話後，您即可控制多方通話，並只限於您才能將來電者新增至多方通話。

撥打第二通電話

您可在通話時撥打第二通電話。請輸入第二個電話號碼，然後按下  鍵。在第二通電話接通時，第一通電話將自動保留。按下快捷鍵並選擇「交換」，則可在兩通電話之間交換。

建立多方通話

在通話時將其目前通話保留，然後按下快捷鍵並選擇**多方通話/全部加入**。

保留多方通話

按下快捷鍵，然後選擇**多方通話/全部保留**。

啟動保留中的多方通話

按下快捷鍵，然後選擇**多方通話/全部加入**。



一般功能

將來電新增至多方通話

將來電新增至現有多方通話，請按下快捷鍵，然後選擇**多方通話/全部加入**。

在多方通話時顯示來電者

在手機螢幕上捲動進行多方通話的來電者號碼，請使用上/下導覽鍵。

在多方通話時進行私人通話

結束多方通話的其中一個來電者進行私人通話，請在螢幕上顯示結束其通話的來電者號碼，並按下快捷鍵，然後選擇**多方通話/私人通話**以保留所有其他來電者。

結束多方通話

結束多方通話，請按下  鍵。按下快捷鍵後選擇**結束通話**或**結束多方通話**。



1 情景模式

- 1 震動
- 2 靜音
- 3 一般
- 4 大聲
- 5 手機
- 6 汽車



3 我的工具箱

- 1 我的資料夾
- 2 珍藏夾
- 3 單位換算器
- 4 計算機
- 5 時區設置
- 6 語音備忘錄
- 7 啟動紅外線



2 通話記錄

- 1 未接來電
- 2 已接來電
- 3 已撥出通話
- 4 刪除最近來電
- 5 通話時間
- 6 通話計費
- 7 計費設定
- 8 GPRS訊息



4 公事印

- 1 電話簿
- 2 鬧鐘
- 3 行程表
- 4 備忘錄



功能表結構



5 訊息

- 1 一般簡訊
- 2 多媒體簡訊(MMS)
- 3 語音信箱
- 4 區域廣播
- 5 簡本
- 6 名片
- 7 記憶體狀態



6 數位影像功能

- 1 拍照
- 2 拍攝影片
- 3 相框拍攝
- 4 我的相簿
- 5 我的影片
- 6 設定
- 7 記憶體狀態



7 遊戲與MP3

- 1 MP3播放器
- 2 遊戲
- 3 Java



8 行動網與增值服務

- 1 行動網
- 2 SIM卡服務
此功能表視SIM卡與
網路服務而定。




9 設定

- 1 日期與時間
- 2 通話設定
- 3 手機設定
- 4 保密設定
- 5 網路設定
- 6 GPRS設定
- 7 重設用戶數據設定

選擇功能與選項



您的手機提供了一組功能，可讓您自訂手機。這些功能設定在功能表與子功能表中，可透過兩個標有 (左) 與 (右) 的快捷鍵存取。每個功能表與子功能表可讓您檢視與變更特定功能的設定。快捷鍵的功能因操作環境而不同；每個快捷鍵正上方之螢幕底部的標籤會指示其目前功能。

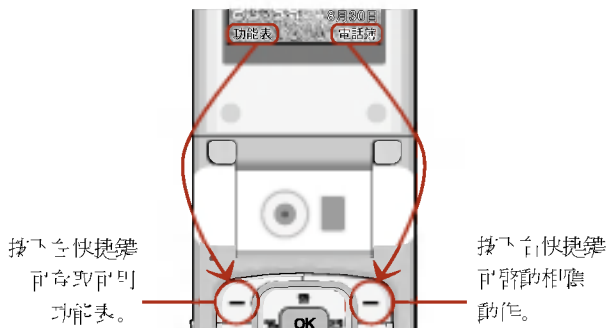



靜音模式 [功能表1]

在靜音模式中，您可以根據不同的事件、環境或呼叫者詳細調整來自訂靜音聲音。

共有五種預設靜音模式：**震動**、**靜音**、**一般**、**人聲**、**到機及汽動**。每種靜音模式都可以更改。

按下「功能表」鍵 (☰)，然後使用導航鍵選擇靜音模式。

變更靜音模式 [功能表1-x-1]

1. 靜音模式清單將會顯示。
2. 在靜音模式清單中，捲動至要啟用的靜音模式並按下左快捷鍵 [選擇] 或「確認」鍵。
3. 然後，選擇啟動。



附註

- 到機或汽動時，若簡訊條件連接到到機時，到機靜音模式或汽動靜音模式會分別自動啟動。

自訂靜音模式 - 更改 [功能表1-x-1]/[功能表1-x-2]

您可以自訂除**震動**與**靜音**之外的靜音模式。在靜音模式清單中捲動至所需的靜音模式。按「確認」鍵或左快捷鍵後，選擇「更改」。靜音模式設定選項將會開啟。請依照所需設定選項。

- **來電提示類型**：設定來電的提示類型。
- **鈴聲類型**：從清單中選擇所需的鈴聲類型。使用上下導航鍵捲動清單。在進行選擇之前，您可以聽到所需的鈴聲。
- **鈴聲音量**：選擇所需的鈴聲音量。
- **簡訊提示類型**：設定訊息的提示類型。



- **簡訊提示音**：選擇簡訊的提示音。
- **按鍵聲音**：選擇所需的按鍵聲音。
- **按鍵音劃**：選擇所需的按鍵音劃。
- **音效音劃**：選擇所需的音效音劃。
- **音源開/關音劃**：設定開啓/關閉手機時所需的鈴聲音劃。
- **自動接聽**：(僅在**手機情報模式**與**汽車情報模式**中) 您可啟用自動接聽功能。選擇自動接聽前的時間。
- **強力鈴聲設定**：(僅在**一般**、**人聲**、**手機**及**汽車情報模式**中) 如果將其設定為開啓，鈴聲音劃將從音劃 1 逐漸升高到您設定在收到來電時的音劃。

自訂情報模式 - 特殊提示 [功能表1-1-2]/[功能表1-2-2]

即使可啓動**震動**情報模式或**靜音**情報模式，仍可將手機設定為在收到某些群組來電時提醒您。

1. 按下快捷鍵 [開啓] 以選擇提醒您群組。
2. 按下快捷鍵 [儲存] 以儲存設定。

自訂情報模式 - 重新命名 [功能表1-3-3]/[功能表1-4-3]

您可用任何名稱重新命名情境模式。一般情報模式與人聲情報模式均可重新命名。

1. 改變情境模式名稱，請在情境模式清單中按動至該情境模式，按下「確認」鍵或快捷鍵，然後選擇**重新命名**。
2. 鍵入所需名稱，然後按下「確認」鍵或快捷鍵 [儲存]。



通話記錄 [功能表2]

(視網路服務而定)

只有當網路在服務區內可撥來電顯示 (CLI) 時，才能檢查未接來電、已接來電及已撥通話記錄。

號碼及名稱 (如有的話) 將與來電日期和時間一起顯示。您還可以用檢視通話時間與費別。按下「功能表」鍵 (☐)，然後使用導覽鍵選擇通話記錄。

未接來電 [功能表 2-1]

此選項可讓您檢視最後10個未接來電。選擇來電號碼後，按下發話鍵 (☛) 即可撥打該號碼。使用左快捷鍵 [選項] 可選擇下列選項。

- **再一般簡訊**：您可以用將一般簡訊發送至此號碼。
- **再多媒體簡訊**：您可以用將多媒體簡訊發送至此號碼。
- **編輯**：編輯來電簿項目。
- **儲存 (在姓名未儲存於來電簿時顯示)**：在來電簿中儲存號碼以建立新的連絡人。
- **新增到姓名 (在姓名未儲存於來電簿時顯示)**：您可以用將號碼新增至現有來電簿項目。
- **刪除**：從清單中刪除來電。
- **檢視詳細資料**：顯示相關來電簡訊。



附註

- 您可以用使用刪除最近來電功能表 [功能表2-4] 刪除清單中的所有通話記錄。



☎撥來簡訊 [功能表 2-2]

此選項可讓您檢視最後 10 個來簡。選擇簡訊號碼後，按 **▼** 簡訊鍵 (☑) 即可撥打該號碼。使用左快捷鍵 [選項] 可選擇下列選項。

- **寄一般簡訊**：您可用將一般簡訊發送至此號碼。
- **寄多媒體簡訊**：您可用將多媒體簡訊發送至此號碼。
- **儲存 (在姓名未儲存於簡訊簿時顯示)**：在簡訊簿中儲存號碼以建立新的聯絡人。
- **新增到姓名 (在姓名未儲存於簡訊簿時顯示)**：您可用將號碼新增至現有簡訊簿項目。
- **刪除**：從清單中刪除來簡。
- **檢視詳細資料**：顯示相關來簡簡訊。



附註

- 您可用簡訊刪除最近來簡功能表 [功能表 2-4] 刪除清單中的所有通話記錄 (視網路服務而定)。

☎撥簡訊 [功能表 2-3]

此選項可讓您檢視最後 10 個撥出簡訊 (已撥或嘗試撥打的簡訊)。選擇簡訊號碼後，按 **▼** 簡訊鍵 (☑) 即可撥打該號碼。使用左快捷鍵 [選項] 可選擇下列選項。

- **寄一般簡訊**：您可用將一般簡訊發送至此號碼。
- **寄多媒體簡訊**：您可用將多媒體簡訊發送至此號碼。
- **儲存 (在姓名未儲存於簡訊簿時顯示)**：在簡訊簿中儲存號碼以建立新的聯絡人。



通話記錄 [功能表2]

(視網路服務而定)

- 新增到姓名 (在姓名未儲存於電話簿時顯示)：您可用將號碼新增至現有電話簿項目。
- 刪除：從清單中刪除來電。
- 檢視詳細資料：顯示相關來電資訊。



附註


- 您可用刪除刪除最近來電功能表 [功能表 2-4] 刪除清單中的所有通話記錄。

刪除最近來電 [功能表 2-4]

使用此功能表可清除未接來電清單、已接來電清單或已撥出電話清單。您也可選擇所有通話，一次性清除所有通話記錄清單。

通話時間 [功能表 2-5]

使用此功能表可檢視來電撥出電話的通話時間。使用上/下導航鍵捲動時，可在螢幕下方查看每次的通話時間。按下「確認」鍵或快捷鍵 [頁註] 可重設選定通話記錄的通話計時器。為防止意外重設，您需輸入安全密碼。

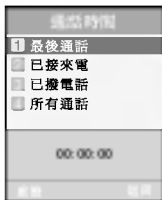

- 最後通話：最後通話時間
- 已接來電：來電時間
- 已撥電話：撥出電話時間
- 所有通話：自上次重設計時器後所有已撥出電話或已接來電的通話總時間。



附註

- 服務供應商所說的實際通話時間可能會因網路功能、計費捨入等而異。

通話計費 [功能表2-6]

此網路服務可讓您檢查上次通話費用與通話費用總計。通話費用顯示在LCD螢幕的底部。若要設置通話費用，請按下列快捷鍵 [設置] 的「確認」鍵。系統會要求您輸入 PIN2 碼。



附註

- 服務供應商所說的實際通話費用可能會因網路功能、計費捨入、稅等而異。

計費設定 [功能表2-7]

- **通話費用限制：**此網路服務可讓您將通話費用限制在某計費單位或貨幣單位內。您可在指定的費用限制內撥打電話或撥號來電。您可在輸入 PIN2 碼後變更通話費用限制。
- **設定幣制：**您可在設定貨幣類型與單位。請與服務供應商聯絡以取得計費單價。在此功能表由選擇貨幣或1個單位，您需輸入 PIN2 碼。



通話記錄 [功能表2]

(視網路服務而定)



附註

- 使用完所有金額後，您無法撥打除緊急電話之外的任何電話。視SIM卡而定，您可能需要PIN2碼以設定通話費限制。
- **自動顯示：**此網路服務可為您自動顯示上次通話的費明。如果在**自動顯示**功能表中選擇**開啟**，您可在結束通話後看到上次通話的費明。

GPRS訊息 [功能表2-8]

您可用從GPRS訊息選項檢查透過網路傳送的資料量。此外，您也可用檢視您在線上的時間 (GPRS是通用封包無線電話服務的縮寫)。

WAP訊息 [功能表2-8-1]

您可用檢查使用WAP所用的資料量與時間。

在選定功能表中，按一下快捷鍵 [重設] 或「確認」鍵將清除計數器。

外部裝置 [功能表2-8-2]

您可用檢查外部裝置 (如串列埠) 使用GPRS所用的資料量與時間。

總數擦 [功能表2-8-3]

您可用檢查透過WAP與外部裝置使用的資料總量。

我的工具箱 [功能表3]



按下「功能表」鍵 (F1)，然後使用導覽鍵選擇我的工具箱。

我的資料夾 [功能表3-1]

我的資料夾包含4個資料夾：圖片、影片擺放區、動畫及聲音。
透過WAP、MMS或EMS下載的內容將儲存在每個資料夾中。
您可以檢視、刪除或控制下載的內容。

圖片 [功能表3-1-1]

使用快捷鍵 [選項]，您可以透過 SMS 或 MMS 傳送圖片，將其設定為待機圖片、重新命名或刪除。

動畫 [功能表3-1-2]

使用快捷鍵 [選項]，您可以透過 MMS 傳送動畫、將其設定為待機圖片、重新命名或刪除。

影片擺放區 [功能表3-1-3]

透過WAP服務或電腦同步下載的影片檔案會儲存在此資料夾中。
按下快捷鍵 [選項] 後，您可以針對每個影片檔案使用下列選項。



我的工具箱 [功能表3]

珍藏夾 [功能表3-2]

在此功能表中，您可以使用相同的功能表建立不同的功能表用於存取。

在待機模式下，您可以按下導覽鍵 (☰) 來存取「珍藏夾」功能表。

1. 從功能表編號1至9中選擇所需的位數後，按下快捷鍵 [F1]。
2. 按下快捷鍵 [選擇] 來選擇或新增的功能表。該功能表會新增在「珍藏夾」功能表中，並顯示快顯訊息「已啟動」。



附註

- 您最多可以新增9個功能表。

建立「珍藏夾」功能表後，在每個珍藏夾功能表中，按下快捷鍵 [選項] 即可使用下列選項。

- 選擇：選擇功能表。
- 更改：您可以使用其他功能表來變更珍藏夾功能表。
- 刪除：刪除選定的珍藏夾功能表。
- 全部刪除：刪除所有珍藏夾的功能表。
- 檢視詳細資料：顯示珍藏夾功能表的路徑。



單位換算器 [功能表3-3]

可將任何測量值從一個單位換算到另一個單位。

可換算的單位類型有 4 種：長度、面積、重量及體積。

1. 按下快捷鍵 [單位] 以選擇四種單位類型中的其中一種。
2. 按下導覽鍵以移至「目前單位」部分。
3. 使用左側導覽鍵選擇要換算的單位。
4. 按下導覽鍵以移至「換算單位」部分。
5. 使用左側導覽鍵選擇要換算成的單位。
6. 使用數字鍵輸入數字。系統會自動計算換算。



附註

- 您可用按下  鍵輸入小數點。

計算機 [功能表3-4]

使用此功能，您可用將手機叫作計算機。計算機提供基本的計算功能：加、減、乘及除。

使用計算機

1. 使用數字鍵輸入第一個數字。
2. 按下相應的導覽鍵以選擇數學函數。



我的工具箱 [功能表3]



附註

- 要清除任何錯誤的顯示，請使用 **C** 鍵。
- 要包含小數點，請按下 **MC** 鍵。
- 要包含減號，請按下 **MS** 鍵。

3. 要計算結果，請按下快捷鍵 [結果] 或「確認」鍵。
4. 計算後，按快捷鍵 [清除] 以返回起始狀態。

時區設置 [功能表3-5]

您可以使用主頁導覽鍵，查看目前格林威治時間 (GMT) 與世界主要 52 個城市的時間。螢幕上會顯示城市名稱、目前日期與時間。要選擇您所在的時區，請如下所述進行：

1. 按一下或多下主頁導覽鍵以選擇與您的時區相對應的城市。當地日期與時間將會顯示。
2. 如果即將在待機模式下的時間顯示變更為選定時間，請按快捷鍵 [設定]。



附註

- 網路狀況可能會影響時區設置功能表中每個城市的時區設定值。



語音備忘錄 [功能表3-6]

您可用錄製備忘錄。您最多可用錄製3則語音備忘錄，每則備忘錄最長30秒。

您可用側邊快捷鍵 [選項] 來播放或刪除錄製的備忘錄或錄製新的語音備忘錄。

新錄音 [功能表3-6-1]

1. 刪錄製語音備忘錄，請選擇**新錄音**。
2. 開始錄製後，會顯示「錄製中...」訊息與錄製時間。
3. 錄製完後，按下快捷鍵 [儲存]。



附註

- 如果所有備忘錄空間都已滿，您必須刪除舊備忘錄才能錄製新備忘錄。

檢視清單 [功能表3-6-2]

有機會從最近的備忘錄開始顯示語音備忘錄清單。您可用側邊快捷鍵 [選項] 來播放或刪除錄製的備忘錄，或透過MMS印傳發送。您也可刪除所有備忘錄。

啓動紅外線 [功能表3-7]

此功能可讓您透過紅外線埠傳送或接收資料/傳真。要使用紅外線連接，請：

- 安裝用於接收或傳送資料/傳真的數據機驅動程式。
- 將網路供應商提供的網路撥號軟體或用於傳真通話的傳真應用程式安裝在電腦上。



我的工具箱 [功能表3]

- 設定與啟動電腦上的符合 IrDA 標準的紅外線埠。
- 啟動手機上的紅外線功能：III 符號會出現在顯示幕底部的右側。
- 撥打服務供應商提供給您的網路服務號碼。

如果在啟動該功能30秒內手機與符合 IrDA 標準的裝置之間無法進行通訊，該功能會自動關閉。取得更多詳細資料，請與網路供應商聯絡。



附註

- 電腦同步作用是基於透過纜線在電腦與手機之間交換資料的程序。因此，如果您使用此功能，您需配附件。取得更多資訊，您可以使用閃光碟上的電腦同步作用圖檔。
- 使用此 IrDA 功能，您可以傳輸任何您想傳的項目，如電話簿項目、訊息、圖片、影片、MP3 檔案等。



請按下「功能表」鍵(☰)。使用導覽鍵選擇公事印。

青話簿 [功能表4-1]

您可以將青話號碼及其主人姓名儲存在 SIM 卡記憶體中。此外，您還可以在手機記憶體中最多儲存 255 個號碼與姓名。在待機模式下按下快捷鍵 [功能表]，然後選擇公事印 → 青話簿。

或者，在待機模式下按下快捷鍵 [青話簿]。

尋找 [功能表4-1-1]

1. 在待機模式下，按下快捷鍵 [青話簿]。選擇尋找。
2. 輸入要尋找的姓名的開頭文字。
3. 找到所需的姓名後，您可以按下號碼鍵 (☎) 來撥打號碼，或按下快捷鍵 [選項] 以使用下列選項。
 - **寫一般簡訊**：使用此選項可編寫一般簡訊給該姓名。
 - **寫多媒體簡訊**：使用此選項可編寫多媒體簡訊給該姓名。
 - **照片檢索**：顯示青話簿中儲存的所有影像。您可以按單件搜尋青話簿。
 - **語音**：錄製選定青話簿項目的姓名以進行語音撥號。
 - **修改**：修改姓名、號碼，以及群組和照片。
 - **複製**：使用此選項可將青話簿項目從 SIM 卡複製到手機記憶體，反之亦然。選擇是否保留原始青話號碼。
 - **刪除**：刪除青話簿項目。
 - **檢索詳細資料**：檢索選定姓名的詳細資料。



分頁印 [功能表4]

新增 [功能表4-1-2]

您可以用此功能新增青語簿項目。

共有 2 個記憶體：手機記憶體與 SIM 卡記憶體。您選擇記憶體，請移至 **記憶設定** [功能表4-1-8] 手機記憶體容納為 255 個項目。在手機記憶體中，每個姓名最多可以輸入 20 個字元。SIM 卡記憶體容納與 SIM 卡相同。

1. 在待機模式下按下快捷鍵 [青語簿] 先開啓青語簿。
2. 按動用及自顯示 **新增**，然後按下 [確認]。
3. 您可以用將青語簿項目新增至 SIM 卡記憶體或手機記憶體。您選擇記憶體，請移至 **記憶設定** [功能表4-1-8] (請參閱第 59 頁)。

- **將項目新增至 SIM 卡記憶體**

您可以用輸入姓名與號碼，選擇來青群組，以及附加附件影像 (與 SIM 卡相同)。

- **將項目新增至手機記憶體**

您可以用輸入姓名、號碼、青語郵件地址及備忘錄，選擇來青群組，以及附加附件影像。

提示

- **暫停功能**：呼叫自動系統 (如語音信箱或信引變易號碼) 時，通常必須輸入一系列號碼。除可以輸入這些號碼外，您還可以用暫停功能將這些號碼儲存在青語簿中。在撥入暫停的號碼之間，按住 **[#57]**。



附註

- 本手機支援照片來青者 ID 功能。



快速撥號 [功能表4-1-3]

您可以用 [2-9] 至 [9] 之間的任何鍵指派一個姓名清單項目。

您可以用住此鍵 2-3 秒來直接撥號。

1. 在待機模式下按下主快捷鍵 [青話簿] 先開啟青話簿。
2. 捲動至快速撥號，然後按下 [確認]。
3. 將號碼新增至快速撥號，請按下主快捷鍵 [加+]。在青話簿中搜尋姓名。
4. 您可以用按下主快捷鍵 [選項] 來變更或刪除快速撥號號碼，撥打青話簿傳送訊息。

刪掉撥號清單 [功能表4-1-4]

您可以用檢查所有已指派語音撥號的青話號碼。您也可以用按下 [發送] 鍵來直接撥號。使用上/下導覽鍵選擇青話號碼後，按下主快捷鍵 [選項]。您可以用查看下列功能表。

- **新增**：新增用於語音撥號的青話號碼。
- **播放**：播放指派給青話號碼的語音標籤。
- **更改**：更改指派給青話號碼的語音標籤。
- **刪除**：刪除指派給青話號碼的語音標籤。
- **全部刪除**：刪除所有語音撥號號碼。



附註

- 您最多可以用輸入 10 個青話號碼用於語音撥號。



群組印 [功能表4]

群組 [功能表4-1-5]

共有6個預先定義的群組，以及一個標記為**其他**的額外群組，您可以在此處建立清單。

1. 選擇群組。每個群組清單將會顯示：**家人**、**親朋人士**、**朋友**、**同事**、**群組 1**、**群組 2** 及其他。
2. 按下快捷鍵 [選項] 以選擇您需要的群組名稱。除其他外，將會顯示下列功能表。
 - **新增號碼**：將號碼新增至群組。
 - **成員清單**：顯示群組內的成員清單。
 - **來電群組鈴聲**：使用此選項可選擇收到群組由來者來電時使用的鈴聲。
 - **群組圖示**：使用此選項可選擇收到群組由來者來電時顯示的圖形圖示。
 - **重新命名**：給群組指派新名稱。
 - **刪除號碼**：刪除群組內的成員。

全部複製 [功能表4-1-6]

您可以將項目從SIM卡記憶體複製/移動到手機記憶體，反之亦然。


- **SIM卡存至手機**：使用此選項可將項目從SIM卡複製到手機記憶體。
- **手機存至SIM卡**：使用此選項可將項目從手機記憶體複製到SIM卡。

您可以使用下列選項。

- **保留原始號碼**：複製時，保留原始撥號號碼。
- **刪除原始號碼**：複製時，清除原始撥號號碼。



全部刪除 [功能表4-1-7]

您可以刪除 SIM卡、手機及語音清單中的所有項目。除語音清單之外，此功能需輸入安全密碼。按下  返回待機模式。

記憶設定 [功能表4-1-8]





您可以在SIM卡與手機之間選擇用於語音簿功能的記憶體。如果選擇自選，則在新增項目時，手機會詢問儲存號碼的位置。

訊息提示 [功能表4-1-9]

- **記憶體狀態**：您可以檢查SIM卡與手機記憶體的目前記憶體狀態。
- **本機號碼 (非SIM卡也)**：使用此選項可在SIM卡上顯示您的手機號碼。


鬧鐘 [功能表4-2]


您可以設定在指定的時間鬧鈴。

1.  **鬧鐘開啓/關閉**：使用左/右導航鍵選擇開啓。
要關閉鬧鐘功能，請選擇關閉。
2.  **鬧鐘時間**：使用數字鍵輸入鬧鐘時間。
3.  **重複**：使用左/右導航鍵選擇一次、每日、每週或每月。
4.  **鬧鈴**：使用左/右導航鍵選擇所需的鬧鈴。
5. 按下快捷鍵 [設定] 的「確認」鍵。



 

 

 


行程印 [功能表4]


啟動鬧鐘功能後，在待機模式下會印顯示 。達到鬧鐘時間時，鬧鈴會響起。

▶ 要關閉鬧鐘，請按  快捷鍵 [退出]。

 
 
行程表 [功能表4-3]

進入此功能表時，行事曆會出現。目前日期會顯示為游標。
使用導覽鍵可將游標移至其他日期。您可在行事曆中使用下列按鍵。


每按 	 會倒退一年。
	 會前進一年。
	 或  會倒退一個月。
	 或  會前進一個月。

要返回今日日期，請按 。

要在選定日期輸入行程表記錄，

1. 按  快捷鍵 [選擇]，然後選擇新增。
2. 輸入記錄，然後設定鬧鐘時間。
3. 在重複選項中選擇所需的設定。
4. 選擇何時響鈴。
! 附註：即使關機，行程表鬧鐘也會響鈴。
5. 按  快捷鍵 [儲存] 或 OK 鍵進行儲存。



在某個日期輸入行程後，該日期會以不同顏色顯示， 也會出現在螢幕的右下方。

此功能會提醒您已安排的行程。如果將手機設定為靜音提醒，則手機會響鈴。您可以使用下列選項。

新增：您最多可以編排40個字元，建立30則記錄。

檢視所有行程表：顯示各天設定的記錄。

使用上/下導覽鍵瀏覽記錄清單。

進入日期：使用此選項可變更指定的日期。請使用數字鍵與左/右導覽鍵輸入日期。

行程警：可返回行程警。

編輯：使用此選項可編輯行程。

行程鬧鈴：在到達事件排定的日期與時間時，手機會發出鬧鈴。請選擇所需鈴聲。

刪除：使用此選項可刪除行程。

刪除舊記錄：您可以刪除已通知的過期的行程記錄。

全部刪除：使用此選項可刪除所有行程。系統會提示您確認此操作。



公司印 [功能表4]

備忘錄 [功能表4-4]

新增 [功能表4-4-1]

此功能表可用於新增備忘錄。本手機可儲存20條備忘錄，每條備忘錄最多可儲存60個字元。輸入備忘錄後，按下快捷鍵 [選項]。

- **儲存**：可讓您儲存備忘錄。
- **T9 語言**：在備忘錄中選擇使用 T9 語言。
- **退出編輯器**：可讓您從備忘錄編輯器中退出。

檢視清單 [功能表4-4-2]

選擇此功能表可檢查已記錄的備忘錄。

1. 選擇備忘錄。
2. 按下快捷鍵 [選擇]。



附註

- 選定備忘錄可開啟。您可使用上/下導航鍵直接檢視其他備忘錄，而不需返回備忘錄清單。


3. 按下快捷鍵 [選項]。您可用以下列選項。
 - **編輯**：您可用編輯選定備忘錄。
 - **刪除**：刪除選定備忘錄。
 - **全部刪除**：刪除所有備忘錄。系統會提示您確認此操作。




 
按下「功能表」鍵(☰)，然後使用導覽鍵選擇訊息。

一般簡訊 [功能表5-1]

您的手機可接收語音信箱通知簡訊與簡訊服務(SMS)訊息。語音信箱與 SMS 為網路服務。請與系統業者聯絡以取得更多資訊。

此圖示  出現時，表示收到語音訊息。

此圖示  出現時，表示收到新的一般簡訊。

如果訊息記憶體已滿，會出現一則訊息，此圖示  將會閃爍，您無法接收任何新訊息。

使用刪除選項(在收信箱功能表中)，刪除舊訊息。

一旦訊息記憶體已用剩空間，即會接收未收到的 SMS 訊息(假設有足夠的空間可用)。

簡訊 [功能表5-1-1]

您最多可用編碼 6 頁一般簡訊(約 918 個字元)。

1. 鍵入訊息。取得有關如何輸入文字的詳細資料，請參閱第 30 到 35 頁(「輸入文字」)。
2. 完成訊息後，按下主快捷鍵 [選項] 以選擇所需的選項。您可用使用下列選項。
 - **發送**：輸入號碼，或在對話簿中選擇號碼，或使用主快捷鍵 [選項] 選擇最近使用的號碼。一則訊息每次最多可用傳送至 5 個電話號碼。
 - **儲存到草稿**：可讓您儲存訊息，以便稍後再傳送。
 - **T9 語言**：選擇 T9 輸入模式語言。選擇「停用 T9」可停用關閉 T9 輸入模式。取得有關 T9 模式的詳細資料，請參閱第 30 至 33 頁。
 - **清除文字**：清除所有文字。



訊息 [功能表5]

- **退出編輯器**：可讓您從簡訊功能表中退出。
3. 您可在簡訊中傳送附件，在輸入訊息的同時，按下快捷鍵 [附件] 即可。

- **符號**：您可在簡訊中附加特殊字元。



附註

- 在簡訊中進行按鍵操作時，您可按下 **(*)** 來插入特殊字元。

- **表情符號**：您可在手機中預設各種表情符號。
- **圖片**：您可傳送要接收包含圖片的一般簡訊，稱為「圖片簡訊」。手機中自有多種預設圖片可供使用，您可使用從其他來源取得的圖片更換這些預設圖片。
- **動畫**：透過 EMS (進階簡訊服務) 可在簡訊中附加動畫。您可在手機的 15 個動畫中進行選擇。
- **聲音**：如果提供此功能，您可在簡訊中附加聲音。
- **文字縮本**：您可使用可在手機中設定文字縮本。
- **簡訊號碼**：您可在簡訊中新增簡訊號碼。
- **名片**：您可在簡訊中附加名片。

收信箱 [功能表5-1-2]

您可在收到的一般簡訊與簡訊中進行搜尋，還可檢視其內容。收到訊息將按日期順序顯示。



按下「功能表」鍵，然後依次選擇訊息 → 一般簡訊 → 收信箱。

或在待機模式下，按下右導聽鍵 (⏪) 以使用快捷鍵。

收到每則訊息前有下列可選項。按下左快捷鍵 [選項]。

圖示	說明
	已讀 SIM 訊息
	未讀 SIM 訊息
	已讀訊息
	未讀訊息
	已讀傳遞報告
	未讀傳遞報告



附註

- 訊息指的是儲存在 SIM 卡記憶體中的訊息。網路會將收到的訊息區分為 SIM 卡訊息或單純的訊息。

- **回覆**：回覆收到的訊息。
- **轉發**：將收到的訊息轉發給其他收件者。
- **回覆簡訊**：撥打寄件者的簡訊。
- **儲存資料**：儲存訊息中的圖片、聲音、文字網址或電子郵件地址，這些資料將會儲存到「我的資料夾」、「簡訊簿」或書簽中。
- **刪除**：刪除收信箱中的選定訊息。



訊息 [功能表5]

發信箱 [功能表5-1-3]

您可在此功能表中檢視傳送訊息的清單與內容，還可用確認傳輸是否成功。

圖示	說明
	傳送 SIM 訊息
	傳送訊息

您可用使用下列選項。

- **轉發**：將目前的訊息轉發給其他收件者。
- **刪除**：刪除收件箱中的選定訊息。

草稿 [功能表5-1-4]

在此功能表中，您可用查看儲存為草稿的訊息清單。使用上下導覽鍵捲動清單。按下左快捷鍵 [選項] 可傳送草稿訊息。

設定 [功能表5-1-5]

此功能表可讓您設定預設 SMS 資訊。

- **訊息類型**：設定預設訊息類型 (文字、語音、傳真、傳呼、X.400、電子郵件及 ERMES)。網路可將訊息轉換成選定格式。
- **簡訊有效期**：設定一般簡訊儲存在 SMS 匣中的時間長度，在這同時會嘗試將一般簡訊傳送至收件者。可用值有 30 分鐘、1 小時、6 小時、1 天、1 週月及系統業者認定的最大值。
- **簡訊控制**：有 4 種待機圖示可供選擇以插入一般簡訊。
- **傳遞報告**：啟動或關閉報告功能。啟動此功能後，網路會通知您是否可傳送訊息。
- **回復付費**：可讓您 SMS 訊息的收件者透過您的訊息匣傳送回覆 (如果網路提供此服務的語)。

 


- **簡訊中心號碼：**儲存或變更傳送一般簡訊所用的 SMS 中心號碼。您必須向服務供應商取用此號碼。
- **傳送方式設定：**選擇 GPRS 或 GSM。請與您的系統業者或服務供應商聯絡，以取用有關設定選定傳送方式、定價及連線速度的資訊。

多媒體簡訊(MMS) [功能表 5-2]

多媒體簡訊可以包含文字、影像及/或聲音片段。此功能僅在您的系統業者或服務供應商提供支援時才能使用。僅提供相若多媒體簡訊的電子郵件功能的裝置才能接收與傳送多媒體簡訊。

寫簡訊 [功能表 5-2-1]

1. 鍵入一般簡訊。使用右快捷鍵輸入符號、數字及表情符號，或選擇文字輸入模式。輸入一般簡訊後，按下快捷鍵 [完成]。
2. 新增影像與/或聲音。使用上/下導覽鍵移至下一前節。
3. 將游標移至幻燈片上 ，然後按下「確認」鍵或快捷鍵 [選擇]，以新增幻燈片。您也可以使用右快捷鍵 [功能表] 新增幻燈片。



附註

- 最多可新增 9 個幻燈片。

4. 按下快捷鍵 [功能表]。您可以用以下選項。
 - **發送：**選擇此選項可傳送多媒體簡訊。本手機支援多個號碼與電子郵件地址。
 - **預覽：**顯示您剛傳送的多媒體簡訊。



訊息 [功能表5]

- **儲存**：您可以將多媒體簡訊儲存在草稿印或儲存為副本。
- **刪除**：刪除已建立的訊息。
- **訂持續時間**：設定您的燈光持續時間。使用數字鍵輸入所需的持續時間。
- **頁格式**：選擇影像對齊的位置。
- **新增頁**：在目前頁燈片之前或之後新增頁燈片。
- **刪除頁**：刪除選定頁燈片。

收信箱 [功能表5-2-2]

手機會在收到訊息時提示您。收到的訊息會儲存在「收信箱」印。您可以透過圖示識別各訊息。取得詳細資料，請參閱下列圖示說明。

圖示	說明
	已閱讀一般簡訊
	未閱讀一般簡訊
	已閱讀通知簡訊
	未閱讀通知簡訊
	已閱讀高優先順序簡訊
	未閱讀高優先順序簡訊
	已閱讀低優先順序簡訊
	未閱讀低優先順序簡訊

如果手機顯示「訊息儲存空間不足」，您可以透過刪除部分訊息、媒體及應用程式來取回空間。



- **計時器停止：**在您收到含有各種圖片的訊息時，「計時器停止」功能表將會顯示。通常，這些圖片會自動按順序顯示。如果您選擇此功能表，則可自動按下列快捷鍵 [下一個] 顯示下一張圖片。
- **計時器開始：**選取此功能表可再次啟動自動顯示幻燈片。
- **前一頁：**顯示上一張幻燈片。
- **重播：**從第一張幻燈片開始重新啟動幻燈片播放。
- **儲存訊息：**將多媒體簡訊儲存在草稿中或儲存為副本。
- **儲存項目：**儲存圖片或聲音。這些資料將會儲存在「我的資料夾」或「黃話簿」中。
- **詳細資料：**顯示有關收到訊息的資訊：寄件者地址、主題 (僅適用於多媒體簡訊)、訊息日期與時間、訊息類型、訊息大小。
- **回覆：**回覆寄件者的訊息。
- **全部回覆：**回覆所有寄件者。
- **刪除訊息：**刪除目前訊息。
- **轉寄：**將選定訊息轉發給其他收件者。

發信箱 [功能表 5-2-3]

使用此功能表可直看已發訊息。每次發送訊息時，均可直看訊息的傳送狀態。

圖示	說明
	已傳送

- **計時器停止：**在您收到含有各種圖片的訊息時，「計時器停止」功能表將會顯示。通常，這些圖片會自動按順序顯示。如果您選擇此功能表，則可自動按下列快捷鍵 [下一個] 顯示下一張圖片。



訊息 [功能表5]

- **計時器開始**：選擇此功能表可藉由啟動自動顯示幻燈片。
- **上一張幻燈片**：顯示上一張幻燈片。
- **直播**：從第一張幻燈片開始重新啟動幻燈片播放。
- **儲存訊息**：將多媒體簡訊儲存為草稿形式或副本。
- **儲存項目**：儲存圖片或聲音。這些資料將會儲存在「我的資料夾」或「簡訊簿」中。
- **詳細資料**：顯示有關收到訊息的資訊：寄件者地址、主題 (僅適用於多媒體簡訊)、訊息日期與時間、訊息類型、訊息大小。
- **刪除訊息**：刪除目前訊息。
- **轉發**：將選定訊息轉發給其他收件者。

草稿 [功能表5-2-4]

使用此功能表，您可以預設多達三個最簡明的多媒體簡訊。此功能表會顯示預設的多媒體簡訊清單。

您可以使用下列選項。

- **發送**：選擇此選項可傳送多媒體簡訊。本手機支援多個號碼與電子郵件地址。
- **預覽**：顯示您將傳送的多媒體簡訊。
- **儲存**：您可以將多媒體簡訊儲存在草稿中或儲存為副本。
- **刪除**：刪除已建立的訊息。
- **持續時間**：設定幻燈片持續時間。使用數字鍵輸入所需的持續時間。
- **格式**：選擇影像對齊的位置。
- **新增**：在目前幻燈片之前或之後新增幻燈片。
- **刪除**：刪除選定幻燈片。



設定 [功能表 5-2-5]

透過此功能表，您可以設定預設多媒體簡訊資訊。

您可以使用下列選項。

- **訊息主題**：輸入訊息的主題。
- **幻燈片持續時間**：設定各幻燈片的持續時間。
- **對齊**：選擇影像對齊的位置。
- **有效期**：設定信息儲存在網路伺服器上的持續時間。
- **自動下載**
 - **開啟**：如果選擇此選項，訊息在收到時會自動下載。
 - **確認**：要求您確認是否自動下載訊息。
 - **關閉**：延遲訊息下載。
- **網路設定**：您需依據您所使用的行動電話系統選擇，相關參數如下：



請注意！

- 請您於設定MMS時依據您所使用的系統業者設定網路
(中華電信)：Chunghwa MMS
(遠傳電信)：FET MMS
(台灣大哥大)：TWN MMS
(鼎信電信)：Mobitai MMS
(遠東電信)：TransAsia MMS




訊息 [功能表5]


語音信箱 [功能表5-3]

此功能表可讓您快速存取語音信箱(如果網路提供此服務)。

使用此功能之前，您必須輸入從系統業者取得的語音信箱服務號碼。

收到新的語音訊息時，此符號  會在螢幕上顯示。請向您的網路供應商諮詢以取得其服務的詳細資料，以便正確設定手機。

聽取語音信箱 [功能表5-3-1]

一旦選定此選項，僅需按下左快捷鍵 [確認] 即可聽取語音信箱。您也可以用在待機模式下，按下  鍵聽取語音信箱。

語音信箱號碼 [功能表5-3-2]

您可以輸入並設定語音信箱號碼。

區域廣播 [功能表5-4]

區域廣播訊息是網路傳送給行動電話用戶的一般簡訊，其內容主要為一般資訊，例如：天氣預報、交通新聞、出程前資訊、票價及股票行情。各種類型的資訊以數字代表，此數字可向系統業者取閱。在收到資訊服務訊息時，會有一則快顯訊息提示您收到新訊息，或資訊服務訊息會直接顯示。在待機模式下，檢視資訊服務訊息時有下列可選選項。

接收 [功能表5-4-1]

使用此功能表可幫助或關閉廣播訊息接收。

收信箱 [功能表5-4-2]

您可以在其日搜尋收到的廣播訊息清單，還可用檢視訊息內容。



主題 [功能表5-4-3]

(視網絡突擊新聞情況)

新建或新的主題，請按 **+** 快捷鍵 [選項]，然後選擇 **新增**。如果您已經建立主題，則可使用 **+** 快捷鍵 [選項] 來關閉、編輯或刪除主題。

鬧鈴提示 [功能表5-4-4]

將新廣播訊息提示設為開啓或關閉。

自動顯示 [功能表5-4-5]

如果將此選項設為開啓，則收到的所有廣播訊息將會自動顯示。

語言 [功能表5-4-6]

(視網絡突擊新聞情況)

此選項可讓您選擇優先使用的語言。收到的每則廣播訊息會以選定語言顯示。如果使用的手機支援的所有語言，請選擇清單最後的自動。

簡本 [功能表5-5]

清單中提供預先定義的訊息。您可以檢視與編輯簡本訊息或建立新訊息。有兩種簡本類型可選：文字與多媒體。

一般簡訊 [功能表5-5-1]

- 請回電。
- 對不起！我遲到了，...之後缺到。
- 您現在在哪裏？
- 我在路上。
- 非常緊急，請速聯繫！
- 我愛你！



訊息 [功能表5]

您可以使用下列選項。

- **修改**：使用此選項可撰寫新訊息，或編輯文字簡本清單中的選定簡本訊息。
- **刪除**：刪除文字簡本清單中的選定簡本訊息。
- **以一般簡訊發送**：使用此選項可透過 SMS 傳送選定簡本訊息。
- **以多媒體簡訊發送**：使用此選項可透過 MMS 傳送選定簡本訊息。
- **新增**：使用此選項可建立新的簡本。

多媒體簡訊 [功能表5-5-2]

- **發送**：傳送多媒體簡訊簡本。支援多個號碼與電子郵件地址。
- **預覽**：顯示草稿多媒體簡訊。
- **儲存**：將多媒體簡訊儲存為草稿形式的簡本。
- **刪除**：刪除多媒體簡訊。
- **保持時間**：設定每燈片持續時間。使用數字鍵輸入所需的持續時間。
- **印格式**：選擇影像對齊的位置。
- **新增印**：在目前每燈片之前或之後新增每燈片。
- **刪除印**：刪除目前顯示的每燈片。



名片 [功能表5-6]

此選項可協助您製作個人名片。

1. 按 **↵** 快捷鍵 [印]。
2. 鍵入姓名、手機號碼、公司電話號碼、傳真號碼及電子郵件地址。
3. 按 **↵** 快捷鍵 [儲存]。名片由下列選項可引。
 - **修改**：此選項可引於編輯名片。
 - **刪除**：此選項可引於刪除名片。
 - **用一般簡訊發送**：使用此選項可透過 SMS 傳送名片。



附註

- 您也可用在撰寫一般簡訊時，使用附加功能加入名片。請參閱第 64 頁。
- **用多媒體簡訊發送**：透過 MMS 傳送名片。

記憶體狀態 [功能表5-7]

您可檢查一般簡訊與多媒體簡訊目前的記憶體狀態。



數位影像功能 [功能表6]

T5100 內建一個三百三十萬像素數位照相機，可讓您以 1280x960 像素的最大解析度拍攝照片 (亦稱為 SXGA)。CMOS 感測器可確保影像的高精確度與品質。其他的功能，如 4 倍縮放 (視解析度而定)、影像控制、白平衡以及高彩效果等，都將使您拍攝更加有趣。

整合式閃光燈可讓您在光線條件極差的环境下拍攝。

整合式閃光燈還可用來拍攝影片和使用的 VOD (隨選視訊) 服務，如此一來，可讓您從 WAP 下載影片。

按下「功能表」鍵 (F1)，然後使用導覽鍵選擇數位影像功能，您也可用按下 [回] 或在待機模式下按下 [回] 以移至此功能表。

❗ 附註：如果電池電量過低，您可能無法使用「照相機」功能。

拍照 [功能表6-1]

按下「功能表」鍵，然後依次選擇數位影像功能 → 拍照，或在待機模式下，按住照相機快捷鍵 ([回] 或 [回]) 2 秒鐘以上。隨後即可看到觀景窗。

在拍攝前，請按下快捷鍵 [功能表] 設定下列值。



- ① **孔燈**：共有 6 個等級可選。
- ② **白平衡**：共有 5 個設定可選：
「自動」、「日光」、「日光燈」、
「陰天」及「室內燈光」。
- ③ **解析度**：請參閱第 79 頁以取得
更多資訊。
- ④ **色彩模式**：共有 5 個設定可選：
「彩色」、「黑白」、「復古」、
「藍調」及「自然」。

- ⑤ **拍攝模式**：在「單張拍攝」與「連續拍攝」之間選擇。
- ⑥ **相簿**：存取「我的相簿」。在拍攝後，可使用此鍵查看
拍攝的影像。
- ⑦ **退出**：選擇此鍵可退出設定功能表。

在各設定功能表之間移動，請使用左/右導覽鍵。


返回顯示功能表後，按下「確認」鍵以開啟功能表。

使用左/右導覽鍵選擇所需的值，然後按下「確認」鍵進行確認。



數位影像功能 [功能表6]

拍攝之前，您也可使用下列的按鍵。

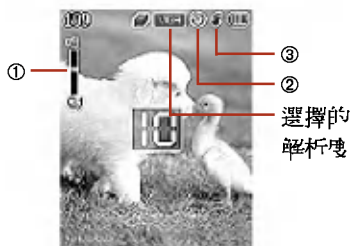

- ① **變焦列**: 您可使用上下導
覽鍵 (◀, ▶) 或上下
側邊鍵進行放大/縮小。
該列顯示變焦狀態。
最大的變焦範圍顯示下列
圖片大小而定。

SXGA(1x) / VGA(4x) / QVGA(4x) / 超廣角(1x)

- ② **定時拍攝**: 要啓動/關閉自動定時拍攝，請按 。定時拍攝
啓動時， 會顯示。



注意

- 您可使用**定時拍攝**功能表 [功能表 6-6-4]
設定所需的延遲時間。

- ③ **閃光燈**: 開啓/關閉閃光燈，請按 。閃光燈開啓時， 會
顯示。




附註

- 您可使用**閃光燈模式** 功能表 [功能表 6-6-5]
設定所需的閃光燈模式。



 
拍攝單張靜態照片 ()

1. 在預覽模式中，按一下快捷鍵 [功能表] 以打開相機設定功能表。
2. 返回自拍攝模式，請使用左側導覽鍵選擇「確定」鍵。
3. 選擇單張拍攝模式 ()。




附註

- 在單張拍攝模式中，您可以選擇解析度有：QVGA (320X240)、VGA (640X480)、SXGA (1280X960) 及超廣角 (1280X640)。

4. 完成相機功能設定後，對準目標進行拍攝並按下「照相機」鍵 ()。按一下，就能拍攝圖片並自動儲存至我的相簿 (請參閱第 81 頁)。

 
連續拍攝多個影像 ()

1. 在預覽模式中，按一下快捷鍵 [功能表] 以打開相機設定功能表。
2. 返回自拍攝模式，請使用左側導覽鍵選擇「確定」鍵。
3. 選擇連續拍攝模式 ()。



附註

- 在連續攝影模式中，您可以選擇 QVGA (9 張) 與 VGA (3 張) 兩種解析度。

4. 完成相機功能設定後，對準目標進行拍攝並按下「照相機」鍵 ()。按一下，就能拍攝圖片並自動儲存至我的相簿 (請參閱第 81 頁)。



數位影像功能 [功能表6]

拍攝影片 [功能表6-2]

您最多可錄製 30 分鐘的影片。但是這全都視解析度的大小、影片記憶容量對和影片壓縮的數率對而定。

按下「功能表」鍵並選擇**數位影像功能** → **拍攝影片**。

您可按下「照相機」鍵(圖)用在此功能表中錄製影片。

1. 拍攝前，您可按下快捷鍵 [功能表] 設定所需的拍攝值。



- ① **解析度**：共有 6 個等級可選。
- ② **自拍定時器**：共有 5 個設定可選：「自動」、「日光」、「室內弱光」、「陰天」及「日光燈」。
- ③ **解析度**：從 QCIF(176X44)、S-QCIF(128X96) 及多媒體簡訊選擇所需的解析度。使用多媒體簡訊，選擇多媒體簡訊發送影片。

① ② ③ ④ ⑤

④ **色彩模式**：共有 5 個設定可選：「彩色」、「黑白」、「復古」、「藍調」及「自然」。

⑤ **退出**：選擇此鍵退出設定功能表。

您可使用以下功能 (如需要更多資訊，請參閱第 78 頁)。

- 自拍定時器：按

- 開光燈：按

2. 按下「照相機」鍵開始錄製影片。LCD 螢幕上顯示「錄製中」。



3. 要停止錄製，再按一次「照相機」鍵。影片將自動儲存到我的相簿 [功能表 6-5]。按下「照相機」鍵，您可繼續錄製另一段影片。



相框拍攝 [功能表-6-3]

按下「功能表」鍵並選擇**數位影像功能** → **相框拍攝**。

您可以享受使用各種預設相框拍攝的樂趣。共有 15 種相框。

1. 選擇所需的相框拍攝，按下主快捷鍵 [功能表]。
2. 返回相框 ()，請使用左/右導航鍵並按下「確定」鍵。
3. 選擇所需的相框後，按下「確定」鍵。
4. 選擇退出 ()，退出選項功能表，然後按下照相機鍵進行拍攝。拍攝的影像會自動儲存至**我的相簿** (請參閱第 81 頁)。



附註

- 相框拍攝的解析度固定為 176x220 像素。

我的相簿 [功能表-6-4]

按下「功能表」鍵並選擇**數位影像功能** → **我的相簿**。

所有在拍照功能表所拍攝的靜態圖片皆儲存在此功能表中。您可以檢視、整理和發送儲存在相機中的圖片。

1. 選擇您的主螢幕圖片並按下「確定」鍵。或者按下主快捷鍵 [選項] 可存取下列功能表。
 - **正片檢視**：您可以一次檢視一個圖片。
 - **圖片預覽清單檢視**：(用標準檢視顯示) 移到圖片預覽清單檢視模式。
 - **用多媒體簡訊發送**：您可以用多媒體簡訊發送選擇的圖片。




數位影像功能 [功能表6]



附註

- 如需詳細資訊，請查閱第 67 頁的**多媒體簡訊**或**簡訊**。
- 因為體積龐大，解析度設為 SXGA 的圖片無法用多媒體簡訊發送。手機將會詢問您是否刪除圖片，以便能用多媒體簡訊發送。

- **新增到青話簿**：您可新增選擇的圖片到青話簿連絡人，以便使用照片來青話辨識功能。
- **幻燈片播放**：連續播放多張圖片。想暫停/繼續幻燈片播放，請按左快捷鍵。想停止幻燈片播放並移至我的相簿，請按右快捷鍵。
- **設為待機圖片**：您可將選擇的圖片設為內螢幕或外螢幕待機圖片。
- **檔案保護**：選擇此選項，您可鎖定/解除鎖定選擇的圖片。當圖片被鎖定时， 會顯示在圖片名稱左邊。鎖定的圖片無法刪除。
- **編輯**：(用標準檢視顯示) 選擇標準檢視圖片後，您即可依下列步驟進行編輯。編輯完成後，只須按下左快捷鍵 [儲存] 即可儲存更改的圖片。原本的圖片將被保留。
 - **效果篩選**：您可為圖片製造各種效果。總共有 12 種效果篩選提供選擇，選定後使用左/右導覽鍵按下左快捷鍵 [儲存]，便能儲存更改的圖片。
 - **縮放**：您可使用左/右導覽鍵更改圖片的大小。
 - **裁剪**：按下左快捷鍵 [變焦] 後，您可使用左/右快捷鍵進行放大/縮小。使用導覽鍵，顯示需縮小的部分。按下「確定」鍵。裁剪的圖片即可儲存。



❗ 附註：已裁剪的圖片無法編輯。

- 旋轉：您可以用將圖片旋轉 90、180 或 270 度。

以下的表格顯示各解析度下圖片編輯的功能。

圖片編輯	❗ 附註				
	解析度	放大縮選	縮放	裁剪	旋轉
QVGA (320X240)		O	X	O	O
VGA (640X480)		O	O	O	O
SXGA (1280X960)		X	O	O	X
超高清 (1280X640)		X	O	O	X
已裁剪的圖片 (176X220)		X	X	X	X
使用超高清的縮放圖片 (220X108)		X	X	X	X

- 重新命名：您可以用更改選定圖片的標題。
- 刪除：刪除選擇的圖片。
- 多頁刪除：(用圖片預覽模式顯示) 您可以用一次刪除好幾張圖片。透過清單選擇圖片刪除，只須按下確定鍵，然後按下快捷鍵 [刪除]。
- 全部刪除：將相機裡的圖片全部刪除。
- 檢視詳細資料：您可以用檢查選定圖片的標題、解析度、大小、日期與時間。




數位影像功能 [功能表6]

我的影片 [功能表6-5]

按下「功能表」鍵並選擇數位影像功能 → 我的影片。

含有所有錄製影片的列表將會開啓。使用↑/↓導覽鍵，然後按下「確定」鍵選擇所需的影片。或者您可按下快捷鍵 [選項] 存取下列功能表。

- **播放**：播放選擇的影片。
- **以多媒體訊息發送**：當影片格式為MMS時，您可用透過多媒體簡訊發送影片。
- **權限保護**：選擇此選項，您可鎖住/解除鎖住選擇的影片。當影片鎖住時， 會顯示在影片名稱的左邊。
- **重新命名**：您可用更改選定影片的標題。
- **刪除**：刪除選擇的影片。
- **多個刪除**：您可用一次刪除好幾個影片。透過清單選擇影片刪除，只須按下「確定」鍵，然後按下快捷鍵 [刪除]。
- **全部刪除**：您可用刪除手機上的所有影片。在觀看影片時，您可用使用下列快捷鍵。

暫停/繼續播放。	按下「確定」鍵 (OK)。
變更播放選項。	按下快捷鍵 (F)。 (一次或重複)。
反向倒轉。	使用↑導覽鍵 (↑)。
往前快轉。	使用↓導覽鍵 (↓)。
升高音劃。	按↑導覽鍵 (↑)/上側邊鍵。
降低音劃。	按↓導覽鍵 (↓)/下側邊鍵。
停止播放並移至 [我的影片]	按下清除鍵 (C) 或快捷鍵 (L)。



附註

- 要退出播放畫面，請按任意快捷鍵或多按幾次



設定 [功能表 6-6]

按下「功能表」鍵並選擇數位影像功能 → 相機設定。

在此功能表中，您可設定下列選項。

1. **影像品質**：選擇拍攝所需的影像品質。影像品質愈高，使用的記憶體愈多。
2. **快門聲音**：選擇所需的快門聲音。
3. **相機格式**：選擇所需的相機格式：清理檢程序和圖片預覽。
4. **定時拍攝**：當啟動定時拍攝時，選擇所需的延遲時間。
5. **閃光燈模式**：選擇所需的閃光燈模式：一次和連續。
 - **一次**：拍攝一次影像後，閃光燈關閉。
 - **連續**：閃光燈保持啟動。因此，連續閃光燈模式較快消耗記憶體。
6. **幻灯片播放間隔**：選擇所需的幻灯片播放間隔：3 秒到 5 秒之間。

記憶體狀態 [功能表 6-7]

按下「功能表」鍵並選擇數位影像功能 → 記憶體狀態。

您可用檢查相機目前的記憶體狀態。圖片、影片和 MP3 播放器共用記憶體。



遊樂MP3 [功能表7]

MP3播放器 [功能表7-1]

T5100 內建整合的MP3播放器。您可使用相配的耳機透過內部擴音器，在手機的記憶體上享受收聽MP3音樂檔案的樂趣。



附註

- 由於喇叭尺寸不大，聲音有時可能會失真，特別是音調太高的及播放低音時。因此，我們建議您使用立體聲耳機，欣賞高品質的音樂。

MP3 播放器支援：

- MPEG-1 Layer III：最大取樣頻率 48KHz，最快位元傳輸速度 240Kbps，立體聲。
- MPEG-1 Layer III：最大取樣頻率 24KHz，最快位元傳輸速度 160Kbps，立體聲。

使用銷售套件 CD-ROM 中的 Mobile Agent 程式 (即 PC 同步處理程式)，您即可用從相配的 PC 傳輸 MP3 檔案到手機的記憶體中。使用 USB 纜線 (由同一套件提供) 將手機連接至 PC 時，您必須安裝驅動程式。選擇 T5100.inf 如需詳細資訊，請查閱 CD-ROM 手冊。



附註

- PC 應安裝 Windows 98 SE、Windows 2000、Windows ME 或 Windows XP 作業系統。
- 除可下載 MP3 檔案到手機外，您還可使用 USB 纜線將手機所拍攝的照片和影片上傳到 PC 中。下載鈴聲類型、待機圖片或 Java 遊戲需與串列連接線。您也可以使用串列連接線管理 PC 上的簡訊簿、行程表及訊息信箱。請詢問授權廠商配件的供貨情形。



MP3 檔案列於 MP3 播放器功能表 [功能表 7-1]。

1. 按「功能表」鍵並選擇**遊藝 MP3 → MP3 播放器**。MP3 曲目清單顯示。
2. 按下快捷鍵 [選項] 可存取下列功能表。
 - **播放**：從選擇的曲目開始播放所有曲目。
 - **刪除**：刪除選擇的曲目。
 - **全部刪除**：全部刪除所有曲目並清除 MP3 播放器記憶體。
 - **重新命名**：選擇這個功能重新命名選擇的曲目。
 - **檢視詳細資料**：顯示曲目資訊，例如名稱、播放時間與檔案大小。
 - **記憶體狀態**：您可以檢查主機目前的記憶體狀態。



注意




- 當 MP3 播放器開啟時，關上或打開主機都不會影響 MP3 播放。主機開啟時可關閉 MP3 播放器，同時按下結束鍵 (⏏) 即可。主機關上時可關閉播放器，同時將主機左邊的 MP3 播放器鍵 (Ⓞ) 按住不動即可。



遊戲機MP3 [功能表7]

MP3 播放器的主要操作。

您可使用以下在 MP3 曲目清單裡的快速鍵。

想播放/暫停	請按 OK 。
想在播放時更改重複選項  ：一次、  ：重複、  ：全部重複	重複按 < 快捷鍵 (<)。
想倒轉曲目	請將 導覽鍵 (⏮) 按住不放，直到倒轉到您想要的部分。
想快轉曲目	請將 導覽鍵 (⏭) 按住不放，直到快轉到您想要的部分。
想穿過上一首曲目	請按 < 導覽鍵 (⏮)。
想穿過下一首曲目	請按 > 導覽鍵 (⏭)。
想停止播放	請按 < (⏮) 或 > 快捷鍵 (⏭)。
想調整音對	請使用耳機的 左側邊鍵 (⏪) 或 上/下導覽鍵 。



附註

手機關閉時播放 MP3 檔案



MP3
播放
器鍵

您可以在手機關閉狀態下的 MP3 播放器。
按下手機右邊的 MP3 播放器鍵 (⊙) 即可。
手機開始播放。

- ▶ 想聆聽下一首曲目，請按 MP3 播放器鍵 (⊙)。
- ▶ 想停止播放，請將 MP3 播放器鍵 (⊙) 按住不放。
- ▶ 想調整音訊，請使用手機的左邊側邊鍵 (|)。

遊戲 [功能表 7-2]

您可以在手機上享受玩遊戲的樂趣。如需詳細資訊，請參閱螢幕說明或說明功能表。

Java [功能表 7-3]

Java 是 Sun Microsystems 開發的技術。要使用標準 Netscape 或 MS Internet Explorer 瀏覽器下載 Java Applet 的方式相同，您可以使用支援 WAP 功能的手機下載 Java MIDlet。

視服務提供者而定，所有用 Java 開發的程式 (例如：Java 遊戲) 均可下載至手機並執行。Java 程式下載後，便能在應用程式功能表中檢視，您還能在此處執行選擇、執行或刪除功能。儲存在手機的 Java 程式檔案為 .JAD 和 .JAR 格式。



遊戲與MP3 [功能表7]



附註

- JAR 檔案是 Java 程式的壓縮格式；JAD 檔案是包含所有詳細信息的說明檔案。下載前，您可以在網路上從 JAD 檔案檢視所有詳細檔案說明。



警告

- 僅有 J2ME (Java 2 Micro Edition) 的程式可在手機環境中執行。J2SE (Java 2 Standard Edition) 的程式將僅能在 PC 環境中執行。

應用程式 [功能表7-3-1]

應用程式功能表顯示使用 WAP 下載 Java 程式的清單。所有之前下載的程式都能在應用程式功能表中進行選擇、刪除或檢視詳細資料。在應用程式功能表的清單中，有下列選項：

- **開啓**：開啓選擇的程式。該清單包括所有安裝在手機裡的 Java 程式。
- **刪除**：刪除選定程式。一經刪除，您將無法回復該程式，除非使用 WAP 再次下載。
- **細節**：顯示選擇程式的詳細信息。包括程式名稱、程式大小、程式版本、廠商資訊以及網址的 URL。
- **連接選項**：此功能包含應用程式執行時所需連接網路相關選項，您可以選擇先詢問、允許或不允許。

下載 [功能表7-3-2]

當使用 WAP 下載新的 Java 程式，下載進行的地址則是討論。Java 功能表包括下載 Java 程式的討論清單，此討論清單能從下載功能表中檢視。您可連接、檢視、編輯、刪除以及加上新討論。



- **連接**：在書籤中選擇的地址用於數據連線。連線成功後，即可從清單中下載所需的 Java 程式。
- **檢視**：您可用檢視書籤的相關詳細資訊，例如：連線到某些網站所需的書籤地址與書籤標題。
- **修改**：可編輯選擇的書籤。書籤編輯的順序依序為：地址 → 標題。建立新書籤也是依照相同的順序。
- **刪除**：可刪除選擇的書籤。所有書籤中的書籤清單皆將完全刪除。刪除過的書籤無法回復，因此刪除書籤時要特別小心。
- **新增**：加上新書籤。編輯書籤與新增書籤的順序相同。從書籤功能表選擇「新增」選項，或者，在沒有書籤的情況下，可從書籤清單選擇「新增」。



附註

- 選擇連接功能存取 Java MIDlet 供應商伺服器後，您可選擇在許多 Java 程式中選擇一種下載並安裝到手機中。一旦連接上伺服器後，按下 Go 按鍵即可在所需的程式中檢視 JAD 資訊。Get 按鍵會開始下載並進行安裝程序。下載和安裝程序將同時發生，一旦下載完成，您即可開始執行 Java 程式。安裝完成的 Java 程式可在供應程式功能表，選擇種後執行。

記憶體狀態 [功能表 7-3-3]

使用 WAP 所下載的程式儲存在手機記憶體中。手機有最大記憶體容對限制，一旦您超過該記憶體容對，您便無法儲存更多的程式。本功能表讓您能檢查手機裡的可用記憶體容對。



行動網際加值服務 [功能表8]

行動網 [功能表8-1]

按下「功能表」鍵 (☰) 並使用導覽鍵選擇服務。

您可存取各種 WAP (無線應用程式通訊協定) 服務，例如銀行、新聞、氣象預報、芝麻吉計。這些服務是特別為行動電話而設計，由 WAP 服務提供者維護。

向系統業者查詢或想使用其服務的服務提供者查詢是否提供 WAP 服務以及價格與費率等資料。服務提供者也將提供如何使用其服務的說明。

請與您的系統業者聯繫，開啓您的行動網帳戶。若使用網頁瀏覽器，您必須透過**本機號碼**功能表選項顯示您的手機號碼 (詳情請參閱第 59 頁)。

想在待機模式啓動瀏覽器，請按住 [OK] 鍵或手機右邊的「設定」功能鍵 (⊙)。

一旦連接上，便會顯示網頁。內容由服務提供者決定。輸入 URL 地址，您可存取任何網頁。

想在任何時候結束瀏覽器，請按 [⏪] 鍵。手機將回到待機模式。

 



透過WAP瀏覽器瀏覽

您可使用手機按鍵或 WAP 瀏覽器功能表瀏覽行動網。

使用手機按鍵

瀏覽行動網時，手機按鍵功能不同於手機模式。



按鍵	說明
 	捲動至用戶首飾區域
	回到上一頁
	選擇選項並確認動作

使用WAP瀏覽器功能表

瀏覽無線網頁時，有各種功能選項。



附註

- WAP 瀏覽器功能表可能不盡相同，視您的瀏覽器版本而定。

首頁 [功能表8-1-1]

連接至首頁。首頁是在啓動網路設定中定義過的網站。如果您未在啓動網路設定中定義網站，則由服務提供者定義。

書籤 [功能表8-1-2]

此功能表讓您能儲存最愛網頁的 URL，以便於日後存取。您亦可建立資料夾，在每個資料夾中整理書籤。

新建書籤

- 按下快捷鍵 [選項]。
- 選擇**新書籤**，然後按下「確定」鍵。
- 輸入所需的 URL 與標題，然後按下「確定」鍵。



行動網際加值服務 [功能表8]

建立書籤後，有下列選項。

- **連接**：連接選擇的書籤。
- **修改**：您可以編輯 URL 和/或選定書籤的標題。
- **新書籤**：選擇此選項建立新書籤。
- **新資料夾**：選擇此選項建立新資料夾。
- **刪除**：刪除選擇的書籤。
- **全部刪除**：全部刪除書籤和資料夾。

您的手機可能預先安裝 LG 無關網站的書籤。LG 不為這些網站擔保或背書。如果您選擇存取這些網站，您應該使用與任何網站相同的安全性或內容注意事項。

Push 訊息 [功能表8-1-3]

• Push 收信箱

您向 WAP 服務提供者訂購 Push 訊息。Push 訊息是一種通知，例如新聞頭條，它們可能含一般簡訊或 WAP 服務的位址。是否提供該服務與其訂閱方式，請與您的 WAP 提供者聯繫。服務提供者每收到一則新的 Push 簡訊，就能更新現有的 Push 簡訊。即使您將訊息移至另一個資料夾，仍然可以更新新訊息。舊 Push 訊息過期時，便會自動刪除。

- **訊息提示**：顯示已收到 push 訊息的簡訊。
- **下載**：使用已收到 push 訊息的簡訊連接至特定網站。
- **刪除**：刪除選擇的 push 訊息。

• 接收

您可以選擇是否接收 push 訊息。



網路設定 [功能表 8-1-4]

如需更多資訊，請與系統業者聯繫。

每個網路設定都有自己的功能表。

- **啟動**：啟動選擇的網路設定。
- **設定**：使用此選項為選擇的網路設定編碼並更改 WAP 設定。
- **重新命名**：您可以更改選擇的網路設定名稱。
- **刪除**：從清單中刪除選擇的網路設定。
- **新增**：您可以增加新的網路設定。



附註

- 使用這些選項可能會影響多媒體簡訊功能。



請注意！

- 您需依照您所使用的行動電話系統選擇，相關上網參數可設定於手機內，請您依照您的 SIM 卡選擇相關 GPRS 設定資料：
(中華電信)：Chunghwa GPRS
(遠傳電信)：FET GPRS
(台灣大哥大)：TWN GPRS
(威信電信)：Mobitai GPRSS
(泛亞電信)：TransAsia GPRS

進入 URL [功能表 8-1-5]

您可以直接連接所需的網站。您必須輸入特定的 URL 才能進行連接。



行動網業增值服務 [功能表8]

暫存設定 [功能表8-1-6]

您存取過的訊息或服務儲存在手機的暫存記憶體內。

- 清除暫存

移除所有儲存在暫存記憶體內的內容。

- 直連暫存

無論是否由暫存直連服務連接，請設定一個數值。

安全憑證 [功能表8-1-7]

顯示現有的憑證清單。

重設網路設定 [功能表8-1-8]

您重設網路設定，回到原來的設定。

WAP資訊 [功能表8-1-9]

顯示 WAP 瀏覽器版本。

SIM卡服務 [功能表8-2]

您的服務提供者能夠透過 SIM卡提供特別申請，例如家庭銀行、股票市場等等。如果您註冊其中一項服務，服務名稱將會顯示在功能表底部。透過 SIM服務功能表，您手機能承領新穎，並能支援系統服務商所增加的服務。如需進一步資訊，請與服務提供者聯繫。



按下「功能表」鍵 (F1) 並使用導覽鍵選擇設定。

日期與時間 [功能表9-1]

此選項讓您可以更改目前顯示的時間與日期。

您可以使用下列選項。

設定日期 [功能表9-1-1]

使用此選項輸入日、月、年。您可透過日期模式功能表選項更改日期模式。

日期模式 [功能表9-1-2]

YYYY/MM/DD (年/月/日)

DD/MM/YYYY (日/月/年)

MM/DD/YYYY (月/日/年)

設定時間 [功能表9-1-3]

使用此選項輸入目前的時間。您可透過時間模式功能表選項選擇時間模式。

時間模式 [功能表9-1-4]

24 小時

12 小時

兩地時間 [功能表9-1-5]

您可啟動音訊執行兩地時間時鐘。選擇開啓後，選擇所需的兩地時區。

每小時提示音 [功能表9-1-6]

您可選擇開啓設定每小時提示音。



設定 [功能表 9]

通話設定 [功能表 9-2]

設定通話相關選項。

來電轉接 [功能表 9-2-1]

當本網路服務啟動時，您可將來電轉接至另一個號碼，例如，您的語音信箱號碼。如需詳細說明，請與您的系統業者聯繫。選擇其中一項轉接選項，例如，忙線時或拒絕來電時，請選擇「忙線時」轉接語音通話。

您可以使用下列選項。

所有語音通話：無條件轉接所有語音通話。

忙線時：當手機正在使用時，轉接語音通話。

無人回應時：轉接未接來電到語音通話。

無網路或關機時：手機關機或無法收訊時，轉接語音通話。

所有數據來電：無條件透過 PC 連線轉接號碼。

所有傳真來電：無條件透過傳真連線轉接號碼。

每個選項有下列功能表：


- **啟動：**啟動通話服務。
 - **轉到語音信箱：**轉接到訊息中心。此功能不適用於所有數據來電和傳真來電功能表。
 - **轉到其他號碼：**輸入來電轉接號碼。
 - **前叫號碼：**您可以使用最近前叫三個號碼作為轉接號碼。
- **取消：**取消選擇的來電轉接。
- **檢查狀態：**您可以檢查該服務狀態。

全部取消：取消全部來電轉接設定。



擧聽模式 [功能表9-2-2]

選擇所需的擧聽模式。

- **翻開折蓋**：手機響鈴時，您僅須打開折蓋即可擧聽來電。
- **任意鍵**：手機響鈴時，您可按下  鍵和快捷鍵 (□) 以外的任何鍵擧聽來電。
- **擧聽話鍵**：擧聽話鍵您可擧聽來電。

發送本機號碼 [功能表9-2-3]

本網路服務讓您決定是否對擧話對象顯示 (開啓) 或隱藏 (關閉) 您的手機號碼。選擇本網路設定頁新將手機設定為您與服務提供者所達成協議之設定。

來電等候 [功能表9-2-4](網路服務)

該網路將在您正在通話時，通知您有新的來電。選擇**啓動**或**網路啓動**來電等候；選擇**取消**或**網路關閉**來電等候；或選擇**檢視狀態**檢查功能是否正在運作。

每分鐘提示 [功能表9-2-5]

當設定成開啓時，手機在撥出通話期間將每分鐘發出提示音，提醒您通話長度。

語音擧話 [功能表9-2-6]

說出例如「聯絡本」的語音標簽，您便可撥出通話。任何出話的話都能成為語音標簽。使用語音啓動擧話前，請注意：

- 語音標簽不是取決於語言，而是取決於說話者的聲音。
- 語音標簽對音頻聲音相當敏感。請在安靜的環境下錄製語音標簽和擧話。



設定 [功能表9]

- 當錄製語音標籤或撥號時，請使用擴音器。將手機拿離嘴部和臉部一小段距離，如此一來距離感應功能才不會將擴音器關閉。
- 不要接受過短的名稱。使用長度足夠的名稱，並且避免不同號碼使用類似的名稱。
 - 自動：**資料夾開啓時即自動進入語音啓動撥號模式。
 - 手動：**按任意號 (x0) 鍵進入語音啓動撥號模式。



附註

- 您說出的名稱必須與錄製時完全相同。這項功能具有執行上困難度，例如，吵雜的環境或緊急的情況皆會影響辨識，因此您不應該完全依賴使用語音啓動撥號。

自動直撥 [功能表9-2-7]

選擇開啓，當撥號失敗時，您的手機最多將嘗試撥號三次。

封閉叫話群組 [功能表9-2-8]

此網路服務說明您可撥號與撥號的群組對象。如需更多資訊，請與系統業者或服務提供者聯繫。如果叫話群組目錄，所有撥出電話都將使用。如果未開叫話群組目錄，網路將使用偏好目錄（網路目錄存有一個特定目錄）。

- 預設：**選擇此選項即啓動之前的 CUG 索引。
- 開啓：**您可修改 CUG 索引並加以啓動。
- 關閉：**關閉此功能。



手機設定 [功能表9-3]

許多手機功能可以配合喜好自行設定。所有功能經由手機設定功能表存取。

待機圖片 [功能表9-3-1]

待機圖片：使用此選項可設定內/外螢幕在待機模式下的顯示圖片。

背光燈 [功能表9-3-2]

使用此選項可選擇手機是否啟用背光燈。

關閉背光燈可以稍微增加待機通話時間。

功能表顯示 [功能表9-3-3]

手機提供 4 種顯示模式。捲動並按下主快捷鍵（選擇）來設定功能表顯示。

開候語 [功能表9-3-4]

捲動「開候語」，請選擇開啓。然後使用鍵盤捲動「開候語」。

開候語會在待機模式時顯示。

語言 [功能表9-3-5]

您可以用選擇顯示語言。當語言選項設定為自動時，手機會自動根據所用的 SIM 卡選擇語言。如果手機不支援 SIM 卡上的語言，則會使用英文。

網路名稱 [功能表9-3-6]

當手機關閉/開啓時，選擇是否顯示網路名稱。



設定 [功能表9]

保密設定 [功能表9-4]

使用各種密碼來保護您的手機的某些功能。如欲瞭解各種密碼，請查閱 26-27 頁。

需密碼PIN碼 [功能表9-4-1]

當需密碼PIN碼功能啟動時，您每次開機都需輸入 PIN。此情況下，任何人如果沒有您的 PIN，都無法使用您的手機，除非經過您的允許。



附註

- 傳入需密碼 PIN 碼功能前，您必須輸入您的 PIN。

您可以用以下選項：

- 啟動：您必須在每次開機時輸入 PIN。
- 傳入：當您開機時，手機直接連接網路。

手機鎖匙 [功能表9-4-2]

您可以用鎖匙您的手機。選擇所需的手机鎖匙選項。

想更改手机鎖匙選項，您必須輸入安全密碼。

- ▶ 想解除手机鎖匙，按下列快捷鍵並輸入安全密碼。



通話限制服務 [功能表9-4-3](視網路而定)

通話限制服務讓您限制您手機撥打和接聽電話。要使用本功能，您需向服務提供者取單限制密碼。

您可以使用下列選項：

- **所有撥出電話**：不能撥打電話。
- **撥打國際電話**：不能撥打國際電話。
- **國際撥出除外**：當您置身國外時，只能撥打所在地國家和本國（網路提供者所在國）的電話號碼。
- **所有來電**：不能接聽電話。
- **來電(在國外時)**：當您置身國外時，不能接聽電話。
- **全部取消**：關閉所有通話限制設定；可打、撥打和接聽電話。
- **更改密碼**：使用此選項設定和更改您之前使用此選項向服務提供者所取單之通話限制密碼。更改為新密碼前必須輸入目前的密碼。輸入新密碼後，您必須再次輸入表示確認。



附註

- 想使用**通話限制服務**，您必須輸入網路密碼。通話限制期間，某些網絡上或許能夠撥打特殊的緊急電話號碼。



設定 [功能表9]

固定撥號(FDN) [功能表9-4-4] (視SIM卡而定)

如果您的 SIM 卡支援此選項，您可以使用此選項將撥出電話限制至選擇的電話號碼。當 PIN2 碼將 FDN 啟動時，如果您撥打不在 FDN 清單上的號碼，螢幕會出現「FDN 檢查」訊息。

您可以使用下列選項：

- **啟動**：使用此選項後，手機僅能撥給儲存在電話簿中的電話號碼。您必須輸入您的 PIN2 碼。
- **關閉**：您可以撥給任何號碼。
- **號碼表**：使用此選項檢視儲存為固定撥號的電話號碼。



附註

- 並非所有的 SIM 卡都有 PIN2。如果您的 SIM 卡沒有 PIN2，便不會顯示此功能表選項。

更改密碼 [功能表9-4-5]

此更改密碼功能讓您可以將目前密碼更改成新的密碼。更改為新密碼前必須輸入目前的密碼。

使用此選項更改密碼：安全密碼、PIN1碼、PIN2碼



附註

- PIN：個人辨識號碼。



網路設定 [功能表9-5]

此網路設定功能使您能夠得知在漫遊時（在國外）所使用的網路：自動、手動、優先。



附註

- 您可選擇本國網路外的其他網路，以測試網路與本國網路之間是否有漫游合約。

GPRS設定 [功能表9-6]

GPRS（整合封包無線電服務技術）是一種使行動電話能在行動網路上發送和接收數據的技術。GPRS 是一種傳輸方式，能夠無線存取數據網路，例如行動網。

在您使用 GPRS 技術前：

- 您必須訂購 GPRS 服務。對於是否提供 GPRS 服務及其訂購，請與您的系統業者或服務提供者聯繫。
- 您必須儲存 GPRS 設定，以便使用 GPRS 上的應用程式。

附加 [功能表9-6-1]

選擇開機時若您正好位於支援 GPRS 的網路內，您可透過 GPRS 使用手機向 GPRS 網路註冊並發送簡訊。此外，啟動使用中的封包數據連線，便能縮短接收電子郵件的時間。如果您選擇**關閉**時，手機只有在開始應用程式或關閉時才會使用 GPRS 連線。無論任何應用程式時，GPRS 連線都會關閉。



設定 [功能表9]



附註

- 如果沒有 GPRS 訊號，而您已經選擇自動，手機則會暫時建立連線。

外部裝置 [功能表9-6-2]

當您用外部裝置透過 GPRS 使用行動網，您可以用設定以下各種網路設定：重新命名、APN、IP 地址、DNS、別名、密碼。

重新命名及密碼設定 [功能表9-7]

您可以用將手機重新設為預設設定。想這麼做，請依照下列步驟進行。

1. 選擇重新命名及密碼設定功能表選項。
2. 輸入 4 碼安全密碼。




附註

- 安全密碼預設為 0000。
想更改密碼，請直閱 104 頁。

 




在您將手機送修或聯繫維修工程師之前，請先檢查您的手機是否出現下列問題。


問 我如何檢查撥出電話、來電以及未接來電清單？


答 請按 。


問 我如何清除所有通話紀錄？

答 請按空快捷鍵，然後按   。

問 我如何檢查撥出電話、來電以及未接來電清單？

答 請按空快捷鍵，然後按 。

問  沒有從螢幕消失。

答 檢查您是否位於服務區域。如果繼續看見 ，關上電源，等待約 2 分鐘後再開機。如果情況沒有改變，請移動至其他地方，再試一次。

問 通話品質不佳或在某些地方沒有聲音。

答 在某些地方，訊號差別可能非常大。請試著移動至不同地方。繁忙的網路傳輸可能影響通話能力或通話穩定性。



問題解答

問 連線品質在建立時較不佳。

答 在某些地方，訊號差別可能非常大。請試著移動至不同地方。繁忙的網路傳輸可能影響連線能力及通話穩定性。

問 螢幕未開啓。

答 移除並更換電池，然後開機。如果手機仍未開啓，請將電池充電，再試一次。

問 在某地方突某一通話連線時會聽到回音。

答 這稱為「回音現象」。是由於音對適高或對方機器的特性（半音/音語交換機）所引起。

問 手機發燙。

答 通話時間過長，或使用照相機/遊戲/行動網時間過久，手機可能發燙。這完全正常，不會影響產品壽命或效能。

問 手機的待機時間漸漸變短。

答 待機時間變短，可能是由於使用者環境或人對音語，或者微弱的訊號引起。

問 音語的待機時間變短。


答 音語時間變短，可能是由於使用者環境或人對音語，或者微弱的訊號引起。



問 當您使用青語簿所輸入的青語進行撥號時，沒有撥出號碼。

答 使用青語簿查詢功能檢查所存號碼是否儲存正確。如有錯誤，請再儲存一次。

問 他人無法與您聯繫。

答 手機是否開機 (按住  超過三秒)? 您是否存取正確的手機網路? 您是否已經設定來青語限制選項?

問 我無法找到手機鎖、PIN、PUK 碼的密碼?

答 預設的手機鎖密碼是「0000」。如果您忘記手機鎖密碼，請與手機業者聯繫。如果您忘記或遺失 PIN 或 PUK 碼，或者如果您沒有收到密碼，請與網路服務提供者聯繫。



配件

您的行動電話有許多種配件可供選擇。您可以根據個人通訊需求，選擇這些配件。配件供貨情形，請詢問當地業者。



隨附的充電器

此充電器讓您在車或在辦公室都能充電。



充電

隨附標準充電。



立體聲耳機

進行最持續點簡操作。包括耳機變更為質。



數據傳輸線與片

將手機連接至 PC。

USB 傳輸線

- ▶ 下載MP3音樂到手機。
- ▶ 自手機上傳照片/影片到電腦。

串列傳輸線(RS232)

- ▶ 下載鈴聲、待機圖片、JAVA應用程式到手機。
- ▶ 自電腦端管理手機中的電話簿/行程表/通訊本以及簡訊功能。



附註

- 請務必使用 LG 原廠配件。如果不是使用原廠配件，將導致擔保無效。
- 配件可能因地區而有所不同：詳情請洽我們的各地分公司或代理商。



一般

產品名稱：T5100

系統：GSM900 / DCS 1800

適合使用的環境溫度

最高溫：+55°C

最低溫：-10°C





備忘錄

ENGLISH

GPRS & MMS Phone

USER MANUAL

MODEL: T5100

Please read this manual carefully
before operating your mobile phone.
And retain it for future reference.



Introduction

Congratulations on your purchase of the advanced and compact T5100 mobile phone, designed to operate with the latest digital mobile communication technology.



- This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.

Guidelines for safe and efficient use



Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

Exposure to radio frequency energy

Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model T5100 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the International Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASY4 for use at the ear is 0.592 W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).



Guidelines for safe and efficient use

Product care and maintenance

Warning: Use only batteries, charger and accessories approved for use with this particular phone model.

The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliance such as a TV, radio or personal computer.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit.
(Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories like an earphone cautiously.

Efficient phone operation

To enjoy optimum performance with minimum power consumption please:



- Hold the phone as you speak to any other telephone. While speaking directly into the microphone, angle the antenna in a direction up and over your shoulder. If the antenna is extendable/retractable, it should be extended during a call.
- If your mobile phone supports infrared, never direct the infrared ray at anyone's eye.

Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over the pacemaker, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

Road Safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your motor vehicle such as car stereo, safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause serious injury due to improper performance.



Guidelines for safe and efficient use

Blasting area

Do not use the phone where blasting is in progress.

Observe restrictions, and follow any regulations or rules.

Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- Do not use it on the ground without crew permission.

Children

Keep the phone in a safe place out of children's reach. It includes small parts which if detached may cause a choking hazard.

Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.



Battery information and care

- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.



Table of contents

T5100 features	12
• Parts of the phone	12
• 1.3 Mega pixel digital camera with DSC look	17
• Display information	20
Getting started	22
• Installing the SIM card and the handset battery	22
• Charging the battery	24
• Disconnecting the adapter	25
• Turning your phone on and off	26
• Access codes	26
• Barring password	27
General functions	28
• Making and answering calls	28
• Entering text	30
• Phonebook	34
• In-call menu	34
• Multiparty or conference calls	36
Menu Tree	38
Selecting functions and options	40
Profiles [Menu 1]	41
• Vibrate only [Menu 1-1]	41
• Silent [Menu 1-2]	41
• General [Menu 1-3]	41
• Loud [Menu 1-4]	41
• Headset [Menu 1-5]	41
• Car [Menu 1-6]	41



Call register [Menu 2]	43
• Missed calls [Menu 2-1]	43
• Received calls [Menu 2-2]	44
• Dialed calls [Menu 2-3]	44
• Delete recent calls [Menu 2-4]	45
• Call durations [Menu 2-5]	45
• Call costs [Menu 2-6]	46
• Cost settings [Menu 2-7]	46
• GPRS information [Menu 2-8]	47
Tools [Menu 3]	48
• My stuff [Menu 3-1]	48
• Favorite [Menu 3-2]	49
• Unit converter [Menu 3-3]	50
• Calculator [Menu 3-4]	50
• World time [Menu 3-5]	51
• Voice recorder [Menu 3-6]	52
• Activate IrDA [Menu 3-7]	52
Organiser [Menu 4]	54
• Phonebook [Menu 4-1]	54
• Alarm clock [Menu 4-2]	58
• Scheduler [Menu 4-3]	59
• Memo [Menu 4-4]	61
Messages [Menu 5]	62
• Text messages [Menu 5-1]	62
• Multimedia messages (MMS) [Menu 5-2]	66
• Voice messages [Menu 5-3]	71



Table of contents

• Info service [Menu 5-4]	72
• Templates [Menu 5-5]	73
• Name card [Menu 5-6]	75
• Memory status [Menu 5-7]	75
Camera [Menu 6]	76
• Take pictures [Menu 6-1]	77
• Take movies [Menu 6-2]	80
• Frame shot [Menu 6-3]	81
• My photo gallery [Menu 6-4]	81
• My movie gallery [Menu 6-5]	83
• Camera settings [Menu 6-6]	85
• Memory status [Menu 6-7]	85
Multimedia [Menu 7]	86
• MP3 player [Menu 7-1]	86
• Game [Menu 7-2]	89
• Java [Menu 7-3]	89
Service [Menu 8]	93
• Internet [Menu 8-1]	93
• SIM service [Menu 8-2]	97
Settings [Menu 9]	98
• Date & Time [Menu 9-1]	98
• Call settings [Menu 9-2]	99
• Phone settings [Menu 9-3]	102
• Security settings [Menu 9-4]	104
• Network settings [Menu 9-5]	107



- GPRS settings [Menu 9-6] 107
- Factory reset [Menu 9-7] 108

Q&A **109**

Accessories **112**

Technical data **113**



T5100 features

Parts of the phone

Front view



1. Up/down side keys

- Press and hold down this key to display the current time on the sub LCD.
- Controls the volume of keypad tone in standby mode with the clamshell open.
- Controls the earpiece volume during a phone call.
- Use these keys to zoom in/out in the camera preview mode.
- Controls the volume during the playback of the video clips, MP3, or games.


2. Charger connector: Connect the mains adapter here for charging. Also connect the USB cable here to use the PC sync program.

3. Speaker

4. Sub LCD



Rear view

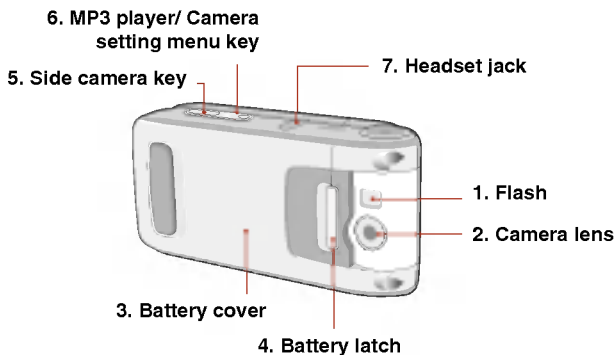

1. Flash

2. Camera lens



Note

- If there is dirt on the camera lens, it could affect the image quality.

3. **Battery cover**

4. **Battery latch:** Press this to open the battery cover.

5. **Side camera key:** Press and hold down this key to open the camera module. And use this key to take a shot.

6. **MP3 player/ Internet/ Camera setting menu key**


- Press and hold down this key to turn on/off the MP3 player when the phone is closed.
- After opening the phone, a long press of this key connects to the Internet.
- (Camera) In the preview mode, press this key to open the camera setting menu and confirm the selection.

7. **Headset jack:** Connect a headset here.


 


T5100 features

Open view

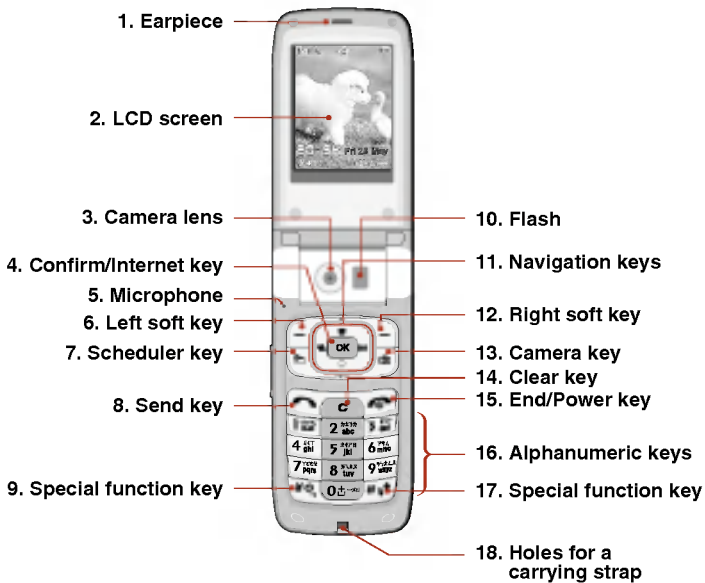



1. **Earpiece**
2. **LCD screen:** Displays phone status icons, menu items, Web information, pictures and more in full colour.
3. **Camera lens**
4. **Confirm/Internet key:** Selects menu options and confirms actions.
 - * In standby mode, holding this key down connects to the Internet.
5. **Microphone:** Can be muted during a call for privacy. (See page 35.)
6. **12. Left soft key / Right soft key:** Each of these keys performs the function indicated by the text on the screen immediately above it.
7. **Scheduler key:** A shortcut key to the Scheduler menu.
8. **Send key:** Dials a phone number and answers incoming calls. You can also quickly access the latest incoming, outgoing and missed calls by pressing the key in standby mode.
9. **Special function key** ()
 - In standby mode, press and hold down this key to make a call by voice dialling.
 - Self-timer: In camera shot mode, press this key to activate/deactivate the self-timer. You can set the desired delay time using **Timer mode** menu [Menu 6-6-4]. (See page 85.)
10. **Flash:** In preview mode, you can turn the flash on/off by pressing . And you can set the desired flash mode using the **Flash mode** menu [Menu 6-6-5]. (See page 85.)
11. **Navigation keys:** Use to scroll through menus and move the cursor. You can also use these keys for quick access to the following functions.
 - Up navigation key: By pressing this key in standby mode, you can search the phonebook by name.
 - Down navigation key: A shortcut key to the Favorite menu.



T5100 features

- Left navigation key: A shortcut key to the Profiles menu.
 - Right navigation key: A shortcut key to the message inbox.
- 13. Camera key:** Use for camera feature.
- In standby mode, press this key once to go to the Camera menu. Long press of this key directly opens the viewfinder. Then use this key to take a shot.
- 14. Clear key:** Deletes a character by each press. Hold the key down to clear all input. Also use this key to go back to the previous screen.
- 15. End/Power key:** Used to end a call or reject a call and also to go back to standby mode. Hold this key down to turn the phone on/off.
- 16. Alphanumeric keys:** Enter numbers, letters and some special characters.
- 17. Special function key (√#*)**
- Press and hold down to enter a pause while keying in a phone number.
 - Flash: In camera shot mode, with this key you can turn the flash on/off.
- 18. Holes for a carrying strap**




1.3 Mega pixel digital camera with DSC look

The flexible LCD screen rotates ANTICLOCKWISE up to 180 degrees. It functions as a viewfinder, and enables you to take pictures with ease and pizzazz. When the clamshell is turned 180 degrees, you can use the main LCD screen as an external one. It's almost a digital camera.



Note

- Do not rotate the LCD screen by force. Do not try to rotate the LCD screen clockwise.

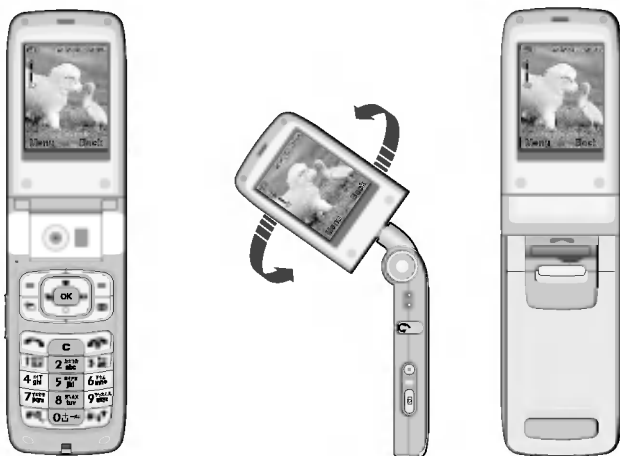


This state enables you to take self-shots.



T5100 features

After turning the clamshell 180 degrees, and in the clamshell closed state, you can use the phone as a digital camera.

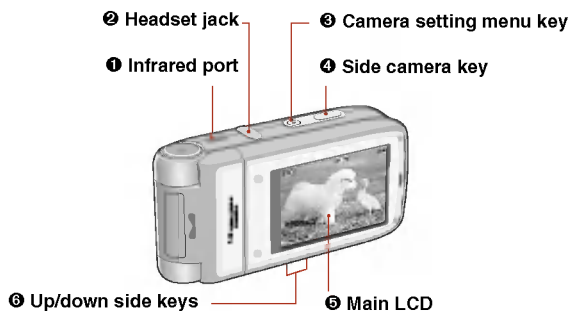

① Infrared port

② Headset jack

③ **Camera setting menu / confirm key:** In the preview mode, opens the camera setting menus and confirms the choice.



Note

- You can also play the MP3 files by long press of this key, when the clamshell is closed.

④ **Side camera key:** Press and hold down this key to open the camera module. And press this key to take a shot.

⑤ **Main LCD:** When you take a picture, functions as the viewfinder.

⑥ **Up/down side keys:** Use to move the cursor to the left or right. And you can zoom in/out using these keys.

Taking pictures in the clamshell closed state

1. Turn the clamshell 180 degrees to make the main LCD outside.
2. Press and hold down the side camera key (④) for over 2 seconds. It opens camera module and the preview screen opens.



Note

- In the preview mode, no key operation for 2 minute will close the camera module and go back to standby mode.

3. Focus on the subject to capture, then press the side camera key (ⓐ). The captured image is automatically saved in **My photo gallery** [Menu 6-4]. (Refer to page 81 regarding **My photo gallery**.)
4. Before taking a shot, you can set the following options by pressing the camera setting menu key (ⓑ).



- ① **Brightness:** 6 grades are available.
- ② **White Balance:** 5 settings are available: Auto, Daylight, Incandescent, Cloudy, and Flourescent.
- ③ **Resolution:** Select the desired resolution. Refer to page 79.
- ④ **Color Mode:** 5 settings are available: Color, Mono, Sepia, Blue, and Negative.
- ⑤ **Shot Mode:** Select between Single shot and Multiple shot.
- ⑥ **Photo gallery:** After taking a shot, you can use this to check out the captured image.
- ⑦ **Exit:** Select this to exit from the setting menu.

To move between setting menus, use up/down side keys (ⓑ).

After highlighting a menu, press the camera setting menu key (ⓑ) to open the menu.

Select the desired value using the up/down side keys (ⓑ) and press the camera setting menu key (ⓑ) to confirm it.

















T5100 features


 





Display information

The table below describes various display indicators or icons that appear on the phone's display screen.

On-Screen Icons

Icon	Description
	Indicates the strength of the network signal.
	Indicates a call is in progress.
	Indicates that you are roaming on another network.
	Indicates that GPRS service is available.
	Indicates the alarm has been set and is on.
	Indicates the status of the battery charge.
	Indicates the receipt of a text message.
	Indicates the receipt of a voice message.
	Indicates the receipt of a MMS message.
	Indicates that Call divert function is activated.
	Indicates that the vibration ringer has been set.
	Indicates the Loud profile is activated.
	Indicates the Silent profile is activated.
	Indicates the Headset profile is activated.



Icon	Description
	Indicates the Car profile is activated.
	Indicates the General profile is activated.
	Indicates that you can use the push message service.
	Indicates that you have a schedule for the selected day in the schedule menu.
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.
	Indicates that you entered the security page.




Getting started

Installing the SIM card and the handset battery

Make sure the power is off before you remove the battery.

1. Remove the battery cover.

Press the battery release latch and slide the battery cover toward the bottom of the phone. And remove the battery cover.

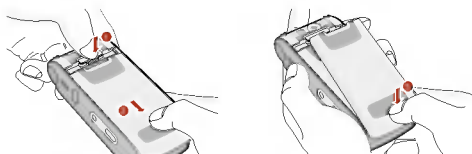


Note

- Removing the battery from the phone when the power is on may cause the phone to malfunction.

2. Remove the battery.


Hold the top edge of the battery and lift the battery from the battery compartment.

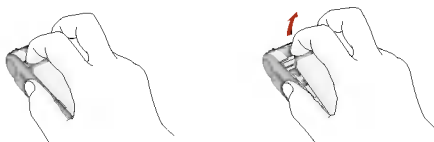




3. Install the SIM card.

Insert the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly and that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

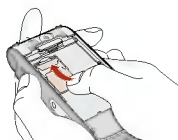

To insert the SIM card

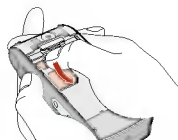


To remove the SIM card



Note

- The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

4. Install the battery.

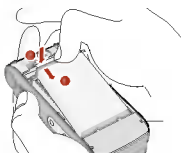

Insert the bottom of the battery first into the bottom edge of the battery compartment. Push down the top of the battery until it snaps into space.



Getting started

5. Replace the battery cover.



Lay the battery cover in place of the phone and slide it until the latch clicks.

Charging the battery

Only use the mains adapter supplied with your phone.




1. With the battery in position on the phone, connect the lead from the mains adapter to the left side of the phone. Lift the charger connector lid off and turn it 180 degrees. Make sure that the arrow on the lead connector is facing towards the front of the phone.



Note

- Do not fold the rubber lid to open the lid of the charger connector on the phone.

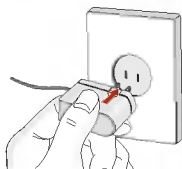

2. Connect the other end of the adapter to the power outlet.



Caution

- Use of unauthorised accessories could damage your phone and invalidate your warranty.
- Do not force the connector as this may damage the phone and/or the mains adapter.



Note

- “Charging” appears on the screen after connecting the mains adapter. If the battery is totally discharged, it may take a few minutes before this appears.

Disconnecting the adapter



1. When charging is finished, the moving bars of the battery icon stop and 'Full' is displayed on the screen.
2. Unplug the adapter from the power outlet. Disconnect the adapter from the phone by pressing the grey tabs on both sides of the connector and pull the connector out.



Note


- Ensure the battery is fully charged before first using the phone.
- Do not remove the battery or SIM card while charging.
- In the case the battery is not properly charged, please turn the phone off and on using the power key, then recharge the battery. After detaching and reattaching the battery, please recharge the battery.




Getting started

Turning your phone on and off

Turning your phone ON

1. Install a battery to the handset and connect the phone to an external power source such as the mains adapter, cigarette lighter adapter or hands-free car kit. Or install a charged battery pack to the handset.
2. Press  for a few seconds until the LCD screen is turned on.
3. Depending on the status of the PIN code request setting you may need to enter your PIN code.

Turning your phone OFF

1. Press  for a few seconds until the LCD screen is turned off.

Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu 9-4-5]. See page 106.

PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. When the **PIN code request** is set to **Enable**, your phone will request the PIN code every time the phone is switched on. When the **PIN code request** is set to **Disable**, your phone connects to the network directly without the PIN code.



PIN2 code (4 to 8 digits)

The PIN2 code, supplied with some SIM cards, is required to access functions such as **Advice of Call Charge** and **Fixed dial number**. These functions are only available if supported by your SIM card. Check with your network for further information.

PUK code (4 to 8 digits)

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, also contact your network operator.

PUK2 code (4 to 8 digits)

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your network operator.

Security code (4 to 8 digits)

The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the **Security settings** menu.

Barring password





The barring password is required when you use the **Call barring** function. You obtain the password from your network operator when you subscribe to this function. See page 103 for further details.





General functions

Making and answering calls

 

Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code. To edit a number on the LCD screen, press the right/left navigation keys to move the cursor to the desired position or simply press the clear key () to erase one digit at a time.
 - ▶ Press and hold the clear key () to erase the entire number.
3. Press the send key () to call the number.
4. To end the call, press the end key () or the right soft key. You can also end the call by closing the folder.


Making a call using the send key

1. In standby mode, press the send key (), and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation key.
3. Press .

Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press .

Ending a call


When you have finished your call, press the end () key.



Making a call from the phonebook

You can save the names and phone numbers dialed regularly in the SIM card and/or phone memory, which is Phonebook. You can dial a number by simply looking up the desired name in the Phonebook. For further details on the Phonebook feature, please refer to page 54-58.

Adjusting the volume

If you want to adjust the earpiece volume during a call, use the side keys () . Press the up side key to increase and down side key to decrease the volume.



Note

- In standby mode, pressing the side keys adjusts the key tone volume.


Answering a call

When you receive a call, the phone rings. If the caller can be identified, the caller's phone number (or name and image if saved in the phonebook) is displayed. This phone supports the Photo Caller ID feature.

1. To answer an incoming call, open the phone. (When **Flip open** has been set as the answer mode. See page 100 [Menu 9-2-2].)




Note

- If **Any key** has been set as the answer mode (see page 100), any key press will answer a call except for the  or the right soft key.

 


General functions


- ▶ To reject an incoming call, press and hold one of the side keys on the left side of the phone without opening the phone.
- ▶ You can answer a call while using the Phonebook or other menu features.

2. To end the call, close the folder or press the  key.

Manner mode (Quick)

You can activate the manner mode by pressing and holding down the left navigation key () after opening the phone.

Signal strength

You can check the strength of your signal by the signal indicator () on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

Entering text

You can enter alphanumeric characters using the phone's keypad. For example, storing names in the phonebook, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text.

The following text input methods are available in the phone.

T9 mode


This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.



ABC mode

This mode lets you enter letters by pressing the key labeled with the required letter once, twice, three times or more until the letter is displayed.


123 mode (Number mode)

Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.

Changing the text input mode




text input mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the lower right corner of the LCD screen.
2. Change the text input mode by pressing . You can check the current text input mode in the lower right corner of the LCD screen.

► Using the T9 mode

The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.

1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.



General functions

- The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.
- If the word is still incorrect after typing completely, press the down navigation key once or more to cycle through the other word options.



Example

- Press to type **Good**.
- Press [Down navigation key] to type **Home**.

- If the desired word is missing from the word choice list, add it using the ABC mode.
 - You can select the language of the T9 mode. Press the left soft key [Options], then select **T9 languages**. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.
2. Enter the whole word before editing or deleting any keystrokes.
 3. Complete each word with a space by pressing the key.
 - ▶ To delete letters, press . Press and hold down to erase entire words.



 


Note

- To exit from the text input mode without saving your input, press . The phone goes back to standby mode.

 
 
 
 

 

 

 


► Using the ABC mode

Use the  to  keys to enter your text.

1. Press the key labeled with the required letter:
 - Once for the first letter
 - Twice for the second letter
 - And so on
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to clear the whole display.

! **Note:** Refer to the table below for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper case	Lower case
	., - ? ! ' @ : 1	., - ? ! ' @ : 1
	A B C 2	a b c 2
	D E F 3	d e f 3
	G H I 4	g h i 4
	J K L 5	j k l 5
	M N O 6	m n o 6
	P Q R S 7	p q r s 7
	T U V 8	t u v 8
	W X Y Z 9	w x y z 9
	Space key, 0 (Long press)	Space key, 0 (Long press)



General functions

► Using the 123 (Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

Phonebook

You can store phone numbers and their corresponding names in the memory of your SIM card. In addition, you can store up to 255 numbers and names in the phone memory.

The SIM card and phone are both used in the same way in the **Phonebook** menu. (Refer to page 54-58 for details.)

In-call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].

During a call

The menu displayed on the handset screen during a call is different to the default main menu displayed when in standby mode, and the options are described below.

Making a second call


You can get a number you wish to dial from the phonebook to make a second call. Press the right soft key then select **Search**. To save the dialled number into the phonebook during a call, press the right soft key then select **Add new**.


Switching between two calls

To switch between two calls, press the left soft key then select **Swap**.





Answering an incoming call

To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting. This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see **Call waiting** [Menu 9-2-4] on page 100.

If **Call waiting** is activated, you can put the first call on hold and answer the second, by pressing , or by selecting left soft key, then **Hold & Answer**. You can end the current call and answer the waiting call by selecting left soft key and then **End & Answer**.

Rejecting an incoming call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the left soft key [Menu] key and selecting the **Conference / Reject** or by pressing the .

Muting the microphone

You can mute the microphone during a call by pressing the [Menu] key then selecting **Mute on**. The handset can be unmuted by selecting **Mute off**. When the handset is muted, the caller cannot hear you, but you can still hear them.

Switching DTMF tones on during a call

To turn DTMF tones on during a call, press the left soft key, and then select **DTMF on**. DTMF tones can be turned off the same way. DTMF tones allow your phone to make use of an automated switchboard.




General functions

Multiparty or conference calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network operator supports this feature. A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls can be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add callers to the multiparty call.

Making a second call

You can make a second call while currently on a call. Enter the second number and press the  key. When the second call is connected, the first call is automatically placed on hold. You can swap between calls by pressing the left soft key then selecting Swap.

Setting up a conference call

Place one call on hold and while the active call is on, press the left soft key and then select the **Conference / Join all**.

Putting a conference call on hold

Press the left soft key, then select the **Conference / Hold all**.

Activate the conference call on hold

Press the left soft key, then select the **Conference / Join all**.



Adding calls to the conference call

To add a call to an existing conference call, press the left soft key, then select the **Conference / Join all**.


Displaying callers in a conference call

To scroll through the numbers of the callers who make up a conference call on the handset screen, use the up/down navigation keys.

Taking a private call during a conference call

To have a private call with one caller from a conference call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select the **Conference / Private** to put all the other callers on hold.

Ending a conference call

To end a conference call, press the  key. You can also end a conference call by selecting **End call** after pressing the left soft key.



Menu Tree



1 Profiles

- 1 Vibrate only
- 2 Silent
- 3 General
- 4 Loud
- 5 Headset
- 6 Car



2 Call register

- 1 Missed calls
- 2 Received calls
- 3 Dialed calls
- 4 Delete recent calls
- 5 Call durations
- 6 Call costs
- 7 Cost settings
- 8 GPRS information



3 Tools

- 1 My stuff
- 2 Favorite
- 3 Unit converter
- 4 Calculator
- 5 World time
- 6 Voice recorder
- 7 Activate IrDA



4 Organiser

- 1 Phonebook
- 2 Alarm clock
- 3 Scheduler
- 4 Memo



5 Messages

- 1 Text messages
- 2 Multimedia messages (MMS)
- 3 Voice messages
- 4 Info service
- 5 Templates
- 6 Name card
- 7 Memory status



6 Camera

- 1 Take pictures
- 2 Take movies
- 3 Frame shot
- 4 My photo gallery
- 5 My movie gallery
- 6 Camera settings
- 7 Memory status



7 Multimedia

- 1 MP3 player
- 2 Game
- 3 Java



8 Service

- 1 Internet
- 2 SIM service
This menu depends on the SIM card and network services.



9 Settings


- 1 Date & Time
- 2 Call settings
- 3 Phone settings
- 4 Security settings
- 5 Network settings
- 6 GPRS settings
- 7 Factory reset



Selecting functions and options

Your phone offers a set of functions that allow you to customise the phone. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked (≡) and (≡). Each menu and sub-menu lets you view and alter the settings of a particular function

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current role.

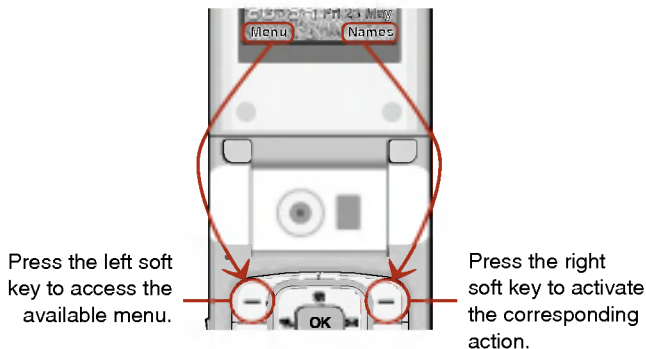

Profiles [Menu 1]



In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

There are six preset profiles: **Vibrate only**, **Silent**, **General**, **Loud**, **Headset** and **Car**. Each profile can be personalised.

Press the Menu key (\square) and select **Profiles** using navigation keys.

Changing the profile [Menu 1-x-1]

1. A list of profiles is displayed.
2. In the profile list, scroll to the profile you want to activate and press the left soft key [Select] or OK key.
3. Then, select **Activate**.



Note

- When a headset or a hands-free kit is connected to the phone, **Headset** profile or **Car** profile is automatically activated respectively.

Customising profiles – Personalise [Menu 1-x-1]/[Menu 1-x-2]

You can customise profiles except **Vibrate only** and **Silent**. Scroll to the desired profile in the profile list. After pressing the OK key or the left soft key, select **Personalise**. The profile setting options open. Set the options as required.

- **Incoming call alert:** Set the alert type for incoming calls.
- **Ring tone:** Select the desired ring tone from the list. Scroll through the list using up/down navigation keys. You can hear the desired tone prior to making a selection.
- **Ring volume:** Select the desired volume level of the ringing tone.
- **Message alert type:** Set the alert type for messages.



Profiles [Menu 1]

- **Message tone:** Select the alert tone for messages.
- **Keypad tone:** Select the desired keypad tone.
- **Keypad volume:** Set the desired volume level of the keypad tone.
- **Effect sound volume:** Set the desired volume level of effect sound.
- **Power on/off volume:** Set the desired volume level of the ringing tone when switching the phone on/off.
- **Automatic answer:** (only in **Headset** profile and **Car** profile) You can activate the automatic answer feature. Select the time before answering automatically.
- **Powerbell setting:** (only in **General**, **Loud**, **Headset**, and **Car** profiles) If you set this **On**, the ringing volume will gradually increase from level 1 up to the level you set when you receive a call.

Customising profiles – Alert for [Menu 1-1-2]/[Menu 1-2-2]

You can set the phone to alert for the calls from some caller groups even when **Vibrate only** profile or **Silent** profile is activated.

1. Tick the caller groups to alert for by pressing the left soft key [On].
2. Press the right soft key [Save] to save the setting.

Customising profiles – Rename [Menu 1-3-3]/[Menu 1-4-3]

You can rename a profile and give it any name you want. **General** profile and **Loud** profile can be renamed.

1. To change the name of a profile, scroll to the profile in the profile list and after pressing the OK key or the left soft key, select **Rename**.
2. Key in the desired name and press the OK key or the left soft key [Save].

Call register [Menu 2]




(Dependent on the network service)

You can check the record of missed, received, and dialled calls only if the network supports Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together with the date and time at which the call was made. You can also view call times and costs.

Press the Menu key () and select **Call register** using navigation keys.

Missed calls [Menu 2-1]

This option lets you view the last 10 unanswered calls. After selecting a phone number, you can make a call to the number by pressing the send key (). And using the left soft key [Options], the following options are available.

- **Write text message:** You can send a text message to this number.
- **Write multimedia message:** You can send a multimedia message to this number.
- **Edit:** Edits the phonebook entry.
- **Save (Shown if the name is not saved in the phonebook):** Saves the number creating a new contact in the phonebook.
- **Add to name (Shown if the name is not saved in the phonebook):** You can add the number to an existing phonebook entry.
- **Delete:** Deletes the call from the list.
- **View details:** Displays the call information.



Note


- You can delete all the call records from the list using the **Delete recent calls** menu [Menu 2-4].



Call register [Menu 2]

(Dependent on the network service)

Received calls [Menu 2-2]

This option lets you view the last 10 incoming calls. After selecting a phone number, you can make a call to the number by pressing the send key (). And using the left soft key [Options], the following options are available.


- **Write text message:** You can send a text message to this number.
- **Write multimedia message:** You can send a multimedia message to this number.
- **Edit:** Edits the phonebook entry.
- **Save (Shown if the name is not saved in the phonebook):** Saves the number creating a new contact in the phonebook.
- **Add to name (Shown if the name is not saved in the phonebook):** You can add the number to an existing phonebook entry.
- **Delete:** Deletes the call from the list.
- **View details:** Displays the call information.



Note

- You can delete all the call records from the list using the **Delete recent calls** menu [Menu 2-4].

Dialled calls [Menu 2-3]

This option lets you view the last 10 outgoing calls (called or attempted). After selecting a phone number, you can make a call to the number by pressing the send key (). And using the left soft key [Options], the following options are available.

- **Write text message:** You can send a text message to this number.
- **Write multimedia message:** You can send a multimedia message to this number.
- **Edit:** Edits the phonebook entry.



- **Save (Shown if the name is not saved in the phonebook):** Saves the number creating a new contact in the phonebook.
- **Add to name (Shown if the name is not saved in the phonebook):** You can add the number to an existing phonebook entry.
- **Delete:** Deletes the call from the list.
- **View details:** Displays the call information.



Note


- You can delete all the call records from the list using the **Delete recent calls** menu [Menu 2-4].

Delete recent calls [Menu 2-4]

Use this to clear up the missed call list, received call list, or dialled call list. You can also clear up all call lists at a time by selecting **All calls**.

Call durations [Menu 2-5]

Use this to view the duration of your incoming and outgoing calls. You can check each call duration at the bottom of screen while scrolling using the up/down navigation keys. Pressing the OK key or the left soft key [Reset] resets the call timer of selected call. To prevent accidental reset, you are requested to enter the security code.

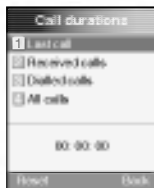

- **Last call:** Length of the last call
- **Received calls:** Length of the incoming calls
- **Dialed Calls:** Length of the outgoing calls
- **All calls:** Total length of all calls made or received calls since the timer was last reset.



Call register [Menu 2]

(Dependent on the network service)



Notice

- The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, etc.

Call costs [Menu 2-6]

This network service allows you to check the last call cost and the total call cost. The call cost is displayed on the bottom of the LCD screen. To reset the call cost, press the left soft key [Reset] or the OK key. You are requested to enter the PIN2 code



Note

- The actual cost invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, taxes, etc.

Cost settings [Menu 2-7]

- **Call cost's limit:** This network service allows you to limit the cost of your calls to the number of charging units or units of currency. You can make or receive a call up to the specified cost limit. You can change the call cost's limit after entering the PIN2 code.
- **Set tariff:** You can set the currency type and the unit price. Contact your service providers to obtain charging unit prices. To select the **Currency** or **1 Unit** in this menu, you need the PIN2 code.



Note

- When all units have been used, no calls can be made except emergency calls. Depending on the SIM card, you need the PIN2 code to set a call cost limit.

- **Auto display:** This network service allows you to see automatically the cost of your last call. If you select **On** in **Auto display** menu, you can see the cost of the last call when the call is released.

GPRS information [Menu 2-8]

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online. (GPRS stands for General Packet Radio Service.)

WAP information [Menu 2-8-1]

You can check the data volume and the time spent using WAP.

On the selected menu, pressing the left soft key [Reset] or the OK key clears the counter.

External device [Menu 2-8-2]

You can check the data volume and the time spent using GPRS with an external device such as a serial port.

Total data [Menu 2-8-3]

You can check the total amount of data through WAP and the external device.



Tools [Menu 3]

Press the Menu key (☐) and select **Tools** using navigation keys.

My stuff [Menu 3-1]

My stuff is organised into 3 folders: Picture, Animation, and Sound. The downloaded contents through WAP, MMS or EMS are stored in each folder. You can view, delete or control the downloaded contents.

Picture [Menu 3-1-1]

Using the left soft key [Options], you can send a picture via SMS or MMS, set it as a wallpaper, rename or delete it.

Animation [Menu 3-1-2]

Using the left soft key [Options], you can send an animation via MMS, set it as a wallpaper, rename or delete it.

Sound [Menu 3-1-3]

Using the left soft key [Options], you can send a sound via SMS or MMS, set it as a ringtone, rename or delete it.



Favorite [Menu 3-2]

In this menu, you can construct your own menu with the frequently used menus for easy access.

In standby mode, you can access the Favorite menu by pressing the down navigation key (∇).

1. After selecting the desired location from the menu number 1 to 9, press the left soft key [Add].
2. Select the menu you wish to add by pressing the left soft key [Select]. The menu is added in the Favorite menu, with the pop-up message, "Activated".



Note

- You can add up to 9 menus.

After making up the Favorite menu, in each favorite menu, the following options are available by pressing the left soft key [Options].

- **Select:** Selects the menu.
- **Change:** You can change the favorite menu with the another menu.
- **Delete:** Deletes the selected favorite menu.
- **Delete all:** Deletes all the favorite menus.
- **View details:** Displays the route to the favorite menu.



Tools [Menu 3]

Unit converter [Menu 3-3]

 
This converts any measurement from one unit to another.

There are 4 types that can be converted into units: Length, Surface, Weight and Volume.

1. Select one of four unit types by pressing the left soft key [Unit].
2. Move to the Current unit section by pressing the down navigation key.
3. Select the unit you want to convert using the left/right navigation keys.
4. Move to the Convert unit section by pressing the down navigation key.
5. Select the unit you want to convert to, using the left/right navigation keys.
6. Input numbers using the numeric keys. Conversion is calculated automatically.



Note

- You can input a decimal number by pressing the  key.

Calculator [Menu 3-4]

Using this feature, you can use the phone as a calculator.


 
 
The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division.

Using the calculator

1. Enter the first number using the numeric keys.
2. Press the corresponding navigation key to select a mathematical function.



Note

- To erase any mistake or clear the display, use the  key.
- To include a decimal point, press the  key.
- To include a minus sign, press the  key.

3. To calculate the result, press the left soft key [Result] or OK key.
4. After calculation, press the left soft key [Clear] to return to the initial state.

World time [Menu 3-5]

You can check the current time of Greenwich Mean Time (GMT) and 52 major cities around the world, using the left/right navigation keys.

The screen shows the city name, current date and time.

To select the time zone in which you are located, proceed as follows:

1. Select the city corresponding to your time zone by pressing the left/right navigation keys one or more times. The local date and time are displayed.
2. If you want to change the time display in standby mode to the selected time, press the left soft key [Set].



Note

- The time zone setting of each city in **World time** menu may be affected by network condition.



Tools [Menu 3]

Voice recorder [Menu 3-6]

You can record a memo. You can record up to 3 voice memos up to a maximum of 30 seconds each.

You can play or delete the recorded memo or record new voice memo using the left soft key [Options] key.

Record new [Menu 3-6-1]

1. To record a voice memo, select **Record new**.
2. Once recording is started, the message 'Recording...' and the recording time is displayed.
3. When you finish recording, press the left soft key [Save].



Note

- If all memo locations are full, you must delete an old memo before recording a new one.

View list [Menu 3-6-2]


The phone shows the voice memo list, starting with the most recent memo. You can play or delete the recorded memo, or send it via MMS by pressing the left soft key [Options]. You can also delete all the memos.

Activate IrDA [Menu 3-7]

This feature allows you to send or receive data/fax through the infrared port. To use an infrared connection:


- Install the modem driver for receiving or sending the data/fax.
- Install the network dial-up software supplied by your network provider or fax application program for a fax call on your PC.
- Configure and activate an IrDA-compliant infrared port on your PC.



- Activate the infrared feature on the phone; the  symbol appears on the right side at the bottom of the display.
- Call the network service number given to you by the service provider.

If there is no communication between your phone and the IrDA-compliant device within 30 seconds of activation of the feature, it is automatically deactivated.

For further details, contact your network provider.

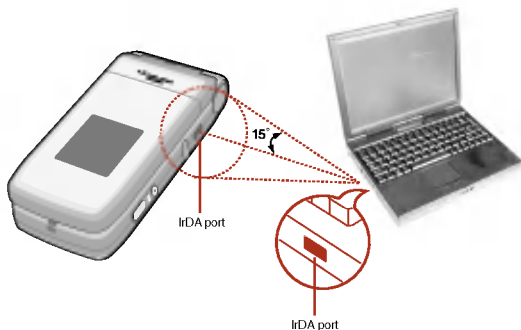

Note

- PC Sync is a program for data exchange between PC and the phone by a data cable. Therefore, if you want to use this function, you need the accessory kit. For more information, you can use the PC Sync Help file on the CD.
- With this IrDA feature, you can transfer anything you want such as phonebook entries, messages, pictures, video clips, etc.



Organiser [Menu 4]

Press the Menu key (\square). Select **Organiser** using navigation keys.

Phonebook [Menu 4-1]

You can save phone numbers and their corresponding names in the memory of your SIM card. In addition, you can save up to 255 numbers and names in the phone memory.

Press the left soft key [Menu] in standby mode, then select **Organiser** → **Phonebook**.

Or, press the right soft key [Names] in standby mode.

Search [Menu 4-1-1]

1. In standby mode, press right soft key [Names]. Select **Search**.
2. Enter the start of the name that you wish to find.
3. After finding the desired name, you can make a call to the number by pressing the send key (\square). Or press the left key [Options] to use the following options.
 - **Write text message:** Use this to write a text message to the name.
 - **Write multimedia message:** Use this to write a multimedia message to the name.
 - **Photo view:** Shows all the images stored in the phonebook. You can search the phonebook by the photo.
 - **Voice:** Record the name of the selected phonebook entry for voice-activated dialling.
 - **Edit:** Edits the name, number the listing group and photo.
 - **Copy:** Use this to copy the phonebook entry from SIM to the phone memory or vice versa. Select whether to keep the original phone number or not.
 - **Delete:** Deletes the phonebook entry.
 - **View details:** To view details of the selected name.



Add new [Menu 4-1-2]

You can add a phonebook entry using this function.

There are 2 memories: Phone memory and SIM memory. To select the memory, go to **Set memory** [Menu 4-1-8]. The phone memory capacity is 255 entries. You can enter up to 30 characters in each name in the phone memory. The SIM card memory capacity depends on the SIM card.

1. Open the **Phonebook** first by pressing the right soft key [Names] in standby mode.
2. Scroll to highlight **Add new**, and press [OK]
3. You can add new phonebook entries to SIM memory or the phone memory. To select the memory, go to **Set memory** [Menu 4-1-8]. (Refer to page 58.)

 
• Adding new entries into SIM memory

You can enter a name and a number, select the caller group, and attach a photo image. (Depends on the SIM)

• Adding new entries into the phone memory

You can enter a name, numbers, E-mail address and memo, select the caller group, and attach a photo image.

Tip

- **Pause feature:** When you call automated systems (such as voice mail or credit billing numbers), you often have to enter a series of numbers. Instead of entering these numbers by hand, you can store the numbers in the phonebook using the Pause feature. Between numbers to insert a pause, press and hold down .



 

Note

- This phone supports the Photo caller ID feature.



Organiser [Menu 4]

Speed dials [Menu 4-1-3]

You can assign any of the keys  to  with a name list entry. You can call directly by pressing this key for 2-3 seconds.

1. Open the **Phonebook** first by pressing the right soft key [Names] in standby mode.
2. Scroll to **Speed dials**, then press [OK].
3. To add a number to **Speed dials**, press the left soft key [Add]. Search the name through the phonebook.
4. You can change or delete a speed dial number, make a call or send a message by pressing the left soft key [Options].

Voice list [Menu 4-1-4]

You can check all the phone numbers which have voice-activated dialling assigned to them. You can also call directly by pressing the [Send] key. After selecting a phone number using up/down navigation keys and press the left soft key [Options]. You can see the following submenus.

- **Add new:** Adds a new phone number for voice-activated dialling.
- **Play:** Plays back the voice tag assigned to the phone number.
- **Change:** Changes the voice tag assigned to the phone number.
- **Delete:** Deletes the voice assigned to the phone number.
- **Delete all:** Deletes all voice-activated dialling numbers.



Note

- You can enter up to 10 phone numbers for voice dial.



Caller groups [Menu 4-1-5]

There are 6 pre-defined groups, as well as one additional group labeled **Others**, where you can create lists.

1. Select **Caller groups**. Every group list will be displayed: **Family**, **VIP**, **Friends**, **Colleague**, **Group 1**, **Group 2**, and **Others**.
2. Select the group name that you want to manage by pressing the left soft key [Options]. The following submenus will be displayed except for **Others**.
 - **Add member**: Add a member to the group.
 - **Member list**: Displays the member list in the group.
 - **Group ring tone**: Use this to select the ring tone to be used when you receive a voice phone call from a person in the group.
 - **Group icon**: Use this to select the graphic icon to be displayed when you receive a call from a person in the group.
 - **Rename**: Assigns a new name to the group.
 - **Delete member**: Delete a member from the group.

Copy all [Menu 4-1-6]

You can copy/move entries from the SIM card memory to the phone memory and vice versa.

- **SIM to Phone**: Use this to copy the entry from the SIM Card to Phone memory.
- **Phone to SIM**: Use this to copy the entry from the Phone memory to the SIM Card.


The following options are available.

- **Keep original**: When copying, the original dial numbers are kept.
- **Delete original**: When copying, the original dial numbers will be erased.



Organiser [Menu 4]


Delete all [Menu 4-1-7]

You can delete all entries in the **SIM**, **Phone**, and **Voice list**. Except for Voice list, this function requires the security code. Press  to return to standby mode.

Set memory [Menu 4-1-8]




You can select the memory for the Phonebook feature between the SIM and the phone. If you select **Variable**, when adding entry, the phone will ask where to save the number.

Information [Menu 4-1-9]


- **Service dial number (SIM dependent):** Use this to view the list of Service Dialling Numbers (SDN) assigned by your network operator (if supported by the SIM card). Such numbers include the emergency, directory enquiries and voice mail numbers.
 1. Select the Service dial number option.
 2. The names of the available services will be shown.
 3. Use the up/down navigation keys to select a service. Press .
- **Check memory:** You can check the current memory status of the SIM card and phone memory.
- **Own number (SIM dependent):** Use this to display your phone number in the SIM card.

Alarm clock [Menu 4-2]

You can set the alarm to go off at a specified time.

1.  **Alarm on/off:** Select **On** using the left/right navigation key. To deactivate the alarm function, select **Off**.
2.  **Alarm time:** Enter the alarm time using the numeric keys.
3.  **Repetition:** Select the desired one from **Once**, **Daily**, **Weekly** and **Monthly** using the left/right navigation key.



4.  **Alarm melody:** Select the desired alarm melody using the left/right navigation key.

5. Press the left soft key [Set] or the OK key.


 



 
When the alarm function is activated,  is shown in standby mode.

When the alarm time is reached, it sounds the alarm melody.

▶ To turn off the alarm, press the right soft key [Quit].

Scheduler [Menu 4-3]


When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using navigation keys. On the calendar, you can use the following keys.

Each press of	 skips back a year.
	 skips forward a year.
	 or  skips back a month.
	 or  skips forward a month.

To go back to the today's date, press .

To enter a schedule note on the selected day,


1. Press the left soft key [Select] and select **Add new**.
2. Enter a note. And set the alarm time.
3. Select the desired one from the repetition options.
4. Select when to alarm.

 **Note:** The Scheduler alarm will work even if the phone is switched off.

5. Press the left soft key [Save] or the OK key.



Organiser [Menu 4]

After a schedule is entered on a date, the date is shown in a different colour and  appears on the right bottom of the screen.

This function reminds you of your schedule. The phone will sound an alarm tone if you set the phone to do so.

The following options are available.

Add new: You can edit a maximum of 40 characters and take up to 30 notes.

View all schedules: Shows the notes that are set for all days. Use the up/down navigation keys to browse through the note lists.

Go to date: Use this to jump to a specific date. Enter the date using the numeric keys and the left/right navigation keys

Calendar: Goes back to the calendar.

Edit: Use this to edit the schedule.

Scheduler tone: The phone can sound an alarm tone when the scheduled date and time for an event has been reached. Select the desired alarm tone.

Delete: Use this to delete the schedule

Delete past: You can delete expired schedule notes that have already been notified.

Delete all: Use this to delete all schedules. You are asked to confirm this action.



Memo [Menu 4-4]

Add new [Menu 4-4-1]

Use this to add a new memo. The phone can store up to 20 memos and 60 characters for each memo. Input the memo and then press the left soft key [Options].

- **Save:** Allows you to save the memo.
- **T9 languages:** Select the T9 language to use in the memo.
- **Exit editor:** Allows you to exit from the memo editor.

View list [Menu 4-4-2]

Select this menu to check the memos you've taken.

1. Select a memo.
2. Press the left soft key [Select].



Note

- The selected memo is opened. And using the up/down navigation keys, you can directly view the other memos without going back to the memo list.

3. Press the left soft key [Options]. The following options are available.
 - **Edit:** You can edit the selected memo.
 - **Delete:** Deletes the selected memo.
 - **Delete All:** Deletes all memos. You are asked to confirm this action.




Messages [Menu 5]


Press the Menu key (\square) and select **Messages** using navigation keys.


Text messages [Menu 5-1]

Your phone receives voice mail notification messages and Short Message Service (SMS) messages.

Voice mail and SMS are network services. Please contact your network operator for more information.

When the  icon appears, you have received voice mail.

When the  icon appears, you have received a new text message.

If the message memory is full, a message is displayed, the  icon flashes and you cannot receive any new messages.

Use the **Delete** option in the **Inbox** menu to delete obsolete messages.

Once there is space in the message memory, any undelivered SMS messages will be received (provided sufficient space is available).

Write [Menu 5-1-1]

You can write and edit text messages up to 6 pages. (approximately 918 characters)

1. Key in your message. For details on how to enter text, refer to page 30 through 34 (Entering Text).
2. After you complete the message, press the left soft key [Options] to select required option. The following options are available.
 - **Send** : Enter the number or select the number from the phonebook or the recent numbers using the left soft key [Options]. You can send a message up to 5 phone numbers at a time.



- **Save to draft:** Allows you to save the message so that it can be sent later.
 - **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting 'T9 off'. For further details on the T9 mode, refer to page 30 through 32.
 - **Clear text:** Erases the whole text.
 - **Exit editor:** Allows you to exit from the **Write** menu.
3. You can also send attachments with the message by pressing the right soft key [Attach], while you're entering a message.
- **Symbol:** You can attach special characters.



Note

- You can also insert special characters by pressing (☒) while keying in a message.

- **Emoticon:** You can put various emoticons preset in the phone.
- **Picture:** You can send and receive text messages that contain pictures, known as 'Picture messages'. Several preset pictures are available in the phone and they can be replaced with new ones received from other sources.
- **Animation:** Attaching an animation in a message can be done through EMS (Enhanced Messaging Service). You can select any of 15 animations in the phone.
- **Sound:** If available, you can attach a sound available for a short message.
- **Text template:** You can use text templates already set in the phone.
- **Phone number:** You can add phone numbers in the message.
- **Name card:** You can attach your name card.



 
Messages [Menu 5]







Inbox [Menu 5-1-2]

Received text messages and page messages can be searched and the contents can be viewed.

Received messages are displayed in date order.

Press the menu key and select **Messages** → **Text message** → **Inbox**.

Or, you can take a shortcut by pressing the right navigation key () in standby mode.

Icon	Description
	Read SIM message
	Unread SIM message
	Read message
	Unread message
	Read delivery report
	Unread delivery report



Note

- SIM message refers to the message saved in the SIM memory. And the network distinguishes an incoming message into the SIM message or just message.



Each received message has the following options available. Press the left soft key [Options].

- **Reply:** Replies to the received message.
- **Forward:** Forwards a received message to other recipients.
- **Return call:** Calls the sender's phone.
- **Extract:** Extracts a picture, sound, text web page or email address from the message. These will be saved in My folder, Phonebook, or bookmarks.
- **Delete:** Deletes the selected message from the Inbox.

Outbox [Menu 5-1-3]

You can view the list and contents of sent messages in this menu and can also verify if the transmission was successful.

Icon	Description
	Sent SIM message
	Sent message

The following options are available.

- **Forward:** Forwards the current message to other recipients.
- **Delete:** Deletes the selected message from the Outbox.

Draft [Menu 5-1-4]

In this menu, you can see the message list saved as draft. Scroll through the list using the up/down navigation keys. You can send draft messages by pressing the left soft key [Options].



Messages [Menu 5]

Settings [Menu 5-1-5]

This menu lets you set up the default SMS information.


- **Message types:** Sets the default message type (Text, Voice, Fax, Paging, X.400, E-mail, and ERMES). The network can convert the messages into the selected format.
- **Validity period:** Sets the length of time for which your text messages will be saved at the SMS center while attempts are made to deliver them to the recipient. Possible values are 30 minutes, 1 hour, 6 hours, 1 day, 1 week and the maximum authorised by your network operator.
- **Paper:** You can insert one of 4 wallpaper images to a text message.
- **Delivery report:** Activates or deactivates the report function. When this function is activated, the network informs you whether or not your message has been delivered.
- **Pay for reply:** Allows the recipient of your SMS message to send you a reply via your message centre, if the service is provided by the network.
- **Message centre number:** Saves or changes the number of your SMS centre when sending text messages. You must obtain this number from your service provider.
- **Bearer setting:** Selects GPRS or GSM. Contact your network operator or service provider for information related to setting a selected bearer, pricing and connection speed.

Multimedia messages (MMS) [Menu 5-2]

A multimedia message can contain text, images, and/or sound clips. This feature can be used only if it is supported by your network operator or service provider. Only the devices that offer compatible multimedia message or e-mail features can receive and send multimedia messages.



Write [Menu 5-2-1]

1. Key in the text message. Using the right soft key, you can input symbols, numbers and emoticons, or select the text input mode. After the text message input, press the left soft key [Done].
2. Add an image and/or sound. You can move to the next section using the up/down navigation.
3. You can add a slide by moving the cursor on  , then pressing the OK key or the left soft key [Select]. You can also add a slide using the right soft key [Menu].



Note

- Up to 9 slides are affordable.

4. Press the right soft key [Menu]. The following options are available.
 - **Send:** Select this to send the multimedia message. This phone supports multiple numbers and e-mail addresses.
 - **Preview:** Displays the multimedia message you wish to send.
 - **Save:** You can save the multimedia message in draft or as a template.
 - **Delete:** Deletes the message you're been creating.
 - **Slide duration:** Set the slide duration. Enter the desired duration using the numeric keypad.
 - **Slide format:** Select where to align the image.
 - **Add slide:** Adds a slide before of after the current slide.
 - **Remove slide:** Deletes the selected slide.



Messages [Menu 5]

Inbox [Menu 5-2-2]

You will be alerted when you have received messages. They will be saved in the Inbox. You can identify each message by icons. For details, see the icon description below.

Icon	Description
	Read normal message
	Unread normal message
	Read notification message
	Unread notification message
	Read high priority message
	Unread high priority message
	Read low priority message
	Unread low priority message

If the phone has 'No space for messages', you can make space by deleting messages, media and applications.

- **Timer stop:** The Timer stop menu is displayed when you receive a message including various pictures. Usually, the pictures are sequentially displayed automatically. However, if you select this menu, you can see the next picture by pressing the left soft key [Next] manually.
- **Timer start:** Select this to activate the slide show automatically again.
- **Previous slide:** Displays the previous page.



- **Restart:** Restarts the slide show from the first slide.
- **Save message:** Saves a multimedia message in draft form or as a template.
- **Save items:** Extracts pictures or sounds. They will be saved in My folder or Phonebook.
- **Details:** Displays information about received messages: Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- **Reply:** Replies to the sender.
- **Reply all:** Replies to all senders.
- **Delete message:** Deletes the current message.
- **Forward:** Forwards the selected message to other recipients.

Outbox [Menu 5-2-3]

Use this to see sent messages. For each sent message, you can see the delivery status.

Icon	Description
	Sent

- **Timer stop:** The Timer stop menu is displayed when you receive a message including various pictures. Usually, the pictures are sequentially displayed automatically. However, if you select this menu, you can see the next picture by pressing the left soft key [Next] manually.
- **Timer start:** Select this to activate the slide show automatically again.
- **Previous slide:** Displays the previous page.



Messages [Menu 5]

- **Restart:** Restarts the slide show from the first slide.
- **Save message:** Saves a multimedia message in draft form or as a template.
- **Save items:** Extracts pictures or sounds. They will be saved in My folder or Phonebook.
- **Details:** Displays information about received messages: Sender's address, Subject (only for Multimedia message), Message date & time, Message type, Message size.
- **Delete message:** Deletes the current message.
- **Forward:** Forwards the selected message to other recipients.

Draft [Menu 5-2-4]

Using this menu, you can preset up to five multimedia messages that you use most frequently. This menu shows the preset multimedia message list.

The following options are available.

- **Send:** Select this to send the multimedia message. This phone supports multiple numbers and e-mail addresses.
- **Preview:** Displays the multimedia message you wish to send.
- **Save:** You can save the multimedia message in draft or as a template.
- **Delete:** Deletes the message you're been creating.
- **Slide duration:** Set the slide duration. Enter the desired duration using the numeric keypad.
- **Slide format:** Select where to align the image.
- **Add slide:** Adds a slide before of after the current slide.
- **Remove slide:** Deletes the selected slide.



Settings [Menu 5-2-5]

Via this menu, you can set up the default multimedia message information.


The following options are available.

- **Message title:** Enter the message title.
- **Slide duration:** Set the duration of each slide.
- **Alignment:** Select where to align the image.
- **Valid period:** Set the duration for keeping messages on the network server.
- **Auto download**
 - **On:** If you select this, messages are downloaded automatically on receipt.
 - **Confirm:** Requires you to confirm you want to download the message.
 - **Off:** Defers downloading messages.
- **Profiles:** See page 96 for further information.

Voice messages [Menu 5-3]

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).


Before using this feature, you must enter the voice server number obtained from your network operator.

When a new voice message is received, the  symbol will be displayed on the screen. Please check with your network provider for details of their service in order to configure the handset correctly.



Messages [Menu 5]

Listen to voice messages [Menu 5-3-1]

Once this option has been selected, simply press the left soft key [OK] to listen to voice messages. You can also hold down the  key in standby mode to listen to voice messages.

Voice mail centre [Menu 5-3-2]

You can input and set the voice mailbox centre.

Info service [Menu 5-4]

Info service messages are text messages sent by the network to mobile phone users. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of information is associated with a number, which can be obtained from the network operator. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly. In standby mode, the following options are available when viewing info service messages.

Receive [Menu 5-4-1]

Use this to enable or disable the reception of broadcast messages.

Inbox [Menu 5-4-2]

The list of received broadcast messages can be searched and the contents viewed.

Topics [Menu 5-4-3]

(Dependent to network and subscription)

To create new topics, press the left soft key [Options] then select **Add new**. If you already have topics, you can deactivate, edit, or delete them by using the left soft key [Options].



Alert [Menu 5-4-4]

Set alert **On** or **Off** for a new broadcast message.

Auto display [Menu 5-4-5]

If you select this option **On**, all received broadcast messages will be automatically displayed.

Languages [Menu 5-4-6] (Dependent to network and subscription)

This option lets you select the preferred languages. Cell broadcast messages will be displayed in the selected language. If you use all the languages supported by the phone, select **Automatic** at the end of the list.

Templates [Menu 5-5]

There are pre-defined messages in the list. You can view and edit the template messages or create new messages. Two types of templates are available: Text and Multimedia.

Text messages [Menu 5-5-1]

- **Please call me back.**
- **I'm late. I will be there at...**
- **Where are you now?**
- **I'm on the way.**
- **Top urgent. Please contact.**
- **I love you.**



Messages [Menu 5]

The following options are available.

- **Edit:** Use this to write a new message or edit the selected template message from the text template list.
- **Delete:** Deletes the selected template message from the text template list.
- **Send via text message:** Use this to send the selected template message by SMS.
- **Send via multimedia message:** Use this to send the selected template message by MMS.
- **Add new:** Use this to create a new template.

Multimedia messages [Menu 5-5-2]

- **Send:** Sends the multimedia template. Supports multiple numbers and email addresses.
- **Preview:** Displays the draft multimedia message.
- **Save:** Saves multimedia messages in draft form or as templates.
- **Delete:** Deletes the multimedia template.
- **Slide duration:** Set the slide duration. Enter the desired duration using the numeric keypad.
- **Slide format:** Select where to align the image.
- **Add Slide:** Adds a slide before or after the current slide.
- **Remove Slide:** Deletes the highlighted slide.



Name card [Menu 5-6]

This option helps you to make your own name card.

1. Press the left soft key [Add].
2. Key in the name, mobile phone number, office number, Fax number, and E-mail address.
3. Press the left soft key [Save]. With the name card, the following options are available.
 - **Edit:** Use this to edit the name card.
 - **Delete:** Use this to delete the name card.
 - **Send via text message:** Use this to send the name card by SMS.



Note

- You can also attach the name card when you write a text message using the **Attach** function. See page 63.
-
- **Send via multimedia message:** Sends the name card by MMS.

Memory status [Menu 5-7]

You can check the current memory status for Text messages and Multimedia messages.





Camera [Menu 6]

T5100 has a 1.3 Mega pixel digital camera which allows you to take pictures at a maximum resolution 1280x960 pixels (also known as SXGA). The CMOS sensor guarantees high definition and quality of the images. Taking pictures will be more fun thanks to the additional functions such as the 4x Zoom (depending on the resolution), Brightness control, White balancing and Colour effects.

And the integrated flash allows you to take pictures even when light conditions are poor.

With the integrated camera, it is also possible to record a video clip.

 

Press the Menu key ([-]) and select **Camera** using navigation keys.

Or, you can go to this menu by pressing  or  in standby mode.

! Note: If the battery is too low, you may not use the Camera feature.



Take pictures [Menu 6-1]

Press the Menu key and select **Camera** → **Take pictures**. Or, press the camera hot key () or () longer than 2 seconds in standby mode. You can see the viewfinder.

Before taking a shot, press the left soft key [Menu] to set the following values.




- ① **Brightness:** 6 grades are available.
- ② **White Balance:** 5 settings are available: Auto, Daylight, Incandescent, Cloudy, and Flourescent.
- ③ **Resolution:** Refer to the page 79 for further information.
- ④ **Color Mode:** 5 settings are available: Color, Mono, Sepia, Blue and Negative.
- ⑤ **Shot Mode:** Select between Single shot and Multiple shot.
- ⑥ **Photo gallery:** Access the My photo gallery. After taking a shot, you can use this to check out the captured image.
- ⑦ **Exit:** Select this to exit from the setting menu.

To move between the setting menus, use left/right navigation keys. After highlighting a menu, press the OK key to open the menu. Select the desired value using left/right navigation keys and press the OK key to confirm it.



Camera [Menu 6]

You can also use the following keys before taking a shot.

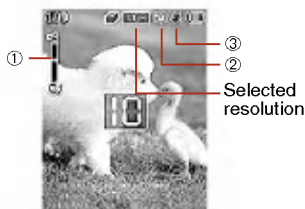

- ① **Zooming bar:** You can zoom in/out using the up/down navigation keys (\uparrow , \downarrow) or up/down side keys. And this bar shows the zooming state. The maximum zoom scale depends on the image size as follows.

SXGA(1x) / VGA(4x) / QVGA(4x) / Panorama(1x)

- ② **Self timer:** To activate/deactivate the self-timer, press [Self Timer] . When the self-timer is activated, [Self Timer] is shown.



Note

- You can set the desired delay time using **Timer mode** menu [Menu 6-6-4].

- ③ **Flash:** To turn the flash on/off, press [Flash] . When the flash is on, [Flash] is shown.



Note

- You can set the desired flash mode using **Flash mode** menu [Menu 6-6-5].

Taking a single still shot ([Shot Mode])

- In the preview mode, press the left soft key [Menu] to open the camera setting menu.
- Highlight the **Shot Mode** using left/right navigation keys and press the OK key.

 


3. Select the **Single Shot** mode ().




Note

- In the Single shot mode, you can select the resolution from QVGA (320X240), VGA (640X480), SXGA (1280X960), and Panorama (1280X640).

4. After finishing camera option setting, focus on the subject to capture and press the Camera key (). With a click, the image is captured and then automatically saved in the **My photo gallery** (See page 81).

 
Taking multiple shots in succession ()

1. In the preview mode, press the left soft key [Menu] to open the camera setting menu.
2. Highlight the **Shot Mode** using left/right navigation keys and press the OK key.
3. Select the **Multiple Shot** mode ().



Note

- In the Multiple shot mode, you can select the resolution between QVGA (9 shots) and VGA (3 shots).

4. After finishing camera option setting, focus on the subject to capture and press the Camera key (). With a click, the image is captured and then automatically saved in the **My photo gallery** (See page 81).

 


Camera [Menu 6]

Take movies [Menu 6-2]

You can record the video up to 30 minutes. But it depends on the resolution, the available memory capacity, and the quantity of data to be compressed.

Press the Menu key and select **Camera** → **Take movies**.



You can record a video clip in this menu by pressing the Camera key ()

1. Before shooting, you can set the desired shooting values by pressing the left soft key [Menu].



- ① **Brightness:** 6 grades are available.
- ② **White Balance:** 5 settings are available: Auto, Daylight, Incandescent, Cloudy, and Fluorescent.
- ③ **Resolution:** Select the desired resolution between QCIF(176X44) and S-QCIF (128X96).
- ④ **Color mode:** 5 settings are available: Color, Mono, Sepia, Blue, and Negative.
- ⑤ **Exit:** Select this to exit from the setting menu.

You can also use the following features. (For more information, see page 78.)

- Self timer: Press the .
- Flash: Press the .



2. Press the Camera key to start recording a video clip. "Recording" appears on the LCD screen.
3. To stop recording, press the Camera key again. It is automatically saved in **My movie gallery** [Menu 6-5]. And you can keep recording another video clip by pressing the Camera key.



Frame shot [Menu 6-3]

Press the Menu key and select **Camera** → **Frame shot**.

You can enjoy taking a shot in diverse preset frames. There are 15 preset frames.

1. To select the desired frame to take a shot in, press the left soft key [Menu].
2. Highlight the Frame() using left/right navigation keys and press the OK key.
3. After selecting the desired frame, press the OK key.
4. After exiting from the option menu by selecting Exit (), take a shot by pressing the Camera key. The captured image is automatically saved in the **My photo gallery** (See page 81).



Note

- The resolution of the frame shots is fixed to 176x220 pixel.

My photo gallery [Menu 6-4]

Press the Menu key and select **Camera** → **My photo gallery**.

All the still images taken in the **Take pictures** menu are stored in this menu. You can view, organise and send the pictures saved in your phone.

1. Select the picture you want a full screen of and press the OK key. Or press the left soft key [Options] to access the following sub-menus.
 - **Normal view:** You can view one image at a time.
 - **Multi view/List view:** (Shown in the normal view) Go back to the multi view/list view mode.
 - **Send via multimedia message:** You can send the selected image via a multimedia message.



Camera [Menu 6]



Note

- For details, refer to **Multimedia messages – Write** on page 67.
- Because of the big size, the pictures of which resolution is SXGA cannot be sent via MMS. The phone will ask if you want to resize the picture in order to send it via MMS.

- **Add to phonebook:** You can add the selected image to a phonebook contact to use the Photo Caller ID feature.
- **Slide show:** Plays back every image in succession. To pause/resume the slide show, press the left soft key. To stop the slide show and go back to My photo gallery, press the right soft key.
- **Set as wallpaper:** You can set the selected image as the internal LCD wallpaper or external LCD wallpaper.
- **File protect:** You can lock/unlock the selected image by selecting this. When an image is locked, “🔒” is shown on the left of the image name. The locked images cannot be deleted.
- **Edit:** (Shown in the normal view) After selecting the normal view of an image, you can edit it as follows. After editing, the changed image can be saved by pressing the left soft key [Save]. And the original image is retained.
 - Effect filters: You can give various effects to the image. After selecting the desired effect from 12 effect filters using the left/right navigation key, press the left soft key [Save]. The changed image is stored.
 - Resize: You can change the image size using the left/right navigation key.
 - Trim: After pressing the right soft key [Zoom], you can zoom in/out with the right/left soft keys. And display the desired part using the navigation keys. Press the OK key. The trimmed image is saved.
 - ❗ **Note:** Trimmed images cannot be edited.
 - Rotate: You can rotate the image 90, 180, or 270 degrees.



The table below shows the available photo edit features in each resolution.

Note

Resolution	Photo edit	Effect filters	Resize	Trim	Rotate
QVGA (320X240)		○	X	○	○
VGA (640X480)		○	○	○	○
SXGA (1280X960)		X	○	○	X
PANORAMA (1280X640)		X	○	○	X
Trimmed image (176X220)		X	X	X	X
The resized image from PANORAMA (220X108)		X	X	X	X

- **Rename:** You can change the name of the selected image.
- **Delete:** Deletes the selected image.
- **Multiple delete:** (Shown in the multi view mode) You can delete several images at a time. Select the images to delete through the list by pressing the OK key, then press the left soft key [Delete].
- **Delete all:** Deletes all the images in your phone.
- **View details:** You can check the title, resolution, size, and date and time of the selected image.


My movie gallery [Menu 6-5]

Press the Menu key and select **Camera** → **My movie gallery**.


 



 
 

The list of all the recorded video clips opens. Select the desired video clip using up/down navigation keys, then press the OK key. Or you can access the following submenu using the left soft key [Options].



Camera [Menu 6]


- **Play:** Plays the selected video clip.
- **File protect:** You can lock/unlock the selected video clip by selecting this. When a video clip is locked, “” is shown on the left of the video clip name.
- **Rename:** You can change the title of the selected video clip.
- **Delete:** Deletes the selected video clip.
- **Multiple delete:** You can delete several video clips at a time. Select the video clips to delete through the list by pressing the OK key, then press the left soft key [Delete].
- **Delete all:** You can delete all the video clips in your phone.

While watching a video clip, you can use the following keys.

To pause/resume the playback.	Press OK key ().
To change the play option (between once and repeat).	Press Left soft key ().
To skip backward.	Use Left navigation key ().
To skip forward.	Use Right navigation key ().
To increase the volume.	Press Up navigation key ()/Up side key.
To decrease the volume.	Press Down navigation key ()/Down side key.
To stop playback and go back to the My movie gallery.	Press Clear key () or Right soft key ().



Note

- To exit from the playback screen, press the right soft key or  several times.



Camera settings [Menu 6-6]

Press the Menu key and select **Camera** → **Camera settings**.

In this menu, you can set the following options.

- 1. Image quality:** Select the desired image quality to be captured.
The higher image quality, the more memories are used.
- 2. Shutter sound:** Select the desired shutter sound.
- 3. Gallery style:** Select the desired My photo gallery style between **List view** and **Multi view**.
- 4. Timer mode:** Select the desired delay time when activating the self-timer.
- 5. Flash mode:** Select the desired flash mode between **Once** and **Continuous**.
 - **Once:** After taking one shot, the flash is turned off.
 - **Continuous:** The flash keeps activated. Therefore, **Continuous** flash mode will consume the phone's battery faster.
- 6. Slideshow interval:** Select the desired slideshow interval between **3 sec** and **5 sec**.

Memory status [Menu 6-7]

Press the Menu key and select **Camera** → **Memory status**.

You can check the current memory status on the phone. **Images**, **Movie** and **MP3 Player** share the memory.



Multimedia [Menu 7]

MP3 player [Menu 7-1]

The T5100 has an integrated MP3 player built-in. You can enjoy listening to MP3 music files on a memory in your phone using a compatible headset or via the internal loudspeaker.



Note

- Because of the small dimension of the speaker, in some cases the audio could be distorted, especially at maximum volume and when there are lots of bass sounds. Therefore, we recommend you to use the stereo headset in order to appreciate the high quality of your music.

The MP3 player supports:

- **MPEG-1 Layer III:** Sampling frequency up to 48KHz, Bit rate up to 240Kbps, stereo.
- **MPEG-1 Layer III:** Sampling frequency up to 24KHz, Bit rate up to 160Kbps, stereo.

You can transfer MP3 files from a compatible PC to the memory in your phone using the Mobile Agent program (or PC sync program) on the CD-ROM in the sales package. When you connect the phone to a PC using the USB cable (supplied in the same package), you need to install a driver. Select **T5100.inf**. For further details, refer to the CD-ROM manual.



Note

- The PC should run Windows 98 SE, Windows 2000, Windows ME, or Windows XP operating system.
- Besides downloading the MP3 files to the phone, you can upload the pictures and movies taken on the phone to the PC using the USB cable. To download the ring tones, wallpaper, or Java games, the serial cable is required. And you can also manage the phonebook, scheduler, and message box on the PC with the serial cable. Consult with the authorised dealer for availability of accessories.

The MP3 files are listed in the **MP3 player** menu [Menu 7-1].



1. Press the Menu key and select **Multimedia** → **MP3 player**.
The MP3 track list is shown up.
2. Press the left soft key [Options] to access the following menu.
 - **Play**: Plays back all the tracks starting the selected track.
 - **Delete**: Deletes the selected track.
 - **Delete all**: Deletes all the tracks and clears up the MP3 player memory.
 - **Rename**: Select this to rename the selected track.
 - **Details**: Displays the track information such as the name, running time, and file size.
 - **Memory status**: You can check the current memory status of the phone.



Multimedia [Menu 7]

 



 









Note

- Once MP3 play has been started, closing the phone or opening the phone doesn't affect the MP3 playback. You can turn off the MP3 player by pressing the End key () when the phone is open. And when the phone is closed, you can turn off the player by pressing and holding down the MP3 player key () on the right side of the phone.

Key operations in the MP3 player

You can use the following shortcut keys in the MP3 track list.

To play back/pause	Press the  .
To change repeat options during playback  : Once,  : Repeat,  : All repeat	Press the left soft key () repeatedly.
To rewind the current track	Press and hold the left navigation key () until you find the spot you'd like to listen to.
To fast forward the current track	Press and hold the right navigation key () until you find the spot you'd like to listen to.
To skip to the previous track	Press the left navigation key ().
To skip to the next track	Press the right navigation key ().
To stop playback	Press () or the right soft key ().
To adjust the volume	Use the side keys () on the left side of the phone or up/down navigation keys.



Note

Playing MP3 files without opening the phone



MP3
player
key

You can activate the MP3 player in the phone closed state.

Press the MP3 player key (⊙) on the right side of the phone. It launches playing back.

- ▶ To skip to the next track, press the MP3 player key (⊙).
- ▶ To stop playback, press and hold down the MP3 player key (⊙).
- ▶ To adjust the volume, use the side keys (⏮) on the left side of the phone.

Game [Menu 7-2]

You can enjoy a game on the phone. For further details, use the on-screen instruction or help menu.

Java [Menu 7-3]

Java is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard Netscape or MS Internet Explorer browsers, Java MIDlet can be downloaded using the WAP enabled phone.

Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed within the Applications menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD and .JAR formats.



Multimedia [Menu 7]



Note

- The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.



Warning

- Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment. The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.

Applications [Menu 7-3-1]

Application menu displays the list of Java programs downloaded using the WAP. All previous downloaded programs can be selected, deleted, or viewed in detail within the Application menu. From the list within the Application menu, the following options are available:

- **Open:** Open the selected program. The list includes all Java programs installed in the phone.
- **Delete:** Delete the selected program. Once deleted, you will not be able to restore the program unless it is downloaded again using the WAP.
- **Information:** Displays detailed information on the selected program. This includes the program name, program size, program version, vendor information and the website address or the URL.



Download [Menu 7-3-2]

When a new Java program is downloaded using the WAP, the address from which a download takes place is known as a bookmark. The Java menu includes a bookmark list for downloading Java programs and this bookmark list can be viewed from the Download menu. You can connect, view, edit, delete, and add new bookmarks.

- **Connect:** Selected address in the bookmark is used for data connection. After successful connection, desired Java program can be downloaded from the list.
- **View:** Detailed information on a bookmark can be viewed such as the address of bookmark and title of bookmark required for connecting to certain sites.
- **Edit:** Selected bookmark can be edited. Editing a bookmark is done in the order of Address → Title. When creating a new bookmark, same order is followed.
- **Delete:** Selected bookmark is deleted. All bookmarks can be deleted completely from the bookmark list screen. Deleted bookmark cannot be restored so caution is required when deleting bookmarks.
- **Add new:** New bookmark is added. The same order used during Edit bookmark applies to Add new bookmark. Select the Add new option from the bookmark menu or when no bookmark exists, then the Add new can be selected from the bookmark list screen.



Multimedia [Menu 7]



Note

- After selecting the Connect function to access the Java MIDlet Provider's server, you may choose one of many Java programs to download and install into your phone. Once connected to the server, the Go button can be pressed to view the JAD information on a desired program. The Get button will begin the download and install process. The download and install process will take place simultaneously and once download is complete you can immediately run the Java program. The installed Java program can be selected to run at a later time from the Application menu.

Memory status [Menu 7-3-3]

The downloaded programs using the WAP are stored in the phone memory. There is a maximum memory capacity in a phone and once you exceed this memory, you will not be able to store any more programs. This menu allows you to check the available memory capacity in a phone.




 
Press the Menu key () and select **Service** using navigation keys.

Internet [Menu 8-1]


You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

Please contact your network operator to open your Internet account. To use the Web Browser, you must indicate your phone number via the **Own number** menu option (See page 58 for further details.).

To launch the browser in standby mode, press and hold down the  key or Camera setting menu key () on the right side of the phone.

Once connected, the homepage is displayed. The content depends on the service provider.

You can access any website page by entering its URL address. To exit the browser at any time, press the  key. The phone will return to the standby mode.

Navigating with the WAP browser


 
 
You can surf the Internet using either the phone keys or the WAP browser menu.

Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.



Service [Menu 8]

Key	Description
	Scrolls each line of the content area
	Returns to the previous page
	Selects options and confirms actions

Using the WAP browser menu

There are various menu options available when surfing the Wireless Web.



Note

- The WAP browser menus may vary, depending on your browser version.

Home [Menu 8-1-1]

Connect to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

Bookmarks [Menu 8-1-2]

This menu allows you to store the URL of favourite web pages for easy access at a later time. You can also create folders and organise the bookmarks in each folder.

To create a bookmark

1. Press the left soft key [Options].
2. Select **New bookmark** and press the OK key.
3. Enter the desired URL and title and press the OK key.



After creating bookmarks, the following options are available.

- **Connect:** Connects to the selected bookmark.
- **Edit:** You can edit the URL and/or the title of the selected bookmark.
- **New bookmark:** Select this to create a new bookmark.
- **New folder:** Select this to create a new folder.
- **Delete:** Deletes the selected bookmark.
- **Delete all:** Deletes all the bookmarks and folders.

Push messages [Menu 8-1-3]

- **Push inbox**

You can order Push messages from WAP service providers. Push messages are notifications of, for example, news headlines and they can contain a text message or the address of a WAP service. For availability and subscription, contact your WAP service provider. Service providers can update an existing Push message every time a new Push message is received. Messages can be updated even if you have moved them to another folder. When Push messages expire, they are deleted automatically.

- **Information:** Shows the information of received push messages.
- **Load:** Connects to a specific site using the information in the received push message.
- **Delete:** Deletes the selected push message.

- **Receive**

You can choose whether or not you wish to receive push messages.



Service [Menu 8]

Profiles [Menu 8-1-4]

For more information, consult your network operator.

Each profile has submenus as follows:

- **Activate:** Activates the selected profile.
- **Settings:** Use this to edit and change WAP settings for the selected profile.
- **Rename:** You can change the selected profile's name.
- **Delete:** Deletes the selected profile from the list.
- **Add new:** You can add a new profile



Note

- The changes using these options may affect the MMS function.

Go to URL [Menu 8-1-5]

You can connect directly to the site you want. To do this, you need to enter a specific URL.

Cache settings [Menu 8-1-6]

The information or services you have accessed are saved in the cache memory of the phone.

• Clear cache

Removes all context saved in cache.

• Cache check

Set a value whether a connection attempt is made through cache or not.



Security certificates [Menu 8-1-7]

A list of the available certificates is shown.

Reset profiles [Menu 8-1-8]

You can reset profiles to return to original settings.

WAP information [Menu 8-1-9]


The WAP browser version is displayed.

SIM service [Menu 8-2]

Your service provider can offer special application through SIM card, such as home banking, stock market, etc. If you are registered for one of these services, the service name will appear at the end of the main menu. With the SIM service menu, your phone is future-proof and will support additions to your service provider's service. For further information, contact your service provider.



Settings [Menu 9]

Press the Menu key () and select **Settings** using navigation keys.

Date & Time [Menu 9-1]

This option lets you change the current time and date displayed.
The following options are available.

Set date [Menu 9-1-1]

Use this to enter the day, month and year. You can change the date format via the **Date format** menu option.

Date format [Menu 9-1-2]

YYYY/MM/DD (year/month/day)

DD/MM/YYYY (day/month/year)

MM/DD/YYYY (month/day/year)

Set time [Menu 9-1-3]

Use this to enter the current time. You can choose the time format via the **Time format** menu option.

Time format [Menu 9-1-4]

24 hours

12 hours

Dual time [Menu 9-1-5]

You can activate the phone to run dual time clocks. After selecting **On**, select the desired dual time zone.

Beep every hour [Menu 9-1-6]

You can set the phone to beep every hour by selecting **On**.



Call settings [Menu 9-2]

To set the options related to calls.

Call divert [Menu 9-2-1]

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your network operator.

Select one of the divert options, for example, select **If busy** to divert voice calls when your number is busy or when you reject incoming calls.

The following options are available.

All voice calls: Diverts all voice calls unconditionally.

If busy: Diverts voice calls when the phone is in use.

If no reply: Diverts voice calls which you do not answer.

If out of reach: Diverts voice calls when the phone is switched off or out of coverage.

All data calls: Diverts to a number with a PC connection unconditionally.

All fax calls: Diverts to a number with a fax connection unconditionally.

Each option has the following menu:

- **Activate:** Activates the corresponding service.
 - **To voice mail:** Forwards to message centre. This function does not apply to **All data calls** and **All fax calls** menus.
 - **To other number:** Input the number for call diverting.
 - **Favorite number:** After entering up to 5 frequently used phone numbers, you can divert calls to them.
- **Cancel:** Cancels the selected call divert.
- **View status:** You can check the status of the service.



Cancel all: Cancels all call divert settings.



Settings [Menu 9]

Answer mode [Menu 9-2-2]

Select the desired mode to answer a call.

- **Flip open:** When the phone rings, you can answer a call simply by opening the folder.
- **Any key:** When the phone rings, you can answer a call by pressing any key except the  key and the right soft key ().
- **Only send key:** You can answer a call only by pressing the send key.

Send my number [Menu 9-2-3]

This network service lets you decide whether your phone number is displayed (**On**) or hidden (**Off**) from the person you are calling. Select **Set by network** to reset the phone to the setting that you have agreed upon with your service provider.

Call waiting [Menu 9-2-4] (Network Service)

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **View status**, to check if the function is active or not.


Minute minder [Menu 9-2-5]

When set to On, the phone will beep every minute during an outgoing call to keep you informed of the length of the call.



Voice dial [Menu 9-2-6]

You can make a phone call by speaking a voice tag that has been added to a contact card. Any spoken word(s) can be a voice tag. Before using voice-activated dialling, note that:

- Voice tags are not language dependent. They are dependent on the speaker's voice.
- Voice tags are sensitive to background noise. Record them and make calls in a quiet environment.
- When recording a voice tag or making a call by saying a voice tag, the loudspeaker is in use. Hold the phone at a short distance away from your mouth and face so that the proximity sensor does not turn the loudspeaker off.
- Very short names are not accepted. Use long enough names and avoid similar names for different numbers.
 - **Automatic:** Use this to enter voice-activated dialling mode whenever you open the folder.
 - **Manual:** Use this to enter voice-activated dialling mode by holding the star () key.



Note

- You must say the name exactly as you said when you recorded it. This may be difficult, for example, in a noisy environment or during an emergency, so you should not rely solely upon voice-activated dialling in all circumstances.



Settings [Menu 9]

Auto redial [Menu 9-2-7]

Select **On**, and your phone will make a maximum of five attempts to connect the call after an unsuccessful call attempt.

Closed user group [Menu 9-2-8]

This is a network service that specifies the group of people who you can call and who can call you. For more information, contact your network operator or service provider. If a group index is specified, it is used for all outgoing calls. If no group index is specified, the network will use the preferential index.

(A specific index is stored in the network.)

- **Preset:** Select this to activate the previous CUG index.
- **On:** You can edit the CUG indexes and activate it.
- **Off:** Deactivates this function.

Phone settings [Menu 9-3]

Many features of your phone can be customised to suit your preferences. All of these features are accessed via the **Phone settings** menu.

Wallpaper [Menu 9-3-1]

Use this to set up the display on the internal/external LCD screen in standby mode.



Backlight [Menu 9-3-2]

Use this to select whether or not the phone uses the backlight. A small increase in standby/talk time can be achieved by turning the backlight off.

Menu colour [Menu 9-3-3]

Your phone provides you with 4 menu colour themes. Set the menu colour by scrolling and pressing the left soft key [Select].

Font setting [Menu 9-3-4]

Select the desired font.

Greeting note [Menu 9-3-5]

To enter a greeting note, select **On**. And input a greeting note using the keypad. The greeting note is displayed in standby mode.

Languages [Menu 9-3-6]

You can select the display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used. English will be set if the language on the SIM card is not supported by the phone.

Network name [Menu 9-3-7]

Select whether to display the network name when the phone is turned on/off.



Settings [Menu 9]

Security settings [Menu 9-4]

Various passwords are used to protect certain features of your phone. Refer to page 26-27 for the various passwords.

PIN code request [Menu 9-4-1]

When the **PIN code request** feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.



Note

- Before disabling the **PIN code request** feature, you must enter your PIN.

The following options are available:

- **Enable:** You must enter the PIN each time the phone is switched on.
- **Disable:** The phone connects directly to the network when you switch it on.

Phone lock [Menu 9-4-2]

You can lock your phone. Select the desired phone lock option. To change the phone lock option, you are asked to enter the security code.

- ▶ To unlock the phone, press the right soft key and enter the security code.



Call barring service [Menu 9-4-3] (Network dependent)

Call barring lets you restrict the making and receiving of calls with your phone. For this function, you need the barring password, which you can obtain from your service provider.

The following options are available:

- **All outgoing:** No call can be made.
- **Outgoing international:** International calls cannot be made.
- **Outgoing international except home country:** When abroad, calls can be made only to numbers within the current country and to your home country, the country where your home network provider is located.
- **All incoming:** No call can be received.
- **Incoming when abroad:** Calls cannot be received when you are using your phone outside your home service area.
- **Cancel all barrings:** All call barring settings are deactivated; calls can be made and received normally.
- **Change password:** Use this to set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one. Once you have entered a new password, you are asked to confirm it by entering it again.



Note

- To use **Call barring service**, you must input the network password. When calls are barred, calls may be possible to certain emergency numbers on some networks.



Settings [Menu 9]

Fixed dial number (FDN) [Menu 9-4-4] (SIM dependent)

Use this to restrict your outgoing calls to selected phone numbers, if this function is supported by your SIM card. The PIN2 code is required.

When FDN is activated, if you try to dial a number not included in the FDN list, the message “Check FDN” will appear.

The following options are available:

- **Enable:** Use this to only call phone numbers saved in the phonebook. You must enter your PIN2 code.
- **Disable:** Allows you to call any number.
- **Number list:** Use this to view the numbers saved as fixed dial numbers.



Note

- Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

Change codes [Menu 9-4-5]

The **Change codes** feature lets you change your current password to a new one. You must enter the current password before you can specify a new one.

Use this to change the access codes: **Security code**, **PIN1 code**, **PIN2 code**



Note

- PIN: Personal Identification Number.



Network settings [Menu 9-5]

The **Network settings** feature enables you to indicate whether the network used when roaming (outside your home area) is selected: Automatic, Manual, Preferred.



Note

- You can select a network other than your home network only if it has a valid roaming agreement with your home network.

GPRS settings [Menu 9-6]

GPRS (General Packet Radio Service) is a technology that allows mobile phones to be used for sending and receiving data over the mobile network. GPRS is a data bearer that enables wireless access to data network such as the Internet.

Before you can use GPRS technology:

- You need to subscribe to the GPRS service. For availability and subscription to GPRS service, contact your network operator or service provider.
- You need to save the GPRS settings for the applications used over GPRS.

Attach [Menu 9-6-1]

If you select **Power on** and you are in a network that supports GPRS, the phone registers to the GPRS network and sending short messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker. If you select **When needed**, the phone will use a GPRS connection only if you start an application or action that needs it. The GPRS connection is closed after it is no longer required by any application.



Settings [Menu 9]



Note

- If there is no GPRS coverage and you have chosen Automatic, the phone will periodically try to establish a connection.

External device [Menu 9-6-2]

When you use Internet via GPRS by using external device, you can set the following six profiles: **Rename**, **APN**, **IP address**, **DNS**, **User ID**, and **Password**.

Factory reset [Menu 9-7]

You can reset your phone to its default configuration. To do so, proceed, as follows.

1. Select the **Factory reset** menu option.
2. Enter the 4-digit security code.




Note

- The security code is preset to 0000. To change this, refer to page 104.

 




Please check to see if any problem which you may have with your phone is described here before taking it for service or calling a service engineer.


Q How do I view the list of outgoing calls, incoming calls and missed calls?

A Press .


Q How do I clear all call history?

A Press the left soft key and then   .

Q How do I view all numbers saved in the memory?

A Press the right soft key and then .

Q  does not disappear from the screen.

A Check whether you are in a service area. If you continue to see , turn off the power and wait for approximately 2 minutes before turning it back on. If there is no change, relocate to another area and check again.

Q Connection is poor or is not audible in certain areas.

A In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.



Q&A

Q Connection is poor even when established.

A In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

Q LCD does not turn on.

A Remove and replace the battery and turn on the power. If the phone still does not turn on, charge the battery and try again.

Q An echo can be heard during connection with a certain telephone in a certain area.

A It is called 'Echo Phenomenon'. It occurs if the volume is too high or caused by special properties (semi electronic telephone exchange) of the machine on the other end.

Q The phone gets warm.

A During long calls, or if camera/games/Internet are used for a long time, the phone may become hot. This is perfectly normal and has no effect upon the life of the product or performance.


Q Standby duration of the phone gradually becomes shorter.

A Batteries have a limited life. When the battery lasts for half its original time, it requires replacement. Only use authorised replacement parts.

Q Usage time of battery becomes shorter.

A If the battery time is short, it may be due to the user environment, or large volume of calls, or weak signals.



- Q** No number is dialled when you recall a phonebook entry.
- A** Check that the numbers have been saved correctly, by using the phonebook Search feature. Resave them, if necessary.
- Q** You cannot be contacted.
- A** Is your phone switched on ( pressed for more than three seconds)? Are you accessing the right cellular network? Have you set an incoming call barring option?
- Q** I cannot find the lock, PIN, or PUK code, or password?
- A** The default lock code is **'0000'**. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.



Accessories

There are a variety of accessories available for your mobile phone. You can select these according to your personal communication requirements. Consult your local dealer for availability.



Supplied adapter

This adapter lets you charge the while at home or in the office.



 
Battery

Standard battery is available.



 
Stereo headset

Allows hands-free operation. Includes earpiece and microphone.



Data cable kit

Connects your phone to a PC.



USB cable

- ▶ To download the MP3 files to the phone.
- ▶ To upload the pictures/movies taken on the phone to the PC.

Serial cable

- ▶ To download the ring tones, wallpaper or Java games.
- ▶ To manage the phonebook, scheduler, and message box on the PC.



Note

- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
- Accessories may be different in different regions: please check with our regional service company or agent for further enquiries.

Technical data



General

Product name : T5100

System : GSM900 / DCS 1800

Ambient Temperatures

Max : +55°C

Min : -10°C

Declaration of Conformity



LG Electronics

This model complies with the essential requirements of Article 3 of the R&TTE 1999/5/EC Directive, if used for its intended use.

1. Health (Article 3.1.a of the R&TTE Directive)
2. Safety (Article 3.1.a of the R&TTE Directive)
3. Electromagnetic compatibility (Article 3.1.b of the R&TTE Directive)
4. Efficient use of the radio frequency spectrum (Article 3.2 of the R&TTE Directive)

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned articles of the directive.

If available, write the contact person(s)

Mr. Jin Seog, Kim
LG Amsterdam Branch Office
Capronilaan 6, 1119 NR Schiphol-rijik,
The Netherlands
(Tel.) +31-20-655 7774

Mr. Ji Jong, Jeon
LG Electronics Inc. GSM Division
Emerald BD, 1042 Hogye-Dong, Dongan-Gu
Anyang-city, Kyuengki-Do
431-080, Korea

CE 0700

Memo





Memo

Memo





Memo