



DVD KARAOKE SYSTEM

OWNER'S MANUAL

MODEL : DKS-5000



Please read this manual carefully before operating your set.
Retain it for future reference.

Designs and specifications are subject to change without
notice for improvement.

The working life of this product is 7 years since the date of
purchase.

Safety Precautions



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: TO REDUCE THE RISK OF ELECTRIC SHOCK DO NOT REMOVE COVER (OR BACK) NO USER-SERVICEABLE PARTS INSIDE REFER SERVICING TO QUALIFIED SERVICE PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
CLASS 1 LASER APPARAT
CLASSE 1 PRODUCT LASER

CAUTION:

This Digital Video Disc Player employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain for future reference, should the unit require maintenance, contact an authorized service location—see service procedure.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

CAUTION: The apparatus shall not be exposed to water, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.



Notes on copyrights:

It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyright material without permission.

This product is equipped with copy protection measures developed by Macrovision. Copy protection signals are recorded on some discs. When recording these discs on a VCR, picture noise will appear during playback.

This product incorporates copyright protection technology that is protected by certain U.S. patent claims and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

SERIAL NUMBER: The serial number is found on the back of this unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase.

Model No. _____

Serial No. _____

Table of Contents

Introduction

Safety Precautions	2
Table of Contents	3
Before Use	4-5
Playable Discs	4
Precautions	5
Notes on Discs	5
About Symbols	5
Front Panel and Display Window	6
Remote Control	7
Rear Panel	8

Preparation

Connections	9-10
Connecting to a TV	9
Connecting to Optional Equipment and a TV	10
Before Operation	11-14
General Explanation	11
On-Screen Display	11
Initial Settings	12-14
• Initial Settings General Operation	12
• Language	12
• Picture	12
• Sound	13
• Others	13
• Parental Control	14

Operation


Operation with DVD and Video CD	15-17
Playing a DVD and Video CD	15
General Features	16
• Moving to another TITLE	16
• Moving to another CHAPTER/TRACK	16
• Still Picture and Frame-by-Frame Playback	16
• Search	16
• Repeat	16
• Repeat A-B	16
• Time Search	16
Special DVD Features	17
• Title Menu	17
• Disc Menu	17
• Camera Angle	17
• Changing the Audio Language	17
• Subtitle	17

Operation with Audio CD and MP3 disc	18
Programmed Playback	19
Programmed Playback with Audio CD	19
Programmed Playback with MP3 disc	19
Operation with KARAOKE	20-24
Karaoke Basic Playback	20
Karaoke Advanced Playback	20-21
• Return Function	20
• To Adjust MIC Volume	20
• To Adjust ECHO Volume	20
• Key Control	20
• Reserving the Songs	21
• Male/Female Function	21
• Tempo Change	21
• Screen Change Function	21
• Shadow Function	21
Karaoke MENU Playback	22-24
• Select of Melody	22
• Score Indication	22
• Fanfare	22
• Challenging Karaoke	22
• Sing Room Karaoke	23
• Medley Karaoke	24
• Masterpiece Impression Karaoke	24
Additional Information	25
Last Condition Memory	25
Remain Function	25
Notes on MP3 Discs	25

Reference

Troubleshooting	26
Language Code List	27
Specifications	28

About the symbols for instructions

 Indicates hazards likely to cause harm to the unit itself or other material damage.

 Indicates special operating features of this unit.




 Indicates tips and hints for making the task easier.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic", and the double-D symbol are trademarks of Dolby Laboratories. Confidential Unpublished works. Copyright 1992-1997 Dolby Laboratories. All rights reserved.

Apparatus Claims of U.S Patent Nos. 4,631,603,4,577,216, 4,819,098, and 4,907,093 Licensed for limited viewing uses only.

Before Use

Playable Discs

	DVD (8 cm / 12 cm disc)
	Video CD (VCD) (8 cm / 12 cm disc)
	Audio CD (8 cm / 12 cm disc)

In addition, this unit can play a CD-R or CD-RW that contains audio titles or MP3 files.

Notes


- Depending on the conditions of the recording equipment or the CD-R/RW disc itself, some CD-R/RW discs cannot be played on the unit.
- The unit cannot play the CD-R/RW discs that contain no data, or contain different kinds of formatted data other than MP3 and CD-DA data.
- Do not attach any seal or label to either side (the labeled side or the recorded side) of a disc.
- Do not use irregular shaped CDs (e.g., heart-shaped or octagonal). It may result in malfunctions.

Notes on DVDs and Video CDs

Some playback operations of DVDs and Video CDs may be intentionally fixed by software manufacturers. As this unit plays DVDs and Video CDs according to disc content designed by the software manufacturer, some playback features of the unit may not be available, or other functions may be added.

Refer also to the instructions supplied with the DVDs and Video CDs. Some DVDs made for business purposes may not be played on the unit.

Regional code of the DVD karaoke and DVDs

This DVD karaoke is designed and manufactured for playback of region “5” encoded DVD software. The region code on the labels of some DVD discs indicates which type of player can play those discs. This unit can play only DVD discs labeled “5” or “ALL”.  If you try to play any other discs, the message “Check Regional Code” will appear on the TV screen. Some DVD discs may not have a region code label even though their playback is prohibited by area limits.

Note on DTS-encoded CDs

When playing DTS-encoded CDs, excessive audio level may be heard from the analog stereo output. To avoid possible damage to the audio system, turn down the volume before playing back such discs, adjust the volume gradually, and keep the volume level low. To enjoy DTS Digital Surround™ playback, an external 5.1 channel DTS Digital Surround™ decoder system must be connected to the digital output of the unit.

Disc-related terms

Title (DVD only)

The main film content or accompanying feature content or additional feature content, or music album. Each title is assigned a title reference number enabling you to locate it easily.

Chapter (DVD only)

Sections of a picture or a musical piece that are smaller than titles.

A title is composed of one or several chapters. Each chapter is assigned a chapter number, enable you to locate the chapter you want. Depending on the disc, no chapters may be recorded.

Track (Video CD and audio CD only)

Sections of a picture or a musical piece on a video CD or an audio CD. Each track is assigned a track number, enabling you to locate the track you want.

Scene

On a video CD with PBC (Playback control) functions, moving pictures and still pictures are divided into sections called “Scenes”. Each scene is displayed in the menu screen and assigned a scene number, enabling you to locate the scene you want.

A scene is composed of one or several tracks.

Types of video CDs

There are two types of video CDs:

Video CDs equipped with PBC (Version 2.0)

PBC (Playback control) functions allow you to interact with the system via menus, search functions, or other typical computer-like operations. Moreover, still pictures of high resolution can be played if they are included in the disc.

Video CDs not equipped with PBC (Version 1.1)

Operated in the same way as audio CDs, these discs allow playback of video pictures as well as sound, but they are not equipped with PBC.

Before Use (Cont'd)

Precautions

Handling the unit

When shipping the unit

The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packed at the factory.

When setting the unit

The picture and sound of a nearby TV, VCR, or radio may be distorted during playback. In this case, position the unit away from the TV, VCR, or radio, or turn off the unit after removing the disc.

To keep the surface clean

Do not use volatile liquids, such as insecticide spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface.

Installing

- Do not install the unit in a confined space, such as a bookcase or built-in cabinet.
- Allow adequate air circulation to prevent internal heat buildup.
- Do not place the unit on surfaces (rugs, blankets, etc.) or near materials (curtains, draperies) that may block the ventilation slots.
- Do not install the unit near heat sources such as radiators or air ducts, or in a place subject to direct sunlight, excessive dust, mechanical vibration or shock.
- Do not place heavy objects on the unit.

Cleaning the unit

To clean the cabinet

Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents, such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

To obtain a clear picture

The DVD karaoke is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn down, the picture quality will be poor.

Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.)

For details, please contact your nearest dealer.

Notes on Discs

Handling discs

Do not touch the playback side of the disc. Hold the disc by the edges so that fingerprints will not get on the surface.

Do not stick paper or tape on the disc.




Storing discs

After playing, store the disc in its case.

Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

Cleaning discs


Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.

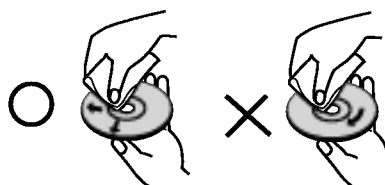

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.






About Symbols

About the symbol display



"" may appear on the TV screen during operation. This icon means the function explained in this owner's manual is not available on that specific DVD video disc.

About the disc symbols for instructions


A section whose title has one of the following symbol is applicable only to the disc represented by the symbol.

-  DVD
-  Video CDs with the PBC (playback control) function
-  Video CDs without the PBC (playback control) function
-  Audio CDs
-  MP3 disc

Front Panel and Display Window

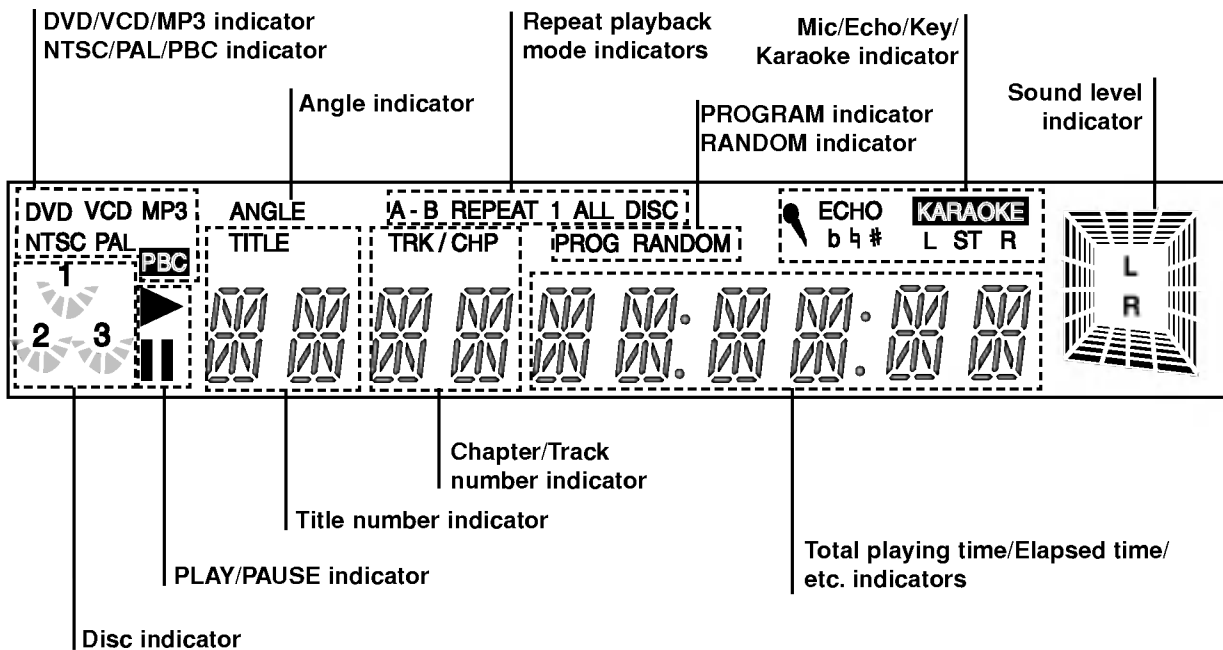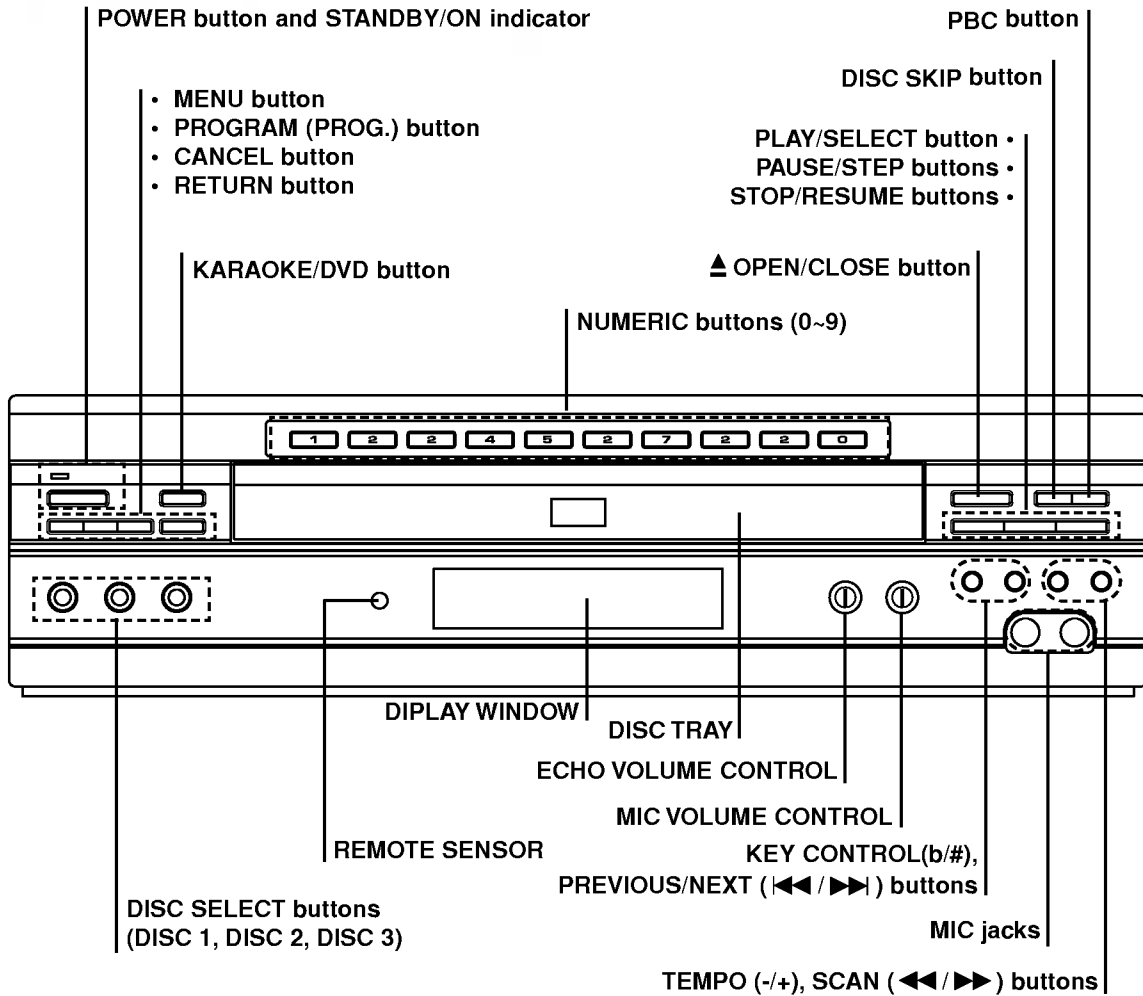

Remote Control

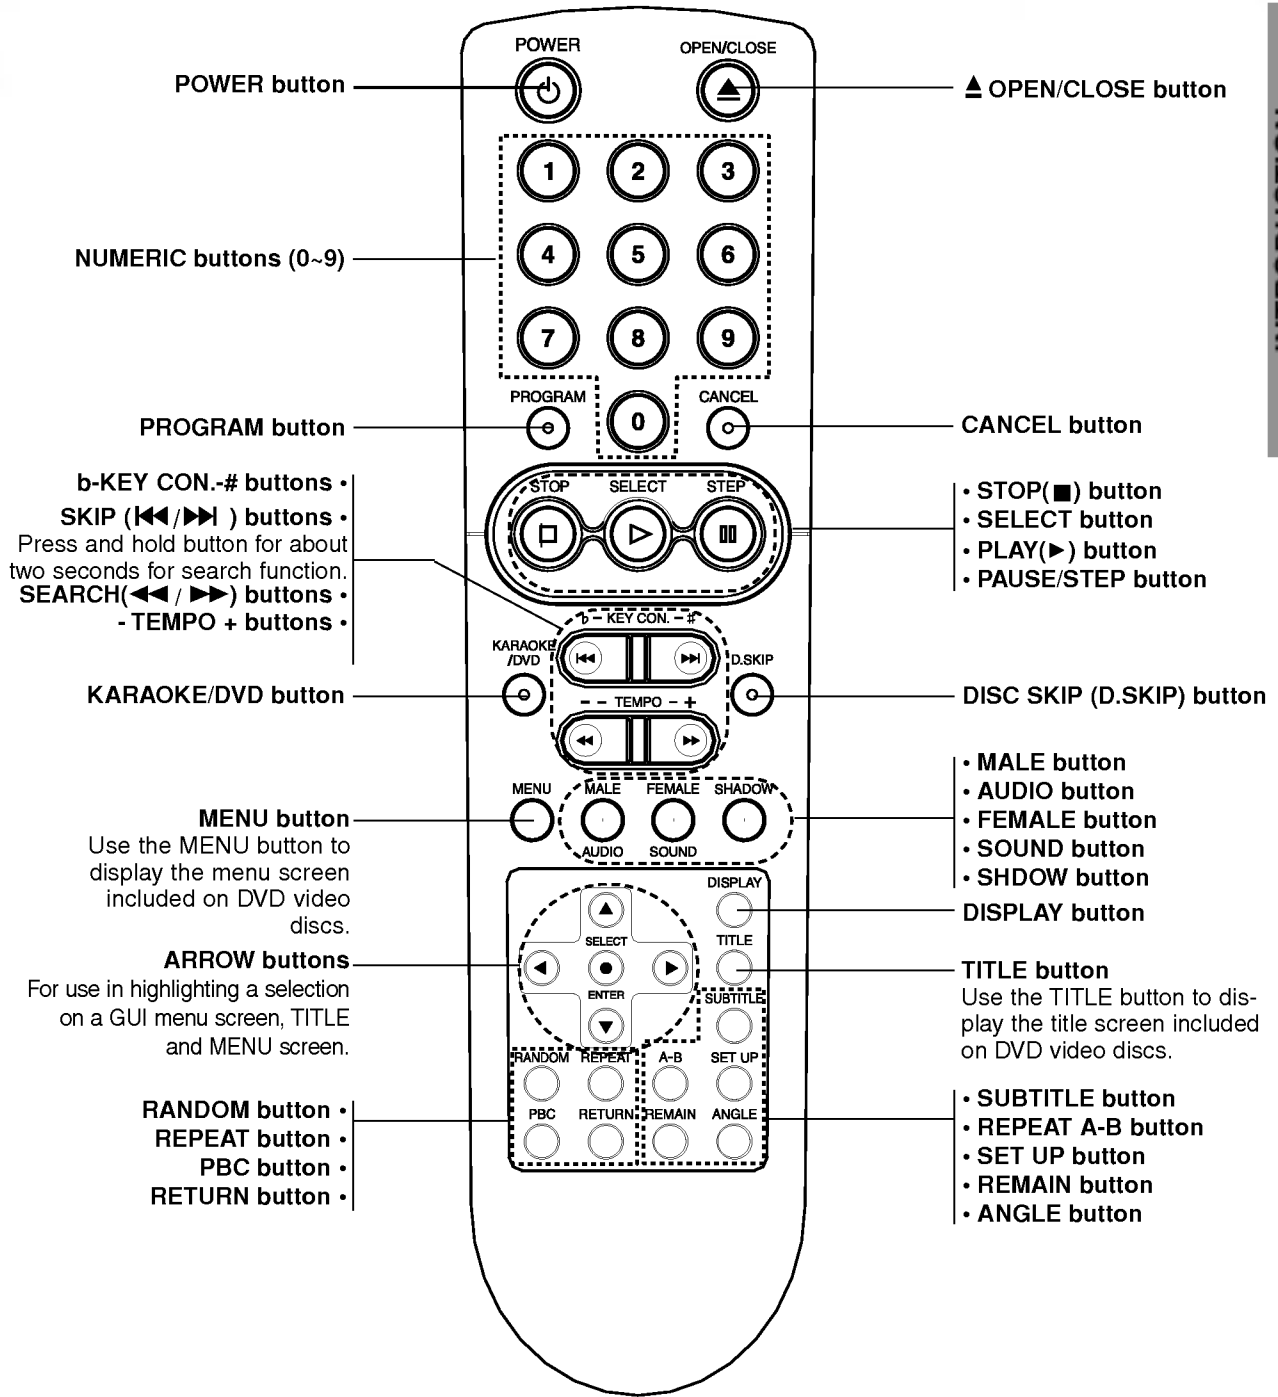


Remote Control Operation Range

Point the remote control at the remote sensor and press the buttons.

- **Distance:** About 23 ft (7 m) from the front of the remote sensor
- **Angle:** About 30° in each direction of the front of the remote sensor

 Remote control battery installation




Detach the battery cover on the rear of the remote control, and insert two R03 (size AAA) batteries with **+** and **-** aligned correctly.

⚠ Caution

Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).

Rear Panel

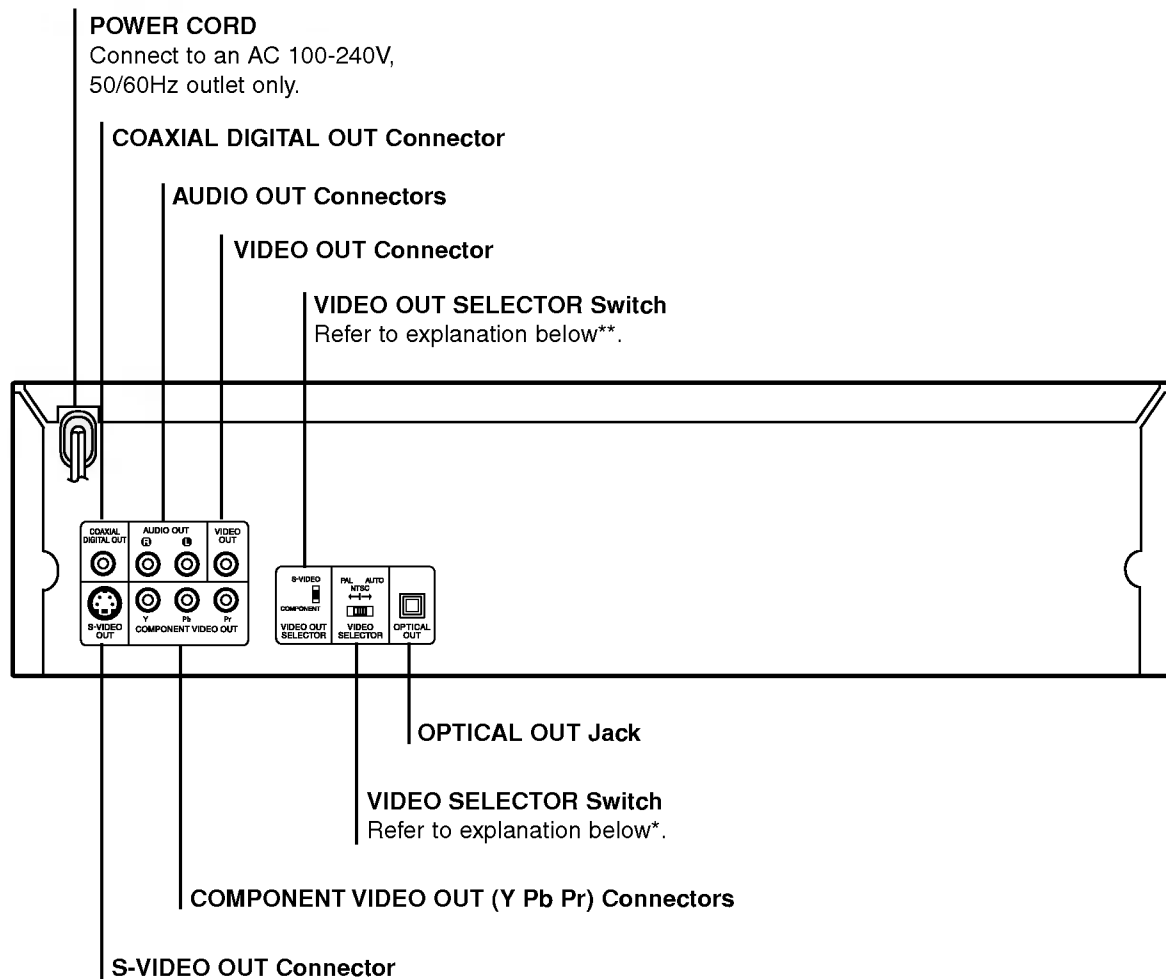

Caution

Do not touch the inner pins of the jacks on the rear panel. Electrostatic discharge may cause permanent damage to the unit.

* VIDEO SELECTOR switch

You can enjoy NTSC or PAL discs by setting the VIDEO SELECTOR switch to choose the appropriate system.

PAL: Select when DVD Karaoke is connected with PAL-TV.

NTSC: Select when DVD Karaoke is connected with NTSC-TV.

AUTO: Select when DVD Karaoke is connected with Multi system TV.


- When the selected System Select switch does not coincide with the system of your TV, normal color picture may not be displayed.
- Set System Select switch when the power is turned off.

** VIDEO OUT SELECTOR Switch

Select either S-VIDEO OUT or COMPONENT VIDEO OUT, depending on how you connected the DVD Karaoke to the TV.

Connections

Connecting to a TV

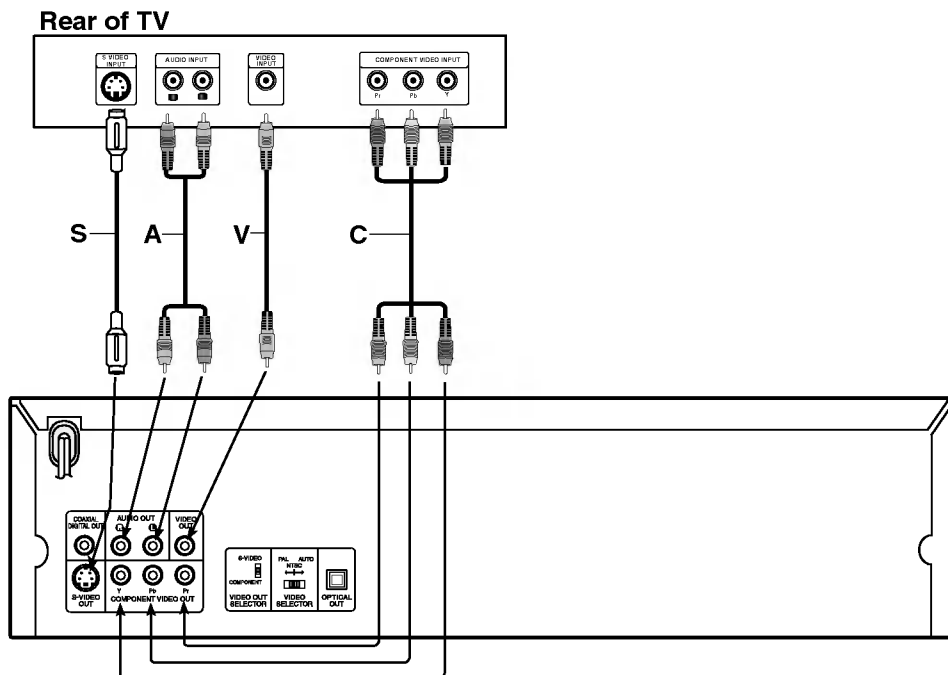

- Make one of the following connections, depending on the capabilities of your existing equipment.
- When using the COMPONENT VIDEO OUT jacks, set the VIDEO OUT SELECTOR switch to COMPONENT. When using the S-VIDEO OUT jack, set the VIDEO OUT SELECTOR switch to S-VIDEO.

Tips

- Depending on your TV and other equipment you wish to connect, there are various ways you could connect the player. Use one of the connections described below.
- Please refer to the manuals of your TV, VCR, Stereo System or other devices as necessary to make the best connections.

Caution

- Make sure the DVD Karaoke is connected directly to the TV. Select the correct AV input on your TV.
- Do not connect your DVD Karaoke to TV via your VCR. The DVD image could be distorted by the copy protection system.

Video connection

- 1** Connect the VIDEO OUT jack on the DVD Karaoke to the video in jack on the TV using the video cable supplied (**V**).
- 2** Connect the Left and Right AUDIO OUT jacks of the DVD Karaoke to the audio left/right in jacks on the TV (**A**) using the supplied audio cables.

S-Video connection

- 1** Connect the S-VIDEO OUT jack on the DVD Karaoke to the S-Video in jack on the TV using the optional S-Video cable (**S**).
- 2** Connect the Left and Right AUDIO OUT jacks of the DVD Karaoke to the audio left/right in jacks on the TV (**A**) using the supplied audio cables.

Notes


- The signal of S-VIDEO OUT jack will output only when the function mode is selected to CD/DVD.
- When you connect the DVD Karaoke to your TV, be sure to turn off the power and unplug both units from the wall outlet before making any connections.

Component Video (Color Stream®) connection

- 1** Connect the COMPONENT VIDEO OUT jacks on the DVD Karaoke to the corresponding in jacks on the TV using an optional Y Pb Pr cable (**C**).
- 2** Connect the Left and Right AUDIO OUT jacks of the DVD Receiver to the audio left/right in jacks on the TV (**A**) using the supplied audio cables.

Connections (Cont'd)

Connecting to Optional Equipment and a TV

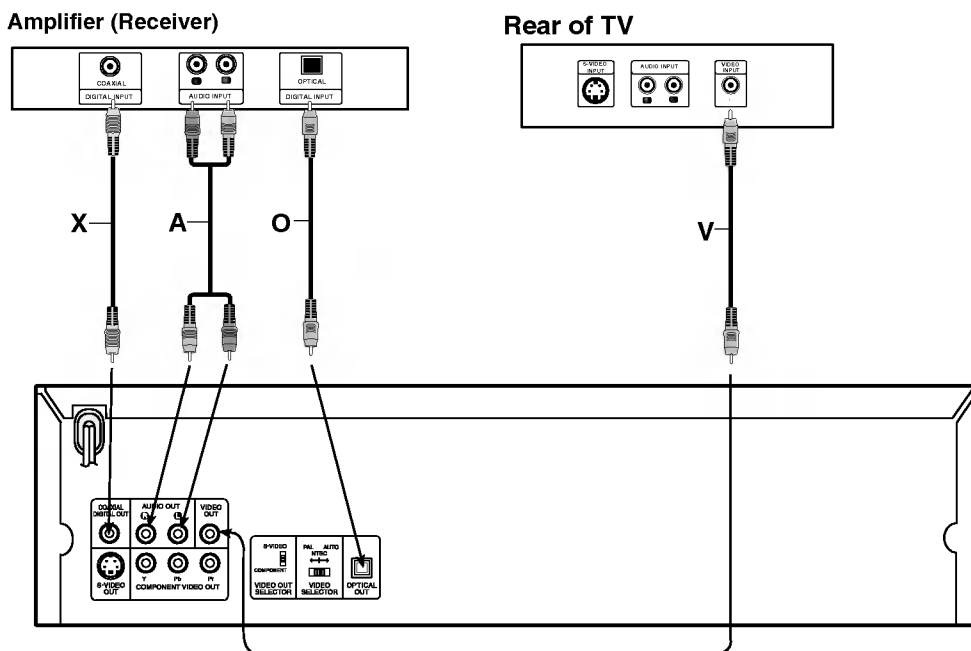

Connecting to an amplifier equipped with two channel analog stereo or Dolby Surround

Connect the Left and Right AUDIO OUT jacks on the DVD Karaoke to the audio left and right in jacks on your amplifier, receiver or stereo system, using the supplied audio cables (A).

Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/ Video receiver equipped with a multi-channel decoder (Dolby Digital™, MPEG 2 or DTS)

1 Connect one of the DVD Karaoke's DIGITAL AUDIO OUT jacks (OPTICAL O or COAXIAL X) to the corresponding in jack on your amplifier. Use an optional digital (optical O or coaxial X) audio cable.

2 You will need to activate the player's digital output. (See "Digital Audio Output" on page 13).

Digital Multi-channel sound

A digital multi-channel connection provides the best sound quality. For this you need a multi-channel Audio/Video receiver that supports one or more of the audio formats supported by your DVD Player (MPEG 2, Dolby Digital and DTS). Check the receiver manual and the logos on the front of the receiver.



Caution:

Due to the DTS Licensing agreement, the digital output will be in DTS digital out when DTS audio stream is selected.

Notes

- If the audio format of the digital output does not match the capabilities of your DVD Karaoke, the DVD Karaoke will produce a strong, distorted sound or no sound at all.
- Six Channel Digital Surround Sound via digital connection can only be obtained if your receiver is equipped with a Digital Multi-channel decoder.
- To see the audio format of the current DVD Karaoke in the On-Screen Display, press AUDIO.

Connecting an amplifier and a TV to DVD Karaoke

1 Connect the VIDEO OUT jack on the DVD Karaoke to the video in jack on the TV using the video cable supplied (V).

 
2 Connect the Left and Right (Analog) AUDIO OUT jacks of the DVD Karaoke to the audio Left/Right (Analog) IN jacks on the amplifier (A) using the supplied audio cables.

Before Operation

Caution:

Before using the remote control, press the **DVD** or **TV** button to select the device to be operated.

General Explanation

This manual gives the basic instructions for operating the DVD Karaoke. Some DVDs require specific operation or allow only limited operation during playback. When this occurs, the symbol  appears on the TV screen, indicating that the operation is not permitted by the DVD Karaoke or is not available on the disc.

On-Screen Display

The general playback status can be displayed on the TV screen. Some items can be changed on the menu.

On-screen display operation









1 Press **DISPLAY** during playback.

2 Press **▲** or **▼** to select an item.
The selected item will be highlighted.

3 Press **◀** or **▶** to change the setting of an item.

The number buttons can be also be used for setting numbers (e.g., title number). For some functions, press **ENTER** to execute the setting.








Temporary Feedback Field Icons

	Repeat Title
	Repeat Chapter
	Repeat Track (non-PBC Video CDs only)
	Repeat All Tracks (non-PBC Video CDs only)
	Repeat A-B
	Repeat Off
	Resume play from this point
	Action prohibited or not available

Notes

 - Some discs may not provide all of the features on the on-screen display example shown below.
- If no button is pressed for 10 seconds, the on-screen display disappears.





DVD

Items		Function (Press ▲/▼ to select desired item)	Selection Method
Title Number	 1	Shows the current title number and skip to the desired title number.	◀ / ▶, or Numeric, ENTER
Chapter Number	 1	Shows the current chapter number and skips to the desired chapter number.	◀ / ▶, or Numeric, ENTER, SKIP
Time search	 0:16:57	Shows the elapsed playing time, and search the point by the elapsed time directly.	Numeric, ENTER
Audio language and Digital Audio Output mode	 1 RUS □□□□ 6 CH	Shows the current audio sound track language, encoding method and channel number, and changes the setting.	◀ / ▶ AUDIO
Subtitle language	 OFF	Shows the current subtitles language, and changes the setting.	◀ / ▶ SUBTITLE
Angle	 1	Shows the current angle number and total number of angles, and changes the angle number.	◀ / ▶ ANGLE
Sound	 NORM.	Shows the current sound mode and changes the setting.	◀ / ▶

VCD2.0

VCD1.1

 CD

Items		Function (Press ▲/▼ to select desired item)	Selection Method
Track Number	 1	Shows the current track number and the desired track number.	◀ / ▶, or Numeric, ENTER
Time	 0:16:57	Shows the elapsed playing time (Display only)	-
Audio Channel	 STER.	Shows the audio channel, and changes the audio channel.	◀ / ▶ AUDIO
Sound	 NORM.	Shows the current sound mode and changes the setting.	◀ / ▶


Before Operation (Cont'd)

Initial Settings

You can set your own Personal Preferences on the player.

Initial Settings General Operation

- 1 Press SETUP.**
The setup menu appears.

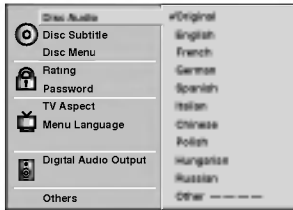

- 2 Press ▲/▼ to select the desired item.**
The screen will show the current setting for the selected item, as well as alternate setting(s).
- 3 While the desired item is selected, press ►, then ▲/▼ to select the desired setting.**
- 4 Press ENTER to confirm your selection.**
Some items require additional steps.
- 5 Press SETUP, RETURN or PLAY to exit the setup menu.**

Language

Disc Language **DVD**

Select a language for the disc's Menu, Audio and Subtitle.

Original : The original language set for the disc is selected.

Other : To select another language, press number buttons to enter the corresponding 4-digit number according to the language code list on page 27. If you enter the wrong language code, press CANECL.



Menu Language

Select a language for the setup menu. This is the menu you see when you press SETUP.



Picture

TV Aspect **DVD**

4:3 Letterbox: Select when a standard 4:3 TV is connected. Displays theatrical images with masking bars above and below the picture.

4:3 Panscan: Select when a standard 4:3 TV is connected. Displays pictures cropped to fill your TV screen. Either sides of the picture are cut off.

16:9 Wide: Select when a 16:9 wide TV is connected.



Before Operation (Cont'd)

Sound

Digital Audio Output

Each DVD disc has a variety of audio output options. Set the player's Digital Audio Output according to the type of audio system you use.

DOLBY DIGITAL/PCM: Select "DOLBY DIGITAL/PCM" if you connected the DVD Karaoke's DIGITAL OUT jack to a Dolby Digital decoder (or an amplifier or other equipment with a Dolby Digital decoder).

Stream/PCM: Select "Stream/PCM" if you connected the DVD Karaoke's DIGITAL OUT jack to an amplifier or other equipment with a DTS decoder, Dolby Digital decoder or MPEG decoder.

PCM: Select when connected to a 2 channel digital stereo amplifier. The DVD Karaoke outputs sounds in the PCM 2ch format when you play a DVD video disc recorded on the Dolby Digital, MPEG1 or MPEG2 recording system.



Others

The DRC, Vocal and PBC settings can be changed.

- Press ▲/▼ to select the desired item and press ENTER. The setting of the selected item are changed between On and Off.



Dynamic Range Control (DRC)

With the DVD format, you can hear a program's soundtrack in the most accurate and realistic presentation possible, thanks to digital audio technology. However, you may wish to compress the dynamic range of the audio output (the difference between the loudest sounds and the quietest ones). Then, you may listen to a movie at a lower volume without losing dialog intelligibility. Set DRC to On for this effect.

PBC

Set Playback Control (PBC) to On or Off.

On: Video CDs with PBC are played according to the PBC.

Off: Video CDs with PBC are played the same way as Audio CDs.

Pseudo PAL On/Off

On: A NTSC DVD disc or Video CD can be played back with the PAL color system TV set, depending on the disc.

Off: A NTSC DVD disc or Video CD cannot be played back with the PAL color system TV set.

Vocal

Set Vocal to On only when a multi-channel Karaoke DVD is playing. The karaoke channels on the disc will mix into a normal stereo sound.

Before Operation (Cont'd)

Parental Control

Rating **DVD**

Movies on DVDs may contain scenes not suitable for children. Therefore, discs may contain Parental Control information that applies to the complete disc or to certain scenes on the disc. These scenes are rated from 1 to 8, and alternatively, more suitable scenes are available for selection on some discs. Ratings are country dependent. The Parental Control feature allows you to prevent discs from being played by your children or to have certain discs played with alternative scenes.




- 1** Select "Rating" on the Setup menu using the ▲ and ▼ buttons.
- 2** While "Rating" is selected, press ►.
- 3** Select a rating from 1 to 8 using the ▲/▼ buttons. One (1) has the least playback restrictions. Eight (8) has the most playback restrictions.
Unlock: If you select Unlock, Parental Control is not active. The disc will play in full.
Ratings 1 to 8: Some discs contain scenes not suitable for children. If you set a rating for the player, all disc scenes with the same rating or lower will be played. Higher rated scenes will not be played unless an alternative scene is available on the disc. The alternative must have the same rating or a lower one. If no suitable alternative is found, playback will stop. You must enter the 4-digit password or change the rating level in order to play the disc.
- 4** Press ENTER to confirm your rating selection, then press SETUP to exit the menu.

N Note

When you have already entered a password; Enter 4-digit password using the numeric buttons to confirm the personal 4-digit security password, then press ENTER.

Password **DVD**

- 1** Select "Password" using the ▲/▼ buttons on the setup menu, then press ►.

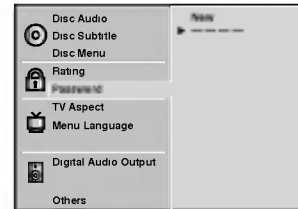

- 2** Input a 4-digit password and press ENTER.

Example : 1234
Do not forget your password.

- 3** Input the 4-digit password again and press ENTER to verify.
Setting is finished.

- The rating is locked. Any discs whose rating is higher than the setting cannot be played back unless the correct password is entered.

To change/clear memorized password

- 1** At the SETUP screen, press ▼ to select "Password" and press ►.
- 2** Input your password and press ENTER.



- 3** To change or clear your password, press ▲/▼ to select the "Change" or "Clear" and press ENTER.

To change the rating level/password, follow the steps on page 14 again.

To clear your 4-digit password

If you forget your password, to clear the current password, follow the procedure below.

At the SETUP screen

- 1** Press ▼ to select "Password" item.
- 2** Enter 6-digit number "210499" and then press ENTER.
The 4-digit password is cleared.
- 3** Enter a new password
Refer to "Password".

Operation with DVD and Video CD

Playing a DVD and Video CD

Getting to play **DVD** **VCD2.0** **VCD1.1**

- Switch on the TV and select the AV input source connected to the DVD Karaoke.
- When you want to enjoy the sound of discs or from the audio system, turn on the audio system and select the input source connected to the DVD Karaoke.

1 Press POWER.
The DVD Karaoke turns on and the standby/on indicator goes out.

2 Press ▲ OPEN/CLOSE to open the disc tray.

3 Load your chosen disc in the tray, with the label facing up.

When a double-sided DVD is inserted, make sure the side you want to play is facing up.



With the label side up

4 Press ▲ OPEN/CLOSE to close the tray.
“TOC” appears on the display window, and playback starts automatically. If playback does not start, press PLAY.
In some cases, the disc menu might appear instead.

Moving to the next disc

Press DISC SKIP (D.SKIP) during playing or stopping.

Playing disc directly

Press DISC SELECT buttons (DISC1, DISC2 or DISC3) on the front panel during playing or stopping.

To pause play

Press PAUSE/STEP button on the front panel or STEP button on the remote control during playback.

“⏸” appears on the TV screen.

To resume play

Press PLAY button to start playback from the point you pause.

To stop play

Press twice STOP/RESUME button on the front panel or STOP button on the remote control during playback.

When the menu screen is displayed

The menu screen may be displayed first after loading a DVD or Video CD which contains a menu.

DVD

Use the ◀/▶/▲/▼ buttons to select the title/chapter you want to view, then press ENTER to start playback. Press TITLE or MENU to return to the menu screen.

VCD2.0

- Use the number buttons to select the track you want to view.
Press RETURN to return to the menu screen.
- Menu setting and the exact operating procedures for using the menu may differ depending on the disc. Follow the instructions on the each menu screen. You also may set PBC to Off under setup. See page 13.

Notes

- If Parental Control is set and the disc is not within the Rating settings (not authorized), the 4-digit code must be entered and/or the disc must be authorized (see “Parental Control”, on page 14).
- DVDs may have a region code.
- Your player will not play discs that have a region code different from your player. The region code for this player is 5 (five).

Operation with DVD and Video CD (Cont'd)

General Features

Note

Unless stated, all operations described are based on remote control use. Some operations can be carried out using the setup menu.

Moving to another TITLE

 
 
 
 
 
When a disc has more than one title, you can move to another title as follows:

- Press DISPLAY when playback is stopped, then press the appropriate numerical button (0-9) to select a title number.

Moving to another CHAPTER/TRACK



When a title on a disc has more than one chapter or a disc has more than one track, you can move to another chapter/track as follows:

- Press SKIP  or  briefly during playback to select the next chapter/track or to return to the beginning of the current chapter/track.
- Press  twice briefly to step back to the previous chapter/track.
- To go directly to any chapter during DVD playback, press DISPLAY. Then, press / to select C (chapter) (or for a Video CD, select T for track). Then, enter the chapter/track number using the numerical buttons (0-9).

Note


 

 
 

 
 
 
 
 







For two-digit numbers, press the buttons in rapid succession.

Still Picture and Frame-by-frame playback



 - Press PAUSE/STEP during playback. The player will now go into PAUSE mode.
- You can advance the picture frame by frame by pressing PAUSE/STEP repeatedly on the remote control.

Search

 - Press and SEARCH ( or ) for about two seconds during playback. The player will now go into SEARCH mode.
- Press SEARCH ( or ) repeatedly to select the required speed: X2, X4, X16, X100 (backward) or X2, X4, X16, X100 (forward).
With a Video CD, the Search speed changes: X2, X4, X8 (backward) or X2, X4, X8 (forward).
- To exit SEARCH mode, press PLAY.

Repeat



DVD Video Discs - Repeat Title/Chapter/Off

- To repeat the currently playing title, press REPEAT. The Repeat Title icon appears on the TV screen.
- To repeat the chapter currently playing, press REPEAT a second time. The Repeat Chapter icon appears on the TV screen.
- To exit Repeat mode, press REPEAT a third time. The Repeat Off icon appears on the TV screen.

Video CDs - Repeat Track/All/Off

- To repeat the track currently playing, press REPEAT. The Repeat Track icon appears on the TV screen.
- To repeat the disc currently playing, press REPEAT a second time. The Repeat All icon appears on the TV screen.
- To exit Repeat mode, press REPEAT a third time. The Repeat Off icon appears on the TV screen.



Note

On a Video CD with PBC, you must set PBC to Off on the setup menu to use the Repeat function. See page 13.

Repeat A-B


 


To repeat a sequence in a title:

- Press REPEAT A-B at your chosen starting point. "" appears briefly on the TV screen.
- Press REPEAT A-B again at your chosen end point. "" appears briefly on the TV screen, and the repeat sequence begins (a-b repeat appears on the player's display).
- To cancel the sequence, press CANCEL.

Time Search

The Time Search function allows you to start playing at any chosen time on the disc.

- Press DISPLAY during playback. The on-screen display appears on the screen. The Time Search box shows the elapsed playing time of the current disc.
- Within 10 seconds, press / to select the Time Search icon in the on-screen display. The ":-:--" appears in the Time Search box.
- Within 10 seconds, use the numerical buttons to enter the required start time. Enter hours, minutes and seconds from left to right in the box.
- Within 10 seconds, press ENTER to confirm the start time. Playback starts from the selected time on the disc. If you enter an invalid time, playback will continue from the current point.

Operation with DVD and Video CD (Cont'd)

Special DVD Features

Checking the contents of DVD discs: Menus

DVDs may contain menus that allow you to access special features. To use the disc menu, press MENU. Then, press the appropriate numerical button to select an item. Or, use the ◀/▶/▲/▼ buttons to highlight your selection, then press ENTER.

Title Menu

- 1 Press TITLE.
If the current title has a menu, the menu will appear on the screen. Otherwise, the disc menu may appear.
- 2 The menu can list camera angles, spoken language and subtitle options, and chapters for the title.
- 3 To remove the title menu, press TITLE again.

Disc Menu

- 1 Press MENU.
The disc menu is displayed.
- 2 To remove the disc menu, press MENU again.

Camera Angle

If the disc contains sequences recorded from different camera angles, the angle icon blinks on the display. You can then change the camera angle if you wish.

- Press ANGLE repeatedly during playback to select a desired angle.
The number of the current angle appears on the display.

Changing the Audio Language




Press AUDIO repeatedly during playback to hear a different audio language or audio track.

Subtitles

Press SUBTITLE repeatedly during playback to see the different subtitle languages.



Note

If  appears, the feature is not available on the disc.


Operation with Audio CD and MP3 Disc

Playing an Audio CD and MP3 disc

The DVD Karaoke can play MP3 format recordings on CD-ROM, CD-R or CD-RW discs.

Before playing MP3 recordings, read the notes of MP3 Recordings on page 25.

- 1 Insert a disc and close the tray.**
MP3 disc menu appears on the TV screen but Audio CD menu doesn't appear on the TV screen.

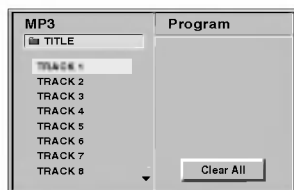

MP3 menu

- 2 Press ▲/▼ to select a track then press PLAY.**
Playback starts.
During playback, the current track's elapsed playing time will appear on the display.
Playback will stop at the end of the disc.
- 3 To stop playback at any other time, press STOP.**

Pause **CD** **MP3**

- 1 Press PAUSE/STEP during playback.
- 2 To return to playback, press PLAY or press PAUSE/STEP again.

Moving to another Track **CD** **MP3**

- Press SKIP (◀◀ or ▶▶) briefly during playback to go to the next track or to return to the beginning of the current track.
- Press SKIP (◀◀) twice briefly to step back to the previous track.
- In case of audio CD, to go directly to any track, enter the track number using the numerical buttons (0-9) during playback.

Repeat TRACK/ALL/OFF **CD** **MP3**

- 1 To repeat all tracks of disc in the unit, press REPEAT.
The Repeat All icon appears on the menu screen or display window.
- 2 To repeat the track currently playing, press REPEAT a second time.
The Repeat Track icon appears on the menu screen or display window.
- 3 To exit Repeat mode, press REPEAT a third time.
The Repeat Off icon appears on the menu screen.

Search **CD**

- 1 Press SEARCH (◀◀ or ▶▶) during playback.
- Search speed and direction [◀◀X2 (backward) or ▶▶X2(forward)] are indicated on the menu screen.
- 2 Press PLAY at the point you want to play.

Repeat A-B **CD**

To repeat a sequence.

- 1 During disc playback, press REPEAT A-B at your chosen starting point.
"A-B" and "A - REPEAT" appears on the menu screen or display window.
- 2 Press REPEAT A-B again at your chosen end point.
"A-B" and "A-B REPEAT" appears on the menu screen, and the sequence begins to play repeatedly.
- 3 To exit the sequence and return to normal play, press CANCEL.
The Repeat icon and "A-B REPEAT" appears on the menu screen or display window.

Changing the Audio Channel **CD**

Press AUDIO repeatedly during playback to hear a different audio channel (STEREO, LEFT or RIGHT).

Random **CD**

You can play all of the tracks in random order.

- 1 During disc playback or stop, press RANDOM.
- The Track icon and "RANDOM" appears briefly on the TV screen.
- "RANDOM" appears on the display window.
- 2 To exit random order playback, press RANDOM again.
"RANDOM" disappears on the display window.

Programmed Playback


Programmed Playback with Audio CD

Program allows you to store your favorite tracks for a particular disc in the player memory.

Note


The programmed playback is not available to Video CD.

- 1 Press **PROGRAM** during playback or stop mode. The program playback screen appears on the TV screen.

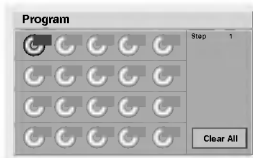

To exit the screen, press **PLAY** or **PROGRAM**.

- 2 Press **◀/▶/▲/▼** and press the numeric button(s) to select the desired track number.

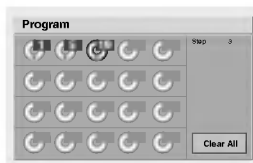

- Repeat step 2 to select another track.
- Up to 20 tracks can be programmed.

- 3 Press **PLAY** or **ENTER** to exit the screen.

The selected track is stored in the memory and play now begins in the programmed sequence. If you press **PROGRAM** to exit the screen, the selected tracks are not memorized.

After playback of all tracks programmed

Play is stopped.

Clearing the program

To clear the programmed tracks one by one

Press **◀/▶/▲/▼** to select the unwanted number and then press **CANCEL**.

To clear all the programmed tracks


Press **◀/▶/▲/▼** to select "Clear All" and then press **ENTER**. Press **PLAY** or **ENTER** to exit the screen. If you press **PROGRAM** to exit the screen, the programs are not cleared. (The programs are also cleared when the power is turned off or the disc is removed.)

Repeat Programmed Tracks


- To repeat all tracks of program list, press **REPEAT**. The Repeat All icon appears on the menu screen.
- To repeat the track currently playing, press **REPEAT** a second time. The Repeat Track icon appears on the menu screen.
- To exit Repeat mode, press **REPEAT** a third time. The Repeat Off icon appears on the menu screen.

Programmed Playback with MP3 Disc


- 1 Insert the MP3 disc. The program playback screen appears on the TV screen.

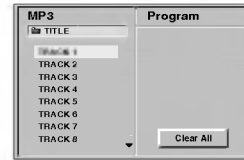

- 2 Press **▲/▼** to select the desired track.

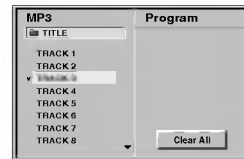


- 3 Press **PROGRAM**. Repeat steps 1-2.

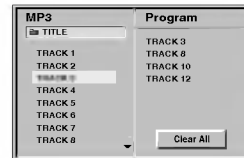

- 4 Press **▶** to select the desired track in the Program list and press **PLAY**.

The selected track now plays in the programmed sequence.

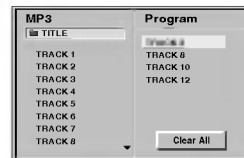

Erasing a Track from Program List

- 1 Press **▶** to move to the Program list.
- 2 Use **▲/▼** to select the track that you wish to erase from the Program list.
- 3 Press **CANCEL**. The track will be erased from the Program list.

Erasing the Complete Program List

- 1 Follow steps 1 of "Erasing a Track from Program List" as above.
- 2 Use **▲/▼** to select "Clear All", then press **ENTER**. The complete Program for the disc will be erased. The programs are also cleared when the disc is removed.

Operation with KARAOKE

You can play KARAOKE(singing along) with CD by connecting a microphone to the unit.
You can enjoy KARAOKE with a stereo-recorded disc, even if it is a non-karaoke disc, by reducing the singer's voice.

Karaoke Basic Playback

- 1** Check if the system is connected.
(Refer to the page 9-10.)
- 2** Turn on the powers of TV (or Amplifier) and DVD Karaoke and enter to the video mode on TV.
- 3** Press **▲ OPEN/CLOSE** to open the disc tray and load supplied MIDI karaoke disc in the tray with the label facing up.
- 4** Press **▲ OPEN/CLOSE** to close the tray.
- 5** Press **KARAOKE/DVD** to enter to the karaoke mode.

[TV Screen]



- 6** Connect the supplied microphone to the **MIC 1** or **MIC 2** jack.
Turn the **MIC VOLUME CONTROL** to adjust the microphone volume.
*MIC 1 Jack
Insert when one microphone is only used.
*MIC 2 Jack
Insert when two microphones are used.
- 7** Select the melody number you want by pressing **NUMERIC** buttons.
If you cancel the selected melody number, press the **CANCEL**.
- 8** Press **PLAY**.
The selected melody number is played.
Sing in tone with microphone.
After melody ends, it is stopped automatically and score appears.

Karaoke Advanced Playback

Retrun Function

This is a function that returns to the preceding MENU.

Press the **RETURN**.

Note

If there is no preceding menu (in case of the first menu), this function may not be executed.

To Adjust MIC Volume

If the microphone is connected to **MIC 1** or **MIC 2** Jack, adjust volume.

Turn the **MIC VOLUME CONTROL** on the front panel clockwise to increase the volume, or counterclockwise to decrease it.

To Adjust ECHO Volume

You can give an echo effect to the sound from the microphones.

Turn the **ECHO VOLUME CONTROL** on the front panel clockwise to increase the sound level, or counterclockwise to decrease it.

Key Control

You can change the key to suit your vocal range.
You can adjust the key to 13 steps (6steps higher, 6steps lower and the original key).
- The setting appears on the screen.

Press **KEY CONTROL (b/#)** repeatedly to find the key that suits your vocal range.

- To flatten the key one by one, press the **KEY CONTROL (b)** repeatedly during playback.
- To sharp the key one by one, press the **KEY CONTROL (#)** repeatedly during playback.
- To return to the original key, press the **KEY CONTROL (b/#)** repeatedly to appear.

Operation with KARAOKE (Cont'd)

Karaoke Advanced Playback (Cont'd)

Reserving the Songs

When you want to make a reservation of next melody, you can enjoy the most 8 melodies reservation Without waiting.

1 Press the **NUMERIC** buttons to reserve melody number you want in the **MIDI karaoke disc play mode**.

Melody number appears on the TV screen.

2 Press **PROGRAM (PROG.)**.
The melody number is made a reservation.

3 Repeat steps 1-2.
You can reserve 8 songs.



Tip
After the one song finishes its playback, the next song will be playback automatically.

To cancel the reserved song

Each time you press **CANCEL**, the reserved song will be cancelled one by one.

To cancel or change the wrong reserved song

Press the **PROGRAM (PROG.)** to move to the desired position, then press the **CANCEL** to cancel the reserved song.

Male/Female Function

If you want to sing a song of **MAN's** or **WOMEN's** key, press **MALE/FEMALE** button repeatedly to change **MAN's** or **WOMEN's** key.

Tempo Change

You can use this function when you want to play fast or slow.

- Press **TEMPO +** repeatedly during singing to play faster.
- Press **TEMPO -** repeatedly during singing slower.

Screen Change Function

This function is used when you want to change the current screen during playing **MIDI disc**.

Press the **DISC SELECT (DISC 1, DISC 2, DISC 3)** or **D.SKIP** button during playing **MIDI karaoke disc**.

It is played a screen existing another disc.

Shadow Function

If **Video CD caption** and the song's subtitle are mixed up, the song's subtitle may be invisible. In this case, to highlight the song's subtitle, press **SHADOW**.

- It will be highlighted by background shadow image.

Operation with KARAOKE (Cont'd)

Karaoke MENU Playback

Preparation

Press MENU on the karaoke mode.
The main MENU appears on the screen.

Main MENU (On the TV screen)



Selection of Melody

- 1 Select melody mode by pressing the NUMERIC button 1.
- 2 Select the melody number you want by pressing NUMERIC buttons.

For your reference

If you cancel the selected melody number, press the CANCEL.

- 3 Press PLAY.
The selected melody number is played.

For your reference

After melody ends, it is stopped automatically.

Score Indication

When singing by selection of melody, song score comes out after one piece of song is ended.
The Score indication appears in the condition of POWER ON at first.

To cancel the Score position

Press the NUMERIC button 2 on the main menu.
"⊘" mark is expressed on the TV screen with no score.

To reproduce the Score position.

Press the NUMERIC button 2 again.
"⊘" mark is disappeared on the TV screen.

Fanfare

In condition of POWER ON, scoring fanfare operates.
The fanfare sound comes out after singing finished.

To cancel the Fanfare

 
Press the NUMERIC button 3 on the main menu.
"⊘" mark is expressed on the TV screen with no fanfare.

To reproduce the Fanfare

Press the NUMERIC button 3 again.
"⊘" mark is disappeared on the TV screen.

Challenging Karaoke

Challenge will be going on up to three times.



Over corresponding score, next challenge is possible.
Under corresponding score, no next challenge is possible.

- 1 Press NUMERIC button 4 on the main menu.
It appears as below.



- 2 Press NUMERIC button 1.
It appears as below.



1. Melody performance randomly
Press the NUMERIC button 1.
Melody played is randomly among melodies in karaoke CD.
2. Melody performance according to melody
1. Press the NUMERIC button 2.
2. Press NUMERIC buttons you want.
3. Press PLAY.
3. Challenge per title
1. Press the NUMERIC button 3.
2. Refer to steps 2-3 of 2 as above.
4. Challenge per title Melody performance according to year
1. Press the NUMERIC button 4.
2. Refer to steps 2-3 of 2 as above.
5. The words of a song
(Pressing NUMERIC button 5)
Indicates for Existence/nothing of words on every pushing, Existence/nothing of the words is changed. (No indication of melody when there is HET marked on.)


Operation with KARAOKE (Cont'd)

Karaoke MENU Playback (Cont'd)

Sing Room Karaoke

It has a function which enjoy a game dividing by two teams of A team & B team.

- 1** Press NUMERIC button 4 on the main menu.
It appears as below.

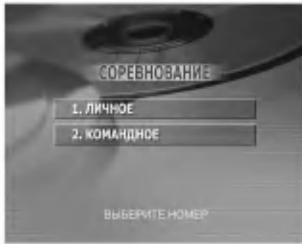

- 2** Press NUMERIC button 2.
It appears as below.



- 3** Press one of NUMERIC buttons 1~9 to select winner's number.
It appears as below.



- 4** Press NUMERIC buttons 1-4 to select success score.
It appears as below.



- 5** Select number you want by pressing NUMERIC buttons. (Refer to step 4 screen.)

When randomly selected melody is played

The winning point of one is increased only if the score is over the already selected score by singing.

If "The chance in going to over next team"

(СЛЕДУЮЩИЙ) comes out

To next team.

If "THE CHANCE"(ПОПЫТКА) comes out

The winning two points are increased in case of over success score by singing.

- 6** Repeat step 4~5.
Changing the team of A team or B team alternately for 4 to 5 courses.

For your reference

"X" Signal to be on selected Number. once, it's not selected.

- 7** When reaching the targeted winning Number.

For going on the sing room game, press NUMERIC button 1.

To cancel, press NUMERIC button 2.




Operation with KARAOKE (Cont'd)

Karaoke MENU Playback (Cont'd)

Medley Karaoke

- 1 Press **NUMERIC** button 5 on the main menu. It appears as below.

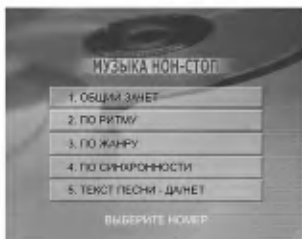

1. Melody performance randomly

Press the **NUMERIC** button 1.
Melody played is randomly among melodies in karaoke CD.

2. Melody performance according to melody

1. Press the **NUMERIC** button 2.
2. Press **NUMERIC** buttons you want.
3. Press **PLAY**.

3. Challenge per title

1. Press the **NUMERIC** button 3.
2. Refer to steps 2-3 of 2 as above.

4. Challenge per title Melody performance according to year

1. Press the **NUMERIC** button 4.
2. Refer to steps 2-3 of 2 as above.

5. The words of a song

(Pressing **NUMERIC** button 5)
Indicates for Existence/nothing of words on every pushing, Existence/nothing of the words is changed. (No indication of melody when there is **НЕТ** marked on.)

N Notes

- After one piece of melody is over, it is played automatically among corresponding range of melodies in a random order. (The display returns to previous MENU after 30 tracks continuous play.)
- When performing a melody, it is skipped to next one once pushing **STOP**.
- For movement to former screen, it is moved to the former screen on pushing **RETURN** one time.
- To make it clear of melody karaoke screen, press **MENU** and it is changed into menu screen.

Masterpiece Impression Karaoke

This can select when you want to impress the masterpiece as kinds you like.

- 1 Press **NUMERIC** button 6 on the main MENU. It appears as below.



- 2 Select **MENU** you want.

1. Selection per melody

(Pressing **NUMERIC** button 1.)

1. Select the melody number you want by pressing the **NUMERIC** buttons.
2. Press **PLAY**.
- Melody is played.

2. Performance per medley

(Pressing **NUMERIC** button 2.)

1. Total performance (Pressing **NUMERIC** button 1.)
- Melody is played randomly-selected which collected in karaoke disc.
2. Performance per composer (Pressing **NUMERIC** button 2.)
Select the performance you want by using the **NUMERIC** buttons and **◀◀/▶▶** and then press **PLAY**.
3. Performance per atmosphere (Pressing **NUMERIC** button 3.)
4. Cinema music (Pressing **NUMERIC** button 4.)
- Cinema music is played randomly-selected which collected in-itself.

Note: If press the **STOP**, next melody is played rightly and randomly.

3. Selection of musical instrument

(Pressing the **NUMERIC** button 3 repeatedly.)

-The sound of melody is changed.


Note: It can be different, for it is the sound of electronic musical instrument.

Additional Information

Last Condition Memory **DVD**

This unit memorizes the last condition for the last disc you have watched. Settings remain in memory even if you remove the disc from this unit or switch off this unit. If you load a disc that has its settings memorized, the latest stop position is automatically recalled.

- 1 Load the DVD that was memorized.**
It will appear on the TV screen as below.
 - If the screen is left for more than 10 seconds, playback will start from the beginning of the title automatically.

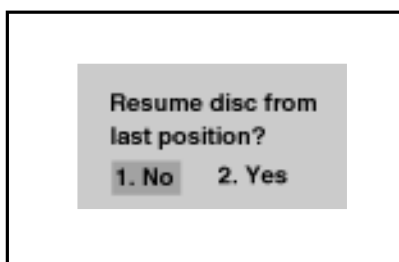

- 2 Press ◀▶ to select "YES" and press ENTER.**
The memorized settings are automatically recalled.

N Notes

- Settings are stored in memory for use any time.
- You can store settings for up to 1 DVD in memory. If you memorize settings for more than 1 DVD previously memorized settings are erased in order from the last recently memorized settings. Subsequently, if you try to call up these previously memorized settings, you will get the latest settings that have taken their place.
- Switching of the audio mode etc., is automatic on some discs.
- This unit does not store settings in memory, if you remove the disc from this unit or switch power to this unit OFF when DVD or title menu is displayed on the TV screen.

Remain Function

DVD **VCD2.0** **VCD1.1** **CD**

This function checks the elapsed time, the remained time and the total remained time.

Press REMAIN during playing.

- You can view the elapsed time per a track.

Press REMAIN again during playing.

- You can view the remained time per a track.

Press REMAIN once more during playing.

- You can view the total remained time on the disc.

Notes on MP3 Discs

About MP3

- An MP3 file is audio data compressed by using MPEG1, the audio layer-3 file-coding scheme. We call files that have the ".mp3" file extension "MP3 files".
- The player can not read an MP3 file that has a file extension other than ".mp3".
- The player can not read a fake MP3 file that has a file extension ".mp3".

MP3 disc compatible with this player is limited as follows:

1. Sampling Frequency / only at 44.1kHz
2. Bit rate / within 96 - 192kbps
3. CD-R physical format should be "ISO 9660"
4. If you record MP3 files using the software which cannot create a FILE SYSTEM, for example "Direct-CD" etc., it is impossible to playback MP3 files. We therefore recommend that you use "Easy-CD Creator", which creates an ISO9660 file system.
5. A single session disc requires MP3 files in the first track. If there is no MP3 file in the 1st track, it cannot playback MP3 files. If you wish to playback MP3 files, format all the data in the disc or use a new one.
6. We do not recommend using CD-RW discs. Please use finished CD-R discs only.
7. File names should be named using 8 letters or less and must incorporate ".mp3" extension e.g. "*****.MP3".
8. Do not use special letters such as "_?!><+*}{@[&V;," etc.
9. Total number of files on the disc should be less than 200.
10. Use 74 minute CD-R discs (650M), Do not use 80 minute CD-R (700M) software

This DVD Karaoke requires discs/recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 files).

Customers should also note that permission is required in order to download MP3 files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.

Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptom	Cause	Correction
No power.	<ul style="list-style-type: none"> The power cord is disconnected. 	<ul style="list-style-type: none"> Plug the power cord into the wall outlet securely.
The power is on, but the DVD Karaoke does not work.	<ul style="list-style-type: none"> No disc is inserted. 	<ul style="list-style-type: none"> Insert a disc. (Check that the DVD or, audio CD indicator in the DVD display is lit.)
No picture.	<ul style="list-style-type: none"> The TV is not set to receive DVD signal output. 	<ul style="list-style-type: none"> Select the appropriate video input mode on the TV so the picture from the DVD Karaoke appears on the TV screen.
	<ul style="list-style-type: none"> The video cable is not connected securely. 	<ul style="list-style-type: none"> Connect the video cable into the jacks securely.
	<ul style="list-style-type: none"> The connected TV power is turned off. 	<ul style="list-style-type: none"> Turn on the TV.
There is no sound or only a very low-level sound is heard.	<ul style="list-style-type: none"> The equipment connected with the audio cable is not set to receive DVD signal output. 	<ul style="list-style-type: none"> Select the correct input mode of the audio so you can listen to the sound from the DVD Karaoke.
	<ul style="list-style-type: none"> The audio cables are not connected securely. 	<ul style="list-style-type: none"> Connect the audio cable into the jacks securely.
	<ul style="list-style-type: none"> The power of the equipment connected with the audio cable is turned off. 	<ul style="list-style-type: none"> Turn on the equipment connected with the audio cable.
	<ul style="list-style-type: none"> The audio connecting cord is damaged. 	<ul style="list-style-type: none"> Replace it with new one.
The playback picture is poor.	<ul style="list-style-type: none"> The disc is dirty. 	<ul style="list-style-type: none"> Clean the disc.
The DVD Karaoke does not start playback.	<ul style="list-style-type: none"> No disc is inserted. 	<ul style="list-style-type: none"> Insert a disc. (Check that the DVD, or audio CD indicator in the DVD display is lit.)
	<ul style="list-style-type: none"> An unplayable disc is inserted. 	<ul style="list-style-type: none"> Insert a playable disc. (Check the disc type, color system and Regional code.)
	<ul style="list-style-type: none"> The disc is placed upside down. 	<ul style="list-style-type: none"> Place the disc with the playback side down.
	<ul style="list-style-type: none"> The disc is not placed within the guide. 	<ul style="list-style-type: none"> Place the disc on the disc tray correctly inside the guide.
	<ul style="list-style-type: none"> The disc is dirty. 	<ul style="list-style-type: none"> Clean the disc.
	<ul style="list-style-type: none"> A menu is on the TV screen. 	<ul style="list-style-type: none"> Press the SET-UP button to turn off the menu screen.
Severe hum or noise is heard.	<ul style="list-style-type: none"> The Rating level is set. 	<ul style="list-style-type: none"> Cancel the Rating function or change the rating level.
	<ul style="list-style-type: none"> The plugs and jacks are dirty. 	<ul style="list-style-type: none"> Wipe them with a cloth slightly moistened with alcohol.
	<ul style="list-style-type: none"> The disc is dirty. 	<ul style="list-style-type: none"> Clean the disc.
	<ul style="list-style-type: none"> The speakers and components are connected poorly. 	<ul style="list-style-type: none"> Connect the speakers and components securely.
The remote control does not work properly.	<ul style="list-style-type: none"> The DVD Karaoke is located with too close to the TV. 	<ul style="list-style-type: none"> Move your TV away from the audio components.
	<ul style="list-style-type: none"> The remote control is not pointed at the remote sensor of the DVD Karaoke. 	<ul style="list-style-type: none"> Point the remote control at the remote sensor of the DVD Karaoke.
	<ul style="list-style-type: none"> The remote control is too far from the DVD Karaoke. 	<ul style="list-style-type: none"> Operate the remote control within about 23 ft (7 m).
	<ul style="list-style-type: none"> There is an obstacle in the path of the remote control and the DVD Karaoke. 	<ul style="list-style-type: none"> Remove the obstacle.
	<ul style="list-style-type: none"> The batteries in the remote control are exhausted. 	<ul style="list-style-type: none"> Replace the batteries with new ones.

Language Code List

Enter the appropriate code number for the initial settings "Disc Audio", "Disc Subtitle" and/or "Disc Menu" (See page 17).

Code	Language	Code	Language	Code	Language	Code	Language
6565	Afar	7079	Faroese	7678	Lingala	8375	Slovak
6566	Abkhazian	7082	French	7679	Laothian	8376	Slovenian
6570	Afrikaans	7089	Frisian	7684	Lithuanian	8377	Samoa
6577	Ameharic	7165	Irish	7686	Latvian, Lettish	8378	Shona
6582	Arabic	7168	Scots Gaelic	7771	Malagasy	8379	Somali
6583	Assamese	7176	Galician	7773	Maori	8381	Albanian
6588	Aymara	7178	Guarani	7775	Macedonian	8382	Serbian
6590	Azerbaijani	7185	Gujarati	7776	Malayalam	8385	Sudanese
6665	Bashkir	7265	Hausa	7778	Mongolian	8386	Swedish
6669	Byelorussian	7273	Hindi	7779	Moldavian	8387	Swahili
6671	Bulgarian	7282	Croatian	7782	Marathi	8465	Tamil
6672	Bihari	7285	Hungarian	7783	Malay	8469	Telugu
6678	Bengali; Bangla	7289	Armenian	7784	Maltese	8471	Tajik
6679	Tibetan	7365	Interlingua	7789	Burmese	8472	Thai
6682	Breton	7378	Indonesian	7865	Nauru	8473	Tigrinya
6765	Catalan	7383	Icelandic	7869	Nepali	8475	Turkmen
6779	Corsican	7384	Italian	7876	Dutch	8476	Tagalog
6783	Czech	7387	Hebrew	7879	Norwegian	8479	Tonga
6789	Welsh	7465	Japanese	7982	Oriya	8482	Turkish
6865	Danish	7473	Yiddish	8065	Panjabi	8484	Tatar
6869	German	7487	Javanese	8076	Polish	8487	Twi
6890	Bhutani	7565	Georgian	8083	Pashto, Pushto	8575	Ukrainian
6976	Greek	7575	Kazakh	8084	Portuguese	8582	Urdu
6978	English	7576	Greenlandic	8185	Quechua	8590	Uzbek
6979	Esperanto	7577	Cambodian	8277	Rhaeto-Romance	8673	Vietnamese
6983	Spanish	7578	Kannada	8279	Rumanian	8679	Volapük
6984	Estonian	7579	Korean	8285	Russian	8779	Wolof
6985	Basque	7583	Kashmiri	8365	Sanskrit	8872	Xhosa
7065	Persian	7585	Kurdish	8368	Sindhi	8979	Yoruba
7073	Finnish	7589	Kirghiz	8372	Serbo-Croatian	9072	Chinese
7074	Fiji	7665	Latin	8373	Singhalese	9085	Zulu

Specification

[General]	Power supply	AC 100-240V, 50/60Hz
	Power consumption	15 W
	Mass	5.0 kg
	External dimensions (W x H x D)	430 x 110 x 335mm
	Signal system	PAL /NTSC /AUTO
[AUDIO]	Frequency response	20 Hz to 40 kHz
	Signal-to-noise ratio	More than 85 dB (A WEIGHTED 22 kHz LPF)
	Dynamic range	More than 85 dB (A-Filter)
	Channel Separation	65 dB (10 kHz, at 22kHz LPF), 80 dB (1 kHz, at 22kHz LPF)
[VCD/DVD]	Video output	1.0 V (p-p), 75 Ω
	S-video output	(Y) 1.0 V (p-p), 75 Ω (C) 0.3 V (p-p), 75 Ω
	Component video output	(Pb)/(Pr) 0.7V (p-p), 75 Ω
	Signal-to Noise Ratio	60 dB
[Supplied Accessories]	<ul style="list-style-type: none"> • Audio cable1 • Karaoke disc1 • Microphone1 • Remote Control1 • Video cable1 • Song book1 • Batteries (AAA Type)2 	

Designs and specifications are subject to change without notice.



P/NO : 3828R-D018E