



C3300 Korisnički priručnik



# C3300

## Korisnički priručnik



T-Mobile

Pojedini dijelovi sadržaja mogu se razlikovati od vašeg telefona ovisno o software-u ili o vašem davatelju usluga (operateru)

CE 0168



C3300 Korisnički priručnik

HRVATSKI

## C3300

### Sadržaj



<b>UVOD</b> .....	8	PUK kod .....	25
<b>Smjernice za sigurnosnu</b>		PUK2 kod .....	25
<b>i pravilnu uporabu</b> .....	9	Sigurnosni kod .....	25
<b>Značajke C3300</b> .....	14	<b>Zaporka zabrane</b> .....	25
<b>Dijelovi telefona</b> .....	14	<b>Osnovne funkcije</b> .....	26
<b>Informacije na zaslonu</b> .....	18	<b>Pozivanje i odgovaranje</b>	
<b>Početak</b> .....	20	<b>na pozive</b> .....	26
Umetanje SIM kartice i baterije		Pozivanje .....	26
u telefonski uređaj .....	20	Pozivanje pomoću tipke šalji .....	26
Punjenje baterije .....	22	Međunarodno pozivanje .....	26
Iskopčavanje punjača .....	23	Završavanje poziva .....	27
<b>Uključivanje i</b>		Pozivanje iz telefonskog	
<b>isključivanje telefona</b> .....	24	imenika .....	27
Uključivanje telefona .....	24	Prilagođavanje glasnoće .....	27
Isključivanje telefona .....	24	Odgovaranje na poziv .....	27
<b>Pristupni kodovi</b> .....	24	Brzo prebacivanje na način	
PIN kod .....	24	rada Samo vibracija .....	28
PIN2 kod .....	25	Jačina signala .....	28
		Unos teksta .....	28

Mijenjanje načina unosa teksta . . . . .	29	Trajanje poziva . . . . .	46
		Količina podataka . . . . .	46
<b>Kontakti . . . . .</b>	<b>32</b>	<b>Poruke . . . . .</b>	<b>47</b>
<b>Mogućnosti tijekom poziva . . . . .</b>	<b>32</b>	<b>Sastavi SMS . . . . .</b>	<b>47</b>
Tijekom poziva . . . . .	32	<b>Sastavi MMS . . . . .</b>	<b>49</b>
<b>Konferencijski poziv . . . . .</b>	<b>34</b>	<b>Ulazni spremnik . . . . .</b>	<b>51</b>
Upućivanje drugog poziva . . . . .	34	<b>Izlazni spremnik . . . . .</b>	<b>52</b>
Završavanje konferencijskog		<b>Privremeni pretinac . . . . .</b>	<b>54</b>
poziva . . . . .	35	<b>Preslušaj govornu poštu . . . . .</b>	<b>54</b>
<b>Izbornik . . . . .</b>	<b>36</b>	<b>Informacije poruke</b>	
<b>Odabir funkcija i opcija . . . . .</b>	<b>38</b>	(Ovisno o mreži) . . . . .	55
<b>Posebno . . . . .</b>	<b>39</b>	Čitati . . . . .	55
<b>Multimedija . . . . .</b>	<b>40</b>	Teme (Ovisno o mreži) . . . . .	55
<b>Fotografije . . . . .</b>	<b>40</b>	<b>Obrasci . . . . .</b>	<b>56</b>
<b>Slike . . . . .</b>	<b>40</b>	Obrazac teksta . . . . .	56
<b>Zvukovi . . . . .</b>	<b>40</b>	Multimedijski obrazac . . . . .	57
<b>Igre &amp; ostalo . . . . .</b>	<b>40</b>	Potpis . . . . .	58
<b>Popis poziva . . . . .</b>	<b>42</b>	<b>Postavke . . . . .</b>	<b>58</b>
<b>Neodgovoreni pozivi . . . . .</b>	<b>42</b>	Tekstualna poruka . . . . .	58
<b>Priljeni pozivi . . . . .</b>	<b>42</b>	Multimedijska poruke . . . . .	59
<b>Birani brojevi . . . . .</b>	<b>43</b>	Centar govorne pošte . . . . .	60
<b>Briši zadnje pozive . . . . .</b>	<b>43</b>	Informacije . . . . .	60
<b>Tarife poziva . . . . .</b>	<b>44</b>	Push poruke . . . . .	61
Trajanje poziva . . . . .	44	<b>t-zones . . . . .</b>	<b>62</b>
Troškovi poziva . . . . .	44	<b>Kontakti . . . . .</b>	<b>63</b>
Postavke . . . . .	45	<b>Traži . . . . .</b>	<b>63</b>
<b>GPRS info . . . . .</b>	<b>46</b>	<b>Dodaj novo . . . . .</b>	<b>64</b>

<b>Grupe</b> .....	<b>64</b>	<b>Postavke</b> .....	<b>79</b>
<b>Brzo bilanje</b> .....	<b>65</b>	<b>Profill</b> .....	<b>79</b>
<b>Postavke</b> .....	<b>66</b>	Mijenjanje profila .....	79
Postavi memoriju .....	66	Postavka profila	
Traži po .....	66	- prilagođavanje .....	79
Opcije pregleda .....	66	Postavka profila	
		- Preimenuj .....	80
<b>Kopiraj sve</b> .....	<b>66</b>	<b>Datum &amp; vrijeme</b> .....	<b>81</b>
<b>Izbriši sve</b> .....	<b>67</b>	Postaviti datum .....	81
<b>informacije</b> .....	<b>67</b>	Oblik datuma .....	81
		Postaviti vrijeme .....	81
<b>Rokovnik</b> .....	<b>68</b>	Format vremena .....	81
<b>Sat za alarm</b> .....	<b>68</b>	<b>Postavke telefona</b> .....	<b>82</b>
<b>Planer</b> .....	<b>69</b>	Postavke zaslona .....	82
<b>Kalkulator</b> .....	<b>70</b>	Jezici .....	82
<b>Pretvarač jedinica</b> .....	<b>70</b>	<b>Postavke poziva</b> .....	<b>83</b>
<b>Vremenske zone</b> .....	<b>71</b>	Preusmjeravanje poziva .....	83
<b>Snimanje glasa</b> .....	<b>72</b>	Način odgovaran .....	84
Snimaj .....	72	Šalji moj broj .....	84
Vidi listu .....	72	Poziv na čekanju .....	84
		Minutni podsjetnik .....	85
<b>Status memorije</b> .....	<b>73</b>	Autom. ponovno zvanje .....	85
<b>Verzija S/W</b> .....	<b>73</b>	Zatvorena korisnička grupa .....	85
		<b>Sigurnosne postavke</b> .....	<b>86</b>
<b>Kamera</b> .....	<b>74</b>	Zahtjev-PIN koda .....	86
<b>Snimanje slike</b> .....	<b>74</b>	Zaključavanje .....	86
<b>Mod snimanja</b> .....	<b>76</b>		
<b>Moj album</b> .....	<b>77</b>		
<b>Postavke</b> .....	<b>78</b>		
<b>Status memorije</b> .....	<b>78</b>		

Zabrana poziva .....	87
Fiksni broj (Fixed dial number - FND) .....	88
Promjeni kod .....	88
<b>Postavke mreže .....</b>	<b>89</b>
Automatski .....	89
Ručno .....	89
Prioritetno .....	89
<b>GPRS postavke .....</b>	<b>90</b>
Uključiti .....	90
Po potrebi .....	90
<b>Internet .....</b>	<b>91</b>
Početna stranica .....	92
Zabilješke .....	92
Profili .....	93
Idi na URL .....	95
Postavka memorije .....	95
Cookies postavke .....	96
Certifikat zaštite .....	96
Reset profila .....	96
Poništi postavke .....	96
<b>Reset postavki .....</b>	<b>97</b>
<b>Pitanja i odgovori .....</b>	<b>98</b>
<b>Dodatna oprema .....</b>	<b>101</b>
<b>Tehnički podaci .....</b>	<b>102</b>



# UVOD

Čestitamo na kupnji naprednog i kompaktnog C3300 mobilnog telefona, dizajniranog za rad s najnovijom digitalnom mobilnom komunikacijskom tehnologijom.



Ovaj priručnik za korisnika sadrži važne informacije o uporabi i radu ovog telefona. Molimo, pažljivo pročitajte sve informacije kako biste ostvarili optimalan rad i spriječili nastanak moguće štete uzrokovane nepravilnim korištenjem telefona. Svaka promjena ili modificiranje uređaja koje nije dozvoljeno u ovom priručniku za korisnika može poništiti dobiveno jamstvo za ovaj uređaj.



Pročitajte ove jednostavne smjernice. Kršenje pravila može biti opasno i nezakonito. Daljnje informacije dane su u ovom priručniku.

### Izloženost radijskoj frekvenciji

#### Izloženost radio valovima i specifičnoj stopi apsorpcije (SAR)

Ovaj mobilni telefon, model C3300, dizajniran je da udovoljava sigurnosnim zahtjevima za izloženost radijskim valovima. Ti se zahtjevi temelje na znanstvenim smjernicama koje uključuju sigurnosnu granicu određenu za zaštitu svih osoba, bez obzira na starosnu dob i zdravlje.

- Smjernice izlaganja radijskim valovima koriste mjernu jedinicu poznatu kao Specific Absorption Rate - SAR (specifična stopa apsorpcije). SAR testiranje izvodi se pomoću standardnih metoda, pri kojima telefon emitira na najvišoj potvrđenoj razini snage na svim korištenim frekvencijskim pojasima.
- Iako su moguće varijacije SAR razina između različitih LG mobilnih telefona, svi su oni dizajnirani tako da zadovoljavaju relevantne smjernice na radijskoj frekvenciji.
- Međunarodna komisija za zaštitu od neionizirajuće radijacije (ICNIRP) preporuča SAR razinu od 2W/kg u prosjeku na deset (10) grama tkiva.
- Najviša SAR vrijednost za ovaj model telefona koju je testirala DAS4 za korištenje na uhu jest 1.05 W/kg (10g).
- Informacije o SAR podacima za korisnike koji žive u državama koje su usvojile SAR granične vrijednosti koje preporučuje Institut električnih i elektronskih inženjera (IEEE), a to je 1.6 W/kg u prosjeku na jedan (1) gram tkiva (na primjer, SAD, Kanada, Australija i Tajvan).

### Upozorenje i održavanje uređaja

**Upozorenje: koristite samo baterije, punjač i dodatnu opremu dozvoljenu za korištenje s ovim određenim modelom telefona. Korištenje drugih vrsta može osporiti svaku potvrdu ili jamstvo ovog telefona, a može biti i opasno.**

- Ne rastavljajte proizvod. Onesite ga ovlaštenom serviseru kad se za to ukaže potreba.
- Držite ga podalje od električnih uređaja poput televizora, radija ili računala.
- Ne držite proizvod u blizini izvora topline poput radijatora ili peći.
- Nemojte ga bacati.
- Nemojte ga tresti i udarati.
- Površina telefona može se oštetiti ako ga prekrijete ili stavite u vinilski omot.
- Koristite suhu tkaninu za čišćenje površine proizvoda. (Ne koristite otapala poput benzina, razrjeđivača ili alkohola.)
- Ne izlažite proizvod prekomjernom dimu i prašini.
- Ne držite telefon u blizini kreditnih kartica ili putnih karti. Može se oštetiti informacija na magnetskoj vrpici.
- Ne lupajte po zaslonu s oštrim predmetom, jer bi se telefon mogao oštetiti.
- Ne izlažite telefon tekućinama i vlazi.
- Oprezno koristite dodatnu opremu i držite se uputa. Ne dirajte nepotrebno antenu.

## Učinkovito korištenje telefona

Za optimalan rad telefona s minimalnom potrošnjom snage, molimo:

- Držite telefon normalno za vrijeme razgovora. Govorite ravno u mikrofona, tako da je antena okrenuta gore i prema vašem ramenu. Ako je antenu moguće izvući/uvući, tijekom poziva je treba izvući.
- Ne držite antenu dok govorite na telefon. Držeći je možete oslabiti kvalitetu poziva, također možete uzrokovati da telefon radi s većom potrošnjom snage nego što je potrebno te time skratiti vrijeme razgovora i čekanja.
- Ako vaš mobilni telefon podržava infracrveno povezivanje, nikad ne usmjeravajte infracrvenu zraku prema oku.

## Elektronski uređaji

Svi mobilni telefoni mogu imati smetnje koje utječu na rad.

- Ne koristite svoj mobilni telefon u blizini medicinske opreme bez dozvole. Izbjegavajte stavljanje telefona u blizinu pacemakera (srčani stimulator), to jest, u gornji džep odijela ili košulje.
- Neki pomoćni uređaji za sluh također mogu imati smetnje zbog mobilnog telefona.
- Manje smetnje mogu uzrokovati: televizor, radio, računalo itd.

## Sigurnost u vožnji

Provjerite zakone i pravila korištenja mobilnog telefona u područjima gdje se vozite.

- Ne držite telefonsku slušalicu dok vozite.
- Svu pozornost posvetite vožnji.
- Koristite handsfree opremu, ako je imate.
- Stanite uz cestu i parkirajte se prije odgovaranja ili upućivanja poziva ako uvjeti vožnje to zahtijevaju.

- RF energija može utjecati na elektronske sustave u vašem vozilu, primjerice, na radio, sigurnosnu opremu.
- Ako je vaše vozilo opremljeno zračnim jastucima, pazite da ih ne zakrčite instaliranom ili prenosivom opremom. Možete uzrokovati ozbiljne ozljede zbog nepravilnog rada.

### Područje miniranja

Nemojte koristiti telefon gdje je miniranje u tijeku. Pratite ograničenja i držite se pravila i zakona.

### Moguća eksplozivna područja

- Ne koristite telefon u blizini punjenja goriva ili kemikalija.
- Ne prevozite ili ne držite zapaljivi plin, tekućinu ili eksplozive u dijelu vozila u kojem držite svoj mobilni telefon i dodatnu opremu.

### U zrakoplovu

Bežični uređaji mogu uzrokovati smetnje u zrakoplovu.

- Isključite svoj mobilni telefon prije ukrcavanja u zrakoplov.
- Na zemlji, pratite upute zrakoplovne tvrtke u vezi korištenja mobilnog telefona.

## Djeca

Držite telefon na sigurnom mjestu van dosega djece. Telefon sadrži male dijelove koji, ako ih se rastavi, mogu predstavljati opasnost od gušenja.

## Hitni pozivi

Hitni pozivi nisu mogući na svim mobilnim mrežama. Stoga, nikad ne ovisite samo o jednom telefonu za hitne pozive. Provjerite uslugu kod vašeg lokalnog davatelja usluga.

## Informacije i rukovanje baterijom

- Ne trebate u potpunosti isprazniti bateriju da biste ju ponovo napunili. Za razliku od drugih baterija, nema utjecaja na memoriju koji bi mogao dovesti u pitanje rad baterije.
- Koristite samo LG baterije i punjače. LG punjači izrađeni su da produže trajanje baterije.
- Ne rastavljajte bateriju i pazite da ne uzrokuje kratki spoj.
- Pazite da su metalni kontakti na bateriji čisti.
- Zamijenite bateriju kada posve oslabi i ne pruža optimalan rad.
- Napunite bateriju ako ju se dugo nije koristilo kako bi se povećala iskoristivost.
- Ne izlažite punjač baterije na direktno svjetlo, i nemojte ga koristiti u područjima velike vlage, poput kupaonice.
- Ne držite bateriju u hladnim ili vrućim prostorima, jer postoji mogućnost smanjenja učinkovitosti baterije.
- Iskorištene baterije odložite u skladu s lokalnim propisima.



# Značajke C3300

## Dijelovi telefona

### Pogled sprijeda



Leće kamere

**!** Napomena

Prljave leće kamere mogu utjecati na kvalitetu slike.

 
Ulaz za slušalice

Vanjski LCD zaslon

Bočne tipke gore/dolje

- Kada je telefon zaklopljen, pritisnite i držite jednu od ovih tipki za prikaz trenutnog vremena, za prikaz datuma i odbacivanje prikaza na vanjskom zaslonu.
- Kontrolira jakost zvuka tonova tipkovnice u načinu mirovanja kada je telefon otvoren.
- Kontrolira jakost zvuka u slušalici tijekom razgovora.

Pogled odostraga

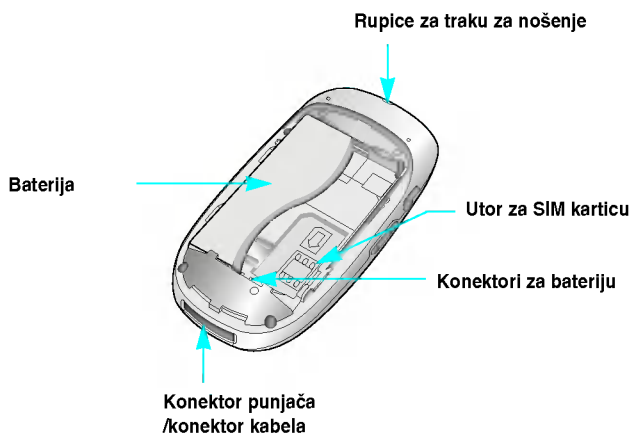

### Pogled na otvoreni telefon



### 1. Zvučnik slušalice

**2, 8. Lijeva soft tipka / Desna soft tipka:** Ove dvije tipke obavljaju funkcije označene tekстом na zaslonu odmah iznad njih.





### 3. Planer

**4. Tipka šalji:** Zove birani telefonski broj i odgovara na dolazne pozive. Također, pritiskom na nju u stanju čekanja možete brzo pristupiti najnovijim dolaznim, odlaznim i propuštenim pozivima.

**5. Tipkovnica (slovno-brojčane tipke):** Unos brojeva, slova i nekih specijalnih znakova.

**6. LCD zaslon:** U boji prikazuje simbole statusa telefona, stavke izbornika, Web informacije, slike i ostalo.

**8. Navigacijske tipke:** Koristite za kretanje kursora gore/dolje /lijevo/desno i za brz pristup sljedećim značajkama u načinu mirovanja.

- **Gore** (  ) : Kontakte možete pretraživati po imenu pritiskom tipke u načinu mirovanja.
- **Dolje** (  ) : Otvara popis glas. podsjetnika. Ako ovu tipku pritisnete i držite, započet će snimanje glasovnih podsjetnika.
- **Lijevo** (  ) : Prečica do izbornika Profili. Ako ovu tipku pritisnete i držite, nastaje promjena načina rada
- **Desno** (  ) : Prečica do dolaznog spremnika poruka.

**9. Tipka za potvrđivanje:** Otvara izbornik i potvrđuje akcije.

\* Ako u stanju pripravnosti pritisnete i držite ovu tipku, započet će spajanje na Internet.

**10. Tipka kamere:** Pritisnite ovu tipku u stanju pripravnosti za pristup izborniku kamere.















**11. Kraj / Tipka za isključivanje telefona:** Koristi se za završavanje ili odbijanje poziva te, također, za povratak na stanje čekanja. Držite duže ovu tipku kad želite uključiti ili isključiti telefon.





- 12. Tipka za brisanje:** Svakim stiskom briše jedan znak. Držite duže tipku za brisanje svih znakova odjednom. Također se koristi za povrat na prijašnji prikaz.
- 13. Mikrofon:** Može se postaviti na nečujno tijekom poziva radi privatnosti. (Pogledajte stranicu 33.)

### Informacije na zaslonu

Niže navedena tablica prikazuje razne indikatore ili simbole koje se mogu pojaviti na zaslonu telefona.

#### Simboli na zaslonu

Symbol	Objašnjenje
	Prikazuje jačinu mrežnog signala.
	Prikazuje da je GPRS usluga dostupna.
	Prikazuje da je poziv aktivan.
	Prikazuje da ste u roamingu na drugoj mreži.
	Prikazuje da je postavljen alarm.
	Prikazuje status jačine baterije.
	Prikazuje da je vibriranje uključeno.
	Prikazuje da je uključen profil nečujno.
	Prikazuje da je uključen profil normalno.
	Prikazuje da je uključen profil glasno.
	Prikazuje da je uključen profil slušalica.
	Prikazuje da je uključen profil auto.
	Prikazuje da je poziv preusmjeren.
	Prikazuje da telefon pristupa WAP usluzi.

Symbol	Objašnjenje
	Prikazuje da koristite GPRS.
	Prikazuje da ste došli na osiguranu stranicu.
	Prikazuje da je primljena poruka.
	Prikazuje da je primljena glasovna poruka.

 


# Početak

## Umetanje SIM kartice i baterije u telefonski uređaj

### 1. Uklonite poklopac baterije


Provjerite je li telefon isključen prije vađenja baterije.

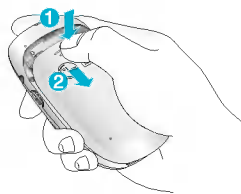

- 1 Napomena** Vađenje baterije iz telefona kad je uključen može uzrokovat neispravan rad telefona.


### 2. Izvadite bateriju

 Uхватite vrh baterije i podignite je iz odjeljka za baterije.

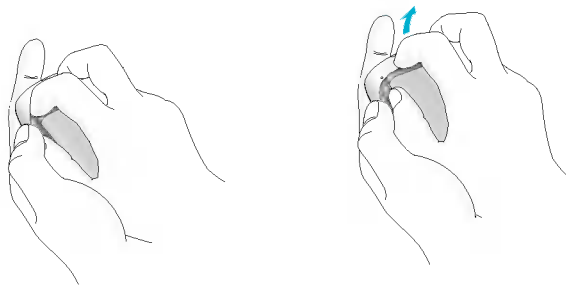


### 3. Umetnite SIM karticu

 Umetnite SIM karticu u držač za SIM karticu zatim je lagano gurnite u ležište. Pazite da je pravilno umetnuta tako da su zlatni kontakt zupci na kartici okrenuti prema dolje. Za vađenje SIM kartice, stisnite lagano i izvadite je istim smjerom kojim ste je umetnuli.

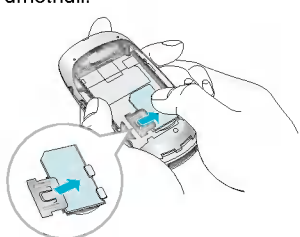


Umetanje SIM kartice

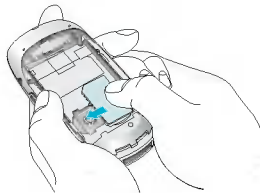 

Uklanjanje SIM kartice

- ! Opresz** Metalni kontakt SIM kartice može se vrlo lako oštetiti grebanjem. Pažljivo baratajte SIM karticom. Pratite upute dane zajedno sa SIM karticom.

### 4. Umetnite bateriju

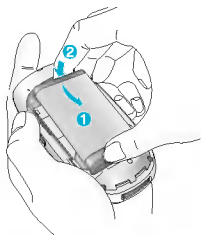 

Prvo umetnite donji dio baterije u krajnji dio odjeljka za bateriju. Gurajte prednji dio baterije prema dolje dok ne čujete škljocaj.





### 5. Vratite poklopac za bateriju

  Poklopac baterije postavite na odgovarajuće mjesto na telefonu i gurajte ga dok ne čujete škljocaj zaporke.

### Punjenje baterije

Baterija mora biti umetnuta kako biste na telefon mogli spojiti adapter za putovanje.

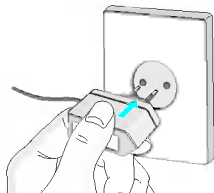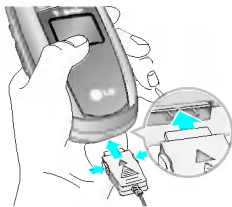

1. Prije upotrebe telefona baterija mora biti napunjena.
2. Utikač na adapteru za bateriju postavite u utor na donjem dijelu telefona tako da je strelica okrenuta prema vama, kao što je prikazano na dijagramu, i gurajte dok ne sjedne na mjesto.
3. Drugi kraj adaptera za putovanja spojite na glavnu utičnicu. Koristite samo punjač koji ste dobili uz telefon.
4. Po završetku punjenja crtice koje trepere na ikoni baterije će se zaustaviti.

- ! Oprez**
- Korištenje neovlaštene dodatne opreme može oštetiti vaš telefon i poništiti njegovo jamstvo.
  - Ne gurajte punjač silom u telefon jer ih može oštetiti.
  - Ako koristite punjač van vaše države, koristite adapter ukoliko je to potrebno.
  - Nemojte vaditi bateriju ili SIM karticu tijekom punjenja.

- ! Napomena**
- Isključite kabel za napajanje i punjač za vrijeme grmljavine i munja, kako bi izbjegli električki šok ili požar.
  - "Punjenje" se pojavljuje na zaslonu nakon spajanja glavnog adaptera. Ako je baterija potpuno prazna, može proći nekoliko minuta prije nego što se pojavi ova slika.
  - Ne uspostavljajte i ne odgovarajte na pozive za vrijeme punjenja telefona, jer to može uzrokovati kratki spoj u telefonu i/ili električki šok ili požar.

## Iskopčavanje punjača


1. Kad je punjenje završeno, crtica na simbolu za bateriju prestaju se micati i na zaslonu je prikazano "Puna".
2. Isključite punjač iz električne utičnice. Iskopčajte priključak iz telefona pritisnuvši sive gumbе s obje strane priključka i izvadite ga.



- ! Napomena**
- Prije prvog korištenja telefona, u potpunosti napunite bateriju.
  - Za vrijeme punjenja ne vadite bateriju ili SIM karticu.
  - U slučaju da baterija nije ispravno punjena, molimo, isključite telefon, zatim ga uključite i potom napunite bateriju. Nakon vađenja i umetanja, molimo, ponovo je napunite.


## Uključivanje i isključivanje telefona

### Uključivanje telefona

1. Umetnite bateriju u uređaj i spojite telefon na vanjski izvor struje poput putnog punjača, adaptera za upaljač ili handsfreeja za auto. Ili, umetnite punu bateriju u uređaj.
2. Stisnite i držite  nekoliko trenutaka dok se LCD zaslon ne upali.
3. Ovisno o postavci statusa **PIN kod zahtjeva**, trebate unijeti PIN kod.

**!** **Napomena** Kao i kod svakog drugog radio uređaja, izbjegavajte nepotreban kontakt s antenom dok je telefon uključen.

### Isključivanje telefona

1. Stisnite i držite  na nekoliko trenutaka dok se LCD zaslon ne ugasi.

## Pristupni kodovi

Pristupne kodove opisane u ovom poglavlju možete koristiti kao zaštitu od neovlaštene uporabe vašeg telefona. Pristupni kodovi se (osim PUK i PUK2 koda) mogu promijeniti pomoću funkcije Promjena kodova [Izbornik-9-5-5]. Pogledajte stranicu 88.

### PIN kod (4 do 6 znamenki)

PIN kod (Osobni identifikacijski broj) štiti vašu SIM karticu od neovlaštene uporabe. PIN kod dolazi zajedno sa SIM karticom. Kad je funkcija **PIN kod zahtjev** uključena, vaš će telefon tražiti unos PIN koda svaki put kad ga uključujete. Kad je funkcija **PIN kod zahtjev** isključena, vaš se telefon spaja odmah na mrežu bez unosa PIN koda.

## **PIN2 kod (4 do 8 znamenki)**

PIN2 kod dolazi zajedno s nekim SIM karticama i potreban je za pristup funkcijama poput **Detalji poziva** i **Fiksno biranje**. Te funkcije su dostupne samo ako ih podržava vaša SIM kartica.

## **PUK kod (4 do 6 znamenki)**

PUK kod (Osobni ključ deblokiranja) potreban je za promjenu blokiranog PIN koda. PUK kod dolazi zajedno sa SIM karticom. Ako ne, obratite se svome mrežnom operateru i zatražite kod. U slučaju da izgubite PUK kod, također se obratite svome mrežnom operateru.

## **PUK2 kod (4 do 8 znamenki)**

PUK2 kod koji dolazi s nekim SIM karticama, potreban je za promjenu blokiranog PIN2 koda. Ako izgubite PUK2 kod, obratite se svome mrežnom operateru.

## **Sigurnosni kod (4 do 8 znamenki)**

Sigurnosni kod štiti vaš telefon od neovlaštene uporabe. Tvornički postavljen sigurnosni kod je '0000'. Sigurnosni kod potreban je za brisanje svih telefonskih unosa i za aktiviranje izbornika **Reset postavki**. Također je potreban za uključivanje i isključivanje zaključavanja telefona kako bi se spriječila neovlaštena uporaba. Tvornički postavljen sigurnosni kod može se promijeniti u izborniku Sigurnosne postavke.

## **Zaporka zabrane**






Zaporka zabrane potrebna je kad koristite funkciju Zabrane poziva. Tu ćete zaporku dobiti kod svog mrežnog operatera kad se pretplatite na tu funkciju. Pogledajte stranicu 87 za detaljnije informacije.





# Osnovne funkcije

## Pozivanje i odgovaranje na pozive



### Pozivanje

1. Telefon mora biti uključen.
2. Unesite broj telefona, uključujući i predbroj. Ako ste unijeli krivi broj, stisnite tipku obrisati (  ) za brisanje jednog po jednog broja.
  - ▶ Stisnite i držite tipku obrisati (  ) za brisanje redom svih brojeva.
3. Stisnite tipku šalji (  ) za poziv broja.
4. Za završavanje poziva, stisnite tipku kraj (  ) ili desnu soft tipku (  ). Poziv možete završiti i zatvaranjem poklopca.


### Pozivanje pomoću tipke šalji

1. U stanju čekanja, stisnite tipku šalji (  ) i prikazat će se posljednji dolazni, odlazni i propušteni pozivi.
2. Odaberite željeni broj pomoću navigacijskih tipki gore/dolje.
3. Stisnite  .

### Međunarodno pozivanje

1. Stisnite i držite  tipku za međunarodni prefiks. Znak '+' automatski odabire međunarodni pristupni kod.
2. Unesite pozivni broj države, grada i telefonski broj.
3. Stisnite  .

## Završavanje poziva


Kad ste završili razgovor, stisnite tipku kraj (  ).


## Pozivanje iz telefonskog imenika (Kontakti)

Imena i telefonske brojeve koje često zovete možete pohraniti na SIM karticu ili telefonsku memoriju koja se zove Kontakti.

Možete birati broj ili jednostavno pogledati željeno ime u Kontaktima. Za detaljnije informacije o izborniku Kontakti, molimo, pogledajte stranice od 63. do 67.

## Prilagođavanje glasnoće



Ako želite prilagoditi zvučnik slušalice tijekom razgovora, upotrijebite tipke sa strane (  ).

-  **Napomena** Stiskanje tipki sa strane u stanju čekaња prilagođava glasnoću tona tipki.

## Odgovaranje na poziv

Kada primete poziv, telefon zvoní. Ako je pozivatelja moguće identificirati, njegov je broj (ili ime, ako je pohranjeno u Kontaktima) prikazan na zaslonu.



1. Za odgovaranje za poziv, otvorite telefon i stisnite tipku šalji. Za druge moguće načine odgovaranja na poziv, molimo, pogledajte stranicu 84.

-  **Napomena** Ako je Odgovara bilo koja tipka postavljeno kao način odgovaranja pogledajte stranicu 84), onda će stisak na bilo koju tipku (  ) odgovoriti na poziv osim tipke ili desne soft tipke.


- ▶ Za odbijanje dolaznog poziva, stisnite i držite jednu od tipki s lijeve strane telefona bez otvaranja poklopca.
- ▶ Možete odgovoriti na poziv dok koristite **Kontakte** ili neki drugi izbornik.

2. Za završavanje poziva, zatvorite poklopac ili stisnite tipku .

### Brzo prebacivanje na način rada Samo vibracija

Telefon možete brzo prebaciti na Samo vibracija pritiskom i držanjem lijeve navigacijske tipke (  ) nakon otvaranja telefona. Za povrat na prethodni profil, ponovo pritisnite i držite lijevu navigacijsku tipku (  ).

### Jačina signala

Možete provjeriti jačinu signala pomoću pokazatelja signala (  ) na LCD zaslonu vašeg telefona. Jačina signala može varirati, osobito u zgradama. Kretanje bliže prozoru može popraviti prijem.

### Unos teksta

Možete unositi brojčane i slovne znakove pomoću tipkovnice na telefonu. Na primjer, spremanje imena u **Kontaktima**, pisanje poruke, stvaranje osobnog pozdrava ili obveze u rokovniku, sve to zahtijeva unošenje teksta. Sljedeći su načini unosa teksta mogući na ovom telefonu.

**T9 način**


Ovaj način omogućava da unosite riječi samo jednim stiskom na tipku za jedno slovo. Svaka tipka na tipkovnici sadrži više od jednog slova. T9 način automatski uspoređuje vaše stiske po

tipkama s ugrađenim rječnikom kako bi odredio točnu riječ, time vam omogućava manje stisaka po tipkama od tradicionalnog ABC načina unosa. T9 se katkad naziva i predvidivim tekstom.


**ABC način**


Ovim načinom unosite slova stišćući jednom, dvaput, triput ili četiri puta tipku s označenim željenim slovom dok se to slovo ne pojavi.

**123 način**

Unosite brojeve jednim stiskom na tipku po broju. Za promjenu u 123 način iz tekstualnoga, pritisnite  tipku dok se 123 način ne prikaže.

**Mijenjanje načina unosa teksta**

1. Kad ste u polju koje dopušta unošenje teksta, primijetit ćete indikator načina unosa teksta u gornjem desnom kutu LCD zaslona.
  - Možete izabrati jezik T9 načina. Stisnite lijevu soft tipku [Opcije], zatim odaberite T9 jezici. Također možete doći do izbornika **T9 jezici** držeći  tipku. Odaberite željeni jezik T9 načina. Možete i isključiti T9 način odabравši opciju **Isključi T9**. Tvornički je postavljeno da je T9 način uključen.



- Promijenite način unosa teksta pritiskom na . Možete provjeriti trenutni način unosa teksta u gornjem desnom kutu LCD zaslona.







način unosa teksta
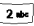
### ► Korištenje T9 načina


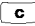

T9 predvidivi tekst način omogućava vam da jednostavno unosite riječi s minimalnim brojem stisaka po tipkama. Kako pritisćete svaku tipku, telefon prikazuje znakove koje misli da vi upisujete osnovano na ugrađenom rječniku. Također možete dodavati nove riječi u rječnik. Kako su nove riječi dodavane, riječ se mijenja u najvjerojatnijeg kandidata iz rječnika.


- Kad ste u T9 načinu unosa teksta, počnite unositi riječ pritiskom na tipke  od do . Stisnite samo jednom tipku za jedno slovo.

- Riječi se mijenjaju kako vi upisujete slova. Ignorirajte ono što je na zaslonu dok ne ispišete riječ do kraja.
- Ako je riječ i dalje netočna nakon što ste je upisali do kraja, stisnite navigacijsku tipku gore/dolje jednom ili više puta kako biste vidjeli izbor ostalih mogućih riječi.



**Primjer:** Stisnite (  ) (  ) (  ) (  ) za unos riječi **Good**

Stisnite (  ) (  ) (  ) (  ) [Navigacijska tipka dolje] za unos riječi **Home**


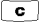
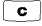
- Ako željene riječi nema u danom izboru riječi, dodajte je koristeći ABC način.
- Unesite cijelu riječ prije uređenja ili brisanja.
  - Završite ispisivanje riječi razmakom i pritiskom tipke .
  - Za brisanje slova, stisnite tipku . Stisnite i držite tipku  za brisanje cijele riječi odjednom.

- ! Napomena** Za izlaz iz načina unosa teksta bez spremanja vašeg unosa stisnite tipku . Telefon se vraća na stanje čekanja.


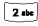


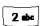
► **Korištenje ABC načina**

Koristite tipke od  do  za unos teksta.

- Jednom za prvo slovo
- Dvaput za drugo slovo
- I tako dalje

2. Za umetanje razmaka, stisnite jednom tipku . Za brisanje slova, stisnite tipku . Stisnite i držite tipku  za brisanje cijelih riječi odjednom.

- ! Napomena** Pogledajte tablicu za više informacija o mogućim znakovima na tipkovnici (slovni i brojevi).

Tipka	Znakovi po redu prikaza	
	Velika slova	Mala slova
	.,/?!-:!"'1	.,/?!-:!"'1
	A B C Č Ć Ç Á Ä Å Â 2	a b c č ć ç á ä å â 2
	D E F Đ Ę Ě 3	d e f đ ę ę 3
	G H I Í Î 4	g h i í î 4
	J K L 5	j k l 5
	M N O Ó Ö Ő Ô 6	m n o ó ö ő ô 6
	P Q R S Š Š 7	p q r s š š 7
	T U V Ú Û Ü Ŧ 8	t u v ú û ü ŧ 8
	W X Y Z Ž 9	w x y z ž 9
	Razmak, 0 (Dugi pritisak)	Razmak, 0 (Dugi pritisak)

### ► Korištenje 123 (brojčanog) načina

123 način omogućava vam da unosite brojeve u tekstualnu poruku (primjerice, telefonski broj).

Stisnite tipke na kojima su željeni brojevi prije ručnog prebacivanja na željeni način unosa teksta.

## Kontakti

Možete spremati telefonske brojeve i imena u memoriju vaše SIM kartice.

Uz to, možete spremiti do 200 brojeva i imena u memoriju vašeg telefona.

SIM kartica i telefon koriste se na isti način u izborniku **Kontakti**. (Pogledajte stranice od 63. do 67. za detalje.)

## Mogućnosti tijekom poziva

Telefon vam omogućava nekoliko funkcija koje možete koristiti tijekom trajanja poziva. Za pristup tim funkcijama tijekom poziva, stisnite lijevu soft tipku [Opcije].

### Tijekom poziva



Prikaz na zaslonu telefona tijekom poziva je drugačiji od glavnog prikaza u stanju čekanja. Te su opcije prikazane niže.

### Upućivanje drugog poziva


Iz izbornika Kontakti možete odabrati broj koji želite nazvati kao drugi poziv. Stisnite desnu soft tipku i odaberite **Naći**.


Za spremanje biranog broja u Kontakte tijekom poziva, stisnite desnu soft tipku, a zatim odaberite **Dodati novi**.

### Prebacivanje između dva poziva

Za prebacivanje između dva poziva stisnite lijevu soft tipku [Opcije], zatim odaberite **Zamijeniti** ili jednostavno pritisnite tipku  . Možete odabrati jednog od dva poziva pomoću navigacijske tipke gore/dolje. Za završavanje poziva, označite telefonski broj pomoću navigacijske tipke gore/dolje i pritisnite tipku  .


### Odgovaranje na dolazni poziv

Za odgovaranje na dolazni poziv kad telefon zazvoni, jednostavno pritisnite tipku  . Telefon vas također može upozoriti na dolazni poziv iako već razgovarate. Čut ćete zvuk upozorenja u zvučniku slušalice, a na zaslonu će biti prikazano da je taj drugi poziv na čekanju. Ova je funkcija, također poznata kao **Poziv na čekanju**, dostupna samo ako je podržava vaša mreža. Za detalje o uključivanju i isključivanju te funkcije, pogledajte **Poziv na čekanju** na stranici 84.

Ako je **Poziv na čekanju** uključeno, možete zadržati prvi poziv, a odgovoriti na drugi, pritiskom na tipku  ili odabirom lijeve soft tipke, a zatim **Zadržati i odgovoriti**. Možete završiti trenutni poziv i odgovoriti na poziv na čekanju odabirom lijeve soft tipke, a zatim **Završiti i odgovoriti**.

### Odbijanje dolaznog poziva

Možete odbiti dolazni poziv pritiskom na tipku  .

Tijekom poziva, možete odbiti dolazni poziv pritiskom lijeve soft tipke [Izbornik] i odabirom **Više poziva/Odbiti** ili pritiskom na tipku  .

### Isključivanje mikrofona

Mikrofon možete isključiti tijekom poziva pritiskom na lijevu soft tipku [Opcije] i odabrati **Isključiti**. Kad je mikrofon isključen, pozivatelj vas ne može čuti, ali vi njega možete. Mikrofon se može ponovo uključiti pritiskom na [Uključiti mikrofon].


### Uključivanje DTMF tonova tijekom poziva

Za uključivanje DTMF tonova tijekom poziva stisnite lijevu soft tipku, a zatim odaberite **DTMF uklj.** DTMF tonovi mogu se na isti način isključiti. DTMF tonovi omogućavaju vašem telefonu da koristi automatsko prebacivanje.

### Konferencijski poziv

Konferencijska vam usluga pruža mogućnost simultanog razgovora s više od jednog pozivatelja, ako vaš davatelj usluga podržava tu funkciju. Konferencijski poziv može se postaviti kad imate jedan aktivan poziv i jedan zadržan, na oba ste poziva odgovorili. Kad je konferencija postavljena, pozive može dodavati, isključivati ili odvajati (to jest, maknuti s konferencije ali su i dalje u vezi) ona osoba koja je postavila konferencijski poziv. Ove su opcije dostupne iz izbornika Tijekom poziva. U konferencijskom pozivu može sudjelovati najviše pet sugovornika. Kad postavite konferenciju, vi je kontrolirate i samo vi možete dodavati sugovornike na konferenciju.

### Upućivanje drugog poziva

Možete uputiti drugi poziv iako već razgovarate na jedan. Unesite broj telefona i stisnite tipku . Kad je drugi poziv na vezi, prvi se automatski stavlja na čekanje. Možete se prebacivati s jednog poziva na drugi pritiskom lijeve soft tipke, a zatim odabirom **Prebaciti**.

### Uspostavljanje konferencijskog poziva

Postavite jedan poziv na čekanje dok je drugi aktivan, stisnite lijevu soft tipku i odaberite **Konferencija/Združiti sve**.

### Stavljanje konferencijskog poziva na čekanje

Stisnite lijevu soft tipku, zatim odaberite **Konferencija/Zadržati**.

### Aktiviranje konferencijskog poziva s čekanja

Stisnite lijevu soft tipku, zatim odaberite **Konferencija/Združiti sve**.

### **Dodavanje poziva konferencijskom pozivu**

Za dodavanje poziva postojećoj konferenciji, stisnite lijevu soft tipku, zatim odaberite **Konferencija/Združiti sve**.

### **Stavljanje sudionika konferencijskog poziva na čekanje**

Za stavljanje željenog sudionika (čiji je broj trenutno prikazan na zaslonu) konferencijskog poziva na čekanje, stisnite lijevu soft tipku, zatim odaberite **Konferencija/Otpustiti**.


### **Prikazivanje sudionika konferencijskog poziva**

Pomoću navigacijskih tipki gore/dolje možete pregledavati telefonske brojeve sudionika **konferencijskog poziva**.

### **Privatan poziv tijekom konferencijskog poziva**

Za privatan poziv s jednim od sudionika konferencijskog poziva, prikažite broj tog sudionika s kojim želite razgovarati na zaslon, zatim stisnite lijevu soft tipku. Odaberite **Konferencija/Privatno** da biste stavili sve ostale sudionike konferencijskog poziva na čekanje.

### **Završavanje konferencijskog poziva**

Trenutno prikazani sudionik konferencijskog poziva može biti otpušten pritiskom na tipku . Za završavanje konferencijskog poziva, stisnite lijevu soft tipku, zatim odaberite **Konferencija/Završiti**. Nakon pritiska lijeve soft tipke, odabirom **Konferencija/Završiti sve** prekinut će se svi aktivni i zadržani pozivi.



# Izbornik

Sljedeća ilustracija prikazuje strukturu izbornika i označava:

- ▶ Broj dodijeljen svakoj opciji izbornika.
- ▶ Stranicu gdje možete naći objašnjenje funkcije.

Možete otići na željeni izbornik pomoću lijeve soft tipke [Izbornik], navigacijskih tipki i tipke [OK].



Ovaj izbornik podržava samo SAT (komplet SIM aplikacijskih alata) SIM.



Ovaj izbornik podržavaju SIM kartice koje nemaju SAT aplikacijski alat.



## 1 Posebno

Ovaj izbornik ovisi o SIM i uslugama mreže.



## 2 Multimedija

- 1 Fotografije
- 2 Slike
- 3 Zvukovi
- 4 Igre & ostalo



## 3 Popis poziva

- 1 Neodgovoreni pozivi
- 2 Priljeni pozivi
- 3 Birani brojevi
- 4 Briši zadnje pozive
- 5 Tarife poziva
- 6 GPRS info

**4 Poruke**

- 1 Sastavi SMS
- 2 Sastavi MMS
- 3 Ulazni spremnik
- 4 Izlazni spremnik
- 5 Privremeni pretnac
- 6 Preslušaj govornu poštu
- 7 Informacije poruke
- 8 Obrasci
- 9 Postavke

**5 t-zones****6 Kontakti**

- 1 Traži
- 2 Dodaj novo
- 3 Grupe
- 4 Brzo biranje
- 5 Postavke
- 6 Kopiraj sve
- 7 Izbriši sve
- 8 informacije

**7 Rokovnik**

- 1 Sat za alarm
- 2 Planer
- 3 Kalkulator
- 4 Pretvarač jedinica
- 5 Vremenske zone
- 6 Snimanje glasa
- 7 Status memorije
- 8 Verzija S/W

**8 Kamera**



- 1 Snimanje slike
- 2 Mod snimanja
- 3 Moj album
- 4 Postavke
- 5 Status memorije

**9 Postavke**

- 1 Profil
- 2 Datum & vrijeme
- 3 Postavke telefona
- 4 Postavke poziva
- 5 Sigurnosne postavke
- 6 Postavke mreže
- 7 GPRS postavke
- 8 Internet
- 9 Poništi postavke



 
## Odabir funkcija i opcija

Telefon vam pruža mnoštvo funkcija kako biste ga najbolje prilagodili sebi. Te funkcije su posložene u izbornicima i pod-izbornicima, kojima se pristupa putem dvije soft tipke  i .

Svaki izbornik i pod-izbornik omogućava vam mijenjanje postavki određene funkcije.

Uloge soft tipki razlikuju se ovisno o trenutnom kontekstu; oznaka na donjoj crti zaslona, iznad svake od tih tipki, prikazuje njezinu trenutačnu funkciju.

(primjer)

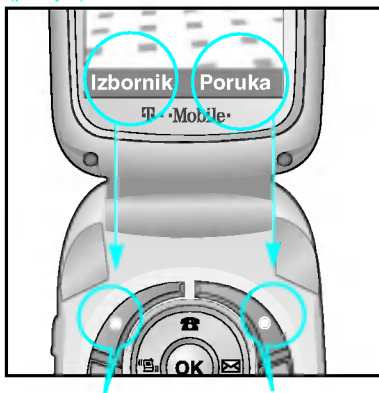

Stisnite lijevu soft tipku za pristup raspoloživom izborniku.

Stisnite desnu soft tipku za aktiviranje određene radnje.



## Posebno

Vaš davatelj usluga može preko SIM kartice ponuditi posebnu aplikaciju, kao što je kućno bankarstvo, burza itd. Ako ste registrirali neku od ovih usluga, naziv usluge pojavit će se na kraju Glavnog izbornika. Uz izbornik SIM usluge vaš telefon pripada budućnosti, može podržavati i dodatne usluge 'davatelja usluga. Za dodatne informacije obratite se vašem davatelju usluga.



# Multimedija

S WAP-om možete preuzeti melodije, igrice, slike i pozadine.

## Fotografije

Izbornik-2-1

Otvora mapu **Moje album**. Ovdje su pohranjene slike snimljene pomoću C3300. (Više informacija potražite na str. 77.)

## Slike

Izbornik-2-2

- **Moje slike:** Odaberite sliku s popisa pritiskom lijeve tipke [Prikaz]. Zatim, možete ju postaviti kao pozadinu i poslati kao MMS poruku pritiskom lijeve tipke [Opcije]

## Zvukovi

Izbornik-2-3

- **t-melodije:** Spajanje sa T-zonom. Možete preuzeti melodije koristeći WAP. Te melodije su pohranjene u **Moji zvukovi**.
- **Moji zvukovi:** Možete odabrati zvuk s popisa. Nakon odabira željenog zvuka, možete ga postaviti kao zvonu, poslati ga putem SMS-a ili MMS-a pomoću lijeve soft tipke [Opcije].

## Igre & ostalo

Izbornik-2-4

- **t-igre:** Spajanje sa T-zonom. Možete preuzeti igre koristeći WAP. Te igre su pohranjene u **Moje igre & ostalo**.
- **Moje igre & ostalo:** U ovom izborniku možete upravljati Java aplikacijama ugrađenima u vašem telefonu. Možete igrati ili brisati preuzete aplikacije, ili postaviti opcije povezivanja. Preuzete aplikacije su organizirane u mape.

Stisnite lijevu soft tipku [Odabрати] za otvaranje odabrane mape ili podizanje odabrane midlet aplikacije.

Pritiskom na desnu soft tipku [Izbornik], sljedeće su opcije raspoložive:

- ▶ **Novi folder:** Stvara novu mapu.
  - ▶ **Maknuti:** Miče odabranu mapu ili aplikaciju u željenu mapu.
  - ▶ **Pokreni:** Stvara igre.
  - ▶ **Ukloni:** Removes a folder or an application.
  - ▶ **Preimenovati:** Možete preimenovati mapu ili aplikaciju.
- ❗ **Napomena** Ne možete ukloniti ili preimenovati unaprijed instaliranu mapu ili igru u mapi.

Javač je tehnologija koju je osmislila tvrtka Sun Microsystems. Na isti način kako biste preuzeli Java Applet koristeći standardni Netscape ili MS Internet Explorer pretraživače, Java Midlet može se preuzeti putem omogućene WAP opcije na telefonu. Ovisno o davatelju usluga, svi Java programi, poput Java igara, mogu se preuzeti i igrati na telefonu. Jednom preuzet, Java program može se pogledati u izborniku **Moje igre & ostalo** gdje ga možete odabrati, pokrenuti ili izbrisati. Datoteke Java programa spremljene su u telefon u JAD ili JAR formatima.


- ❗ **Napomena** JAR datoteka je kompresirani format Java programa, a JAD je opisna datoteka koja uključuje sve detaljne informacije. S mreže, prije samog preuzimanja, možete pogledati sve detaljne opise iz JAD datoteke.
- ❗ **Opres** Samo J2ME (Java 2 Micro Edition) bazirani programi mogu raditi na telefonu. J2SE (Java 2 Standard Edition) bazirani programi radit će samo na računalu.



## Popis poziva (Ovisno o mreži)

Možete provjeriti zapise propuštenih, primljenih i biranih poziva samo ako vaša mreža podržava opciju Calling Line Identification (CLI) unutar područja usluge.

Broj i ime (ako je dostupno) prikazani su zajedno. Također možete vidjeti vrijeme i trošak poziva.

Stisnite tipku izbornika (  ) i pomoću navigacijskih tipki odaberite **Popis poziva**.

### Neodgovoreni pozivi

Izbornik-3-1

Ova opcija vam omogućava pregled nedogovorenih poziva.

Nakon pritiska lijeve soft tipke [Opcije], također možete:

- Pogledati datum i vrijeme poziva.
- Spremiti broj u Kontakte. Unesite ime za broj i spremite ga u izbornik Kontakti.
- Poslati poruku tom broju.
- Izbrisati poziv s popisa.

**!** **Napomena** Možete izbrisati sve zapise poziva s popisa pomoću izbornika **Brisanje posljednjih poziva**. (Pogledajte stranicu 43.)

### Primljeni pozivi

Izbornik-3-2

Ova opcija omogućava vam pregled dolaznih poziva. Nakon pritiska lijeve soft tipke [Opcije], također možete:

- Pogledati datum i vrijeme kad je odgovoreno na poziv.
- Spremiti broj u Kontakte. Unijeti ime za broj i spremite ga u izbornik Kontakti.
- Poslati poruku tom broju.
- Izbrisati poziv s popisa.

**!** **Napomena** Možete izbrisati sve zapise poziva s popisa pomoću izbornika **Brisanje posljednjih poziva**. (Pogledajte stranicu 43.)

## Birani brojevi

Izbornik-3-3

Ova opcija omogućava pregled odlaznih poziva (biranih ili pokušaja). Pomoću tipke [Opcije], također možete:

- Pogledati datum i vrijeme kad je na poziv odgovoreno.
- Spremiti broj u Kontakte. Unijeti ime za broj i spremiti ga u izbornik Kontakti.
- Poslati poruku tom broju.
- Izbrisati poziv s popisa.

**!** **Napomena** Možete izbrisati sve zapise poziva s popisa pomoću izbornika **Brisanje posljednjih poziva**. (Pogledajte stranicu 43.)

## Briši zadnje pozive

Izbornik-3-4

Koristite ovu opciju za brisanje popisa propuštenih poziva, popisa primljenih poziva ili popisa biranih poziva. Također možete istodobno izbrisati sve popise poziva odabirom opcije **Svi pozivi**.

### Tarife poziva

Izbornik-3-5

### Trajanje poziva

(Izbornik-3-5-1)

Koristite ovu opciju za pregled trajanja vaših dolaznih i odlaznih poziva. Možete provjeriti trajanje svakog poziva na dnu zaslona koristeći navigacijske tipke gore/dolje. Možete resetirati brojač poziva odabirom opcije Reset sve. Kako bi se spriječilo neželjeno resetiranje, od vas se traži da unesete PIN2 kod.

- **Zadnji poziv:** Trajanje posljednjeg poziva.
- **Svi pozivi:** Ukupno trajanje svih poziva, biranih i primljenih od posljednjeg reseta brojača.
- **Primljeni pozivi:** Trajanje dolaznih poziva.
- **Birani pozivi:** Trajanje odlaznih poziva.
- **Poništi sve:** Odaberite ovu opciju za brisanje svih trajanja poziva.

**! Napomena** Trajanje poziva na računu vašeg davatelja usluga može se razlikovati, ovisno o mreži, vremenu razgovora itd.

### Troškovi poziva



(Izbornik-3-5-2)

Ova mrežna usluga omogućava vam da provjerite trošak posljednjeg poziva, ukupan trošak poziva i ostatak troška poziva. Trošak poziva prikazan je na dnu LCD zaslona. Za resetiranje troška poziva, odaberite **Reset sve**. Nakon toga ćete morati unijeti PIN2 kod.

**! Napomena** Trajanje poziva na računu vašeg davatelja usluga može se razlikovati, ovisno o mreži, vremenu razgovora itd.

## Postavke

(Izbornik-3-5-3)

- **Odredi tarifu:** Možete odrediti valutu i jedinicu cijene. Obratite se svom davatelju usluga za dobivanje jedinica cijene.  
Za odabir valute ili jedinice u ovom izborniku, morate unijeti PIN2 kod. Ako želite unijeti simbole @, đ, \$, obrišite sve i zatim stisnite tipku  . Ako želite promijeniti simbol, stisnite opet tipku  .
- **! Napomena** Kad su sve jedinice potrošene, pozivi se više neće moći upućivati, osim hitnih poziva. Ovisno o SIM kartici, trebat će vam PIN2 kod da odredite limit troškova poziva.
- **Odredi kredit:** Ova vam mrežna usluga omogućava da limitirate trošak vaših poziva do određene naplatne jedinice. Možete upućivati i primati pozive do određenog limita troška.
  - ▶ **Čitati:** Možete provjeriti ostatak jedinica.
  - ▶ **Promijeniti:** Možete promijeniti limit.
- **Autom. prikaz:** Ova vam usluga omogućava da automatski vidite trošak svog posljednjeg poziva. Ako odaberete **Uključiti**, možete vidjeti trošak posljednjeg poziva po njegovu završetku.

### GPRS info

Izbornik-3-6

Putem opcije GPRS informacija možete provjeriti količinu podataka prenesenu preko mreže. Uz to, također možete vidjeti koliko ste vremena bili na vezi. (GPRS je kratica za General Packet Radio Service.)

### Trajanje poziva

(Izbornik-3-6-1)


Možete provjeriti trajanje posljednjeg poziva i svih poziva. Također možete resetirati brojače poziva odabirom opcije **Reset sve**.

### Količina podataka

(Izbornik-3-6-2)

Možete provjeriti poslanu količinu podataka, primljenu količinu podataka i ukupnu količinu podataka. Također možete resetirati brojač odabirom opcije **Reset sve**.






Stisnite tipku izbornika (  ) i odaberite **Poruke** koristeći navigacijske tipke.

## Sastavi SMS

Izbornik-4-1

Vaš telefon prima obavijesti o porukama glasovne pošte i SMS porukama.

Glasovna pošta i SMS su mrežne usluge. Molimo, obratite se svom davatelju usluga za detaljnije informacije.

Kad se pojavi simbol , primili ste glasovnu poštu. Kad se pojavi simbol , primili ste novu tekstualnu poruku. Ako je memorija za poruke puna, poruka je prikazana, a simbol  treperi, te ne možete primiti više poruka. Koristite opciju **Izbrisati** u izborniku **Dolazni spremnik** brisanje nevažnih poruka. Kad oslobodite mjesto u memoriji za poruke, svaka nedostavljena SMS poruka bit će primljena (ukoliko ima dovoljno mjesta).

Možete pisati i uređivati tekstualne poruke do 10 stranica. (otprilike 1530 znakova)

1. Unesite svoju poruku. Za detalje o tome kako se unosi tekst, pogledajte stranice 28 do 32 (Unošenje teksta).
2. Po završetku poruke, odaberite željenu opciju, stisnite lijevu soft tipku [Opcije]. Sljedeće su opcije moguće:

- ▶ **Pošalji:** Unesite broj telefona. Ili izaberite broj iz nedavnih brojeva ili iz izbornika Kontakti nakon pritiska lijeve soft tipke [Opcije].

Poruku možete istodobno poslati na 6 brojeva telefona. Prije slanja poruke, sljedeće opcije možete odrediti pritiskom na desnu soft tipku [Postavke].

- 1) **Rok trajanja:** Odredite vremensko trajanje u kojem će vaša poruka biti pohranjena u SMS centru dok se pokušava dostaviti primatelju. Moguće vrijednosti su: 1 sat, 12 sati, 1 dan, 1 tjedan i maksimum koji dozvoli vaš davatelj usluga.

- 2) **Izvrješće o isporuci:** Odaberite želite li uključiti ili isključiti funkciju izvrješća. Kad je ova funkcija uključena, mreža vas obavještava je li vaša poruka dostavljena ili nije.
  - 3) **Cijena odgovora:** Omogućava primatelju vaše tekstualne poruke da vam odgovori putem vašeg centra poruka, ako je ta usluga putem mreže dostupna.
- ▶ **Spremi:** Pohranjuje poruku za kasnije slanje.
  - ▶ **Font:** Odaberite željenu veličinu i stil fonta za poruku koristeći navigacijske tipke lijevo/desno.
  - ▶ **Boja:** Odaberite željenu boju pomoću navigacijskih tipki lijevo/desno. Zatim, stisnite navigacijsku tipku dolje i odaberite boju pozadine pomoću navigacijskih tipki lijevo/desno.
  - ▶ **Poravnanje:** Odaberite gdje želite poredati tekst (lijevo, desno, sredina).
  - ▶ **Dodaj rječnik T9:** Kad niste pronašli željenu riječ u T9 načinu unosa teksta, možete dodati riječ koristeći ovu opciju u T9 rječniku. Nakon upisivanja riječi, stisnite lijevu soft tipku [Spremiti].
  - ▶ **T9 jezici:** Odaberite jezik za T9 način unosa teksta. Također možete isključiti T9 način unosa odabirom **T9 isključiti**.
  - ▶ **Izlaz:** Izlaz iz izbornika **Pisanje tekstualne poruke**.
3. Također, uz poruku možete poslati pravitak, pritiskom na desnu soft tipku [Umetnuti] dok unosite poruku.
    - ▶ **Slika:** Slanje i primanje tekstualnih poruka koje sadržavaju slike, znane kao "MMS poruke". Dostupno je nekoliko slika u telefonu i mogu se zamijeniti s novim, primljenima iz drugih izvora.
    - ▶ **Zvuk:** Ako je raspoloživo, možete dodati zvuk poruci.
    - ▶ **Obrazac teksta:** Možete odabrati unaprijed definirane tekstualne predloške.
    - ▶ **Imenik:** Poruci možete dodati telefonske brojeve.

- ▶ **Potpis:** Možete dodati svoju posjetnicu.
- ▶ **Simbol:** Možete dodati posebne znakove.

## Sastavi MMS

Izbornik-4-2

Slikovna poruka može sadržavati tekst, slike, i/ili zvučne isječke. Ova se opcija može koristiti samo ako je podržava vaš davatelj usluga ili mrežni operater. Samo uređaji koji imaju kompatibilne slikovne poruke ili opciju e-pošte mogu primati i slati slikovne poruke.

Možete napraviti slikovnu poruku do 10 slideova.

(otprilike oko 100KB)

1. Nakon unošenja naslova poruke, stisnite tipku OK.
2. Upišite tekst poruke. Pomoću desne soft tipke [Umetnuti], možete umetnuti simbol, sliku, zvuk, zvučni isječak, tekstualni predložak, telefonski broj spremljen u telefonskom imeniku ili potpis.
3. Pritisnite lijevu tipku [Opcije]. Stisnite lijevu soft tipku [Opcije]. Moguće su sljedeće opcije.

- ▶ **Pošalji:** Slikovnu poruku možete istodobno poslati na 6 telefonskih brojeva.

1) Unesite broj telefona. Također, možete potražiti telefonski broj na popisu posljednjih brojeva ili u telefonskom imeniku pomoću lijeve soft tipke [Opcije].

2) Stisnite lijevu soft tipku [Postavke]. Možete postaviti sljedeće opcije:

- **Prioritet:** Odredite prioritet MMS poruke.

- **Rok valjanosti:** Odredite trajanje čuvanja slikovnih poruka na mrežnom poslužitelju. Moguće vrijednosti su: 1 sat, 12 sati, 1 dan, 1 tjedan i maksimum određen mrežnim operaterom.

- **Izvršeće o isporuci:** Odaberite **Da** za uključivanje funkcije izvršeća. Kad je ova funkcija uključena, mreža će vas obavještavati je li vaša poruka primljena.


3) Stisnite lijevu soft tipku [Poslati].

- ▶ **Pregled:** Odaberite ovu opciju za provjeru MMS poruke koju ste napravili. Svaki slide se automatski prikazuje. Također možete iz slidea koji je prikazan ući u drugi slide pomoću navigacijskih tipki lijevo/desno. Za ponovni prikaz poruke, stisnite lijevu soft tipku [Prikazati].
- ▶ **Spremi:** Spremanje poruke u skice ili kao predložak.
- ▶ **Dodaj snimku:** Dodavanje slidea prije ili nakon trenutnog slidea.
- ▶ **Idi na snimku:** Odaberite ovu opciju ako želite iz trenutnog slidea otići do drugog.
- ▶ **Izbrisati snimku:** Brisanje trenutnog slidea.
- ▶ **Format prikaza:** Možete odrediti sljedeće formate slidea:
  - **Postavi timer:** Unesite timer u svako polje pomoću bročanih tipki.
  - **Prebaciti tekst i sliku:** Prebacivanje slike i teksta.
- ▶ **Dodaj rječnik T9:** Kad niste pronašli željenu riječ u T9 načinu unosa teksta, možete dodati riječ u T9 rječnik pomoću ove opcije. Nakon što ste upisali riječ, stisnite lijevu navigacijsku tipku [Spremiti].
- ▶ **T9 jezici:** Odaberite T9 jezik za T9 način unosa. Također možete isključiti T9 način unosa odabirom **T9 isključiti**.
- ▶ **Izlaz:** Izlaz iz izbornika Pisanje MMS poruke.


## Ulazni spremnik

Izbornik-4-3






Kad primite poruku telefon će vas obavijestiti, a ona će biti spremljena u Dolazni spremnik.

Stisnite lijevu soft tipku [Izbornik] i odaberite  →

### Ulazni spremnik.

Ili možete prečicom stisnuvši desnu navigacijsku tipku (  ) u stanju čekanja.

U Dolaznom spremniku možete razlikovati svaku poruku po simbolu. Za detalje, pogledajte niže objašnjenje simbola.

Simbol	Objašnjenje
	MMS poruka
	Kratka poruka SMS
	SIM poruka
	Pročitati
	Obavijest o MMS

Svaka primljena poruka ima sljedeće moguće opcije. Stisnite lijevu navigacijsku tipku [Opcije].




- ▶ **Pročitati:** Možete pogledati odabranu poruku.
- ▶ **Odgovoriti:** Možete odgovoriti pošiljatelju tekstualnom porukom ili MMS porukom.
- ▶ **Proslijediti:** Možete proslijediti odabranu poruku drugim primateljima.
- ▶ **Nazvati:** Možete nazvati pošiljatelja.
- ▶ **Izbrisati:** Brisanje odabrane poruke u dolaznom spremniku.
- ▶ **Izdvojiti:** Možete izdvojiti sliku, zvuk, broj pošiljatelja, URL, adresu e-pošte i drugo iz poruke. Bit će spremljeno u Moju mapu, Kontakte ili Oznake.
- ▶ **Pogledati informaciju:** Također možete pogledati informacije o poruci: adresu pošiljatelja, naslov (samo za MMS poruke), datum i vrijeme kad je poruka stigla, tip poruke i veličinu, a također i prioritet (samo za MMS poruke).

- ▶ **IPrikazati:** Možete ponovo prikazati odabranu MMS poruku.  
(Samo za MMS poruke)
- ▶ **Izbrisati sve:** Brisanje svih poruka u mapi Dolaznih poruka.
- ▶ **Primiti:** Kad primite obavijest o slikovnoj poruci, trebate odabrati ovu opciju da biste je preuzeli.  
(Samo za obavijest o MMS poruci)
- ▶ **Otkazati:** Možete otkazati preuzimanje MMS poruke.  
(Samo za MMS poruke)

## Izlazni spremnik

Izbornik-4-4


Sve poruke koje ste poslali pohranjene su u **Odlaznom** spremniku. Možete pogledati popis i sadržaje poruka. U popisu poruka odlaznog spremnika možete provjeriti je li prijenosporuke bio uspješan. Ako prijenos nije uspio, "(Neuspio)" će bitiprikazano ispred naziva primatelja. Također možete provjeriti jesteli primili izvješće o isporuci pomoću sljedećih simbola.

Simbol	Objašnjenje
	Poslano
	Neposlano
	Izvješće o isporuci

Kod svake poruke, sljedeće su opcije moguće pritiskom na lijevu soft tipku [Opcije].

### **Poruke koje su uspješno prenesene imaju sljedeće opcije.**



- ▶ **Pogledati:** Možete pogledati odabranu poruku.
- ▶ **Proslijediti:** Možete proslijediti odabranu poruku drugih primateljima.
- ▶ **Izbrisati:** Brisanje odabrane poruke iz odlaznog spremnika.
- ▶ **Pogledati detalje:** Možete pogledati detalje odabrane poruke: naslov (samo za MMS poruku), datum i vrijeme kad ste je poslali, vrstu i veličinu poruke, prioritet (samo za MMS poruku) i primatelje.

- ▶ **Izbrisati sve:** Brisanje svih poruka u odlaznom spremniku.
- ▶  **Poruke koje su u tijeku prijenaša imaju sljedeće opcije.**
- ▶ **Pogledati:** Možete pogledati odabranu poruku.
- ▶ **Poslati:** Odaberite ovu opciju za slanje poruke.
- ▶ **Izbrisati:** Otkaz prijenaša poruke i brisanje poruke.
- ▶ **Pogledati informaciju:** Možete pogledati informaciju odabrane poruke: naslov (samo za MMS poruku), datum i vrijeme kad ste je poslali, vrstu i veličinu poruke, prioritet (samo za slikovnu poruku) i primatelje.
- ▶ **Poslati sve:** Slanje svih poruka koje su u tijeku prijenaša.
- ▶ **Otkazati sve:** Otkaz svih prijenaša poruka.
- ▶ **Izbrisati sve:** Otkaz svih prijenaša poruka i brisanje svih.

## Privremeni pretinac

Izbornik-4-5

Možete pogledati poruke spremljene kao skice. Te poruke su na popisu s datumom i vremenom kad su spremljene. Tražite po popisu pomoću navigacijskih tipki gore/dolje.

Simbol	Objašnjenje
	MMS poruka
	Tekstualna poruka

Svaka skica ima sljedeće opcije. Stisnite lijevu soft tipku [Opcije].


- ▶ **Pogledati:** Možete pogledati odabranu poruku.
- ▶ **Urediti:** Možete urediti odabranu poruku.
- ▶ **Izbrisati:** Brisanje odabrane poruke iz spremnika skice.
- ▶ **Pogledati detalje:** Možete pogledati detalje odabrane poruke: naslov (samo za MMS poruku), datum i vrijeme kad je spremljena, vrstu i veličinu poruke i prioritet (samo za MMS poruku).
- ▶ **Izbrisati sve:** Brisanje svih poruka iz spremnika skice.

## Preslušaj govornu poštu

Izbornik-4-6

Ovaj izbornik omogućava vam brz način pristupa vašoj glasovnoj pošti (ako vaša mreža podržava tu opciju).

Prije korištenja ove funkcije, morate unijeti broj glasovnog centra koji ste dobili od vašeg mrežnog operatera.

Kad primite glasovnu poruku, simbol  će se prikazati na zaslону. Molimo, obratite se vašem mrežnom operateru za detalje o njihovoj usluzi kako biste pravilno postavili telefon.

## Informacije poruke (Ovisno o mreži)

Izbornik-4-7

Info uslužne poruke su tekstualne poruke poslone od strane mreže korisnicima mobilnih telefona. One pružaju osnovne informacije poput vremenske prognoze ili stanja u prometu. Svaka vrsta informacije ima broj; stoga, možete kontaktirati davatelja usluga sve dok imate unese ispravan broj za određenu informaciju. Kad primite info poruku, simbol će prikazati primljenu novu poruku ili će info poruka odmah biti prikazana na zaslonu. Sljedeće su opcije raspoložive kod gledanja info poruke.

### Čitati

Izbornik-4-7-1

1. Odaberite **Čitati** za pregled poruke, prikazat će se na zaslonu.
2. Poruka će biti prikazana sve dok se ne primi druga poruka.

### Teme (Ovisno o mreži)

Izbornik-4-7-2

- **Dodaj novo:** Na telefon ili na SIM karticu (ako SIM to omogućava) možete dodati broj nove info poruke s nazivom.
- **Vidi listu:** Možete pogledati popis svih brojeva info uslužnih poruka. Stisnite lijevu soft tipku [Opcije] za uređenje ili brisanje kategorije info poruke.
- **Aktivna lista:** Pomoću lijeve soft tipke [Uklj/Isklj] možete odrediti koje info uslužne poruke s kopisa želite primati.

### Obrasci

Izbornik-4-8

Na popisu postoje unaprijed definirane poruke. Poruku predložak možete pogledati i urediti ili možete napisati novu poruku. Moguće su dvije vrste predložak poruka: tekstualna i slikovna.

### Obrazac teksta

Izbornik-4-8-1

- **Nazovi me.**
- **Kasnim. Dolazim**
- **Gdje si?**
- **Na putu sam.**
- **Hitno. Javi se.**
- **Volim te.**

Sljedeće su opcije moguće.

- ▶ **Vidi:** Možete pogledati odabrani predložak.
- ▶ **Uredi:** Za pisanje nove poruke ili uređenje odabranog predloška s popisa tekstualnih predložaka.
- ▶ **Sastavi SMS:** Odaberite ovu opciju za slanje odabranog predloška putem SMS-a.
- ▶ **Sastavi MMS:** Odaberite ovu opciju za slanje odabranog predloška putem MMS-a.
- ▶ **Dodati novo:** Odaberite ovu opciju za stvaranje novog predloška.
- ▶ **Izbriši:** Brisanje odabranog predloška.
- ▶ **Izbriši sve:** Brisanje svih tekstualnih predložaka.

## Multimedijски obrazac

Izbornik-4-8-2

Možete napraviti slikovni predložak pritiskom lijeve soft tipke [Dodati novu]. Slikovne predloške spremate kao predloške za vrijeme stvaranja MMS poruke u **Napisati MMS poruku**.

- ▶ **Pregled:** Odaberite ovu opciju za provjeru MMS poruke koju ste napravili. Svaki slide se automatski prikazuje. Također možete iz slidea koji je prikazan ući u drugi slide pomoću navigacijskih tipki lijevo/desno. Za ponovni prikaz poruke, stisnite lijevu soft tipku [Prikazati].
- ▶ **Spremi:** Spremanje poruke u skice ili kao predložak.
- ▶ **Dodaj snimku:** Dodavanje slidea prije ili nakon trenutnog slidea.
- ▶ **Idi na snimku:** Odaberite ovu opciju ako želite iz trenutnog slidea otići do drugog.
- ▶ **Izbrisati snimku:** Brisanje trenutnog slidea.
- ▶ **Format prikaza:** Možete odrediti sljedeće formate slidea:
  - **Postavi timer:** Unesite timer u svako polje pomoću bročanih tipki.
  - **Prebaciti tekst i sliku:** Prebacivanje slike i teksta.
- ▶ **Dodaj rječnik T9:** Kad niste pronašli željenu riječ u T9 načinu unosa teksta, možete dodati riječ u T9 rječnik pomoću ove opcije. Nakon što ste upisali riječ, stisnite lijevu navigacijsku tipku [Spremiti].
- ▶ **T9 jezici:** Odaberite T9 jezik za T9 način unosa. Također možete isključiti T9 način unosa odabirom **T9 isključiti**.
- ▶ **Izlaz:** Izlaz iz izbornika Pisanje MMS poruke.

### Potpis

Izbornik-4-8-3

Ova vam opcija pomaže u stvaranju vlastite posjetnice. Unesite ime, broj mobilnog telefona, kućni broj, broj ureda, faksa i adresu e-pošte. Nakon stvaranja posjetnice, imate sljedeće opcije na raspolaganju pritiskom na lijevu soft tipku [Opcije].

- ▶ **Uredi:** Možete urediti posjetnicu.
- ▶ **Sastavi SMS:** Pomoću ove opcije možete SMS-om poslati svoju posjetnicu.
- ▶ **Sastavi MMS:** Pomoću ove opcije možete MMS-om poslati svoju posjetnicu.
- ▶ **Izbriši:** Brisanje posjetnice.

### Postavke

Izbornik-4-9

### Tekstualna poruka

Izbornik-4-9-1

- ▶ **Vrsta poruke:** Određuje zadanu vrstu poruke (Tekst, Glas, Faks, Paging, X.400, E-mail, ERMES). Mreža može prebaciti poruke u odabrani format.
- ▶ **Rok valjanosti:** Odredite vremensko razdoblje koliko želite da vaša tekstualna poruka bude spremljena u SMS centru dok se pokušava dostaviti primatelju. Moguće vrijednosti su: 30 minuta, 1 sat, 6 sati, 12 sati, 1 dan, 1 tjedan i maksimum određen vašim mrežnim operaterom.
- ▶ **Izvešće isporuke:** Odaberite želite li uključiti ili isključiti funkciju izvješća. Kad je ova funkcija uključena, mreža će vas obavijestiti kada je vaša poruka dostavljena.
- ▶ **Cijena odgovora Zatražen odgovor:** Omogućava primatelju vaše SMS poruke da vam odgovori putem vašeg centra poruka, ako mreža podržava tu uslugu.
- ▶ **SMS centar:** Spremanje ili mijenjanje broja vašeg SMS centra kod slanja tekstualnih poruka. Taj broj trebate dobiti od vašeg davatelja usluga.

## Multimedijska poruke

Izbornik-4-9-2

Putem ovog izbornika možete postaviti zadanu MMS informaciju.


Sljedeće su opcije moguće.

- ▶ **Prioritet:** Odredite prioritet MMS poruke koju želite poslati.
- ▶ **Rok valjanosti:** Odredite vremensko razdoblje koliko želite da vaša MMS poruka bude spremljena na mrežnom poslužitelju dok se pokušava dostaviti primatelju. Moguće vrijednosti su: 1 sat, 12 sati, 1 dan, 1 tjedan i maksimum određen vašim mrežnim operaterom.] Izvješće o isporuci: Odaberite želite li uključiti ili isključiti funkciju.
- ▶ **Izvješće isporuke:** Odaberite želite li uključiti ili isključiti funkciju izvješća. Kad je ova funkcija uključena, mreža vas obavještava svaki put kad je vaša poruka dostavljena.
- ▶ **Automatsko preuzimanje**
  - **Uključeno:** Ako odaberete ovu opciju, poruke će se automatski preuzimati po primitku.
  - **Isključeno:** Traži od vas potvrdu da želite preuzeti poruku.
  - **Samo s domaće mreže:** Ako odaberete ovu opciju, automatski će se preuzimati poruke s vaše mreže. Ako je primljena poruka izvan područja vaše mreže, zatražit će vas da potvrdite preuzimanje poruku.
  - **Odbaci:** Ako odaberete ovu opciju, svaka će poruka po primitku biti odbijena.
- ▶ **Postavke mreže:** Ako odaberete multimedijalni centar poruka, možete postaviti URL na multimedijalni poslužitelj poruka.
- ▶ **Dozvoljene vrste poruka:** Odredite dozvoljene vrste poruka. Moguće vrijednosti su: Osobna, Oglasi i Informacija.

### Centar govorne pošte

Izbornik-4-9-3

Možete primiti glasovnu poruku ako Vaš uslužni centar pruža tu uslugu. Kad stigne nova glasovna poruka na zaslonu se pojavi simbol govorne pošte. Molimo Vas da kod Vašeg uslužnog centra provjerite detalje za ispunjenje ove funkcije kako biste namjestili telefon u skladu s njihovim zahtjevima.

1. Držite tipku  u stanju čekanja.
2. Možete provjeriti sljedeće podizbornike.
  - **Domáci:** Broj koji se zove u svojoj mreži za slušanje govorne pošte.
  - **Roaming:** Čak i ako ste u inozemstvu, možete preslušati govornu poštu ako imate uslugu roaming-a.

### Informacije

Izbornik-4-9-4

Info uslužne poruke su tekstualne poruke koje mrežni operater dostavlja na GSM. One pružaju osnovne informacije poput prognoze, stanja u prometu, taksija, ljekarna i cijena dionica. Svaka vrsta informacije ima broj, tako da možete kontaktirati davatelja usluga dok god imate unesen određeni broj informacije. Kad primite info poruku, vidjet ćete simbol primljene poruke ili će info poruka biti odmah prikazana na zaslonu. Sljedeće su opcije moguće:

- ▶ **Primi:** Ako odaberete DA, vaš će telefon primiti info poruku. U suprotnome, više neće primati info poruke.
- ▶ **Dojava poziva:** Ako odaberete DA, kad primite info poruku, vaš će se telefon oglasiti s 'bip'. U suprotnome, neće se oglasiti iako ste primili info poruku.
- ▶ **Jezici:** Možete odabrati jezik koji želite odabirom opcije [Uklj/Isklj]. Zatim će info poruka biti prikazana na jeziku koji ste odabrali.

## Push poruke



Izbornik-4-9-5

Možete naručiti push poruku od WAP davatelja usluga. Push poruke su obavijesti o, primjerice, naslovima vijesti i mogu sadržavati tekstualnu poruku ili adresu WAP usluge. Za dostupnost i pretplatu usluge, obratite se svom WAP davatelju usluga.

- i **Napomena**
  - Davatelji usluga mogu ažurirati postojeću push poruku s novom dolaznom push porukom. (Stara poruka bit će zamijenjena novom.)
  - Kad push poruci istekne rok, automatski se briše.

U ovom izborniku možete odrediti opciju primanja push poruke.

- ▶ **Primanje uklj/isklj:** Ako odaberete ovu opciju, sve push poruke bit će primljene neovisno o tipu poruke.
- ▶ **Auto download:** Nećete primiti push poruke.

Simbol	Objašnjenje
	Pročitana push poruka
	Nepročitana push poruka

Nakon odabira push poruke, sljedeće su opcije moguće.



- **Informacija:** Prikazivanje informacije trenutne push poruke.
- **Učitati:** Spajanje na određenu web-stranicu putem informacije u trenutnoj push poruci.
- **Izbrisati:** Brisanje trenutne push poruke.
- **Izbrisati sve:** Brisanje svih poruka u dolaznom spremniku (uključujući SMS, MMS i drugo).



# t-zones

## Kako pristupiti t-zoni

Sa vašim telefonom možete učiniti puno više od razgovora ili pisanja poruka. **t-zones** pružaju informacije koje su vam potrebne poput vijesti, vremenske prognoze, informacija o sportu ili prometu. Dodatno, **t-zones** pružaju vrhunske multimedijalne usluge kao što su najnoviji tonovi zvona, pozadine ili igre koje vas zanimaju.

Pritisni lijevu soft tipku(  ) i odaberi M zonu uz pomoc navigacijskih tipki. Također možete prici M zoni pritiskom na tipku  u pripravnom modu.

**i Napomena** Dodatni troškovi za usluge mogu ovisiti o mreži.





Možete spremići telefonski broj i ime u memoriju na vašu SIM karticu. Uz to, možete spremići do 200 brojeva i imena u telefonsku memoriju.

Stisnite lijevu soft tipku [Izbornik] u stanju čekanja, zatim odaberite **Kontakti**.

## Traži

Izbornik-6-1

1. Odaberite **Traži**. Zatražit će vas da unesete ime.
2. Unesite početak imena koje želite pronaći i stisnite lijevu soft tipku [Traži].
  - ▶ Možete pristupiti Kontaktima izravno iz stanja čekanja, pritiskom navigacijske tipke gore (  ).
  - ! **apomena** Možete potražiti po Kontaktima od samog početka izravnim pritiskom lijeve soft tipke [Popis].
3. Nakon pronalaska željenog kontakta, možete nazvati taj broj pritiskom na tipku  . Ili stisnuti lijevu soft tipku [Opcije] za sljedeće opcije.
  - ▶ **Uredi:** Možete urediti ime ili broj.
  - ▶ **Sastavi SMS:** Odaberite ovu opciju za pisanje tekstualne poruke tom kontaktu.
  - ▶ **Sastavi MMS:** Odaberite ovu opciju za pisanje slikovne poruke tom kontaktu.
  - ▶ **Kopirati:** Odaberite ovu opciju za kopiranje kontakta sa SIM kartice na memoriju telefona ili obrnuto.
  - ▶ **Glavni broj:** Odaberite koji broj će biti glavni broj. Glavni broj je prvi prikazan.
  - ▶ **Izbriši:** Izbrišite kontakt.

### Dodaj novo

Izbornik-6-2

Možete dodati unos u kontakt koristeći ovu funkciju. Postoje 2 memorije: memorija telefona i memorija SIM kartice. Za odabir memorije, idite na **Postavka memorije** [Izbornik-6-5-1]. Kapacitet memorije telefona jest 200 unosa. U nju možete unijeti do 20 znakova za svaki naziv. Kapacitet memorije SIM kartice ovisi o SIM kartici.

1. U stanju čekanja pritiskom desne soft tipke [Kontakti] otvorite **Kontakte**.
  2. Idite do podebljanog **Dodaj novo** i stisnite [Odabrati]
  3. Možete dodati novi kontakt u memoriju SIM kartice ili u telefonsku memoriju. Za odabir memorije idite u **Postavka memorije** [Izbornik-6-5-1]. (Pogledajte stranicu 66.)
- **Dodavanje novih unosa u SIM memoriju**  
Možete unijeti ime i broj, te odabrati željenu grupu. (Ovisno o SIM kartici)
  - **Dodavanje novih unosa memoriju telefona**  
Možete unijeti ime, brojeve, adresu e-pošte i bilješku, te odabrati željenu grupu. Također možete odabrati koji broj želite postaviti kao glavni broj.

### Grupe

Izbornik-6-3



Možete postaviti do 20 kontakata u jednu grupu. Postoji 7 unaprijed definiranih grupa u koje možete stavljati kontakte.

1. Odaberite **Grupe**. Sve grupe su prikazane: **Obitelj, Prijatelji, Kolega, VIP, Grupa 1, Grupa 2 i Ostali**.
2. Odaberite ime grupe koju želite pritiskom na lijevu soft tipku [Opcija]. Prikazat će se sljedeći pod-izbornik.

- ▶ **Popis kontakata:** Prikazuje popis kontakata te grupe.
- ▶ **Zvono grupe:** Odaberite ovu opciju za odabir zvona koji će se koristiti kad primite poziv od osobe iz te grupe.
- ▶ **Ikona grupe:** Odaberite ovu opciju za izbor grafičkog simbola koji će se prikazivati kad primite poziv osobe iz te grupe.
- ▶ **Dodati kontakt:** Dodajte kontakt grupi. Možete dodati do 20 kontakata u jednu grupu.
- ▶ **Ukloniti kontakt:** Uklonite kontakt iz grupe. Kontakt i dalje ostaje u izborniku Kontakti.
- ▶ **Preimenuj:** Dajte grupi drugo ime.

## Brzo biranje

Izbornik-6-4

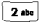Svakoj tipki od  do  možete dodati ime iz kontakta. Možete to ime nazvati izravno pritiskom te tipke na 2-3 sekunde.

1. Otiđite do **Brzo biranje** i stisnite [Odabrati].
2. Za dodavanje broja **Brzom biranju**, odaberite (Prazno). Zatim možete pronaći ime u Kontaktima.
3. Možete promijeniti ili izbrisati broj brzog biranja, nazvati ili poslati poruku, pritiskom lijeve soft tipke [Opcije].

### Postavke

Izbornik-6-5

#### Postavi memoriju

Izbornik-6-5-1

Možete odabrati memoriju za Kontakte, ili SIM memoriju ili memoriju telefona. Ako odaberete **Promjenjivo**, kad dodajete unos, telefon će vas upitati gdje da spremi broj.

#### Traži po

Izbornik-6-5-2

Možete postaviti telefon da pronalazi kontakt po **imenu** ili **broju**. Ako odaberete **Promjenjivo**, telefon će vas upitati kako da pretražuje Kontakte.

#### Opcije pregleda

Izbornik-6-5-3

Možete postaviti opcije prikaza Kontakta.

- ▶ **Samo naziv:** Kad pretražujete Kontakte, na popisu će biti prikazana samo imena.
- ▶ **Sa slikama:** Kad pretražujete Kontakte, na popisu će biti prikazana imena i slike.
- ▶ **Ime & broj:** Kad pretražujete Kontakte, na popisu će biti prikazana imena i brojevi.

### Kopiraj sve

Izbornik-6-6

Možete kopirati/micati unose iz memorije SIM kartice na memoriju telefona i obrnuto.

- ▶ **Sa SIM na Telefon:** Odaberite ovu opciju za kopiranje unosa s memorije SIM kartice na memoriju telefona.
- ▶ **Sa Telefona na SIM:** Odaberite ovu opciju za kopiranje unosa s memorije telefona na memoriju SIM kartice.

Sljedeće su opcije moguće.

- **Zadržati original:** Kod kopiranja, originalni brojevi telefona su zadržani.
- **Izbrisati original:** Kod kopiranja, originalni brojevi telefona bit će izbrisani.

## Izbriši sve


Izbornik-6-7

Možete izbrisati sve unose na SIM kartici i/ili na telefonu.  
Ova funkcija zahtijeva sigurnosni kod.

Stisnite  za povrat na stanje čekanja

## informacije

Izbornik-6-8

- ▶ **Servisni broj operatera (ovisno o SIM kartici):** Koristite ovu opciju za pregled popisa Service Dialling Numbers (SDN) koje vam je dodijelio mrežni operater (ako SIM kartica to podržava). Ti brojevi uključuju hitne brojeve, brojeve usluga i brojeve glasovne pošte.
  1. Odaberite opciju brojevi službi.
  2. Prikazana su imena dostupnih službi.
  3. Koristite navigacijske tipke gore/dolje za odabir službe.  
Stisnite .
- ▶ **Stanje memorije:** Možete provjeriti trenutni status memorije SIM kartice ili memorije telefona.
- ▶ **Vlastiti broj (ovisno o SIM kartici):** Odaberite ovu opciju za prikaz vašeg broja telefona na SIM kartici.



# Rokovnik





Stisnite tipku izbornika (  ) i odaberite **Rokovnik**.


## Sat za alarm

Izbornik-7-1

Postoji 5 vrsta alarma na vašem telefonu. Postavite alarm da se oglasi u određeno vrijeme.

Nakon odabira alarma pomoću lijeve soft tipke [Odabrati],

1.  **Alarm uklj/isklj:** Odaberite **Uklj.** pomoću navigacijskih tipki lijevo/desno. Za isključivanje alarma, stisnite **Isklj.**
2.  **Vrijeme alarma:** Unesite vrijeme alarma koristeći brojčane tipke.
3.  **Ponoviti:** Pomoću navigacijskih tipki lijevo/desno odaberite između: jednom, pon-pet, pon-sub i svaki dan.
4.  **Melodija alarma:** Odaberite željenu melodiju alarma pomoću navigacijskih tipki lijevo/desno.
5. Stisnite lijevu soft tipku [OK].
6. Možete urediti naziv alarma. Nakon unošenja naziva, stisnite lijevu soft tipku [OK].

Kad je alarm uključen, “  ” je prikazano na zaslonu u stanju čekanja.





Kad dođe određeno vrijeme alarma, alarm se oglasi postavljenom melodijom.

- ▶ Za isključenje alarma, stisnite desnu soft tipku [Prekinuti].



## Planer

## Izbornik-7-2

Kad odaberete ovaj izbornik, pojavit će se kalendar. Kockati kursor nalazi se na trenutnom datumu. Možete pomicati kursor na druge datume pomoću navigacijskih tipki. Na kalendaru, možete koristiti sljedeće tipke.

Svaki stisak		vraća za godinu unazad.
		prelazi u sljedeću godinu.
		vraća jedam mjesec unazad.
		prelazi u sljedeći mjesec.

Možete unijeti obvezu ili bilješku u raspored pritiskom na lijevu soft tipku [Opcije].

- ▶ **Dodati novu:** Odaberite ovu opciju za unos nove obveze ili bilješke. Nakon unosa obveze ili bilješke, datum je označen drugom bojom i “” (obveza), “” (bilješka) bit će prikazani u donjem desnom kutu zaslona. Ova funkcija vas podsjeća na obvezu. Telefon će oglasiti alarmni zvuk ako postavite tu opciju na telefonu.
- ▶ **Pogledati:** Prikazuje obvezu ili bilješku za odabrani dan. Stisnite lijevu soft tipku [Opcije] za uređenje ili brisanje zabilješke koju ste odabrali.
- ▶ **Pogledati sve:** Prikazuje sve zabilješke koje su unesene u telefon. Pomoću navigacijskih tipki gore/dolje pretražujte svoje zabilješke.
- ▶ **Izbrisati prošlo:** Odaberite ovu opciju za brisanje isteklih zabilješki o kojima vas je telefon već obavijestio. Zatražit će vas da potvrdite tu radnju.
- ▶ **Izbrisati sve:** Odaberite ovu opciju za brisanje svih obveza i bilježaka. Zatražit će vas da potvrdite tu radnju.




Stisnite tipku izbornika (  ) i odaberite **Alati** pomoću navigacijskih tipki.

### Kalkulator

Izbornik-7-3

Pomoću ove funkcije možete koristiti telefon kao kalkulator. Kalkulator vrši osnovne matematičke funkcije: zbrajanje, oduzimanje, množenje i dijeljenje. (Možete unijeti brojeve do druge decimalne.)

### Korištenje kalkulatora

1. Unesite prvi broj pomoću brojčanih tipki.
2. Stisnite navigacijsku tipku za željenu matematičku funkciju.
  - ❗ **Napomena** Za brisanje pogrešaka ili brisanje prikaza, stisnite tipku (  ).  
Za ubacivanje decimalne točke, stisnite tipku (  ).  
Za ubacivanje minusa, stisnite tipku (  ).
3. Za dobivanje rezultata, stisnite lijevu soft tipku [Rezultat] ili tipku OK.
4. Nakon dobivenog rezultata, stisnite lijevu soft tipku [Reset] za povrat na izbornik.

### Pretvarač jedinica

Izbornik-7-4

Ova opcija pretvara svaku mjeru iz jedne jedinice u drugu. Postoji četiri vrste koje se mogu pretvoriti u jedinice: Dužina, Površina, Masa i Količina.

1. Odaberite jednu od četiri vrste pritiskom lijeve soft tipke [Jedinica].
2. Otiđite do trenutne jedinice pritiskom na navigacijsku tipku dolje.
3. Odaberite jedinicu koju želite pretvoriti pomoću navigacijskih tipki lijevo/desno.

4. Otiđite do opcije Pretvori jedinicu pritiskom navigacijske tipke dolje.
5. Odaberite jedinicu u koju želite pretvoriti koristeći navigacijske tipke lijevo/desno.
6. Unesite brojeve koristeći brojčane tipke. Pretvorba se automatski izračunava.

**!** **Napomena** Možete unijeti decimalni broj pritiskom na tipku (  ).

## Vremenske zone

Izbornik-7-5

Možete provjeriti trenutno vrijeme Greenwich Mean Time (GTM) i 64 glavnih gradova cijeloga svijeta koristeći navigacijske tipke lijevo/desno.

Zaslon prikazuje imena gradova, trenutan datum i vrijeme.

Za odabir vremenske zone u kojoj vi jeste, pratite ove upute:

1. Odaberite grad koji odgovara vašoj vremenskoj zoni pritiskom navigacijske tipke lijevo/desno. Lokalni datum i vrijeme su prikazani.
2. Ako želite promijeniti prikazano vrijeme u stanju čekanja na odabrano vrijeme, stisnite lijevu soft tipku [Postaviti].

**!** **Napomena** Na postavke vremenske zone svakog grada u izborniku Svjetsko vrijeme mogu utjecati uvjeti mreže.

### Snimanje glasa


Izbornik-7-6

Možete snimiti bilješku. Možete snimiti do 10 glasovnih bilježaka koje traju najviše 20 sekundi svaka.

Možete pustiti da čujete ili izbrisati snimljenu bilješku ili snimiti novu bilješku pomoću lijeve soft tipke [Opcije].


- ! Napomena** U stanju čekanja, možete izravno otići u izbornik Snimanje glasa pritiskom navigacijske tipke dolje.

### Snimaj

1. U stanju čekanja stisnite i držite tipku (  ).
2. Kad je snimane počelo, prikazana je poruka “Snimanje...” i preostalo vrijeme.
3. Kad ste završili sa snimanjem, stisnite lijevu soft tipku [Spremiti].

- ! Napomena** Ako su sva mjesta bilježaka puna, morate izbrisati staru bilješku prije snimanja nove.

### Vidi listu

Telefon prikazuje naslove glasovnih bilježaka koje ste snimili pritiskom  u stanju čekanja. Možete ponovo pustiti da čujete ili izbrisati snimljenu bilješku.

- ▶ **Playback:** Omogućava vam da ponovo poslušate sve snimljene bilješke, počevši od najnovije.
- ▶ **Pisanje slikovne poruke:** Možete Napisati slikovnu poruku koristeći glasovnu bilješku.
- ▶ **Izbrisati:** Brisanje glasovne bilješke.
- ▶ **Izbrisati sve:** Omogućava vam da izbrisate sve bilješke. Stisnite lijevu soft tipku [Da] za potvrdu.

## Status memorije

Izbornik-7-7

Možete provjeriti trenutno stanje memorije svakog spremnika: slobodne memorije, tekstualne poruke, slikovne poruke, dolaznog spremnika, odlaznog spremnika, skica, slikovnih predložaka, poruka na SIM kartici, Push poruka Glasovni podsjetnik, Slike, slika, zvukova, igara i drugo.

Možete otići u svaki spremnik i postaviti ga.

## Verzija S/W

Izbornik-7-8

Možete provjeriti trenutnu šifru modela, šifru države, verziju softvera i šifru mreže vašeg telefona.



# Kamera

Telefon C3300 sve snimljene slike može i sačuvati. Nakon snimanja slike, možete ju odmah poslati i kao MMS (Multimedia Messaging Service) poruku.

- !** **Napomena** Ako je baterija gotovo prazna, upotreba značajke Kamera možda neće biti moguća.

## Snimanje slike

Izbornik-8-1

Pritisnite tipku izbornika i odaberite **Kamera** → **Snimanje slike** korištenjem navigacijskih tipki. Ili, modul kamere možete direktno otvoriti pritiskom tipke kamere u stanju pripravnosti. Modul kamere se otvara i možete vidjeti kadar koji će se snimiti.

Prije snimanja, možete podesiti sljedeće opcije.



▶ traka izbornika za opcije pregleda

### 1. Digitalni zoom ( ): x1, x2, x4

- !** **Napomena** Ljestvica maksimalnog zooma ovisi o rezoluciji.

48 x 48	nije dostupno
128 x 160	1x, 2x, 4x
320 x 240	1x, 2x
640 x 480	1x

### 2. Ton ( ): Boja( )/ Sepia( )/ Crno-bijelo ( )


### 3. Osvjetljenost ( ): -2, -1, 0, +1, +2

### 4. Timer ( ): Isključ en, 3 s, 5 s

### 5. Memorija ( ): Prikazuje trenutni status memorije.

- !** **Napomena** Ako je memorija puna, pojavljuje se poruka "Memorija puna" te spremanje slika nije moguće. Napravite mjesta brisanjem starih slika koje se nalaze u mapi **Moj album**.

 
### 6. Flash ( )

**7. Rezolucija** (  ): 48x48 (za imenik),  
128x160, 320x240, 640x480





**! Napomena** Za koriš tenje slike u imeniku, odaberite rezoluciju 48x48 (za imenik).


**8. Kvaliteta slike** (  ): Fina/ Normalna/ Osnovna.

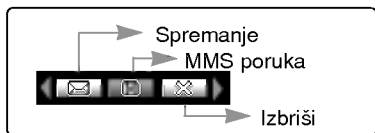1. Željenu opciju postavite u sredinu pomoću navigacijskih tipki lijevo/desno.
2. Odaberite željenu vrijednost pomoću navigacijskih tipki gore/dolje.
3. Nakon podešavanja svih postavki, usredotočite se na objekt kojeg želite snimiti te pritisnite tipku kamere ili tipku U redu. Nakon klika, slika je snimljena i pojavljuje se sljedeća traka izbornika.



**! Napomena** Ako je **Automatsko spremanje** [Izbornik-8-4-1] postavljeno na **Uključeno**, snimljena slika se automatski sprema bez prikaza ove trake izbornika. (Pogledajte str. 78.)

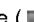4. Za spremanje slike, postavite (  ) u sredinu i pritisnite (  ). Ako sliku ne želite spremiti, postavite (  ) u sredinu i pritisnite (  ). Automatski možete pristupiti mapi Moj album pritiskom lijeve tipke [Moj album].

Osim toga, sliku možete poslati kao MMS poruku odabirom (  ). Više informacija o MMS porukama potražite na str. 49.

## Mod snimanja

Izbornik-8-2

Možete uživati u fotografiranju u različitim okvirima.

Dostupno je 7 okvira.

Pritisnite tipku izbornika i odaberite **Kamera** → **Načini snimanja** korištenjem navigacijskih tipki.

Prije snimanja, možete podesiti sljedeće opcije.



traka izbornika  
za opcije  
pregleda

 
1. **Okvir** ( ): Odaberite željeni okvir između 7 mogućih.
2. **Kvaliteta slike** ( ): Fina/ Normalna/ Osnovna.
3. **Digitalni zoom** ( ): x1, x2, x4
4. **Ton** ( ): Boja( )/ Sepia( ) /Crno-bijelo ( )
5. **Osvijetljenost** ( ): -2, -1, 0, +1, +2
6. **Timer** ( ): Isključ en, 3 s, 5 s
7. **Memorija** ( ): Prikazuje trenutni status memorije.

**! Napomena** Ako je memorija puna, pojavljuje se poruka "Memorija puna" te spremanje slika nije moguće. Napravite mjesta brisanjem starih slika koje se nalaze u mapi **Moj album**.

8. **Flash** ( )

1. Željenu opciju postavite u sredinu korištenjem navigacijskih tipki lijevo/desno.

2. Odaberite željenu vrijednost korištenjem navigacijskih tipki gore/dolje.
3. Nakon podešavanja svih postavki, usredotočite se na objekt kojeg želite snimiti te pritisnite tipku kamere ili tipku U redu. Nakon klika, slika je snimljena i pojavljuje se sljedeća traka izbornika.

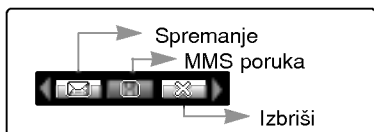

- ! Napomena** Ako je **Automatsko spremanje** [Izbornik-8-4-1] postavljeno na **Uključeno**, snimljena slika se automatski sprema bez prikaza ove trake. (Pogledajte str. 78.)

4. Za spremanje slike, postavite ( ) u sredinu i pritisnite ( ). Ako sliku ne želite spremiti, postavite ( ) u sredinu i pritisnite ( ). Osim toga možete sliku poslati kao MMS poruku odabirom ( ).

## Moj album

Izbornik-8-3

Pritisnite tipku izbornika i odaberite **Kamera** → **Moj album** korištenjem navigacijskih tipki.

Sve slike snimljene u načinu rada **Snimanje slika** i **Načini snimanja** spremljene su u ovoj mapi. Posljednja snimljena slika pojavljuje se prva.

Slike se dijele na: **Opće slike**, **Mod slike**, i **Slike za imenik**.

U izborniku Sve slike, možete vidjeti sve spremljene slike.

Sa slikama možete raditi sljedeće pritiskom lijeve tipke [Opcije].

- ▶ **Izbriši:** Briše odabranu sliku.

- ! Napomena** Za čišćenje mape Moj album, odaberite **Kamera** → **Postavke** → **Izbriši sve slike** [Izbornik-8-4-2].

- ▶ **Šalji kao MMS:** Odabranu sliku možete poslati kao MMS poruku.
- ▶ **Postavi kao pozadinu:** Sliku možete postaviti kao pozadinu
- ▶ **Preimenuj:** Možete promijeniti naziv odabrane slike.
- ▶ **Informacije:** Možete vidjeti naziv, rezoluciju, veličinu i datum slike.

### Postavke

Izbornik-8-4

Pritisnite tipku izbornika i odaberite **Kamera** → **Postavke** korištenjem navigacijskih tipki.

**Automatski spremi:** Ako ovo podesite na **Uključeno**, snimljene fotografije automatski se spremaju bez prikaza trake izbornika Spremi.

**Izbriši sve slike:** Ovaj izbornik koristite za brisanje svih slika. Ovu radnju trebate potvrditi.

### Status memorije

Izbornik-8-5

Pritisnite tipku izbornika i odaberite **Kamera** → **Status memorije** korištenjem navigacijskih tipki.



## Profili

Izbornik-9-1


U izborniku Profili možete promijeniti i prilagođavati tonove telefona za razne događaje, okruženja ili grupe pozivatelja.

Postoji šest postojećih profila: **Samo vibracija, Tih, Standardno, Glasno, Slušalica i Automobil**. Svaki profil se može prilagoditi.

Pritisnite tipku za izbornik (  ) i pomoću navigacijske tipke odaberite **Profili**.

### Mijenjanje profila

(Izbornik-9-1-1)

1. Prikazan je popis profila.
2. U popisu **Profili** izaberite profil koji želite uključiti i stisnite lijevu soft tipku [Odaberi] ili tipku OK (  ).
3. Zatim odaberite Uključiti.

### Postavka profila - prilagođavanje

(Izbornik-9-1-2)

Pronađite željeni profil u popisu Profili i odaberite **Prilagoditi**. Otvorit će se opcija postavke profila. Postavite opciju po svojoj želji.

1. **Vrsta upozorenja:** Postavite vrstu upozorenja za dolazne pozive.
2. **Ton zvona:** Odaberite s popisa željeno zvono. Pretražite popis pomoću navigacijskih tipki gore/dolje. Možete čuti željeni ton prije samog odabira.
3. **Glasnoća zvona:** Odredite glasnoću zvona.
4. **Vrsta upozorenja za poruku:** Odaberite vrstu upozorenja za primanje poruke.
5. **Zvuk poruke:** Odaberite upozoravajući ton za primanje poruke.
6. **Zvuk tipke:** Odaberite željeni ton za tipkovnicu.
7. **Glasnoća tipki:** Odredite glasnoću tona za tipkovnicu.
8. **Glasnoća zvuka:** Odredite glasnoću zvuka efekta.

**9. Glasnoća uklj/ isklj:** Odredite glasnoću tona kod uključivanja/ isključivanja telefona.


**10. Automatsko odgovaranje:** (samo u profilima Slušalica i Automobil) Možete uključiti opciju automatsko odgovaranje. Odaberite kad telefon automatski odgovara.

- ▶ **Off:** Isključivanje Automatskog odgovaranja
- ▶ **Nakon 5 sekundi:** Telefon će automatski odgovoriti nakon 5 sekundi.
- ▶ **Nakon 10 sekundi:** Telefon će automatski odgovoriti nakon 10 sekundi.

### **Postavka profila - Preimenuj** (Izbornik-9-1-3)

Možete preimenovati profil i dati mu koji god naziv želite. Profili Samo vibriranje, Slušalica i Auto ne mogu se preimenovati.

1. Za promjenu naziva profila, dođite do profila na popisu profila i odaberite Preimenovati.
2. Unesite željeno ime i stisnite tipku OK ili lijevu soft tipku [OK].

Stisnite tipku izbornika (  ) i odaberite **Postavke** pomoću navigacijskih tipki.

## Datum & vrijeme

Izbornik-9-2

Ova vam opcija omogućava promjenu trenutno prikazanog vremena i datuma. Sljedeće su opcije moguće.

### Postaviti datum

(Izbornik-9-2-1)

Odaberite ovu opciju za unos dana, mjeseca i godine. Možete promijeniti format datuma putem opcije izbornika **Format datuma**.

### Oblik datuma

(Izbornik-9-2-2)

DD/MM/GGGG (dan/mjesec/godina)

MM/DD/GGGG (mjesec/dan/godina)

GGGG/MM/DD (godina/mjesec/dan)

### Postaviti vrijeme

(Izbornik-9-2-3)

Odaberite ovu opciju za unos trenutnog vremena. Možete izabrati format vremena putem opcije izbornika **Format vremena**.

### Format vremena

(Izbornik-9-2-4)

24-satni

12-satni

### Postavke telefona

Izbornik-9-3

Mnoge funkcije vašeg telefona mogu se postaviti i prilagoditi vašim potrebama. Svim ovim funkcijama može se pristupiti putem izbornika **Postavke telefona**.

### Postavke zaslona

(Izbornik-9-3-1)

- ▶ **Pozadina:** Odaberite ovu opciju za postavljanje prikaza na LCD zaslonu u stanju čekanja.
- ▶ **Izbornik boja:** Vaš telefon omogućava 4 boje tema za izbornike. Odredite boju izbornika pritiskom lijeve soft tipke [Odabрати].
- ▶ **Pozdravna poruka:** Ako Uključite ovu opciju, možete urediti tekst koje će se prikazati u stanju čekanja.
- ▶ **Pozadinsko svjetlo:** Odaberite ovu opciju za uključivanje ili isključivanje pozadinskog svjetla na telefonu. Može se postići malo povećanje trajanja vremena čekanja/razgovora ako je pozadinsko svjetlo isključeno.
- ▶ **LCD kontrast:** Prilagodite kontrast LCD zaslona pomoću navigacijskih tipki lijevo/desno.
- ▶ **Info prozor:** Možete pogledati trenutno stanje odabranog izbornika prije samog otvaranja. Stanje je prikazano na dnu zaslona.

### Jezici

(Izbornik-9-3-2)

Možete odabrati jezik prikaza. Kad je opcija jezika postavljena na Automatsko, jezik se automatski bira ovisno o jeziku SIM kartice koja se koristi. Engleski je postavljen ako telefon ne podržava jezik sa SIM kartice.

## Postavke poziva

Izbornik-9-4

Za promjenu postavke preusmjeravanja poziva.

### Preusmjeravanje poziva

(Izbornik-9-4-1)

Kad je ova usluga uključena, možete usmjeriti vaše dolazne pozive na drugi broj, primjerice, na broj vaše glasovne pošte. Za detalje, obratite se svom mrežnom operateru. Odaberite jednu od opcija preusmjeravanja, primjerice, odaberite **Ako zauzeto** za preusmjeravanje poziva kad je vaš broj zauzet ili kad odbijete dolazni poziv.

Sljedeće su opcije moguće.

**Svi glasovni pozivi:** Preusmjeravanje svih poziva.

**Ako je zauzeto:** Preusmjeravanje poziva kad je telefon zauzet.

**Ako nema odgovora:** Preusmjeravanje poziva na koje ne odgovorite.

**Ako je nedostupno:** Preusmjeravanje poziva kad je telefon isključen ili van dosega mreže.

**Svi data pozivi:** Preusmjeravanje na broj povezan s računalom.

**Sve faks pozivi:** Preusmjeravanje na broj povezan s faksom.

Svaka od opcija ima sljedeći izbornik:

▶ **Uključi:** Uključuje odabranu uslugu.

- **Centar za glasovnu poštu:** Prosljeđuje na centar poruka. Ova funkcija se ne odnosi na Sve podatkovne pozive i Sve faks pozive.

- **Na drugi broj:** Unesite broj na koji želite preusmjeriti poziv.



- **Na glavni broj:** Nakon unosa 5 najčešće korištenih brojeva telefona, pozive možete na njih preusmjeriti sve pozive.

- ▶ **Otkazati:** Otkaz odabranog preusmjerenja.
- ▶ **Pogledati status:** Možete provjeriti status usluge.

**Otkazati sve:** Otkaz svih postavki preusmjerenja poziva.

### Način odgovaran (Izbornik-9-4-2)

Odaberite način na koji želite odgovarati na pozive.

- ▶ **Otvaranjem poklopca:** Kad telefon zazvoni, možete odgovoriti samim otvaranjem poklopca.
- ▶ **Bilo koja tipka:** Kad telefon zazvoni, možete odgovoriti pritiskom na bilo koju tipku osim tipke  i desne soft tipke ().
- ▶ **Samo tipka Šalji:** Možete odgovoriti na poziv samo pritiskom tipke šalji.

### Šalji moj broj (Izbornik-9-4-3)

Ova usluga omogućava vam da izaberete želite li da vaš broj bude prikazan (Uklj) ili sakriven (Isklj) na zaslonu telefona osobe koju zovete. Odaberite **Mrežna postavka** za resetiranje telefona na postavku koju ste pristali kod svog davatelja usluga.

### Poziv na čekanju (Izbornik-9-4-4)

Mreža će vas obavijestiti o novom dolaznom pozivu dok već imate jedan aktivan razgovor. Odaberite Uključiti za uključivanje poziva na čekanju, **Otkazati** za isključivanje poziva na čekanju, ili **Pogledati status** za provjeru je li usluga uključena ili nije.

**Minutni podsjetnik** (Izbornik-9-4-5)

Kad je postavljen na Uklj, telefon će se oglasiti s 'bip' svake minute tijekom odlaznog poziva da vas obavijesti o vremenskom trajanju poziva.

**Autom. ponovno zvanje** (Izbornik-9-4-6)

Odaberite Uklj i telefon će naviše četiri puta pokušati spojiti poziv nakon prvog neuspješnog upućivanja poziva.

**Zatvorena korisnička grupa**  
(Ovisi o mreži) (Izbornik-9-4-7)

Ograničite korištenje telefona na brojeve koji pripadaju određenoj grupi korisnika. Kad je ova funkcija uključena, svaki odlazni poziv povezan je s indeksom grupe. Ako je indeks grupe određen, koristi se za sve odlazne pozive. Ako nijedan indeks grupe nije određen, mreža će koristiti prioritetni indeks (određeni indeks pohranjen na mreži).

- ▶ **Početna postavka:** Uključuje početnu grupu u skladu s mrežnim operaterom.
- ▶ **Postaviti:** Odaberite ovu opciju za odabir ZGK indeksa.
- ▶ **Urediti:** Možete urediti ZGK naziv i ZGK indeks.
- ▶ **Izbrisati:** Brisanje odabrane ZGK.
- ▶ **Izbrisati sve:** Brisanje svih ZGK-a.

### Sigurnosne postavke

Izbornik-9-5

Razne se zaporkе koriste za zaštitu određenih funkcija vašeg telefona. Pogledajte stranice 24-25 o raznim zaporkama.

### Zahtjev-PIN koda

(Izbornik-9-5-1)

Kad je funkcija **Zahtjev-PIN koda** uključena, morate unijeti svoj PIN svaki put kad uključite telefon. Svaka osoba koja nema vaš PIN neće moći koristiti vaš telefon bez vašeg odobrenja.

- ❗ **Napomena** Prije isključivanja funkcije PIN kod zahtjev, morate unijeti svoj PIN kod.

Sljedeće su opcije moguće:

- **Uklj:** Morate unijeti PIN kod svaki put kad uključite telefon.
- **Isklj:** Kad ga upalite, telefon se izravno spaja s mrežom.

### Zaključavanje

(Izbornik-9-5-2)

Kad je funkcija Zaključavanje telefona uključena, telefon je zaključan i morate unijeti zaporku telefona svaki put kad ga uključite.

Zaporka je tvornički postavljena na **0000**. Za promjenu zaporkе telefona, pogledajte opciju izbornika **Promjena kodova - Sigurnosni kod** (Izbornik-9-5-5-1). Kad unesete točnu zaporku, možete koristiti telefon sve dok ga ne isključite.

Sljedeće su opcije moguće:

#### 1 Po uključanju

- ▶ **Uklj:** Kad upalite telefon, od vas se traži da unesete zaporku telefona.
- ▶ **Isklj:** Ne trebate unositi zaporku telefona kod uključanja.
- ▶ **Automatski:** Telefon će tražiti da unesete sigurnosni kod samo kad promijenite SIM karticu.

## 2 Odmah

- ▶ Nakon unosa točnog sigurnosnog koda, telefon će se zaključati nakon odlaska u stanje čekanja. Ako želite isključiti zaključavanje telefona, trebate unijeti točan sigurnosni kod nakon pritiska desne soft tipke. Ako isključite telefon u zaključanom stanju, kad ga ponovo uključite, on će i dalje biti zaključan.

## Zabrana poziva (Ovisno o mreži) (Izbornik-9-5-3)

Zabrana poziva omogućava vam ograničavanje odlaznih i dolaznih poziva. Za ovu funkciju trebate zaporku zabrane koju možete dobiti od vašeg davatelja usluga.

Sljedeće su opcije moguće:

- ▶ **Svi izlazni:** Pozivi se ne mogu upućivati.
- ▶ **Međunarodni:** Ne mogu se upućivati međunarodni pozivi.
- ▶ **Međunarodni /roaming:** Kad ste u inozemstvu, pozivi se mogu upućivati samo na brojeve telefona te zemlje i na brojeve telefona vaše države.
- ▶ **Svi dolazni:** Pozivi se ne mogu primati.
- ▶ **Dolazni /roaming:** Pozivi se ne mogu primati kad koristite telefon van vaše domaće mreže.
- ▶ **Otkazi sve:** Sve zabrane poziva su isključene; pozivi se mogu i primati i upućivati.
- ▶ **Promjena šifre:** Odaberite ovu opciju kad želite promijeniti zaporku zabrane dobivenu od vašeg davatelja usluga za korištenje ove opcije. Morate prvo unijeti trenutnu zaporku, a zatim možete odrediti novu. Kad ste unijeli novu zaporku, zatražit će se od vas da je unesete još jednom i potvrdite je.
- ❗ **Napomena** Za upotrebu usluge Zabrana poziva, morate unijeti lozinku mreže. Kod zabrane poziva moguće je zvati samo hitne brojeve na nekim mrežama.

### Fiksni broj (Fixed dial number - FND)

(Ovisi o SIM kartici)

(Izbornik-9-5-4)

Ako je vaša SIM kartica podržava, koristite ovu funkciju za ograničavanje svojih odlaznih poziva na odabrane telefonske brojeve,. PIN2 kod je potreban.

Sljedeće su opcije moguće:

- ▶ **Aktiviraj:** Odaberite ovu opciju za upućivanje poziva samo brojevima spremljenima u telefonskom imeniku. Morate unijeti PIN2 kod.
- ▶ **Otkazati:** Omogućava vam da pozovete bilo koji broj.
- ▶ **Popis brojeva:** Odaberite ovu opciju za pregled brojeva koji su spremljeni u fiksnom biranju.
- ❗ **Napomena** Nemaju sve SIM kartice PIN2. Ako ga vaša kartica nema, ova opcija neće biti prikazana.

### Promjeni kod

(Izbornik-9-5-5)

Funkcija Promjena kodova omogućava vam promjenu trenutne zaporke. Morate prvo unijeti trenutnu zaporku, a zatim odrediti novu.

Odaberite ovu opciju za pristup kodovima: **Sigurnosni kod, PIN2 kod.**

- ❗ **Napomena** PIN: Osobni Identifikacijski Broj (Personal Identification Number)

## Postavke mreže

Izbornik-9-6

Funkcija Postavke mreže omogućava vam da u roamingu (van vaše domaće mreže) odaberete mrežu automatski, ručno ili izaberete iz izbora željenih mreža.

- ! Napomena** Možete odabrati drugu mrežu osim svoje samo ako ima valjani ugovor s vašom domaćom mrežom.

### Automatski

(Izbornik-9-6-1)

Odaberite ovu opciju za postavljanje telefona na automatsko traženje i odabir mobilne mreže dostupne u trenutnom području. Telefon će se vratiti na **Automatski** ako ga isključite.

### Ručno

(Izbornik-9-6-2)

Ako želite ručno odabrati željenu mrežu s popisa mreža. Ako se veza s ručno odabranom mrežom prekine, telefon će se oglasiti 'tonom pogreške' i zatražiti vas da opet odaberete mrežu. Odabrana mreža mora imati roaming ugovor s vašom domaćom mrežom, to jest, operaterom čija je SIM kartica u vašem telefonu. Telefon će vam omogućiti da odaberete drugu mrežu ako se on sam ne uspije povezati s odabranom mrežom. Ako isključite telefon, on će se prebaciti na opciju **Automatski**.

### Prioritetno

(Izbornik-9-6-3)

Možete odrediti popis željenih mreža na koje se uređaj prvo treba pokušati spojiti, prije registriranja na neke druge mreže. Popis se stvara iz liste već upisanih poznatih mreža.

### GPRS postavke

Izbornik-9-7

GPRS (General Packet Radio Service) je tehnologija koja omogućava mobilnim telefonima slanje i primanje podataka preko mobilnih mreža. GPRS je nositelj podataka koji omogućava bežični pristup podacima mreže poput Interneta.

Prije nego što možete koristiti GPRS tehnologiju:

- Trebate se pretplatiti na GPRS uslugu. Za dostupnost i pretplatu GPRS usluge, obratite se svom mrežnom operateru ili davatelju usluga.
- Trebate pohraniti GPRS postavke za aplikacije koji se koriste preko GPRS-a.

### Uključiti

(Izbornik-9-7-1)

Ako odaberete **Uključiti** i povezani ste s mrežom koja podržava GPRS, telefon će se spojiti na GPRS mrežu i slanje kratkih poruka bit će obavljeno preko GPRS-a. Također i pokretanje aktivnog paketa podatkovne veze, primjerice, slanje i primanje e-pošte, brže je.

### Po potrebi

(Izbornik-9-7-2)

Ako odaberete Po potrebi, telefon će koristiti GPRS vezu samo ako započnete aplikaciju ili radnju koja je zahtijeva. GPRS veza se prekida ako više nije potrebna nekoj aplikaciji.

- !** **Napomena** Ako nema GPRS veze i izabrali ste Automatski odabir, telefon će stalno pokušavati stupiti u vezu.

## Internet

Izbornik-9-8


Možete pristupiti raznim WAP (Wireless Application Protocol) uslugama poput: bankinga, vijesti, vremenske prognoze i obavijesti o letu. Te su usluge posebno osmišljene za mobilne telefone i održavaju ih WAP davatelji usluga.

Provjerite dostupnost WAP usluga, cijene i tarife kod vašeg mrežnog operatera i/ili davatelja usluga čiju uslugu želite koristiti. Davatelji usluga će vam također dati upute kako koristiti njihove usluge.

Za pokretanje pretraživača iz stanja čekanja, stisnite i držite tipku



Kad se povežete, na zaslonu će se pojaviti početna stranica. Sadržaj ovisi o davatelju usluga.

Za izlaz iz pretraživača u bilo koje vrijeme, stisnite tipku (  ). Telefon će se vratiti na stanje čekanja.

### Upravljanje WAP pretraživačem

Možete pretraživati Internet putem ili tipki telefona ili izbornika WAP pretraživača.

### Pretraživanje putem tipki telefona

Kad pretražujete Internet, tipke telefona imaju drukčiju funkciju od onih kod običnog rada telefona.

Tipka	Objašnjenje
navigacijske tipke gore/dolje	prolazi po svakoj liniji sadržaja
tipka C	vraća na prethodnu stranicu
tipka OK	odabire opcije i potvrđuje radnje

### Pretraživanje pomoću izbornika WAP pretraživača

Postoje razne opcije izbornika raspoložive kod pretraživanja Mobile Web-a.

- !** **Napomena** Izbornici WAP pretraživača mogu se razlikovati, ovisno o vašoj inačici pretraživača.

### Početna stranica

(Izbornik-9-8-1)

Povežite se s početnom stranicom. Početna stranica je web-stranica koja je postavljena u aktivnom profilu. Odredio ju je davatelj usluga ako je vi sami niste definirali u aktivnom profilu.




### Zabilješke

(Izbornik-9-8-2)

Ovaj izbornik dopušta spremanje URL adresa omiljenih web-stranica za kasniji lakši pristup.

Stvaranje web zabilješke

1. Pritisnite lijevu tipku [Opcije].
2. Odaberite Dodaj novu i pritisnite tipku U redu.
3. Nakon unosa željene URL adrese i naslova, pritisnite tipku U redu.

\* **Savjet:** Za unos simbola koristite tipku  i tipku .  
Za unos ".", pritisnite tipku .

Nakon odabira željene web zabilješke, dostupne su sljedeće opcije.

- ▶ **Spoji:** Spaja se na željenu web zabilješku.
- ▶ **Dodaj novo:** Odaberi za stvaranje nove web zabilješke.
- ▶ **Uredi:** Možete urediti URL adresu i naslov odabrane web zabilješke.
- ▶ **Izbriši sve:** Briše sve web zabilješke.

## Profili

(Izbornik-9-8-3)

Profil je mrežna informacija koja se koristi za povezivanje s Internetom.

### 1. t-zones

### 2. t-zones business

### 3. t-zones GPRS

### 4. t-zones CSD

Svaki profil ima sljedeće pod-izbornike:

- ▶ **Uključi:** Uključivanje određenog profila.
- ▶ **Postavke:** Odaberite ovu opciju za uređenje i promjenu WAP postavki za odabrani profil.
  - **Početna stranica:** Ova vam postavka omogućava unos adrese (URL) stranice koju želite koristiti kao početnu. Ne trebate upisivati http:// ispred svake URL adrese jer će ga WAP pretraživač automatski dodati.
  - **Nositelj:** Možete odrediti nositelja usluge podataka.
    - 1 Data
    - 2 GPRS
  - **Postavke podataka:** Pojavljuje se samo ako odaberete Postavke podataka kao nositelja.
- IIP adresa:** Unesite IP adresu WAP gatewaya kojem želite pristupiti.
- Biranje broja:** Unesite telefonski broj za pristup WAP gatewayu.
- Korisnički ID:** Vaš identitet za poslužitelja (NE za WAP gatewaya).
- Zaporka:** Zaporku zahtijeva vaš poslužitelj (NE WAP gateway) za vašu identifikaciju.

**Vrsta poziva:** Odaberite vrstu podatkovnog poziva: analogna ili digitalna (ISDN)

**Vrijeme prijenosa:** Morate unijeti razdoblje trajanja prijenosa. Nakon unosa, WAP navigacijska usluga bit će nedostupna ako neki podaci nisu uneseni ili preneseni.az Ön azonosításához.

- **GPRS postavke:** Postavke su dostupne samo kad je GPRS izabran kao nositelj podataka.

**Korisnički ID:** Identificiranje korisnika za vašeg APN poslužitelja.

**Zaporka:** Zaporka potrebna za pristup vašem APN poslužitelju.

- **Vrsta veze:** Opcije za vrstu veze su trenutna ili stalna i ovise o gatewayu kojeg koristite.

### **Kontinuirano**

Potvrđeni mehanizam dostave ali proizvodi veći promet mreže.

### **Privremeno**

Nepotvrđena (bez povezivanja) usluga.

- **Proxy postavke**

**IP adresa:** Unesite IP adresu proxy poslužitelja kojem želite pristupiti.

**Ulaz:** Unesite proxy port

- **DNS postavke**

**Glavni server:** Unesite IP adresu primarnog DNS poslužitelja kojem želite pristupiti.

**Sporadni server:** Unesite IP adresu drugog DNS poslužitelja kojem želite pristupiti.

- **Sigurnosne postavke:** Prema korištenju gateway porta, možete izabrati ovu opciju kao Uključiti ili Isključiti.
- **Prikaz sliku:** Možete odabrati želite li da su slike na WAP kartama prikazane ili ne.

▶ **Preimenovati:** Možete promijeniti ime profila.

▶ **Dodati novi:** Možete dodati novi profil.

## **Idi na URL**

(Izbornik-9-8-4)

Možete se povezati izravno sa stranicom koju želite. Nakon unosa određene URL adrese, pritisnite tipku U redu.

## **Postavka memorije**

(Izbornik-9-8-5)

Informacija ili usluge kojima ste pristupili spremljene su u cache memoriju na telefonu.

### **Čišćenje cache memorije**

Uklanja sav sadržaj spremljen u cacheu.

### **Provjera cache memorije**

Postaviti vrijednost da li se povezivanje odvija preko cachea ili ne.

- ❗ **Napomena** Cache je buffer memorija koja se koristi za trenutno spremanje podataka.

### **Cookies postavke**

(Izbornik-9-8-6)

Informacija ili usluge kojima ste pristupili spremljene su u cache memoriju na telefonu.

### **Izbriši cookies**

Uklanja sav sadržaj spremljen u zabilješki.

### **Provjeriti cookies**

Provjeriti koristi li se zabilješka ili ne.

### **Certifikat zaštite**

(Izbornik-9-8-7)

Prikazuje se popis dostupnih certifikata.

- ▶ **Odobrenja:** Možete pogledati popis odobrenih potvrda koje su spremljene na vašem telefonu.
- ▶ **Osobno:** Možete pogledati popis osobnih potvrda koje su spremljene na vašem telefonu.

### **Reset profila**

(Izbornik-9-8-8)

Možete resetirati profile na početne, tvorničke postavke.

### **Verzija pretraživača**

(Izbornik-9-8-9)

Prikazana je verzija WAP pretraživača.

## Poništi postavke

Izbornik-9-9

Možete resetirati svoj telefon na njegove tvorničke postavke. Da biste to učinili, postupite ovako.

1. Odaberite opciju izbornika **Reset postavki**.
2. Morate unijeti sigurnosnu šifru od 4 znamenke.


**!** **Napomena** Sigurnosni kod je postavljen na 0000.  
Za promjenu sigurnosnog koda pogledajte stranicu 88.






## Pitanja i odgovori

Molimo provjerite je li problem koji imate s telefonom objašnjen ovdje prije odnošenja telefona na popravak ili poziva ovlaštenom serviseru.


**P** Kako mogu pogledati popis odlaznih, dolaznih i propuštenih poziva?

**O** Stisnite tipku  .


**P** Kako mogu obrisati sve pozive?

**O** Stisnite lijevu soft tipku, a zatim    .

**P** Kako mogu vidjeti sve brojeve spremljene u memoriji?

**O** Pritisnite gornju navigacijsku tipku  .


**P**  ne silazi sa zaslona.

**O** Provjerite jeste li u području primanja mreže. Ako i dalje vidite simbol  , isključite telefon i pričekajte 2 minute prije ponovnog uključivanja. Ako nema promjene, prebacite se na drugu mrežu i provjerite opet.

**P** Veza je slaba i na nekim mjestima se ne čuje dobro.

**O** U nekim područjima jačina signala može biti znatno različita. Pokušajte se pomaknuti na drugo područje. Zakrčenost mreže zbog velikog prometa također može utjecati na kvalitetu veze i stabilnost poziva.

- P** Veza je slaba čak i kad se ostvari.
- O** U nekim područjima jačina signala može biti znatno različita. Pokušajte se pomaknuti na drugo područje. Zakrčenost mreže zbog velikog prometa također može utjecati na kvalitetu veze i stabilnost poziva.
- P** LCD se ne pali.
- O** Uklonite i zamijenite bateriju i uključite telefon. Ako se telefon i dalje ne uključuje, napunite bateriju i pokušajte ponovo.
- P** Eho se čuje tijekom veze s određenim telefonom u određenom području.
- O** To se zove "Eho fenomen". Pojavljuje se kad je glasnoća previsoka ili je uzrokovan nekim posebnim uređajima (polu-elektronskom telefonskom izmjenom) uređaja s druge strane veze.
- P** Telefon se zagrijava.
- O** Tijekom dugih telefonskih razgovora ili ako se dugo igra ili je dugo spojen na Internet, telefon se može zagrijati. To je posve normalno i nema učinka na rad proizvoda.
- P** Zvono ne zvoni, ili lampica ili LCD samo treperi.
- O** Telefon je postavljen na 'Samo vibracija' ili 'Tiho' u izborniku Profili. Odaberite profil 'Normalno' ili 'Glasno'.

- P** Vrijeme čekanja postaje sve kraće.
- O** Baterija je oslabila. Kad baterija traje upola svog originalnog vremena, treba je zamijeniti. Upotrijebite samo originalne zamjenske dijelove.
- P** Vrijeme razgovora postalo je kratko.
- O** Ako je trajanje baterije kratko, mogući je uzrok okolina korisnika ili veliki obim poziva ili slabi signal.
- P** Ne bira se broj kad pozovem kontakt.
- O** Provjerite jesu li telefonski brojevi točno spremljeni, pomoću funkcije Naći kontakt. Ako je potrebno, ponovno ih spremite.
- P** Ne mogu vas dobiti.
- O** Je li vaš telefon uključen (  držali ste dulje od 3 sekunde)đ Jeste li odabrali točnu mrežuđ Jeste li možda postavili zabranu dolaznih pozivađ
- P** Ne mogu naći zaključavanje telefona, PIN ili PUK kod, ili zaporkuđ
- O** Tvornički postavljeno zaključavanje telefona jest '0000'. Ako zaboravite ili izgubite kod zaključavanja, obratite se svom dobavljaču. Ako ste zaboravili ili izgubili PIN ili PUK kod, ili niste uopće te kodove dobili, obratite se svom davatelju usluga.



## Dodatna oprema

Postoji razna dodatna oprema raspoloživa za vaš mobilni telefon. Možete ih odabrati prema svom osobnim komunikacijskim potrebama. Posavjetujte se sa svojim dobavljačem.

### Punjač

Ovaj punjač omogućava vam punjenje kod kuće ili u uredu.



### Baterija

Standardna baterija.



### Slušalica

Omogućava razgovaranje bez ruku. Sadrži mikrofonski i slušalicu za jedno uho.



- ! Napomena**
- Uvijek koristite originalne LG dodatke. U suprotnome gubite jamstvo.
  - Dodatna oprema može biti drugačija za druga područja; molimo, provjerite kod svoje servisne tvrtke ili agenta za daljnje informacije.



## Tehnički podaci

### Općenito

**Naziv proizvoda :** C3300

**Sustav :** GSM900 / DCS1800

### Temperatura okoline

**Maks. :** +55°C

**Min. :** -10°C

## IZJAVA O SUKLADNOSTI

*U skladu s člankom 98. stavak 1. Zakona o telekomunikacijama (NN 122/2003)*

### ECOS TRGOVINA d.o.o.

ADRESA: Škorpiškova 22, 10 090 Zagreb  
MATIČNI BROJ SUBJEKTA (MBS): 080284266

***Pod punom odgovornošću izjavljujemo da je R&TT oprema***

OPIS OPREME:	GSM mobilni telefon
TIPSKA OZNAKA OPREME:	C3300
MARKETINŠKO IME OPREME:	LG C3300
PROIZVOĐAČ OPREME:	LG Electronics

***sukladna s bitnim zahtjevima iz članka 98. stavak 3. Zakona o telekomunikacijama, odnosno primjenjenim normama:***

- 1.) EN 301 489-7:2002
- 2.) EN 60950-1:2001
- 3.) EN 50360 : 2001
- 4.) 3GPP TS 51.010-1, V5.5.0 : 2003

Zagreb, 18. 01. 2005

*Mjesto i datum*

Saša Vuksanović

*Žig i potpis odgovorne osobe*



Obrazac AG02002



# Declaration of Conformity



LG Electronics

## Supplier Details

**Name**

LG Electronics Inc

**Address**

LG Electronics Inc, LG Kang-nam Tower  
679, Yoksam-dong, Kangnam-gu, Seoul, Korea

## Product Details

**Product Name**

GSM 900 / GSM 1800 Dual Band Terminal Equipment

**Model Name**

C3300

**Trade Name**

LG

## Applicable Standards Details

**R&TTE Directive 1999/5/EC**

EN 301 489-7 : 2002

EN 60950-1 : 2001

EN 50360 : 2001

3GPP TS 51.010-1, V5.6.0 : 2004

Selection according to GCF-CC. V3.12.0 including requirements of EN 301 511

## Supplementary Information

The conformity to above standards is verified by 7Layers AG GmbH with Certificate No.(04-510078) and GSM test report (no.4\_LGE\_1903\_GSM\_1), EMC test report(no. 4\_LGE-1903\_GSM\_EMCa), safety test report(no. S40048) and SAR test report(no. 6620\_392b)

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives


Name

Issued Date

Jin Seog, Kim / Director

Feb 20, 2005

LG Electronics Inc. Amsterdam Office  
Veluwezoom 15, 1327 AE Almere, The Netherlands  
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

  
Signature of representative



*LG Electronics*

## JAMSTVENI LIST

Ime, adresa uvoznika:

**ECOS**

ECOS TRGOVINA d.o.o.

Škorplova 22,

10 000 Zagreb

Broj.:

CR000001

MODEL: C3300

Serijski br.:

IMEI br.:

Maloprodajno mjesto ispunjavanja:

Datum kupovine uređaja: \_\_\_\_\_ dan \_\_\_\_\_ mjesec 200\_\_ godine





.....  
Potpis (pečat)

Podaci o kupcu:

### OPĆI UVJETI JAMSTVA

1. Jamstvo za ovaj aparat je 12 mjeseci od datuma prodaje potrošaču.
2. Ako u jamstvenom roku popravak traje dulje od 10 dana od dana prijave kvara jamstveni rok se produžava za ono vrijeme koliko je trajao popravak.
3. Ako u jamstvenom roku uređaj nije popravljen za 15 dana od dana predaje uređaja na prodajnom mjestu, isti ćemo zamijeniti novim.
4. Jamstvo ne obuhvaća kvarove koji su nastali kao posljedica nepravilnog rukovanja, oštećenja prouzrokovana premskim ili previsokim naponom, kvarovi prouzrokovani višom silom kao i kvarovi mehaničke prirode (lomovi plastičnih i metalnih dijelova kućišta).
5. Davanjem uređaja na popravak neovlaštenim radionicama ili osobama, kupac gubi pravo na jamstvo.
6. Nakon popravka servis ima pravo zadržati samo jedan (1) servisni kupon.
7. Servisne usluge i rezervni dijelovi bit će osigurani najmanje sedam godina nakon povlačenja aparata iz prodaje.

Prilikom kupovine provjerite da li je jamstveni list pravilno popunjen i ovjeren.  
Čuvajte račun za kupljeni proizvod jer jamstvo vrijedi samo uz račun.

<b>Kontrolni list</b> Datum prijave kvara: ___ dan ___ mjesec ___ 200 ___ godine Datum završenog popravka: ___ dan ___ mjesec ___ 200 ___ godine Uzrok kvara: ___ Metoda popravka: ___ Br. radnog naloga: ___ ASC kod: ___	<b>Jamstveni kupon</b> Model: _____ Serijfski br. uređaja: _____ Datum kupovine: ___ dan ___ mjesec ___ 200 ___ godina Maloprodajno mjesto: _____  _____ mjesto pečata
<b>Kontrolni list</b> Datum prijave kvara: ___ dan ___ mjesec ___ 200 ___ godine Datum završenog popravka: ___ dan ___ mjesec ___ 200 ___ godine Uzrok kvara: ___ Metoda popravka: ___ Br. radnog naloga: ___ ASC kod: ___	<b>Jamstveni kupon</b> Model: _____ Serijfski br. uređaja: _____ Datum kupovine: ___ dan ___ mjesec ___ 200 ___ godina Maloprodajno mjesto: _____  _____ mjesto pečata
<b>Kontrolni list</b> Datum prijave kvara: ___ dan ___ mjesec ___ 200 ___ godine Datum završenog popravka: ___ dan ___ mjesec ___ 200 ___ godine Uzrok kvara: ___ Metoda popravka: ___ Br. radnog naloga: ___ ASC kod: ___	<b>Jamstveni kupon</b> Model: _____ Serijfski br. uređaja: _____ Datum kupovine: ___ dan ___ mjesec ___ 200 ___ godina Maloprodajno mjesto: _____  _____ mjesto pečata
<b>Kontrolni list</b> Datum prijave kvara: ___ dan ___ mjesec ___ 200 ___ godine Datum završenog popravka: ___ dan ___ mjesec ___ 200 ___ godine Uzrok kvara: ___ Metoda popravka: ___ Br. radnog naloga: ___ ASC kod: ___	<b>Jamstveni kupon</b> Model: _____ Serijfski br. uređaja: _____ Datum kupovine: ___ dan ___ mjesec ___ 200 ___ godina Maloprodajno mjesto: _____  _____ mjesto pečata

Važna obavijest uvoznika:

***CENTRALNI SERVIS:***

**ECOS TRGOVINA d.o.o.  
Škorpičova 22  
10 000 ZAGREB**

**Tel: 01/ 3795 960**



**C3300 User Guide**

**English**



## C3300

### Table of Contents

<b>Introduction</b> .....	<b>8</b>	PUK2 code .....	25
<b>Guidelines for safe and efficient use</b> .....	<b>9</b>	Security code .....	25
<b>C3300 features</b> .....	<b>14</b>	<b>Barring password</b> .....	<b>25</b>
<b>Parts of the phone</b> .....	<b>14</b>	<b>General functions</b> .....	<b>26</b>
<b>Display information</b> .....	<b>19</b>	<b>Making and answering calls</b> .....	<b>26</b>
<b>Getting started</b> .....	<b>20</b>	Making a call .....	26
Installing the SIM card and the handset battery .....	20	Making a call using the send key . . .	26
Charging the battery .....	22	Making an international call .....	26
Disconnecting the adapter .....	23	Ending a call .....	26
<b>Turning your phone on and off</b> . . .	<b>24</b>	Making a call from the phonebook . .	27
Turning your phone ON .....	24	Adjusting the volume .....	27
Turning your phone OFF .....	24	Answering a call .....	27
<b>Access codes</b> .....	<b>24</b>	Switching quickly to	
PIN code .....	24	Vibrate only mode .....	28
PIN2 code .....	25	Signal strength .....	28
PUK code .....	25	Entering text .....	28
		Changing the text input mode . . . .	29
		<b>Contacts</b> .....	<b>32</b>

In call menu .....	32	Write text message .....	47
During a call .....	32	Write Multimedia messages .....	49
<b>Multiparty or conference calls</b> .....	<b>34</b>	Inbox .....	51
Making a second call .....	34	Outbox .....	52
Ending a multiparty call .....	35	Drafts .....	53
<b>Menu tree</b> .....	<b>36</b>	Listen to voice mail .....	54
<b>Selecting functions and options</b> ..	<b>38</b>	Info message .....	54
<b>Special</b> .....	<b>39</b>	Read .....	54
<b>My Media</b> .....	<b>40</b>	Topics .....	55
<b>Photos</b> .....	<b>40</b>	<b>Templates</b> .....	<b>55</b>
<b>Pictures</b> .....	<b>40</b>	Text templates .....	55
<b>Sounds</b> .....	<b>40</b>	Multimedia templates .....	56
<b>Games &amp; more</b> .....	<b>40</b>	Signature .....	57
<b>Call register</b> .....	<b>42</b>	<b>Settings</b> .....	<b>57</b>
<b>Missed calls</b> .....	<b>42</b>	Text message .....	57
<b>Received calls</b> .....	<b>42</b>	Multimedia message .....	58
<b>Dialled calls</b> .....	<b>43</b>	Voice mail centre .....	59
<b>Delete recent calls</b> .....	<b>43</b>	Info message .....	59
<b>Call charges</b> .....	<b>44</b>	Push message .....	60
Call duration .....	44	<b>t-zones</b> .....	<b>61</b>
Call costs .....	45	<b>Contacts</b> .....	<b>62</b>
Settings .....	45	<b>Search</b> .....	<b>62</b>
<b>GPRS information</b> .....	<b>46</b>	<b>Add new</b> .....	<b>63</b>
Call duration .....	46	<b>Caller groups</b> .....	<b>64</b>
Data volumes .....	46	<b>Speed dial</b> .....	<b>64</b>
<b>Messages</b> .....	<b>47</b>	<b>Settings</b> .....	<b>65</b>
		Set memory .....	65
		Search by .....	65



View options	65	Customising profiles	
		- Rename	78
<b>Copy all</b>	<b>65</b>	<b>Date &amp; Time</b>	<b>79</b>
<b>Delete all</b>	<b>66</b>	Set date	79
<b>Information</b>	<b>66</b>	Date format	79
<b>Organiser</b>	<b>67</b>	Set time	79
<b>Alarm clock</b>	<b>67</b>	Time format	79
<b>Scheduler</b>	<b>68</b>	<b>Phone settings</b>	<b>80</b>
<b>Calculator</b>	<b>69</b>	Display settings	80
<b>Unit converter</b>	<b>69</b>	Language	80
<b>World time</b>	<b>70</b>	<b>Call settings</b>	<b>81</b>
<b>Voice recorder</b>	<b>70</b>	Call divert	81
Record	70	Answer mode	82
View list	71	Send my number	82
<b>Memory status</b>	<b>71</b>	Call waiting	82
<b>S/W version</b>	<b>71</b>	Minute minder	82
<b>Camera</b>	<b>72</b>	Auto redial	82
<b>Take photo</b>	<b>72</b>	Closed user group	83
<b>Take in modes</b>	<b>74</b>	<b>Security settings</b>	<b>84</b>
<b>My photos</b>	<b>75</b>	PIN code request	84
<b>Settings</b>	<b>76</b>	Phone lock	84
<b>Memory status</b>	<b>76</b>	Call barring	85
<b>Settings</b>	<b>77</b>	Fixed dial number	86
<b>Profiles</b>	<b>77</b>	Change codes	86
Changing the profile	77	<b>Network settings</b>	<b>87</b>
Customising profiles		Automatic	87
- Personalise	77		

Manual .....	87
Preferred .....	87
<b>GPRS setting .....</b>	<b>88</b>
Power on .....	88
When needed .....	88
<b>Internet .....</b>	<b>89</b>
Home .....	90
Bookmarks .....	90
Profiles .....	91
Go to URL .....	93
Cache settings .....	93
Cookies settings .....	94
Security certification .....	94
Reset profiles .....	94
Browser version .....	94
<b>Reset settings .....</b>	<b>94</b>
<b>Q&amp;A .....</b>	<b>95</b>
<b>Accessories .....</b>	<b>98</b>
<b>Technical data .....</b>	<b>99</b>



# Introduction

---

Congratulations on your purchase of the advanced and compact C3300 mobile phone, designed to operate with the latest digital mobile communication technology.



This user guide contains important information on the use and operation of this phone. Please read all the information carefully for optimal performance and to prevent any damage to or misuse of the phone. Any changes or modifications not expressly approved in this user's guide could void your warranty for this equipment.



## Guidelines for safe and efficient use

Read these simple guidelines. Breaking the rules may be dangerous or illegal. Further detailed information is given in this manual.

### Exposure to radio frequency energy

#### Radio wave exposure and Specific Absorption Rate (SAR) information

This mobile phone model C3300 has been designed to comply with applicable safety requirement for exposure to radio waves. This requirement is based on scientific guidelines that include safety margins designed to assure this safety of all persons, regardless of age and health.

- The radio wave exposure guidelines employ a unit of measurement known as the Specific Absorption Rate, or SAR. Tests for SAR are conducted using standardized method with the phone transmitting at its highest certified power level in all used frequency bands.
- While there may be differences between the SAR levels of various LG phone models, they are all designed to meet the relevant guidelines for exposure to radio waves.
- The SAR limit recommended by the international Commission on Non-Ionizing Radiation Protection (ICNIRP), which is 2W/kg averaged over ten (10) gram of tissue.
- The highest SAR value for this model phone tested by DASy4 for use at the ear is 1.05W/kg (10g).
- SAR data information for residents in countries/regions that have adopted the SAR limit recommended by the Institute of Electrical and Electronics Engineers (IEEE), which is 1.6 W/kg averaged over one (1) gram of tissue (for example USA, Canada, Australia and Taiwan).

### Product care and maintenance

**Warning: Use only batteries, charger and accessories approved for use with this particular phone model. The use of any other types may invalidate any approval or warranty applying to the phone, and may be dangerous.**

- Do not disassemble this unit. Take it to a qualified service technician when repair work is required.
- Keep away from electrical appliance such as a TV, radio or personal computer.
- The unit should be kept away from heat sources such as radiators or cookers.
- Do not drop.
- Do not subject this unit to mechanical vibration or shock.
- The coating of the phone may be damaged if covered with wrap or vinyl wrapper.
- Use dry cloth to clean the exterior of the unit.  
(Do not use solvent such as benzene, thinner or alcohol.)
- Do not subject this unit to excessive smoke or dust.
- Do not keep the phone next to credit cards or transport tickets; it can affect the information on the magnetic strips.
- Do not tap the screen with a sharp object; otherwise, it may damage the phone.
- Do not expose the phone to liquid or moisture.
- Use the accessories with caution and follow relevant instructions.
- Do not touch the antenna unnecessarily.

## Efficient phone operation

To enjoy optimum performance with minimum power consumption please:

- Hold the phone as you speak to any other telephone. While speaking directly into the microphone, angle the antenna in a direction up and over your shoulder. If the antenna is extendable/retractable, it should be extended during a call.
- Do not hold the antenna when the phone is in use. If you hold it, it can affect call quality. It also may cause the phone to operate as a higher power level than needed and shorten talk and standby times.
- If your mobile phone supports infrared, never direct the infrared ray at anyone's eye.

## Electronics devices

All mobile phones may get interference, which could affect performance.

- Do not use your mobile phone near medical equipment without requesting permission. Avoid placing the phone over the pacemaker, i.e. in your breast pocket.
- Some hearing aids might be disturbed by mobile phones.
- Minor interference may affect TVs, radios, PCs, etc.

### Road safety

Check the laws and regulations on the use of mobile phones in the areas when you drive.

- Do not use a hand-held phone while driving.
- Give full attention to driving.
- Use a hands-free kit, if available.
- Pull off the road and park before making or answering a call if driving conditions so require.
- RF energy may affect some electronic systems in your motor vehicle such as car stereo, safety equipment.
- When your vehicle is equipped with an air bag, do not obstruct with installed or portable wireless equipment. It can cause serious injury due to improper performance.

### Blasting area

Do not use the phone where blasting is in progress.

Observe restrictions, and follow any regulations or rules.

### Potentially explosive atmospheres

- Do not use the phone at a refueling point. Don't use near fuel or chemicals.
- Do not transport or store flammable gas, liquid, or explosives in the compartment of your vehicle, which contains your mobile phone and accessories.

### In aircraft

Wireless devices can cause interference in aircraft.

- Turn off your mobile phone before boarding any aircraft.
- On the ground, follow airline instructions regarding use of mobile phones.

## Children

Keep the phone in a safe place out of small children's reach. It includes small parts which if detached may cause a choking hazard.

## Emergency calls

Emergency calls may not be available under all cellular networks. Therefore, you should never depend solely on the phone for emergency calls. Check with your local service provider.

## Battery information and care

 
- You do not need to completely discharge the battery before recharging. Unlike other battery systems, there is no memory effect that could compromise the battery's performance.
- Use only LG batteries and chargers. LG chargers are designed to maximize the battery life.
- Do not disassemble or short-circuit the battery pack.
- Keep the metal contacts of the battery pack clean.
- Replace the battery when it no longer provides acceptable performance. The battery pack may be recharged hundreds of times until it needs replacing.
- Recharge the battery if it has not been used for a long time to maximize usability.
- Do not expose the battery charger to direct sunlight or use it in high humidity, such as the bathroom.
- Do not leave the battery in hot or cold places, this may deteriorate the battery performance.
- Dispose of used batteries in accordance with local legislation.




# C3300 features

## Parts of the phone

### Front view

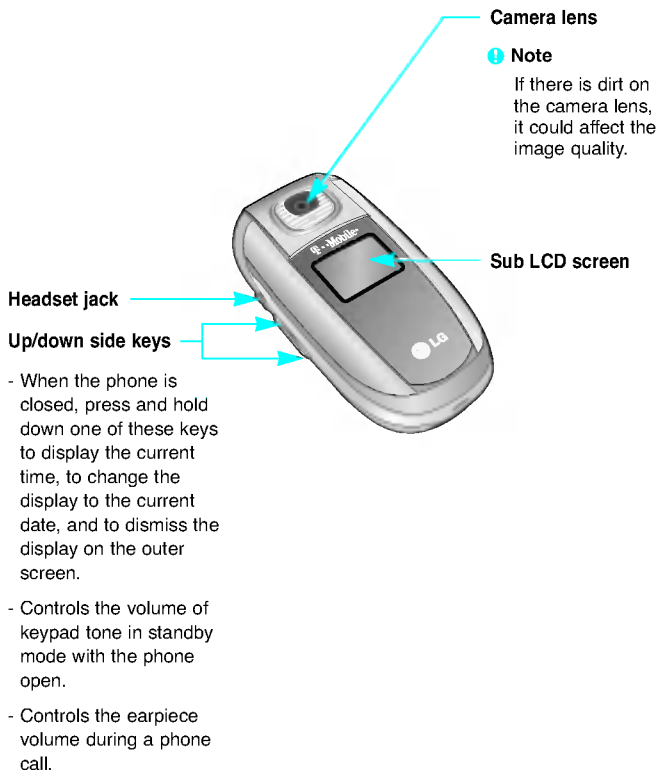

Rear view

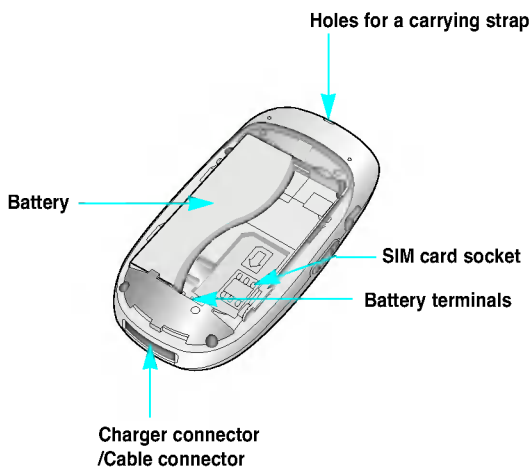 

Open view



## 1. Earpiece

**2, 8. Left soft key/Right soft key:** Each of these keys performs the function indicated by the text on the screen immediately above it.





**3. t-zone key:** Accesses the t-zones.

**4. Send key:** Dials a phone number and answers incoming calls. You can also quickly access the latest incoming, outgoing and missed calls, by pressing the key in standby mode.

**5. Alphanumeric keys:** Enter numbers, letters and some special characters.

**6. LCD screen:** Displays phone status icons, menu items, Web information, pictures and more in full colour.

**7. Navigation keys:** Use to move the cursor up/down/left/right. And you can quickly access the following features in standby mode.

- **Up navigation key** (  ) : You can search the contact by name by pressing this key in standby mode.
- **Down navigation key** (  ) : Opens the voice memo list. Holding this key down directly starts voice memo recording.
- **Left navigation key** (  ) : A shortcut key to the profile menu. Holding this key down changes into the manner mode.
- **Right navigation key** (  ) : A shortcut key to the message inbox.

**9. Menu/Confirm key:** Opens the menu and confirms actions.  
\* In standby mode, holding this key down connects to the Internet.

**10. Camera key:** Press this key to go to the Camera menu in standby mode.



















**11. End/Power key:** Used to end a call or reject a call and also to go back to standby mode. Hold this key down to turn the phone on/off.

- 12. Clear key:** Deletes a character by each press. Hold the key down to clear all input. Also use this key to go back to the previous screen.
- 13. Microphone:** Can be muted during a call for privacy.

## Display information

The table below describes various display indicators or icons that appear on the phone's display screen.

### On-Screen Icons

Icon	Description
	Indicates the strength of the network signal.
	Indicates that GPRS service is available.
	Indicates a call is in progress.
	Indicates that you are roaming on another network.
	Indicates the alarm has been set and is on.
	Indicates the status of the battery charge.
	Indicates that the vibration ringer has been set.
	Indicates the Silent profile is activated.
	Indicates the General profile is activated.
	Indicates the Loud profile is activated.
	Indicates the Headset profile is activated.
	Indicates the Car profile is activated.
	Indicates a call is diverted.
	Indicates that the phone is accessing the WAP.
	Indicates that you are using GPRS.
	Indicates that you entered the security page.
	Indicates the receipt of a message.
	Indicates the receipt of a voice mail.

 


# Getting started

## Installing the SIM card and the handset battery

### 1. Remove the battery cover


Make sure the power is off before you remove the battery. Press down on the rear cover in indicated position and slide downwards to remove, prize the battery by inserting finger nail in indicated slots and levering the battery out.

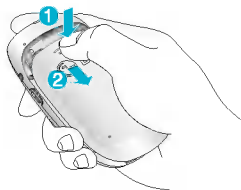

**Note** Removing the battery from the phone when the power is on may cause the phone to malfunction.


### 2. Remove the battery.

 Hold the top edge of the battery and lift the battery from the battery compartment.

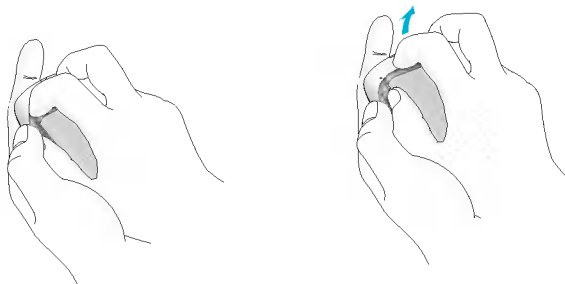


### 3. Install the SIM card

 Insert the SIM card into the holder. Slide the SIM card into the SIM card holder. Make sure that the SIM card is inserted properly by ensuring that the gold contact area on the card is facing downwards. To remove the SIM card, press down lightly and pull it in the reverse direction.

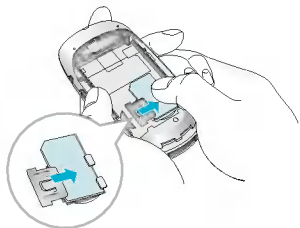


To insert the SIM card

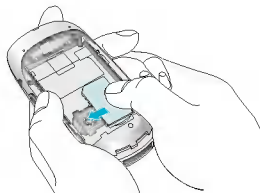 

To remove the SIM card

- ! Caution** The metal contact of the SIM card can be easily damaged by scratches. Pay special attention to the SIM card while handling. Follow the instructions supplied with the SIM card.

### 4. Install the battery.

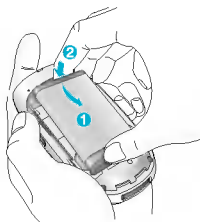 

Insert the bottom of the battery first into the bottom edge of the battery compartment. Push down the top of the battery until it snaps into space.





### 5. Replace the battery cover.

  Lay the battery cover in place of the phone and slide it until the latch clicks.

### Charging the battery

To connect the travel adapter to the phone, you must have installed the battery.

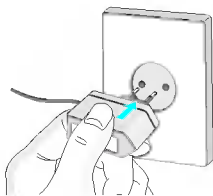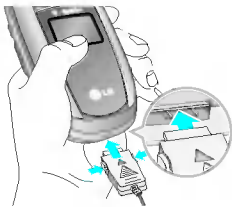

1. Ensure the battery is fully charged before using the phone.
2. With the arrow facing you as shown in the diagram push the plug on the battery adapter into the socket on the bottom of the phone until it clicks into place.
3. Connect the other end of the travel adapter to the mains socket. Use only the included packing charger.
4. The moving bars of battery icon will stop after charging is complete.

- ⓘ Caution**
- Do not force the connector as this may damage the phone and/or the travel adapter.
  - Insert the battery pack charger vertically to wall power outlet.
  - If you use the battery pack charger out of your own country, use an attachment plug adaptor for the proper configuration.
  - Do not remove your battery or the SIM card while charging.

- ⓘ Warning**
- Unplug the power cord and charger during lightning storms to avoid electric shock or fire.
  - Make sure that no sharp-edged items such as animal teeth, nails, come into contact with the battery. There is a risk of this causing a fire.
  - Do not place or answer calls while charging the phone as it may short-circuit the phone and/or cause electric shock or fire.

## Disconnecting the adapter


1. When charging is finished, the moving bars of the battery icon stop and 'Full' is displayed on the screen.
2. Unplug the adapter from the power outlet. Disconnect the adapter from the phone by pressing the grey tabs on both sides of the connector and pull the connector out.



- Note**
- Ensure the battery is fully charged before first using the phone.
  - Do not remove the battery or SIM card while charging.
  - In the case the battery is not properly charged, please turn the phone off and on using the power key, then recharge the battery. After detaching and reattaching the battery, please recharge the battery.


### Turning your phone on and off

#### Turning your phone ON

1. Install a battery to the handset and connect the phone to an external power source such as the travel adapter, cigarette lighter adapter or hands-free car kit. Or install a charged battery pack to the handset.
2. Press  for a few seconds until the LCD screen is turned on.
3. Depending on the status of the **PIN code request** setting you may need to enter your PIN code.

**! Notice** Like any other radio devices, avoid any unnecessary contact with the antenna while your phone is on.

#### Turning your phone OFF

1. Press  for a few seconds until the LCD screen is turned off.

### Access codes

You can use the access codes described in this section to avoid unauthorised use of your phone. The access codes (except PUK and PUK2 codes) can be changed by using the **Change codes** feature [Menu-9-5-5]. See page 86.

#### PIN code (4 to 8 digits)

The PIN (Personal Identification Number) code protects your SIM card against unauthorised use. The PIN code is usually supplied with the SIM card. When the **PIN code request** is set to **On**, your phone will request the PIN code every time the phone is switched on. When the **PIN code request** is set to **Off**, your phone connects to the network directly without the PIN code.

### **PIN2 code (4 to 8 digits)**

The PIN2 code, supplied with some SIM cards, is required to access functions such as **Advice of Call Charge** and **Fixed Dial Number**. These functions are only available if supported by your SIM card.

### **PUK code (4 to 8 digits)**

The PUK (PIN Unblocking Key) code is required to change a blocked PIN code. The PUK code may be supplied with the SIM card. If not, contact your network operator for the code. If you lose the code, also contact your network operator.

### **PUK2 code (4 to 8 digits)**

The PUK2 code, supplied with some SIM cards, is required to change a blocked PIN2 code. If you lose the code, also contact your network operator.

### **Security code (4 to 8 digits)**

The security code protects the unauthorised use of your phone. The default security code is set to '0000' and the security code is required to delete all phone entries and to activate the **Reset Settings** menu. Also, the security code is required to enable or disable the phone lock function to prevent unauthorised use of the phone. The security code default setting can be modified from the **Security Settings** menu.

### **Barring password**






The barring password is required when you use the **Call Barring** function. You obtain the password from your network operator when you subscribe to this function. See [Menu-9-5-3] page 85 for further details.



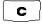

# General functions

## Making and answering calls



### Making a call

1. Make sure your phone is switched on.
2. Enter a phone number, including the area code. When you entered a wrong number, press the clear key (  ) to erase one digit at a time.
  - ▶ Press and hold the clear key (  ) to erase the digits in succession.
3. Press the send key (  ) to call the number.
4. To end the call, press the end key (  ) or the right soft key (  ). You can also end the call by closing the folder.


### Making a call using the send key

1. In standby mode, press the send key (  ), and the latest incoming, outgoing and missed phone numbers will be displayed.
2. Select the desired number by using the up/down navigation key.
3. Press  .

### Making an international call

1. Press and hold the  key for the international prefix. The '+' character automatically selects the international access code.
2. Enter the country code, area code, and the phone number.
3. Press  .

### Ending a call


When you have finished your call, press the end (  )key.


## Making a call from the phonebook (Contacts)

You can save the names and phone numbers dialed regularly in the SIM card and/or phone memory, which is called Contacts.

You can dial a number by simply looking up the desired name in Contacts. For further details on the Contacts feature, please refer to page 62 through 66.

## Adjusting the volume



If you want to adjust the earpiece volume during a call, use the side keys (  ). Press the up side key to increase and down side key to decrease the volume.


-  **Note** In standby mode pressing the side keys adjusts the key tone volume.

## Answering a call



When you receive a call, the phone rings. If the caller can be identified, the caller's phone number (or name if saved in the Contacts) is displayed.

1. To answer an incoming call, open the phone and press the send key. Alternatively, please see page 82 for other answer modes.


-  **Note** If **Press any key** has been set as the answer mode (see page 82), any key press will answer a call except for the  or the right soft key.

- ▶ To reject an incoming call, press and hold one of the side keys on the left side of the phone without opening the folder.
  - ▶ You can answer a call while using the **Contacts** or other menu features.
2. To end the call, close the folder or press the  key.

### Switching quickly to Vibrate only mode

You can switch your phone quickly to the **Vibrate only** mode by pressing and holding down the left navigation key (  ) after opening the phone. To go back to the previous profile, press and hold down the left navigation key (  ) again.

### Signal strength

You can check the strength of your signal by the signal indicator (  ) on the LCD screen of your phone. Signal strength can vary, particularly inside buildings. Moving near to a window may improve reception.

### Entering text

You can enter alphanumeric characters by using the phone's keypad. For example, storing names in the **Contacts**, writing a message, creating a personal greeting or scheduling events in the calendar all require entering text.

The following text input methods are available in the phone.


#### T9 mode

This mode lets you enter words with only one keystroke per letter. Each key on the keypad has more than one letter. The T9 mode automatically compares your keystrokes with an internal dictionary to determine the correct word, thus requiring far fewer keystrokes than the traditional ABC mode. This is sometimes known as predictive text.

#### ABC mode


This mode lets you enter letters by pressing the key labelled with the required letter once, twice, three or four times until the letter is displayed.


### 123 mode (Number mode)

 
Type numbers using one keystroke per number. To change to 123 mode in a text entry field, press the  key until 123 mode is displayed.

## Changing the text input mode

1. When you are in a field that allows characters to be entered, you will notice the text input mode indicator in the upper right corner of the LCD screen.



- You can select the language of the T9 mode. Press the left soft key [Options], then select **T9 languages**. You can also go to **T9 languages** menu by holding down the  key. Select the desired language of T9 mode. You can also turn off the T9 mode by selecting **T9 off**. The default setting on the phone is T9 enabled mode.

2. Change the text input mode by pressing . You can check the current text input mode in the upper right corner of the LCD screen.

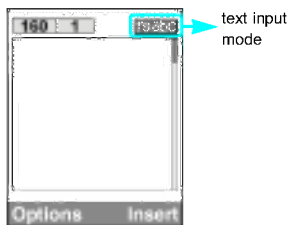

### ► Using the T9 mode


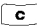
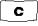
The T9 predictive text input mode lets you enter words easily with a minimum number of key presses. As you press each key, the phone begins to display the characters that it thinks you are typing based on the built-in dictionary. You can also add new words in the dictionary. As new words are added, the word changes to reflect the most likely candidate from the dictionary.

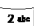
1. When you are in the T9 predictive text input mode, start entering a word by pressing keys  to . Press one key per letter.
  - The word changes as letters are typed. Ignore what's on the screen until the word is typed completely.

## General functions

- If the word is still incorrect after typing completely, press the up/down navigation key once or more to cycle through the other word options.


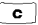
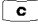
**Example:** Press     to type **Good**  
Press     [Down navigation key] to type **Home**

- If the desired word is missing from the word choice list, add it using the ABC mode.
2. Enter the whole word before editing or deleting any keystrokes.
  3. Complete each word with a space by pressing the  key.
- To delete letters, press the  key. Press and hold down the  key to erase entire words in succession.


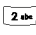






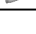

**Notice** To exit from the text input mode without saving your input, press . The phone goes back to standby mode.

### ▶ Using the ABC mode

Use the  to  keys to enter your text.

1. Press the key labelled with the required letter:
  - Once for the first letter
  - Twice for the second letter
  - And so on
2. To insert a space, press the  key once. To delete letters, press the  key. Press and hold down the  key to erase the entire words in succession.

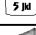- Notice** Refer to the table below for more information on the characters available using the alphanumeric keys.

Key	Characters in the order display	
	Upper case	Lower case
	.,/?!-:'"1	.,/?!-:'"1
	A B C Č Ć Ç Á Ą Ą Ą 2	a b c č ć ç á á á â 2
	D E F Đ Ę Ę 3	d e f đ ę ę 3
	G H I Í Î 4	g h i í î 4
	J K L 5	j k l 5
	M N O Ó Ö Ő Ô 6	m n o ó ö ő ô 6
	P Q R S Š Š 7	p q r s š š 7
	T U V Ú Ü Ů 8	t u v ú ü ů 8
	W X Y Z Ž 9	w x y z ž 9
	Space key, 0 (Press twice)	Space key, 0 (Press twice)

### ► Using the 123(Number) mode

The 123 mode enables you to enter numbers in a text message (a telephone number, for example).

Press the keys corresponding to the required digits before manually switching back to the appropriate text entry mode.

### Contacts

You can save phone numbers and their corresponding names in the memory of your SIM card.

In addition, you can save up to 200 numbers and names in the phone memory.

The SIM card and phone are both used in the same way in the **Contacts** menu.

(Refer to page 62 through 66 for details.)

### In call menu

Your phone provides a number of control functions that you can use during a call. To access these functions during a call, press the left soft key [Options].



#### During a call

The menu displayed on the handset screen during a call is different to the default main menu displayed when in standby mode, and the options are described below.


#### Making a second call


You can get a number you wish to dial from Contacts to make a second call. Press the right soft key then select **Search**. To save the dialled number into Contacts during a call, press the right soft key then select **Add new**.

#### Switching between two calls


To switch between two calls, press the left soft key [Options], then select **Swap** or just press the  key. You can select one of two calls using up/down navigation keys. To end a call, highlight the phone number using up/down navigation keys then press the  key.


### Answering an incoming call

To answer an incoming call when the handset is ringing, simply press the  key. The handset is also able to warn you of an incoming call while you are already on a call. A tone sounds in the earpiece, and the display will show that a second call is waiting. This feature, known as **Call waiting**, is only available if your network supports it. For details of how to activate and deactivate it see **Call waiting** on page 82.

If **Call waiting** is activated, you can put the first call on hold and answer the second, by pressing  or by selecting left soft key, then **Hold & Answer**. You can end the current call and answer the waiting call by selecting left soft key and then **End & Answer**.

### Rejecting an incoming call

You can reject an incoming call without answering by simply pressing the  key.

During a call, you can reject an incoming call by pressing the left soft key [Menu] and selecting the **Multiparty/Reject** or by pressing the  key.

### Muting the microphone

You can mute the microphone during a call by pressing the left soft key [Options], then selecting **Mute**. When the handset is muted, the caller cannot hear you, but you can still hear them. The handset can be unmuted by pressing the [Unmute].


### Switching DTMF tones on during a call

To turn DTMF tones on during a call, press the left soft key, and then select **DTMF on**. DTMF tones can be turned off the same way. DTMF tones allow your phone to make use of an automated switchboard.

### Multiparty or conference calls

The multiparty or conference service provides you with the ability to have a simultaneous conversation with more than one caller, if your network operator supports this feature. A multiparty call can only be set up when you have one active call and one call on hold, both calls having been answered. Once a multiparty call is set up, calls can be added, disconnected or separated (that is, removed from the multiparty call but still connected to you) by the person who set up the multiparty call. These options are all available from the In-Call menu. The maximum callers in a multiparty call are five. Once started, you are in control of the multiparty call, and only you can add callers to the multiparty call.

#### Making a second call

You can make a second call while currently on a call. Enter the phone number and press the  key. When the second call is connected, the first call is automatically placed on hold. You can swap between two calls by pressing the left soft key then selecting **Swap**.

#### Setting up a multiparty call

Place one call on hold and while the active call is on, press the leftsoft key and then select **Multiparty/Join all**.

#### Putting a multiparty call on hold

Press the left soft key, then select **Multiparty/Hold all**.

#### Activate the multiparty call on hold

Press the left soft key, then select **Multiparty/Join all**.

#### Adding calls to the multiparty call

To add a call to an existing multiparty call, press the left soft key, then select **Multiparty/Join all**.

### Putting a member of a multiparty call on hold

To place one selected caller (whose number is currently displayed on the screen) of a multiparty call on hold, press the left soft key, then select **Multiparty/Exclude**.


### Displaying callers in a multiparty call

Using up/down navigation keys, you can scroll through the phone numbers of the callers in a multiparty call.

### Having a private call during a multiparty call

To have a private call with one caller from a multiparty call, display the number of the caller you wish to talk to on the screen, then press the left soft key. Select **Multiparty/Private** to put all the other callers on hold.

### Ending a multiparty call

The currently displayed caller from a multiparty call can be disconnected by pressing the  key. To end a multiparty call, press the left soft key, then select **Multiparty/End multiparty**. After pressing the left soft key, selecting **Multiparty/End all** will end all the active and on-hold calls.



# Menu tree

The following illustration shows the available menu structure and indicates the:

- ▶ Number assigned to each menu option.
- ▶ Page where you can find the feature description.

You can go to the desired menu using the left soft key [Menu], navigation keys and the [OK] key.



This menu is supported by only SAT (SIM Application Tool kit) SIM.



This menu is supported by non-SAT SIM.



## 1 Special

This menu depends on SIM and network service. If your SIM card supports SIM tool kit, it is only shown "Special" menu.



## 2 My Media

- 1 Photos
- 2 Pictures
- 3 Sounds
- 4 Games & more



## 3 Call register

- 1 Missed calls
- 2 Received calls
- 3 Dialed calls
- 4 Delete recent calls
- 5 Call charges
- 6 GPRS information



#### 4 Messages

- 1 Write text messages
- 2 Write multimedia message
- 3 Inbox
- 4 Outbox
- 5 Drafts
- 6 Listen to voice mail
- 7 Info message
- 8 Templates
- 9 Settings



#### 5 t-zones



#### 6 Contacts

- 1 Search
- 2 Add new
- 3 Caller groups
- 4 Speed dial
- 5 Settings
- 6 Copy all
- 7 Delete all
- 8 Information



#### 7 Organiser

- 1 Alarm clock
- 2 Scheduler
- 3 Calculator
- 4 Unit converter
- 5 World time
- 6 Voice recorder
- 7 Memory status
- 8 S/W version



#### 8 Camera

- 1 Take photo
- 2 Take in modes
- 3 My photos
- 4 Settings
- 5 Memory status





#### 9 Settings

- 1 Profiles
- 2 Date & Time
- 3 Phone settings
- 4 Call settings
- 5 Security settings
- 6 Network settings
- 7 GPRS setting
- 8 Internet
- 9 Reset settings

 


## Selecting functions and options

Your phone offers a range of functions that allow you to customise it. These functions are arranged in menus and sub-menus, accessed via the two soft keys marked  and . Each menu and sub-menu lets you view and alter the settings of a particular function.

The roles of the soft keys vary according to the current context; the label on the bottom line of the screen just above each key indicates its current function.

(e.g.)

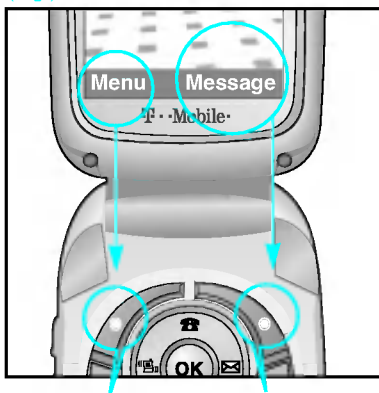

Press the left soft key to access the available menu.

Press the right soft key to activate the corresponding action.



## Special

Your service provider can offer special application through SIM card, such as home banking, stock market, etc.

If you are registered for one of these services, the service name will appear at the end of the Main Menu. With the SIM Services menu your phone is future-proof and will support additions to your service provider's service.

For more information contact your service provider.



# My Media

You can download ringtones, sounds, games, pictures, and wallpaper WAP portals such as t-zones.

## Photos

Menu-2-1

Opens the **My photos**. The photos taken with C3300 are stored in here. (For more details, refer to page 75.)

## Pictures

Menu-2-2

- **My pictures:** Selects a picture from the list by pressing the left soft key [View]. Then, you can set it as the wallpaper or send the multimedia message with it by pressing the left soft key [Options].

## Sounds

Menu-2-3

- **t-music:** Connects to the t-zones. You can download various ringtones and caller tunes using the WAP. And they are stored in **My sounds**.
- **My sounds:** You can select a sound from the list. After selecting the desired sound, you can set it as the ring tone, send the sound via SMS or MMS, using the left soft key [Options].

## Games & more

Menu-2-4

- **t-games:** Connects to the t-games. You can download games using the WAP. And they are stored in **My games & more**.
- **My games & more:** In this menu, you can manage the Java applications installed in your phone. You can play or delete downloaded applications, or set the connecting option. The downloaded applications are stored in folders.

Press the left soft key [Select] to open the selected folder or launch the selected midlet.

Using the right soft key [Menu], the following menus are available.

- ▶ **New folder:** Creates a new folder.
  - ▶ **Move:** Moves the selected folder or application to a destination folder.
  - ▶ **Launch:** Starts new game.
  - ▶ **Remove:** Removes a folder or an application.
  - ▶ **Rename:** You can rename the folder or the application.
- ❗ **Note** You cannot remove or rename the preinstalled folder or a game in the folder.

Java™ is a technology developed by Sun Microsystems. Similar to the way you would download the Java Applet using the standard Netscape or MS Internet Explorer browsers, Java MIDlet can be downloaded using the WAP enabled phone. Depending on the service provider, all Java based programs such as Java games can be downloaded and run on a phone. Once downloaded, the Java program can be viewed in the **My games & more** menu where you can select, execute, or delete. The Java program files saved in the phone are in .JAD or .JAR format.


- ❗ **Note** The JAR file is a compressed format of the Java program and the JAD file is a description file that includes all detailed information. From the network, prior to download, you can view all detailed file descriptions from the JAD file.
- ❗ **Caution** Only J2ME (Java 2 Micro Edition) based programs will run in a phone environment. The J2SE (Java 2 Standard Edition) based programs will only run in a PC environment.
- ❗ **Option** Some Java applications may require a data connection to be made. Select this to set the connecting options.



## Call register (Dependent on the network service)

You can check the record of missed, received, and dialled calls only if the network supports Calling Line Identification (CLI) within the service area.

The number and name (if available) are displayed together. You can also view call times and costs.

Press the menu key (  ) and select **Call register** using navigation keys.

### Missed calls

Menu-3-1

This option lets you view unanswered calls.

After pressing the left soft key [Options], you can also:

- View the date and time at which the call was made.
- Save the number in Contacts. Enter a name for the number and save it in Contacts.
- Send a message to this number.
- Delete the call from the list.

**Note** You can delete all the call records from the list using the **Delete recent calls** menu. (See page 43.)

### Received calls

Menu-3-2

This option lets you view incoming calls. After pressing the left soft key [Options], you can also:

- View the date and time at which the call was made.
- Save the number in Contacts. Enter a name for the number and save it in Contacts.
- Send a message to this number.
- Delete the call from the list.

**Note** You can delete all the call records from the list using the **Delete recent calls** menu. (See page 43.)

## Dialled calls

Menu-3-3

This option lets you view outgoing calls (called or attempted). Using the [Options] key, you can also:

- View the date and time at which the call was made.
- Save the number in Contacts. Enter a name for the number and save it in Contacts.
- Send a message to this number.
- Delete the call from the list.

**Note** You can delete all the call records from the list using **Delete recent calls** menu. (See page 43.)

## Delete recent calls

Menu-3-4

Use this to delete the missed call list, received call list, or dialled call list. You can also delete all call lists at a time selecting **All calls**.

### Call charges


Menu-3-5

### Call duration

(Menu-3-5-1)

Use this to view the duration of your incoming and outgoing calls. You can check each call duration at the bottom of screen while scrolling using the up/down navigation keys. You can reset the call timer by selecting **Reset all**. To prevent accidental reset, you are requested to enter the PIN2 code.

- **Last call:** Length of the last call.
- **All calls:** Total length of all calls made or received calls since the timer was last reset.
- **Received calls:** Length of the incoming calls.
- **Dialled calls:** Length of the outgoing calls.
- **Reset all:** Select this to reset all the call duration.

 **Note** The actual time invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, etc.

## Call costs



(Menu-3-5-2)

This network service allows you to check the last call cost, the total call cost and the remaining call cost. The call cost is displayed on the bottom of the LCD screen. To reset the call cost, select **Reset all**. You are requested to enter the PIN2 code.

- **Note** The actual cost invoiced for calls by your service provider may vary, depending on network features, rounding-off for billing, taxes, etc.

## Settings

(Menu-3-5-3)

- **Set tariff:** You can set the currency type and the unit price. Contact your service provider to obtain charging unit prices. To select the currency or unit in this menu, you need the PIN2 code. If you want to input @, £, \$ symbol, clear all currency strings and then press  key. If you want to change the symbol, press  key again.
- **Note** When all units have been used, no calls can be made except emergency calls. Depending on the SIM card, you need the PIN2 code to set a call cost limit.
- **Set credit:** This network service allows you to limit the cost of your calls to the selected charging units. You can make or receive a call up to the specified cost limit.
  - ▶ **Read:** You can check the remaining units.
  - ▶ **Change:** You can change your charging limit.
- **Auto display:** This network service allows you to see automatically the cost of your last call. If you select **On**, you can see the cost of the last call when the call is released.

### GPRS information

Menu-3-6

You can check the amount of data transferred over the network through the GPRS information option. In addition, you can also view how much time you are online. (GPRS stands for General Packet Radio Service.)

### Call duration

(Menu-3-6-1)

You can check the duration of the last call and all calls. You can also reset the call timers by selecting **Reset all**.


### Data volumes

(Menu-3-6-2)

You can check the sent data volume, received data volume, and all data volume. You can also reset the counter by selecting **Reset all**.



# Messages




Press the menu key (  ) and select **Messages** using navigation keys.

## Write text message

Menu-4-1

Your phone receives voice mail notification messages, and Short Message Service (SMS) messages.

Voice mail and SMS are network services. Please contact your network operator for more information.

When the  icon appears, you have received voice mail. When the  icon appears, you have received a new text message. If the message memory is full, a message is displayed, the  icon flashes and you cannot receive any new messages. Use the **Delete** option in the **Inbox** menu to delete obsolete messages. Once there is space in the message memory, any undelivered SMS messages will be received (provided sufficient space is available).

You can write and edit text messages up to 10 pages.  
(approximately 1530 characters)

1. Key in your message. For details on how to enter text, refer to pages 28 through 31 (Entering Text).
2. After you complete the message, to select the required option, press the left soft key [Options]. The following options are available.

- ▶ **Send:** Enter the phone number. Or select the number from the recent numbers or the Contacts after pressing the left soft key [Options].

You can send a message up to 6 phone numbers at a time. Before sending the message, you can set the following options by pressing the right soft key [Settings].

- 1) **Validity period:** Set the length of time for which your text messages will be saved at the SMS center while attempts are made to deliver them to the recipient. Possible values are 1 hour, 12 hours, 1 day, 1 week and the maximum authorized by your network operator.
- 2) **Delivery report:** Select whether activate or deactivate the report function. When this function is activated, the network

informs you whether your message has been delivered or not.

3) **Reply charging:** Allows the recipients of your text message to send you a reply via your message centre, if the service is provided by the network.

- ▶ **Save:** Saves the message so that it can be sent later.
- ▶ **Font:** Select the desired font size and style for the message using the left/right navigation keys.
- ▶ **Colour:** Select the desired foreground colour using the left/right navigation key. Then, press the down navigation key and select the background colour using the left/right navigation key.
- ▶ **Alignment:** Select where to align text.
- ▶ **Add T9 dictionary:** When you didn't find a desired word in the T9 text input mode, you can add a word using this option in the T9 dictionary. After typing a word, press the left soft key [Save].
- ▶ **T9 languages:** Select the language for T9 input mode. You can also deactivate T9 input mode by selecting **T9 off**.
- ▶ **Exit:** Exits from the **Write text message** menu.

3. You can also send attachments with the message by pressing the right soft key [Insert], while you're entering a message.

- ▶ **Picture:** Sends and receives text messages that contain pictures, known as 'picture messages'. Several preset pictures are available in the phone and they can be replaced with new ones received from other sources.
- ▶ **Sound:** If available, you can attach a sound to a short message.
- ▶ **Text templates:** You can select a text template already set in the phone.
- ▶ **Phonebook:** You can add phone numbers to the message.
- ▶ **Signature:** You can attach your name card.
- ▶ **Symbol:** You can attach special characters.

## Write multimedia messages

Menu-4-2

A multimedia message can contain text, images, and/or sound clips. This feature can be used only if it is supported by your network operator or service provider. Only the devices that offer compatible multimedia message or e-mail features can receive and send multimedia messages.

You can create a multimedia message up to 10 slides.  
(approximately 100 KB)


1. After entering the subject of the message, press the OK key.
2. Key in the text message. Using the right soft key [Insert], you can insert a symbol, a picture, a sound, a voice memo, text templates, phone numbers stored in the phonebook or a signature.
3. Press the left soft key [Options]. The following options are available.
  - ▶ **Send:** You can send the multimedia message up to 6 recipients at the same time.
    - 1) Key in the phone number. You can also search the phone number from the recent number list or the phonebook using the left soft key [Options].
    - 2) Press the right soft key [Settings]. You can set the following options:
      - **Priority:** Set the priority of the MMS.
      - **Validity period:** Set the duration for keeping the multimedia messages on the network server. Possible values are 1 hour, 12 hours, 1 day, 1 week and the maximum authorized by the network operator.
      - **Delivery report:** Select **Yes** to activate the report function. When this function is activated, the network informs you whether or not your message has been delivered.
    - 3) Press the left soft key [Send].


- ▶ **Preview:** Select this option to check out the multimedia message you've created. Each slide is sequentially played back automatically. You can also move to another slide from the currently played slide using the left/right navigation keys. To replay the message, press the left soft key [Replay].
- ▶ **Save:** Saves the message in drafts or as a template.
- ▶ **Add slide:** Add a slide before or after the current slide.
- ▶ **Move to slide:** Select this option to move to another slide from the current slide.
- ▶ **Delete slide:** Deletes the current slide.
- ▶ **Set slide format:** You can set the following slide format.
  - **Set timer:** Enter the timer in each field using the numeric keypad.
  - **Swap text and picture:** Swaps the text and picture.
- ▶ **Add T9 dictionary:** When you didn't find a desired word in the T9 text input mode, you can add a word in the T9 dictionary using this option. After typing a word, press the left soft key [Save].
- ▶ **T9 languages:** Select the T9 language for T9 input mode. You can also deactivate the T9 input mode by selecting **T9 off**.
- ▶ **Exit:** Exits from the Write multimedia message menu.

## Inbox






Menu-4-3

You will be alerted when you have received messages. And they will be stored in the Inbox.

Press the left soft key [Menu] and select  → **Inbox**.

Or, you can take a shortcut by pressing the right navigation key () in standby mode.

In the Inbox, you can identify each message by icons. For detail, see the icon description below.

Icon	Description
	Multimedia message
	Short message
	SIM message
	Read
	Notified multimedia message

Each received message has the following options available. Press the left soft key [Options].




- ▶ **View:** You can view the selected message.
- ▶ **Reply:** You can reply to the sender with a text message or a multimedia message.
- ▶ **Forward:** You can forward the selected message to other recipients.
- ▶ **Return call:** You can call back to the sender.
- ▶ **Delete:** Deletes the selected message from inbox.
- ▶ **Extract:** You can extract picture, sound, sender's number, URL, email address and so on from the message. They will be saved in My folder, Contacts, or Bookmarks.
- ▶ **View information:** You can view the information of the message: the sender's address, subject (only for multimedia message), the date and time when the message has arrived, message type and size, and the priority (only for multimedia message).

- ▶ **Replay:** You can replay the selected multimedia message. (Only for multimedia message)
- ▶ **Delete all:** Deletes all the messages in the inbox folder.
- ▶ **Receive:** When you receive a multimedia notification message, you need to select this option to download the multimedia message. (Only for multimedia notification message)
- ▶ **Cancel:** You can cancel downloading the multimedia message. (Only for multimedia notification message)

## Outbox

Menu-4-4

All the messages you have sent are stored in the Outbox folder. You can view the list and contents of messages. In the outbox message list, you can verify if the transmission was successful. If the transmission was failed, “(Failed)” is displayed before the recipient. You can also check whether you have received the delivery report through the following icons.

Icon	Description
	Multimedia message
	Short message
	Delivery reported message

In each message, the following options are available by pressing the left soft key [Options].

 **The messages of which transmission was completed has the following options.**

- ▶ **View:** You can view the selected message.
- ▶ **Forward:** You can forward the selected message to other recipients.
- ▶ **Delete:** Deletes the selected message from outbox.
- ▶ **View information:** You can view the information of selected message: subject (only for multimedia message), the date and time when you sent it, message type and size, the priority (only for multimedia message), and recipients.

- ▶ **Delete all** : Deletes all the messages in the outbox folder.



 **The messages of which transmission is in progress has the following options.**

- ▶ **View** : You can view the selected message.
- ▶ **Send**: Select this to send it again.
- ▶ **Delete**: Cancels transmitting the message and deletes the message.
- ▶ **View information**: You can view the information of selected message: subject (only for multimedia message), the date and time when you sent it, message type and size, the priority (only for multimedia message), and recipients.
- ▶ **Send all**: Sends all the messages of which transmission is in progress again.
- ▶ **Cancel all**: Cancels all the message transmission.
- ▶ **Delete all**: Cancels all the message transmission and deletes all of them.

## Drafts

Menu-4-5

You can view the messages saved as a draft. The draft messages are listed with the date and time when they were saved. Scroll through the list using up/down navigation keys.

Icon	Description
	Multimedia message
	Text message

Each draft has the following options.  
Press the left soft key [Options].

- ▶ **View**: You can view the selected message.
- ▶ **Edit**: You can edit the selected message.
- ▶ **Delete**: Deletes the selected message from the drafts folder.


- ▶ **View information:** You can view the information of selected message: subject (only for multimedia message), the date and time when saved, message type and size and the priority (only for multimedia message).
- ▶ **Delete all:** Deletes all the messages from drafts folder.

### Listen to voice mail

Menu-4-6

This menu provides you with a quick way of accessing your voice mailbox (if provided by your network).

Before using this feature, you must enter the voice centre number obtained from your network operator.

When new voice message is received, the  symbol will be displayed on the screen. Please check with your network provider for details of their service in order to configure the handset correctly.

### Info message (Network dependent)

Menu-4-7

Info service messages are text messages sent by the network to mobile phone users. They provide general information such as weather reports or traffic conditions. Each type of information has the number; therefore, you can contact the service provider as long as you have input the certain number for the information. When you receive an info service message, a popup message will indicate a new message receipt or the info service message will be displayed directly. The following options are available when viewing info service messages.

### Read

(Menu-4-7-1)

1. Select **Read** to view the message, it will be displayed on the screen.
2. The message will be shown until another message is reached.

## Topics (Network dependent) (Menu-4-7-2)

- **Add new:** You can add a new info service message number with its nickname in the phone or in the SIM (if the SIM is available).
- **View list:** You can view the list of all the info service message numbers. Press the left soft key [Options] to edit or delete the info message category.
- **Active list:** You can set whether you will receive each info service message or not using the left soft key [On/Off] in this list.

## Templates Menu-4-8

There are pre-defined messages in the list. You can view and edit the template messages or create new messages. Two types of templates are available: Text and Multimedia.

### Text templates (Menu-4-8-1)

- **Please call me back.**
- **I'm late. I will be there at...**
- **Where are you now?**
- **I am on the way.**
- **Top urgent. Please contact.**
- **I love you.**

The following options are available.

- ▶ **View:** You can view the selected template.
- ▶ **Edit:** Use this to write a new message or edit the selected template message from the text template list.
- ▶ **Write text message:** Use this to send the selected template message by SMS.
- ▶ **Write multimedia message:** Use this to send the selected template message by MMS.
- ▶ **Add new:** Use this to create new template.
- ▶ **Delete:** Deletes the selected template.
- ▶ **Delete all:** Deletes all the text templates.

### Multimedia templates

(Menu-4-8-2)

You can create a multimedia template after pressing the left soft key [Add new]. And the multimedia templates you saved as a template while creating a multimedia message in the **Write multimedia message**.

- ▶ **Preview:** Select this option to check out the multimedia message you've created. Each slide is sequentially played back automatically. You can also move to another slide from the currently played slide using the left/right navigation keys. To replay the message, press the left soft key [Replay].
- ▶ **Save:** Saves the message in drafts or as a template.
- ▶ **Add slide:** Add a slide before or after the current slide.
- ▶ **Move to slide:** Select this option to move to another slide from the current slide.
- ▶ **Delete slide:** Deletes the current slide.
- ▶ **Set slide format:** You can set the following slide format.
  - **Set timer:** Enter the timer in each field using the numeric keypad.
  - **Swap text and picture:** Swaps the text and picture.
- ▶ **Add T9 dictionary:** When you didn't find a desired word in the T9 text input mode, you can add a word in the T9 dictionary using this option. After typing a word, press the left soft key [Save].
- ▶ **T9 languages:** Select the T9 language for T9 input mode. You can also deactivate the T9 input mode by selecting **T9 off**.
- ▶ **Exit:** Exits from the Write multimedia message menu.

## Signature

(Menu-4-8-3)

This option helps you to make your own name card. Key in the name, mobile phone number, home number, office number, Fax number, and E-mail address. After creating the name card, you can access the following options using the left soft key [Options].

- ▶ **Edit:** You can edit the name card.
- ▶ **Write text message:** Use this to send the name card by SMS.
- ▶ **Write multimedia message:** Use this to send the name card by MMS.
- ▶ **Delete:** Deletes the name card.

## Settings

Menu-4-9

### Text message

(Menu-4-9-1)

This menu lets you set up default SMS information.

- ▶ **Message types:** Set the default message type (Text, Voice, Fax, Natl. paging, X.400, E-mail, ERMES). The network can convert the messages into the selected format.
- ▶ **Validity period:** Set the length of time for which your text messages will be saved at the SMS center while attempts are made to deliver them to the recipient. Possible values are 30 minutes, 1 hour, 6 hours, 12 hours, 1 day, 1 week and the maximum authorised by your network operator.
- ▶ **Delivery report:** Select whether to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.
- ▶ **Reply charging:** Allows the recipient of your SMS message to send you a reply via your message centre, if the service is provided by the network.
- ▶ **SMS centre:** Saves or changes the number of your SMS centre when sending text messages. You must obtain this number from your service provider.

### Multimedia message

(Menu-4-9-2)

Via this menu, you can set up the default multimedia message information.


The following options are available.

- ▶ **Priority:** Set the priority for the multimedia messages you will send.
- ▶ **Validity period:** Set the length of time for which your multimedia messages will be saved in the network server while attempts are made to deliver them to the recipient. Possible values are 1 hour, 12 hours, 1 day, 1 week and the maximum authorised by your network operator.
- ▶ **Delivery report:** Select whether to activate or deactivate the report function. When this function is activated, the network informs you whether or not your message has been delivered.
- ▶ **Auto download**
  - **On:** If you select this, messages are downloaded automatically on receipt.
  - **Off:** Requires you to confirm you want to download the message.
  - **Home network only:** If you select this, messages are downloaded automatically on receipt in your home network area. And outside your home service area, it requires you to confirm you to download the message.
  - **Reject:** If you select this, every message will be rejected on receipt.
- ▶ **Network settings:** If you select the multimedia message server, you can set the URL for multimedia message server.
- ▶ **Permitted types:** Set the permitted type. Possible values are Personal, Advertisements and Information.

## Voice mail centre

(Menu-4-9-3)

You can receive the voicemail if this feature is supported by your network service provider. When a new voicemail is arrived, the symbol will be displayed on the screen. Please check with your network service provider for details of their service in order to configure the phone accordingly.

1. Hold down  key in standby mode.
2. You can check the following submenus.
  - **Home:** You can listen to voice mails by selecting Home.
  - **Roaming:** Even when you are in abroad, you can listen to voice mails if roaming service is supported.

## Info message

(Menu-4-9-4)

Info service messages are text messages delivered by the network to GSM. They provide general information such as weather reports, traffic news, taxis, pharmacies, and stock prices. Each type of information has the number; therefore, you can contact service provider as long as you have input the certain number for the information. When you have received an info service message, you can see the popup message to show you that you have received a message or the info service message is directly displayed.

The following options are available.

- ▶ **Receive:** If you select YES, your phone will receive Info service messages. Otherwise, it will not receive Info service messages any more.
- ▶ **Alert:** If you select YES, Your phone will beep when you have received Info service message numbers. Otherwise, it will not beep even though you have received info service messages.
- ▶ **Languages:** You can select the language you want by pressing [On/Off]. Then, the info service message will be shown in the language that you selected.

### Push message



(Menu-4-9-5)

You can order push messages from WAP service providers. Push messages are notifications of, for example, news headlines and they can contain a text message or the address of a WAP service. For availability and subscription, contact your WAP service provider.

- Note** • Service providers can update an existing push message with a new incoming push message.  
(Old one will be replaced with new one.)
  - When push messages expire, they are deleted automatically.

In this menu, you can set the push message receive option.

- ▶ **Receive on/off:** If you select **Receive on**, all push messages will be accepted irrespective of the origination.
- ▶ **Auto download:** Will only accept the push messages from T-Mobile.



Icon	Description
	Read Push Message
	Unread Push Message

After selecting a push message, the following menus are available.

- **Information:** Shows the information of the current push message.
- **Load:** Connects to a specific site using the information in the current push message.
- **Delete:** Deletes the current push message.
- **Delete All:** Deletes all the messages in inbox (including SMS, MMS, etc.).

## How to access t-zones

You can use your phone for so much more than just texting and talking. **t-zones** provides information you need such as news, weather forecast, information on sports or traffic when you need it. In addition, **t-zones** provides superior multimedia services such as the latest ring tones, wallpapers or games for your interest.

Press the menu key (  ) and select **t-zones** using navigation keys. You can also access **t-zones** by pressing  key in standby mode.

- Note** The additional cost for services may be dependent on the network.





# Contacts

You can save phone numbers and their corresponding names in the memory of your SIM card. In addition, you can save up to 200 numbers and names in the phone memory.

Press the left soft key [Menu] in standby mode, then select **Contacts**.

## Search

Menu-6-1

1. Select **Search**. You are asked to enter a name.
2. Enter the start of the name that you wish to find and press left soft key [Search].
  - ▶ You can access the Contacts directly by pressing the up navigation key (  ) in standby mode.
  - ! **Note** You can also scroll through the Contacts from the beginning, by pressing the left soft key [List] directly.
3. After finding the desired contact, you can make a call to the number by pressing the  key. Or press the left soft key [Option] to use the following options.
  - ▶ **Edit**: You can edit the name and number.
  - ▶ **Write text message**: Use this to write a text message to the contact.
  - ▶ **Write multimedia message**: Use this to write a multimedia message to the contact.
  - ▶ **Copy**: Use this to copy the contact entry from SIM to the phone memory or vice versa.
  - ▶ **Main number**: Select which number will be the main number. The main number will be displayed first
  - ▶ **Delete**: Deletes the contact.

## Add new

Menu-6-2

You can add a contact entry using this function.

There are 2 memories: Phone memory and SIM memory. To select the memory, go to **Set memory** [Menu-6-5-1]. The phone memory capacity is 200 entries. You can enter up to 20 characters in each name in the phone memory. The SIM card memory capacity depends on the SIM card.

1. Press the Menu key and select **Contacts** → **Add new**.
  2. You can add new contact entries to the SIM memory or the phone memory. To select the memory, go to **Set memory** [Menu-6-5-1]. (Refer to page 65.)
- **Adding new entries into SIM memory**  
You can enter a name and number, and select the required group. (Depends on the SIM)
  - **Adding new entries into the phone memory**  
You can enter a name, numbers, E-mail address and memo, and select the required group. And select which number will be the main number.

### Caller groups



Menu-6-3

You can list up to 20 contacts per group. There are 7 pre-defined groups, where you can create lists.

1. Select **Caller groups**. All group lists will be displayed: **Family, Friend, Colleague, VIP, Group 1, Group 2, and Others**.
2. Select the group name that you want to manage by pressing the left soft key [Option]. The following submenus will be displayed.
  - ▶ **Member list:** Displays the member list in the group.
  - ▶ **Group ringtone:** Use this to select the ring tone to be used when you receive a voice phone call from a person in the group.
  - ▶ **Group icon:** Use this to select the graphic icon to be displayed when you receive a call from a person in the group.
  - ▶ **Add member:** Add a member to the group. You can add up to 20 members per group.
  - ▶ **Remove member:** Removes the member from the group member list. The contact entry still remains in Contacts.
  - ▶ **Rename:** Assigns a new name to the group.

### Speed dial

Menu-6-4

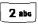You can assign any of the keys  to  with a name list entry. You can call directly by pressing this key for 2-3 seconds.

1. Open Contacts first by pressing the right soft key [Contacts] in standby mode.
2. Scroll to **Speed dial**, then press [Select].
3. To add a number to **Speed dial**, select (Empty). Then, you can search the name through Contacts.
4. You can change or delete a speed dial number, make a call or send a message by pressing the left soft key [Option].

## Settings

Menu-6-5

### Set memory

(Menu-6-5-1)

You can select the memory for the Contacts feature between the SIM and the phone. If you select **Variable**, when adding entry, the phone will ask where to save the number.

### Search by

(Menu-6-5-2)

You can set the phone to search by **name** or **number**, when you search Contacts. If you select **Variable**, the phone will ask how to search when you search Contacts.

### View options

(Menu-6-5-3)

You can set the Contact display option.

- ▶ **Name only:** When you search Contacts, the list displays only names.
- ▶ **With pictures:** When you search Contacts, the list displays names and corresponding pictures.
- ▶ **Name & number:** When you search Contacts, the list displays names and numbers.

## Copy all

Menu-6-6

You can copy/move entries from the SIM card memory to the phone memory and vice versa.

- ▶ **SIM to Phone:** Use this to copy the entry from the SIM Card to the Phone memory.
- ▶ **Phone to SIM:** Use this to copy the entry from the Phone memory to the SIM Card.

The following options are available.

- **Keep original:** When copying, the original dial numbers are kept.
- **Delete original:** When copying, the original dial numbers will be erased.

### Delete all

Menu-6-7

You can delete all entries in the SIM and/or phone. This function requires the security code.

Press  to return to standby mode.


### Information

Menu-6-8

▶ **Service dial number (SIM dependent):** Use this to view the list of Service Dialling Numbers (SDN) assigned by your network operator (if supported by the SIM card). Such numbers include the emergency, directory enquiries and voice mail numbers.

1. Select the Service dial number option.

2. The names of the available services will be shown.

3. Use the up/down navigation keys to select a service. Press .

▶ **Memory status:** You can check the current memory status of the SIM card or the phone memory.

▶ **Own number (SIM dependent):** Use this to display your phone number in the SIM card.







Press the menu key (  ) and select **Organiser**.


## Alarm clock

Menu-7-1

There are 5 alarm clocks available. Set the alarm to ring at a specific time.

After selecting an alarm clock using the left soft key [Select],

1.  **Alarm on/off:** Select **On** using the left/right navigation key.  
To deactivate the alarm function, select **Off**.
2.  **Alarm time:** Enter the alarm time using the numeric keys
3.  **Repeat:** Select the desired one from Once, Mon~Fri, Mon~Sat, and Everyday using the left/right navigation key.
4.  **Alarm melody:** Select the desired alarm melody using the left/right navigation key.
5. Press the left soft key [OK].
6. You can edit the alarm clock name. After keying in the name, press the left soft key [OK].





When an alarm function is activated, “  ” is shown in standby mode.

When the alarm time is reached, it sounds the alarm melody.



- ▶ To turn off the alarm, press the right soft key [Quit].


## Scheduler

When you enter this menu, a calendar appears. A square cursor is located on the current date. You can move the cursor to another date using navigation keys. On the calendar, you can use the following keys.

Each press of		skips back a year.
		skips forward a year.
		skips back a month.
		skips forward a month.

You can enter a schedule or memo in the scheduler by pressing the left soft key [Options].

- ▶ **Add new:** Select this to enter a new schedule or a memo. After a schedule note or memo is entered on a date, the date is shown in a different colour and “” (schedule), “” (memo) appears on the right bottom of the screen. This function reminds you of your schedule. And the phone will sound an alarm tone if you set the phone to do so.
- ▶ **View:** Shows the schedule note or memo for the chosen day. Press the left soft key [Options] to edit or delete the note you selected.
- ▶ **View all:** Shows all the notes that are entered in the phone. Use the up/down navigation keys to browse through the note lists.
- ▶ **Delete past:** Select this to delete the expired schedule notes that have already been notified. You are asked to confirm this action.
- ▶ **Delete all:** Select this to delete all the schedule notes and memos. You are asked to confirm this action.




Press the menu key (  ) and select **Tools** using the navigation keys.

## Calculator

Menu-7-3

Using this feature, you can use the phone as a calculator. The calculator provides the basic arithmetic functions: addition, subtraction, multiplication and division. (You can enter numbers up to the second decimal place).
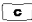
### Using the Calculator

1. Enter the first number using the numeric keys.
2. Press the corresponding navigation key to select a mathematical function.
  - ❗ **Note** To erase any mistakes or clear the display, press the  key.  
To include a decimal point, press the  key.  
To include a minus sign, press the  key.
3. To calculate the result, press the left soft key [Result] or OK key.
4. After calculation, press the left soft key [Reset] to return to the menu.

## Unit converter


Menu-7-4

This converts any measurement from one unit to another.

There are 4 types that can be converted into units: Length, Area, Weight and Volume.

1. Select one of four unit types by pressing the left soft key [Unit].
2. Move to the current unit section by pressing the down navigation key.
3. Select the unit you want to convert using the left/right navigation keys.
4. Move to the Convert unit section by pressing the down navigation key.

5. Select the unit you want to convert to, using the left/right navigation keys.
6. Input numbers using the numeric keys. Conversion is calculated automatically.

**Note** You can input a decimal number by pressing the  key.

## World time

Menu-7-5

You can check the current time of Greenwich Mean Time (GMT) and 65 major cities around the world, using the left/right navigation keys.

The screen shows the city name, current date and time.

To select the time zone in which you are located, proceed as follows:

1. Select the city corresponding to your time zone by pressing the left/right navigation keys. The local date and time are displayed.
2. If you want to change the time display in standby mode to the selected time, press the left soft key [Set].

**Note** The time zone setting of each city in World time menu may be affected by network condition.

## Voice recorder


Menu-7-6

You can record a memo. You can record up to 10 voice memos up to a maximum of 20 seconds each.

You can play or delete the recorded memo or record new voice memo using the left soft key [Options] key.

**Note** In standby mode, you can go directly to the Voice recorder menu by pressing the down navigation key.


## Record

1. Press and hold down  key in standby mode.
2. Once recording is started, the message 'Recording...' and the remaining time is displayed.

3. When you finish recording, press left soft key [Save].

- ❗ **Note** If all memo locations are full, you must delete an old memo before recording a new one.

## View list

The phone shows the voice memo title which you have recorded by pressing  in standby mode. You can play back or delete the recorded voice memo.

- ▶ **Playback:** Allows you to play back all memos recorded, starting with the most recent memo.
- ▶ **Write multimedia message:** You can write multimedia messages using the voice memo.
- ▶ **Delete:** Deletes the voice memo.
- ▶ **Delete all:** Allows you to delete all the memos. Press the left soft key[Yes] to confirm.

## Memory status

Menu-7-7

You can check the current memory status of each repository:  
Free memory, Text message, Multimedia message, Inbox, Outbox, Drafts, Multimedia templates, Messages in SIM, Push message, Voice memo, Photos, Pictures, Sounds, Games & more.  
And you can go to each repository to manage it.

## S/W version

Menu-7-8

You can check the current Model code, Country code, software version, and network code of your phone.



# Camera

With the C3300 phone, you can take pictures and save them. After taking a picture, you can also send it via MMS (Multimedia Messaging Service) right away.

- Note** If the battery is too low, you may not be able to use the Camera feature.

## Take photo

Menu-8-1

Press the Menu key and select **Camera** → **Take photo** using navigation keys. Or, you can directly open the camera module by a press of the Camera key in standby mode. The camera module opens and you'll see the view to be captured.

Before shooting, you can set the following options.



▶ preview option menu bar

### 1. Digital zoom ( ): x1, x2, x4

- Note** The maximum zoom scale depends on the resolution as follows.

48 x 48	unavailable
128 x 160	1x, 2x, 4x
320 x 240	1x, 2x
640 x 480	1x

### 2. Tone ( ): Colour ( ) / Sepia ( ) / Black and white ( )


### 3. Brightness ( ): -2, -1, 0, +1, +2

### 4. Timer ( ): Off, 3 sec, 5 sec

### 5. Memory ( ): Shows the current memory status.

- Note** If the memory is full, "Memory full" message is popped up and you cannot save a photo. Create space by deleting old photos in **My photos**.

 
### 6. Flash ( )

**7. Resolution** (  ): 48x48 (for phonebook), 128x160, 320x240, 640x480





**Note** For the picture to be used in the phonebook, select 48x48 (for phonebook).

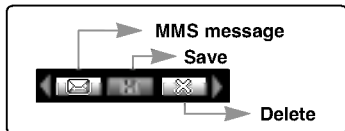
**8. Image quality** (  ): Fine/ Normal/ Basic.

1. Center the desired option menu using the left/right navigation keys.
2. Select the desired value with the up/down navigation keys.
3. After finishing all the setting, focus on the subject to capture and press the Camera key or OK key. With a click, the image is captured and the following menu bar appears.



**Note** If **Auto save** [Menu-8-4-1] is set to **On**, the captured image is automatically saved without displaying this menu bar. (Refer to page 76.)

4. To save the image, center the (  ) and press (  ). If you don't want to save the image, center the (  ) and press (  ). You can immediately access My photos by pressing the left soft key [My photos].

You can also send the image via multimedia message by selecting (  ). For further information regarding multimedia message writing, refer to page 49.

## Take in modes












Menu-8-2

You can enjoy taking pictures in diverse preset frames. 7 preset frames are available. Press the Menu key and select **Camera** → **Take in modes** using navigation keys.

 
Before shooting, you can set the following options.



preview option menu bar

1. **Frame** (  ): Select the desired one from 7 preset frames.
  2. **Image quality** (  ): Fine/ Normal/ Basic.
  3. **Digital zoom** (  ): x1, x2, x4
  4. **Tone** (  ): Colour (  )/ Sepia (  )/ Black and white (  )
  5. **Brightness** (  ): -2, -1, 0, +1, +2
  6. **Timer** (  ): Off, 3 sec, 5 sec
  7. **Memory** (  ): Shows the current memory status.
- Note** If the memory is full, "Memory full" message is popped up and you cannot save a photo. Create space by deleting old photos in **My photos**.
8. **Flash** (  )

1. Center the desired option menu using the left/right navigation keys.
2. Select the desired value with the up/down navigation keys.
3. After finishing all the setting, focus on the subject to capture and press the Camera key or OK key. With a click, the image is captured and the following menu bar appears.

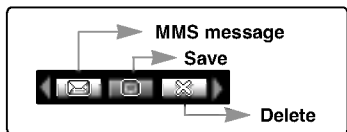

- Note** If **Auto save** [Menu-8-4-1] is set to **On**, the captured image is automatically saved without displaying this menu bar. (Refer to page 76.)

4. To save the image, center the ( ) and press . If you don't want to save the image, center the ( ) and press .

You can also send the image via multimedia message by selecting ( ).

## My photos

### Menu-8-3

Press the Menu key and select **Camera** → **My photos** using navigation keys.

All the photos taken in the **Take photo** and **Take in modes** are stored in this menu. The latest taken picture comes first.

The photos are classified into **General photos**, **Mode photos**, and **Phonebook photos**. And in All photos, you can view all the photos. With pictures, you can do the following by pressing the left soft key [Options].

- ▶ **Delete:** Deletes the selected photo.

- Note** To clear up the My photos, go to **Camera** → **Settings** → **Delete all photos** [Menu-8-4-2].

- ▶ **Send via MMS:** You can also send the image via multimedia message by selecting this menu . For further information regarding multimedia message writing, refer to page 49.
- ▶ **Set as wallpaper:** You can set the photo as wallpaper.
- ▶ **Rename:** You can change the name of the selected photo.
- ▶ **Information:** You can check the name, resolution, size, and date and time of the selected photo.

### Settings

Menu-8-4

Press the Menu key and select **Camera** → **Settings** using navigation keys.

**Auto save:** If you set this **On**, the captured images are automatically saved without displaying the Save menu bar.

**Delete all photos:** Use this menu to delete all the photos. You are asked to confirm this action.

### Memory status

Menu-8-5

Press the Menu key and select **Camera** → **Memory status** using navigation keys.




## Profiles

Menu-9-1


In Profiles, you can adjust and customise the phone tones for different events, environments, or caller groups.

There are six preset profiles: **Vibrate Only**, **Silent**, **General**, **Loud**, **Headset** and **Car**. Each profile can be personalised.

Press the menu key (  ) and select **Profiles** using navigation keys.

### Changing the profile

(Menu-9-1-1)

1. A list of profiles is displayed.
2. In the **Profile** list, scroll to the profile you want to activate and press the left soft key [Select] or OK key (  ).
3. Then, select **Activate**.

### Customising profiles - Personalise

(Menu-9-1-2)

Scroll to the desired profile in the Profile list and select **Personalise**. The profile setting option opens. Set the option as required.

1. **Call alert type**: Set the alert type for incoming calls.
2. **Ring tone**: Select the desired ring tone from the list. Scroll through the list using up/down navigation keys. You can hear the desired tone prior to making a selection.
3. **Ring volume**: Set the volume of the ringing tone.
4. **Message alert type**: Select the alert type for receiving a message.
5. **Message tone**: Select the alert tone for receiving a message.
6. **Keypad tone**: Select the desired keypad tone.
7. **Keypad volume**: Set the volume of keypad tone.
8. **Effect sound volume**: Set the volume of effect sound.


- 9. Power on/off volume:** Set the volume of the ringing tone when switching the phone on/off.
- 10. Auto answer:** (only in **Headset** profile and **Car** profile) You can activate the automatic answer feature. Select when the phone answers automatically.
- ▶ **Off:** Deactivates the Auto answer feature.
  - ▶ **After 5 secs:** After 5 seconds, the phone will answer automatically.
  - ▶ **After 10 secs:** After 10 seconds, the phone will answer automatically.

### Customising profiles - Rename (Menu-9-1-3)

You can rename a profile and give it any name you want.

**Vibrate only, Headset** and **Car** profiles cannot be renamed.

1. To change the name of a profile, scroll to the profile in the profile list and select **Rename**.
2. Key in the desired name and press the OK key or the left soft key [OK].

Press the menu key (  ) and select **Settings** using the navigation keys.

## Date & Time

Menu-9-2

This option lets you change the current time and date displayed.

The following options are available.

### Set date

(Menu-9-2-1)

Use this to enter the day, month and year. You can change the date format via the **Date format** menu option.

### Date format

(Menu-9-2-2)

DD/MM/YYYY (day/month/year)

MM/DD/YYYY (month/day/year)

YYYY/MM/DD (year/month/day)

### Set time

(Menu-9-2-3)

Use this to enter the current time. You can choose the time format via the **Time format** menu option.

### Time format

(Menu-9-2-4)

24-hours

12-hours


### Phone settings

Menu-9-3

Many features of your phone can be customised to suit your preferences. All of these features are accessed via the **Phone settings** menu.

### Display settings

(Menu-9-3-1)

- ▶ **Wallpaper:** Use this to set up the display on the LCD screen in standby mode.
- ▶ **Menu colour:** Your phone provides you with 4 menu colour themes. Set the menu colour by scrolling and pressing the left soft key [Select].
- ▶ **Greeting note:** If you select **On**, you can edit the text which will be displayed in standby mode
- ▶ **Backlight:** Use this to select whether or not the phone uses the backlight. A small increase in standby/talk time can be achieved by turning the backlight off.
- ▶ **LCD contrast:** You can set the brightness of LCD by pressing  .
- ▶ **Information window:** You can preview the current state of the selected menu before opening the menu. The state is shown on the bottom of the screen.

### Language

(Menu-9-3-2)

You can select the display language. When the language option is set to **Automatic**, the language is automatically selected according to the language of the SIM card used. English will be set if the language on the SIM card is not supported by the phone.

## Call settings

Menu-9-4

To change the settings for call diverting.

### Call divert

(Menu-9-4-1)

When this network service is activated, you can direct your incoming calls to another number, for example, to your voice mailbox number. For details, contact your network operator. Select one of the divert options, for example, select **If busy** to divert voice calls when your number is busy or when you reject incoming calls.

The following options are available.

**All voice calls:** Diverts all voice calls unconditionally.

**If busy:** Diverts voice calls when the phone is in use.

**If no reply:** Diverts voice calls which you do not answer.

**If out of reach:** Diverts voice calls when the phone is switched off or out of coverage.

**All data calls:** Diverts to a number with a PC connection unconditionally.

**All fax calls:** Diverts to a number with a fax connection unconditionally.



Each option has the following menu:

- ▶ **Activate:** Activates the corresponding service.
  - **To voice mail centre:** Forwards to message centre. This function does not apply to **All data calls** and **All fax calls** menus.
  - **To other number:** Input the number for call diverting.
  - **To favourite number:** After entering up to 5 frequently used phone numbers, you can divert calls to them.
- ▶ **Cancel:** Cancels the selected call divert.
- ▶ **View status:** You can check the status of the service.

**Cancel all:** Cancels all call divert settings.

### Answer mode (Menu-9-4-2)

Select the desired mode to answer a call.

- ▶ **Flip open:** When the phone rings, you can answer a call simply by opening the folder.
- ▶ **Press any key:** When the phone rings, you can answer a call by pressing any key except the  key and the right soft key ().
- ▶ **Send only:** You can answer a call only by pressing the send key.

### Send my number (Menu-9-4-3)

This network service lets you decide whether your phone number is displayed (On) or hidden (Off) from the person you are calling.

Select **Set by network** to reset the phone to the setting that you have agreed upon with your service provider.

### Call waiting (Menu-9-4-4)

The network will notify you of a new incoming call while you have a call in progress. Select **Activate** to request the network to activate call waiting, **Cancel** to request the network to deactivate call waiting, or **View status**, to check if the function is active or not.

### Minute minder (Menu-9-4-5)

When set to **On**, the phone will beep every minute during an outgoing call to keep you informed of the length of the call.

### Auto redial (Menu-9-4-6)

Select **On**, and your phone will make a maximum of four attempts to connect the call after an unsuccessful call attempt.

**Closed user group (Network dependent)** (Menu-9-4-7)

Restricts usage of the phone with numbers that belong to certain user groups. When this function is used, every outgoing call is associated with a group index. If a group index is specified, it is used for all outgoing calls. If no group index is specified, the network will use the preferential index (a specific index that is stored in the network).

- ▶ **Default:** Activates the default group agreed on with the network operator.
- ▶ **Set:** Select this to activate the selected CUG Index.
- ▶ **Edit:** You can edit the CUG name and CUG Index.
- ▶ **Delete:** Deletes the selected CUG.
- ▶ **Delete all:** Deletes all CUG.

### Security settings

Menu-9-5

Various passwords are used to protect certain features of your phone. Refer to page 24-25 for the various passwords.

#### PIN code request

(Menu-9-5-1)

When the **PIN code request** feature is enabled, you must enter your PIN each time you switch the phone on. Consequently, any person who does not have your PIN cannot use your phone without your approval.

- Note** Before disabling the PIN code request feature, you must enter your PIN.

The following options are available:

- **On:** You must enter the PIN each time the phone is switched on.
- **Off:** The phone connects directly to the network when you switch it on.

#### Phone lock

(Menu-9-5-2)

When the **Phone lock** feature is enabled, the phone is locked and you must enter the phone password each time the phone is switched on.

The password is factory set to **0000**. To change the phone password, refer to the **Change codes–Security code** menu option (Menu-9-5-5-1). Once the correct password has been entered, you can use the phone until you switch it off.

The following options are available:

##### **1 Power on**

- ▶ **On:** You are required to enter the phone password when you switch the phone on.
- ▶ **Off:** You do not need to enter the phone password when you switch the phone on.

- ▶ **Automatic:** Your phone will request security code only when you change your SIM card.

## 2 Immediately

- ▶ After entering the correct security code, the phone will lock after going into the idle state. If you want to disable this phone lock, you should enter the right security code after pressing the right soft key. If you power off in the phone lock state, when the phone is next powered on, the phone is in the lock state.

## Call barring (Network dependent) (Menu-9-5-3)

Call barring lets you restrict the making and receiving of calls with your phone. For this function, you need the barring password, which you can obtain from your service provider.

The following options are available:

- ▶ **All outgoing:** No call can be made.
- ▶ **International:** International calls cannot be made.
- ▶ **International when roam:** When abroad, calls can be made only to numbers within the current country and to your home country, the country where your home network provider is located.
- ▶ **All incoming:** No call can be received.
- ▶ **Incoming when roam:** Calls cannot be received when you are using your phone outside your home service area.
- ▶ **Cancel all:** All call barring settings are deactivated; calls can be made and received normally.
- ▶ **Change password:** Use this to set and change the call barring password obtained from your service provider using this option. You must enter the current password before you can specify a new one. Once you have entered a new password, you are asked to confirm it by entering it again.

- Note** To use Call barring service, you must input the network password. When calls are barred, calls may be possible to certain emergency numbers on some networks.

### Fixed dial number (FDN)

(SIM dependent)

(Menu-9-5-4)

Use this to restrict your outgoing calls to selected phone numbers, if this function is supported by your SIM card. The PIN2 code is required.

The following options are available:

- ▶ **Activate:** Use this to only call phone numbers saved in the phonebook. You must enter your PIN2 code.
- ▶ **Cancel:** Allows you to call any number.
- ▶ **Number list:** Use this to view the numbers saved as fixed dial numbers.

- Note** Not all SIM cards have a PIN2. If your SIM card does not, this menu option is not displayed.

### Change codes

(Menu-9-5-5)

The **Change codes** feature lets you change your current password to a new one. You must enter the current password before you can specify a new one.

Use this to change the access codes: **Security code, PIN2 code**

- Note** PIN: Personal Identification Number

## Network settings

Menu-9-6

The **Network settings** feature enables you to indicate whether the network used when roaming (outside your home area) is selected automatically, manually or preferably.

- Note** You can select a network other than your home network only if it has a valid roaming agreement with your home network.

### Automatic

(Menu-9-6-1)

Use this to set the phone to automatically search for and select one of the cellular networks available in your area.

The phone will default back to **Automatic** if it is switched off.

### Manual

(Menu-9-6-2)

If you want to select the desired network manually from a list of network. If the connection to the manually selected network is lost, the phone will sound an error tone and ask you to select a network again. The selected network must have a roaming agreement with your home network, that is, the operator whose SIM card is in your phone. The phone will let you select another network if the phone fails to access the selected network. If you switch off the phone, the phone will be reset to **Automatic**.

### Preferred

(Menu-9-6-3)

You can set a list of preferred networks the handset should attempt to register with first, before attempting to register to any other networks. This list is created from the handset's predefined list of known networks.

### GPRS setting

Menu-9-7

GPRS(General Packet Radio Service) is a technology that allows mobile phones to be used for sending and receiving data over the mobile network. GPRS is a data bearer that enables wireless access to data network such as the Internet.

Before you can use GPRS technology

- You need to subscribe to the GPRS service. For availability and subscription to GPRS service, contact your network operator or service provider.
- You need to save the GPRS settings for the applications used over GPRS.

### Power on

(Menu-9-7-1)

If you select **Power on** and you are in a network that supports GPRS, the phone registers to the GPRS network and sending short messages will be done via GPRS. Also, starting an active packet data connection, for example, to send and receive e-mail, is quicker.

### When needed

(Menu-9-7-2)

If you select **When needed**, the phone will use a GPRS connection only if you start an application or action that needs it. The GPRS connection is closed after it is no longer required by any application.



- Note** If there is no GPRS coverage and you have chosen Automatic, the phone will periodically try to establish a connection.

## Internet


### Menu-9-8

You can access various WAP (Wireless Application Protocol) services such as banking, news, weather reports and flight information. These services are specially designed for mobile phones and they are maintained by WAP service providers.

Check the availability of WAP services, pricing and tariffs with your network operator and/or the service provider whose service you wish to use. Service providers will also give you instructions on how to use their services.

To launch the browser in standby mode, press either the t-zone key (  ) or press and hold the  key.

Once connected, the homepage is displayed. The content depends on the service provider.

To exit the browser at any time, press the (  ) key. The phone will return to the standby mode.

### Navigating with the WAP browser

You can surf the Internet using either the phone keys or the WAP browser menu.

### Using the phone keys

When surfing the Internet, the phone keys function differently to phone mode.

Key	Description
up/down navigation keys	Scrolls each line of the content area
C key	Returns to the previous page
OK key	Selects options and confirms actions

### Using the WAP browser menu

There are various menu options available when surfing the Mobile Web.

- Note** The WAP browser menus may vary, depending on your browser version.

### Home (Menu-9-8-1)

Connects to a homepage. The homepage will be the site which is defined in the activated profile. It will be defined by the service provider if you have not defined it in the activated profile.

### Bookmarks (Menu-9-8-2)

This menu allows you to store the URL of favourite web pages for easy access at a later time.

#### To create a bookmark

1. Press the left soft key [Options].
2. Select Add new and press the OK key.
3. After entering the desired URL and title, press the OK key.

\* **Tip:** Use the  key and  key to enter symbols. To enter “.”, press .

After selecting a desired bookmark, the following options are available.

- ▶ **Connect:** Connects to the selected bookmark.
- ▶ **Add new:** Select this to create a new bookmark.
- ▶ **Edit:** You can edit the URL and/or the title of the selected bookmark.
- ▶ **Delete all:** Deletes all the bookmarks.

## Profiles

(Menu-9-8-3)

A profile is the network information used to connect to the Internet. T-mobile supports three kinds of profile.

### 1. t-zones

If you want to connect the server via WAP 2.0, activate this profile.

### 2. t-zones business

### 3. t-zones GPRS

If you want to connect the WAP server over GPRS, activate this profile.

### 4. t-zones CSD

If you want to connect the WAP server over CSD, activate this profile. For more information, consult T-mobile.

Each profile has submenus as follows:

- ▶ **Activate:** Activates the selected profile.
- ▶ **Settings:** Use this to edit and change WAP settings for the selected profile.
  - **Homepage:** This setting allows you to enter the address (URL) of a site you want to use as homepage. You do not need to type `http://` at the front of each URL as the WAP Browser will automatically add it.
  - **Bearer:** You can set the bearer data service.
    - 1 Data
    - 2 GPRS
  - **Data settings:** Appears only if you select Data Settings as a Bearer / service.
    - IP address:** Enter the IP address of the WAP gateway you want.
    - Dial number:** Enter the telephone number to dial to access your WAP gateway.

**User ID:** The users identity for your dial-up server (and NOT the WAP gateway).

**Password:** The password required by your dial-up server (and NOT the WAP gateway) to identify you.

**Call type:** Select the type of data call : Analogue or Digital (ISDN)

**Call speed:** The speed of your data connection ; 9600 or 14400

**Linger time:** You need to enter timeout period. After entering that, the WAP navigation service will be unavailable if any data is not input or transferred.

- **GPRS settings:** The service settings are only available when GPRS is chosen as a bearer service.

**IP address:** Input the IP address of the WAP gateway you access.

**APN:** Input the APN of the GPRS.

**User ID:** The users identify for your APN server.

**Password:** The password required by your APN server.

- **Connection Type:** The options for connection type are Temporary or Continuous and depend on the gateway you are using.

### **Continuous**

A confirmed delivery mechanism but generates more network traffic.

### **Temporary**

A non-confirmed (connectionless) service.

- **Proxy settings**

**IP address:** Input the IP address of the Proxy server you access.

**Port:** Input the Proxy Port

### - DNS settings

**Primary server:** Input the IP address of the primary DNS server you access

**Secondary server:** Input the IP address of the secondary DNS server you access

- **Secure settings:** According to the used gateway port, you can choose this option as On or Off.

- **Display image:** You can select whether images on WAP cards are displayed or not.

▶ **Rename:** You can change the profile name.

▶ **Add new:** You can add a new profile.

## Go to URL

(Menu-9-8-4)

You can connect directly to the site you want. After entering a specific URL, press the OK key.

## Cache settings

(Menu-9-8-5)

The information or services you have accessed are saved in the cache memory of the phone.

### Clear cache

Removes all context saved in cache.

### Check cache

Set a value whether a connection attempt is made through cache or not.

**Note** A cache is a buffer memory, which is used to save data temporarily.

### Cookies settings

(Menu-9-8-6)

The information or services you have accessed are saved in the cache memory of the phone.

#### Clear cookies

Removes all context saved in Cookies.

#### Check cookies

Check whether a cookie is used or not.

### Security certification

(Menu-9-8-7)

A list of the available certification is shown.

- ▶ **Authority:** You can see the list of authority certificates that have been stored in your phone.
- ▶ **Personal:** You can see the list of personal certificates that have been stored in your phone.

### Reset profiles

(Menu-9-8-8)

You can reset profiles to return to original settings.

### Browser version

(Menu-9-8-9)

The WAP browser version is displayed.

## Reset settings

Menu-9-9

You can reset your phone to its default configuration. To do so, proceed, as follows.

1. Select the **Reset settings** menu option.
2. You are requested to enter the 4-digit security code.

**Note** The security code is preset to 0000. To change this, refer to page 86.






Please check to see if any problem which you may have with your phone is described here before taking it for service or calling a service engineer.


**Q** How do I view the list of outgoing calls, incoming calls and missed calls?

**A** Press  .


**Q** How do I clear all call history?

**A** Press the left soft key and then    .

**Q** How do I view all numbers saved in the memory?

**A** Press the up navigation key  .

**Q**  does not disappear from the screen.

**A** Check whether you are in a service area. If you continue to see  , turn off the power and wait for approximately 2 minutes before turning it back on. If there is no change, relocate to another area and check again.

**Q** Connection is poor or is not audible in certain areas.

**A** In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

**Q** Connection is poor even when established.

**A** In certain areas, signal strength can vary dramatically. Try moving to a different location. Heavy network traffic may affect the ability to connect, or the stability of the call.

**Q** LCD does not turn on.

**A** Remove and replace the battery and turn on the power. If the phone still does not turn on, charge the battery and try again.

**Q** An echo can be heard during connection with a certain telephone in a certain area.

**A** It is called 'Echo Phenomenon'. It occurs if the volume is too high or caused by special properties (semi electronic telephone exchange) of the machine on the other end.

**Q** The phone gets warm.

**A** During long calls, or if games/Internet are used for a long time, the phone may become hot. This is perfectly normal and has no effect upon the life of the product or performance.

**Q** The bell does not ring, or lamp or LCD blinks only.

**A** The phone is set to 'Vibrate only' or 'Silent' in the Profiles menu. Please select 'General' or 'Loud'

**Q** Standby duration of the phone gradually becomes shorter.

**A** Batteries have a limited life. When the battery lasts for half its original time, it requires replacement. Only use authorised replacement parts.


**Q** Usage time of battery becomes shorter.

**A** If the battery time is short, it may be due to the user environment, or large volume of calls, or weak signals.

**Q** No number is dialled when you recall a contact entry.

**A** Check that the numbers have been saved correctly, by using the Contact Search feature. Resave them, if necessary.

**Q** You cannot be contacted.

**A** Is your phone switched on (  pressed for more than three seconds)? Are you accessing the right cellular network? Have you set an incoming call barring option?

**Q** I cannot find the lock, PIN, or PUK code, or password?

**A** The default lock code is **'0000'**. If you forget or lose the lock code, contact your phone dealer. If you forget or lose a PIN or PUK code, or if you have not received such a code, contact your network service provider.



# Accessories

There are a variety of accessories available for your mobile phone. You can select these according to your personal communication requirements. Consult your local dealer for availability.

## Supplied adapter

This adapter lets you charge the battery while at home or in the office.



 
## Battery

Standard battery is available.



## Headset

Allows hands-free operation. Includes earpiece and microphone.



- Note**
- Always use genuine LG accessories. Failure to do this may invalidate your warranty.
  - Accessories may be different in different regions; please check with our regional service company or agent for further enquiries.



## General

**Product name** : C3300

**System** : GSM900 / DCS1800

## Ambient temperatures

**Max** : +55°C

**Min** : -10°C

# Declaration of Conformity



## Suppliers Details

**Name**

LG Electronics Inc

**Address**

LG Electronics Inc. LG Kang-nam Tower  
679, Yoksam-dong, Kangnam-gu, Seoul, Korea

## Product Details

**Product Name**

GSM 900 / GSM 1900 Dual Band Terminal Equipment

**Model Name**

C3300

**Trade Name**

LG

## Applicable Standards Details

**R&TTE Directive 1999/5/EC**

EN 301 489-7 : 2002

EN 60950-1 : 2001

EN 50350 : 2001

3GPP TS 51.010-1, V5.6.0 : 2004

Selection according to GCF-CC. V3.12.0 including requirements of EN 301 511

## Supplementary Information

The conformity to above standards is verified by 7Layers AG GmbH with Certificate No.(04-510078) and GSM test report (no.4\_LGE\_1903\_GSM\_1), EMC test report(no. 4\_LGE-1903\_GSM\_EMCa), safety test report(no. S40046) and SAR test report(no. 6620\_392b)

## Declaration

I hereby declare under our sole responsibility that the product mentioned above to which this declaration relates complies with the above mentioned standards and Directives

Name

Jin Seog, Kim / Director

Issued Date

Feb 20, 2005

LG Electronics Inc. Amsterdam Office  
Veluwezoom 15, 1327 AE Almere, The Nstherlands  
Tel : +31 - 36- 547 - 8940, e-mail : seokim @ lge.com

  
Signature of representative