

## 使用说明书



# 吸尘器

强劲吸力

## V-796CAR

中文 → 1-13页

English → Page 14-26

售后服务电话




未开通地区请拨打010-67346868

使用前请仔细阅读说明书，阅读完后请妥善保管以备需要时查阅。

## 目 录


产品规格	2
使用前注意事项	3-4
吸尘器的组装与吸力调节	5
部分名称与连接方法	
附件	
毛刷、尖吸嘴、鸭嘴、折叠管的使用	6
大刷头使用方法	7
震动刷头使用方法与清洗方法	8
使用方法	
清洗方法	
集尘筒	9
取放方法	
清洗方法	
排气海绵的清洗更换	10
故障通告前需确认事项	11-12
装箱单	13
产品保修卡	

## 产品规格

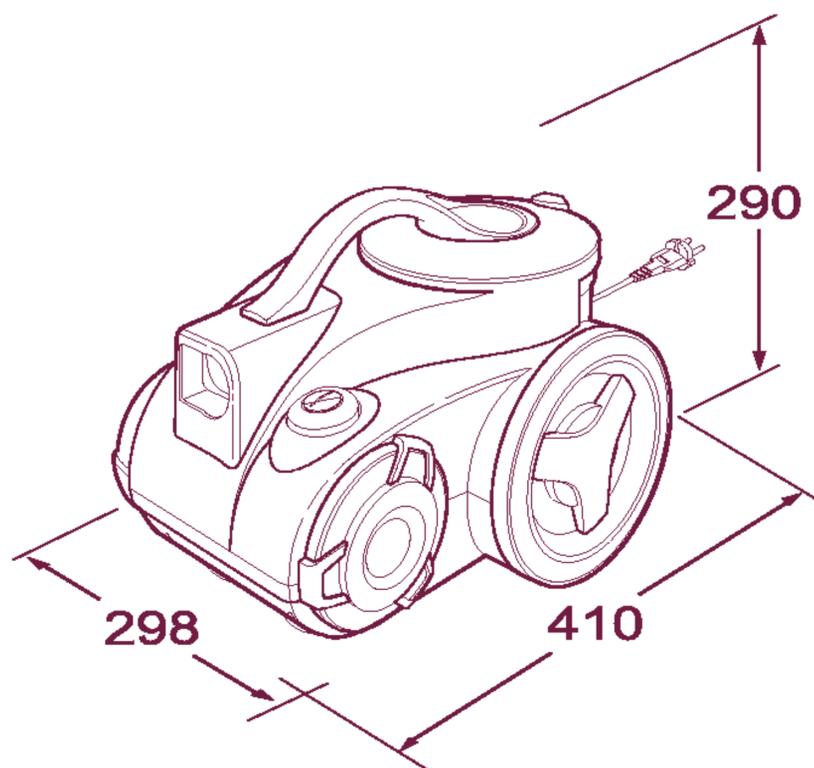

型号: V-796CAR  
额定电压: 220V  
额定功率: 1400W  
最大功率: 1600W  
吸率: 320W  
净重: 5.4Kg  
外形尺寸: 298mmx410mmx290mm  
本产品执行标准: GB4706.1-1998  
GB4706.7-1999  
GB17625.1-1998  
GB4343-1995

※为了提高产品质量而进行的外观及规格上的变更将不再另行通知。

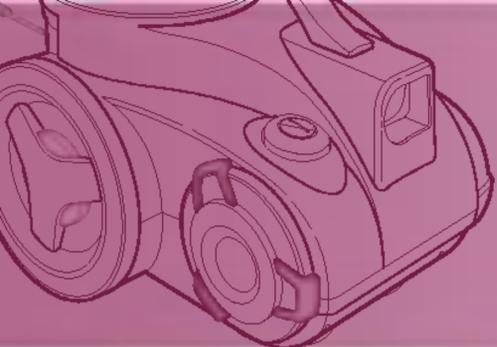

## 使用前注意事项


### 使用前注意事项

忽视说明而导致的错误操作将会对您造成不同程度的损害，请认真阅读以下提示说明。

-  **危险** 此标识表明违反标记事项时，会立刻发生严重伤害或死亡现象。
-  **警告** 此标识表明违反标记事项时，有可能发生严重伤害或死亡现象。
-  **注意** 此标识表明违反此标记事项时，有可能发生财产损失或轻微伤害。

### 危险

请不要在易燃液体附近使用吸尘器，以免发生火灾。

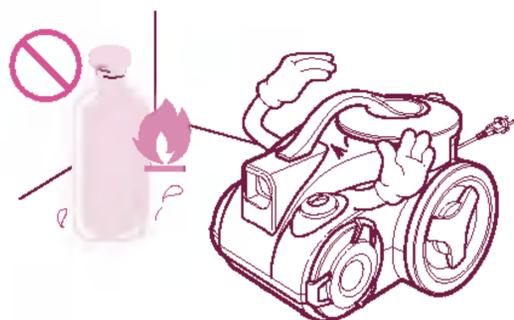


插拔电源插头时，请先关闭电源开关，以免发生火灾或触电的危险。请不要用湿手触摸电源插头，以防触电。（不要在220V以外的电源上使用产品）



### 警告


请不要让大头钉等金属物存留在软管、机体延长管内，否则会造成短路故障。请不要吸入头发团、大纸团等物品，否则容易堵塞软管，如有堵管现象，请及时清理。

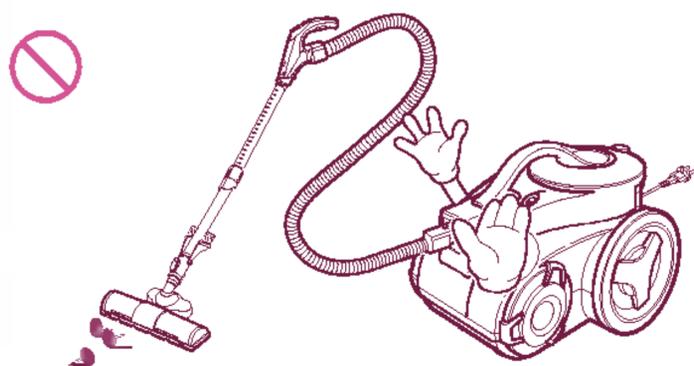


为避免发生火灾或触电的危险，在清扫时，注意不要让机体吸入液体、刀片、火种以及水泥、石膏粉等小微粒。



15A以上的电流请单独使用插线板，在一个插线板上同时使用多种电器可能会引发火灾。

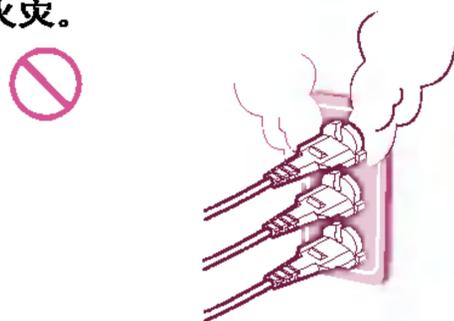


长时间不使用电器时，请记住拔掉电源插头；正处于通电时，请您不要离开。

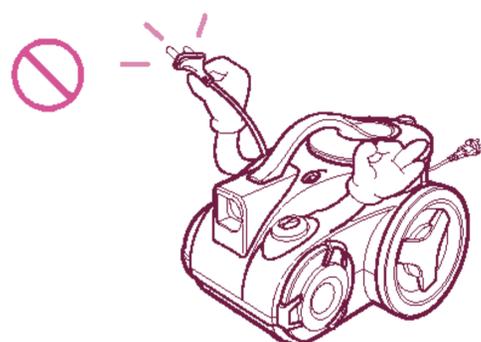


## 使用前注意事项

### 警告

请不要让电源线与吸尘器接近电暖器等热源，以免使机体变形或发生火灾。请您不要使用破损的电源和插头，如有破损，必须由指定维修站更换。

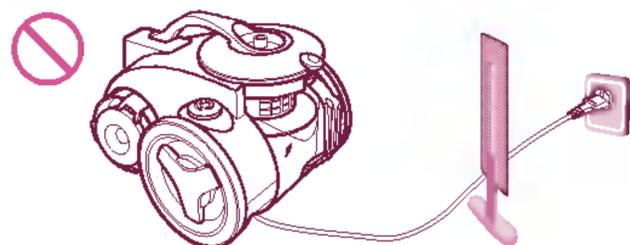


请不要在吸入口和排气口堵塞时，继续长时间运作，否则可能造成机体变形或损坏。

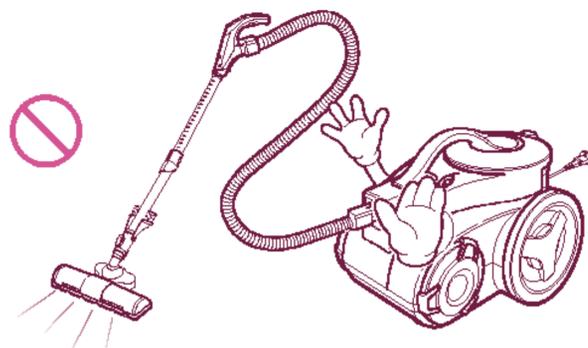

请不要让儿童把吸尘器及组件，如延长管等当做玩具，以防止意外。



使用过程中，延长管和机体有产生静电的可能，请您使用时注意。

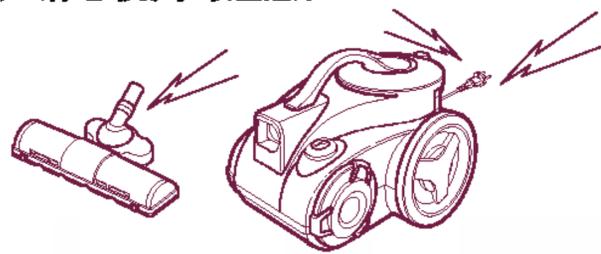


### 注意


非专业维修人员请勿开机修理。




请不要弯曲、践踏、拉拽软管，如软管受损，请不要继续使用。请不要用重物或尖刃物压线。

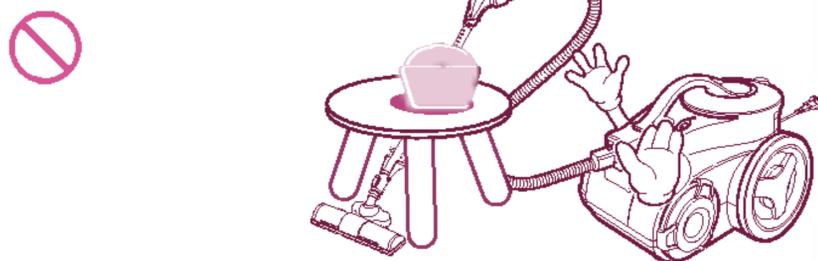

注意不要使电源线夹在门缝里或用电源线提拉吸尘器，防止电源线受损。

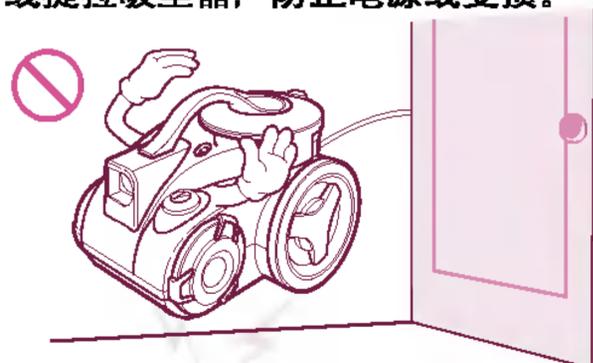


集尘筒集满时，请您正确开启集尘筒清理。请您注意不要在没安装集尘筒或过滤网时使用吸尘器。

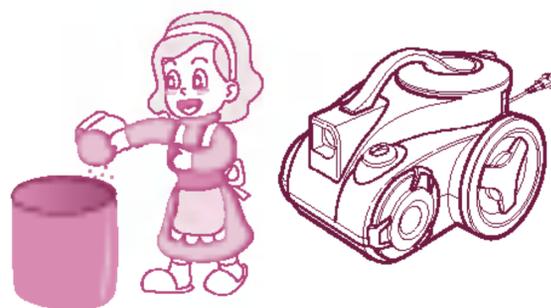

收卷电线时，请拿住电源插头后再按动卷线器按钮。

请不要将电源线拉至红色警告线以外，否则可能损坏电源线或不能回卷。

收线时请注意插头，以免损坏周围物品。

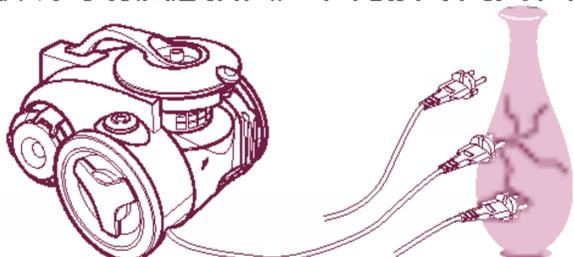

请您注意保护自身安全，使身体各部位远离吸尘器吸口或活动部位。



# 吸尘器的组装与吸力调节

## 部分名称与连接方法

**最强** 清扫极脏的环境


**强** 清扫织物, 清扫床垫 (被褥)

**中** 沙发、椅子、地板、合成革

**弱** 清扫门窗帘、桌子、较薄的床上用品

**关闭** 停止吸尘工作时, 请将调节钮放于此位置

在不同环境下吸尘时, 请按实际需要调节吸力。根据地面情况和吸入量可以自主调节吸力。

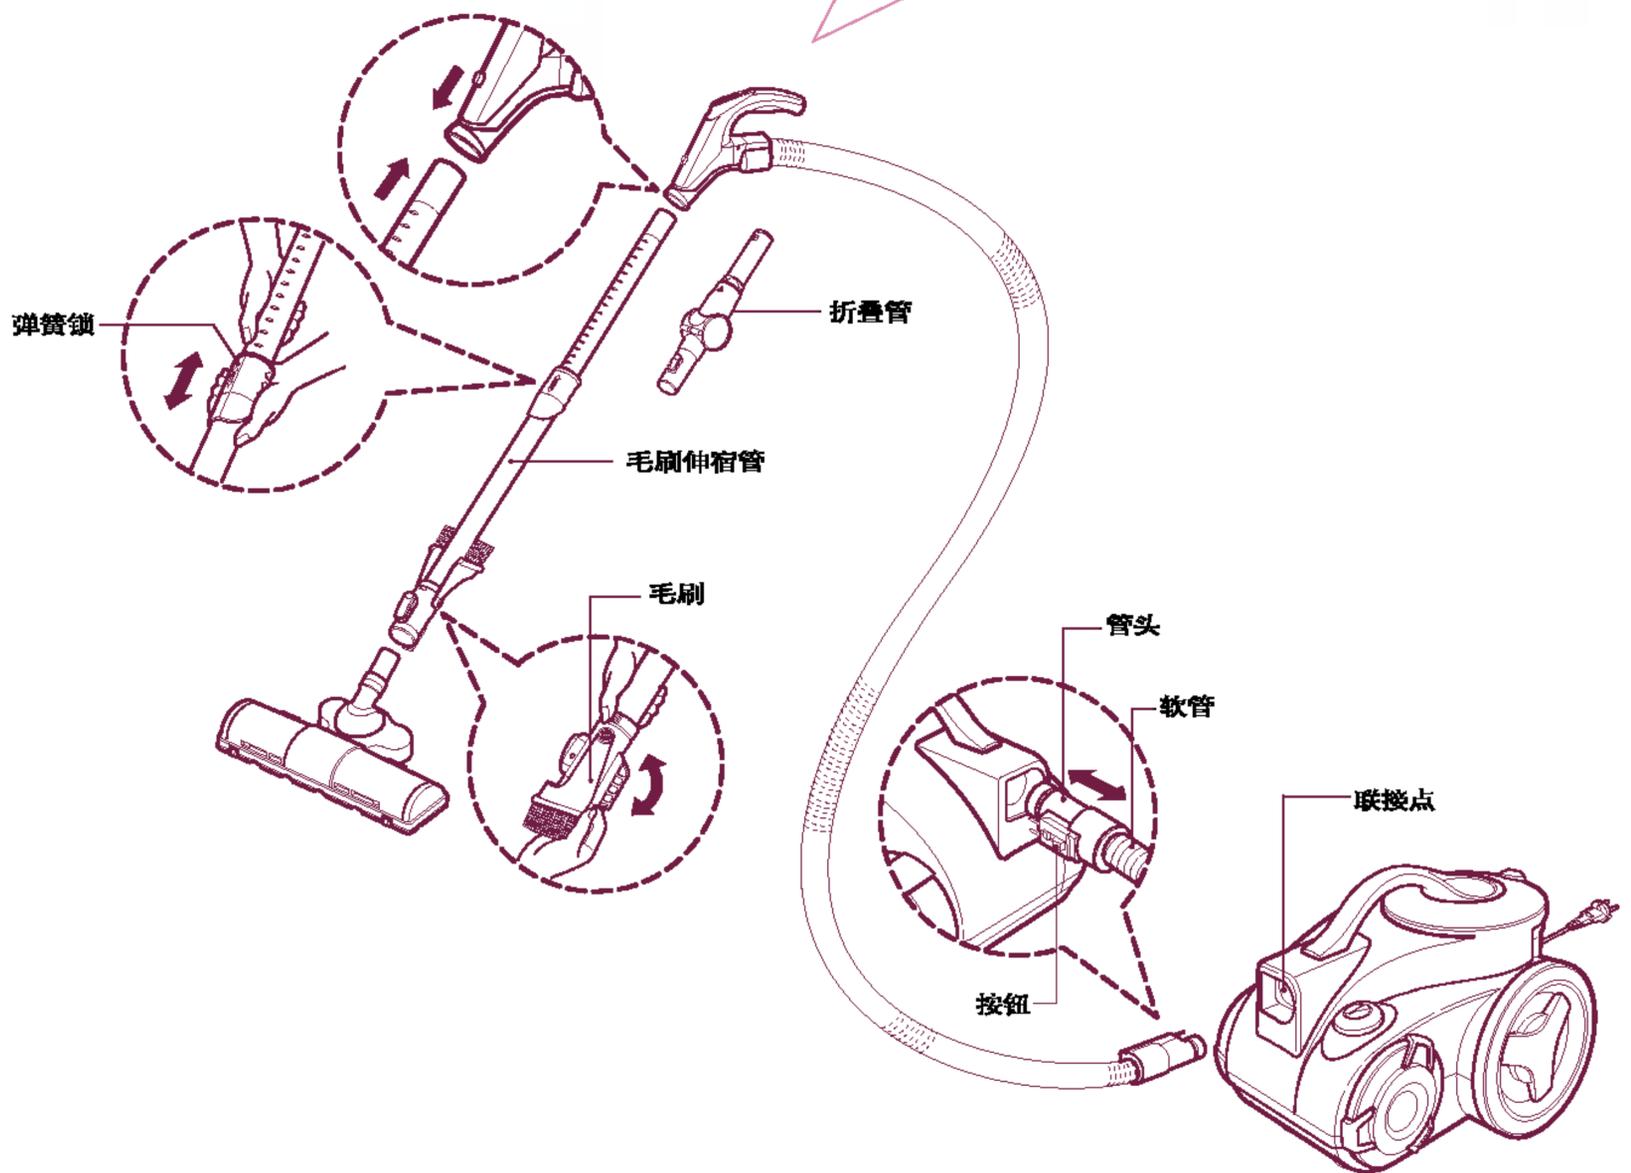


<b>附件</b>							
	● 鸭嘴	● 毛刷尖吸嘴	● 大刷头	● 软管	● 毛刷伸缩管	● 震动刷头	● 折叠管

## 毛刷、尖吸嘴、鸭嘴、折叠管的使用

### 毛刷尖吸嘴与鸭嘴的使用


- ▶ 打开塑料袋拿出附件，将附件的固定架插入到吸尘器的侧孔中去。然后将毛刷及尖吸嘴、鸭嘴装到附件座上，将附件装到吸尘管的一头。

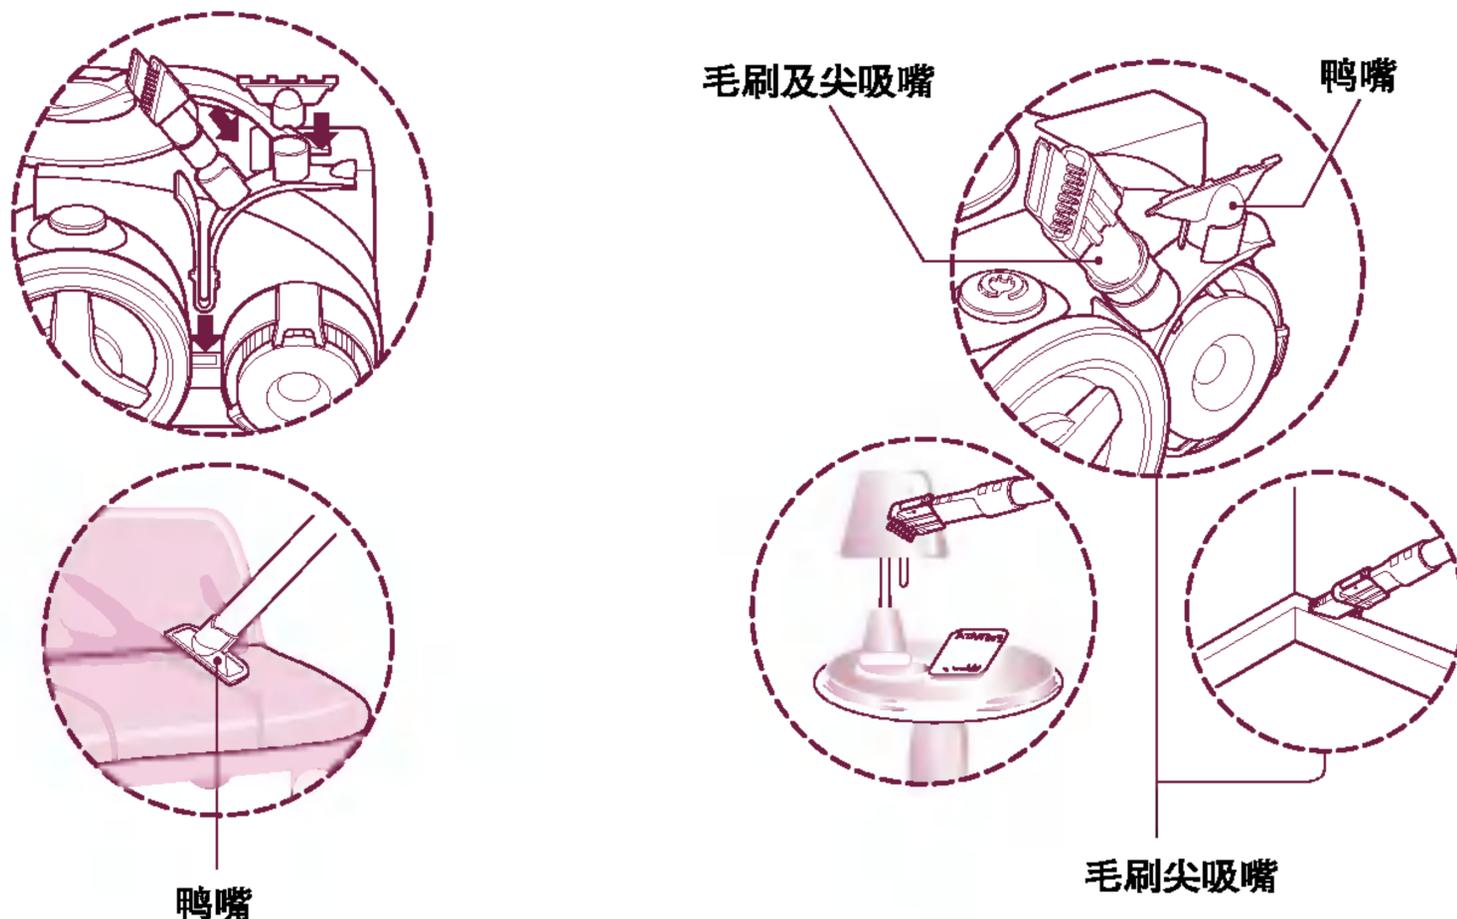


- ▶ 鸭嘴是用来对饰物、床垫等物品进行吸除的。
- ▶ 毛刷用于吸扫画框、家具边沿、书籍和其它不规则的表面。
- ▶ 尖吸嘴是用来吸扫一般不容易接触的地方，如有蜘蛛网的地方或沙发垫子之间的缝隙等。

### 折叠管的使用

- ▶ 折叠管可用来容易地清扫沙发、桌子和床铺的下面。

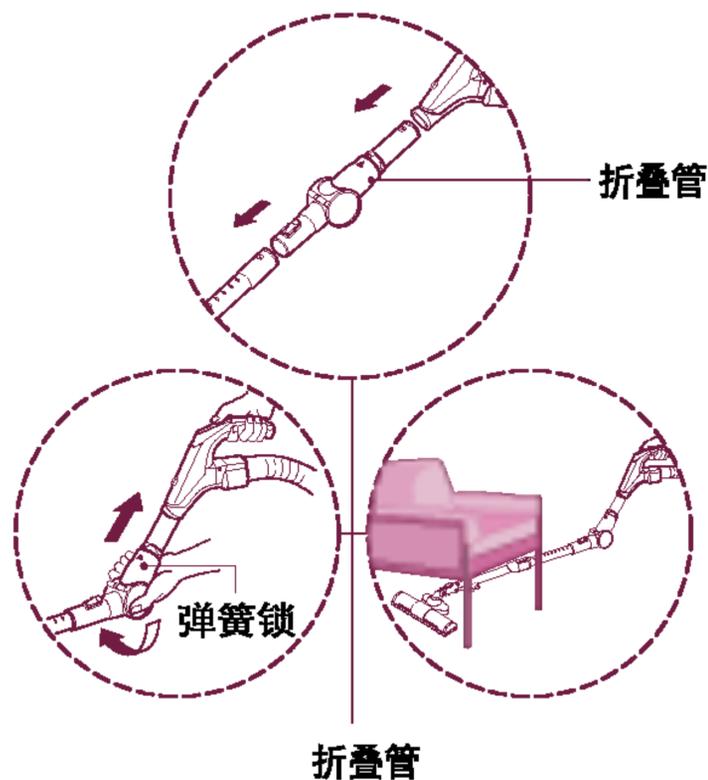

- 将折叠管连接到软管并将伸缩管连接到折叠管上（也可以不用折叠管而直接将伸缩管接到软蛇管上）。
- 拉出弹簧锁，使折叠管弯曲。
- 如果伸直折叠管则其回到原来的位置。

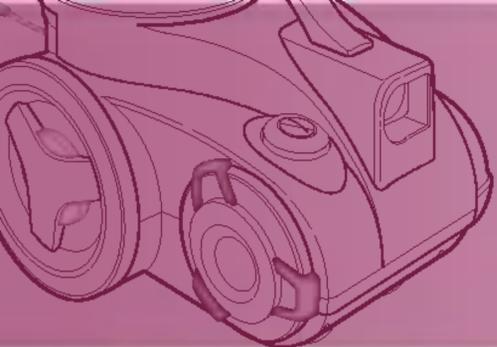

## 大刷头使用方法

### ► 一般情况下使用


#### 特长

- 刷头自由回转可清扫房间的各种角落。
- 毛刷的转动可彻底地除去缝隙里的灰尘。
- 分解和组装方便，可除去刷头内部的灰尘。


#### 使用方法

- 集尘筒内塞满灰尘时，毛刷的转动会减弱。
  - 这时清理集尘筒。
- 如下使用，会很方便。

#### 组合

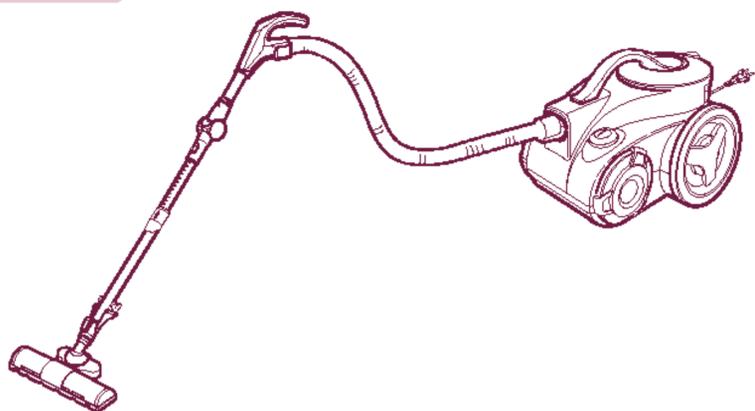

#### 使用

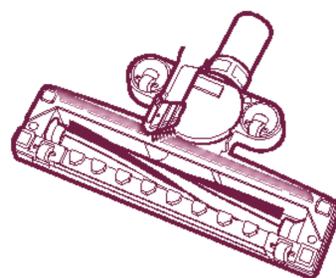

- 1 将刷头的左右滑扭向外推动，以此分离盖。
- 2 将刷头的滚动毛刷分离开，用毛刷吸嘴把堆积的灰尘除去。组装时按相反方向组装，且要注意左右顺序。
- 3 刷头的底面也可以用毛刷吸嘴进行除尘

- 刷头用水洗涤后，在阴凉处自然晾干后使用。否则滚动毛刷会不灵活，成为导致故障的原因。
- 请勿使用洗涤剂、漂白剂等。
- 请勿用硬毛刷刷洗。
- 请勿用暖气、吹风机等进行烘干。
- 将刷头从地面上拿起的时候，滚动毛刷会自动停止。（也会慢慢转动）
- 根据地毯的种类不同，滚动毛刷也有不转动的情况。这时调到最强档。
- 薄地毯由于吸尘时被粘住，而不易打扫，这时压住地毯的一端，再进行打扫。
- 滚动毛刷还可在地板上转动。

# 震动刷头使用方法与清洗方法

## 震动刷头使用方法

请按图示使用



使用




**强**


手柄调节至“强”档。根据织物种类不同，吸力大小要有所改变，应视情况不同来调节控制键。

### 最佳效果清扫方法

● 床、床褥、厚棉被

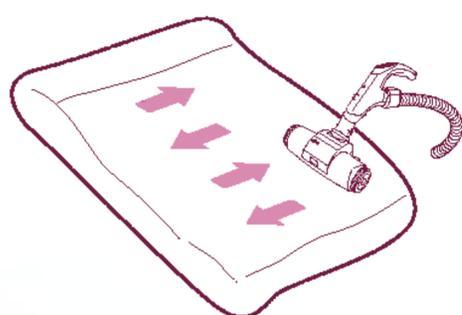

● 薄被、毛毯

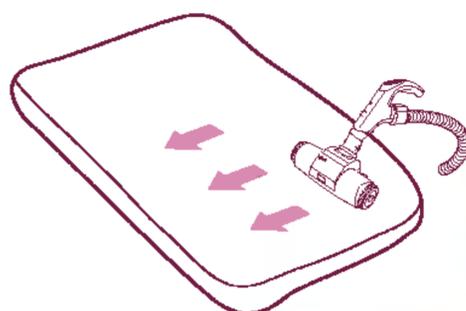


清扫薄被时，下面垫一个厚被，效果更理想！

- 若震动拍不运作，可轻轻向地面敲打刷头后再使用。
- 如还不震动，检查一下振动拍是否被棉絮卡住或需要调大吸力。
- 吸地毯时，根据地毯种类的不同，也会有发生不震动的可能性，所以最好专用于清扫床上用品。
- 集尘筒集满灰尘或吸力减小，震动幅度相应减小时，应注意及时清理滤芯。


## 震动刷头清洗方法

▶ 用毛刷尖吸嘴上的毛刷简单清理震动刷头 


▶ 内外部都需要清理（吸入口不可用水冲洗，否则有可能产生机器故障）

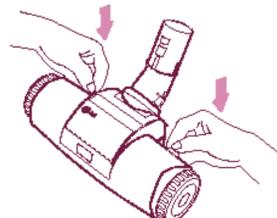

① 分离刷头底盘

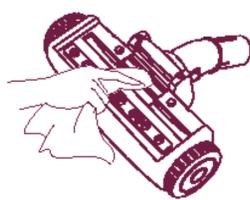

② 擦拭刷头缝隙脏物

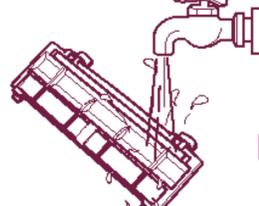


③ 用水冲洗底盘



④ 将底盘嵌入卡槽  
将刷头重新装好

- 内部震动结构具有严格的尺寸要求，请勿自行拆开本产品，否则会影响震动性能。注意不要让异物进入振动活塞行腔。
- 请勿拆开震动活塞行腔，否则会对拍打性能产生影响。
- 底盘应很好地与刷头结合后再使用，在重新装好震动刷头前，请确认震动拍是否已放到正确的位置上。如没有底盘震动拍，有可能不运作。
- 请只在清扫床上用品时使用震动刷头。（在普通地面或其他部位使用，会弄脏底盘或出现其他损坏）

## 集尘筒取放方法

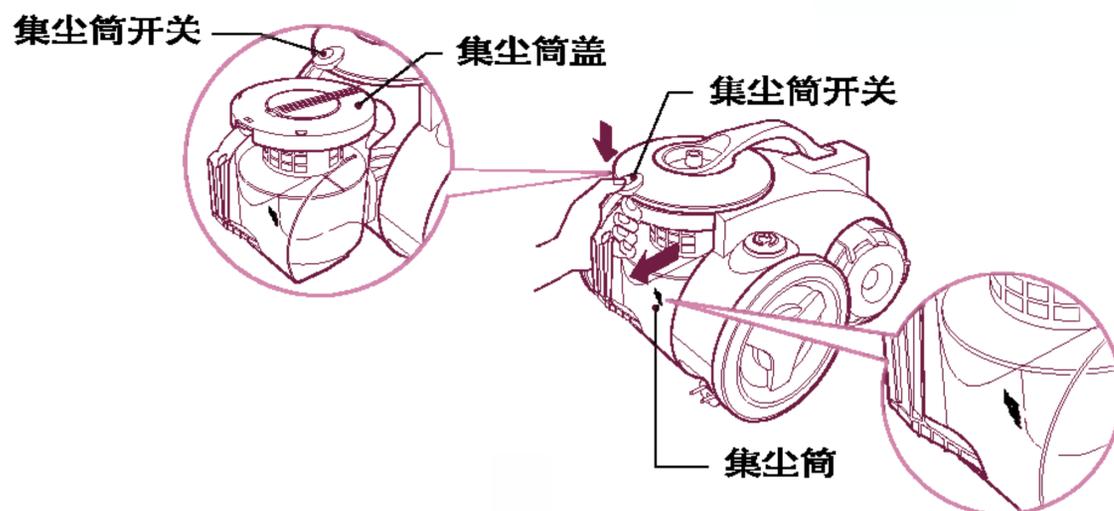


- 灰尘集到MAX线时，请清理集尘筒后再使用。
- 按住集尘筒开关，拉出集尘筒。
- 安装集尘筒时，握住手柄，推至发出“咔嚓”声为止。


## 集尘筒清洗方法

- ▶ 当灰尘集到MAX线时，需清理集尘筒。
- ▶ 集尘筒被堵塞时会自动发出警告声响，此时提醒您该清理集尘筒。
- ▶ 请每月冲洗一次集尘筒。

### ① 打开集尘筒盖

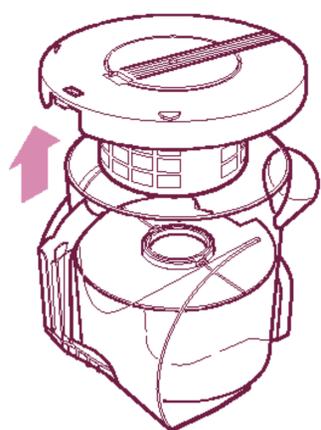

### ② 拿出集尘筒内挡板 (清洁后请按示意图重新插入)

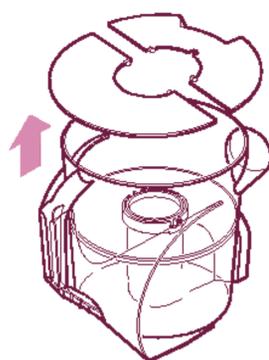


### ③ 用水冲洗




- ▶ 集尘筒内若有螺丝、儿童玩具等小物件进入时，开机运作会使集尘筒瞬间被损坏。
- ▶ 集尘筒内若有长筒丝袜、塑料袋等较大的垃圾物时，请清除后再开机使用。

### ① 用水清洗集尘筒的过滤器时， 可用软毛刷刷洗。

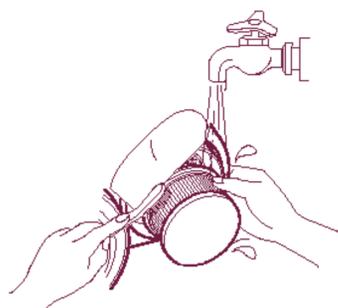

### ② 放置在阴凉处自然风干。

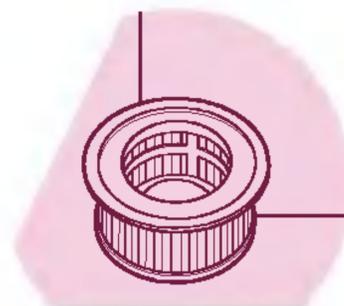


- ▶ 集尘筒过滤器被堵塞后，会自动发出警报30秒，然后停止，此时请清理集尘筒内的过滤器，再将手柄上的调节钮置于停止位置，然后重新调节到所需的吸力的位置。

# 排气海绵的清洗更换/机器的正确保管


## 排气海绵清洗方法

▶ 请至少半年清洗一次，放置在阴凉处风干，或根据使用频率酌情处理。

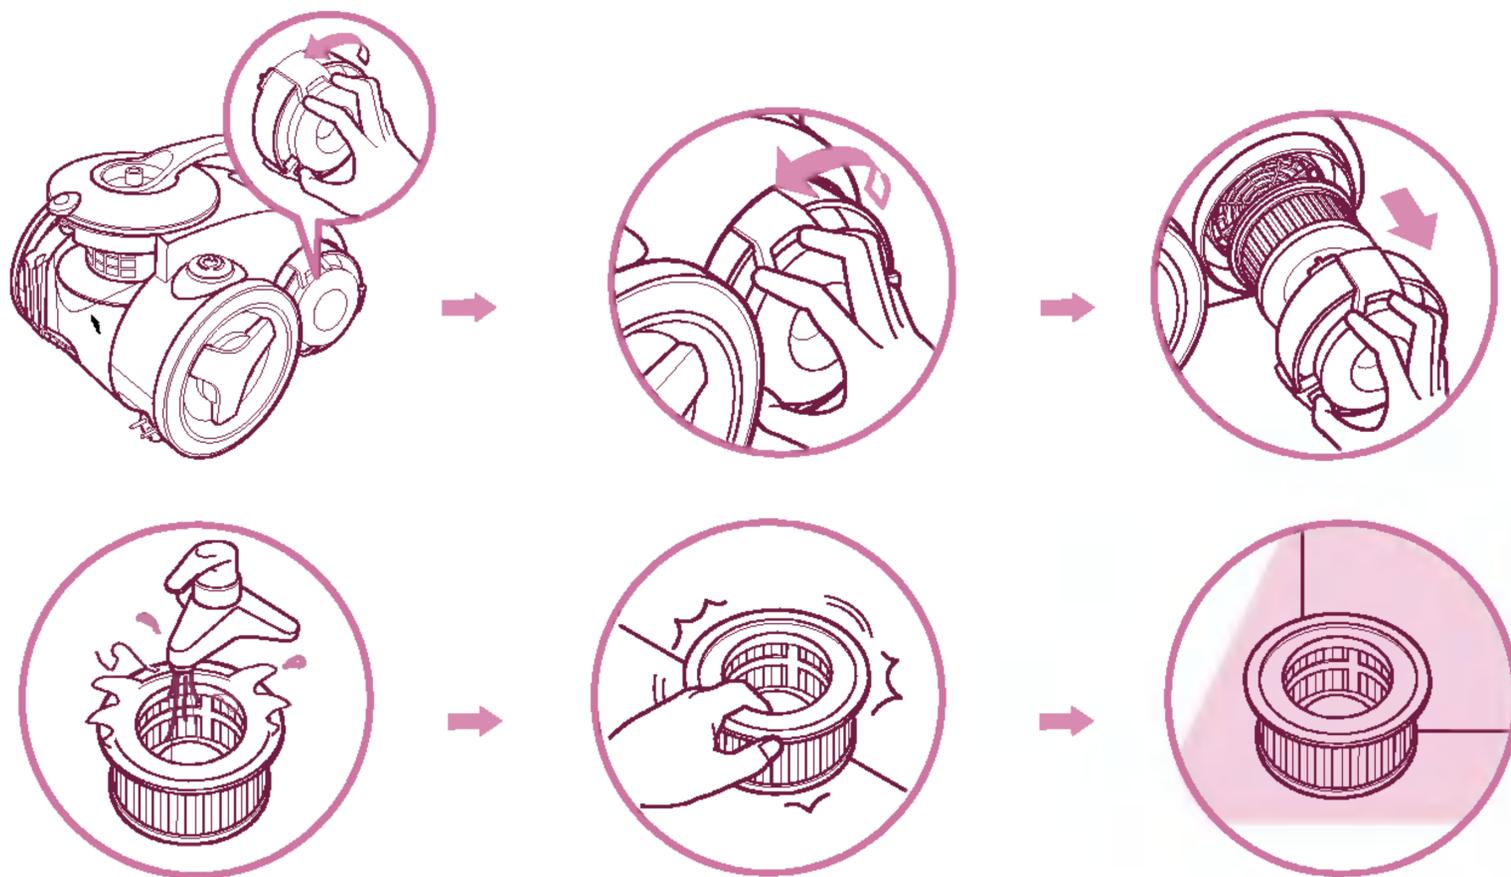


## 机器的正确保管方法

1 拔掉插头，按下卷线器按钮，收起电源线。

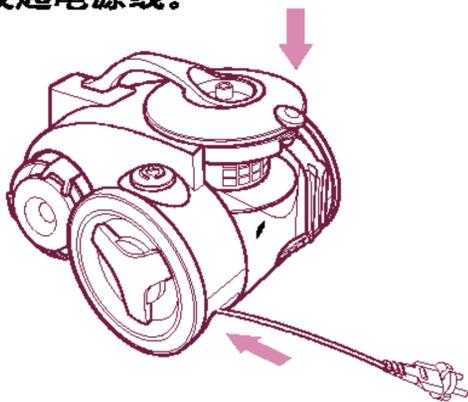


2 一只手握住伸缩管弹簧锁，另一只手握住手柄，将伸缩管收起。

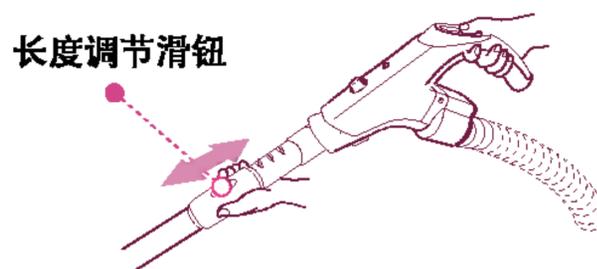


\* 如电源线不能完全收回机体内时，请按下卷线器按钮，拉出一部分线后再重新收回。

3 将伸缩管定位钩插放到集尘筒后面的钩槽中。

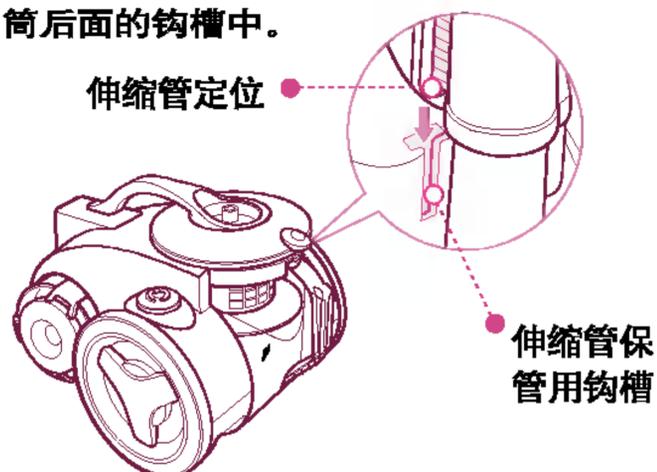

4 将吸尘器放置于适当处。

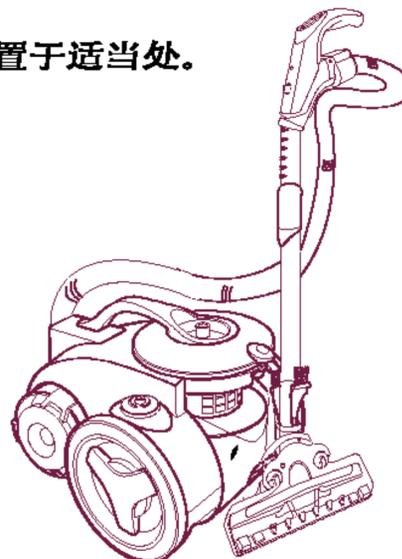

## 故障通告前请先确认

► 如果您怀疑产品发生故障，请先确认故障发生原因，再与售后服务中心或代理商联系，以确保检修的效率。

现象：  
吸力突然下降，并发出报警声！

噪音加大  
软管收缩



吸力忽然下降

吸尘器求助：



请检查集尘筒和吸入口

## 处理要领

① 查看集尘筒灰尘是否集至MAX线处，如果是，请及时清理集尘筒。



已经满了吗？请及时清理集尘筒哦！

② 请确认集尘筒滤芯是否堵塞  
滤芯堵塞时会发出报警声，请用软毛刷轻轻刷掉滤芯上的灰尘。



滤芯有问题吗？那么检查一下吸入口。

③ 检查吸入口时，需将吸力调节到最大。

### 第一步

如果还有问题，请进行第二步。

将伸缩管与刷头分离后，检查有无阻塞，如发现问题请立即清理。



### 第二步

如果还有问题，请进行第三步。

分离手柄与伸缩管，检查有无阻塞，如有阻塞，请将伸缩管收短，清除异物。



### 第三步

检查软管是否阻塞，将吸力调至最强，用手堵放管口，反复几次。







如果还有问题，请清理一下滤芯。




## 故障通告前需确认事项

### 故障通告前请先确认

- ▶ 如果您怀疑产品发生故障，请先确认故障发生原因，再与售后服务中心或代理商联系，以确保检修的效率。

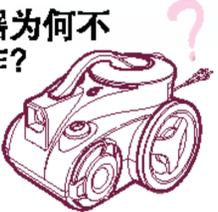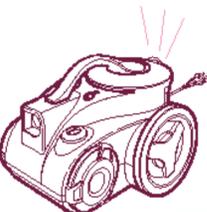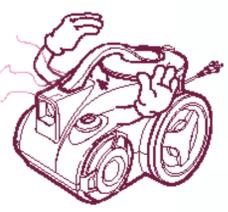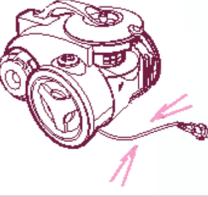故障	检查	措施
<p>吸尘器为何不能工作？</p> 	<ul style="list-style-type: none"> <li>● 电源插头是否插上？</li> <li>● 电源插座有电吗？</li> <li>● 软管是否插上？</li> <li>● 电机热保护处于开启期间。</li> </ul>	<ul style="list-style-type: none"> <li>● 请将电源插牢（本产品适用于220V电压）。</li> <li>● 确认插座是否有电。</li> <li>● 将软管插牢。</li> <li>● 2小时后重新启动。</li> </ul>
<p>机体内有噪音。</p> 	<ul style="list-style-type: none"> <li>● 吸尘器吸力过大或电机高速运转时所发出的声音，不属于异常情况，请正常使用。</li> <li>● 如果不是正常的电机响声，而是异常的噪音，请打电话与维修中心联系。</li> </ul>	
<p>机体发出报警声。</p> 	<ul style="list-style-type: none"> <li>● 集尘筒已满。</li> <li>● 集尘筒滤芯堵塞。</li> <li>● 吸入口阻塞。</li> <li>● 伸缩管阻塞。</li> <li>● 软管阻塞。</li> </ul>	<ul style="list-style-type: none"> <li>● 清理集尘筒。</li> <li>● 用软毛刷轻刷滤芯，用水冲洗后放置于阴凉处风干一天。</li> <li>● 将吸入的异物取出再使用。</li> <li>● 将伸缩管内异物取出后再使用。</li> <li>● 将软管内异物取出后再使用。</li> </ul>
<p>机体出现异味。</p> 	<ul style="list-style-type: none"> <li>● 电机运作时，用于固定电机的橡胶圈会受热而产生少量气味，不会影响运作或使机器发生损坏。</li> <li>● 机器不小心吸入一些水或集尘筒长期不清理时，会有一些异味排出，此时应及时清理集尘筒。</li> </ul>	
<p>震动刷头不运作或震幅过小。</p> 	<ul style="list-style-type: none"> <li>● 震动刷头是用于清扫床上用品、沙发等织物时使用的。</li> <li>● 清扫地毯时，请使用大刷头。</li> <li>● 检查底盘是否正确地与刷头结合。</li> <li>● 清扫薄织物时，请在下面垫上厚被褥。</li> <li>● 请确认集尘筒和吸入口各部位是否有阻塞现象。</li> <li>● 吸力下降也可能使震幅减小。</li> </ul>	
<p>电源线不能全部卷入机体，电源线不能全部拉出。</p> 	<ul style="list-style-type: none"> <li>● 将电源线拉出一部分后重新卷入。</li> <li>● 请用力将电源线拉出，不会损坏电源线。</li> <li>● 由于线在内部互相缠绕或夏季周围温度过高所致。</li> <li>● 由于线在内部折曲或未缠在卷线器上，启动卷线器后，能正常运作。</li> </ul>	
<p>机体或排出的气体过热。</p> 	<ul style="list-style-type: none"> <li>● 吸力是否正常？</li> </ul>	<ul style="list-style-type: none"> <li>● 从机体内排出的热气，是由电机导热产生的热量所致，属正常温度，请继续使用。</li> </ul>
<p>软管内壁过脏。</p>	<ul style="list-style-type: none"> <li>● 透明软管可以很容易发现阻塞物，便于清理。</li> <li>● 请勿将水吸入，水与灰尘混合吸入后，有可能弄脏管壁。</li> </ul>	

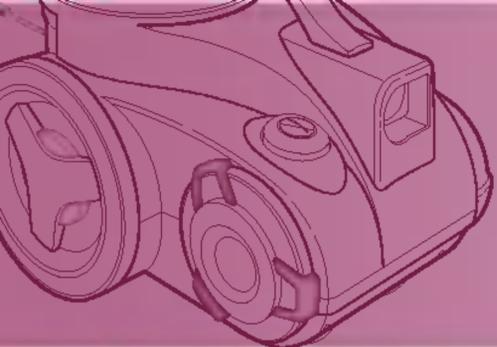


## 装箱单

吸尘器	一个
说明书	一本
鸭嘴	一个
毛刷尖吸嘴	一个
大刷头	一个
震动刷头	一个
折叠管	一根
软管	一根
伸缩管	一根

## Table of contents

Product specifications	14
Attention before using the appliance	15-16
Assembling and adjusting the Cleaner	17
Parts description and assembly	
Accessories	
Using the Accessories and Elbow Tube	18
Using the Cleaning Head	19
Using and cleaning the Sani Punch	20
Using the Sani Punch	
Cleaning the Sani Punch	
Dust Tank	21
Removing and replacing the Dust Tank	
Cleaning the Dust Tank	
Cleaning the Exhaust Filter / Storage	22
If you have a problem	23-24
Packing list	26
Service card	

## Product specifications

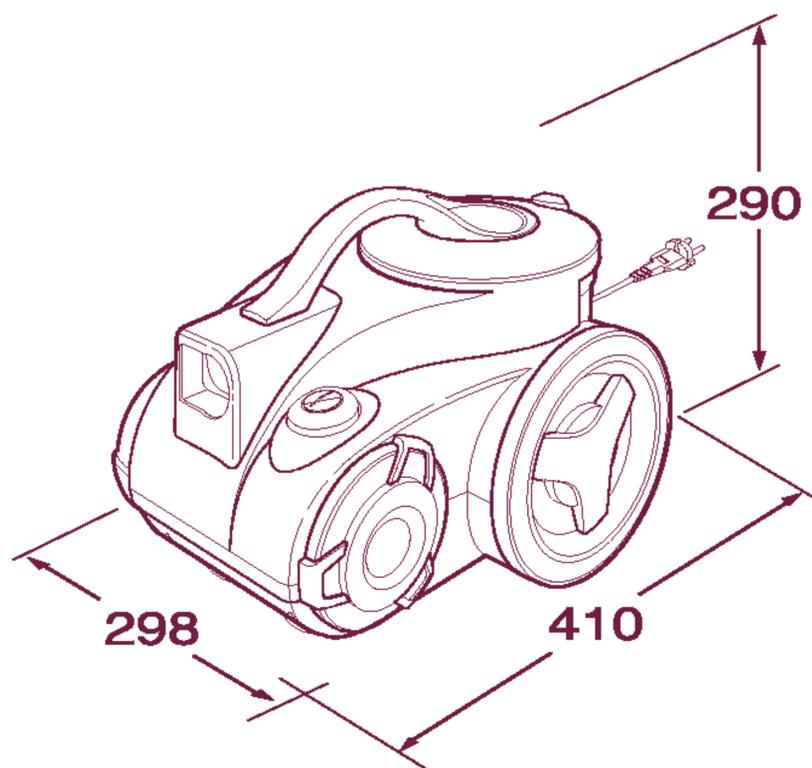

**Model: V - 796CAR**

**220V~50Hz**

**IEC: 1400W**

**MAX: 1600W**

**Suction Power: 320W**

**Net Weight: 5.4Kg**

**Dimension: 298mmx410mmx209mm**

**This appliance complies with the following GB Directives:**


**GB:4706.1-1998**

**GB:4706.7-1999**

**GB:17625.1-1998**

**GB:4343-1995**

**※ You will not be informed otherwise of any changes in appearance and standard deriving for improvement of product quality.**

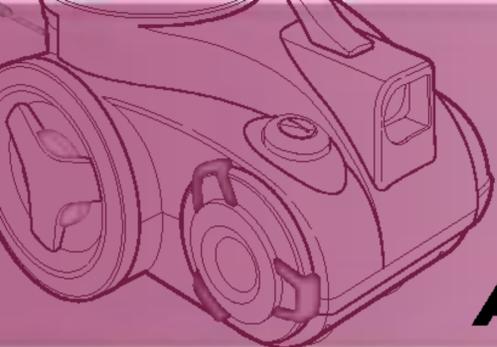

# Attention before using the appliance

## Attention before using the appliance

Please read all the following information, which contains important instructions for the safety, the use of the appliance.



### DANGER

May immediately cause serious injury or death.



### WARNING

May possibly cause serious injury or death.




### ATTENTION

May possibly cause losses of property or light injury.



### DANGER

Do not pick up anything that is burning or smoking, such as cigarettes, matches or hot ashes.

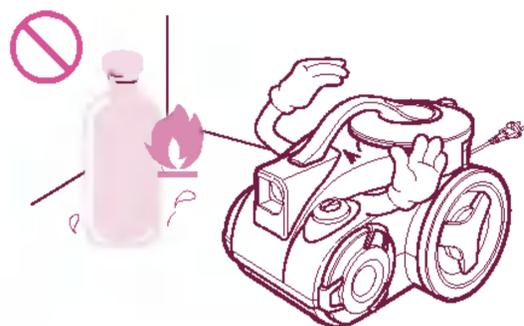


Please turn off the power before pulling out the plug to prevent fire or electric shock. Never handle plug or appliance with wet hands. (Do not use the appliance on the power above 220V.)



### WARNING

Avoid picking up hard, sharp objects with the cleaner. They may damage the cleaner and the tank.

Do not vacuum the objects like hair ball or big paper ball, otherwise the hose is possibly blocked up. Please clear the hose in time when it is blocked.


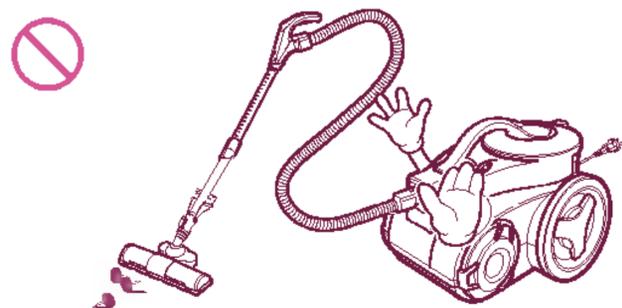


To avoid the danger of fire or electric shock, do not vacuum liquid, blade, flammable substances, or small particles like cement and gesso in cleaning.



Independently use a socket when the current is  $\geq 15A$ . It may cause fire when many electric appliances share one socket.


Unplug cleaner when not in use. Turn off all controls before unplugging.

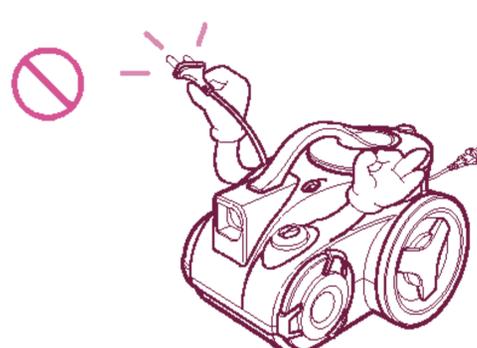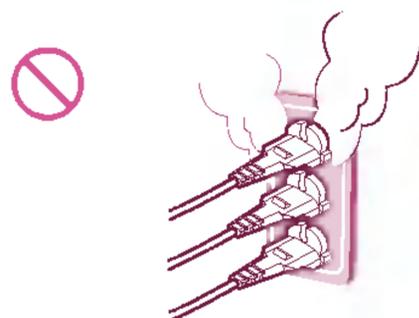

# Attention before using the appliance

## WARNING


Do not let the power cord near the electric heater or other heat source, lest that the cleaner should be deformed or it should cause fire. Do not use the appliance when the power cord or plug is damaged. The damaged power cord or plug must be replaced in the approved service station.

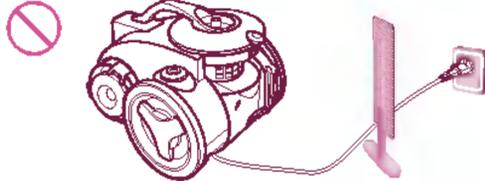


Close supervision is necessary when any appliance is used by or near children. Do not allow vacuum cleaner to be used as a toy or to run unattended at any time.



Do not operate the appliance for long when the nozzle inlet or nozzle outlet is blocked, which may have it deformed or damaged.

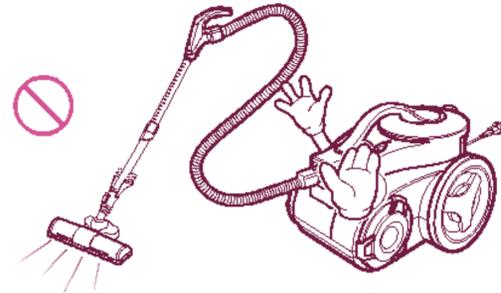

In using the appliance, pay attention to the electrostatic effect generated on the telescopic tube and cleaner body.

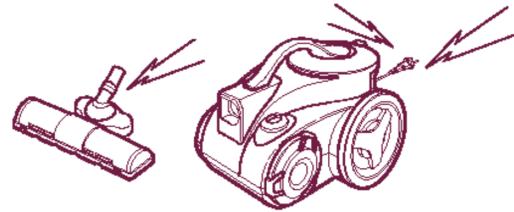


## ATTENTION


Do not allow the non-professional maintenance people to repair.



Do not pull or carry by cord, use cord as a handle, close door on cord or pull cord around sharp edges or corners. Do not run appliance over cord. Keep cord away from heated surfaces.

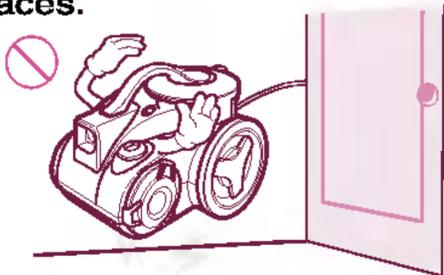


In winding the power cord, hold the plug before pressing the button of the cord reel. Do not pull the power cord beyond the red warning line, otherwise the power cord may be damaged or unable to be wound up. Pay attention to the plug in winding the cord to avoid damaging the surrounding objects.

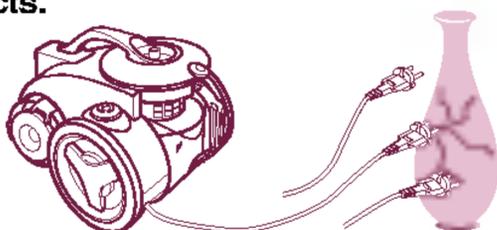

Do not bend, stamp on, or drag the hose. Do not continue to use the hose if it is damaged. Do not use any heavy or sharp object to press the power cord.




Do not use without dust tank or filters in place. Change tank frequently when picking up very fine materials such as powder.

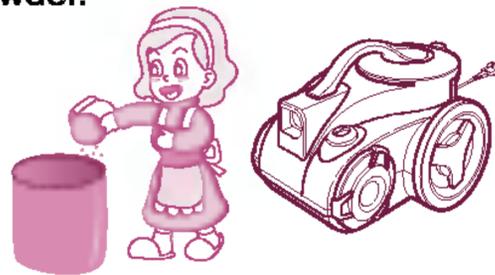


Keep hair, loose clothing, fingers, feet and all parts of body away from the nozzle or movable portion.



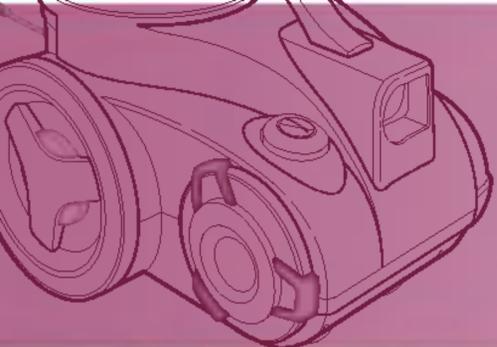


# Assembling and adjusting the Cleaner

## Parts description and assembly




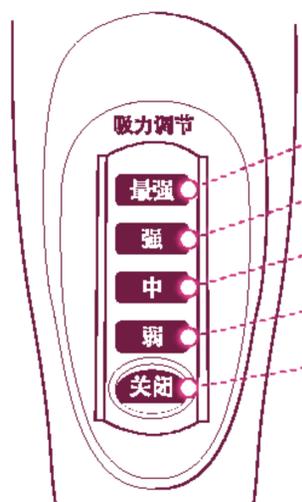


- **Strongest** cleaning the dirtiest environment.
- **Strong** cleaning fabrics and mattress (bedding).
- **Medium** cleaning sofa, chair, floor.
- **Weak** cleaning door and window curtain, table, and light blanket.
- **Off** Adjusting to “关闭” when you stop operating the appliance.

*When cleaning under different environment, adjust the suction level according to practical need.*

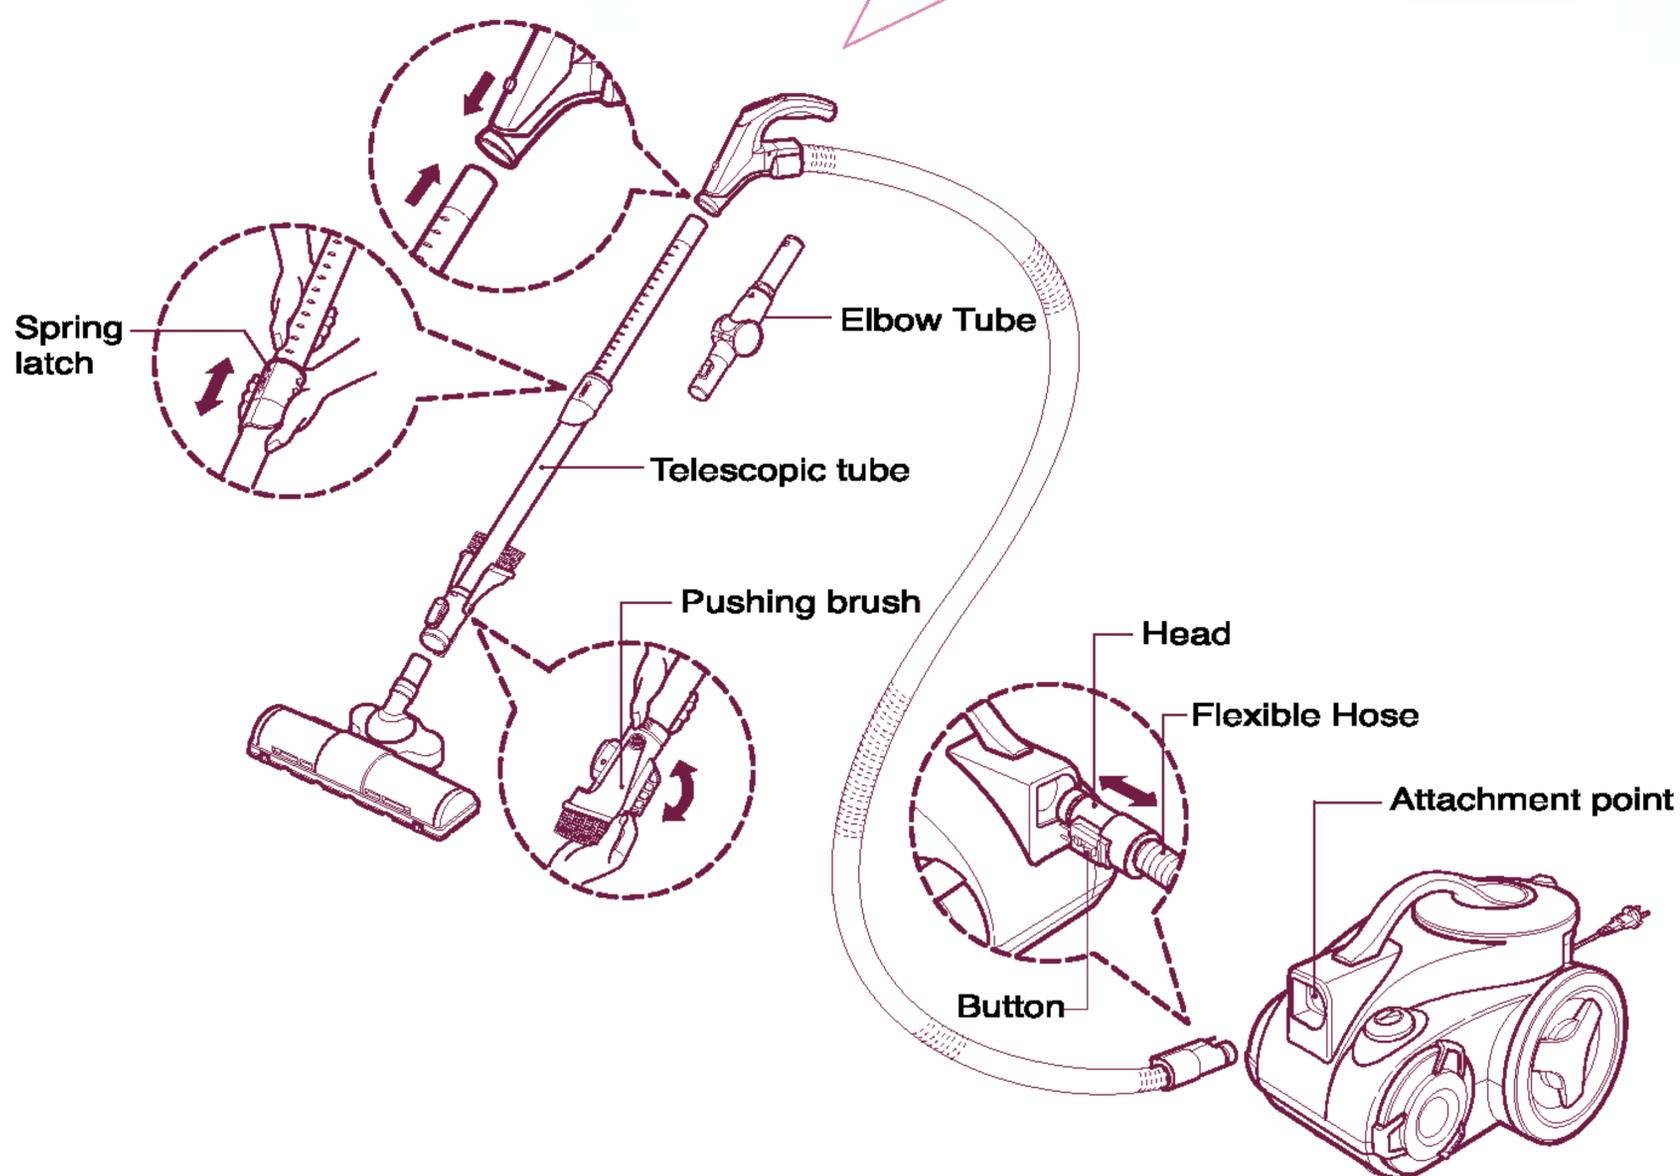


### Accessories

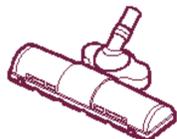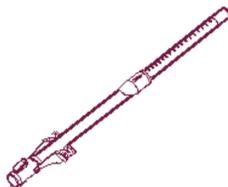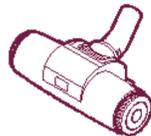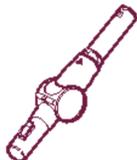-   
 ● Upholstery Nozzle
-   
 ● Dusting brush & Crevice tool
-   
 ● Cleaning Head
-   
 ● Hose
-   
 ● Telescopic tube
-   
 ● Sani Punch
-   
 ● Elbow tube


# Using the Accessories and Elbow Tube

## Using the Dusting Brush & Crevice Tool and Upholstery Nozzle


- ▶ Tear the vinyl bag and pull out accessories. Attach the accessory holder into the side hole of body. And then, fit the Dusting Brush & Crevice Tool and Upholstery Nozzle onto the accessory holder. Fit the accessory onto the end of the tube.

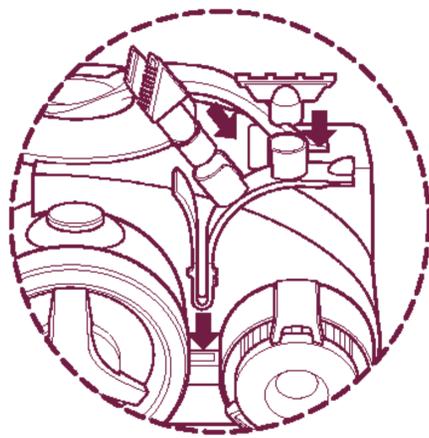


Upholstery Nozzle

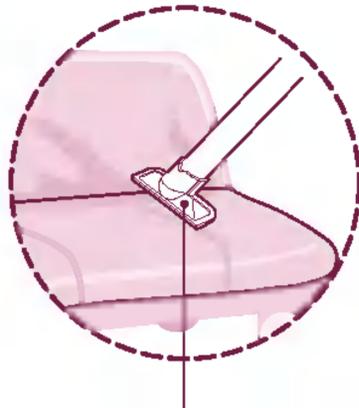

Dusting Brush & Crevice tool

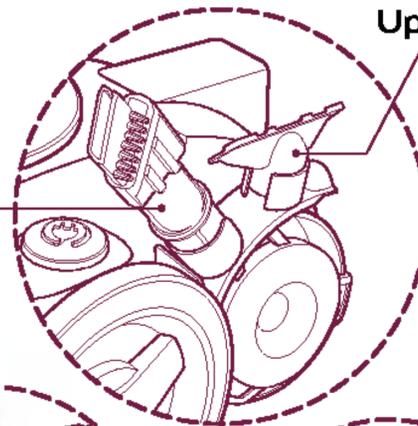

Upholstery Nozzle

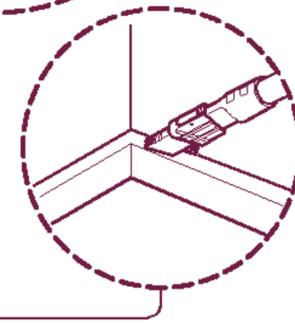


Dusting Brush & Crevice tool

- ▶ Upholstery Nozzle is for vacuuming upholstery, mattresses, etc.
- ▶ Dusting Brush is for vacuuming picture frames, furniture frames, books and other irregular surfaces.
- ▶ Crevice Tool is for vacuuming in those normally hard-to-reach places such as reaching cobwebs, or between the cushions of a sofa.

## Using the Elbow Tube


- ▶ Elbow tube is for cleaning under the sofa, table and bed easily.

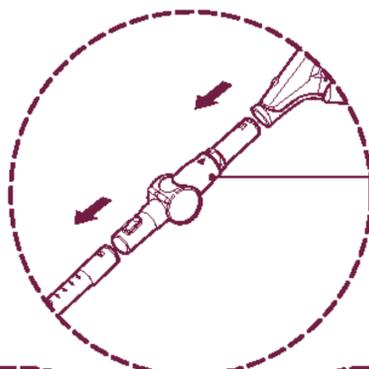

Elbow Tube




Spring latch

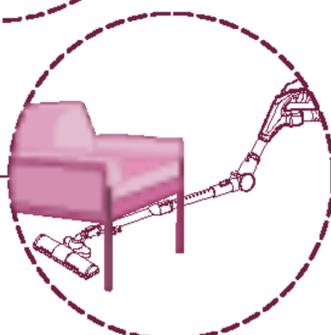

Elbow Tube

- Connect the elbow tube to the flexible hose and connect the telescopic tube to the elbow tube. (You can also connect the telescopic tube to the flexible hose without the elbow tube.)
- If you pull the spring latch, the elbow tube is bended.
- If you stretch the elbow tube, it is returned to its position.

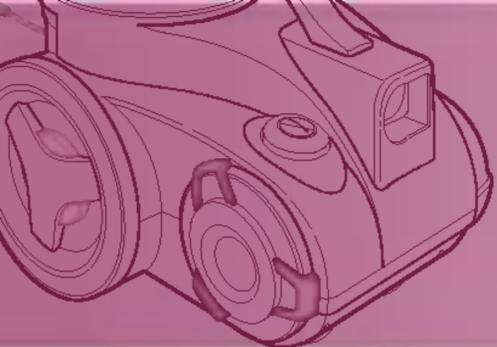

# Using the Cleaning Head

## Using the Cleaning Head

► Use it in the general situation.


### Features

- The cleaning head can turn freely and be used to clean various corners of the room.
- The turning of the brush enables thorough removing of the dust in the crevice.
- It is convenient to dismantle and assemble the appliance, and the dust in the brush can be removed.

### How to use it

- The turning of brush is weakened when the dust tank is full.
- Empty the dust tank.

### Assembling


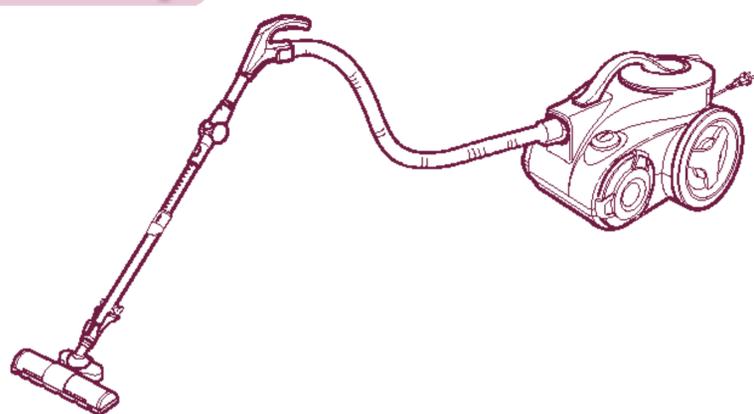


### Using

sliding knob



small head of agitator

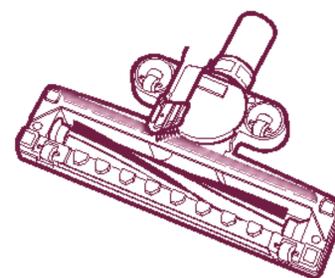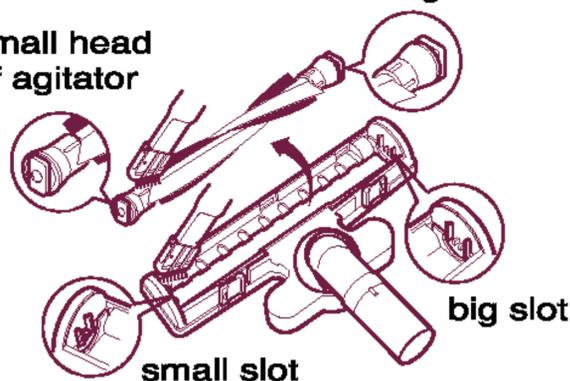

**1** Press the button on the left and right side of the vacuum nozzle to separate the bottom plate.

**2** Remove the agitator and vacuum the dust by using the dusting brush. Assemble it in the reverse direction, paying attention to the left and right sequence.

**3** Vacuum the bottom plate by using the dusting brush.


- Clean the agitator with cold, running water, and allow it to dry in a shaded location; Otherwise the agitator will not be flexible, which may lead to problem.
- Do not use detergent and bleaching agent.
- Do not use the hard brush.
- Do not microwave or place in oven or on direct heat.
- The agitator will automatically stop operating (but can slowly turn) when the cleaning head is removed from the floor.
- In cleaning different types of carpets, the agitator sometimes does not turn. In this case adjust it to the strongest position.
- The thin carpet can stick to it and is not easily cleaned. In this case, press down one end of the carpet and then vacuum it.
- The agitator can also roll on the floor.

# Using and cleaning the Sani Punch

## Using the Sani Punch


Use it as shown in the diagram

Assembling

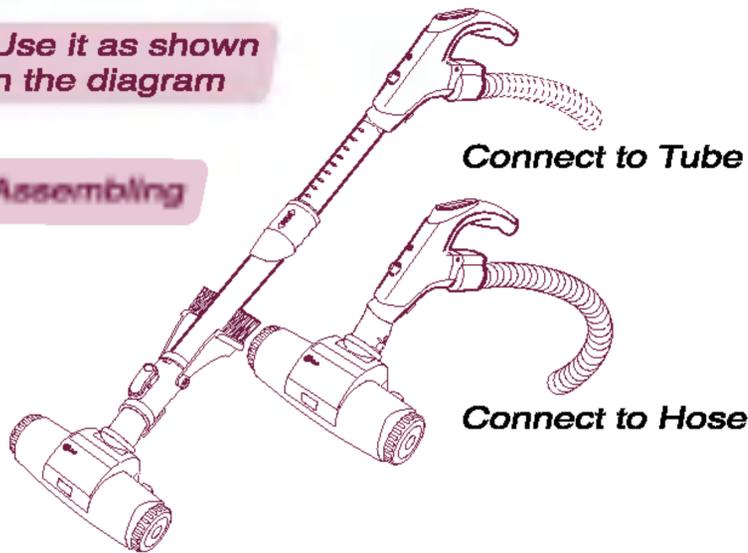

Effective cleaning

Using

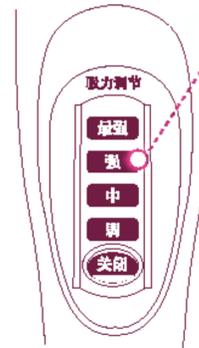


Strong


Set the suction power control switch to “强” before vacuuming. Depending on the type of bedding, handling may be awkward or it may cause a lot of noise.

If this is the case, adjust the suction power control switch to a lower setting.

• bed, bedding, heavy blanket

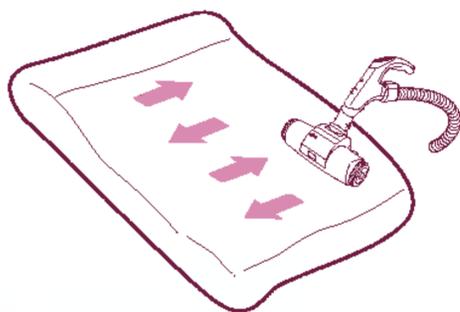

• Light blanket & sheet

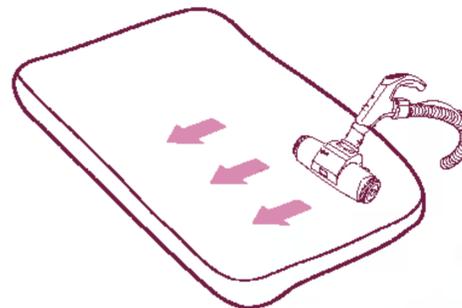


To increase cleaning efficiency for light blankets, lay on top of a bulky blanket and then clean.

- If the punch bar does not move, lift the nozzle slightly off the surface.
- If it does not move, even after doing this, check if the suction power is too low or if the nozzle base is clogged with a foreign object.
- This Sani Punch nozzle is for effective cleaning of beds and blankets to remove mites and dust.

## Cleaning the Sani Punch

- ▶ For simple cleaning of the vacuum nozzle, detach the Sani Punch nozzle from the telescopic tube and attach the crevice tool to vacuum dust.
- ▶ Follow the instruction below for through washing. (Do not soak the entire body of the vacuum nozzle in water, it may cause the vibrator to malfunction)

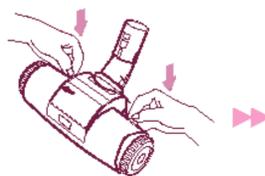

- 1 Press the button on the rear side of the vacuum nozzle to separate the bottom plate.



- 2 Wipe all the soiled parts of the vacuum nozzle body with a cloth.



- 3 Wash the removed bottom plate with water and dry it..




- 4 Insert the attachment projections on bottom plate to the vacuum nozzle grooves.

- Since the vibrator inside is composed of precision parts, never disassemble the body. Be careful not to let foreign objects clog the air suction part on top of the vacuum nozzle.
- Since removal of the punch bar may cause performance problems, do not warp or remove it.
- Attach the bottom plate properly before using. Without this bottom plate, it may not function.
- Since this vacuum nozzle has been made exclusively for cleaning beds, blankets and upholstery, use it only for these cleaning purposes. (Using it to clean the floor may result soiling it or a drop in performance, do not use it for such purposes.)

# Dust Tank

## Removing and replacing the Dust Tank

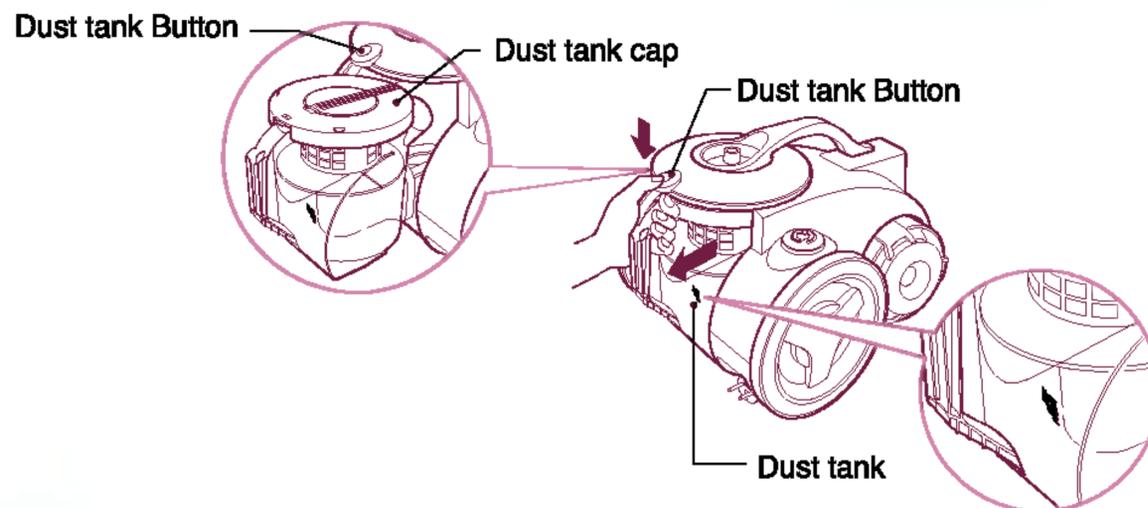


- Make the dust tank empty if dusts are filled to the "MAX".
- Press the button of cover and pull the dust tank forward.
- To reinstall the dust tank, replace the dust tank cap and push the dust tank into the tank mount as far as it will go.

## Cleaning the Dust Tank

- ▶ Make the dust tank empty if dusts are filled to the "MAX".
- ▶ When the dust tank is blocked up, it automatically emits an alarm to remind you that the dust tank should be emptied.
- ▶ The Dust tank should be cleaned at least once a month.

1 Open the dust tank cap.

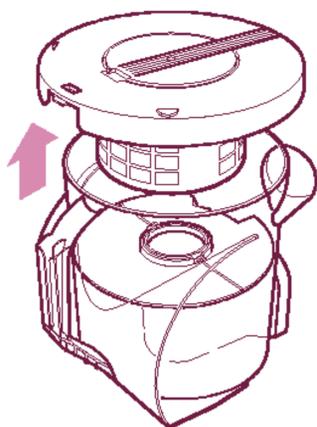

2 Remove two plates from the dust tank.




3 Wash both parts with softcloth. Gently rinse both parts under cold running water.




- ▶ Avoid picking up hard, sharp objects with the cleaner. They may damage the cleaner and the tank.
- ▶ Do not vacuum the big objects like plastic or big paper ball. Please clear the dust tank in time .

1 Clean the motor filter with the brush under cold running water.

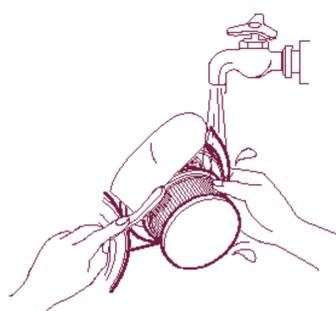

2 Allow the motor filter to dry in a shaded location for a day.

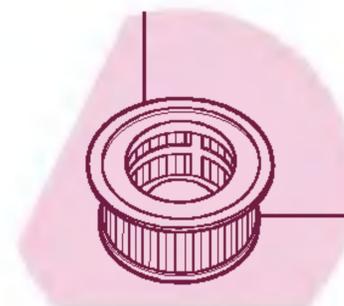


- ▶ When the motor filter is blocked up, a 30-second alarm is automatically given and then stops. In this case, clean the motor filter, adjust the suction control switch to “关闭”, and then readjust it to the suction level as needed.

# Cleaning the Exhaust Filter/ Storage



## Cleaning the Exhaust Filter

- ▶ The exhaust filter should be cleaned at least once half a year. Allow exhaust filter to dry in a shaded location for a dry.

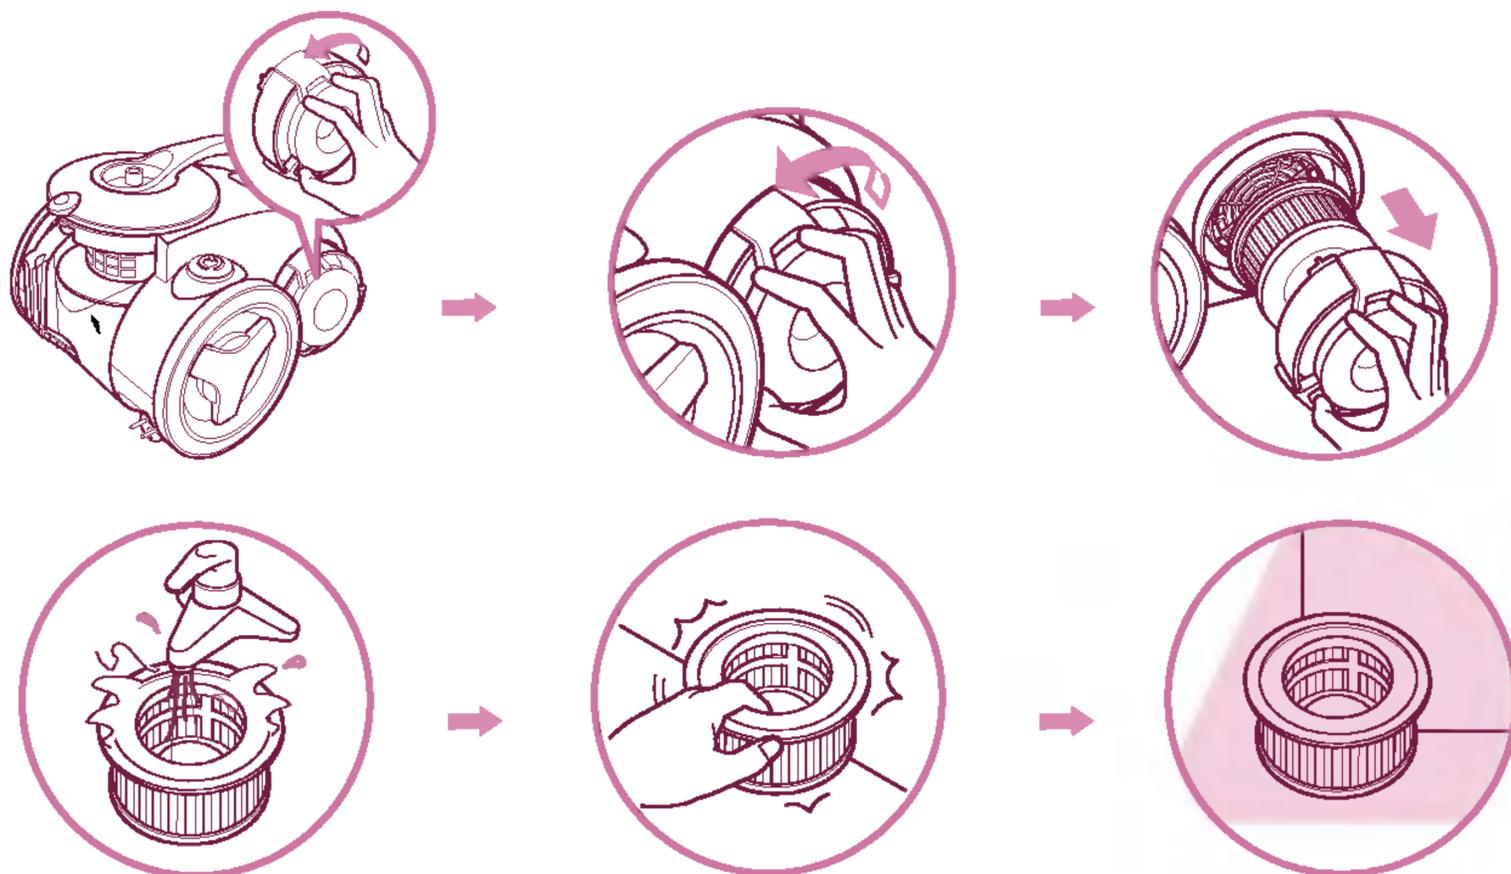


## Storage

- 1 When you have switched off and unplugged the appliance, press on the button to automatically rewind the cord.
- 2 Push spring latch forward. Pull out tube to required length, and release spring latch to lock.

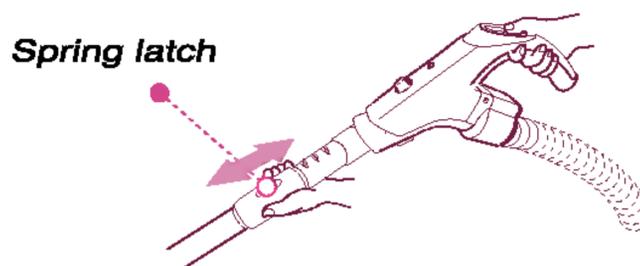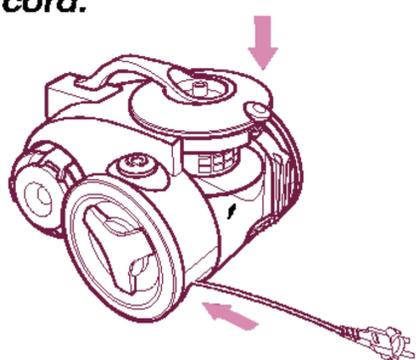



\* If the power cord cannot be completely rewound, pull out part of the cord and rewind it again.

- 3 You can move or store your appliance in a horizontal position by sliding the hook on the telescopic tube into the clip on the rear of the appliance.

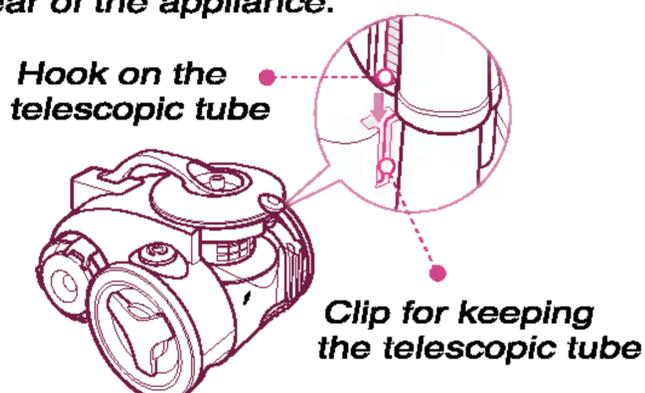

- 4 Keep the vacuum cleaner in a proper place.

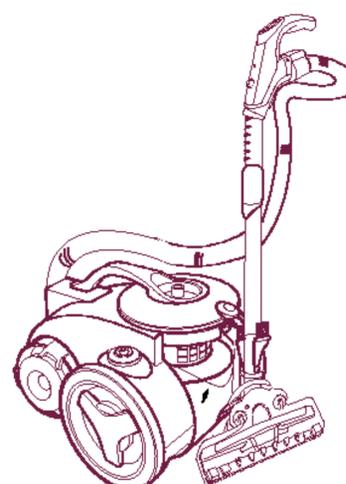

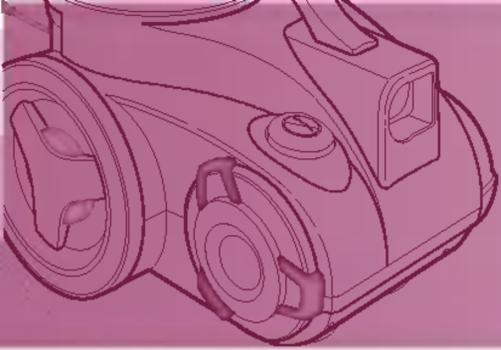

# If you have a problem

## If you have a problem

► If a minor problem occurs, it usually can be solved quite easily when the cause is found by using the check list below.

**Problem:**  
Suction is weakened and alarm.

The noise increases and the hose shrink.



Suction power is abruptly weakened.

**Help:**



Check the dust tank and suction inlet.

## Solution

**1** Dust tank full.  
Empty dust tank.



Is it full? Empty the dust tank in time!

**2** Motor filter dirty.  
Clean the motor filter with brush and water, allow to dry and replace in cleaner.




Is the filter OK? Then check the suction inlet.

**3** When checking the suction inlet, adjust the suction level to the maximum.

### First step


Turn cleaner off and disconnect from electrical outlet, then disconnect nozzle from telescopic tube. Check if it is blocked, and remove any blockages.

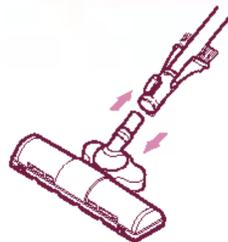

If there is still a problem, proceed the second step.

### Second step


Disconnect the telescopic tube from hose. Check if it is blocked, and remove any blockages.

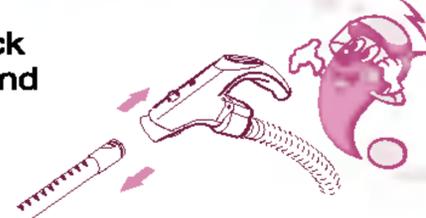

If there is still a problem, proceed the third step.

### Third step

Plug cleaner in, turn on, and check hose end for suction. Remove any obstructions.

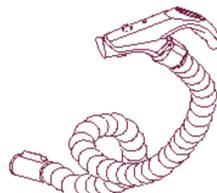



If there is also a problem, clean the filter.




# If you have a problem

## If you have a problem

► If a minor problem occurs, it usually can be solved quite easily when the cause is found by using the check list below.

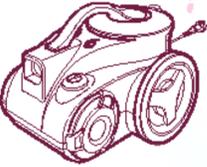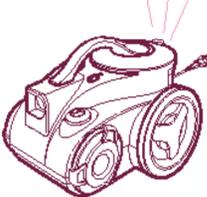PROBLEM	CHECK	SOLUTION
<p>Cleaner won't run. </p>	<ul style="list-style-type: none"> <li>● Not "ON" at hand grip.</li> <li>● Not firmly plugged in.</li> <li>● No voltage in wall plug.</li> <li>● Blown fuse or tripped breaker.</li> </ul>	<ul style="list-style-type: none"> <li>● Turn "ON" at hand grip.</li> <li>● Plug unit in firmly.</li> <li>● Check fuse or breaker.</li> <li>● Replace fuse/reset breaker.</li> </ul>
<p>Noise from cleaner. </p>	<ul style="list-style-type: none"> <li>● The noise is given out when the suction power is too strong or the motor is operating at high speed, which does not belong to abnormal condition. Please use it normally.</li> <li>● If it is not the normal motor sound, please contact the service center.</li> </ul>	
<p>Alarm from cleaner. </p>	<ul style="list-style-type: none"> <li>● Dust tank is full.</li> <li>● Motor filter dirty.</li> <li>● Obstruction in suction inlet, telescopic tube or hose.</li> </ul>	<ul style="list-style-type: none"> <li>● Empty dust tank.</li> <li>● Clean filter with water, allow to dry and replace in cleaner.</li> <li>● Remove obstruction.</li> </ul>
<p>Strange smell in the appliance body. </p>	<ul style="list-style-type: none"> <li>● A strange smell is produced from the motor mount packing, when the motor is operating. It does not affect the operation or damage the appliance.</li> <li>● When some water is sucked casually into the appliance or the cleaner has not been used for a long time, some strange smell may be exhausted. In this case, timely empty and clean the dust tank.</li> </ul>	
<p>Sani Punch won't work, or the punch bar does not move. </p>	<ul style="list-style-type: none"> <li>● Sani Punch is just used to clean bedclothes, sofa and other fabrics.</li> <li>● When cleaning carpet, please use big brush head.</li> <li>● Check whether the bottom plate is correctly connect with the nozzle. When cleaning light blankets, lay on top of a bulky blanket and then clean.</li> <li>● Check if the suction power is too low or if the nozzle base is clogged with a foreign object.</li> </ul>	
<p>Power cord cannot be rewind completely, or the power cord cannot be fully pulled out. </p>	<ul style="list-style-type: none"> <li>● Pull out part of the cord and rewind it.</li> <li>● Pull out the power cord forceful, which will not damage the cord.</li> <li>● Because of inter-winding cord inside or high temperature in summer.</li> <li>● It can be normal operated after starting cord reel, when it is due to the cord being twisted or not wound up on the reel.</li> </ul>	
<p>Appliance or the exhausted air is overheated. </p>	<ul style="list-style-type: none"> <li>● If the suction power is normal.</li> </ul>	<ul style="list-style-type: none"> <li>● The exhausted hot air is caused by motor, and belongs to the normal temperature. You can continue to use it.</li> </ul>
<p>Inner wall of the hose is too dirty. </p>	<ul style="list-style-type: none"> <li>● The substances blocked inside the transparent hose are easily visible, or clean.</li> <li>● Do not suck in water. The combination of water and dusts can possibly dirty the inner wall of the hose.</li> </ul>	

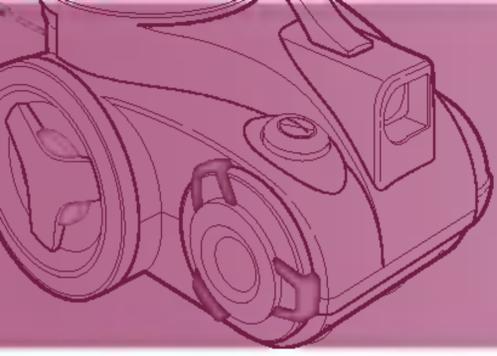


# Packing List

## Packing List

Vacuum Cleaner	1
Owner's Manual	1
Upholstery Nozzle	1
Dusting Brush & Crevice Tool	1
Cleaning head	1
Sani Punch	1
Elbow Tube	1
Hose	1
Telescopic tube	1



顾客名称		型号	
顾客电话		机身编号	

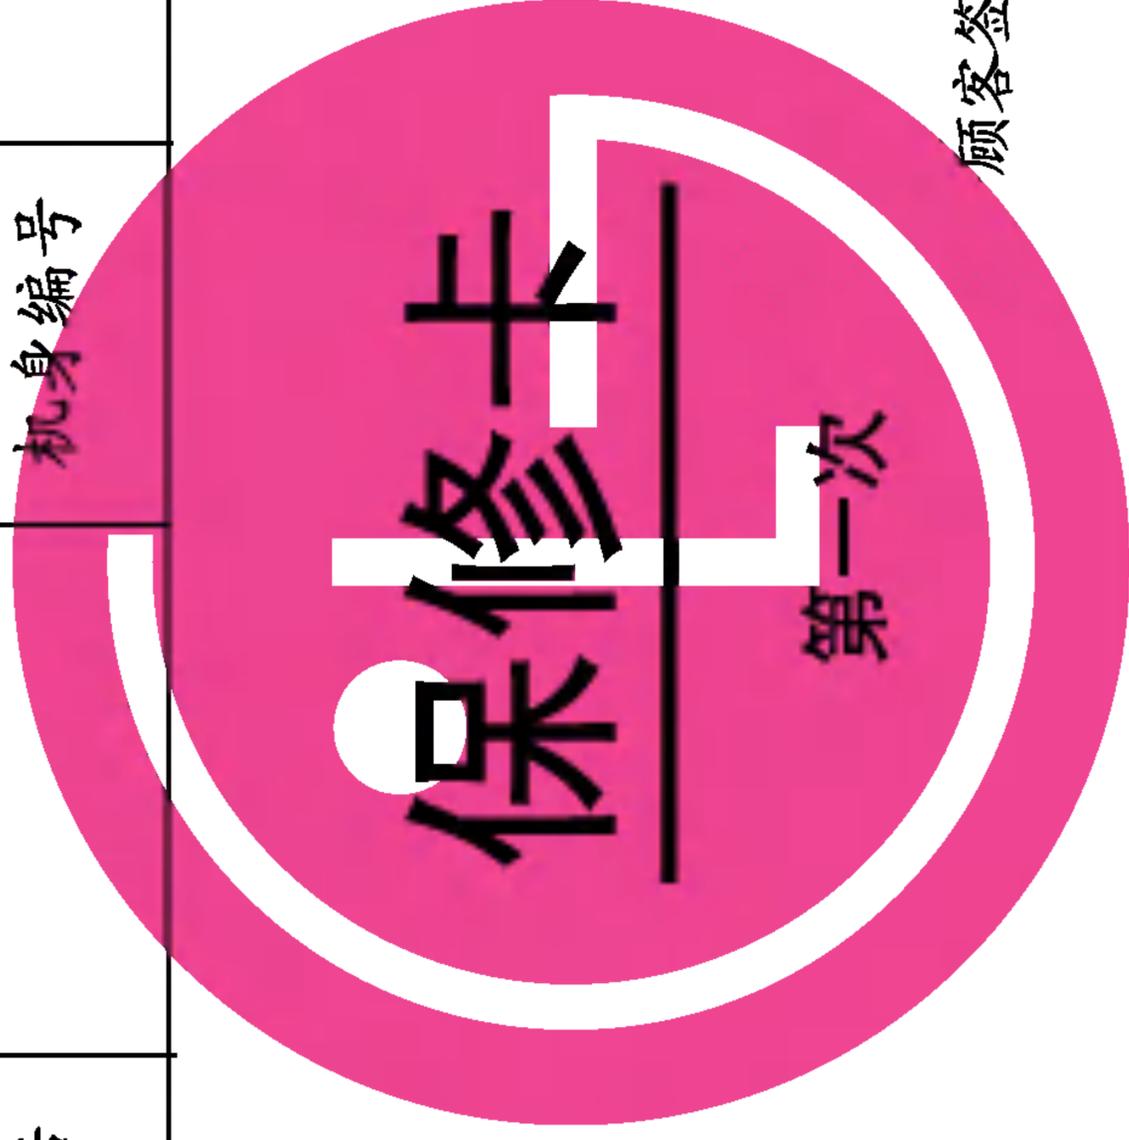

顾客签名

修理完毕后, 请您撕下此联留给维修站


## 修理内容

### 顾客意见

满意

不满意

顾客名称		型号	
顾客电话		机身编号	

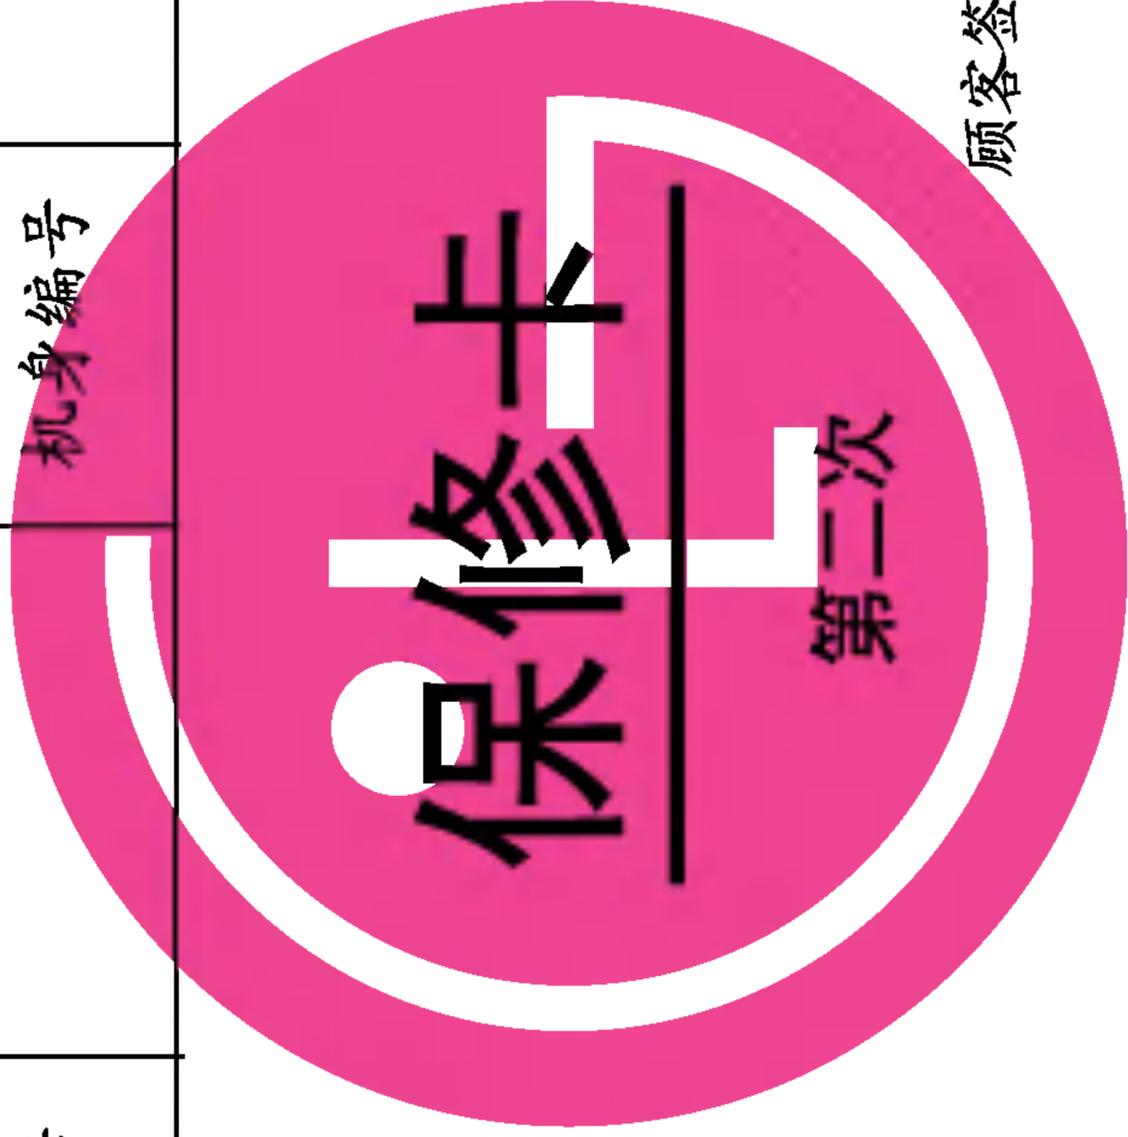

顾客签名

修理完毕后, 请您撕下此联留给维修站


修理内容

顾客意见

满意

不满意

顾客名称		型号	
顾客电话		机身编号	

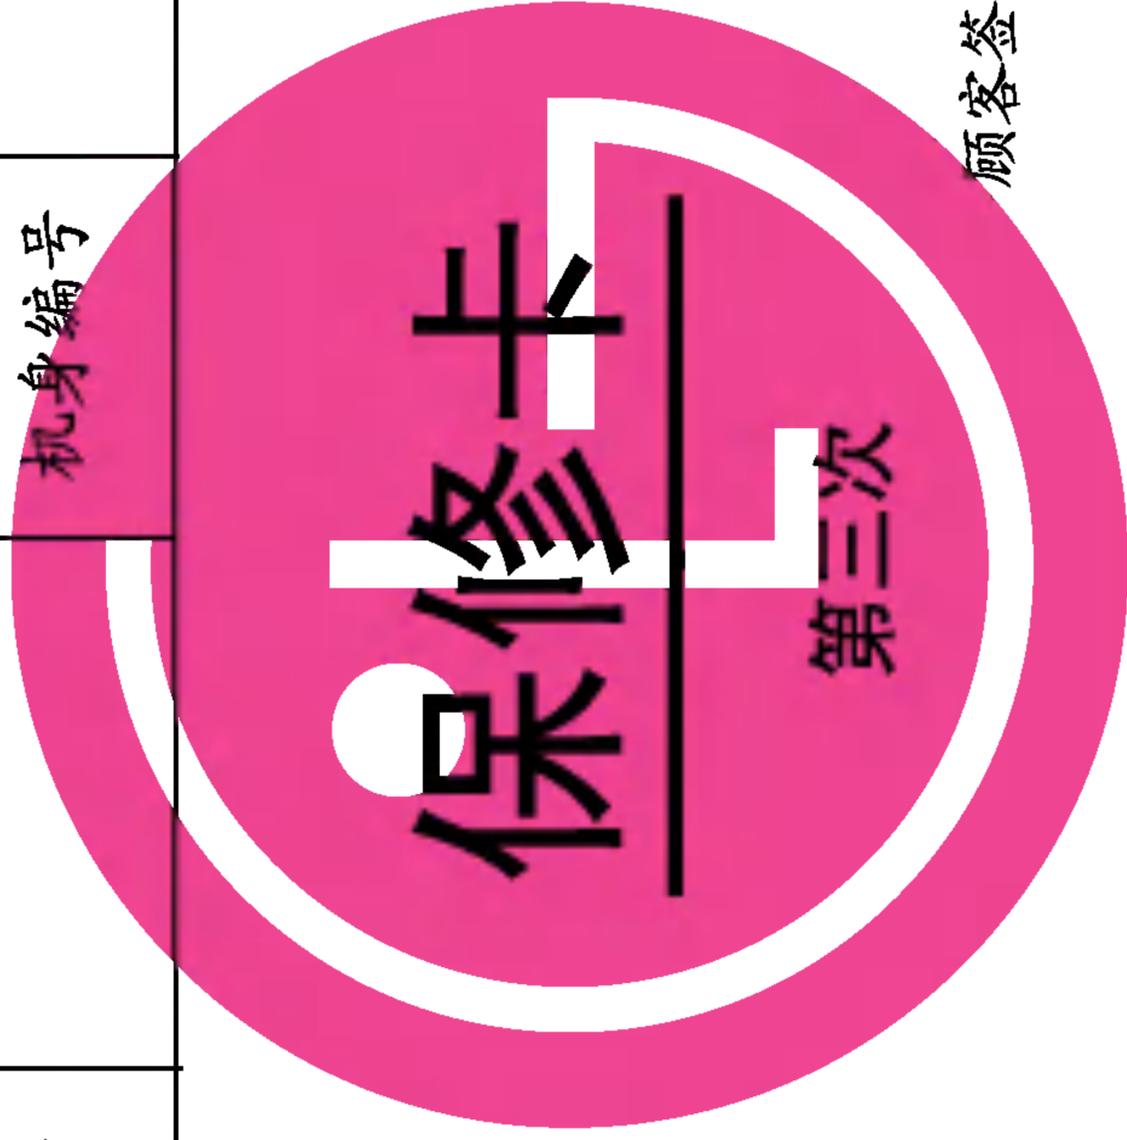

顾客签名

修理完毕后, 请您撕下此联留给维修站


## 修理内容

顾客意见

满意

不满意

顾客名称		型号	
顾客电话		机身编号	

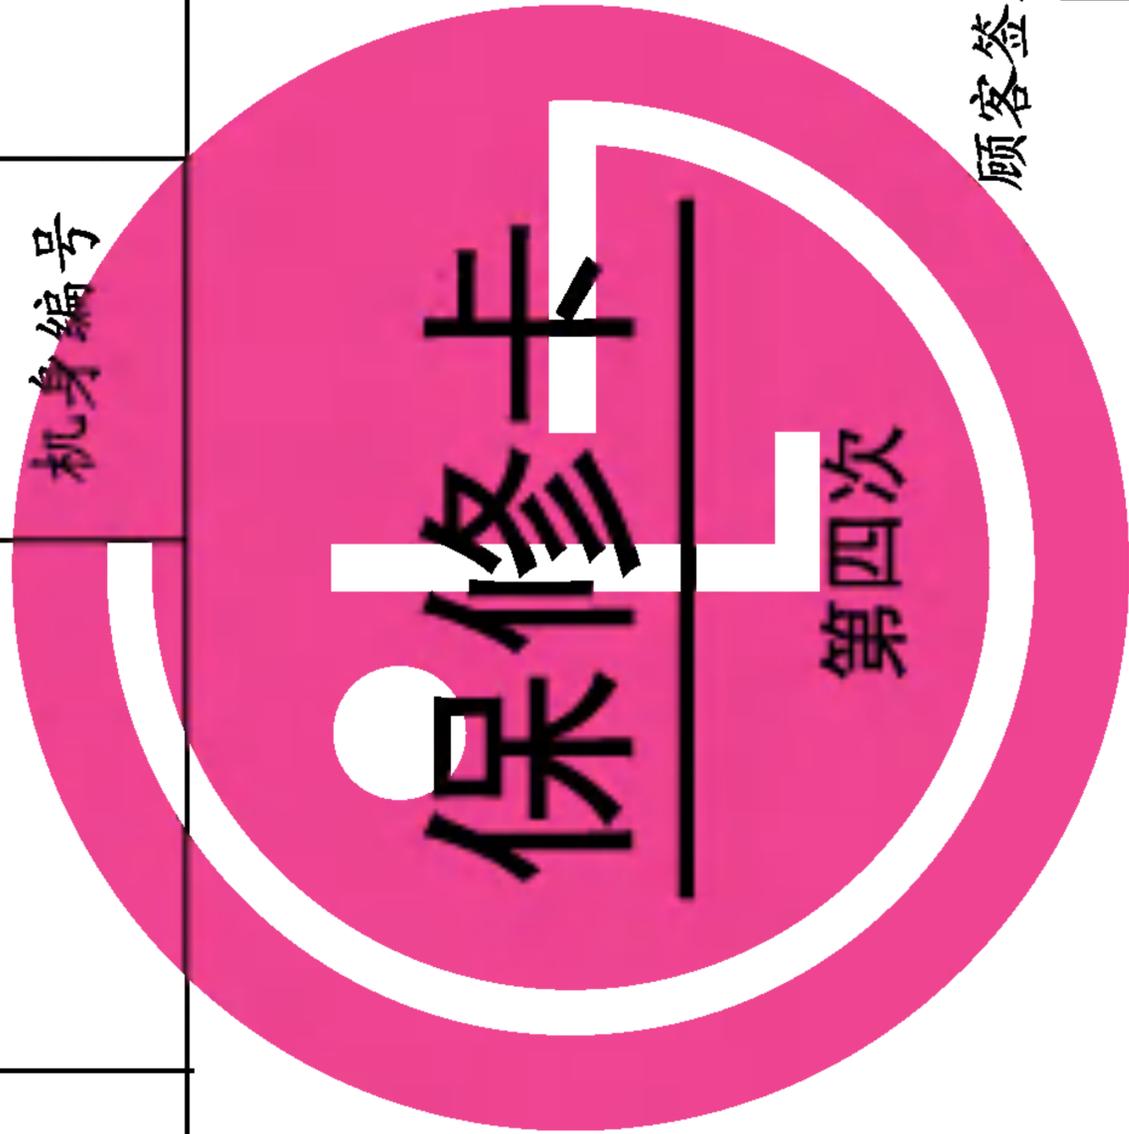

顾客签名

修理完毕后, 请您撕下此联留给维修站

## 修理内容

### 顾客意见

满意

不满意



如有问题

请拨打 LG 服务一号通



**LG 电子** (天津)电器有限公司

地址: 中国·天津市北辰区兴淀公路

邮编: 300402

电话: 022-26903019

传真: 022-26903476



<http://cn.lge.com>

因为本公司产品在不断改进, 设计与规格如有变更恕不另行通知。

P/NO.: 3828FI2862U