



DVD MINI KARAOKE SYSTEM

OWNER'S MANUAL

MODEL : LM-K3540
(LM-K3540A/D/X, LMS-K3540V)



Please read this manual carefully before operating your set.
Retain it for future reference.

Designs and specifications are subject to change without
notice for improvement.

Safety Precautions



CAUTION
RISK OF ELECTRIC SHOCK
DO NOT OPEN



WARNING: TO REDUCE THE RISK
OF ELECTRIC SHOCK
DO NOT REMOVE COVER (OR BACK)
NO USER-SERVICEABLE PARTS INSIDE
REFER SERVICING TO QUALIFIED SERVICE
PERSONNEL.



This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of uninsulated dangerous voltage within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock to persons.



The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance (servicing) instructions in the literature accompanying the appliance.

WARNING: TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS PRODUCT TO RAIN OR MOISTURE.

CLASS 1 LASER PRODUCT
KLASSE 1 LASER PRODUKT
LUOKAN 1 LASER LAITE
KLASS 1 LASER APPARAT
CLASSE 1 PRODUIT LASER

CAUTION:

This unit employs a Laser System.

To ensure proper use of this product, please read this owner's manual carefully and retain for future reference, should the unit require maintenance, contact an authorized service location-see service procedure.

Use of controls, adjustments or the performance of procedures other than those specified herein may result in hazardous radiation exposure.

To prevent direct exposure to laser beam, do not try to open the enclosure. Visible laser radiation when open. DO NOT STARE INTO BEAM.

CAUTION: The apparatus shall not be exposed to water, dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.



This product is manufactured to in compliance with the radio interference requirements of EEC DIRECTIVE 89/336/EEC, 93/68/EEC and 73/23/EEC.



Notes on copyrights:

It is forbidden by law to copy, broadcast, show, broadcast via cable, play in public, or rent copyright material without permission.

This product is equipped with copy protection measures developed by Macrovision. Copy protection signals are recorded on some discs. When recording these discs on a VCR, picture noise will appear during playback.

This product incorporates copyright protection technology that is protected by certain U.S. patent claims and other intellectual property rights owned by Macrovision Corporation and other rights owners. Use of this copyright protection technology must be authorized by Macrovision Corporation, and is intended for home and other limited viewing uses only unless otherwise authorized by Macrovision Corporation. Reverse engineering or disassembly is prohibited.

SERIAL NUMBER: The serial number is found on the back of this unit. This number is unique to this unit and not available to others. You should record requested information here and retain this guide as a permanent record of your purchase.

Model No. _____

Serial No. _____



Disposal of your old appliance

1. When this crossed-out wheeled bin symbol is attached to a product it means the product is covered by the European Directive 2002/96/EC.
2. All electrical and electronic products should be disposed of separately from the municipal waste stream via designated collection facilities appointed by the government or the local authorities.
3. The correct disposal of your old appliance will help prevent potential negative consequences for the environment and human health.
4. For more detailed information about disposal of your old appliance, please contact your city office, waste disposal service or the shop where you purchased the product.

Table of Contents

Introduction

Safety Precautions	2
Table of Contents	3
Before Use	4-5
Playable Discs	4
Precautions	5
Notes on Discs	5
About Symbols	5
Front Panel	6
Rear Panel	7
Remote Control	8
Display Window	9

Preparation

Connections	10-13
Connecting to a TV	10
Connecting to Antenna	11
Connecting to Auxiliary Equipment	12
Connecting to Optional Equipment	12
Speaker System Connection	13
Before Operation	14-22
Volume Adjustment	14
MUTE	14
Sound Quality Adjustment	14
SURROUND	14
XDSS (Extreme Dynamic Sound System)	14
OAO (Orientation Acoustic Optimizer) ON/OFF	14
DEMO	14
Setting the Clock	14
Sleep Timer Function	14
Timer Function	15
Using Microphone	15
Mini Glossary for Audio Stream & Surround Mode	16
Sound Mode	16
General Explanation	17
On-Screen Display	17
Initial Settings	18-22
• General Operation	18
• LANGUAGE	18
• DISPLAY	19
• AUDIO	20-21
• OTHERS	21
• LOCK (Parental Control)	22

Operation

Operation with RADIO	23-24
Presetting the radio stations	23
Listening to the radio	23
RDS Function - OPTIONAL	24
• About RDS	24
• Programme Search (PTY)	24
Operation with TAPE	25
Basic Playback	25
To Stop Play	25
Tape Counter Reset	25
To Play Rewind or Fast Forward	25
Dubbing	25
Recording	25
Basic Setting	25
Recording from Radio, CD or Auxiliary source	25
CD to Tape Synchronized Recording	25

Operation with DVD and Video CD 26-28

Playing a DVD and Video CD	26
General Features	26-27
• Moving to another TITLE	26
• Moving to another CHAPTER/TRACK	26
• Search	26
• Still Picture and Frame-by-Frame Playback	27
• Slow Motion	27
• Repeat	27
• Repeat A-B	27
• Time Search	27
• Last Scene Memory	27
• Zoom	28
• Marker Search	28
Special DVD Features	28
• Title Menu	28
• Disc Menu	28
• Camera Angle	28
• Changing the Audio Language	28
• Changing the Audio Channel	28
• Subtitle	28

Operation with Audio CD and MP3/WMA Disc 29-30

Playing an Audio CD and MP3/WMA Disc	29
• Pause	30
• Moving to another Track	30
• Repeat Track/ All/ Off	30
• Search	30

Operation with JPEG Disc 31

Viewing a JPEG disc	31
• Slide Show	31
• Moving to another File	31
• Still Picture	31

Programmed Playback 32

• Repeat Programmed Tracks	32
• Erasing a Track from Program List	32
• Erasing the Complete Program List	32

Operation with DivX Disc 33

Operation with KARAOKE 34-38

Karaoke Basic Playback	34
Karaoke Advanced Playback	35-36
Karaoke MENU Playback	36-38
• SETUP	36
• MUSIC LIST	36-37
• RANDOM	38
• CHALLENGE	38

Reference

Troubleshooting	39
Language Code List	40
Country Code List	41
Specifications	42

About the symbols for instructions



Indicates hazards likely to cause harm to the unit itself or other material damage.



Indicates special operating features of this unit.



Indicates tips and hints for making the task easier.

Before Use

Playable Discs

	DVD (8 cm / 12 cm disc)
	Video CD (VCD) (8 cm / 12 cm disc)
	Audio CD (8 cm / 12 cm disc)

In addition, this unit can play a DVD±R, DVD±RW, SVCD, and CD-R or CD-RW that contains audio titles, MP3, WMA, JPEG or DivX files.

Notes

- Depending on the conditions of the recording equipment or the CD-R/RW (or DVD±R/RW) disc itself, some CD-R/RW (or DVD±R/RW) discs cannot be played on the unit.
- Do not attach any seal or label to either side (the labeled side or the recorded side) of a disc.
- Do not use irregularly shaped CDs (e.g., heart-shaped or octagonal). It may result in malfunctions.

Notes on DVDs and Video CDs

Some playback operations of DVDs and Video CDs may be intentionally fixed by software manufacturers. As this unit plays DVDs and Video CDs according to disc content designed by the software manufacturer, some playback features of the unit may not be available or other functions may be added. Refer also to the instructions supplied with the DVDs and Video CDs. Some DVDs made for business purposes may not be played on the unit.

Regional code of the DVD player and DVDs

This DVD player is designed and manufactured for playback of region “5” encoded DVD software. The region code on the labels of some DVD discs indicates which type of player can play those discs. This unit can play only DVD discs labeled “5” or “ALL”. If you try to play any other discs, the message “Check Regional Code” will appear on the TV screen. Some DVD discs may not have a region code label even though their playback is prohibited by area limits.



Note on DTS-encoded CDs

When playing DTS-encoded CDs, excessive audio level may be heard from the analog stereo output. To avoid possible damage to the audio system, turn down the volume before playing back such discs, adjust the volume gradually, and keep the volume level low. To enjoy DTS Digital Surround™ playback, an external 5.1 channel DTS Digital Surround™ decoder system must be connected to the digital output of the unit.

Disc-related terms

Title (DVD only)

The main film content or accompanying feature content or additional feature content, or music album. Each title is assigned a title reference number enabling you to locate it easily.

Chapter (DVD only)

Sections of a picture or a musical piece that are smaller than titles. A title is composed of one or several chapters. Each chapter is assigned a chapter number, enabling you to locate the chapter you want. Depending on the disc, chapters may not be recorded.

Track (Video CD and audio CD only)

Sections of a picture or a musical piece on a video CD or an audio CD. Each track is assigned a track number, enabling you to locate the track you want.

Scene

On a video CD with PBC (Playback control) functions, moving pictures and still pictures are divided into sections called “Scenes”. Each scene is displayed in the menu screen and assigned a scene number, enabling you to locate the scene you want. A scene is composed of one or several tracks.

Types of video CDs

There are two types of video CDs:

Video CDs equipped with PBC (Version 2.0)

PBC (Playback control) functions allow you to interact with the system via menus, search functions, or other typical computer-like operations. Moreover, still pictures of high resolution can be played if they are included in the disc.

Video CDs not equipped with PBC (Version 1.1)

Operated in the same way as audio CDs, these discs allow playback of video pictures as well as sound, but they are not equipped with PBC.

Before Use (Cont'd)

Precautions

Handling the unit

When shipping the unit

The original shipping carton and packing materials come in handy. For maximum protection, re-pack the unit as it was originally packed at the factory.

When setting up the unit

The picture and sound of a nearby TV, VCR, or radio may be distorted during playback. In this case, position the unit away from the TV, VCR, or radio, or turn off the unit after removing the disc.

To keep the exterior surfaces clean

Do not use volatile liquids, such as insecticide spray, near the unit. Do not leave rubber or plastic products in contact with the unit for a long period of time. They will leave marks on the surface.

Cleaning the unit

To clean the cabinet

Use a soft, dry cloth. If the surfaces are extremely dirty, use a soft cloth lightly moistened with a mild detergent solution. Do not use strong solvents such as alcohol, benzene, or thinner, as these might damage the surface of the unit.

To obtain a clear picture

The DVD player is a high-tech, precision device. If the optical pick-up lens and disc drive parts are dirty or worn, the picture quality will be poor. Regular inspection and maintenance are recommended after every 1,000 hours of use. (This depends on the operating environment.) For details, please contact your nearest dealer.

Notes on Discs

Handling discs

Do not touch the playback side of the disc.
Hold the disc by the edges so that fingerprints will not get on the surface.
Do not stick paper or tape on the disc.




Storing discs

After playing, store the disc in its case. Do not expose the disc to direct sunlight or sources of heat, or leave it in a parked car exposed to direct sunlight, as there may be a considerable temperature increase inside the car.

Cleaning discs

Fingerprints and dust on the disc can cause poor picture quality and sound distortion. Before playing, clean the disc with a clean cloth. Wipe the disc from the center out.

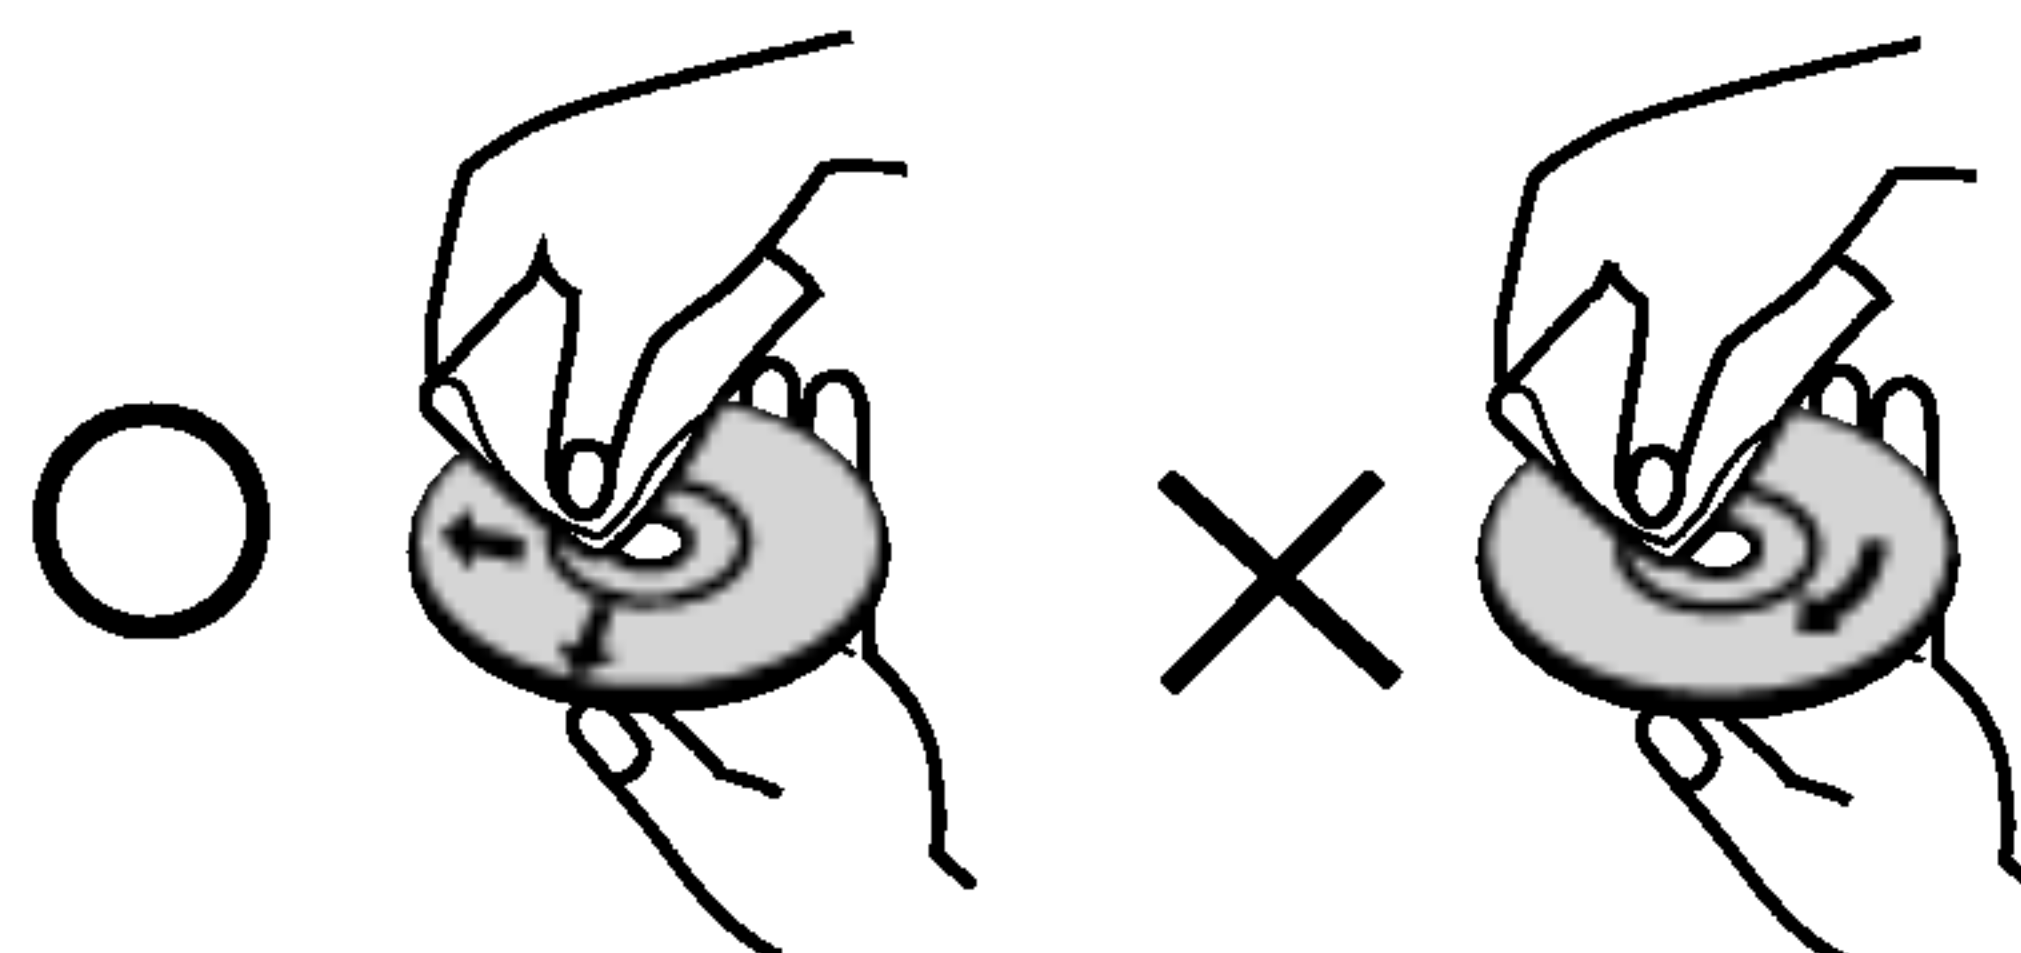

Do not use strong solvents such as alcohol, benzene, thinner, commercially available cleaners, or anti-static spray intended for older vinyl records.

About Symbols

About the 📀 symbol display


“ 📀 ” may appear on the TV screen during operation. This icon means the function explained in this owner's manual is not available on that specific DVD video disc.

About the disc symbols for instructions

A section whose title has one of the following symbol is applicable only to the disc represented by the symbol.


DVD	DVD
VCD	Video CDs
CD	Audio CDs
MP3	MP3 disc
WMA	WMA disc
JPEG	JPEG disc
DivX	DivX disc

Front Panel

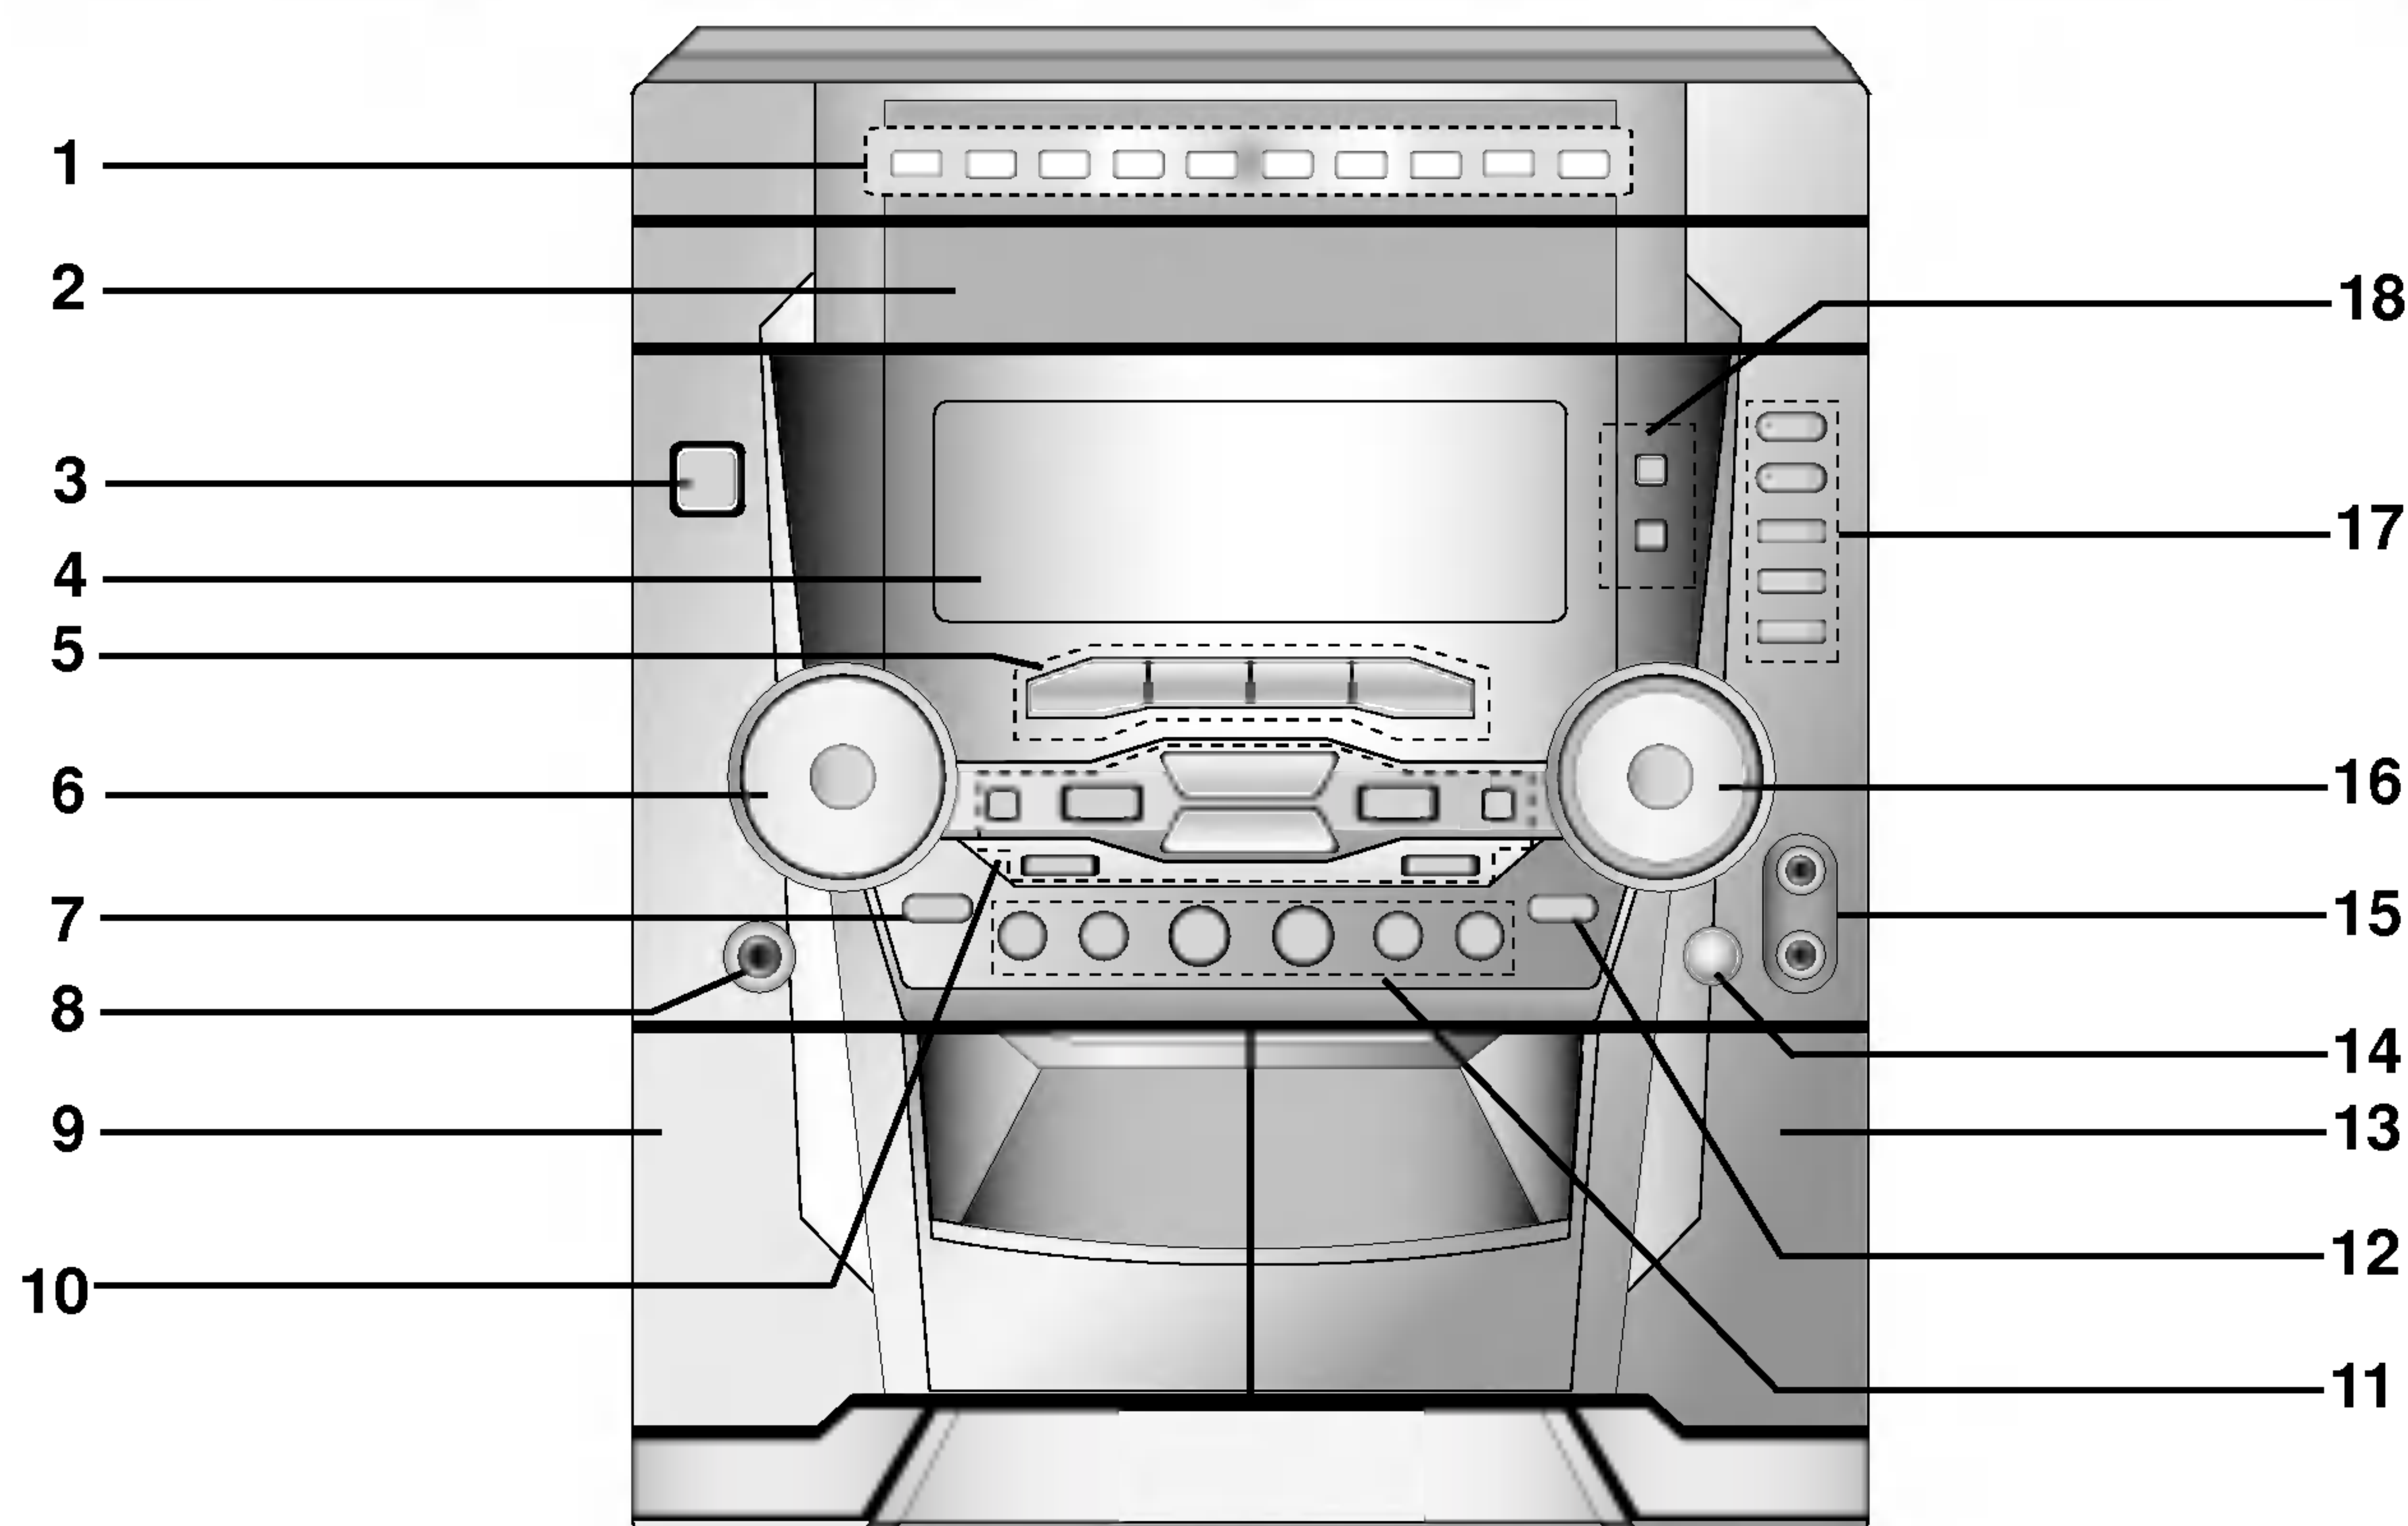


- | | |
|---|---|
| <p>1. NUMERIC buttons (0~9)</p> <p>2. DISC TRAY</p> <p>3. POWER (⏻ STANDBY/ON) button</p> <p>4. DISPLAY WINDOW</p> <p>5. FUNCTION SELECT buttons
(TUNER, TAPE, KARAOKE DVD/CD, AUX)</p> <p>6. MULTI JOG DIAL</p> <ul style="list-style-type: none"> • MANUAL TUNING • CD SKIP (⏮/⏭) • CLOCK ADJUST • KEY CONTROL (#/b) <p>7. SET/ CD PAUSE (CD ⏸)/ COUNTER RESET
(COUNT. RESET)/ RDS (OPTIONAL) button</p> <p>8. HEADPHONE SOCKET (🎧 PHONES) -ø6.3mm</p> <p>9. ▲ PUSH EJECT position (TAPE 1)</p> <p>10. • NORMAL DUBBING (NOR-DUBB.)/
CD SYNCHRO RECORDING (CD SYNC.) button</p> <ul style="list-style-type: none"> • EQUALIZER (EQ) button • OAO button • XDSS button • SURROUND (SURR.) button • HIGH DUBBING (HI-DUBB.) button • ⌚ TIMER button • CLOCK button | <p>11. • RECORD/ RECORD PAUSE (●/⏸) button</p> <ul style="list-style-type: none"> • CD SEARCH (⏮/⏭) buttons • AUTO TUNING (-/+) buttons • TEMPO (⏮/⏭) buttons • PRESET (-/+) buttons • REVERSE PLAY (⏮)/ PLAY (⏭) buttons • STOP (■) button <p>12. • PLAY MODE button</p> <ul style="list-style-type: none"> • DEMO button <p>13. ▲ PUSH EJECT position (TAPE 2)</p> <p>14. MIC VOLUME KNOB (MIC VOL.) : OPTIONAL</p> <p>15. MIC JACKS (MIC1, MIC2) : OPTIONAL</p> <p>16. VOLUME knob</p> <p>17. • CD OPEN/CLOSE button (▲ OPEN/CLOSE)</p> <ul style="list-style-type: none"> • DISC SKIP button • DISC DIRECT PLAY buttons (DISC1, DISC2, DISC3) <p>18. • PROGRAM/MEMORY button</p> <ul style="list-style-type: none"> • MODE/RIF button |
|---|---|

Rear Panel

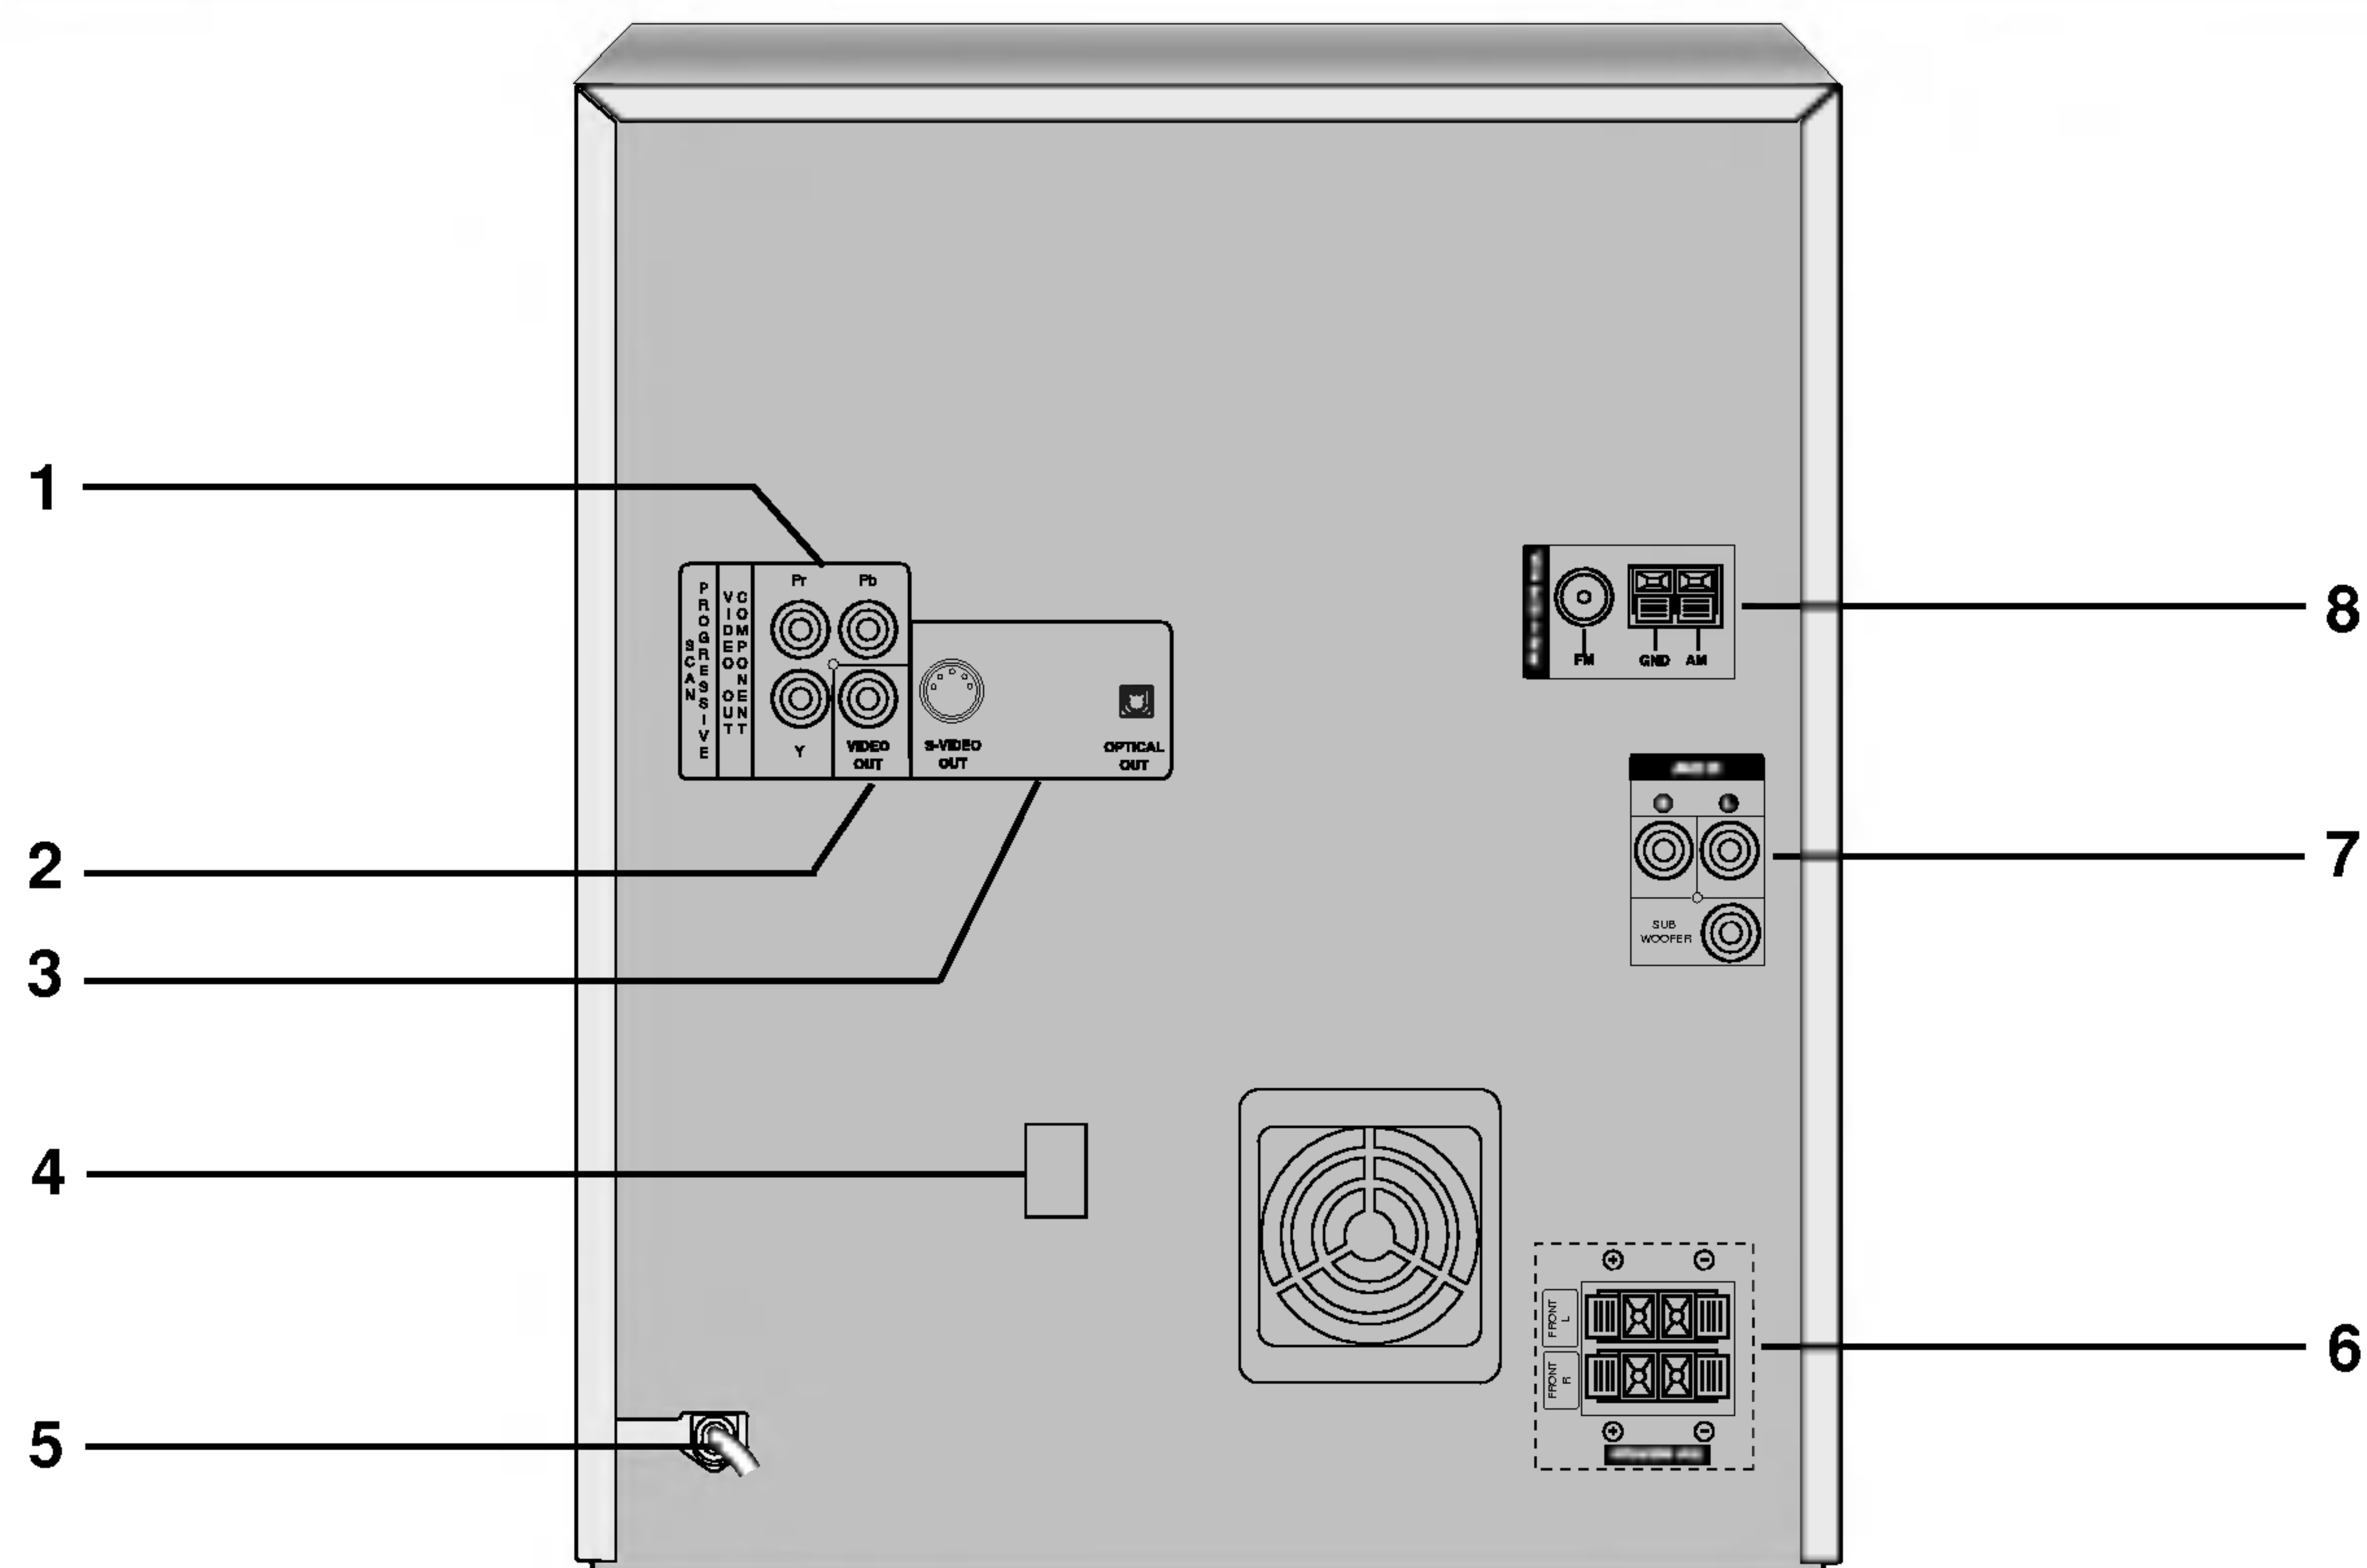

- | | |
|---|---------------------------------------|
| 1. COMPONENT VIDEO OUT/ PROGRESSIVE SCAN (Y Pb Pr) Jack | 6. SPEAKER Connector |
| 2. VIDEO OUT Jack | 7. • AUXILIARY INPUT Sockets (AUX IN) |
| 3. • S-VIDEO OUT Jack | • SUB WOOFER OUT Connector |
| • OPTICAL OUT Jack | 8. ANTENNA Connector |
| 4. VOLTAGE SELECTOR : OPTIONAL | |
| 5. POWER CORD | |

Remote Control

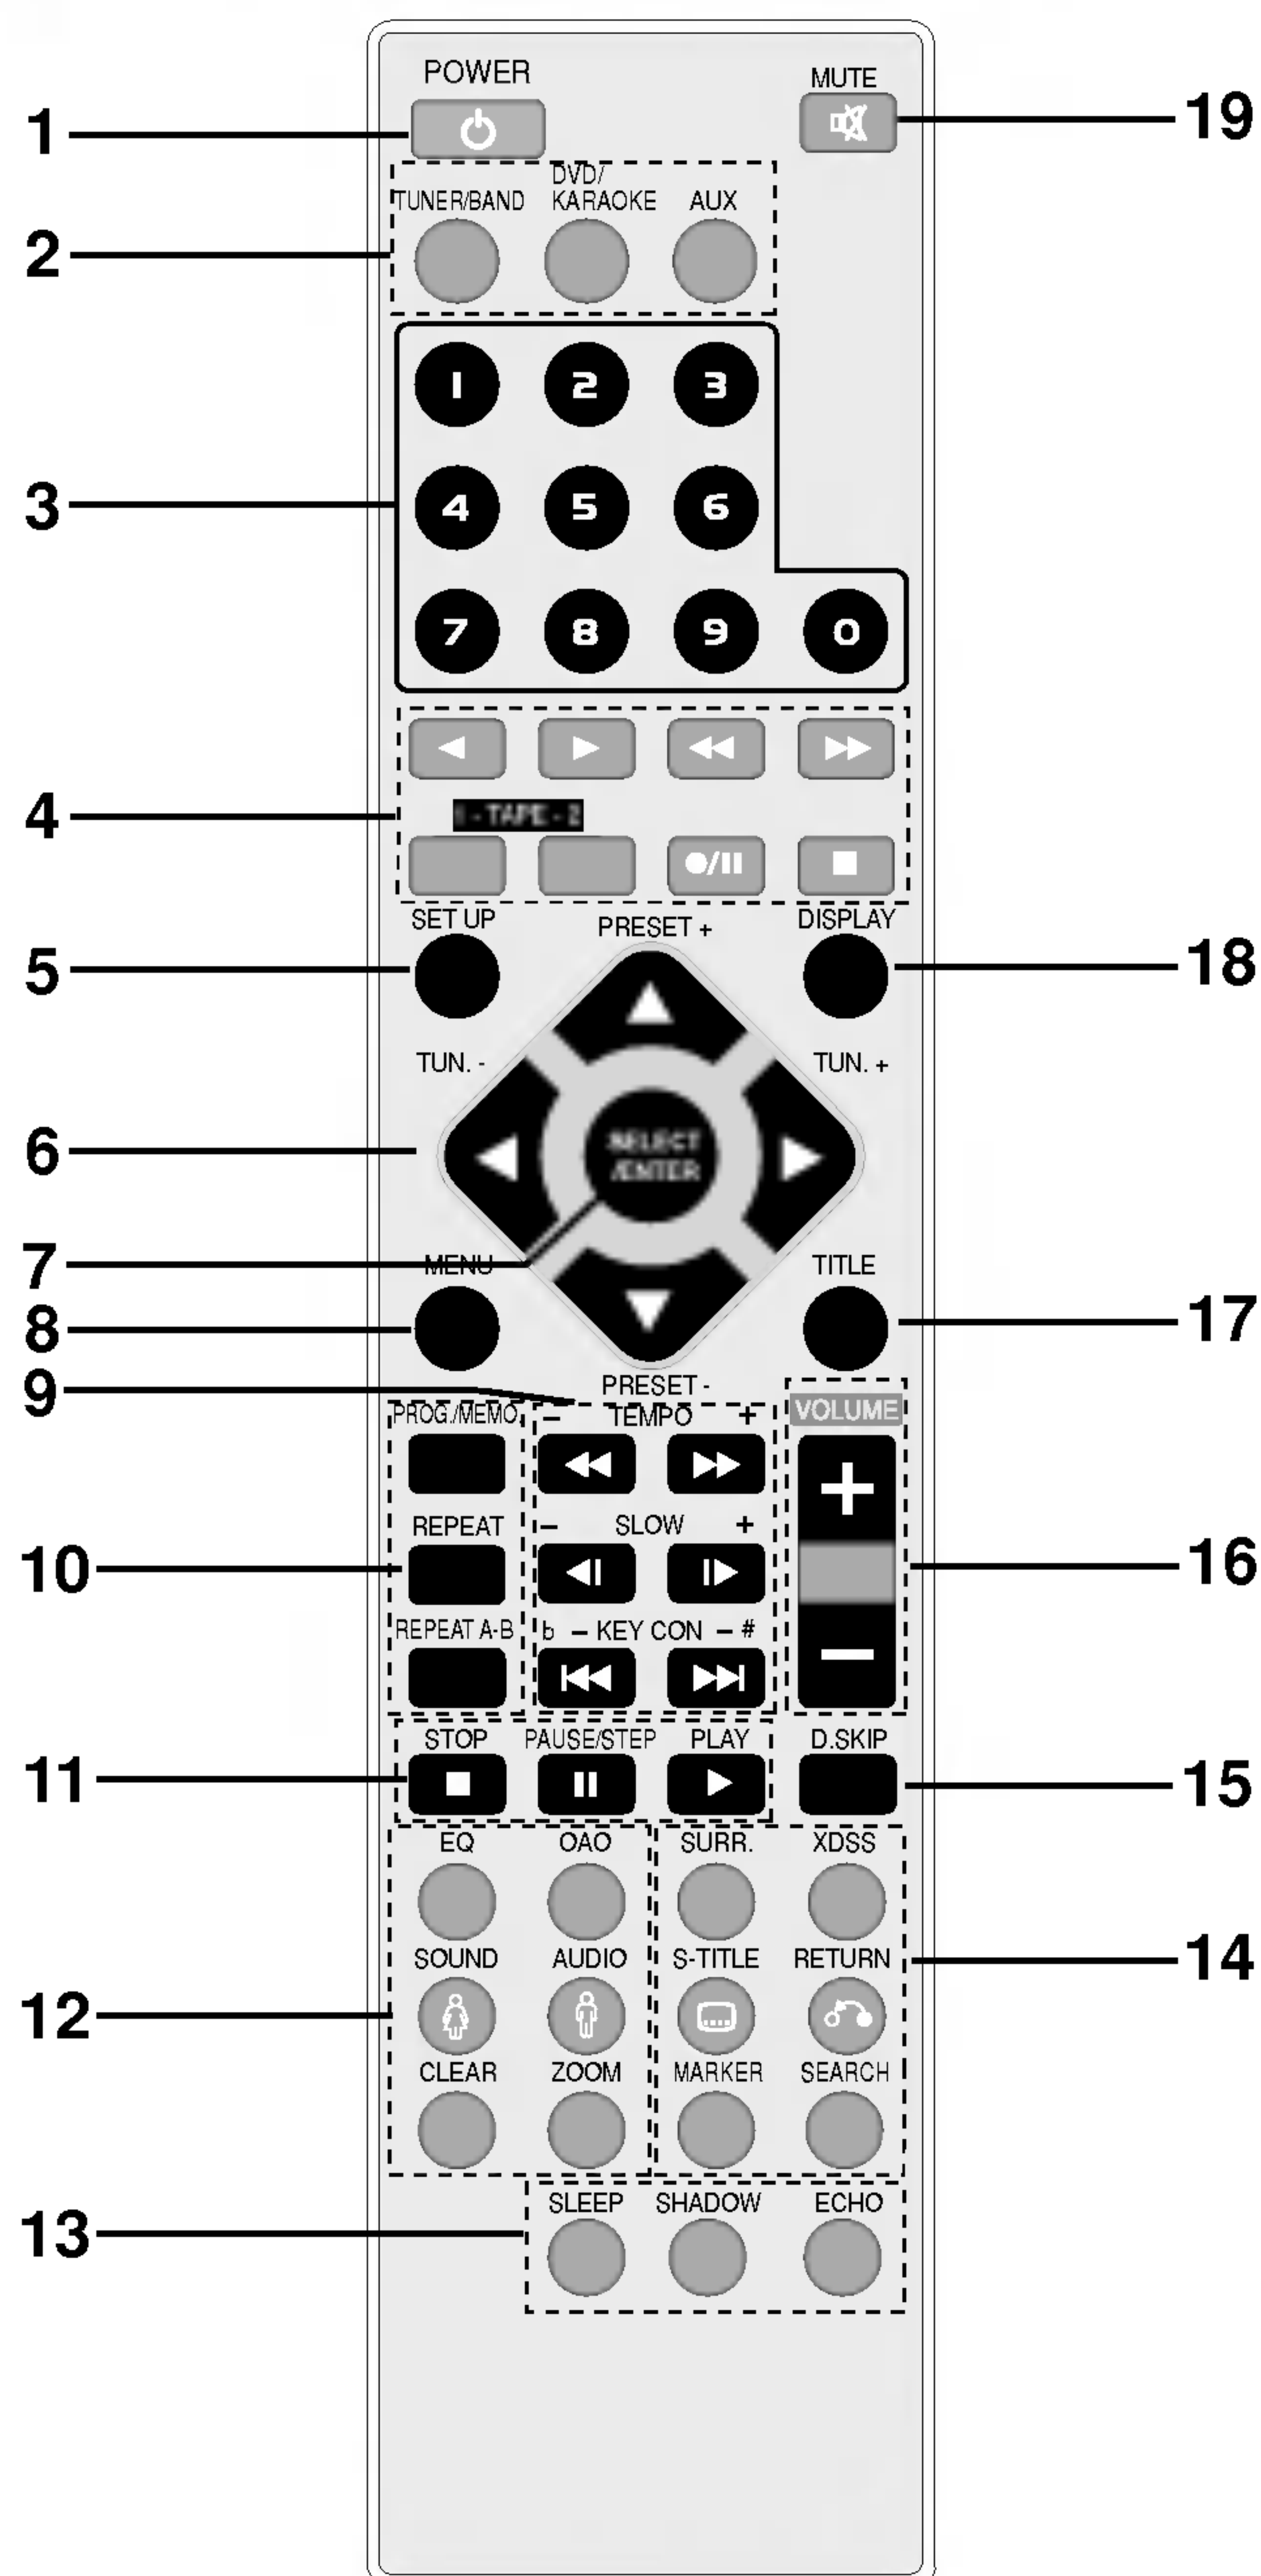


1. POWER button
2. FUNCTION SELECT buttons (TUNER/BAND, DVD/KARAOKE, AUX)
3. NUMERIC buttons (0-9)
4. TAPE FUNCTION buttons
 - REVERSE PLAY (◀: optional)
 - PLAY (▶)
 - REWIND/ FAST FORWARD PLAY (◀◀/▶▶)
 - TAPE 1/2 SELECT buttons
 - RECORD/ RECORD PAUSE (●/||)
 - TAPE STOP (■)
5. SET UP button
6. • ARROW buttons (▲ / ▼ / ◀ / ▶)
 - (For use in highlighting a selection on a GUI menu screen, TITLE and MENU screen.)
 - PRESET (▲ / ▼) buttons
 - TUNING (-/+) [TUN. (◀ / ▶)] buttons
7. SELECT/ENTER button
8. MENU button
 - (Use the MENU button to display the menu screen included on DVD video discs.)
9. SCAN (◀◀/▶▶)/ TEMPO (◀◀/▶▶)/ SLOW (◀◀/▶▶)/ KEY CONTROL (#/b)/ SKIP (◀◀◀/▶▶▶) buttons
10. PROG./MEMO./ REPEAT/ REPEAT A-B buttons
11. STOP (■)/ PAUSE(||)/ STEP/ PLAY (▶) buttons
12. EQUALIZER (EQ)/ OAO/ SOUND/ FEMALE(♀) AUDIO/ MALE(♂) / CLEAR/ ZOOM buttons
13. SLEEP/ SHADOW/ ECHO buttons
14. SURROUND (SURR.)/ XDSS/ SUBTITLE (S-TITLE) RETURN / MARKER/ SEARCH buttons
15. DISC SKIP (D.SKIP) buttons
16. VOLUME +/- buttons
17. TITLE button
 - (Use the TITLE button to display the title screen included on DVD video discs.)
18. DISPLAY button
19. MUTE button

Remote Control Operation Range

Point the remote control at the remote sensor and press the buttons.

- **Distance:** About 23 ft (7 m) from the front of the remote sensor
- **Angle:** About 30° in each direction of the front of the remote sensor

Remote control battery installation

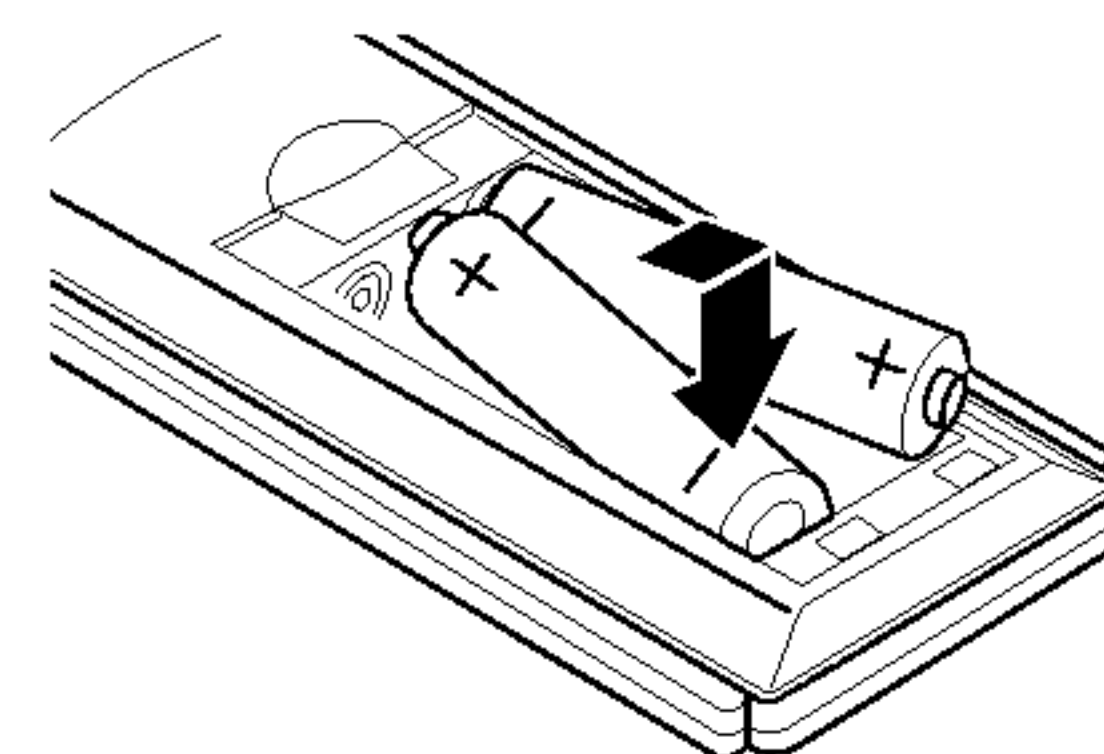


Detach the battery cover on the rear of the remote control, and insert two R03 (size AAA) batteries with + and - aligned correctly.

⚠ Caution

Do not mix old and new batteries. Never mix different types of batteries (standard, alkaline, etc.).

Display Window

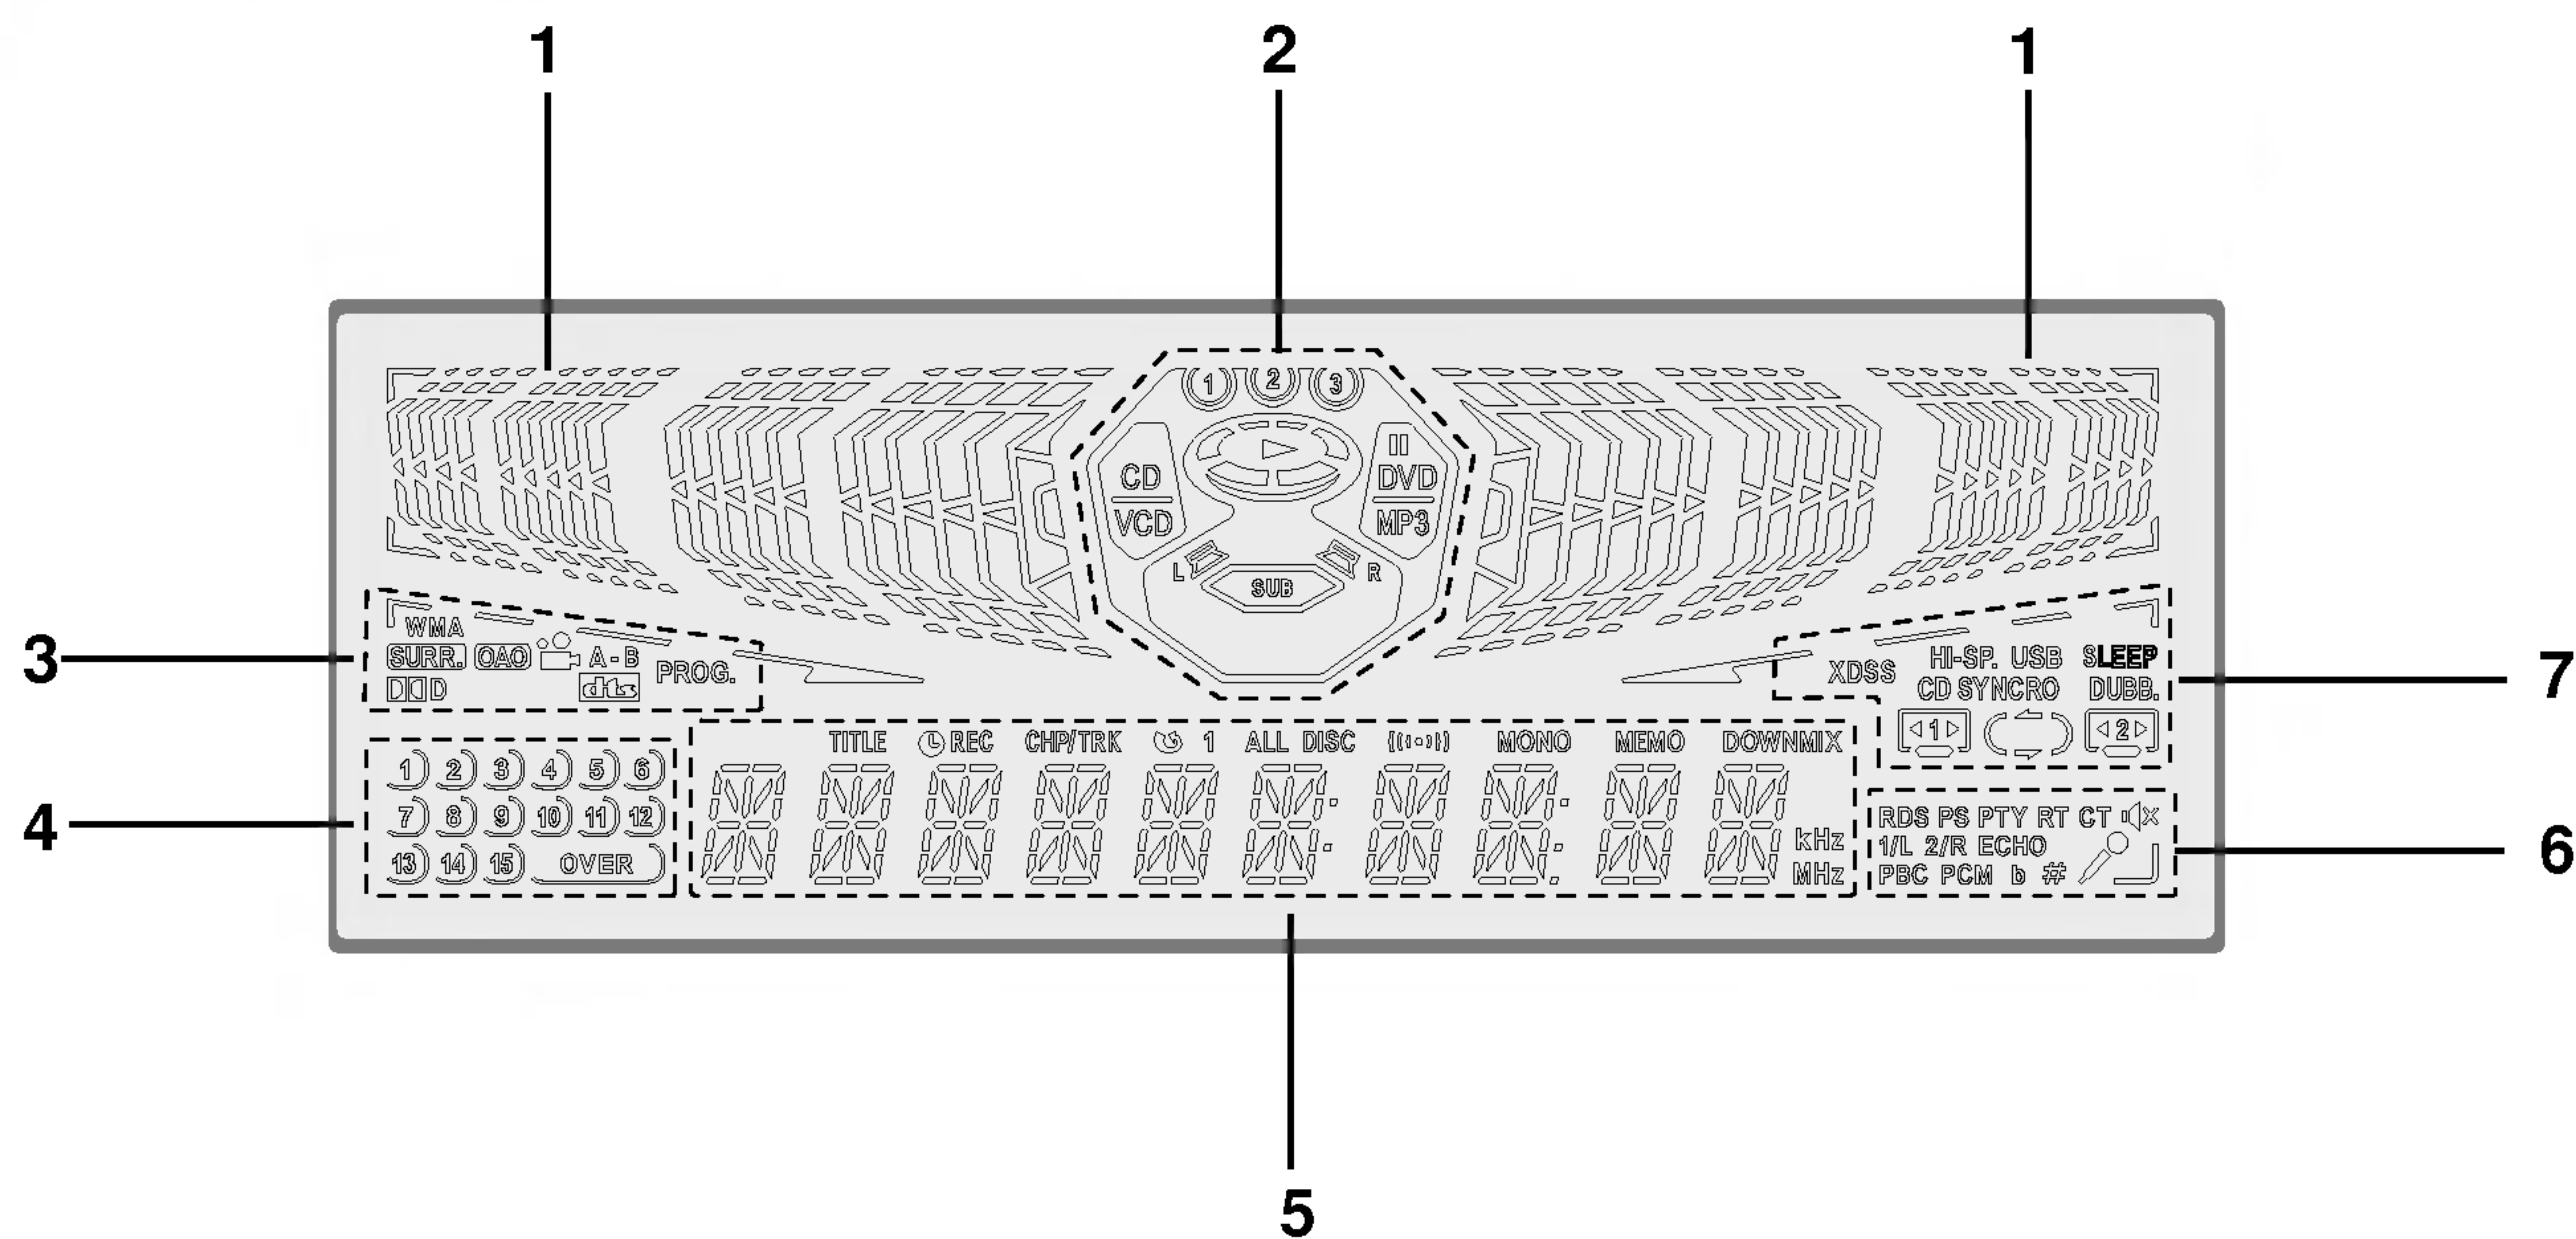

1. LEVEL METER indicator
2.
 - DISC NUMBER indicator
 - DISC TYPE indicator (MP3/DVD/CD/VCD)
 - PLAY/ PAUSE indicator
 - LEFT FRONT SPEAKER indicator (L)
 - RIGHT FRONT SPEAKER indicator (R)
 - SUB WOOFER indicator (SUB)
3.
 - DISC TYPE indicator (WMA)
 - SURROUND (SURR,)/ OAO indicator
 - ANGLE indicator
 - REPEAT A-B indicator
 - DOLBY DIGITAL/ DTS indicator
 - PROGRAM (PROG.) indicator
4.
 - CD MUSIC CALENDAR indicator
 - CD MUSIC CALENDAR OVER indicator
5.
 - TITLE indicator
 - RECORD/ RECORD PAUSE indicator
 - CHAPTER/ TRACK indicator
 - REPEAT indicator
 - FM STEREO RECEIVING indicator
 - MONO indicator
 - MEMORY (MEMO) indicator
 - DOWNMIX indicator
6.
 - RDS Data type indicators : OPTIONAL
 - MUTE indicator
 - AUDIO CHANNEL indicator
 - ECHO indicator
 - PBC indicator
 - PCM indicator
 - KEY CONTROL (b/#) indicator
 - MIC indicator
7.
 - HIGH DUBBING indicators
 - SLEEP indicator
 - XDSS indicator
 - CD SYNCRO RECORDING indicator
 - NORMAL DUBBING indicator
 - TAPE 1/2 SELECT indicator
 - PLAY MODE indicator
 - TAPE PLAY DIRECTION indicator

Connections

Connecting to a TV

- Make one of the following connections, depending on the capabilities of your existing equipment.

Tips

- Depending on your TV and other equipment you wish to connect, there are various ways you could connect the unit. Use one of the connections described below.
- Please refer to the manuals of your TV, VCR, Stereo System or other devices as necessary to make the best connections.

Caution

- Make sure the unit is connected directly to the TV. Select the correct AV input on your TV.
- Do not connect your unit to TV via your VCR. The DVD image could be distorted by the copy protection system.

Video connection

Connect the VIDEO OUT jack from the unit to the VIDEO IN jack on the TV using the video cable supplied (V).

S-Video connection

Connect the S-VIDEO OUT jack on the unit to the S-VIDEO IN jack on the TV using the S-Video cable (S).

Component Video (Color Stream®) connection

Connect the COMPONENT VIDEO OUT/ PROGRESSIVE SCAN jacks from the unit to the corresponding in jacks on the TV using an Y Pb Pr cable (C).

Progressive Scan (ColorStream® pro) connection


- If your television is a high-definition or “digital ready” television, you may take advantage of the unit’s progressive scan output for the highest video resolution possible.
- If your TV does not accept the Progressive Scan format, the picture will appear scrambled if you try Progressive Scan on the unit.

Connect the COMPONENT VIDEO OUT/ PROGRESSIVE SCAN jacks from the unit to the corresponding in jacks on the TV using an optional Y Pb Pr cable (C).

Note

- Set the Progressive to “On” on the Setup menu for progressive signal, see page 19.

Rear of TV

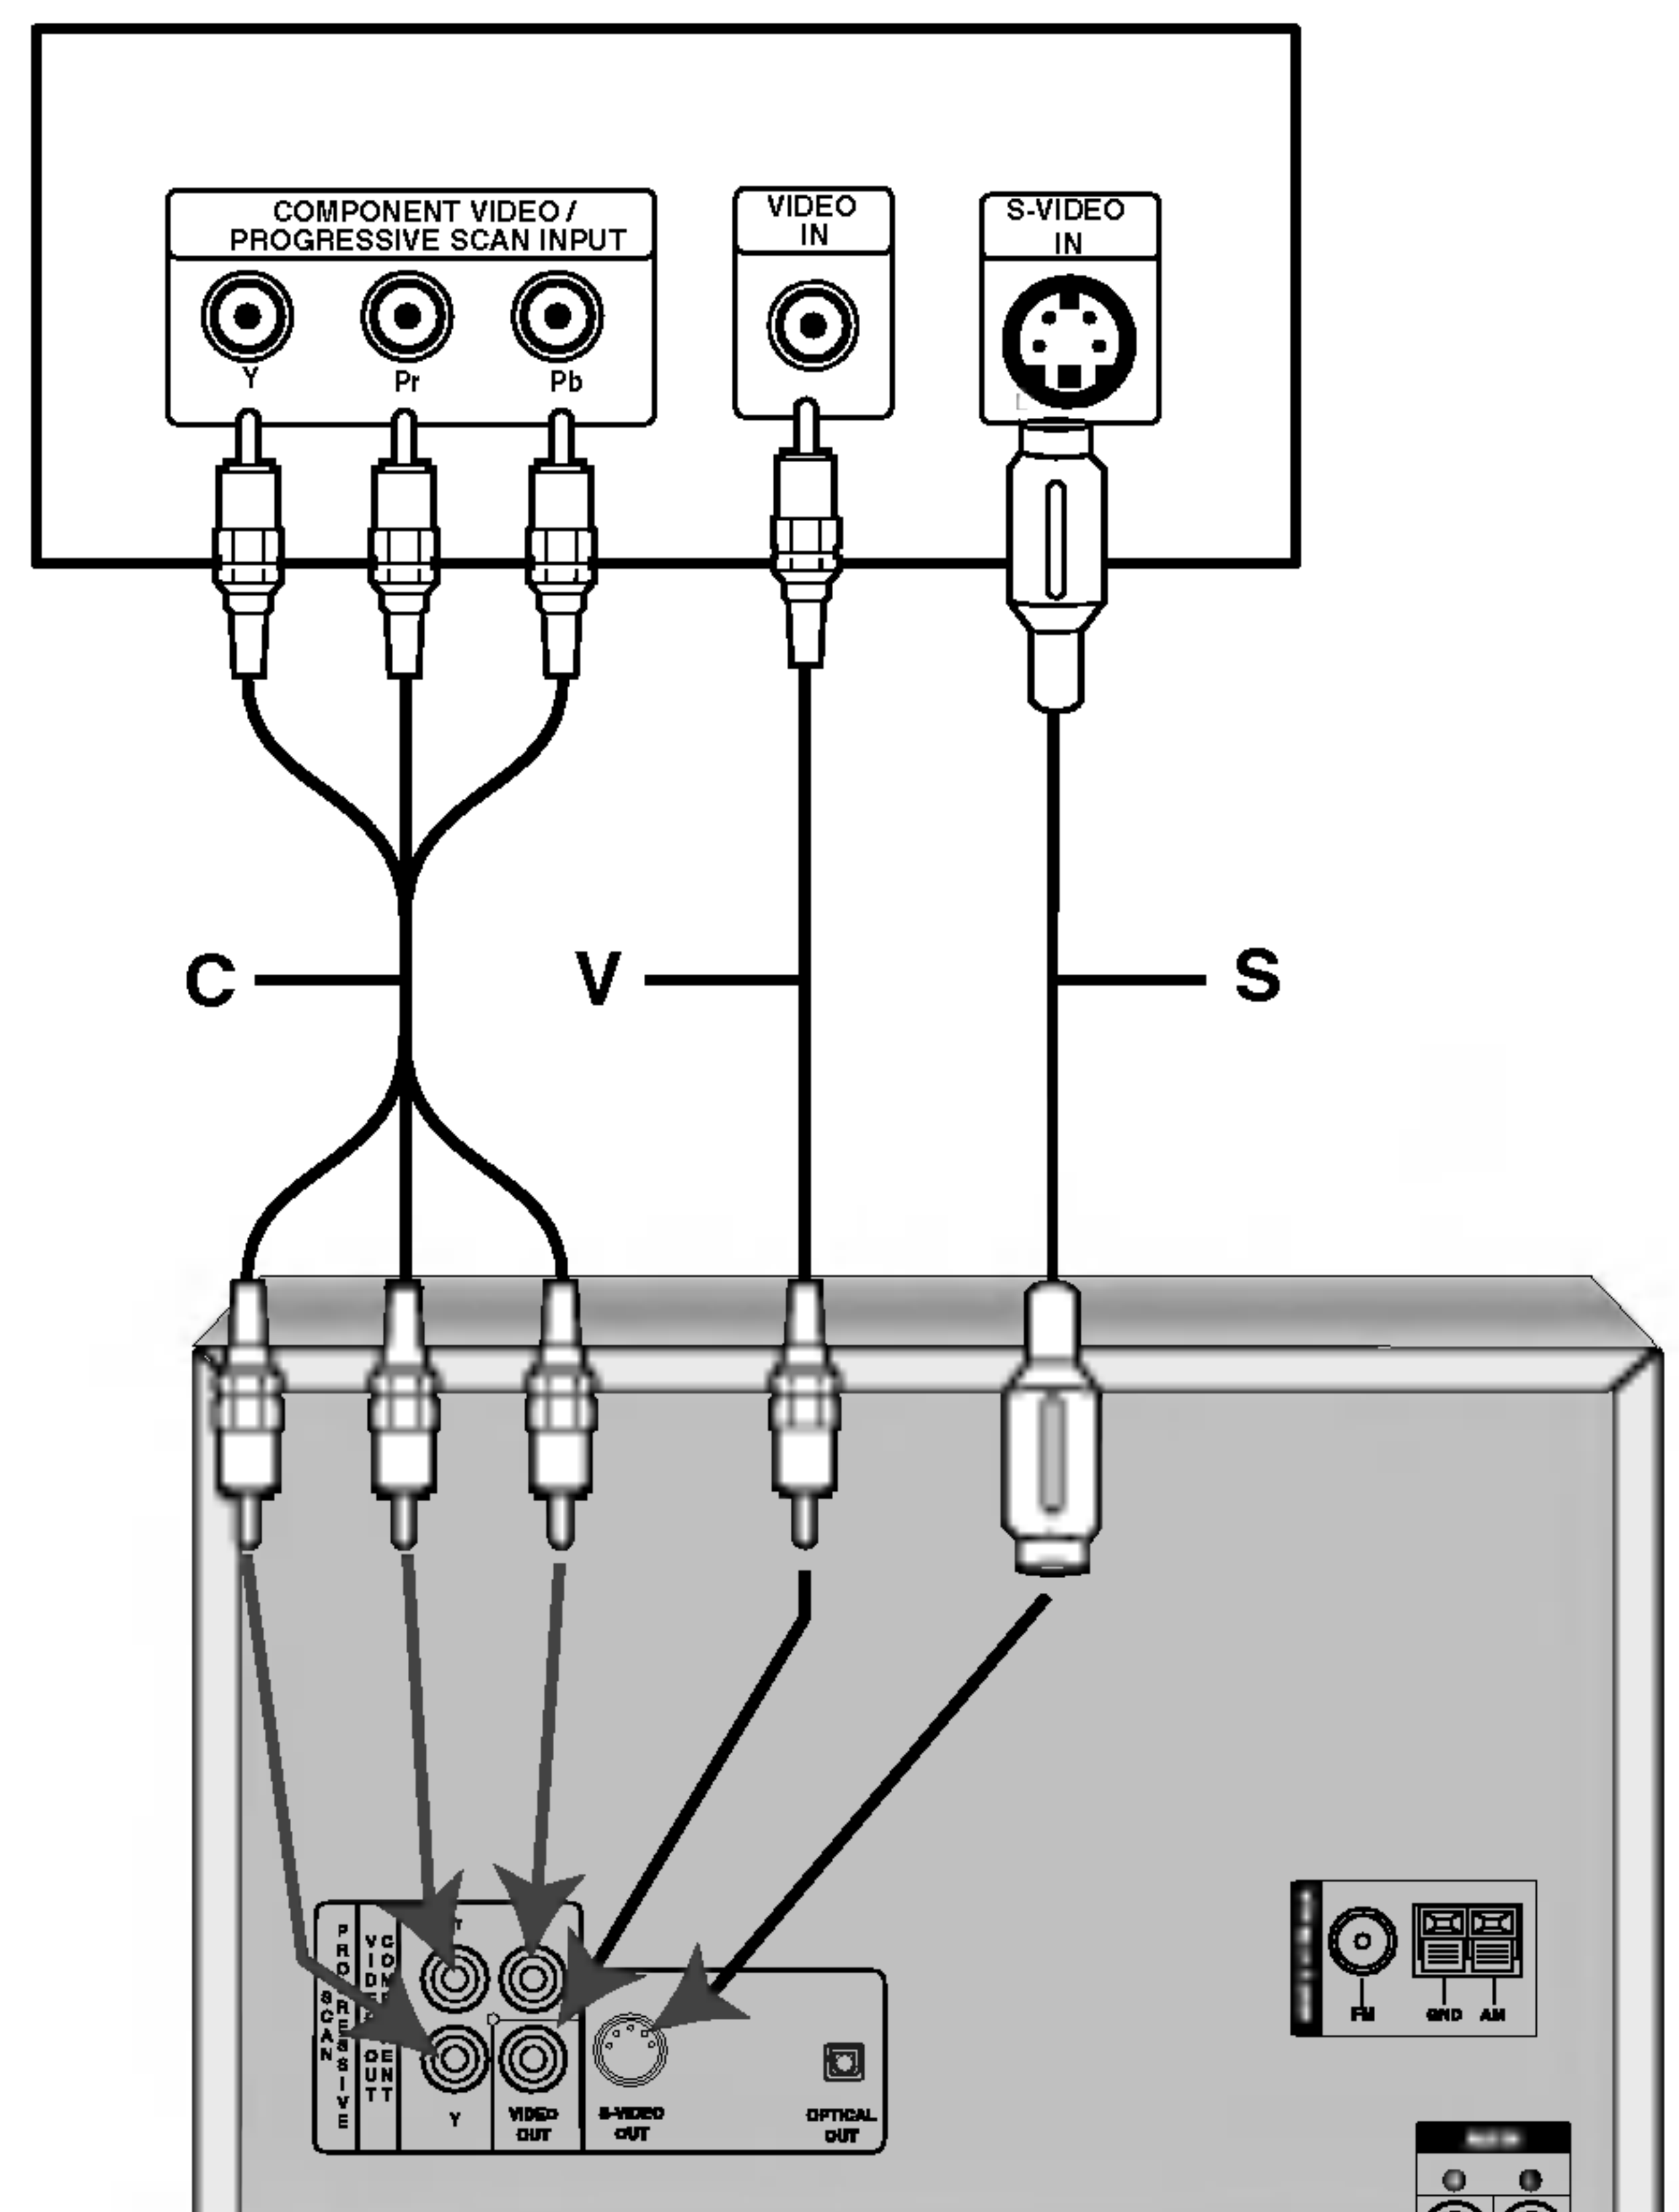


Connections

Connecting to Antenna

Connect the supplied FM/AM antennas for listening to the radio.

- Connect the AM loop antenna to the AM antenna connector.
- Connect the FM wire antenna to the FM antenna connector.

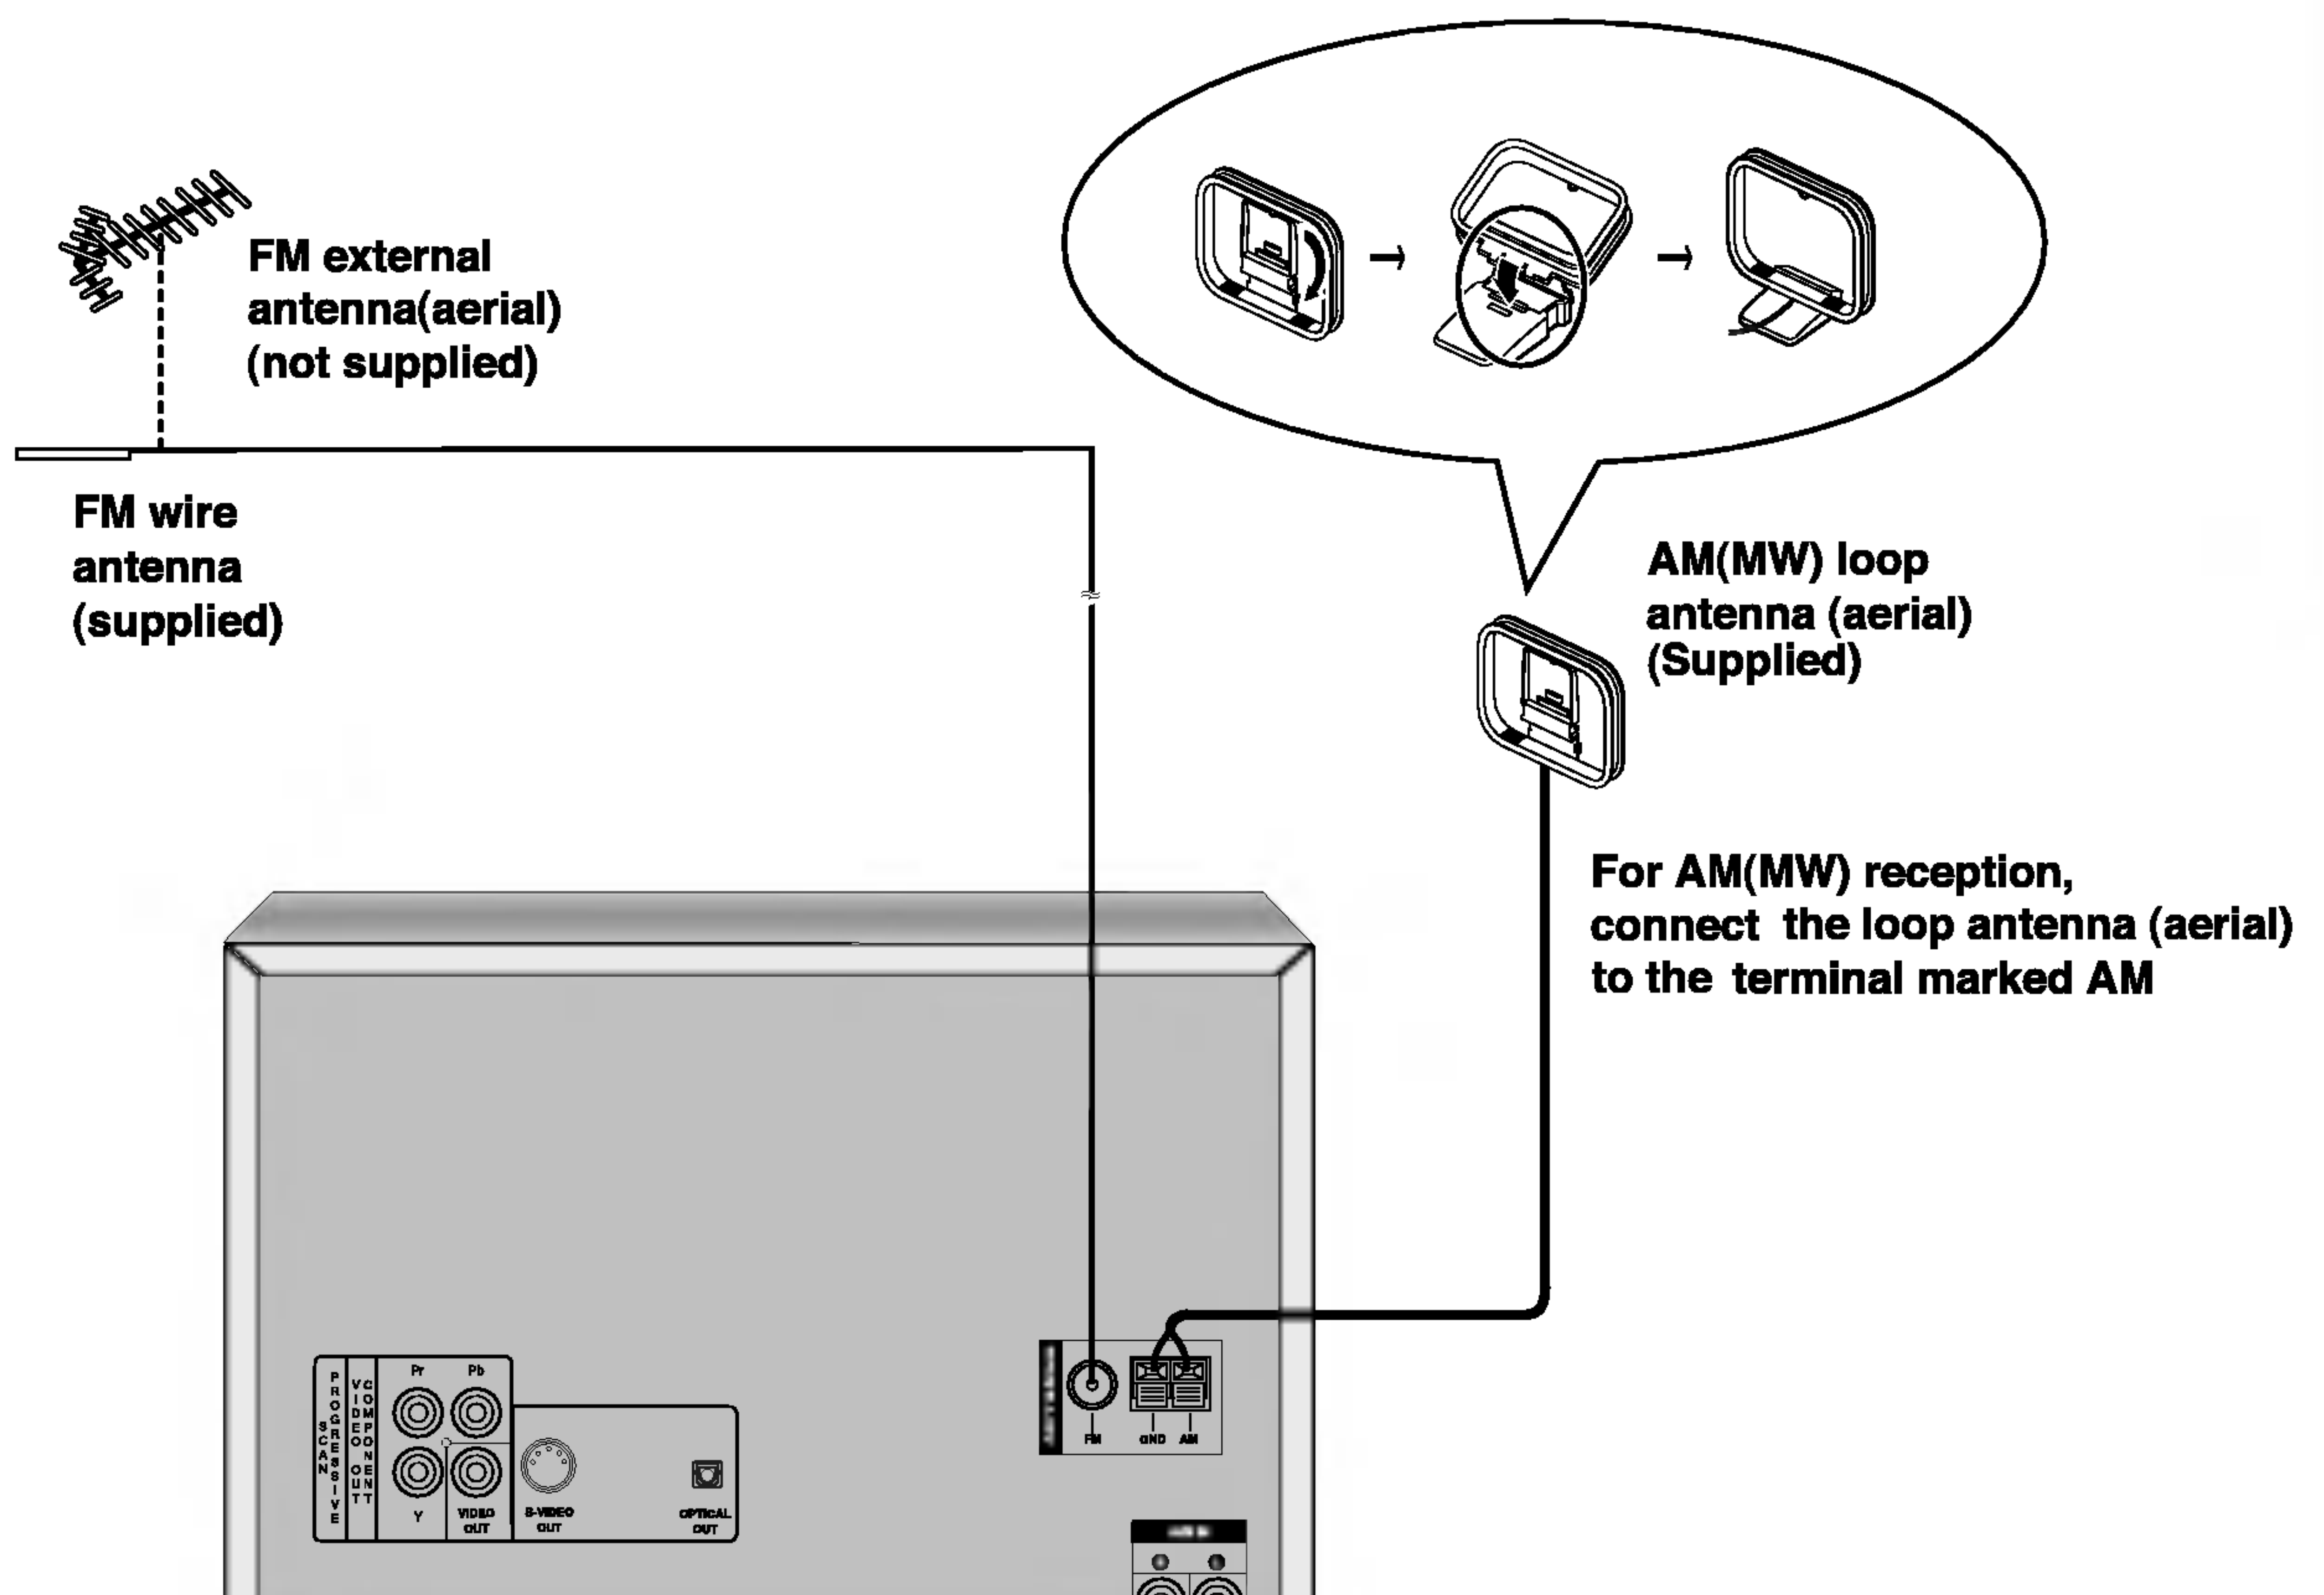

Notes


- To prevent noise pickup, keep the AM loop antenna away from the unit and other component.
- Be sure to fully extend the FM wire antenna.
- After connecting the FM wire antenna, keep it as horizontal as possible.

Connections

Connecting to Auxiliary Equipment

You can use VCR or other unit connected to the AUX connector.


- 1 Connect a VCR or auxiliary device, etc to the AUX connector.
- 2 Select AUX function pressing the AUX button on the unit or the remote control.

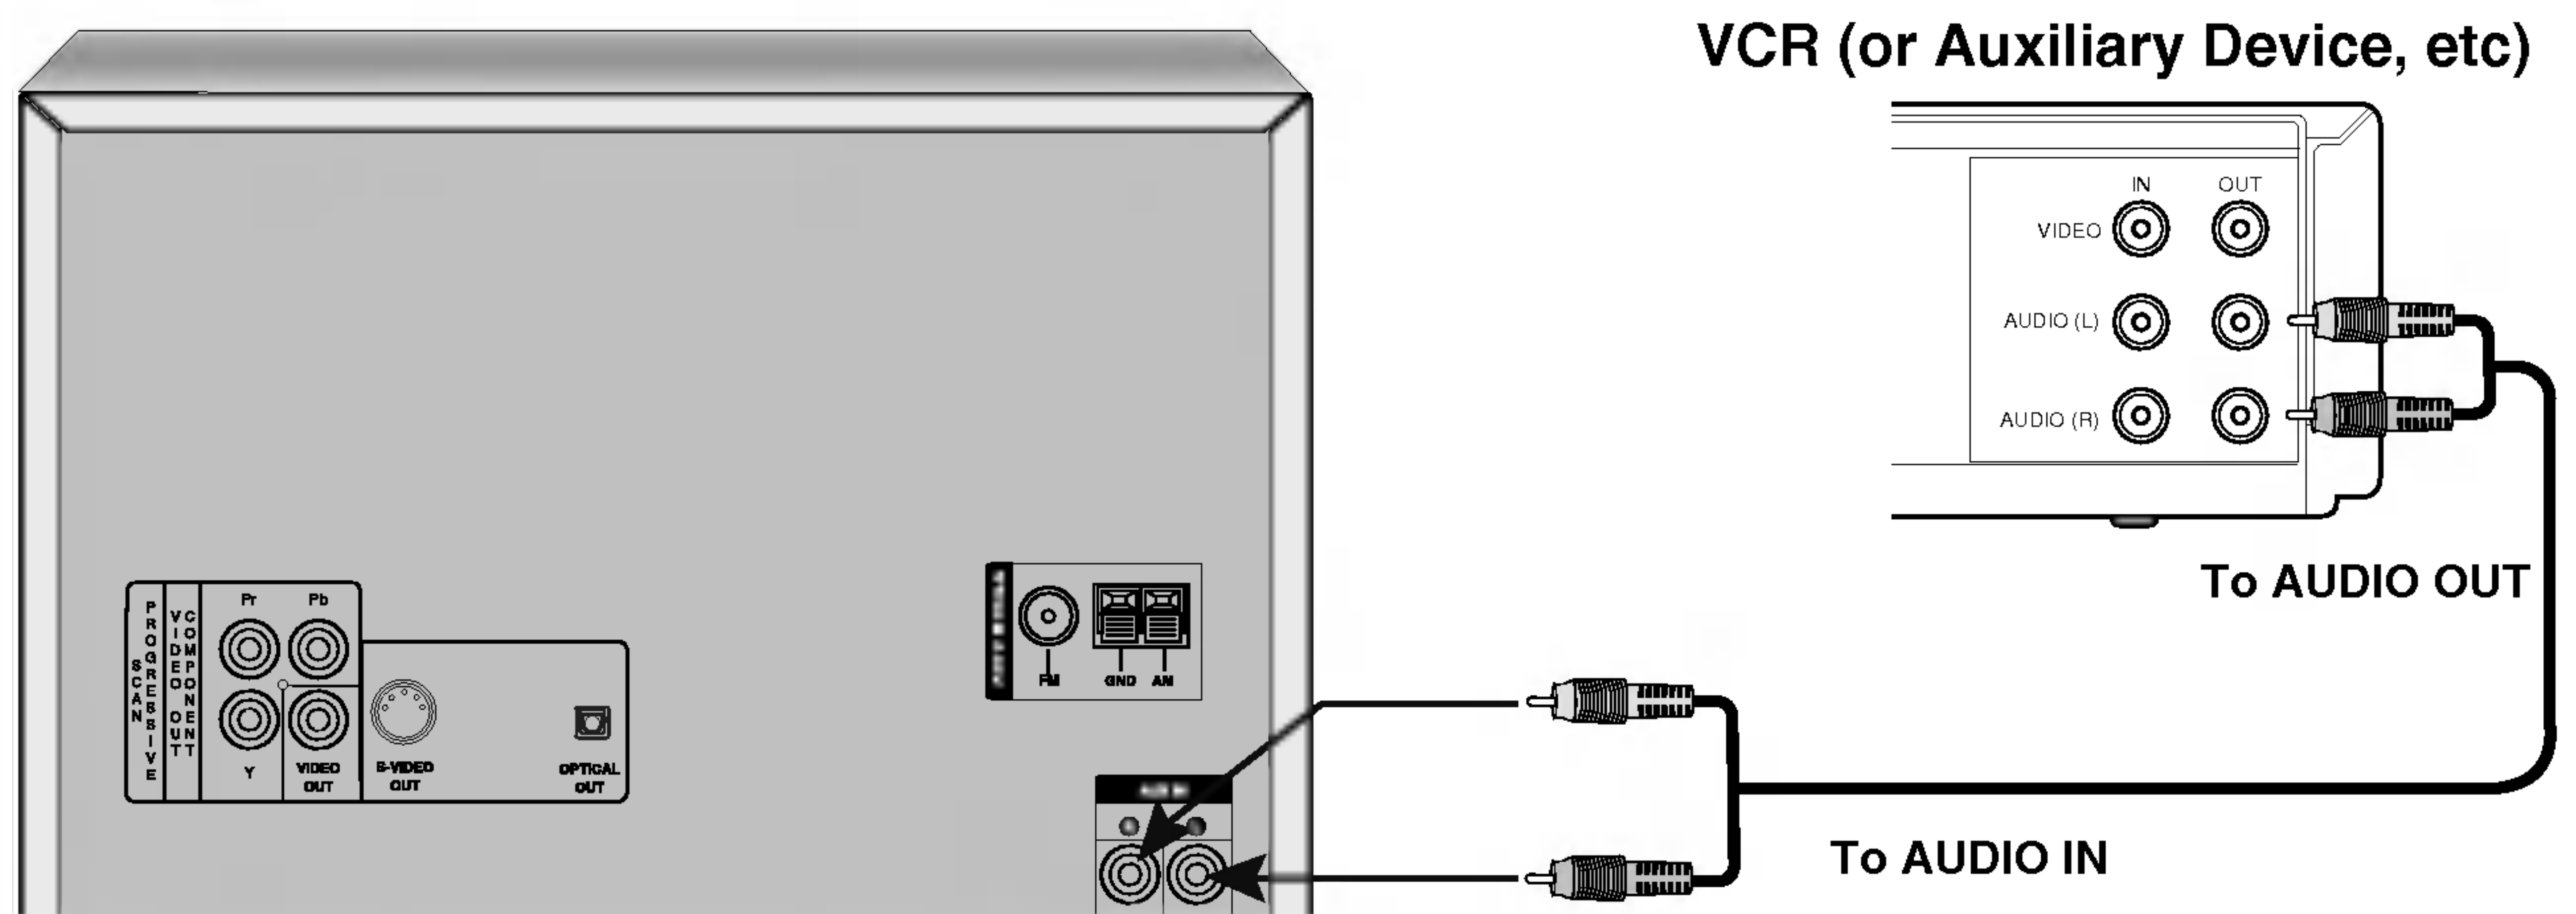

Connecting to Optional Equipment

Connecting to an amplifier equipped with two channel digital stereo (PCM) or to an Audio/ Video receiver equipped with a multi-channel decoder (Dolby Digital™, MPEG 2 or DTS)

Connect the OPTICAL OUT connector of this unit to the corresponding in jack on your Amplifier or Receiver.

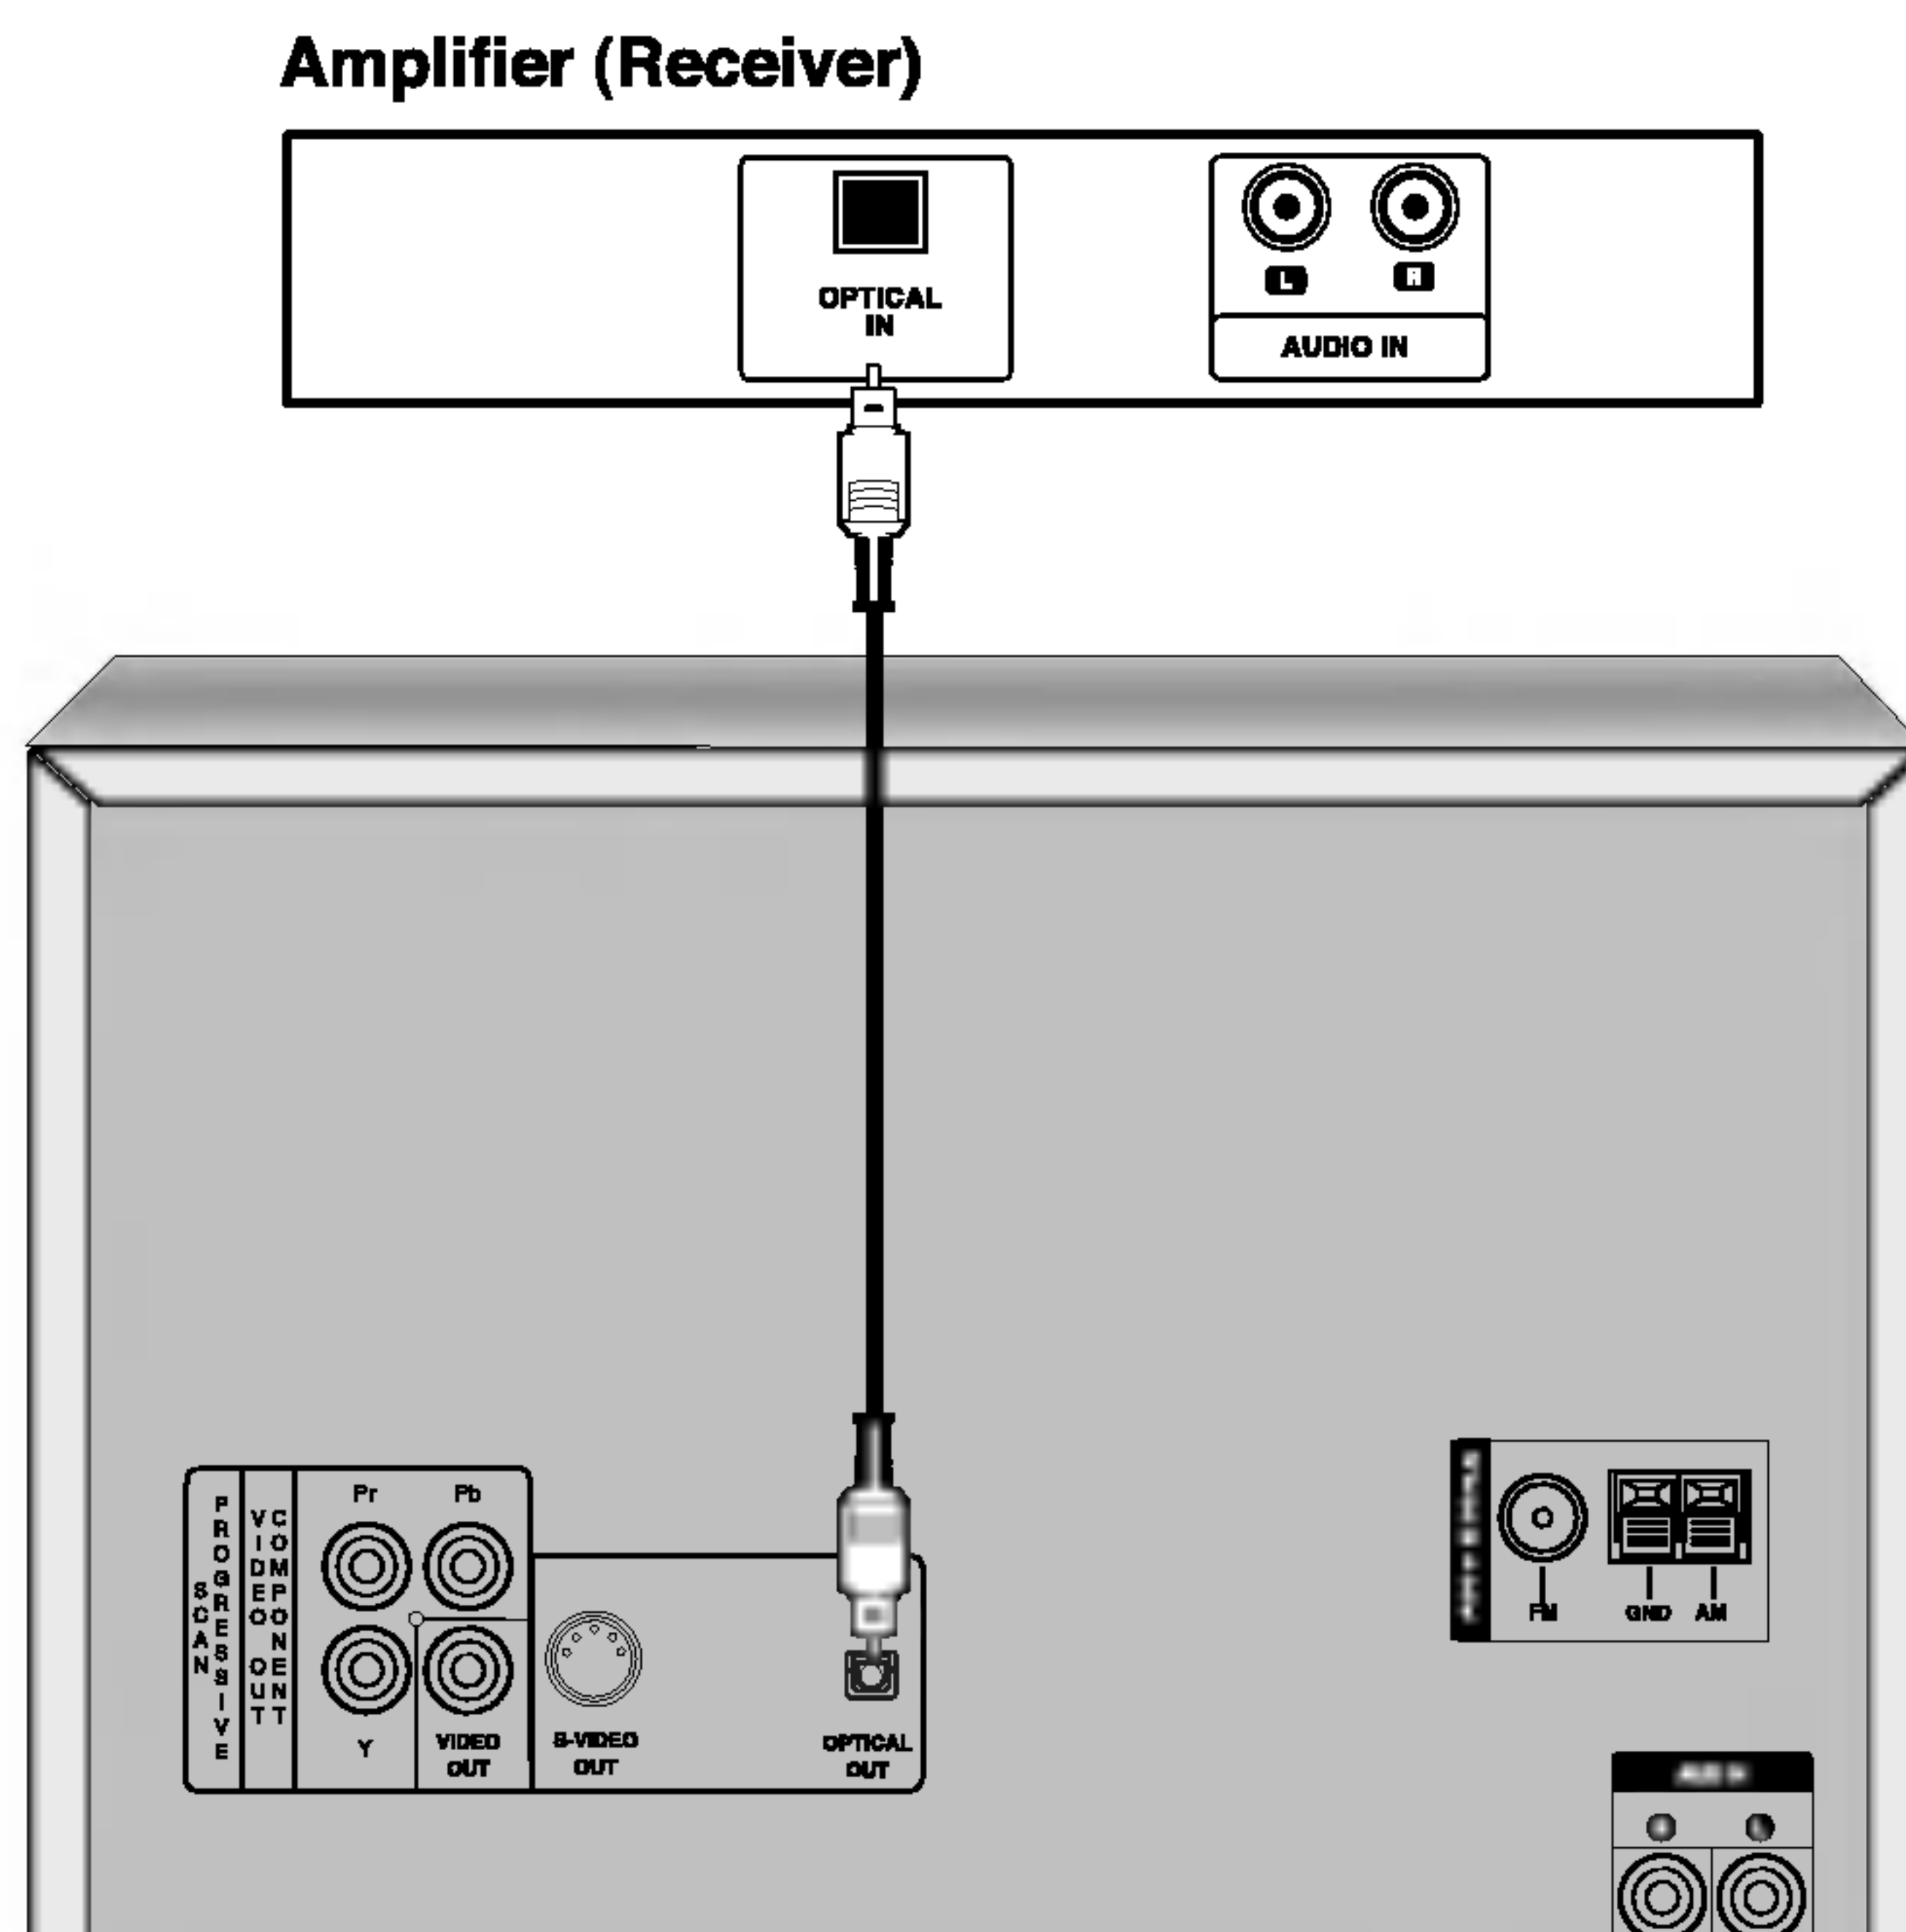

Note

- If the audio format of the digital output does not match the capabilities of your unit, the receiver will produce a strong, distorted sound or no sound at all.
- To see the audio format of the current unit in the On-Screen Display, press AUDIO.


Connections

Speaker System Connection

Connect the speakers using the supplied speaker cords.

If you feel lack of bass frequency
Connect an active sub woofer to the SUB WOOFER OUT connector using a monaural audio cord (not supplied).

**Subwoofer
(Not supplied)**

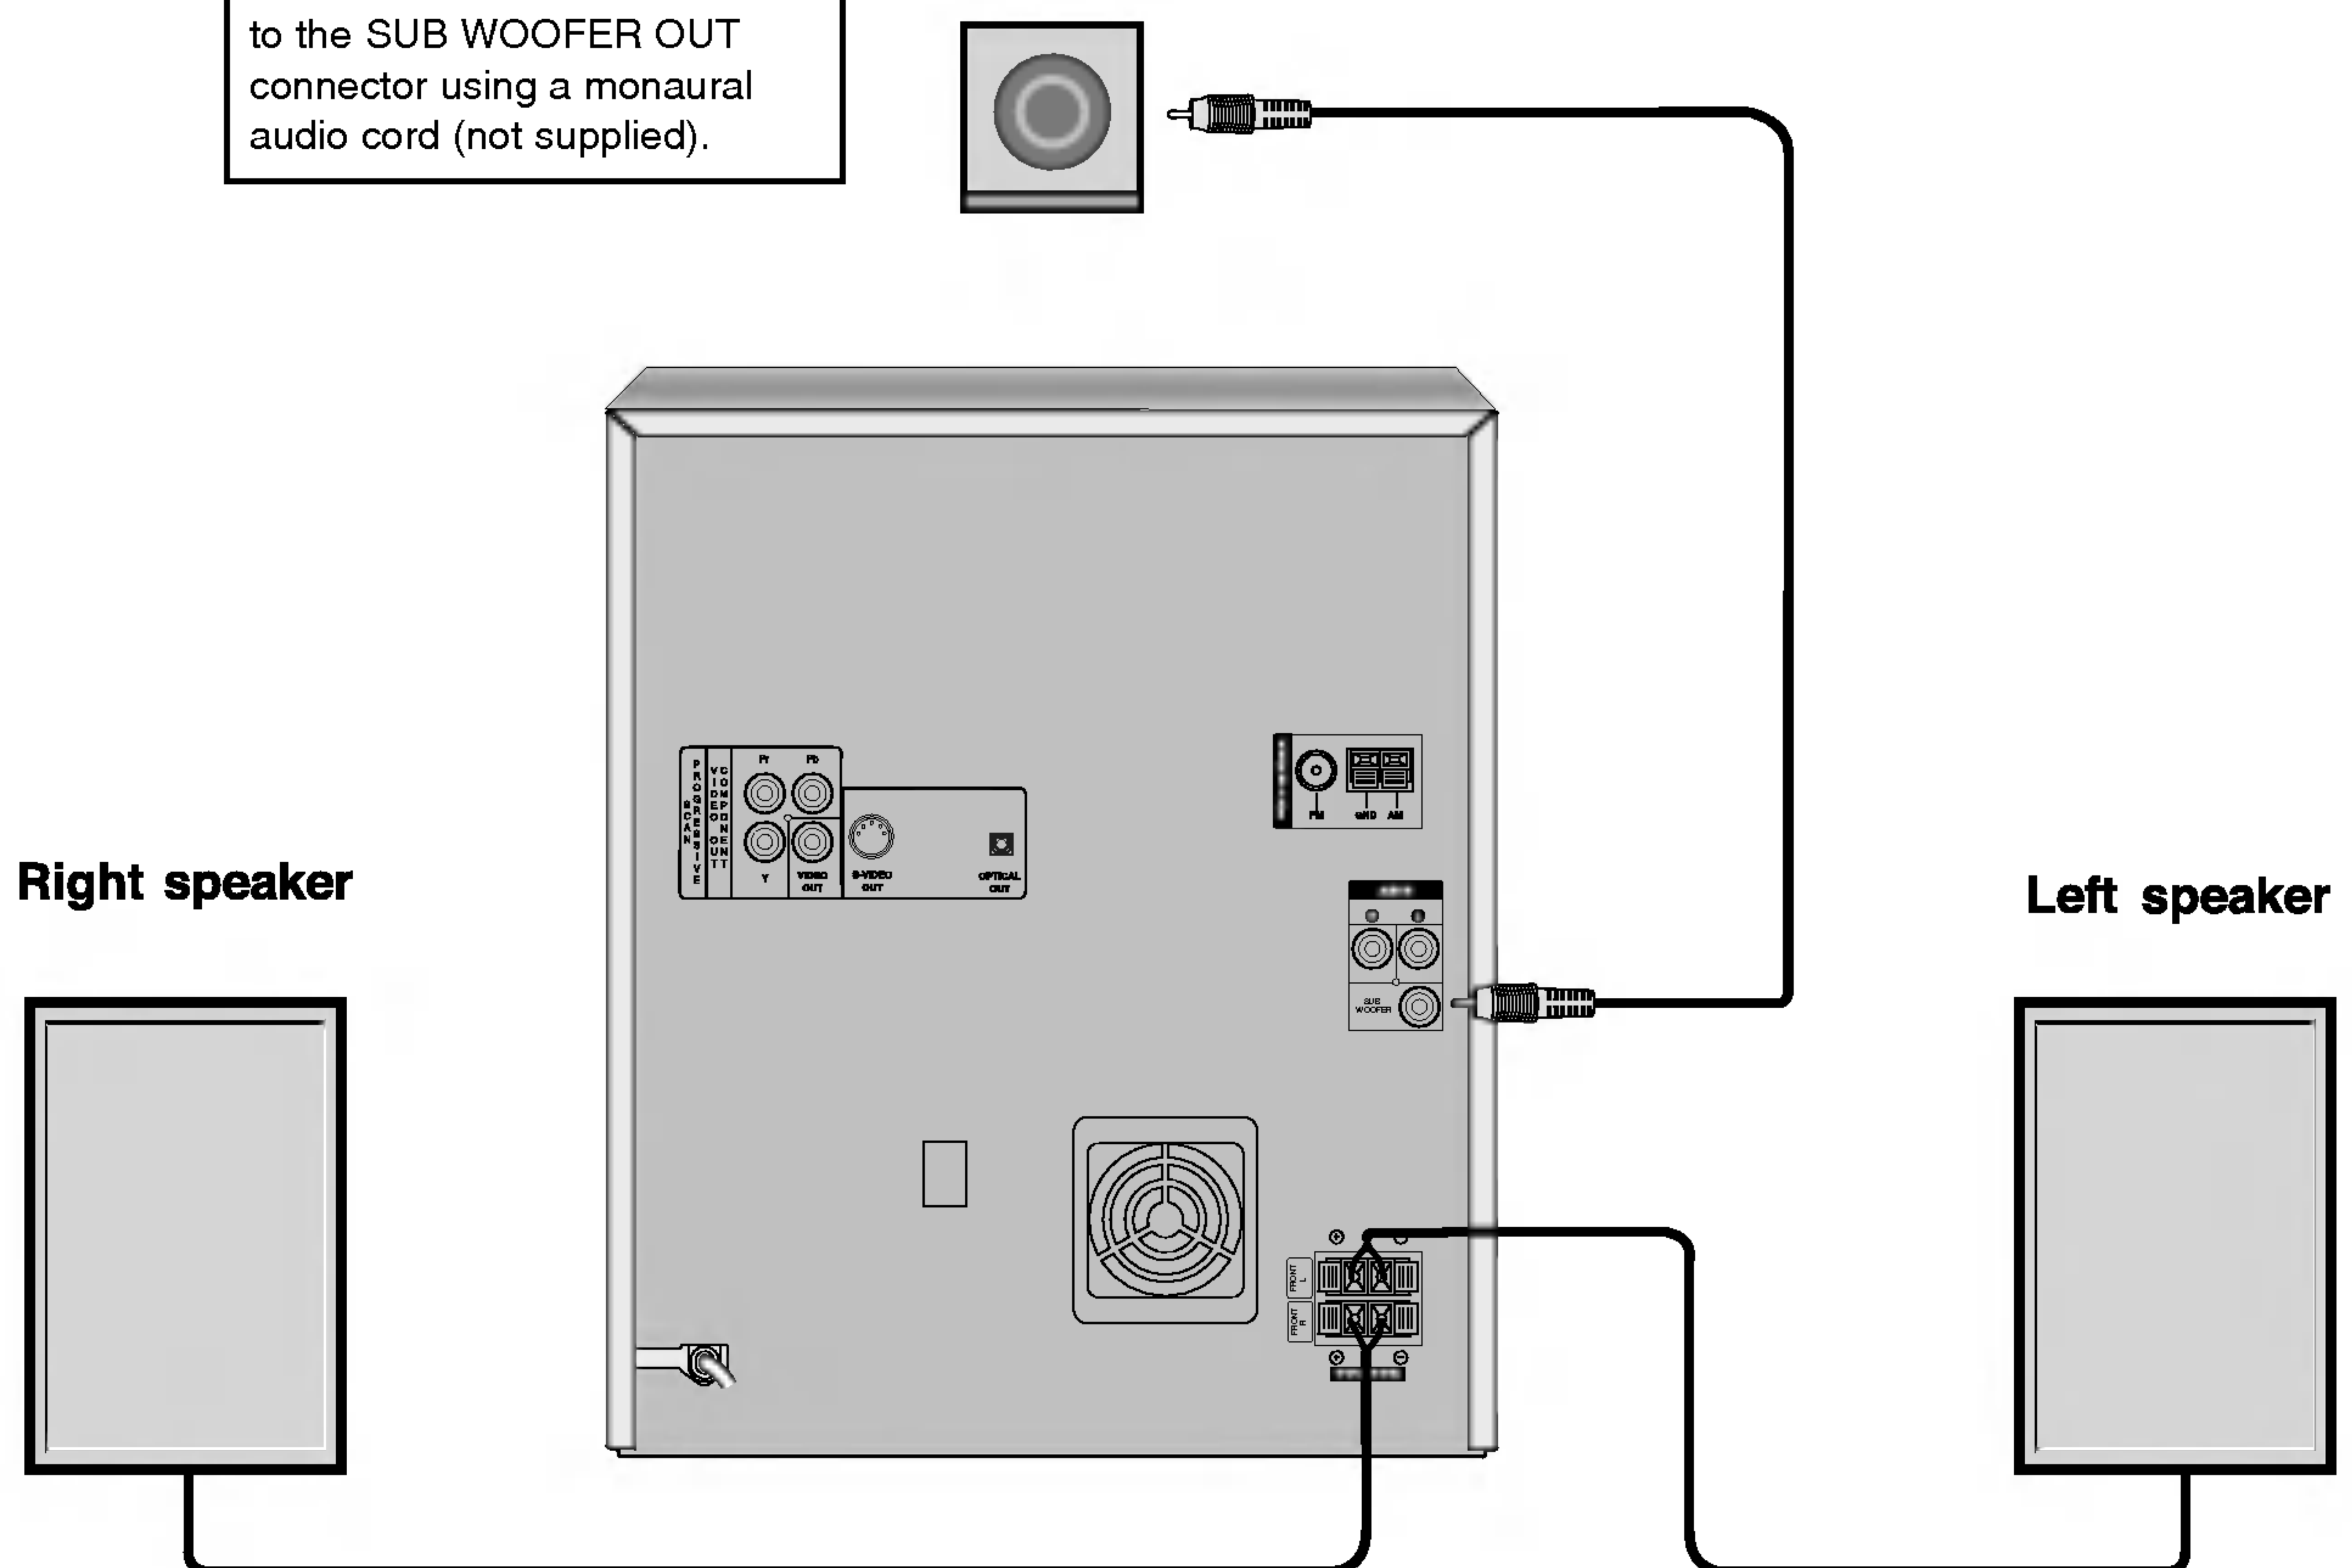

Notes

- Be sure to match the speaker cord to the appropriate terminal on the components: + to + and – to –. If the cords are reversed, the sound will be distorted and will lack base.
- If you use front speakers with low maximum input rating, adjust the volume carefully to avoid excessive output on the speakers.

Before Operation

Volume Adjustment

- Turn VOLUME knob clockwise to increase the sound level, or counterclockwise to decrease it.
- Press VOLUME + to increase the sound level, or use VOLUME - to decrease it on the remote control.

MUTE

Press MUTE to turn off the sound, press again to restore. You can mute your unit in order, for example, to answer the telephone, “Mx” indicator flashes in the display window.

Sound Quality Adjustment

- **To activate stereo sound**
You can choose between 4 fixed sound impressions. Select a desired sound mode using the EQUALIZER (EQ).
FLAT : Linear frequency response
ROCK : More bass, more treble
POP : Less bass, less treble
CLASSIC : For orchestral music
- **Headphone Jack**
Connect a stereo headphone plug (ø6.3mm) into the headphone jack.
The speakers are automatically disconnected when you plug in the headphones (not supplied).

SURROUND

To activate surround mode

You can choose one between 2 fixed sound impressions. Press SURROUND (SURR.) button.
SURROUND ON ↔ SURROUND OFF

Note

This function is only available to the “BYPASS” sound mode.

XDSS (Extreme Dynamic Sound System)

Press XDSS to reinforce treble and bass.

- The “XDSS ON” indicator lights up.
- To cancel it press XDSS again.
- The “XDSS OFF” indicator lights up.

OAo (Orientation Acoustic Optimizer) ON/OFF

Press OAo to reinforce the bass sound.

- The “OAo ON” indicator lights up.
- To cancel it press XDSS again.
- The “OAo OFF” indicator lights up.

DEMO

Press DEMO in power off state to demonstrate the function in the display window.

To cancel it, press POWER or DEMO again. During demonstration in power-on status you can cancel it by using the other buttons.

Setting the Clock

- 1 Press CLOCK.**
(If the clock requires setting, press and hold CLOCK for more than 2 seconds.)
- The hours display begins to blink.
- 2 Select either the 12 hour cycle or the 24 hour cycle by turning MULTI JOG DIAL.**
 (12HR) or  (24HR)
- 3 Press SET to confirm the selected hour cycle.**
- 4 Use MULTI JOG DIAL to set the current hour.**
- 5 Press SET.**
- 6 Use MULTI JOG DIAL to set current minutes.**
- 7 Press SET and the correct time is shown on the display.**
- 8 Press CLOCK at any time to show the time on the display, for about 5 seconds.**

Sleep Timer Function

When the sleep timer is set, the unit automatically turns off after the specified time has elapsed.

- 1 To specify the time delay before the power is turned off, press SLEEP.**
In the display window you can see *SLEEP 180* for about 5 seconds. This means that the system turns off automatically after 180 minutes.
- 2 Each time you press SLEEP the setting changes in the following order.**
SLEEP 180 → 150 → 120 → 90 → 80 → 70 → 60 → 50 → 40 → 30 → 20 → 10 → OFF → SLEEP 180...
- 3 To check the remaining time until the power is turned off.**
While the sleep function is active press SLEEP briefly. The time remaining until the unit turns off is displayed for about 5 seconds.

Note

If you press SLEEP while the sleep time is displayed, the SLEEP time is reset.

To cancel Sleep Timer setting

If you wish to stop the function, press the SLEEP button repeatedly until “SLEEP 10” appears, and then press SLEEP once again after “SLEEP 10” shows on the display.

Before Operation

Timer Function

With the TIMER function you can have the radio reception and recording, CD or tape playing turned on and off at the time desired.

1 Press CLOCK to check the current time.

For your reference

If you don't set clock, timer function doesn't work.

2 Press **⊕** TIMER to enter the timer setting mode. TUNER-CD-TAPE flash in the display window in turn.

For your reference

If you want to correct the previous memorized TIMER setting, press and hold the **⊕** TIMER button more than 2 seconds.

- The previous memorized timer setting for on Time and “**⊕** TIMER” indicators appear in the display.

3 Press SET when the desired function flashes.

- 4** 1. a. When you select TUNER function, 'PLAY' and 'REC' indicator flash in the display window alternately for about 3 seconds.
- 'PLAY' indicator : TUNER play only
'REC' indicator : TUNER play and recording
- b. Press SET when the desired function flashes.
- c. Select the previous memorized preset number with MULTI JOG DIAL on the front panel and press SET.
- 'ON TIME' indicator appears for about 0.5 seconds in the display window and then disappears.
2. When you select CD or TAPE function, 'ON TIME' indicator appears for about 0.5 seconds in the display window and then disappears.

5 Set the turn on hour turning MULTI JOG DIAL.

6 Press SET to confirm the turn on hour time.

7 Set the turn on minutes time turning MULTI JOG DIAL.

8 Press SET to confirm the turn on minutes time.

'OFF TIME' indicator appears for about 0.5 seconds in the display window and then disappears.

9 Set the turn off hour time turning MULTI JOG DIAL.

10 Press SET.

11 Set the turn off minutes turning MULTI JOG DIAL.

12 Press SET.

13 Adjust the volume level turning MULTI JOG DIAL.

14 Press SET.

“**⊕**” appears in the display window and the timer setting has been completed.

15 Turn the system off.

The selected timer functions are automatically switched on and off at the preset times.

To cancel or check the timer

Each time the **TIMER** button is pressed you can select the timer set or cancel. You can also check the timer setting status.

To activate or check the timer, press the **TIMER** button repeatedly so that “**⊕**” appears in the display window.

To cancel the **TIMER**, press the **TIMER** button repeatedly so that “**⊕**” disappears from the display window.

Using Microphone : OPTIONAL

You can sing to a music source by connecting a microphone to the unit.

1 Connect your microphone to the MIC socket.

“**♪**” will be shown in the display window.

2 Play a music you want.

3 Sing along with the accompaniment.

Adjust the microphone volume by turning MIC VOLUME KNOB.

For your reference

You can record during using microphone. Refer to the “Recording” explanation section.

Notes

- When not using the microphone, set the MIC volume knob to minimum or turn off the MIC and remove the microphone from the MIC socket.
- If the microphone is set too near the speaker, a howling sound may be produced. In this case, move the microphone away from the speaker or decrease the sound level by using the MIC volume control.
- If sound through the microphone is extremely loud, it may be distorted. In this case, turn the MIC volume control toward minimum.

Before Operation

Mini Glossary for Audio Stream & Surround mode

dts

Allows you to enjoy 5.1(or 6) discrete channels of high quality digital audio from DTS program sources such as discs, DVD and compact discs, etc.bearing the trademark. DTS Digital Surround delivers up to 6 channels of transparent audio(which means identical to the original masters) and results in exceptional clarity throughout a true 360 degree sound field. "DTS" and "DTS Digital Surround" are registered trademarks of Digital Theater Systems, Inc.

DIGITAL

The Dolby Digital surround format lets you enjoy up to 5.1 channels of digital surround sound from a Dolby Digital program source. If you play DVDs with "" mark, you can enjoy even better sound quality, greater spatial accuracy, and improved dynamic range.

Manufactured under license from Dolby Laboratories. "Dolby", "Pro Logic" and double-D symbol are trademarks of Dolby Laboratories.

BYPASS

Outputs the sound from the front left and right speakers and subwoofer.

Sound Mode

You can enjoy surround sound simply by selecting one of the pre-programmed sound fields according to the program you want to listen to.

When DVD is inserted

You can change the Digital Audio Output mode by pressing the **AUDIO** button on the remote control during playback.

Each time you press SOUND button, the "BYPASS" indicator will only be shown on the display window.

When Video CD is inserted

Each time you press SOUND button, the sound mode of Video CD is changed on the display window as the following order.

BYPASS → STUDIO → CLUB → HALL → THEATER 1 → CHURCH → BYPASS...



ote

After you select the "Bypass" of sound mode by pressing SOUND button, press AUDIO button. The Left, Right and Stereo of audio channel will be displayed on the TV screen.

When CD is inserted

Each time you press SOUND button, the sound mode of Audio CD is changed on the display window as the following order.

BYPASS → STUDIO → CLUB → HALL → THEATER 1 → CHURCH → BYPASS...

For your reference

- The unit memorizes the last mode settings for each source individually.
- You can identify the encoding format of program software by looking at its packaging.
 - Dolby Digital discs are labelled with the  logo.
 - Dolby Surround encoded programs are labelled with the  logo.
 - DTS Digital Surround discs are marked with DTS.



ote

When you play sound tracks with 96kHz sampling frequency, the output signals will be converted to 48kHz (sampling frequency).

Before Operation

Caution:
Before using the remote control, press the **KARAOKE DVD/CD** button to select the device to be operated.

General Explanation

This manual gives basic instructions for operating the unit. Some DVDs require specific operation or allow only limited operation during playback.
When this occurs, the symbol  appears on the TV screen, indicating that the operation is not permitted by the unit or is not available on the disc.

On-Screen Display

General playback status can be displayed on the TV screen. Some items can be changed on the menu.


On-screen display operation

1 Press **DISPLAY** during playback.

2 Press  /  to select an item.
The selected item will be highlighted.

3 Press  or  to change the setting of an item.
The number buttons can be also be used for setting numbers (e.g., title number). For some functions, press **SELECT/ENTER** to execute the setting.





Temporary Feedback Field Icons

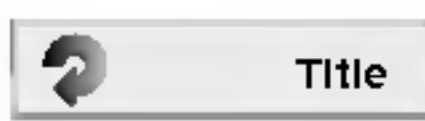-  Title Repeat title
-  A - B Repeat sequence
-  Resume play from this point
-  Action prohibited or not available


Notes

- Some discs may not provide all of the features on the on-screen display example shown below.
- If no button is pressed for 10 seconds, the on-screen display disappears.

 Example: On-Screen Display during playing DVD

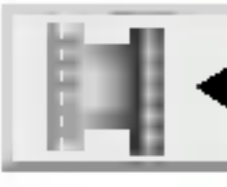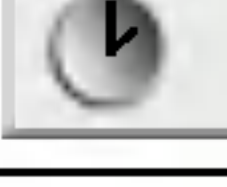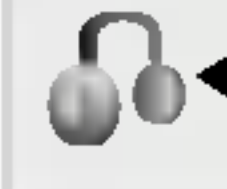Items		Function / Action using  /  to select item	Selection Method
Title Number	 1 / 3	Shows the current title number and total number of titles / skips to the desired title number.	 /  , Numbers, or SELECT/ENTER
Chapter Number	 1 / 12	Shows the current chapter number and total number of chapters / skips to the desired chapter number.	 /  , Numbers, or SELECT/ENTER
Time search	 0:20:09	Shows the elapsed playing time / searches by elapsed time.	Numbers, SELECT/ENTER
Audio language and Digital Audio Output mode	 1 ENG DDD 5.1 CH	Shows the current audio soundtrack language, encoding method, and channel number / changes the setting.	 /  or AUDIO
Subtitle language	 1 ENG	Shows the current subtitle language / changes the setting.	 /  or S-TITLE
Angle	 1 / 3	Shows the current angle number and total number of angles / changes the angle.	 / 
Sound	 Bypass	Shows the current sound mode / changes the setting.	 /  or SOUND

Example: On-Screen Display during playing VCD

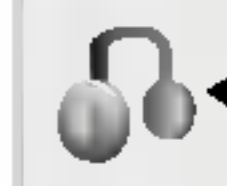Items		Function / Action using  /  to select item	Selection Method
Track Number	 1 / 3	Shows the current track number, total number of tracks and PBC On mode / skips to the desired track number.	 /  , Numbers, or SELECT/ENTER
Time	 0:20:09	Shows the elapsed playing time (display only).	—
Audio Channel	 Stereo	Shows the audio channel / changes the audio channel.	 /  or AUDIO
Sound	 Bypass	Shows the current sound mode / changes the setting.	 /  or SOUND

Before Operation

Initial Settings

By using the Setup menu, you can make various adjustments to items such as picture and sound. You can also set a language for the subtitles and the Setup menu, among other things. For details on each Setup menu item, see pages 21 to 25.

To display and exit the Menu:

Press **SETUP** to display the menu. A second press of **SETUP** will take you back to initial screen.

To go to the next level:

Press **▶** on the remote control.

To go back to the previous level:

Press **◀** on the remote control.

General Operation

- 1** Press **SETUP**.
The setup menu appears.
- 2** Use **▲** / **▼** to select the desired option then press **▶** to move to the second level.
The screen will be shown the current setting for the selected item, as well as alternate setting(s).
- 3** Use **▲** / **▼** to select the second desired option then press **▶** to move to the third level.
- 4** Use **▲** / **▼** to select the desired setting then press **SELECT/ENTER** to confirm your selection.
Some items require additional steps.
- 5** Press **SETUP** or **PLAY** to exit the setup menu.

LANGUAGE



OSD

Select a language for the Setup menu and on-screen display.

Disc Audio / Subtitle / Menu **DVD**

Select the language you prefer for the audio track (disc audio), subtitles, and the disc menu.

Original: Refers to the original language in which the disc was recorded.

Other: To select another language, press number buttons to enter the corresponding 4-digit number according to the language code list on page 40. If you enter the wrong language code, press **CLEAR** on the remote control.

Before Operation

DISPLAY



TV Aspect **DVD**

4:3: Select when a standard 4:3 TV is connected.

16:9: Select when a 16:9 wide TV is connected.

Display Mode **DVD**

Display Mode setting works only when the TV Aspect mode is set to "4:3".

Letterbox: Displays a wide picture with bands on the upper and lower portions of the screen.

Panscan: Automatically displays the wide picture on the entire screen and cuts off the portions that do not fit.

Progressive Scan **DVD**

Progressive Scan Video provides the highest quality pictures with less flickering.

If you are using the Component Video jacks for connection to a TV or monitor that is compatible with a progressive scan signal, set Progressive Scan to On.

To Turn ON progressive scan:

Connect component out of the DVD to the input of your monitor/television, set your television or monitor to Component Input.

1. Select "Progressive Scan" on the DISPLAY menu then press **▶**.
2. Select "On" using the **▲** / **▼** buttons.
3. Press SELECT/ENTER to confirm your selection. The confirm menu will appear.



4. When the confirm menu appears on your screen Cancel is highlighted as default. Use the **◀** / **▶** buttons to highlight Enter.
5. Pressing ENTER will set the player to Progressive scan mode.

⚠ Caution

Once the setting for progressive scan output is entered, an image will only be visible on a progressive scan compatible TV or monitor. If you set Progressive Scan to On in error, you must reset the unit.

- 1) Remove any disc from the unit and close the disc tray. See that "NO DISC" is displayed on the display window
- 2) Press and hold STOP (**■**) for five seconds then release it. The video output will be restored to the standard setting, and a picture will once again be visible on a conventional analog TV or monitor.

Before Operation

AUDIO

Each DVD disc has a variety of audio output options. Set the player's AUDIO options according to the type of audio system you use.



Dolby Digital / DTS / MPEG **DVD**

Bitstream: Select "Bitstream" if you connect the DVD Player's DIGITAL OUT jack to an amplifier or other equipment with a Dolby Digital, DTS or MPEG decoder.

PCM : Select when connected to a two-channel digital stereo amplifier. DVDs encoded in Dolby Digital or MPEG will be automatically downmixed to two-channel PCM audio.

Sample Freq. (Frequency) **DVD**

If your receiver or amplifier is NOT capable of handling 96 kHz signals, select 48 kHz. When this choice is made, this unit automatically converts any 96 kHz signals to 48 kHz so your system can decode them.

If your receiver or amplifier is capable of handling 96 kHz signals, select 96 kHz. When this choice is made, this unit passes each type of signal through without any further processing.

Check the documentation for your amplifier to verify its capabilities.

2.1 Speaker Setup **DVD**

Select speaker settings, including volume balance and distance, or test the speaker settings.

Speaker settings are only active on the Analog Multi-Channel Output.

Speaker Setup



1. Press SETUP. The setup menu appears.
2. Use / to select the AUDIO option then press to move to the second level.
3. Use / to select the Speaker Setup option then press to move to the third level. "Select" is highlighted.
4. Press SELECT/ENTER and 2.1 Speaker Setup menu appears.
5. Use / to select the desired speaker.
6. Adjust options using / / / buttons.
7. Press SELECT/ENTER to confirm your selection. Returns to the previous menu.

Speaker selection

Select a speaker that you want to adjust. [Front speaker (Front L), Front speaker (Front R) or Subwoofer (Woofer)]

Size

Press / to set a mode. (Large, Small or None)

- The size of the Front L/R speaker can be selected to "Large" or "Small".
- The size of the Subwoofer can be selected to "Large" or "None".
- If you have connected the system to a speaker with low frequency of 100Hz or below, select to "Large" the size of the Front L/R speaker. The size of the Subwoofer is selected to "None" automatically.
- If you have connected the system to a speaker without low frequency of 100Hz or below, select to "Small" the size of the Front L/R speaker. The size of the Subwoofer is selected to "Large" automatically. But if you haven't connected to subwoofer, always select to "Large" the size of Front L/R Speaker.

Before Operation

Volume

Press ◀ / ▶ to adjust the output level of the selected speaker. (-5dB ~ 5dB)

Distance

This function is not available to the unit.

Test

Select "All" to test the signals of each speaker.
Adjust the volume to match the volume of test signals memorized in the system.
Front L → Front R → Woofer

Dynamic Range Control (DRC)

With the DVD format, you can hear a program's sound-track in the most accurate and realistic presentation possible, thanks to digital audio technology. However, you may wish to compress the dynamic range of the audio output (the difference between the loudest sounds and the quietest ones). Then, you may listen to a movie at a lower volume without losing dialog intelligibility. Set DRC to On for this effect.

Notes

- The DRC function works only during playback of Dolby Digital recorded discs.
- The level of Dynamic Range Compression may differ depending on the DVD disc.

Vocal

Set Vocal to On only when a multi-channel Karaoke DVD is playing. The karaoke channels on the disc will mix into a normal stereo sound.

OTHERS



PBC

Set Playback Control (PBC) to On or Off.

On: Video CDs with PBC are played according to the PBC.

Off: Video CDs with PBC are played the same way as Audio CDs.

DivX(R) Registration

You can show the DivX DRM (Digital Right Management) Registration code for your unit only.




The Registration code is used for VOD (Video-On-Demand) service agent. You can purchase or rental an encrypt movie file.


Notes

If you rent the DivX VOD file, it has several options of viewing limits as show below.


- Display the number which you can watch the file.

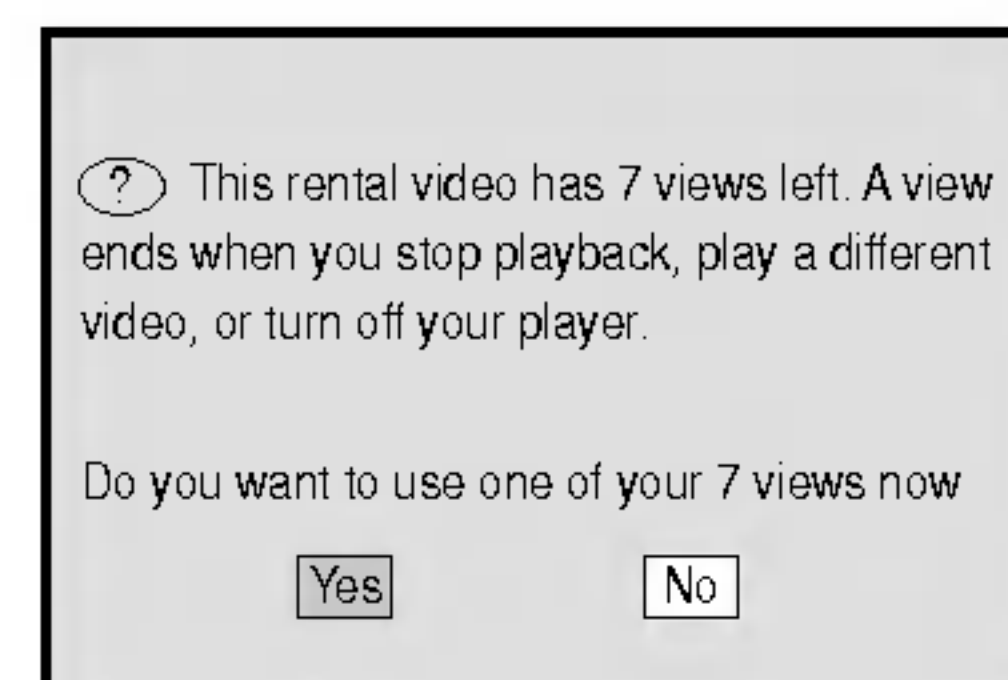

- The rental has been expired.

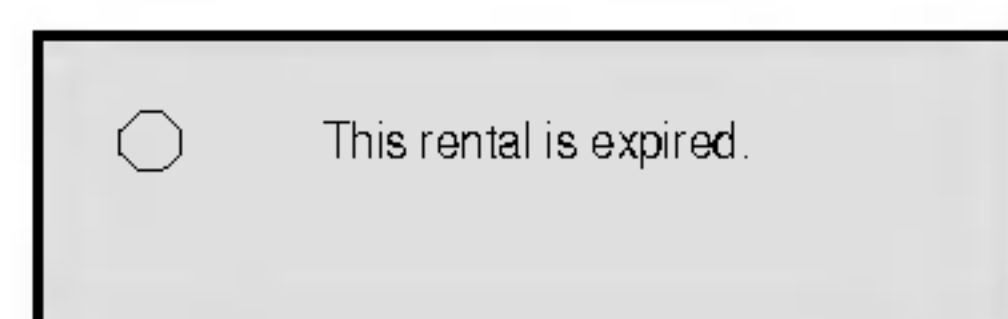

- Display the authorization error.

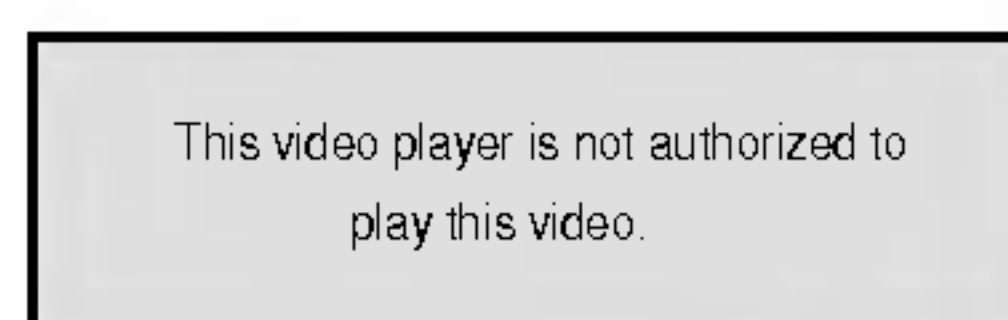

Before Operation

LOCK (Parental Control)



Rating **DVD**

Some movies contain scenes that may not be suitable for children to view. Many of these discs contain parental control information that applies to the complete disc or to certain scenes on the disc. Movies and scenes are rated from 1 to 8, depending on the country. Some discs offer more suitable scenes as an alternative.

The parental control feature allows you to block access to scenes below the rating you input, thereby preventing your children from being able to view material you believe is unsuitable.

1 Select “Rating” on the LOCK menu then press **▶**.

2 To access the Rating, Password and Country Code features, you must input the 4-digit security code you created.

If you have not yet entered a security code you are prompted to do so.

Input a 4-digit code and press SELECT/ENTER. Enter it again and press SELECT/ENTER to verify. If you make a mistake before pressing SELECT/ENTER, press CLEAR.

3 Select a rating from 1 to 8 using the **▲** / **▼** buttons.

Rating 1-8: Rating one (1) has the most restrictions and rating eight (8) is the least restrictive.

Unlock

If you select unlock, parental control is not active and the disc plays in full.

Note

If you set a rating for the player, all disc scenes with the same rating or lower are played. Higher rated scenes are not played unless an alternate scene is available on the disc. The alternative must have the same rating or a lower one. If no suitable alternative is found, playback stops. You must enter the 4-digit password or change the rating level in order to play the disc.

4 Press SELECT/ENTER to confirm your rating selection, then press SETUP to exit the menu.

Password (Security Code)

You can enter or change password.

- 1 Select Password on the LOCK menu then press **▶**.
- 2 Follow step 2 as shown left (Rating). “Change” or “New” is highlighted.
- 3 Enter the new 4-digit code, then press SELECT/ENTER. Input it again to verify.
- 4 Press SETUP to exit the menu.

If you forget your Security Code

If you forget your security code you can clear it using the following steps:

- 1 Input the 6-digit number “210499” on the setup menu and the security code is cleared.
- 2 Enter a new code as described above.

Note

When “**INPUT PASSWD 密碼密碼**” appears on the TV screen, press STOP (**■**) and then press SETUP to move to the setup menu.

Country Code **DVD**

Enter the code of the country/area whose standards were used to rate the DVD video disc, based on the list in the reference chapter.

1 Select “Country Code” on the LOCK menu then press **▶**.

2 Follow step 2 as shown left (Rating).

3 Select the first character using **▲** / **▼** buttons.

4 Shift the cursor using **▶** button and select the second character using **▲** / **▼** buttons.

5 Press SELECT/ENTER to confirm your country code selection.

Operation with RADIO

Presetting the radio stations

You can preset 50 stations for FM and AM.
Before tuning, make sure that you have turned the volume down to the minimum level.

- 1** Press TUNER/BAND (or TUNER) to show either FM or AM in the display window.
Every time you press this button, AM and FM changes alternately.
- 2** Turn the MULTI JOG DIAL on the front panel until the frequency indication starts to change.

Notes

• Automatic Tuning

Press the AUTO TUNING (◀◀/▶▶) buttons on the front panel or TUN. (▲ / ▼) on the remote control.
- Scanning stops when the unit tunes in a station.

• Manual Tuning

Use the MULTI JOG DIAL.

- 3** Press PROGRAM/MEMORY on the front panel or PROG./MEMO. on the remote control.
A preset number will flash in the display window.
- 4** Press PRESET ◀/▶ (or PRESET ◀/▶ on the remote control) to select the preset number you want.
- 5** Press PROGRAM/MEMORY on the front panel or PROG./MEMO. on the remote control.
The station is stored.
- 6** Repeat steps 2 to 5 to store other stations.

To clear all memorized stations

Press and hold PROGRAM/MEMORY on the front panel for about two seconds, "MEM RESET" appears in the display window and then press STOP (■) on the front panel, the stations are cleared.

For your reference

If all stations have already been entered, "FULL" message will appear in the display window for a moment and then a preset number will flash.
To change the preset number, follow the steps 4-5.

To recall preset numbers

Press and hold PRESET ◀/▶ (or PRESET ◀/▶ on the remote control) until the desired preset number appears or press the button repeatedly.

Listening to the radio

- 1** Press TUNER/BAND (or TUNER) to select either AM or FM in the display window.
The last received station is tuned in.
- 2** Press PRESET ◀/▶ (or PRESET ◀/▶ on the remote control) repeatedly to select the preset station you want.
Each time you press this button, the unit tunes in the next preset station.
- 3** Adjust the volume by rotating VOLUME knob (or pressing VOLUME +/- on the remote control) repeatedly.

To listen to non-preset radio stations

- For manual tuning, see "Manual Tuning".
- For automatic tuning, see "Automatic Tuning".

To turn the radio off

Press POWER to turn off the unit or select another function mode (TAPE, KARAOKE DVD/CD or AUX).

For your reference

• If a FM program is noisy

Press MODE/RIF repeatedly so that "RIF" disappears in the display window. There will be no stereo effect, but the reception will improve. Press MODE/RIF again to restore the stereo effect.

• To improve reception

Reposition the supplied antennas.

Notes

- Use MODE/RIF (Radio Interference Filter) function to switch to Mono reception if stereo reception is distorted by noise.
- While recording weak AM broadcasts, if noises occurs, press MODE/RIF once.

Operation with RADIO

RDS Function - OPTIONAL

About RDS

This unit is equipped with RDS (Radio Data System), which brings a wide range of information from FM radio. RDS is a system for transmitting station call signs or network information, a description of station programme type text message about the station or specifics of musical selection and the correct time.

RDS Tuning

When a FM station containing RDS data is tuned in, the unit will automatically display the station's call sign and the RDS indicator will light in the Display Window as well as indicators for the programme type recognition (PTY), Radio Text (RT), Clock Time (CT) and RDS services programme (PS) if transmitted by the station.

RDS Display Options

The RDS system is capable of transmitting a wide variety of information in addition to the initial call sign that appears when a station is first tuned. In normal RDS operation the display will indicate the station name, broadcast network or call letters. Pressing **RDS** on the front panel enables you to cycle through the various data types in the sequence:

(PS → FREQUENCY → PTY → RT → CT)

- **PTY (Programme type recognition)-** The programme type is shown on the display window.
- **RT (Radio text recognition)-** The radio station's name is displayed on the display window.
- **CT (Time controlled by the channel)-** Enable the unit to receive the actual time and show it on the display window.
- **PS (Programme Service name)-** The programme title is displayed on the display window.

Note

Some RDS stations may not choose to include some of these additional features. If the data required for the selected mode is not being transmitted, the Display Window will show a **PTY NONE**, **RT NONE**, **CT NONE**, **PS NONE** message.

Programme Search (PTY)

A major benefit of RDS is its ability to encode broadcasts with Programme Type (PTY) codes that indicate the type of material being broadcast. The following list shows the abbreviations used to indicate each PTY along with an explanation of the PTY.

NEWS	News
AFFAIRS	Current Affairs
INFO	Information
SPORT	Sports
EDUCATE	Educational
DRAMA	Drama
CULTURE	Culture
SCIENCE	Science
VARIED	Varied Speech Programme
POP M	Popular Music
ROCK M	Rock Music
EASY M	Easy Listening Music
LIGHT M	Classical Music
CLASSICS	Serious Classical Music
OTHER M	Other Music
WEATHER	Weather Information
FINANCE	Financial Programmes
CHILDREN	Children's Programmes
SOCIAL	Social Affairs Programmes
RELIGION	Religious Broadcasts
PHONE IN	Phone-In Programmes
TRAVEL	Travel and Touring
LEISURE	Leisure and Hobby
JAZZ	Jazz Music
COUNTRY	Country Music
NATION M	National Music
OLDIES	Oldies Music
FOLK M	Folk Music
DOCUMENT	Documentary Programmes
TEST	Station Alarm Test Message
ALARM 1	Emergency Broadcast Information

You may search for a specific Programme Type (PTY) by following these steps:

- 1 Press TUNER (or TUNER/BAND) to select FM mode.**
- 2 Select a desired station by turning MULTI JOG DIAL.**
When the RDS transmission is received, the display shows the program service name (PS) after RDS indicator appears.
- 3 Press the RDS to select PTY mode.**
- 4 To search for a different PTY, press the PRESET ◀/▶ while the last PTY in use is still displayed to scroll through the list of available PTY types.**
- 5 When the PTY is selected, turn MULTI JOG DIAL within 5 seconds.**
The unit will go into an automatic search mode and attempt to find the next station with acceptable signal strength that matches the desired PTY type.

Operation with TAPE

Basic Playback

 

- 1** Press TAPE1-2 (or TAPE) to select tape function.
(“NO TAPE” appears in the display window.)
- 2** Open cassette TAPE1-2 by pushing to the **▲PUSH EJECT** position.
- 3** Insert one or two cassettes with the tape side to the bottom and then close the TAPE 1 (and/or 2) door.
- 4** Press **▶** (or **◀**: OPTIONAL).

AUTO STOP DECK (TAPE 1/2)

After auto stop deck plays front side of cassette, the unit stops automatically.

AUTO REVERSE DECK (TAPE 2) : OPTIONAL

You can select direction of the cassette you want by pressing PLAY MODE.

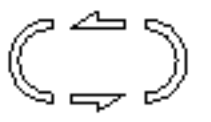Pressing	Display	Function
-		After the cassette of TAPE 1 or 2 plays front or reverse (backward play) side, stops automatically.
Once		After the cassette of TAPE 1 or 2 plays front and reverse side, stops automatically.
Twice		After the cassette of TAPE 1 or 2 plays six times repeatedly front and reverse side, stops automatically.

To Stop Play

Press **STOP(■)** on the front panel or **TAPE STOP(■)** on the remote control during playback.

Tape Counter Reset

Press **COUNT. RESET** during playback.

Playing time appears “TAP -1 (or 2) 0000” in display window.

To Play Rewind or Fast Forward

After press **◀◀/▶▶** on the front panel or on the remote control during playback, press **▶** (or **◀**: optional) at the tape position you want.

Dubbing

This function shows how to record from tape to tape.

- 1** Press TAPE1-2 (or TAPE).
 - Cassette TAPE 1- Insert the playback tape to dub.
 - Cassette TAPE 2- Insert a blank tape to copy on.
 - 2** Press **NOR-DUBB./HI-DUBB..**
 - **NORMAL DUBBING** - Normal speed copying
 - **HIGH DUBBING** - Double speed copying
- To stop recording, press **STOP (■)**.

Recording

Basic Setting

- 1** Press **CD** or **TUNER** to select source.
- 2** Open the cassette deck TAPE 2 and insert a blank cassette into the cassette compartment.
Set the recording direction : **OPTIONAL**
Press **PLAY MODE** repeatedly to set the recording direction.

Recording from Radio, CD or Auxiliary source

- 1** Press **●/||** on the front panel or remote control.
“REC” flashes and holds the cassette in pause mode.
 - 2** Press **▶** (or **◀**: OPTIONAL).
The recording is begun.
- To pause the recording**
Press **●/||**.
- To Stop the recording**
Press **STOP(■)**.

CD to Tape Synchronized Recording

The CD synchro recording function dubs a complete CD and programmed titles automatically into a cassette.

- 1** Press **CD SYNC.** in stop mode.
“REC” flashes and “CD SYNCHRO” displays in the display window.
- 2** The synchronized recording is started automatically after about 7 seconds.

Notes

- If you wish to record from the desired track, select the desired track with **MULTI JOG DIAL** before commencing CD synchro recording.
- A function change is not possible during recording.

Operation with DVD and Video CD


Playing a DVD and Video CD

Playback Setup

- Turn on the TV and select the video input source connected to the unit.
- Audio system: Turn on the audio system and select the input source connected to the unit.

1 Press **▲ OPEN/CLOSE** button to open the disc tray.

2 Load your chosen disc in the tray, with the playback side facing down.

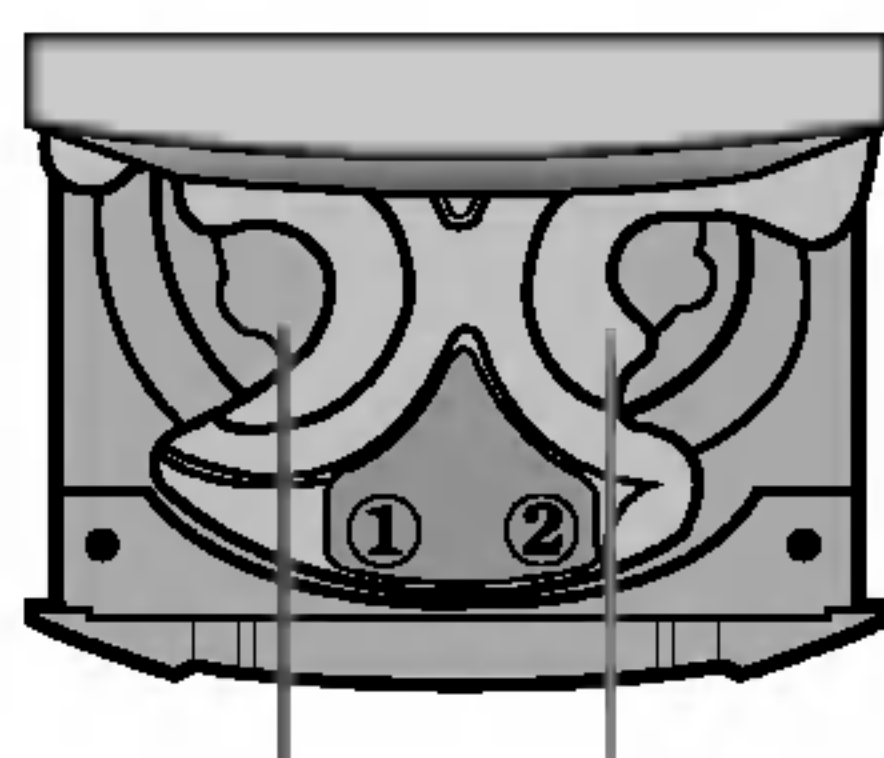

• Playing one or two discs

Place discs on trays 1 and 2.

• Playing three discs

After placing two discs, press the DISC SKIP on the front panel or D.SKIP on the remote control to rotate the trays. Place the next disc on tray 3.

3 Press **▲ OPEN/CLOSE** button to close the tray. Playback starts automatically. If playback does not start, press PLAY. In some cases, the disc menu might appear instead.

DVD

Use the **▲ / ▼ / ◀ / ▶** buttons to select the title/chapter you want to view, then press SELECT/ENTER to start. Press TITLE or MENU to return to the menu screen.

VCD

Use the number buttons to select the track you want to view and press RETURN to return to the menu screen. Menu settings and operating procedures may differ. Follow the instructions on the each menu screen. You also may set PBC to Off (See "PBC" on page 21).

Notes

- If parental control is set and the disc is not within the rating settings you must input the password. (See "Lock Menu" on page 22.)
- DVDs may have a region code. Your player will not play discs that have a region code different from your player. The region code for this player is 5 (five).

To Select a disc directly

Press DISC 1, DISC 2 or DISC 3 during playing or stopping.

When you press DISC 1,2 or 3 before playing a disc, the unit will automatically start playing the selected disc.

General Features

Note

Unless stated otherwise, all operations described use the remote control. Some features may also be available on the Setup menu.

Moving to another TITLE **DVD**

When a disc has more than one title, you can move to another title. Press DISPLAY while playback is stopped then the appropriate number (0-9) or use **◀ / ▶** to move to another title.

You can play any title by inputting its number while playback is stopped.

Moving to another CHAPTER/TRACK

DVD VCD

When a title on a disc has more than one chapter or a disc has more than one track, you can move to another chapter/track as follows:

- Press **◀◀** or **▶▶** briefly during playback to select the next chapter/track or to return to the beginning of the current chapter/track.
- Press **◀◀** twice briefly to step back to the previous chapter/track.
- To go directly to any chapter during DVD playback, press DISPLAY and press **▲ / ▼** to select the chapter/track icon. Then, input the chapter/track number or use **◀ / ▶**.

Search **DVD VCD**

- 1 Press **◀◀** or **▶▶** during playback. The player will now go into SEARCH mode.
- 2 Press **◀◀** or **▶▶** repeatedly to select the required speed: **◀◀X2**, **◀◀X4**, **◀◀X8**, **◀◀X16**, **◀◀X100** (backward) or **▶▶X2**, **▶▶X4**, **▶▶X8**, **▶▶X16**, **▶▶X100** (forward).
With a Video CD, the Search speed changes: **◀◀X2**, **◀◀X4**, **◀◀X8**, **◀◀X16** (backward) or **▶▶X2**, **▶▶X4**, **▶▶X8**, **▶▶X16** (forward).
- 3 To exit SEARCH mode, press PLAY.

Operation with DVD and Video CD

General Features (continued)

Still Picture and Frame-by-frame playback

DVD VCD

- 1 Press PAUSE/STEP on the remote control during playback.
The player will now go into PAUSE mode.
- 2 You can advance the picture frame-by-frame by pressing PAUSE/STEP repeatedly on the remote control.
- 3 To exit still motion mode, press PLAY.

Slow Motion **DVD VCD**

- 1 Press PAUSE/STEP on the remote control during playback.
The player will enter SLOW mode.
- 2 Use the ◀◀ or ▶▶ to select the required speed: ◀◀ 1/2, ◀◀ 1/4, ◀◀ 1/8 or ◀◀ 1/16 [(backward) - DVD only] or ▶▶ 1/2, ▶▶ 1/4, ▶▶ 1/8 or ▶▶ 1/16 (forward).
- 3 To return to normal PLAY, press PLAY.

Note

Slow motion playback in reverse is not applicable for Video CD.

Repeat **DVD VCD**

You can play a title/chapter/all/track on a disc.

Press REPEAT during playback to select a desired repeat mode.

DVD Video Discs - Repeat Chapter/Title/Off

- Chapter: repeats the current chapter.
- Title: repeats the current title.
- Off : does not play repeatedly.

Video CDs - Repeat Track/All/Off

- Track : repeats the current track
- All : repeats all the tracks on a disc.
- Off : does not play repeatedly.

Note

- On a Video CD with PBC, you must set PBC to Off on the setup menu to use the repeat function (See “PBC” on page 21).

Repeat A-B **DVD VCD**

To repeat a sequence in a title:

- 1 Press A-B at your chosen starting point.
“A - ” appears briefly on the TV screen.
- 2 Press A-B again at your chosen end point.
“A - B” appears briefly on the TV screen, and the repeat sequence begins.
- 3 To cancel the sequence, press A-B.

Time Search **DVD VCD**

The Time Search function allows you to start playing at any chosen time on the disc.

- 1 Press DISPLAY during playback. The on-screen display appears on the screen.
The Time Search box shows the elapsed playing time of the current disc.
- 2 Within 10 seconds, press ▲ / ▼ to select the Time Search icon in the on-screen display.
The “-:--:--” appears in the Time Search box.
- 3 Within 10 seconds, use the number buttons to enter the required start time. Enter hours, minutes, and seconds from left to right in the box.
If you enter the wrong numbers, press CLEAR to remove the numbers you entered. Then enter the correct numbers.
- 4 Within 10 seconds, press SELECT/ENTER to confirm the start time.
Playback starts from the selected time on the disc. If you enter an invalid time, playback will continue from the current point.

Last Scene Memory **DVD**

This player memorizes last scene from the last disc that is viewed. The last scene remains in memory even if you remove the disc from the player or switch off the player. If you load a disc that has the scene memorized, the scene is automatically recalled.

Note

This player does not memorize the scene of a disc if you switch off the player before commencing to play the disc.

Operation with DVD and Video CD

General Features (continued)

Zoom

The Zoom function allows you to enlarge the video image and to move through the enlarged image.

- 1 Press ZOOM during playback or still playback to activate the Zoom function.
If you press ZOOM repeatedly, the magnification level increases up to four steps.
100% size (screen fit mode) → 400% size → 800% size → 1600% size → 100% size (screen fit mode)
- 2 Use the  /  /  /  buttons to move through the zoomed picture.

Note

The zoom function may not work for some DVDs.

Marker Search

You can start playback from a memorized point. Up to nine points can be memorized.

To enter a mark, follow these steps.

- 1 During disc playback, press MARKER when playback reaches the spot that you want to memorize.
The Marker icon will appear on the TV screen briefly.
- 2 Repeat step 1 to enter up to nine Marker points on a disc.

To Recall a Marked Scene

- 1 During disc playback, press SEARCH.
The MARKER SEARCH menu will appear on the screen.
- 2 Within 10 seconds, press  /  to select a Marker number that you want to recall.
- 3 Press SELECT/ENTER.
Playback will start from the Marked scene.
- 4 To remove the MARKER SEARCH menu, press SEARCH.

To clear a Marked Scene

- 1 During disc playback, press SEARCH.
The MARKER SEARCH menu will appear on the screen.
- 2 Press  /  to select the Marker number that you want to erase.
- 3 Press CLEAR.
The Marker number will be erased from the list.
- 4 Repeat steps 2 and 3 to erase additional Marker numbers.
- 5 To remove the MARKER SEARCH menu, press SEARCH.

Special DVD Features

Checking the contents of DVD Video discs: Menus

DVDs may offer menus that allow you to access special features. To use the disc menu, press MENU. Then, press the appropriate number button to select an option. Or, use the  /  /  /  buttons to highlight your selection, then press SELECT/ENTER.

Title Menu

- 1 Press TITLE.
If the current title has a menu, the menu will appear on the screen. Otherwise, the disc menu may appear.
- 2 The menu can list camera angles, spoken language and subtitle options, and chapters for the title.
- 3 To remove the title menu, press TITLE again.

Disc Menu

Press MENU.

The disc menu is displayed.

Camera Angle

If the disc contains scenes recorded at different camera angles, you can change to a different camera angle during playback.

- 1 Press DISPLAY and then press the  /  to select a angle.
The number of the current angle appears on the display window.
- 2 Select a desired angle pressing the  /  buttons.

Changing the Audio Language

Press AUDIO repeatedly during playback to hear a different audio language or audio track.

Changing the Audio Channel

Press AUDIO repeatedly during playback to hear a different audio channel (STER., LEFT or RIGHT).

Subtitle

Press SUBTITLE repeatedly during playback to see the different subtitle languages.

Note

If  appears, the feature is not available on the disc.

Operation with Audio CD and MP3/WMA Disc

Playing an Audio CD and MP3/WMA

Disc **CD** **MP3** **WMA**

The unit can play MP3/WMA formatted recordings on CD-ROM, CD-R, or CD-RW discs.

Audio CD

Once you insert an audio CD a menu appears on the TV screen. Press **▲** / **▼** to select a track then press **PLAY** or **SELECT/ENTER** and playback starts.



MP3 / WMA

1. Press **▲** / **▼** to select a folder, and press **SELECT/ENTER** to see the folder contents.
2. Press **▲** / **▼** to select a track then press **PLAY** or **SELECT/ENTER**. Playback starts.



Notes

- If you are in a file list on the MP3/WMA menu and want to return to the Folder list, use the **▲** / **▼** to highlight **⏮** on the stop mode and press **SELECT/ENTER**.
- Press **MENU** to go to the next page.
- On a CD with MP3/WMA file and JPEG file, you can switch MP3/WMA and JPEG menu. Press **TITLE** on the stop mode and MP3/WMA or JPEG word on top of the menu is highlighted. Then, use **◀** / **▶** to select MP3/WMA or JPEG then press **SELECT/ENTER**.

MP3 / WMA disc compatibility with this player is limited as follows:

- Sampling frequency: within 32 - 48 kHz (MP3), within 24 - 48kHz (WMA)
- Bit rate: within 32 - 320kbps (MP3), 40 - 192kbps (WMA)
- The player cannot read an MP3/WMA file that has a file extension other than ".mp3" / ".wma".
- CD-R physical format should be ISO 9660
- If you record MP3 / WMA files using software that cannot create a file system (eg. Direct-CD) it is impossible to playback MP3 / WMA files. We recommend that you use Easy-CD Creator, which creates an ISO 9660 file system.
- File names should have a maximum of 8 letters and must incorporate an .mp3 or .wma extension.
- They should not contain special letters such as / ? * : " < > | etc.
- The total number of files on the disc should be less than 999.

This DVD player requires discs and recordings to meet certain technical standards in order to achieve optimal playback quality. Pre-recorded DVDs are automatically set to these standards. There are many different types of recordable disc formats (including CD-R containing MP3 or WMA files) and these require certain pre-existing conditions (see above) to ensure compatible playback.

Customers should note that permission is required in order to download MP3 / WMA files and music from the Internet. Our company has no right to grant such permission. Permission should always be sought from the copyright owner.

Operation with Audio CD and MP3/WMA Disc

Pause

- 1 Press PAUSE/STEP during playback.
- 2 To return to playback, press PLAY or press PAUSE/STEP again.

Moving to another Track

- Press  or  briefly during playback to go to the next track or to return to the beginning of the current track.
- Press  twice briefly to step back to the previous track.
- In case of audio CD, to go directly to any track, enter the track number using the numbered buttons (0-9) during playback.

Repeat Track/All/Off

You can play a track/all on a disc.

- 1 Press REPEAT when playing a disc. The repeat icon appears.
- 2 Press REPEAT to select a desired repeat mode.
 - Track: repeats the current track
 - All: repeats all the tracks on a disc.
 - Off(No display): does not play repeatedly.

Search

- 1 Press  or  during playback.
The player will now go into SEARCH mode.
- 2 Press  or  repeatedly to select the required speed: X2, X4, X8 (backward) or X2, X4, X8 (forward).
- 3 To exit SEARCH mode, press PLAY.

Operation with JPEG Disc

Viewing a JPEG disc **JPEG**

This unit can play discs with JPEG files. Before playing JPEG recordings, read the notes on JPEG Recordings on right.

- 1 Insert a disc and close the tray.**
The JPEG menu appears on the TV screen.



- 2 Press ▲ / ▼ to select a folder, and press SELECT/ENTER. A list of files in the folder appears.**



Tip

If you are in a file list and want to return to the Folder list, use the ▲ / ▼ buttons on the remote to highlight "▲-." and press SELECT/ENTER to return to the previous menu screen.

- 3 If you want to view a particular file, press ▲ / ▼ to highlight a file and press SELECT/ENTER or PLAY.**

Slide Show starts from the selected file if Speed option is not Off.

While viewing a file, you can press STOP(■) to move to the previous menu (JPEG menu).



Tip

- Press MENU to move to the next page.
- There are four Slide Speed options: ■ :
> (Slow), >> (Normal), >>> (Fast) and II (off).
Use ▲ / ▼ / ◀ / ▶ to highlight the Speed. Then, use ◀ / ▶ to select the option you want to use then press SELECT/ENTER.
- If you set Speed option to Off, Slide Show is not active.

Slide Show

Use ▲ / ▼ / ◀ / ▶ to highlight the ■ (Slide Show) then press SELECT/ENTER.

Moving to another File

Press ◀◀ or ▶▶ once during viewing a picture to advance to the next file or to the previous file.

Still Picture

- Press PAUSE/STEP during slide show.
The player will now go into PAUSE mode.
- To return to the slide show, press PLAY or press PAUSE/STEP again.

JPEG disc compatibility with this player is limited as follows:

- Depending upon the size and number of JPEG files, it could take a long time for the DVD player to read the disc's contents. If you don't see an on-screen display after several minutes, some of the files may be too large — reduce the resolution of the JPEG files to less than 2760 x 2048 pixels and burn another disc.
- The total number of files and folders on the disc should be less than 999.
- Some discs may be incompatible due to a different recording format or the condition of disc.
- Ensure that all the selected files have the ".jpg" extensions when copying into the CD layout.
- If the files have ".jpe" or ".jpeg" extensions, please rename them as ".jpg" file.
- File names without ".jpg" extension will not be able to be read by this DVD player. Even though the files are shown as JPEG image files in Windows Explorer.

Programmed Playback **CD** **MP3** **WMA**

The Program function enables you to store your favorite tracks from any disc in the player memory. A program can contain 300 tracks (Audio CD/MP3/WMA).

1 Insert a disc.

Audio CD and MP3/WMA Discs:

Audio CD or MP3/WMA menu appears as below.



Audio CD Menu



MP3/WMA Menu

2 Select a track on the List.

3 Press PROG./MEMO. Or, select “ (Add)” icon then SELECT/ENTER to place the selected track on the Program list. Repeat to place additional tracks on the list.

Note

You can add all tracks in the disc. Select “ (Add All)” icon then press SELECT/ENTER.

4 Select the track you want to start playing on the Program list.

Tip

Press MENU to move to the next page.

5 Press PLAY or SELECT/ENTER to start.

Playback begins in the order in which you programmed the tracks and “PROG.” appears on the display window. Playback stops after all of the tracks on the Program list have played once.

Repeat Programmed Tracks

You can play a title/chapter/all/track on a disc.

- 1 Press REPEAT when playing a disc. The repeat icon appears.
- 2 Press REPEAT to select a desired repeat mode.
 - Track: repeats the current track
 - All: repeats all the tracks on a disc.
 - Off(No display): does not play repeatedly.

Erasing a Track from Program List

- 1 Use  /  /  /  to select the track that you wish to erase from the Program list.
- 2 Press CLEAR. Or, select “ (Delete)” icon then Press SELECT/ENTER to place the selected track on the Program list. Repeat to erase additional tracks on the list.

Erasing the Complete Program List

Select “ (Del all)”, then press SELECT/ENTER. The complete Program for the disc is erased.

Note

The programs are also cleared when the disc is removed.


To resume normal playback from programmed playback
Select a track on the List then press SELECT/ENTER.
“PROG.” disappears from the display window.

Operation with DivX Disc

The unit can play the MPEG4 encoded files (.avi, mpg, .mpeg, .divx etc) and subtitle files (.srt, .smi, .sub).

1 Insert the MPEG4 encoded disc and close the tray.

The DivX menu appears on the TV screen.

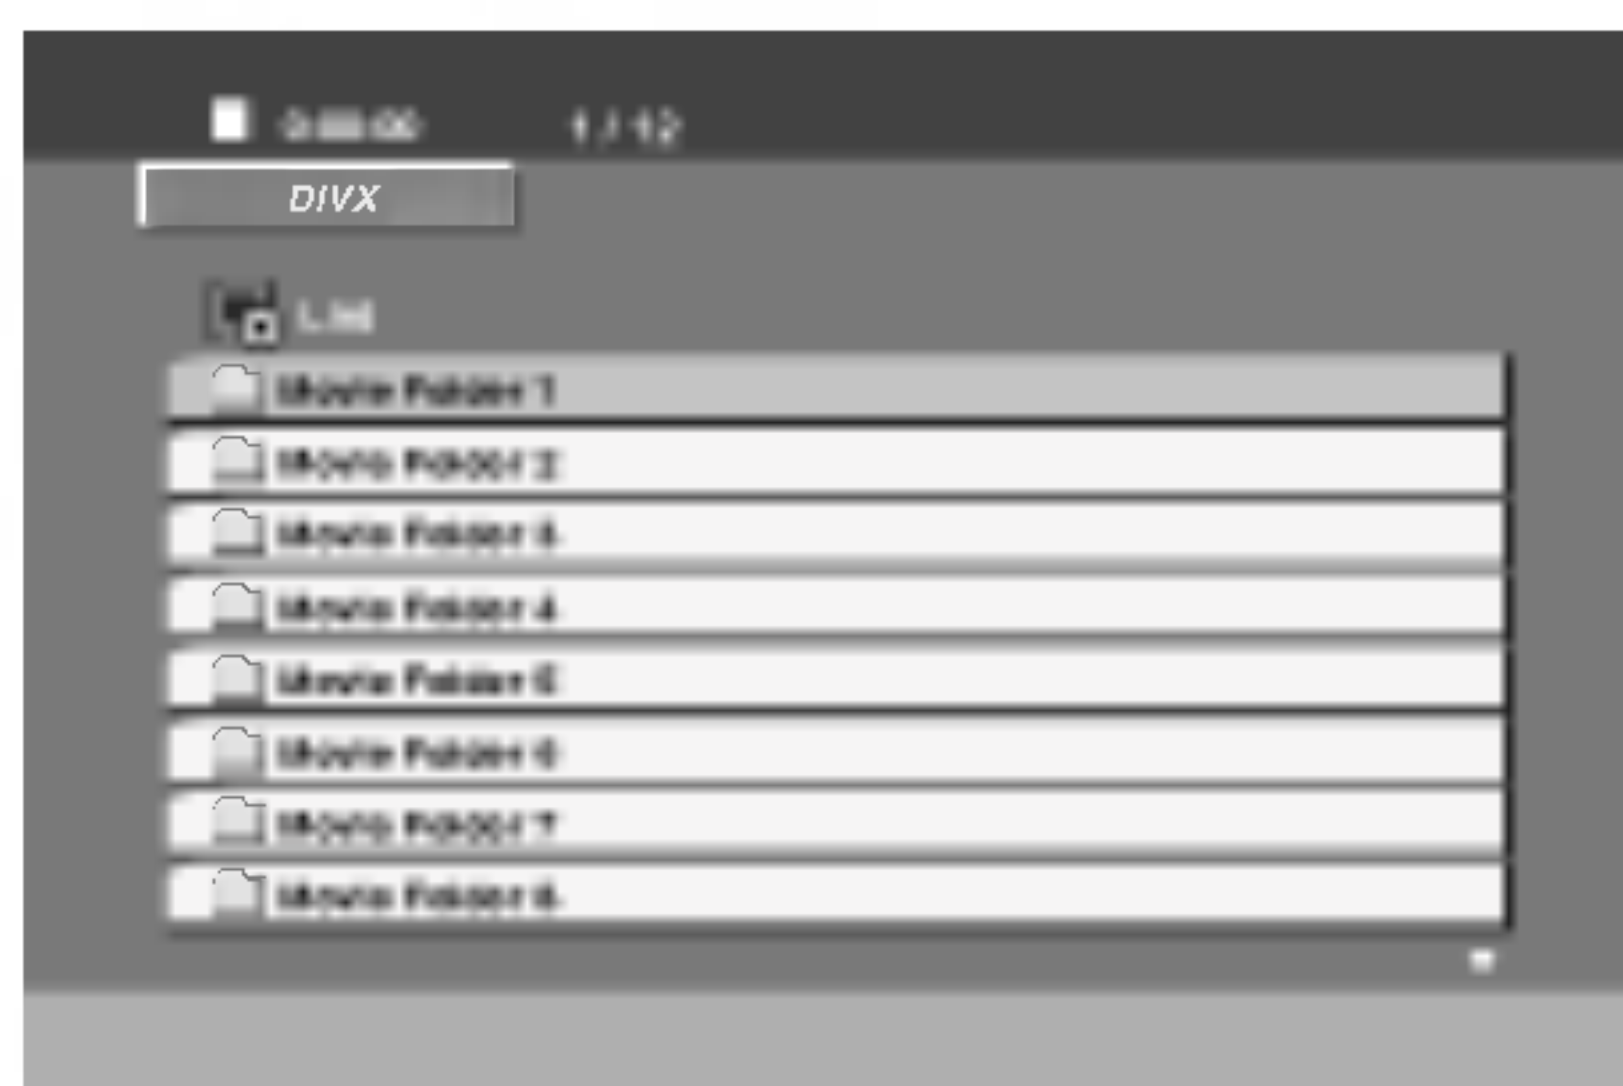

2 Press **▲** / **▼** to select a folder, and press SELECT/ENTER to see the folder contents.

3 Press **▲** / **▼** to select a track then press PLAY or SELECT/ENTER.

Playback starts.

Pause **DivX**

1. Press PAUSE/STEP during playback.
2. To return to playback, press PLAY.

Repeat Track/All/Off **DivX**

You can play a title/chapter/all/track on a disc.

- 1 Press REPEAT when playing a disc. The repeat icon appears.
- 2 Press REPEAT to select a desired repeat mode.
 - Track: repeats the current track
 - All: repeats all the tracks on a disc.
 - Off (No display): does not play repeatedly.

Subtitle **DivX**

Press SUBTITLE (S-TITLE) repeatedly during playback to see the different subtitle language.

Search **DivX**

- 1 Press SCAN◀◀ or ▶▶ during playback.
- 2 Press SCAN◀◀ or ▶▶ repeatedly to select the required speed.
- 3 To exit SEARCH mode, press PLAY.

Display **DivX**

Press DISPLAY during playback.

General playback status can be displayed on the TV screen.

DivX disc compatibility with this player is limited as follows:

- Available resolution size of the DivX file is under 720x576 (W x H) pixel.
- The file name of the DivX subtitle is available by 20-40 characters (differs from language).
- If there is impossible code to express in the DivX file, it may be displayed as " _ " mark on the display.
- If the number of the screen frame is over 30 per 1 second, this unit may not operate normally.
- If the video and audio structure of recorded file is not interleaved, either video or audio is outputted.
- If the file is recorded with GMC, the unit supports some of 1-point of the record level.
 - * GMC?

GMC is the acronym for Global Motion Compensation. It is an encoding tool specified in MPEG4 standard. Some MPEG4 encoders, like DivX or Xvid, have this option. There are different levels of GMC encoding, usually called 1-point, 2-point, or 3-point GMC.

Playable DivX subtitle file

- ".srt ", ".smi ", ".sub "

Playable DivX file

- ".avi ", ".mpg ", ".mpeg "

Playable Codec format

- "DIVX3.xx ", "DIVX4.xx ", "DIVX5.xx ", "XVID ", "MP43 ", "3IVX ", "MP42 "

Playable Audio format

- "AC3 ", "DTS ", "PCM ", "MP3 ", "WMA ".
 - Sampling frequency: within 32 - 48 kHz (MP3), within 24 - 48kHz (WMA)
 - Bit rate: within 32 - 320kbps (MP3), 40 - 192kbps (WMA)

Operation with KARAOKE

You can play KARAOKE (singing along) with karaoke disc by connecting a microphone to the unit.
You can enjoy KARAOKE with a stereo-recorded disc, even if it is a non-karaoke disc, by reducing the singer's voice.

Karaoke Basic Playback

- 1** Check if the system is connected.
(Refer to the page 10-13.)
- 2** Turn on the powers of TV (or Amplifier) and DVD Karaoke and enter to the video mode on TV.
- 3** Press **▲ OPEN/CLOSE** to open the disc tray and load supplied karaoke disc in the tray with the label facing up.
- 4** Press **▲ OPEN/CLOSE** to close the tray.
- 5** Press **KARAOKE/DVD** twice to enter to the karaoke mode.

[TV Screen]



- 6** Turn on the powers of the wireless microphone or connect the microphone to the MIC 1 or MIC 2 jack.
- 7** Select the melody number you want by pressing **NUMERIC** buttons.
If you cancel the selected melody number, press the **CLEAR**.
- 8** Press **PLAY (▶)**.
The selected melody number is played.
Sing in tone with microphone.
After melody ends, it is stopped automatically and score appears.

Karaoke Advanced Playback

To Adjust MIC Volume

Turn the **MIC VOLUME CONTROL** on the front panel clockwise to increase the volume, or counterclockwise to decrease it.

To Adjust ECHO Volume

You can give an echo effect to the sound from the microphones.

Press **ECHO VOLUME KNOB (ECHO VOL.)** on the remote control clockwise to increase the sound level, or counterclockwise to decrease it.

Key Control

You can change the key to suit your vocal range.
You can adjust the key to 13 steps (6steps higher, 6steps lower and the original key).
- The setting appears on the screen.

Press **KEY CONTROL (b/#)** repeatedly on the remote control or turn **KEY CONTROL (b/#)** on the front panel to find the key that suits your vocal range.

- To flatten the key one by one, press the **KEY CONTROL (b)** repeatedly during playback.
- To sharp the key one by one, press the **KEY CONTROL (#)** repeatedly during playback.
- To return to the original key, press the **KEY CONTROL (b/#)** repeatedly to appear the original key.

Operation with KARAOKE

Reserving the Songs

When you want to make a reservation of next melody, you can enjoy the most 8 melodies reservation Without waiting.

1 Press the NUMERIC buttons to reserve melody number you want in the karaoke disc play mode.

Melody number appears on the TV screen.

2 Press PROGRAM.

The melody number is made a reservation.

3 Repeat steps 1-2.

You can reserve 8 songs.



After the one song finishes its playback, the next song will be playback automatically.

To cancel the reserved song

Each time you press CLEAR, the reserved song will be cancelled one by one.

To cancel or change the wrong reserved song

Press the PROGRAM to move to the desired position, then press the CLEAR to cancel the reserved song.

Male/Female Function

If you want to sing a song of MAN's or WOMEN's key, press MALE(♂)/FEMALE(♀) button repeatedly to change MAN's or WOMEN's key.

Tempo Change

You can use this function when you want to play fast or slow.

- Press TEMPO ►► repeatedly during singing to play faster.
- Press TEMPO ◀◀ repeatedly during singing slower.

Screen Change Function **VCD** **DVD**

This function is used when you want to change the current screen during playing karaoke disc.

Press the DISC SELECT (DISC 1, DISC 2, DISC 3) or D.SKIP button during playing karaoke disc.

It is played a screen existing another disc.

Shadow Function

If Video CD caption and the song's subtitle are mixed up, the song's subtitle may be invisible. In this case, to highlight the song's subtitle, press SHADOW.

- It will be highlighted by background shadow image.

Karaoke MENU Playback

Preparation

Press MENU on the karaoke mode.

The main MENU appears on the screen.


Main MENU (On the TV screen)



SETUP

1 Select "1. SETUP" by pressing ▲ / ▼ on the main menu.

2 Use ◀ / ▶ to select the desired option, and press SELECT/ENTER.

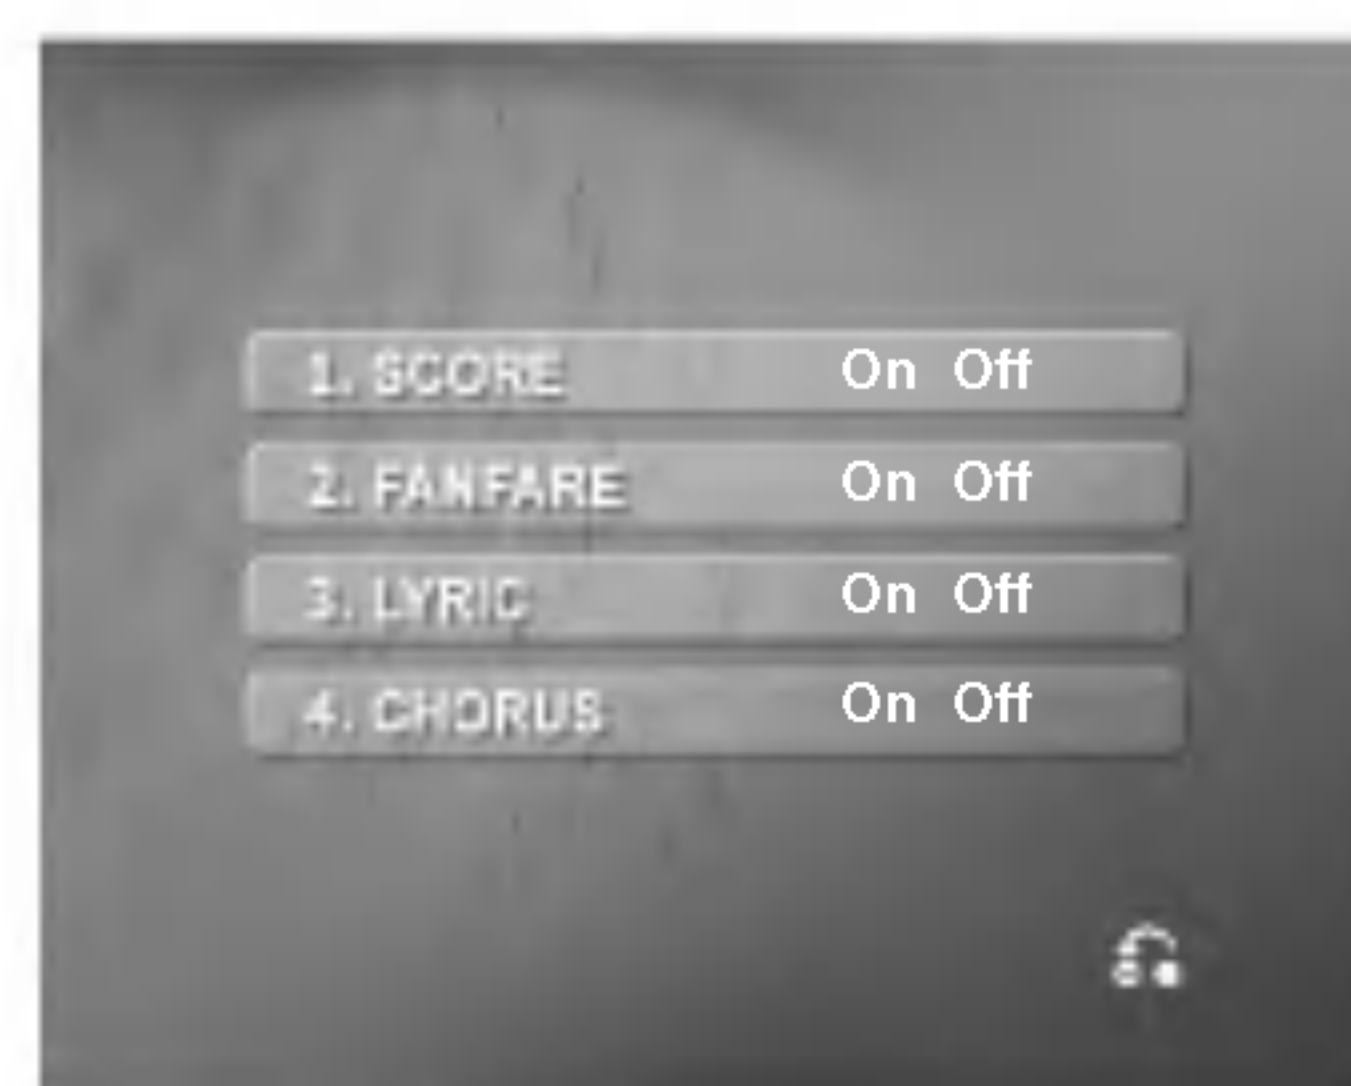

SCORE On/Off

On : When singing by selection of melody, song score comes out after one piece of song is ended.

To cancel it, select the **Off** .

FANFARE On/Off

On : In condition of POWER ON, scoring fanfare operates. The fanfare sound comes out after singing finished.

To cancel it, select the **Off** .

LYRIC On/Off

On : When singing by selection of melody, song lyric appears on the TV screen.

To cancel it, select the **Off** .

CHORUS On/Off

On : When singing by selection of melody, song chorus is heard a sound.

To cancel it, select the **Off** .

Note


To move to the main menu, press MENU or RETURN.

Operation with KARAOKE


MUSIC LIST

BALTIC SONG and RUSSIAN SONG

- 1** Select “2. MUSIC LIST” by pressing the ▲ / ▼ on the main menu.
The BALTIC SONG, RUSSIAN SONG and CLASSICAL MUSIC menu will be shown on the TV screen.

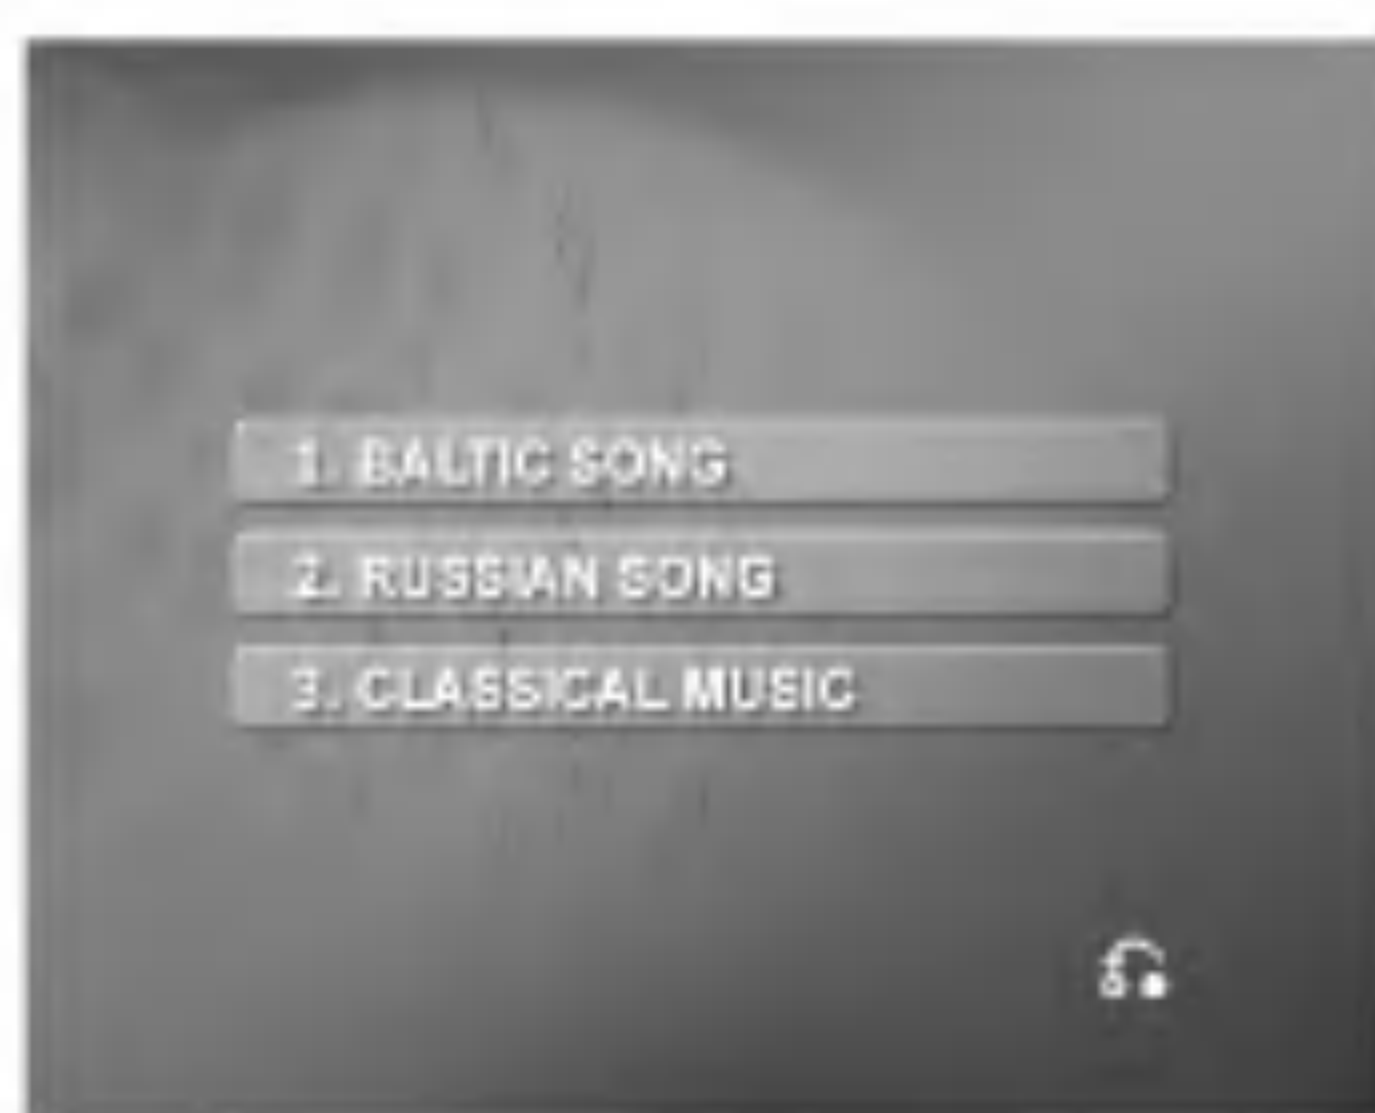


- 2** Select “1. BALTIC SONG” or “2. RUSSIAN SONG” by pressing the ▲ / ▼, and press SELECT/ ENTER.
SONG LIST and SINGER LIST menu will be shown on the TV screen.

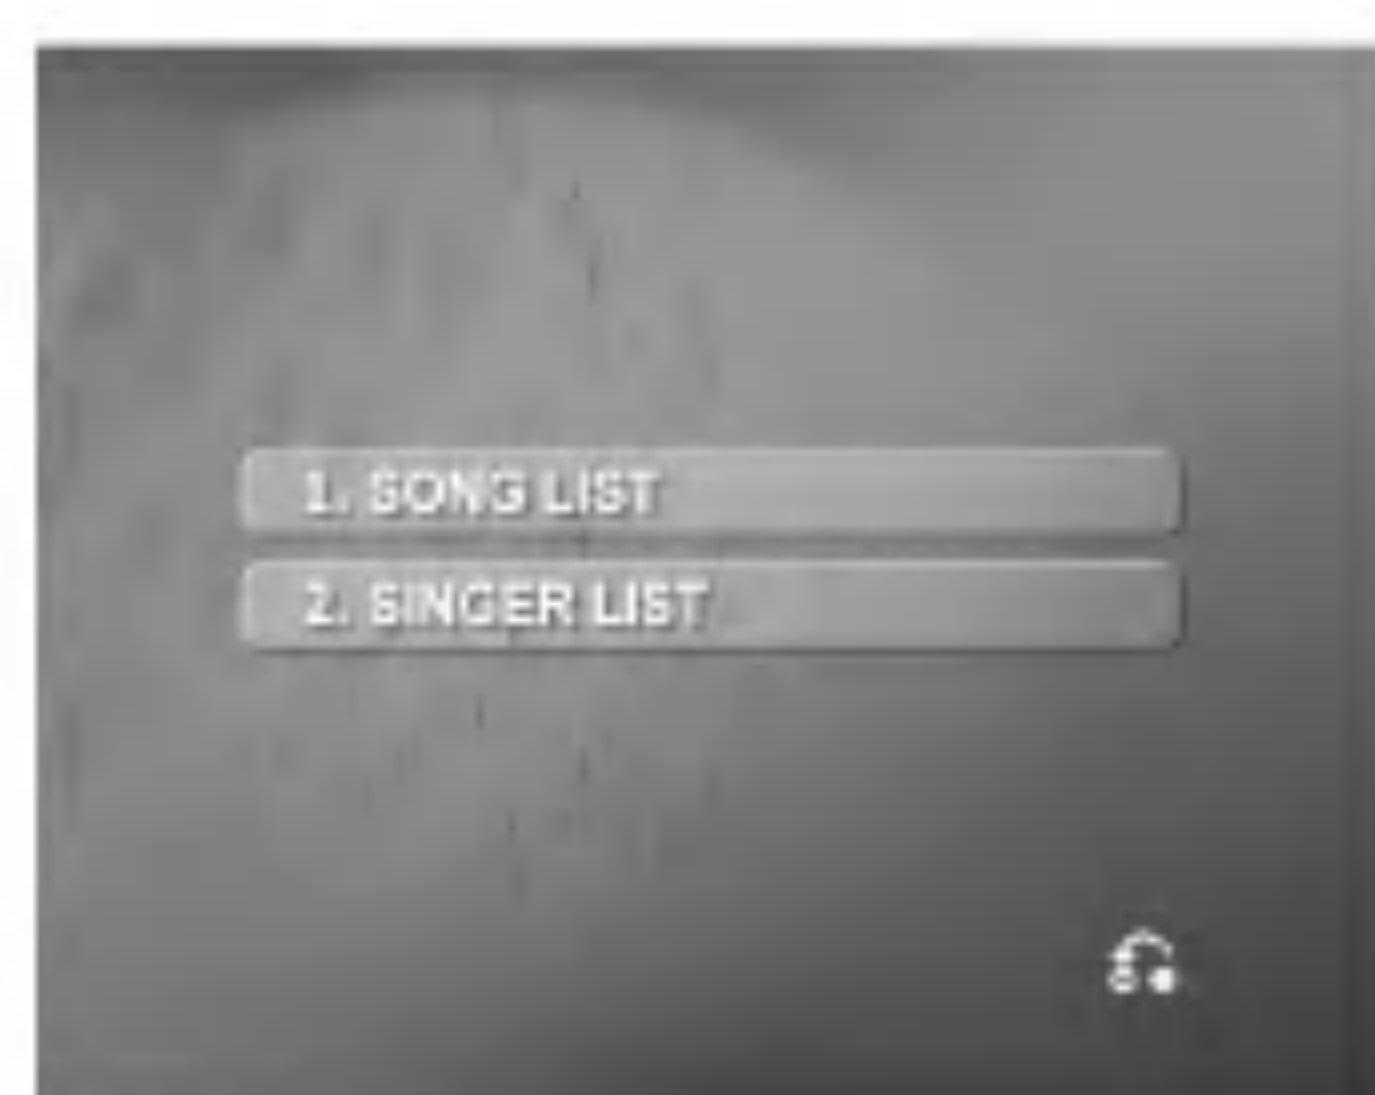


SONG LIST

- 1** Select “1. SONG LIST” and select the initial of the song title you want by pressing the ▲ / ▼, then press SELECT/ ENTER.

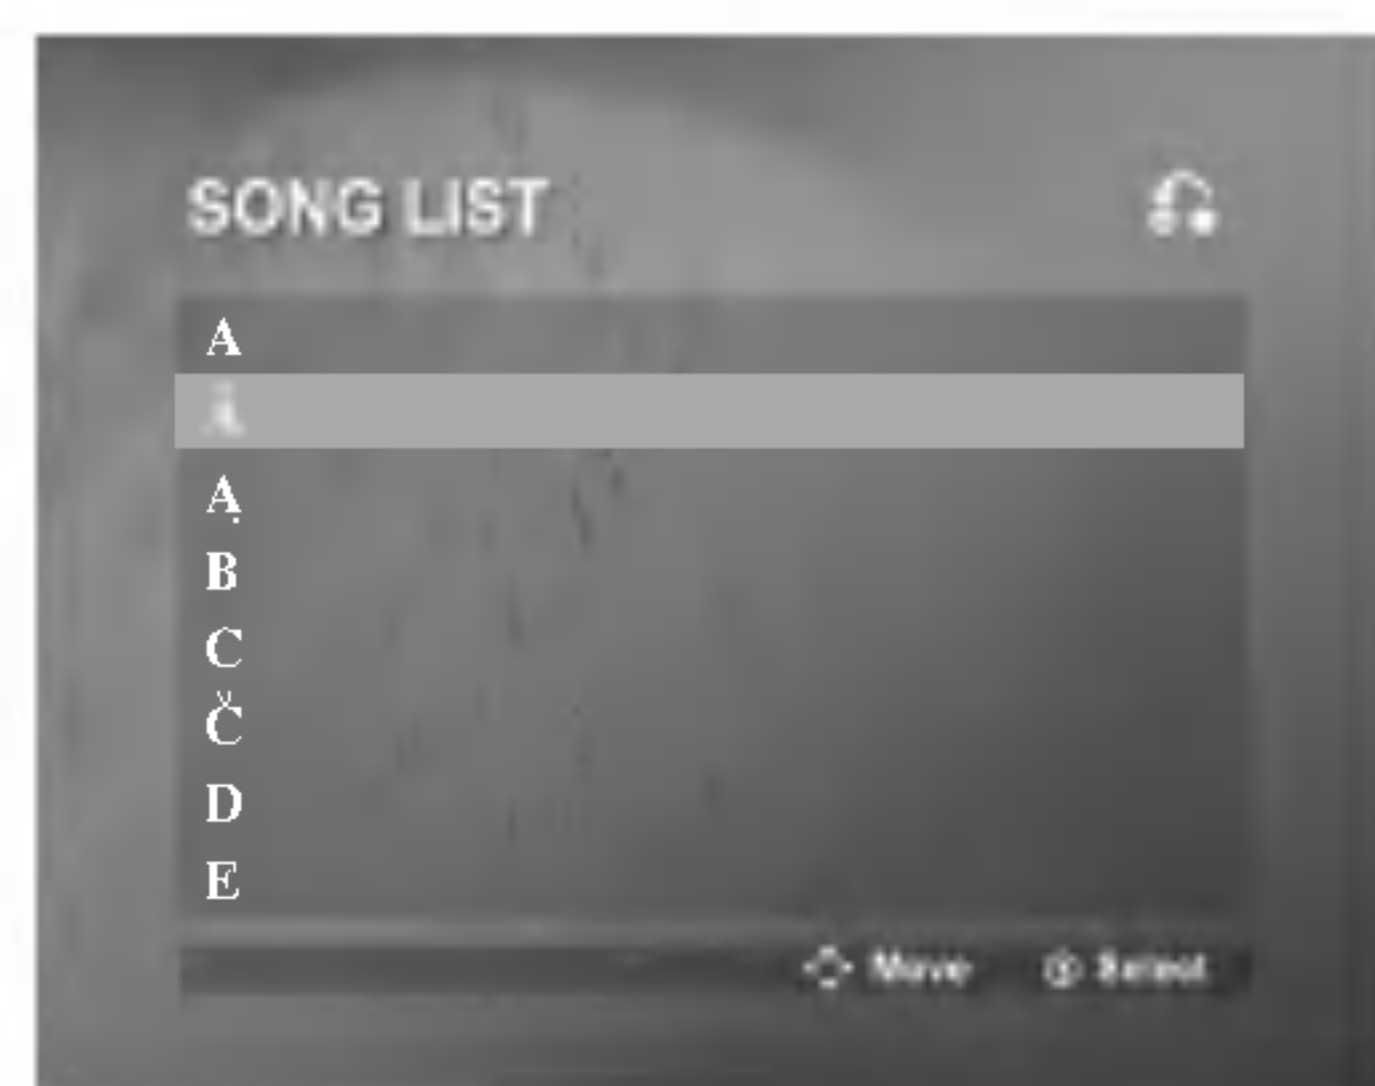


- 2** Select the song title you want by pressing the ▲ / ▼, and press SELECT/ ENTER.

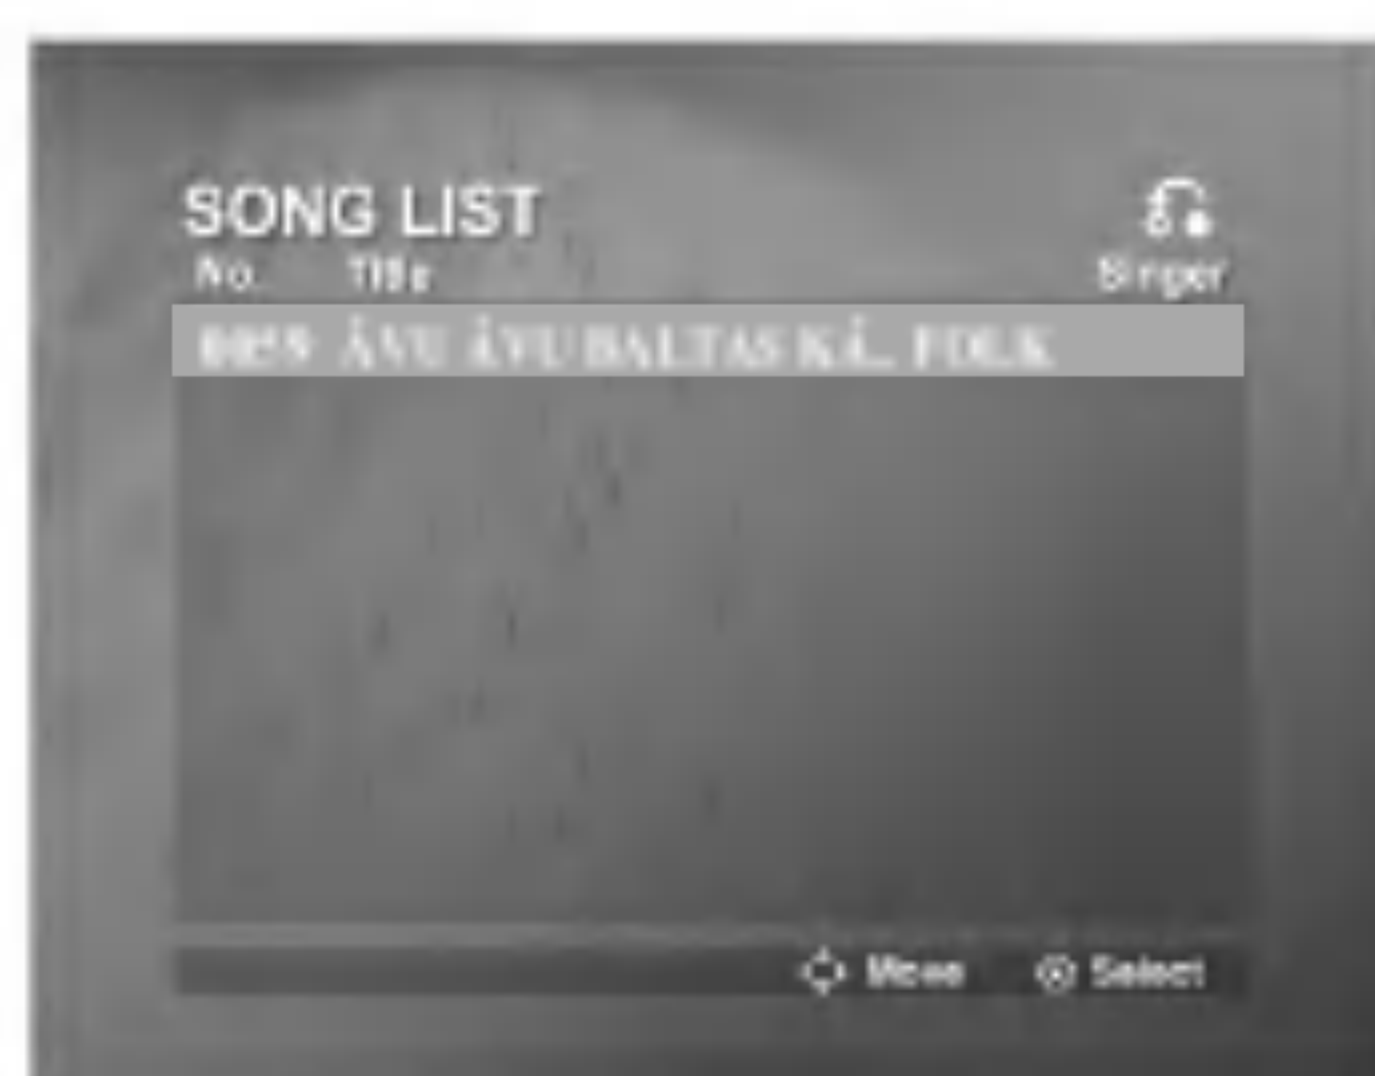


SINGER LIST

- 1** Select “2. SINGER LIST” and select the initial of the singer you want by pressing the ▲ / ▼, then press SELECT/ ENTER.

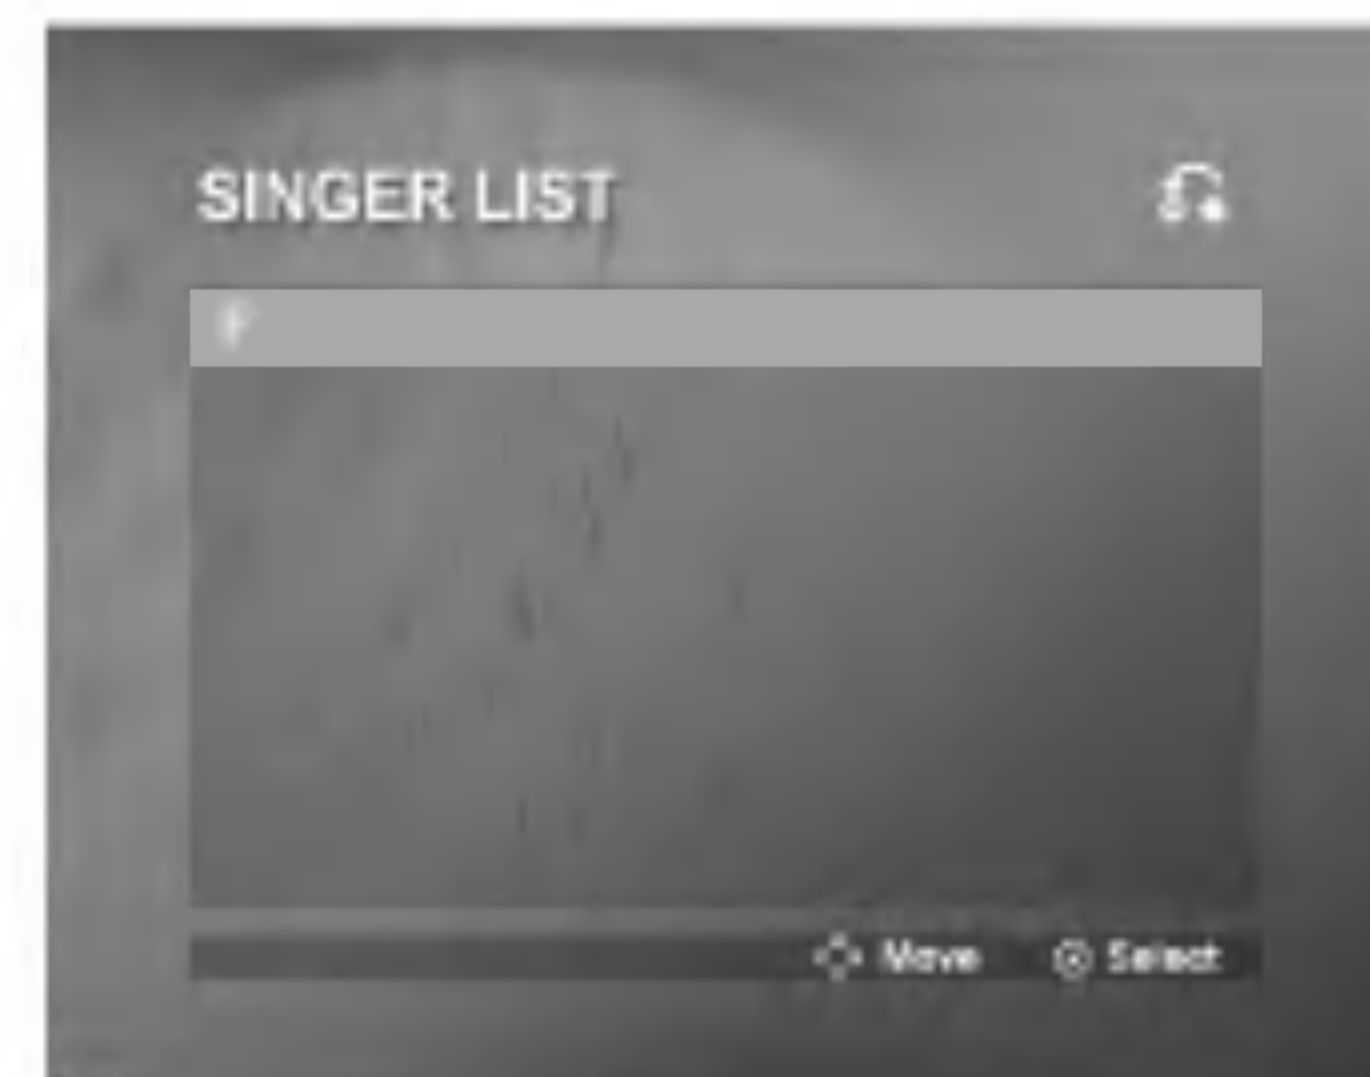

- 2** Select the singer you want by pressing the ▲ / ▼, and press SELECT/ ENTER.

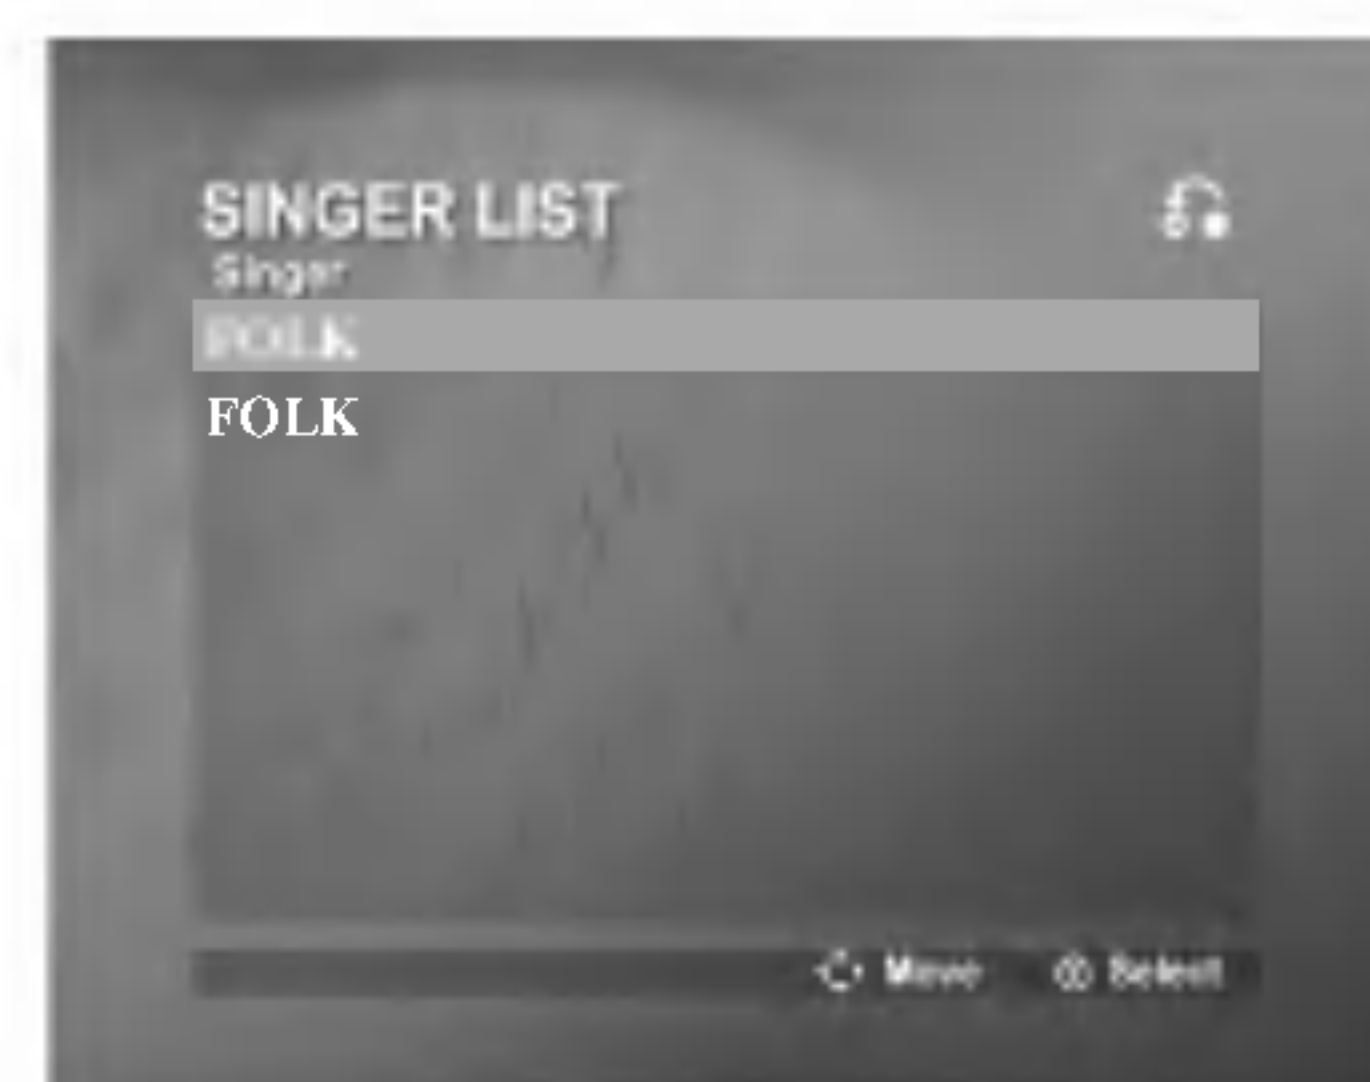

- 3** Select the song title of the singer you want by pressing the ▲ / ▼, and press SELECT/ ENTER.




Note

- To move the previous mode, select the 🎧 by pressing the ▲ / ▼, then press SELECT/ ENTER.
- The special letters may not be displayed on the TV screen.

Operation with KARAOKE


CLASSICAL MUSIC

- 1** Select “3. CLASSICAL MUSIC” by pressing the / , on the MUSIC LIST menu .
The MUSIC LIST and COMPOSER LIST menu will be shown on the TV screen.

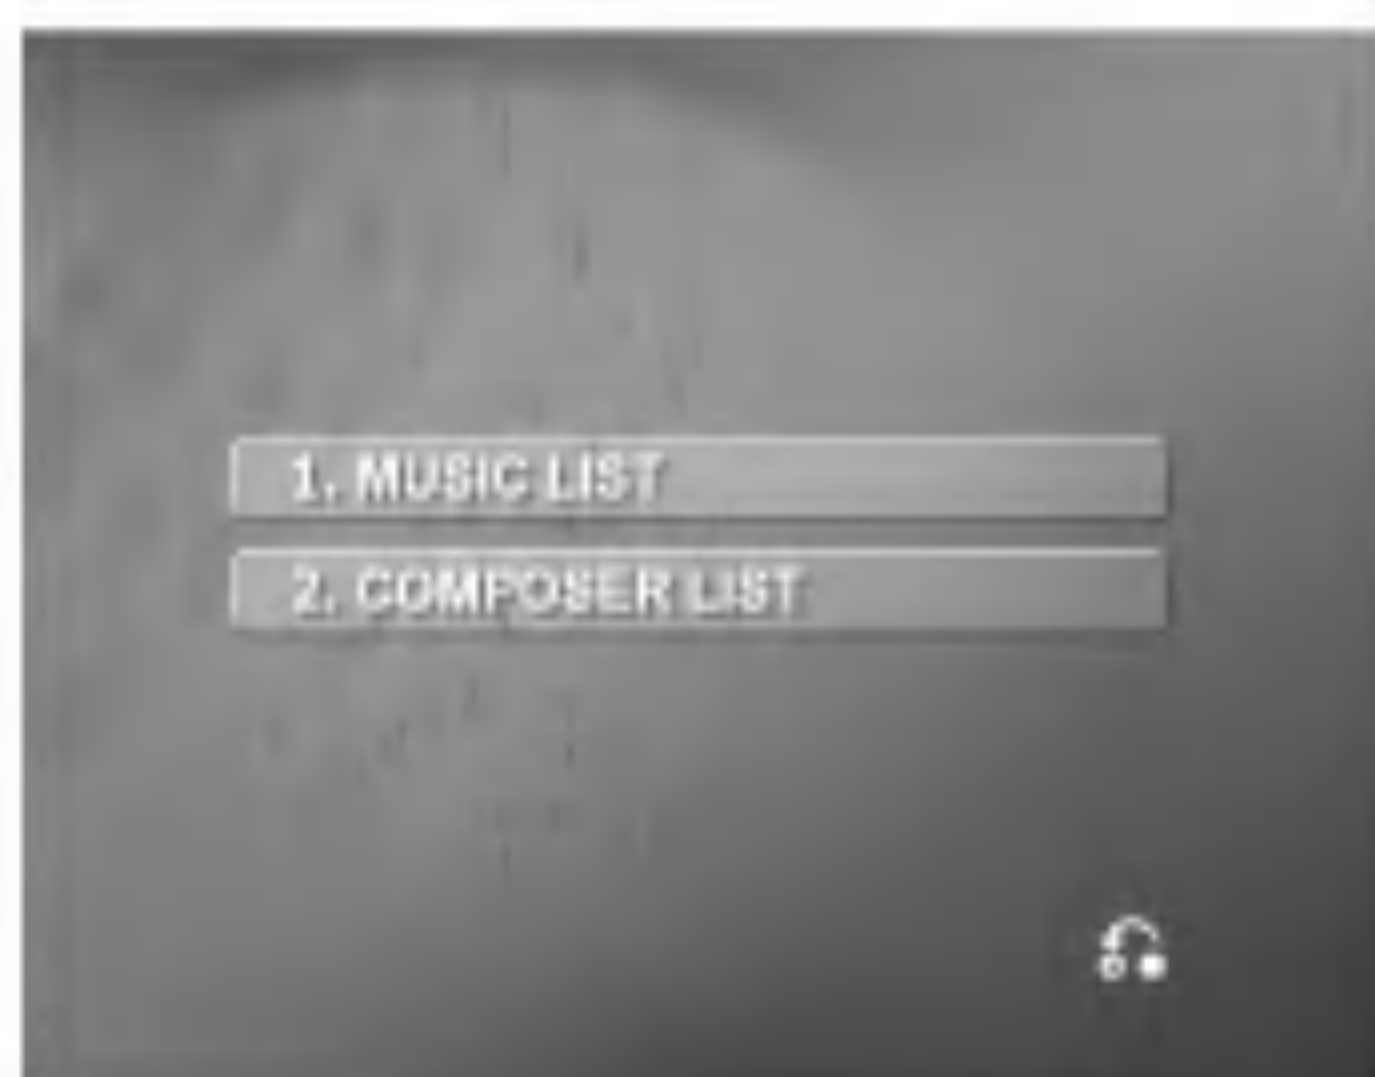


MUSIC LIST

- 1** Select “1. MUSIC LIST” and select the initial of the song title you want by pressing the / , then press SELECT/ ENTER.

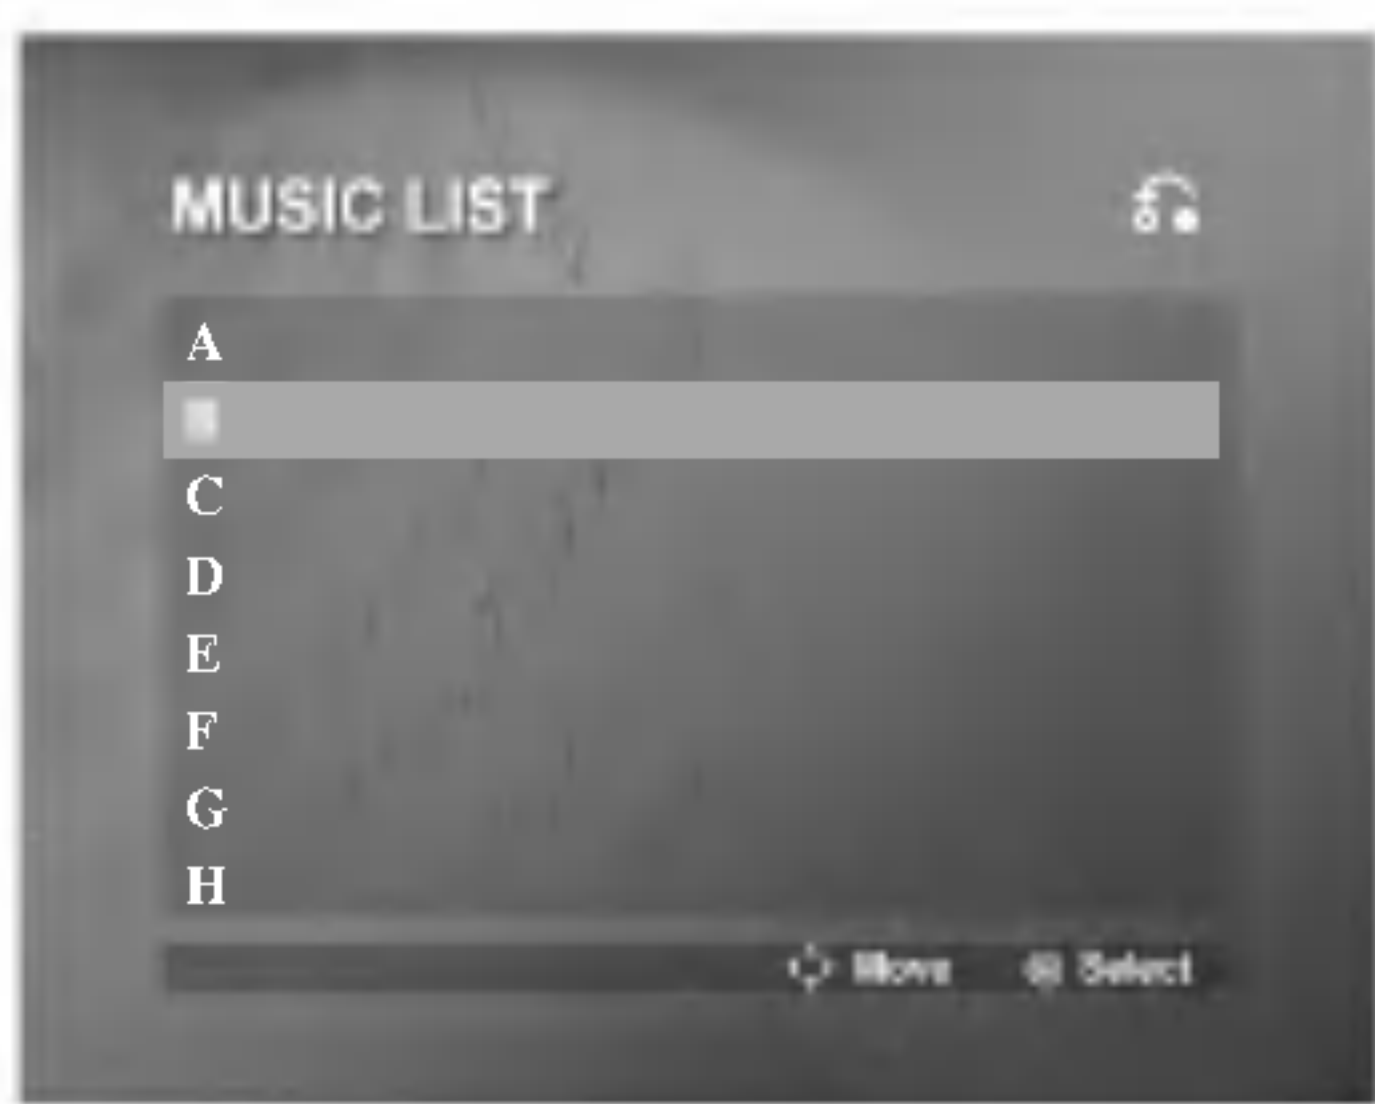


- 2** Select the song title you want by pressing the / , and press SELECT/ ENTER.

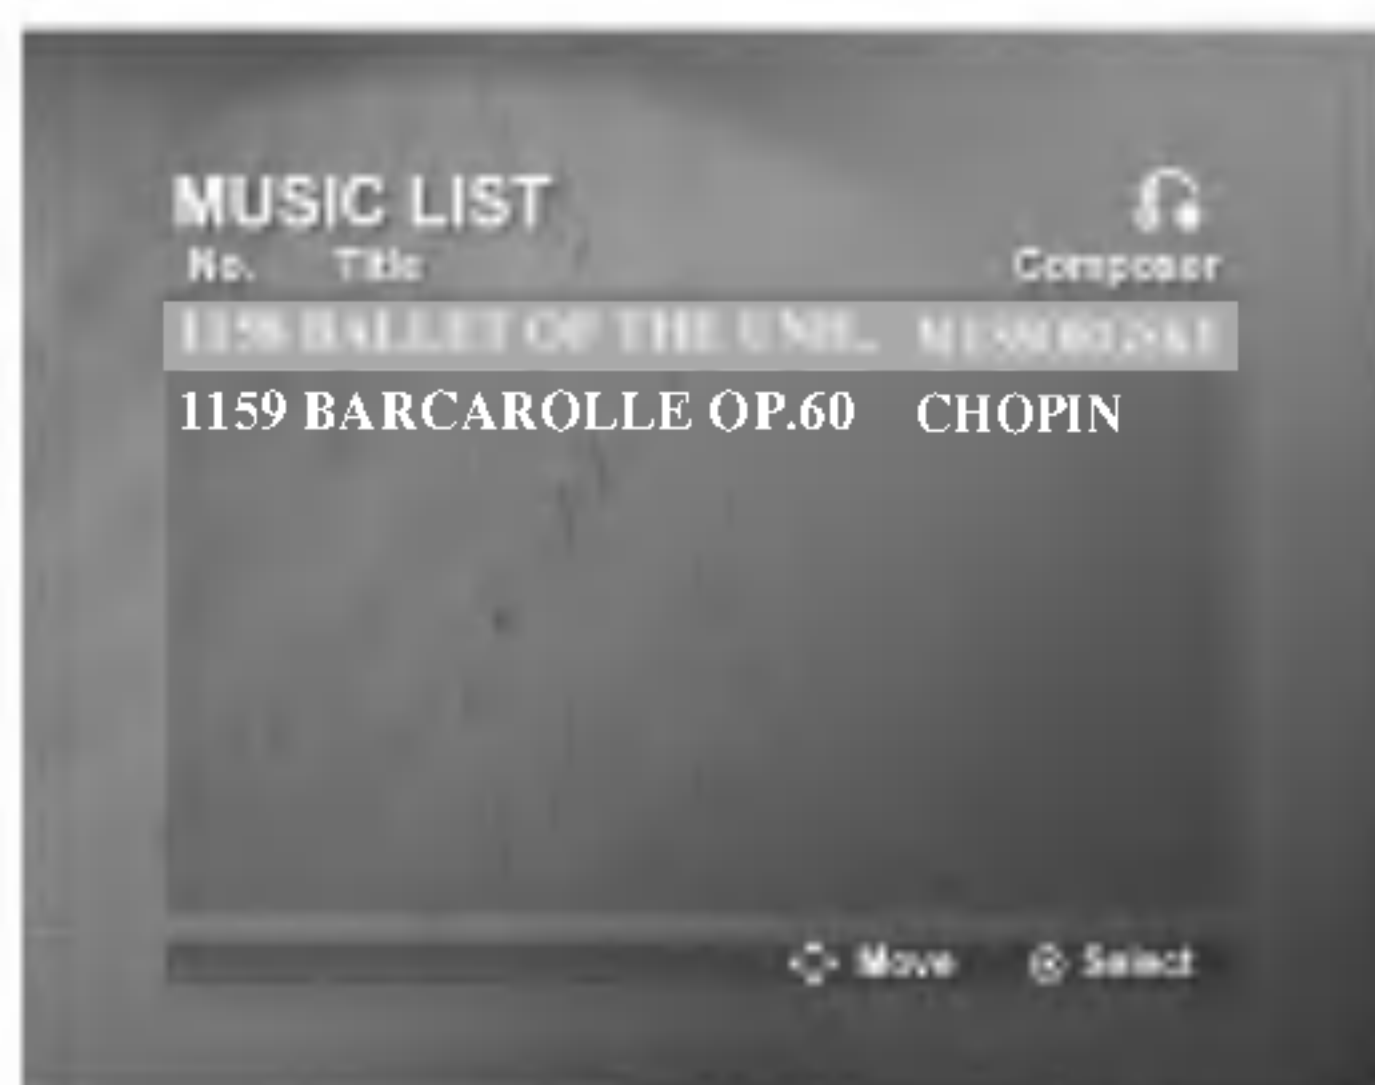


COMPOSER LIST

- 1** Select “2. COMPOSER LIST” and select the initial of the composer you want by pressing the / , then press SELECT/ ENTER.

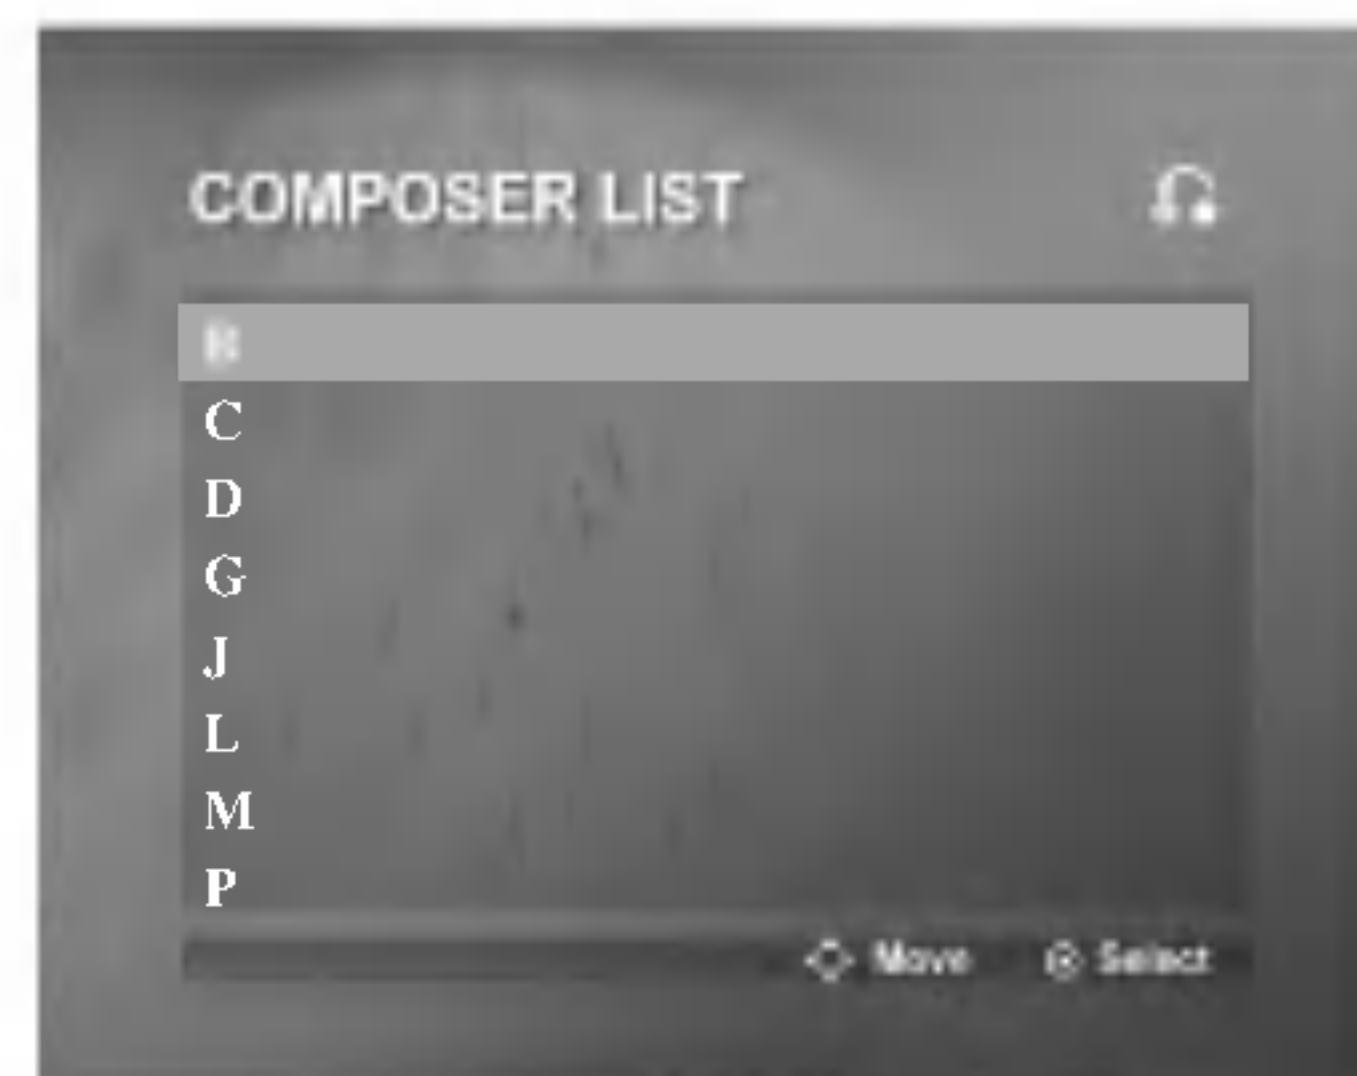

- 2** Select the composer you want by pressing the / , and press SELECT/ ENTER.

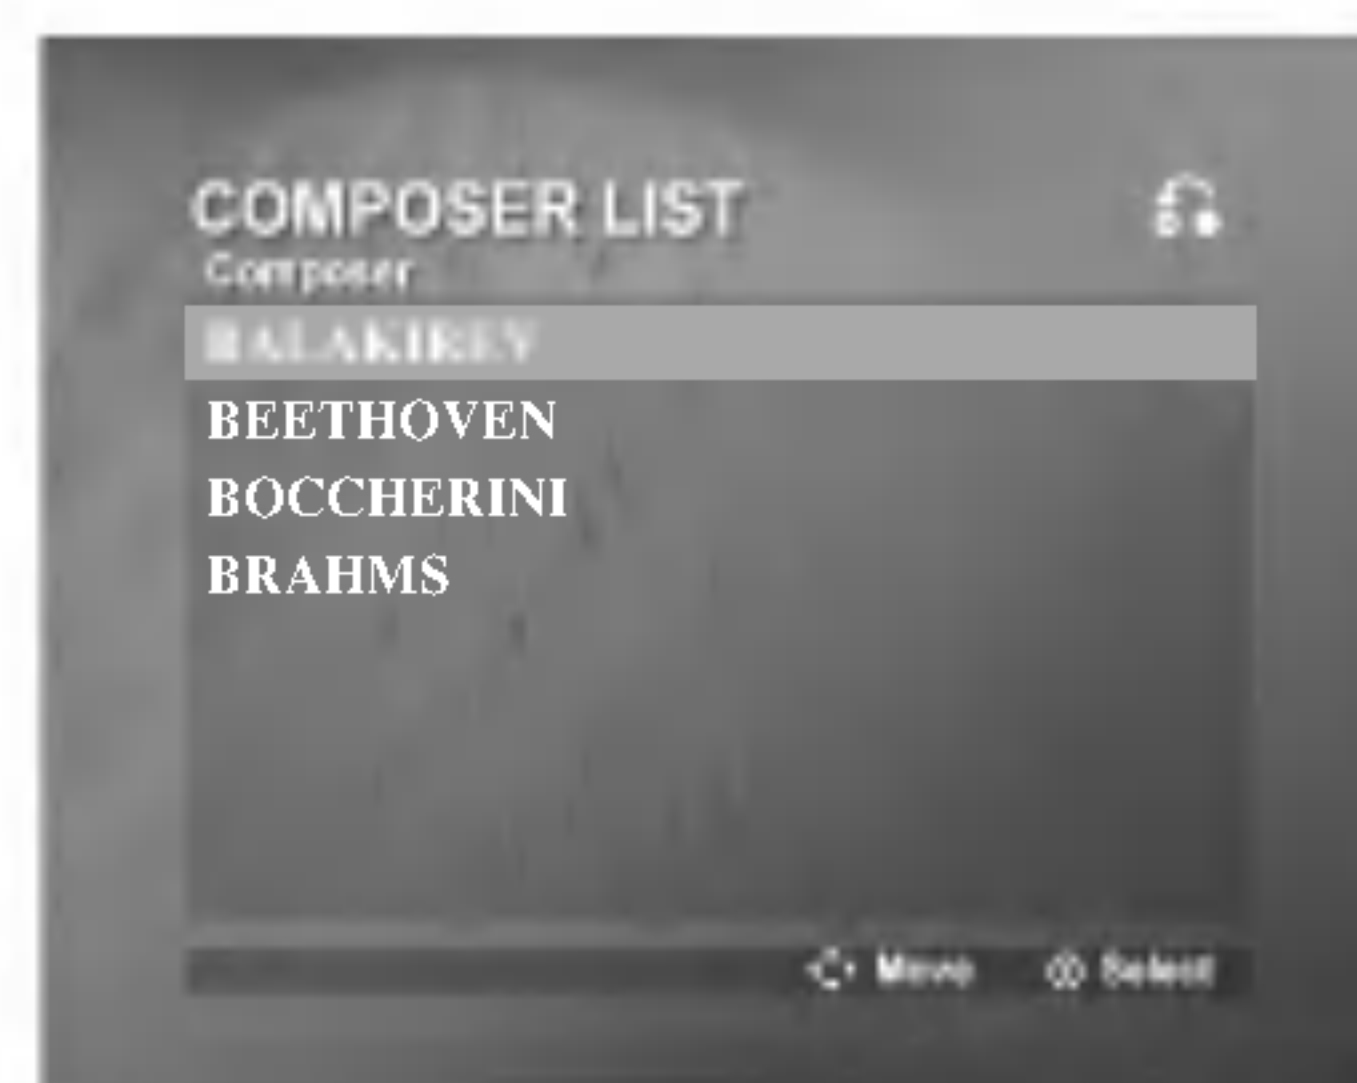

- 3** Select the song title of the composer you want by pressing the / , and press SELECT/ ENTER.



Note

To move the previous mode, select the by pressing the / , then press SELECT/ ENTER.

Operation with KARAOKE

RANDOM

- 1** Select “3. RANDOM” by pressing ▲ / ▼ on the main menu.



- 2** Press SELECT/ENTER to begin randomly.

CHALLENGE

It has a function which enjoy a song game dividing by two teams of red team & blue team.

- 1** Select “4. CHALLENGE” by pressing ▲ / ▼ on the main menu.
It appears as below.



- 2** Select “SET NUMBER TO WIN” by pressing ▲ / ▼, and select one of NUMERIC buttons 1~9 by pressing ◀ / ▶ to select winner's number, then press SELECT/ ENTER.

- 3** Select “CHALLENGE SCORE” by pressing ▲ / ▼, and select one of 60,70,80 or 90 by pressing ◀ / ▶ to select success score, then press SELECT/ ENTER.

- 4** Select “START” by pressing ▲ / ▼, then press SELECT/ ENTER.
It appears as below.



- 5** Select number you want by pressing ▲ / ▼ and press SELECT/ ENTER.
Sing along with the accompaniment.

- 6** Repeat step 4~5.
Change the team of red team or blue team alternately.

- 7** When reaching the targeted winning number, the “CONGRATULATION!” will be shown on the TV screen.
It appears as below.



- 8** Whether you keep going the song game or not, select “1. YES” or “2.NO” by pressing ▲ / ▼ as below.



Troubleshooting

Check the following guide for the possible cause of a problem before contacting service.

Symptom	Cause	Correction
No power.	The power cord is disconnected.	Plug the power cord into the wall outlet securely.
The power is on, but the unit does not work.	No disc is inserted.	Insert a disc. (Check that the DVD or, audio CD indicator in the DVD display is lit.)
No picture.	The TV is not set to receive DVD signal output.	Select the appropriate video input mode on the TV so the picture from the unit appears on the TV screen.
	The video cable is not connected securely.	Connect the video cable into the jacks securely.
	The connected TV power is turned off.	Turn on the TV.
There is no sound or only a very low-level sound is heard.	The equipment connected with the audio cable is not set to receive DVD signal output.	Select the correct input mode of the audio so you can listen to the sound from the unit.
	The audio cables are not connected securely.	Connect the audio cable into the jacks securely.
	The power of the equipment connected with the audio cable is turned off.	Turn on the equipment connected with the audio cable.
	The audio connecting cord is damaged.	Replace it with new one.
The playback picture is poor.	The disc is dirty.	Clean the disc.
The unit does not start playback.	No disc is inserted.	Insert a disc. (Check that the DVD, or audio CD indicator in the DVD display is lit.)
	An unplayable disc is inserted.	Insert a playable disc. (Check the disc type, color system and Regional code.)
	The disc is placed upside down.	Place the disc with the playback side down.
	The disc is not placed within the guide.	Place the disc on the disc tray correctly inside the guide.
	The disc is dirty.	Clean the disc.
	A menu is on the TV screen.	Press the SET-UP button to turn off the menu screen.
	The Rating level is set.	Cancel the Rating function or change the rating level.
Severe hum or noise is heard.	The plugs and jacks are dirty.	Wipe them with a cloth slightly moistened with alcohol.
	The disc is dirty.	Clean the disc.
	The speakers and components are connected poorly.	Connect the speakers and components securely.
	The unit is located with too close to the TV.	Move your TV away from the audio components.
Radio stations cannot be tuned in.	The antenna is positioned or connected poorly.	- Connect the antenna securely. - Adjust the antennas and connect an external antenna if necessary.
	The signal strength of the stations is too weak (when tuning in with automatic tuning).	Tune in the station manually.
	No stations have been preset or preset stations have been cleared (when tuning by scanning preset stations).	Preset the stations.
The remote control does not work properly.	The remote control is not pointed at the remote sensor of the unit.	Point the remote control at the remote sensor of the unit.
	The remote control is too far from the unit.	Operate the remote control within about 23 ft (7 m).
	There is an obstacle in the path of the remote control and the unit.	Remove the obstacle.
	The batteries in the remote control are exhausted.	Replace the batteries with new ones.

Language Code List

Enter the appropriate code number for the initial settings “Disc Audio”, “Disc Subtitle” and/or “Disc Menu” (See page 18).

Code	Language	Code	Language	Code	Language	Code	Language
6566	Abkhazian	7074	Fiji	7678	Lingala	8373	Singhalese
6565	Afar	7073	Finnish	7684	Lithuanian	8375	Slovak
6570	Afrikaans	7082	French	7775	Macedonian	8376	Slovenian
8381	Albanian	7089	Frisian	7771	Malagasy	8379	Somali
6577	Ameharic	7176	Galician	7783	Malay	6983	Spanish
6582	Arabic	7565	Georgian	7776	Malayalam	8385	Sudanese
7289	Armenian	6869	German	7784	Maltese	8387	Swahili
6583	Assamese	6976	Greek	7773	Maori	8386	Swedish
6588	Aymara	7576	Greenlandic	7782	Marathi	8476	Tagalog
6590	Azerbaijani	7178	Guarani	7779	Moldavian	8471	Tajik
6665	Bashkir	7185	Gujarati	7778	Mongolian	8465	Tamil
6985	Basque	7265	Hausa	7865	Nauru	8484	Tatar
6678	Bengali; Bangla	7387	Hebrew	7869	Nepali	8469	Telugu
6890	Bhutani	7273	Hindi	7879	Norwegian	8472	Thai
6672	Bihari	7285	Hungarian	7982	Oriya	6679	Tibetan
6682	Breton	7383	Icelandic	8065	Panjabi	8473	Tigrinya
6671	Bulgarian	7378	Indonesian	8083	Pashto, Pushto	8479	Tonga
7789	Burmese	7365	Interlingua	7065	Persian	8482	Turkish
6669	Byelorussian	7165	Irish	8076	Polish	8475	Turkmen
7577	Cambodian	7384	Italian	8084	Portuguese	8487	Twi
6765	Catalan	7465	Japanese	8185	Quechua	8575	Ukrainian
9072	Chinese	7487	Javanese	8277	Rhaeto-Romance	8582	Urdu
6779	Corsican	7578	Kannada	8279	Rumanian	8590	Uzbek
7282	Croatian	7583	Kashmiri	8285	Russian	8673	Vietnamese
6783	Czech	7575	Kazakh	8377	Samoan	8679	Volapük
6865	Danish	7589	Kirghiz	8365	Sanskrit	6789	Welsh
7876	Dutch	7579	Korean	7168	Scots Gaelic	8779	Wolof
6978	English	7585	Kurdish	8382	Serbian	8872	Xhosa
6979	Esperanto	7679	Laothian	8372	Serbo-Croatian	7473	Yiddish
6984	Estonian	7665	Latin	8378	Shona	8979	Yoruba
7079	Faroese	7686	Latvian, Lettish	8368	Sindhi	9085	Zulu

Country Code List

Enter the appropriate code number for the initial setting “Country Code” (See page 22).

Code	Country	Code	Country	Code	Country	Code	Country
AD	Andorra	ER	Eritrea	LC	Saint Lucia	SC	Seychelles
AE	United Arab Emirates	ES	Spain	LI	Liechtenstein	SD	Sudan
AF	Afghanistan	ET	Ethiopia	LK	Sri Lanka	SE	Sweden
AG	Antigua and Barbuda	FI	Finland	LR	Liberia	SG	Singapore
AI	Anguilla	FJ	Fiji	LS	Lesotho	SH	Saint Helena
AL	Albania	FK	Falkland Islands	LT	Lithuania	SI	Slovenia
AM	Armenia	FM	Micronesia	LU	Luxembourg	SJ	Svalbard and Jan Mayen Islands
AN	Netherlands Antilles	FO	Faroe Islands	LV	Latvia	SK	Slovak Republic
AO	Angola	FR	France	LY	Libya	SL	Sierra Leone
AQ	Antarctica	FX	France (European Territory)	MA	Morocco	SM	San Marino
AR	Argentina			MC	Monaco	SN	Senegal
AS	American Samoa	GA	Gabon	MD	Moldavia	SO	Somalia
AT	Austria	GB	Great Britain	MG	Madagascar	SR	Suriname
AU	Australia	GD	Grenada	MH	Marshall Islands	ST	Saint Tome and Principe
AW	Aruba	GE	Georgia	MK	Macedonia	SU	Former USSR
AZ	Azerbaijan	GF	French Guyana	ML	Mali	SV	El Salvador
BA	Bosnia-Herzegovina	GH	Ghana	MM	Myanmar	SY	Syria
BB	Barbados	GI	Gibraltar	MN	Mongolia	SZ	Swaziland
BD	Bangladesh	GL	Greenland	MO	Macau	TC	Turks and Caicos Islands
BE	Belgium	GM	Gambia	MP	Northern Mariana Islands	TD	Chad
BF	Burkina Faso	GN	Guinea	MQ	Martinique (French)	TF	French Southern Territories
BG	Bulgaria	GP	Guadeloupe (French)	MR	Mauritania		
BH	Bahrain	GQ	Equatorial Guinea	MS	Montserrat	TG	Togo
BI	Burundi	GR	Greece	MT	Malta	TH	Thailand
BJ	Benin	GS	S. Georgia & S. Sandwich Isls.	MU	Mauritius	TJ	Tadjikistan
BM	Bermuda			MV	Maldives	TK	Tokelau
BN	Brunei Darussalam	GT	Guatemala	MW	Malawi	TM	Turkmenistan
BO	Bolivia	GU	Guam (USA)	MX	Mexico	TN	Tunisia
BR	Brazil	GW	Guinea Bissau	MY	Malaysia	TO	Tonga
BS	Bahamas	GY	Guyana	MZ	Mozambique	TP	East Timor
BT	Bhutan	HK	Hong Kong	NA	Namibia	TR	Turkey
BV	Bouvet Island	HM	Heard and McDonald Islands	NC	New Caledonia (French)	TT	Trinidad and Tobago
BW	Botswana			NE	Niger	TV	Tuvalu
BY	Belarus	HN	Honduras	NF	Norfolk Island	TW	Taiwan
BZ	Belize	HR	Croatia	NG	Nigeria	TZ	Tanzania
CA	Canada	HT	Haiti	NI	Nicaragua	UA	Ukraine
CC	Cocos (Keeling) Islands	HU	Hungary	NL	Netherlands	UG	Uganda
CF	Central African Republic	ID	Indonesia	NO	Norway	UK	United Kingdom
CG	Congo	IE	Ireland	NP	Nepal	UM	USA Minor Outlying Islands
CH	Switzerland	IL	Israel	NR	Nauru		
CI	Ivory Coast	IN	India	NU	Niue	US	United States
CK	Cook Islands	IO	British Indian Ocean Territory	NZ	New Zealand	UY	Uruguay
CL	Chile			OM	Oman	UZ	Uzbekistan
CM	Cameroon	IQ	Iraq	PA	Panama	VA	Vatican City State
CN	China	IR	Iran	PE	Peru	VC	Saint Vincent & Grenadines
CO	Colombia	IS	Iceland	PF	Polynesia (French)		
CR	Costa Rica	IT	Italy	PG	Papua New Guinea	VE	Venezuela
CS	Former Czechoslovakia	JM	Jamaica	PH	Philippines	VG	Virgin Islands (British)
CU	Cuba	JO	Jordan	PK	Pakistan	VI	Virgin Islands (USA)
CV	Cape Verde	JP	Japan	PL	Poland	VN	Vietnam
CX	Christmas Island	KE	Kenya	PM	Saint Pierre and Miquelon	VU	Vanuatu
CY	Cyprus	KG	Kyrgyzstan	PN	Pitcairn Island	WF	Wallis and Futuna Islands
CZ	Czech Republic	KH	Cambodia	PR	Puerto Rico	WS	Samoa
DE	Germany	KI	Kiribati	PT	Portugal	YE	Yemen
DJ	Djibouti	KM	Comoros	PW	Palau	YT	Mayotte
DK	Denmark	KN	Saint Kitts & Nevis Anguilla	PY	Paraguay	YU	Yugoslavia
DM	Dominica	KP	North Korea	QA	Qatar	ZA	South Africa
DO	Dominican Republic	KR	South Korea	RE	Reunion (French)	ZM	Zambia
DZ	Algeria	KW	Kuwait	RO	Romania	ZR	Zaire
EC	Ecuador	KY	Cayman Islands	RU	Russian Federation	ZW	Zimbabwe
EE	Estonia	KZ	Kazakhstan	RW	Rwanda		
EG	Egypt	LA	Laos	SA	Saudi Arabia		
EH	Western Sahara	LB	Lebanon	SB	Solomon Islands		

Specifications

General Section

Power supply	Refer to the main label.
Power consumption	120W
Mass	10.0kg
External dimensions (W x H x D)	273 x 326 x 359 mm

Tuner/Amplifier Section

FM	Tuning Range	87.5 - 108.0 MHz or 65 -74 MHz, 87.5 -108.0 MHz
	Intermediate Frequency	10.7 MHz
	Signal to Noise Ratio	60/55 dB (Mono/Stereo)
	Frequency Response	60 - 10000 Hz
AM	Tuning Range	522 - 1611 kHz or 530 - 1610 kHz or 530 - 1720 kHz
	Intermediate Frequency	450 kHz
	Signal to Noise Ratio	35 dB
	Frequency Response	100 - 1800 Hz
	Output Power	50W + 50W (6Ω, THD 10 %)
	T.H.D	0.2%
	Frequency Response	50 - 25000 Hz
	Signal-to-noise ratio	80 dB

Cassette tape player/DVD/VCD/CD player Section

DVD/VCD/CD player

Frequency response (audio)	100 - 18000 Hz
Signal-to-noise ratio (audio)	More than 70 dB (1 kHz)
Signal-to-noise ratio (video)	More than 60 dB (1 kHz)
Dynamic range (audio)	More than 70 dB
Video output	1.0 V (p-p), 75 Ω
S-video output	(Y) 1.0 V (p-p), 75 Ω (C) 0.3 V (p-p), 75 Ω
Component Video output	(Y) 1.0 V (p-p), 75 Ω, negative sync., RCA jack x 1 (Pb)/(Pr) 0.7 V (p-p), 75 Ω, RCA jack x 2

Cassette tape player

Tape Speed	3 kHz ± 50 Hz
Wow Flutter	0.25% (MTT -111, JIS-WTD)
F.F/REW. Time	120sec (C-60)
Frequency Response	125 - 8000Hz
Signal to Noise Ratio	43dB(P/B)/43dB(R/B)
Channel Separation	45dB(P/B)/42dB(R/P)
Erase Ratio	52dB (MTT-5511)

Speaker Section

Speaker Name	Speaker (L/R)
Type	3 Way 3 Speaker
Impedance	6 Ω
Frequency Response	60 - 20000 Hz
Sound Pressure Level	84 dB/W (1m)
Rated Input Power	50 W
Max. Input Power	100 W
Net Dimensions (W x H x D)	230X325X310mm
Net Weight	5.1 kg



P/NO : 3834RH0079Z