



LG


Detachable Front Panel Car Receiver

OWNER'S MANUAL

MODEL: TCC-5710 TCC-5720


Take time to read this OWNER'S MANUAL thoroughly. Familiarity with installation and operating procedures will help you obtain the best performance from your CAR Receiver.

P/N:3834RR0001W

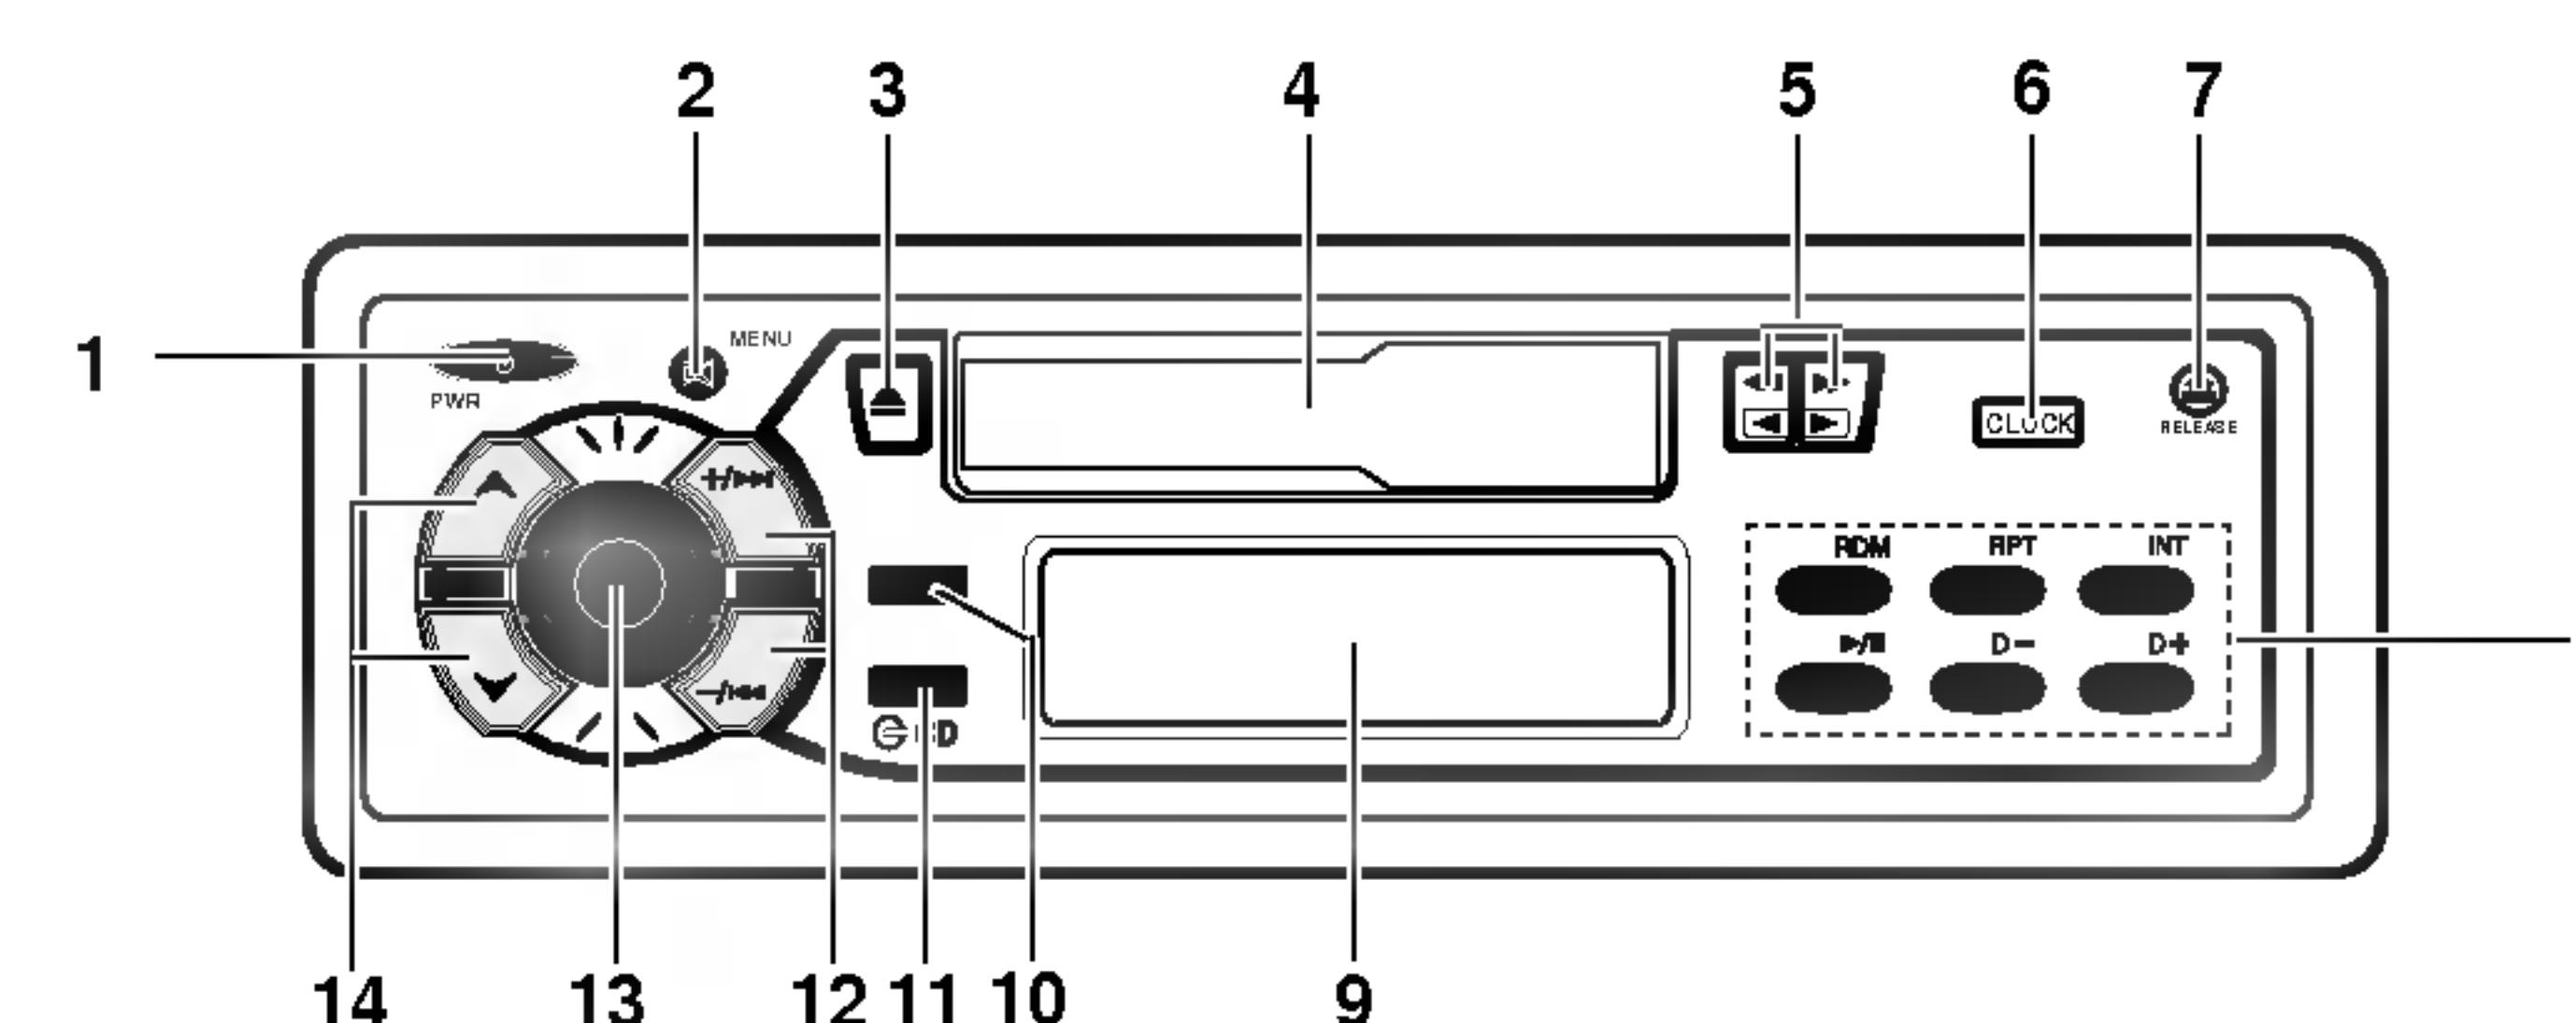

- ① POWER (PWR) Button
- ② MUTE Button
- ③ EJECT(▲) Button
- ④ CASSETTE Door
- ⑤ REW/FF(◀▶) Button [DIRECTION]
- ⑥ CLOCK Button
- ⑦ RELEASE Button
- ⑧ • PRESET Buttons (1-6)
- CD RANDOM (RDM) PLAY Button
- REPEAT (RPT) Button
- CD INTRO SCAN (INT) Button
- CD PLAY/PAUSE (▶/II) Button
- DISC (D -/+) Button
- ⑨ LCD Display
- ⑩ AS/PS Button
- ⑪ BAND/CD Button
- ⑫ TUNE +/- Button (◀▶) (CLOCK Adjust)
- ⑬ MD/LD Button
- ⑭ CONTROL UP/DOWN Button

- ① Press CLOCK button once momentarily to display the time.
- ② Press the CLOCK button 2 seconds, and clock indication will be displayed for 5 seconds. Adjust the clock within 5 seconds.
- ▶ Pressing TUNE + button adjusts the hour.
- ▶ Pressing TUNE - button adjusts the minute.

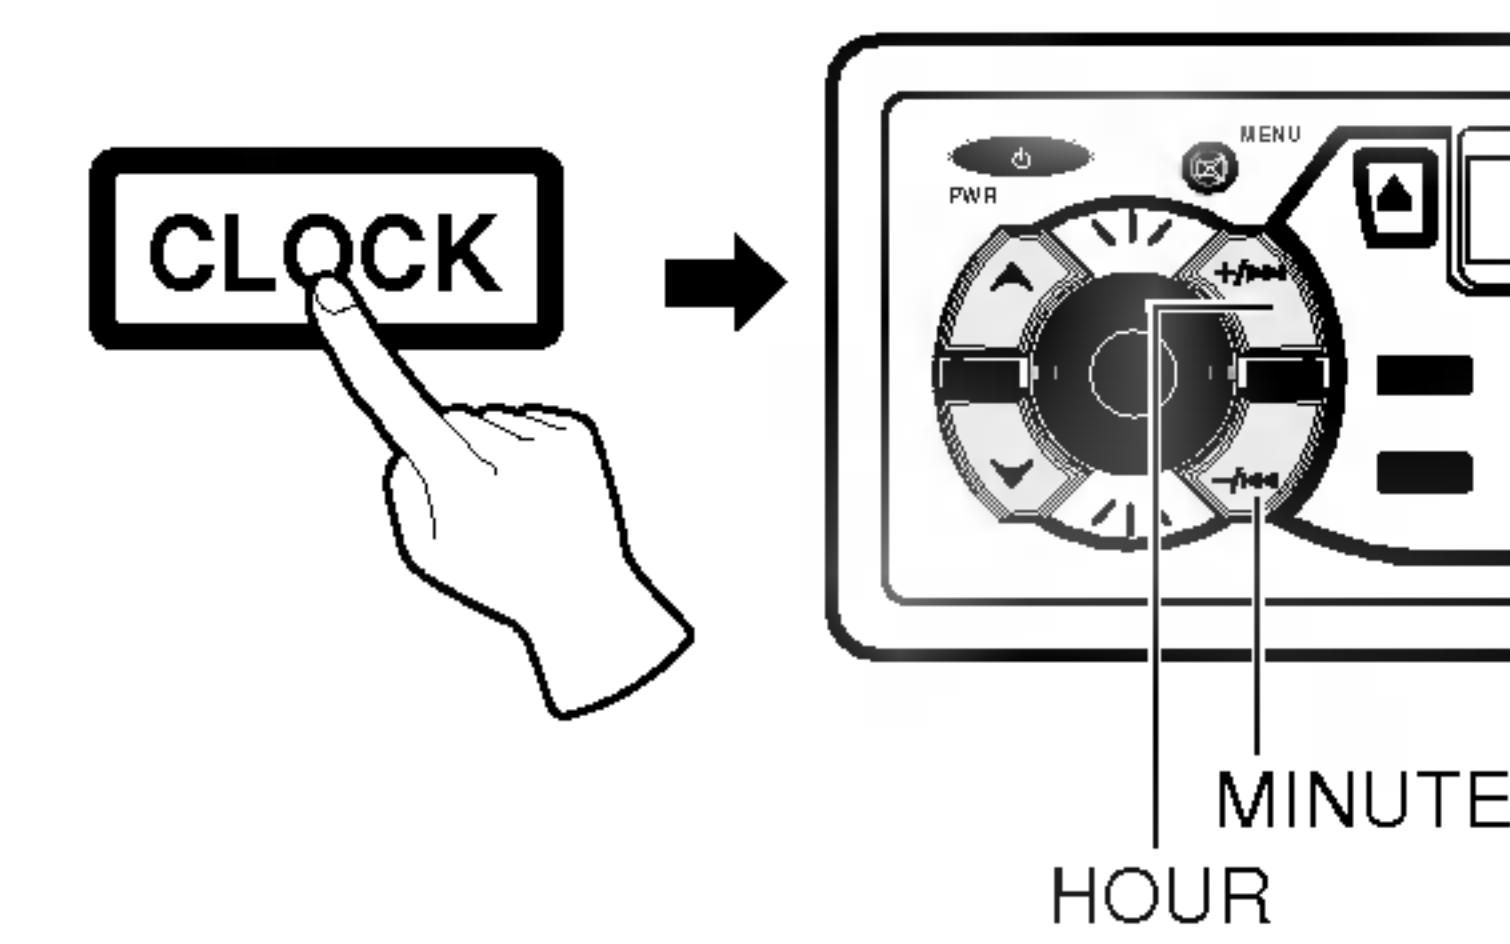

- ③ Press the CLOCK button, the display returns to the previous display after 5 seconds.

■ Power(PWR) Button

- ▶ Press PWR button or any other button to turn the unit on.
- ▶ Press PWR button again to turn it off.

Note:

When you press the PWR button for 2 seconds after setting the proper Volume level and notice your setting is memorized simultaneously. Whenever you turn on the unit, it will operate at the volume level memorized.

■ Mute Button

■ Loudness Function

Press the MD/LD button for more than 2 seconds, activates the loudness circuit which boosts to compensate the human ear's lack of sensitivity to bass at low levels.

■ MD/LD Button

Press the to change the control of volume, bass, treble, balance and fader.

■ CONTROL UP/DOWN Button

- ① After you have selected the proper mode by using the MD/LD button, control the desired function by pressing this buttons within 5 seconds. After you finish selecting modes, the unit returns to the initial mode.


- ② Operating display in all modes:
A numeric display is converted by pressing this buttons.

■ Precautions:

- ▶ Be careful not to touch the rear side panel of the unit when removing the unit from the installation sleeve, since it may be hot. On this side the cooling ribs are located.
- ▶ The unit is designed to operate only on 12 volt DC negative ground electrical system.
- ▶ When you replace the fuse, be sure to use a fuse of specified amperage for each wire as mentioned in chapter "Connections". Using a fuse of higher amperage may cause serious damage to the unit.

Notes:

- ▶ Use only the parts included with the unit to ensure proper installation. The use of unauthorized parts can cause malfunctions.
- ▶ Consult with your nearest car audio dealer if installation requires the drilling of holes or other modifications of the vehicle.
- ▶ Do not use the front panel as a way of gripping the unit during installation and wiring. The front panel may come away and the unit may drop on the floor.
- ▶ Periodically wipe the contacts on the back of the front panel with a cotton swap moistened with alcohol.

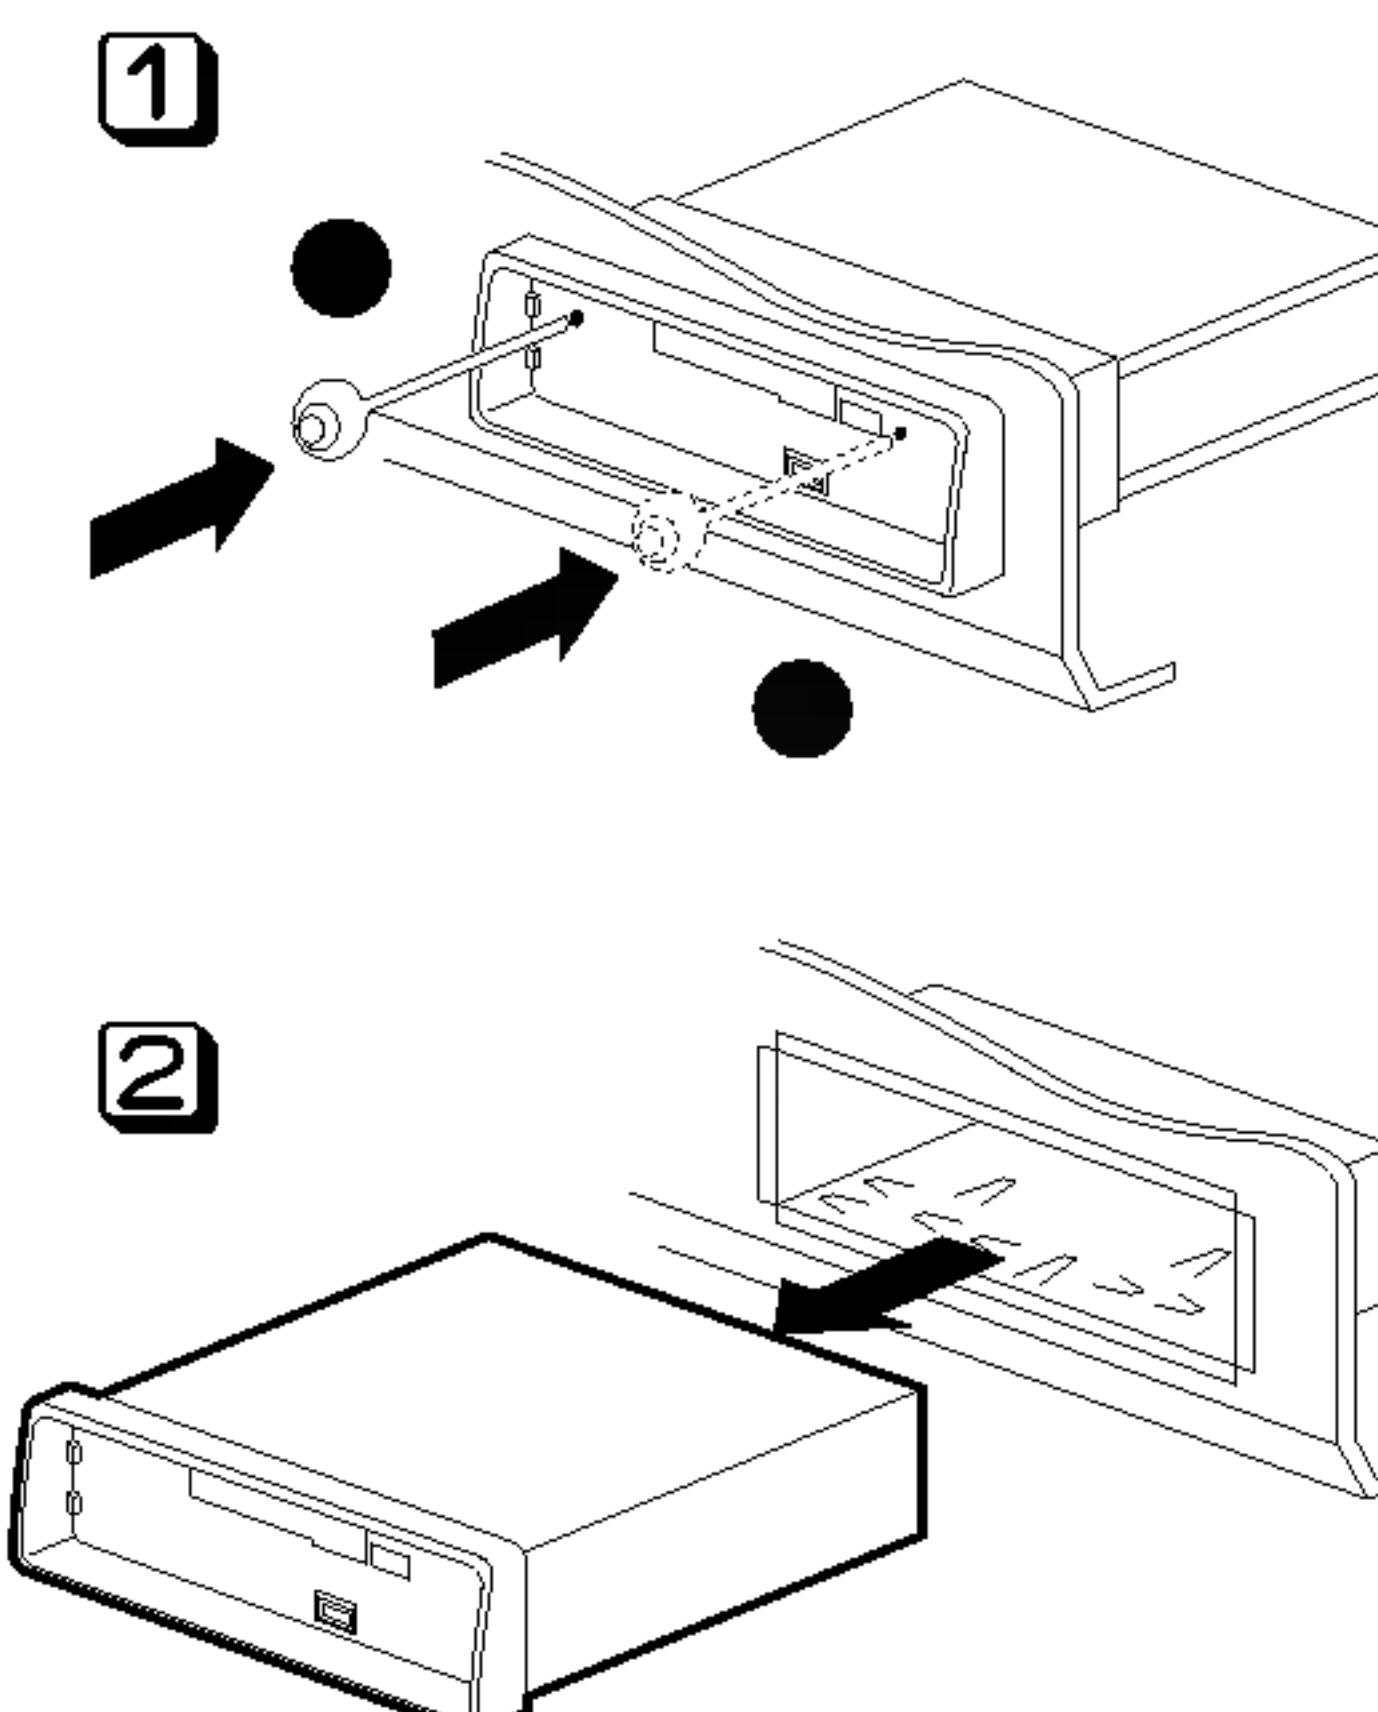

■ Main connector

Connect the main connector to the female connector on the back of the unit.


■ Antenna Connection

Insert the plug of the car antenna cable into the jack at the rear of the unit.

■ Ground Connection(Black)

- ▶ Connect the ground lead (black) to a metal part of the vehicle and secure it using the screw provided on the vehicle for this purpose.
- ▶ If this connection is loose, or if the cord is connected to something other than a metal part of the car, noise or malfunction may result.

■ Mounting the unit

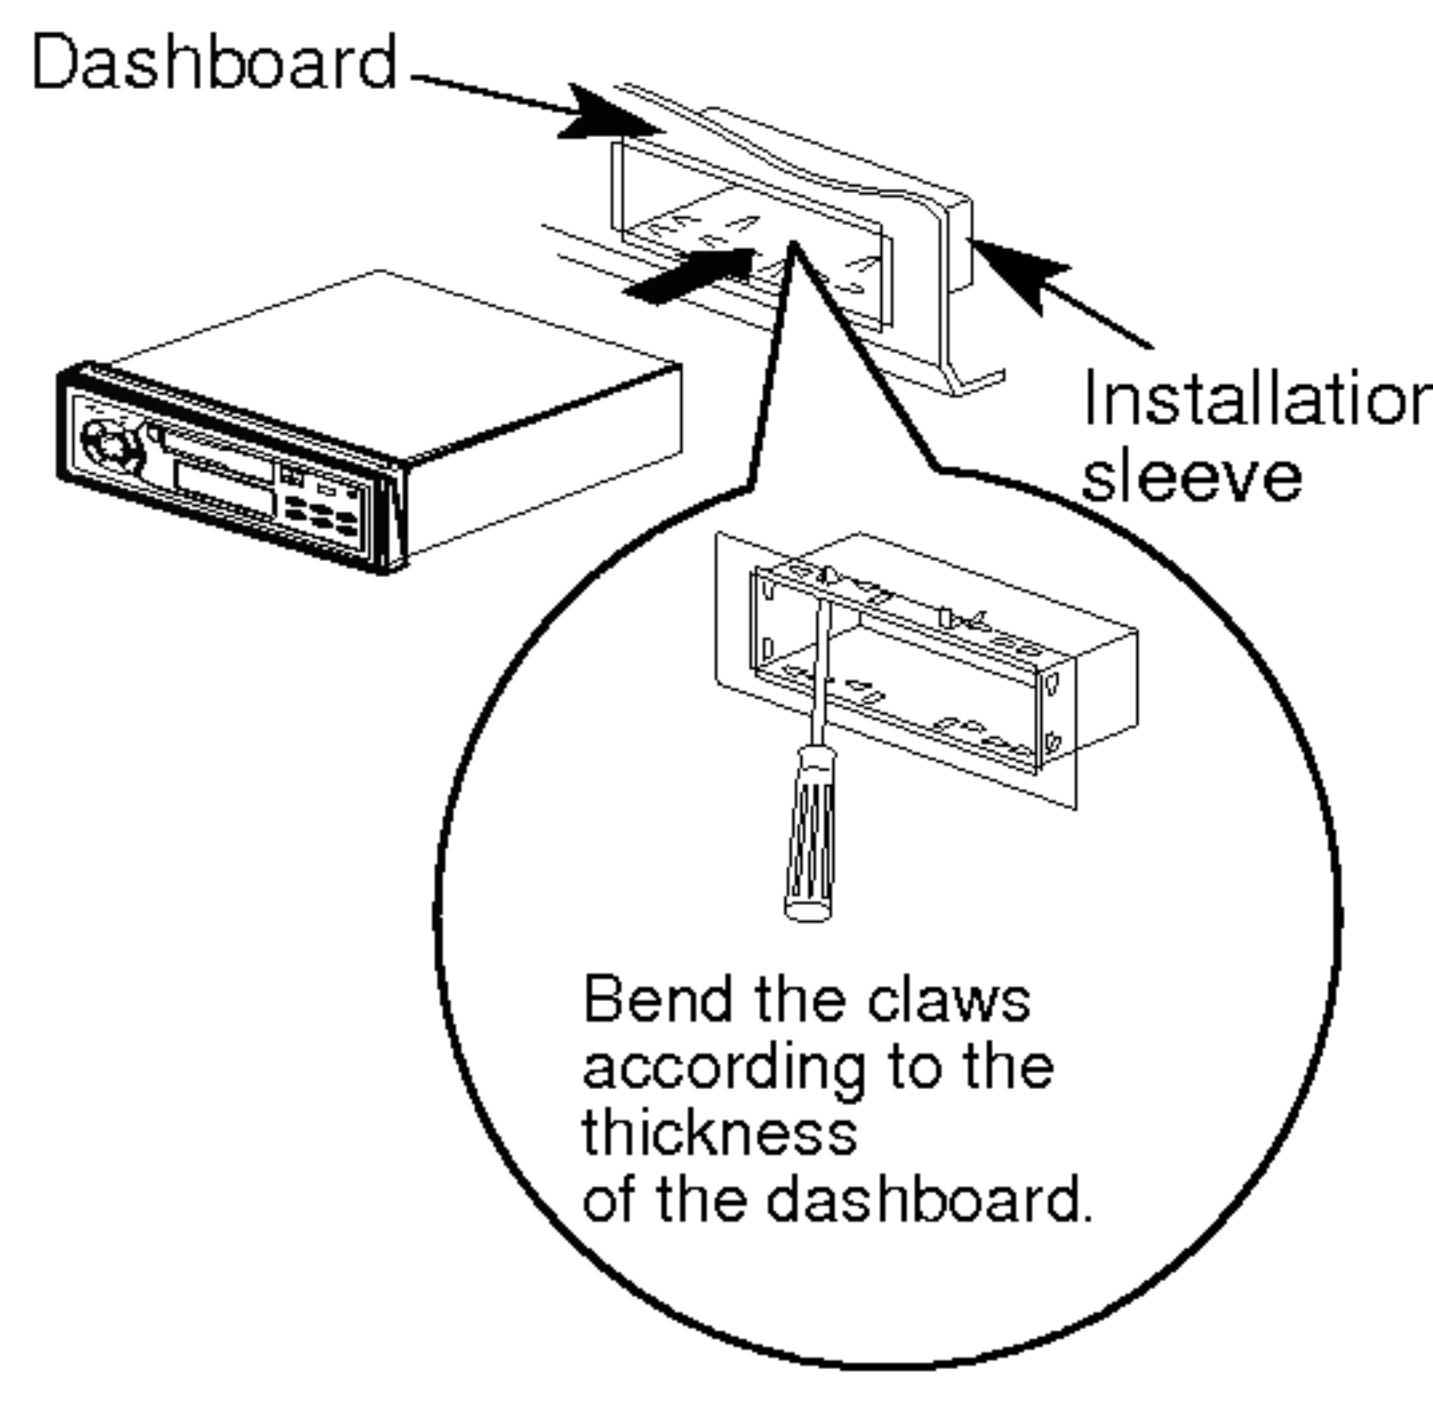

■ When removing the unit from the installation sleeve

If you need to remove the unit from the installation sleeve, proceed as follows.

- ① Remove the rear supporter from the unit.
- ② Remove the front panel from the unit.
- ③ Insert the lever into hole on one side of the unit, and pull the lever toward you. Do the same operation on the other side and pull out the unit from the installation sleeve.

■ Power Supply Lead (Red)

Connect the red power supply wire to the 12V + terminal controlled by the car ignition switch.

■ Memory Back-up Lead (Yellow)

Connect the yellow memory power supply wire to a 12V + terminal that is always supplied with power regardless of the vehicle's ignition switch position. If this connection is made incorrectly or is not made at all, the unit will not work.

■ Line Out Jacks(Optional)

Connect to the Line-in RCA jacks of the power amplifier.

■ Power Antenna Lead/External Amplifier Remote Turn-on Lead

Your will find a separate lead, blue with a male terminal suitable to many automatic antenna. This lead is not to be used with non-automatic antenna. If an automatic car antenna is used, when connecting the lead, the antenna will be automatically extended when the main switch is turned on. This can also be used as a remote turn-on wire connection for amplifiers that have a remote sensing lead. Using this connection will allow simultaneous turning on/off of the radio and an external amplifier.


■ Precautions

- ▶ Do not bring the connecting cords near parts whose temperature will rise when the vehicle is driven.
- ▶ Secure the connectors securely so that they are locked into position. Improper connection can result in noise or hamper operation.

This car receiver is not designed to utilize the vehicle's chassis as the electrical return path from the speaker to the radio. Always use two conductor wire between each speaker and your stereo unit.

■ 4-Speakers connection

Use 4~8 Ohm impedance speakers. Refer to the following connections diagram.

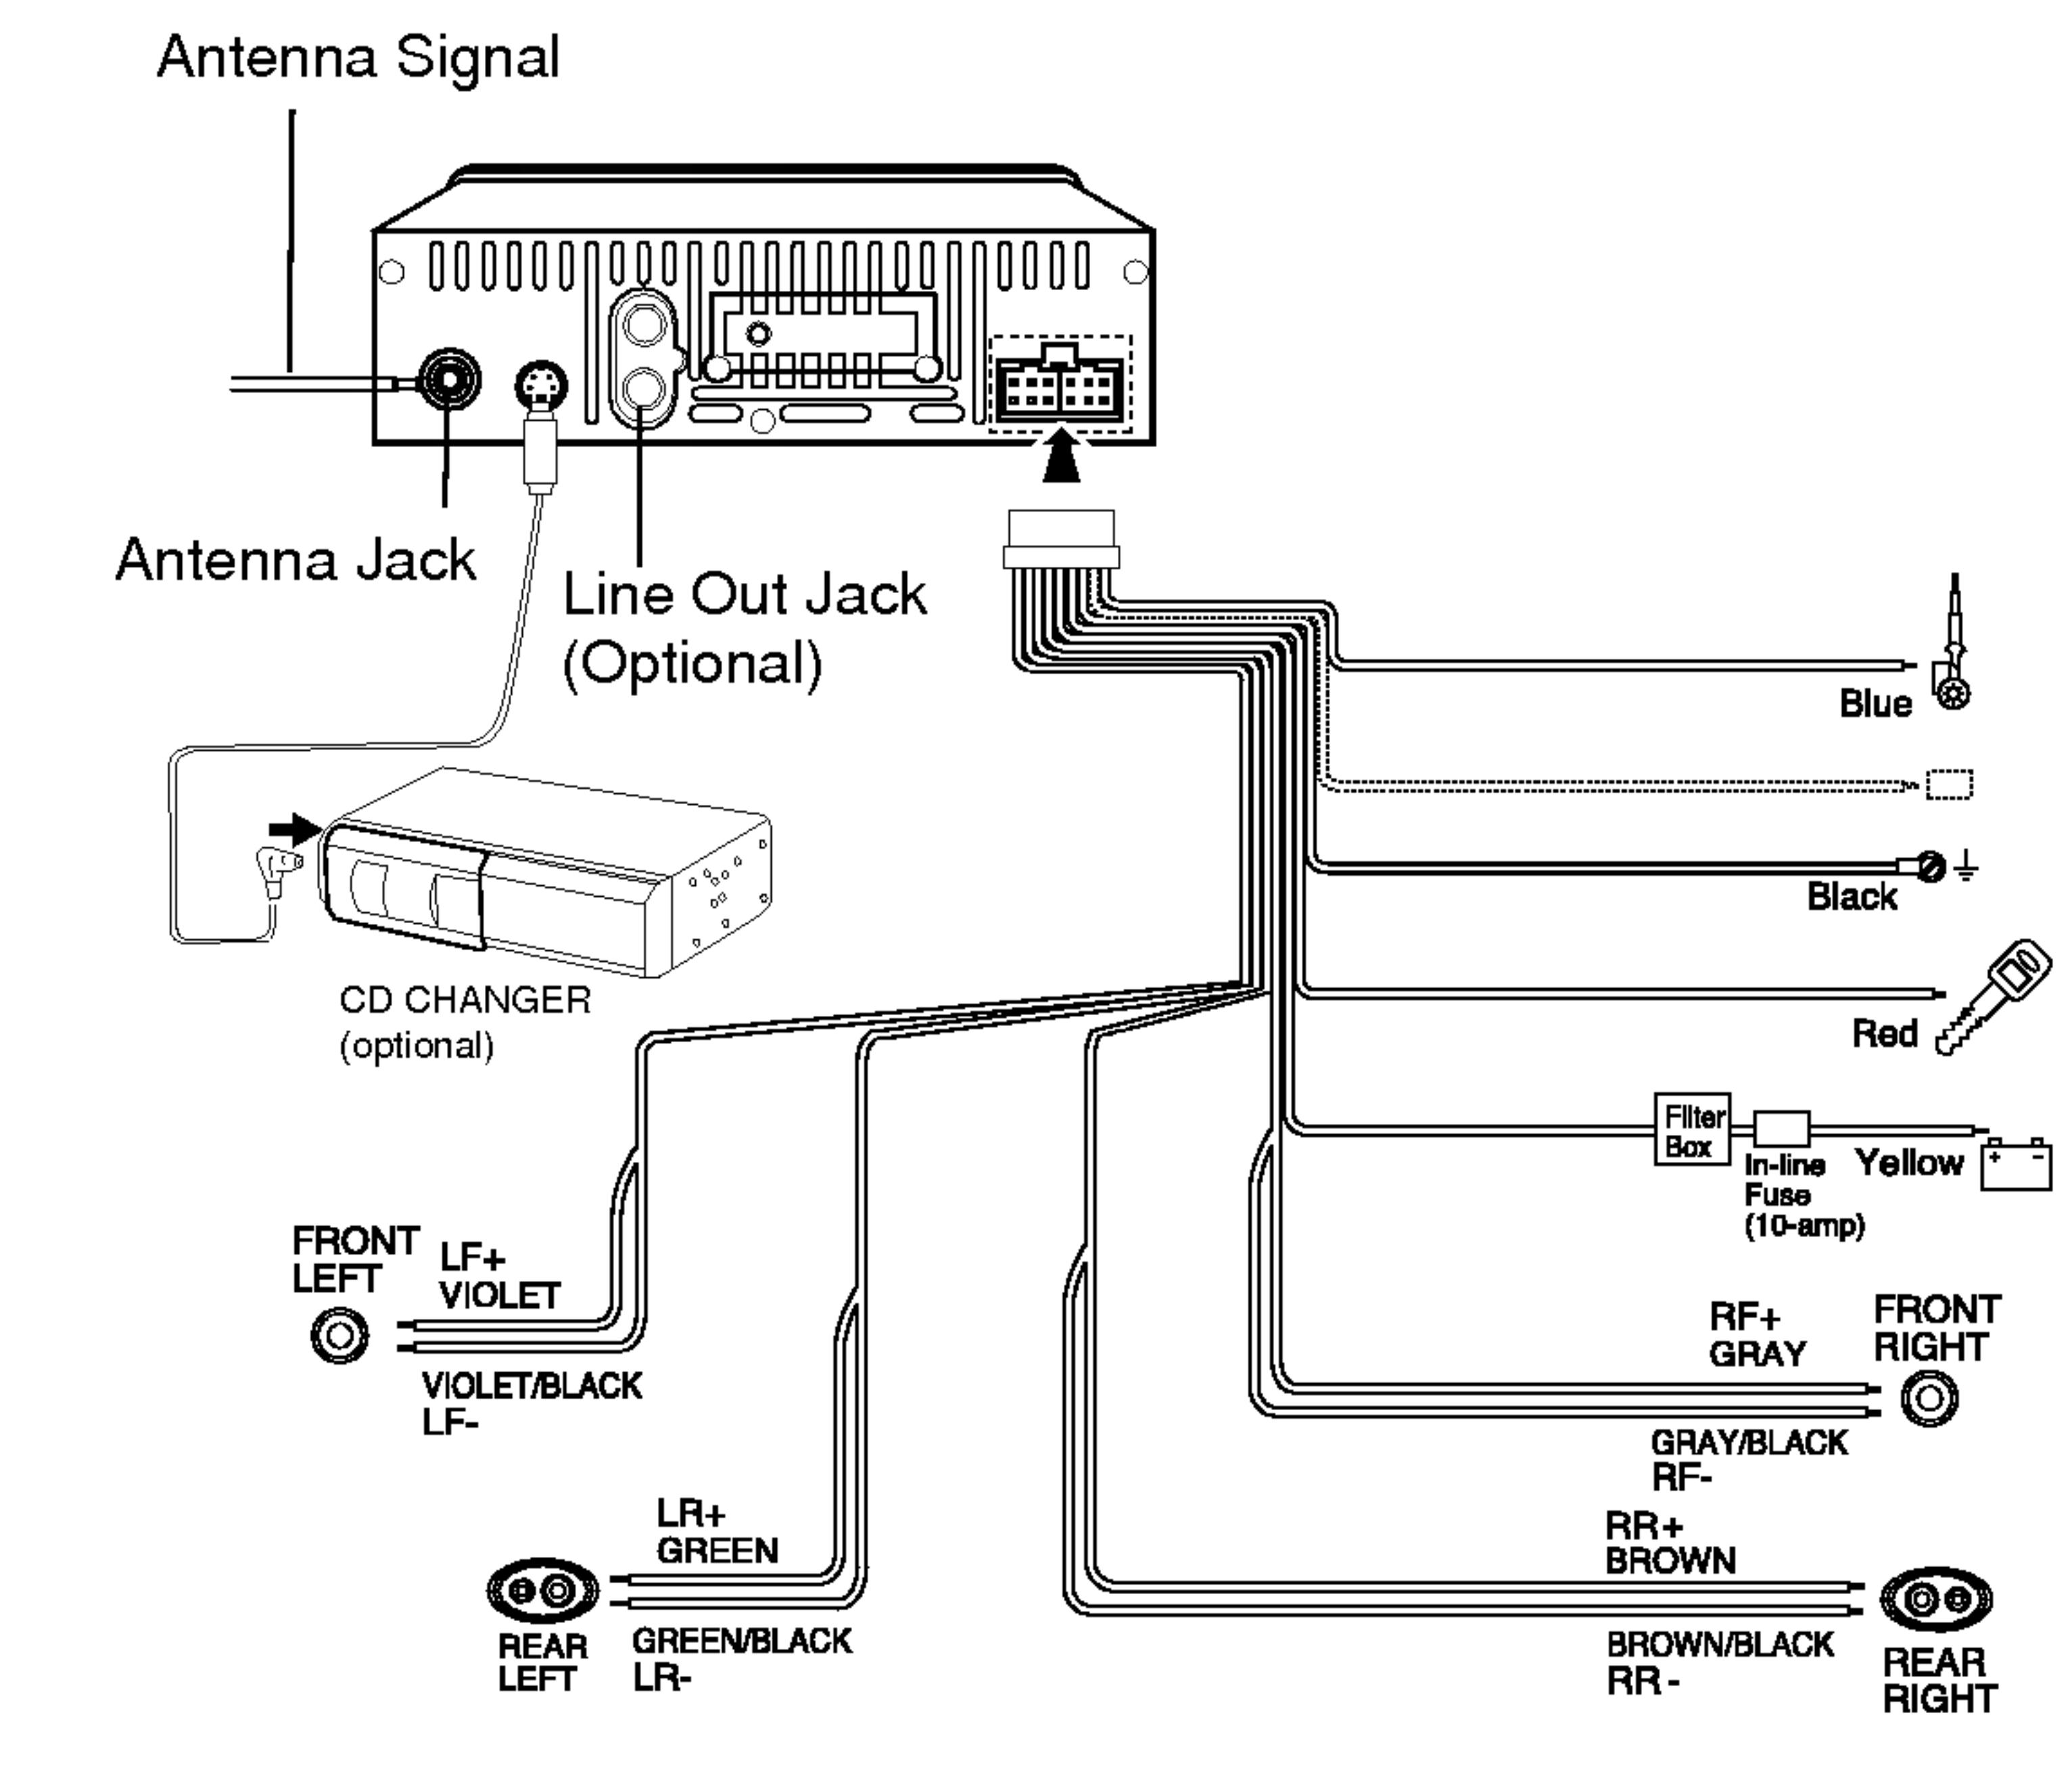


Front Panel Removal


The front panel of this unit can be detached to prevent theft.

■ Detaching the Front Panel


- Press the RELEASE button (▲) to release the detachable front panel.

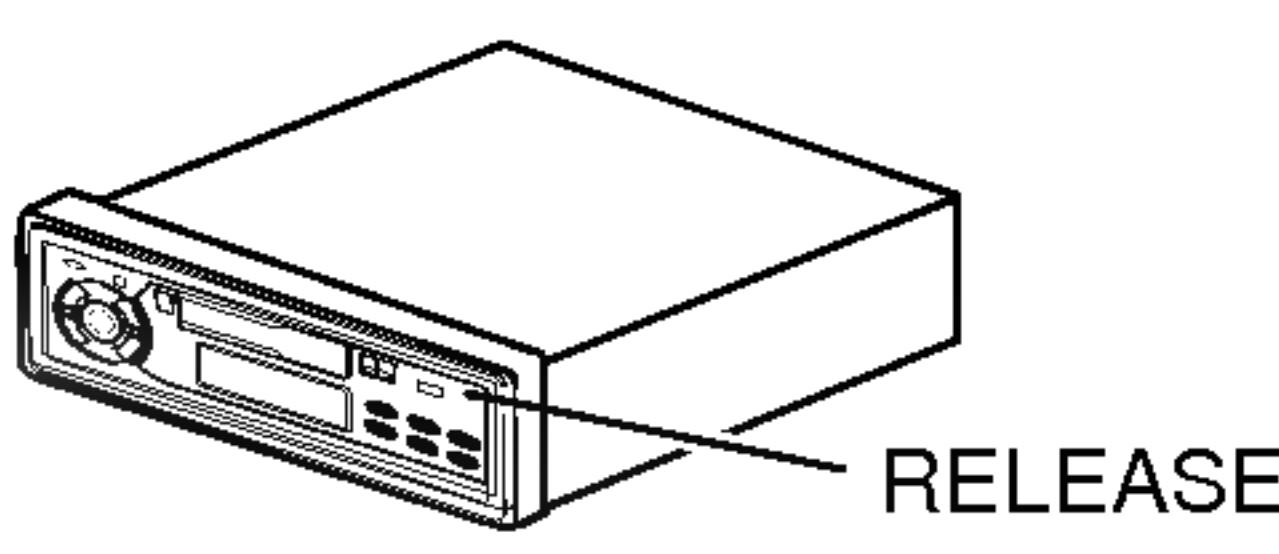

RELEASE
Button

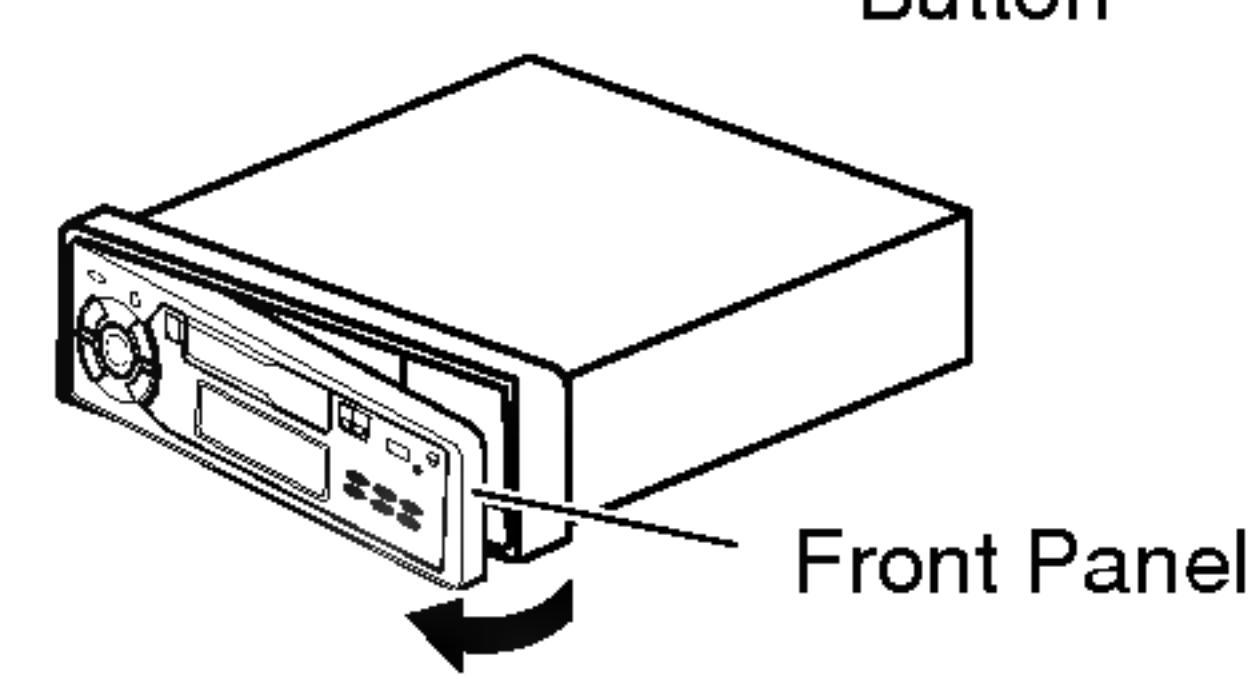


- Hold the right part of the front panel and pull it towards you gently.

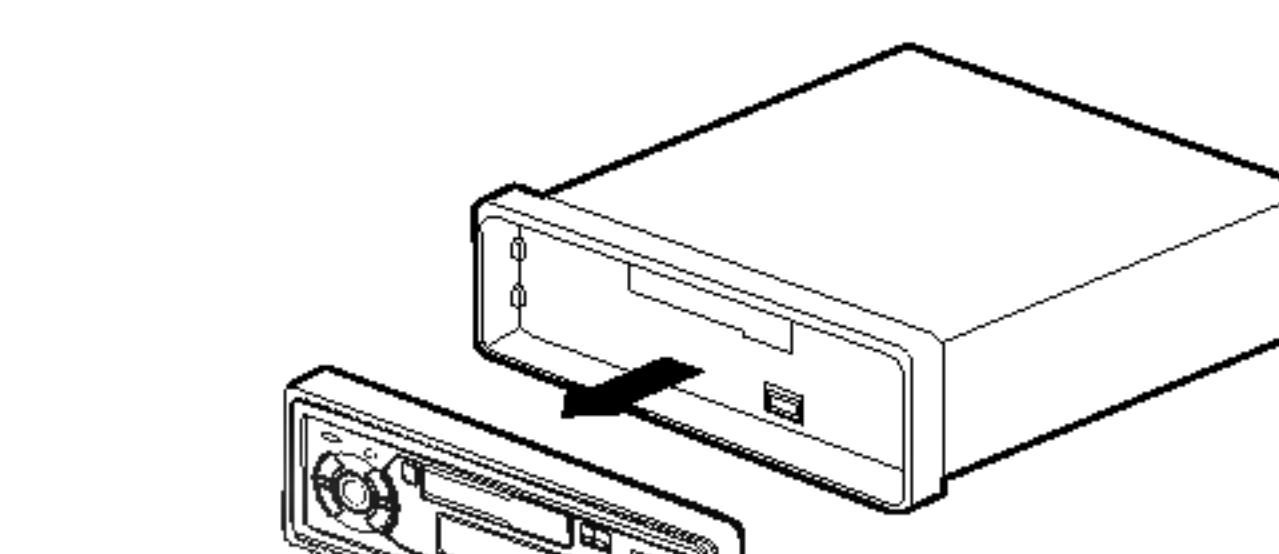

Note:

Take care not to put pressure on the display or control buttons, or drop the front panel.

- Place the Front Panel in the supplied protective case.

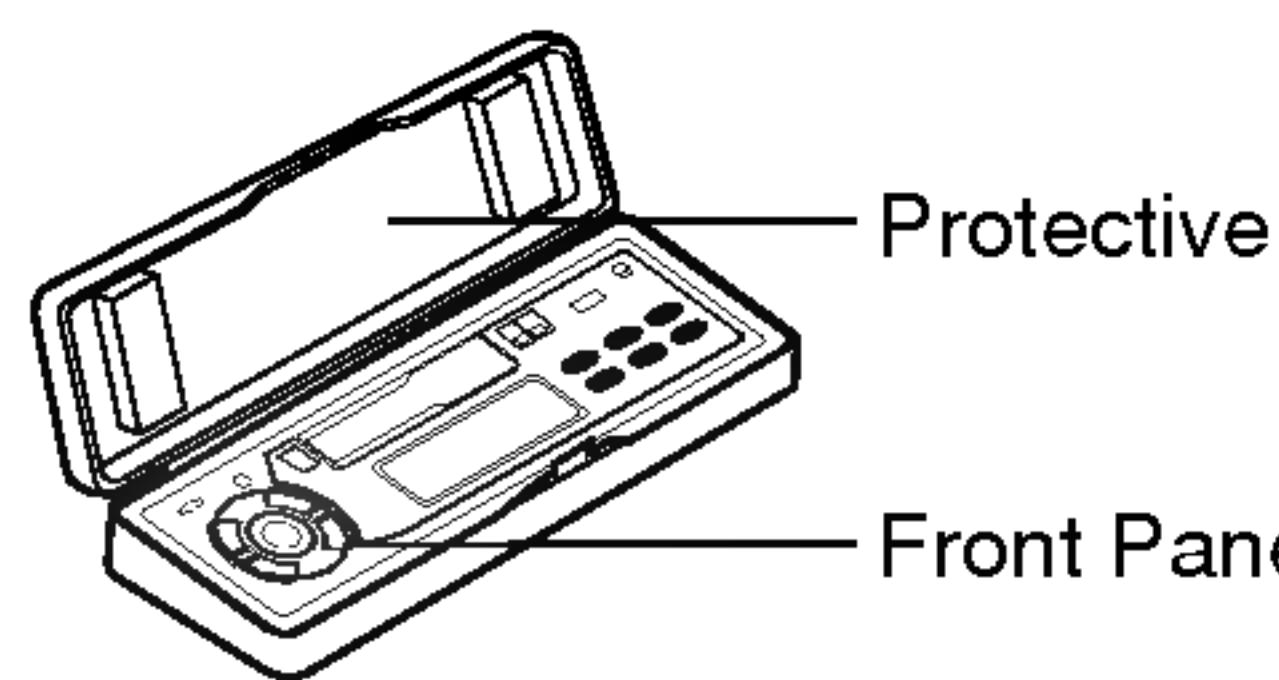


Protective Case

Front Panel

■ Attaching the Front Panel

- Push the front panel against the main unit to reattach it.

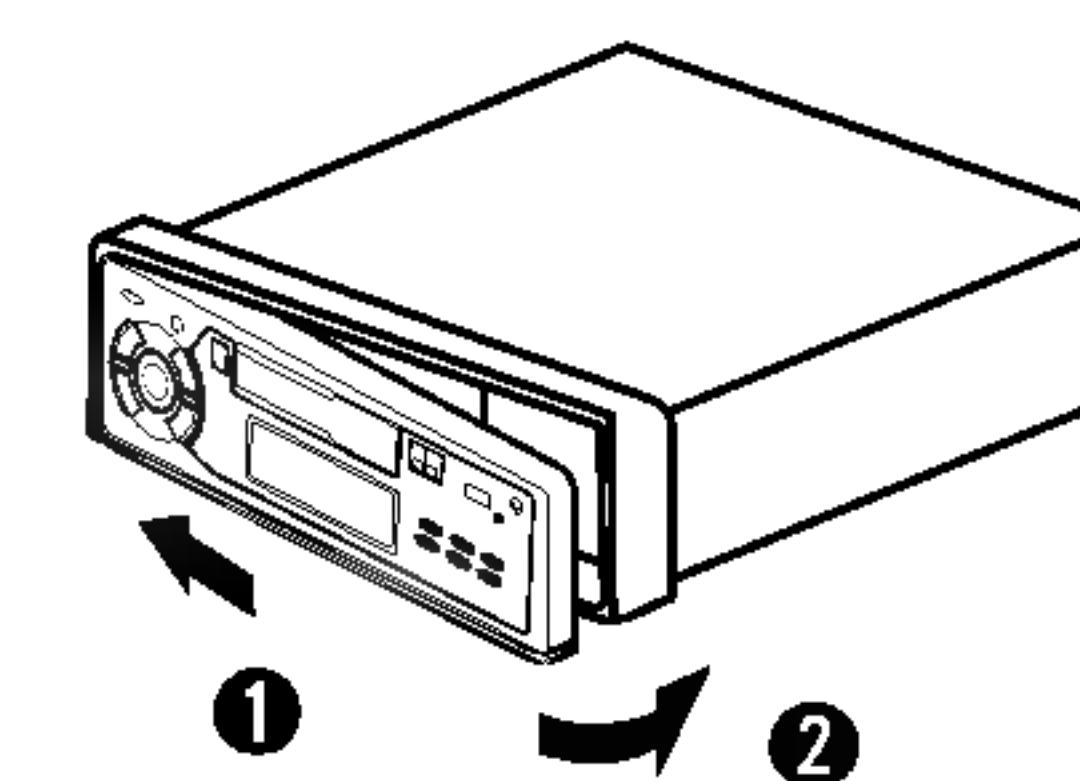


Notes:

- When replacing the front panel, do not put pressure on the display or control buttons.
- The control buttons may not work properly if the front panel is not attached properly. If this occurs, gently press the front panel.
- Do not leave the front panel in any area exposed to high temperatures or direct sunlight.
- Do not drop the front panel or otherwise subject it to strong impact.
- Do not allow such volatile agents as benzine, thinner, or insecticides to come into contact with the surface of the front panel.
- Never try to disassemble the front panel.

Tape Operation


- Turn the power ON.

2 Insert a cassette tape with the exposed tape side to the right. If radio broadcast is being received, cassette playback automatically begins.

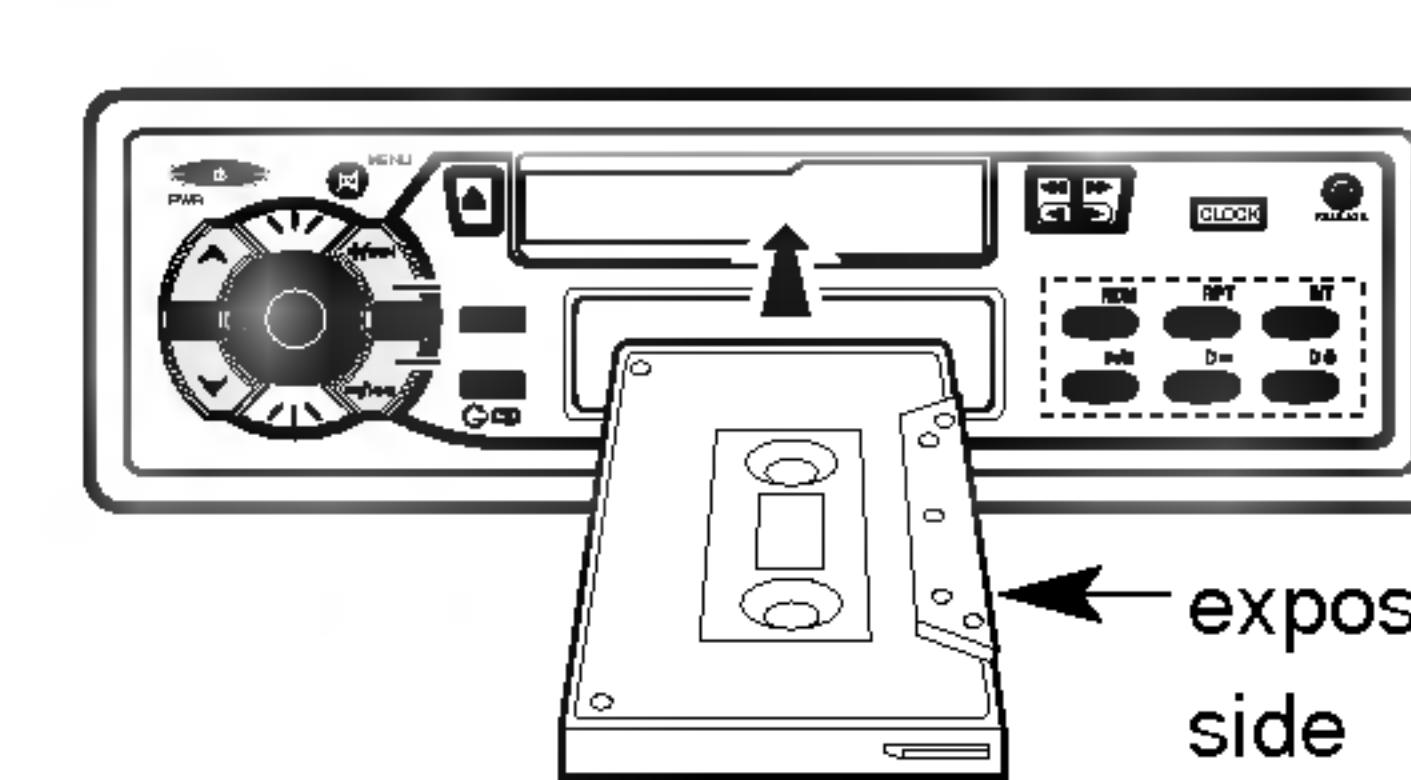

exposed side

- The tape direction can be reversed by pressing both (◀/▶) buttons together.

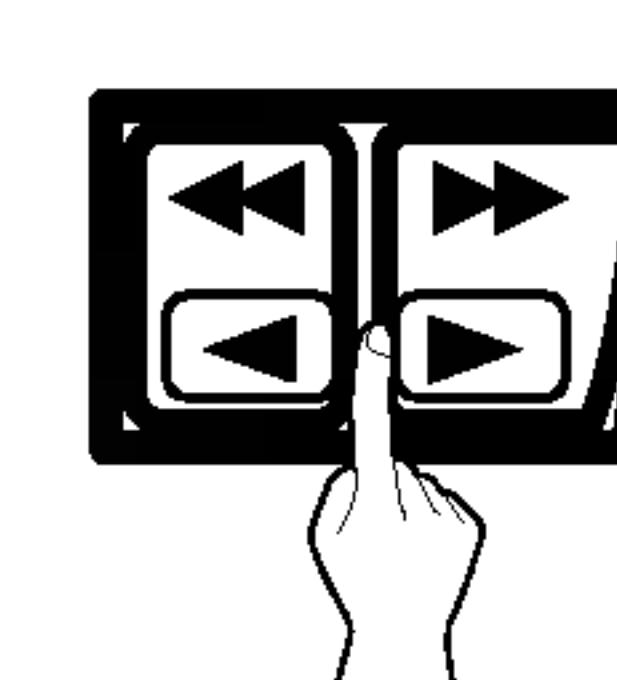

- The tape direction automatically reverses when the tape end has been reached.
- To stop playback, press the EJECT (▲) button and remove the cassette tape.

Basic Operation

- Turn the power ON.
- Press the BAND/CD button to select the desired frequency band.

- Select the desired stations.

► AUTO Tuning
Press the TUNE +/- buttons for more than 1 seconds.

► MANUAL Tuning

Press the TUNE +/- buttons repeatedly until the desired station appears.

- Adjust the Volume and Tone using MD/LD and CONTROL UP/DOWN button.

Note:

When the power is on, if a cassette tape is inserted in the cassette compartment, tape playback starts automatically.

Memory Function

■ Memorizing Stations

24 stations [18FM, 6AM(MW)] can be preset using PRESET (1-6) buttons. Stations often listened to can be quickly recalled.

- Select the desired band using the BAND/CD button.
- Tune in the desired station using the TUNE +/- buttons.

- Press one of the PRESET(1-6) button for more than 2 seconds. The station has now been stored at one of the preset buttons.

- Repeat steps 2 and 3 for each of the remaining 5 PRESET buttons.

- The selected band is automatically scanned and the 6 strongest stations are stored. Then the preset stations are displayed repeatedly.

- Press the AS/PS button to stop scanning the preset stations.

■ Preset Scanning (PS)

- Store a station for each one of PRESET (1-6) buttons.

- When the AS/PS button is pressed, the preset stations are monitored in sequence for 5 seconds each. The station number is shown in the preset station indicator.

- When the desired station is received, press the AS/PS button again to stop scanning.

Auto Store (AS)

6 stations in the selected band can be stored automatically.

- Turn the power ON.
- Select the desired band of stations to be received.
- Press the AS/PS button for more than 2 seconds, and then this function implements.

CD Changer Player (OPTIONAL)

You can play CDs with this unit by connecting the optional compact disc changer. Make sure that the disc magazine loaded with the discs is inserted into the connected compact disc changer.

- Press POWER button to turn on the power of the car stereo.
- Slip a CD in the magazine with the sticker upwards.
- Insert the magazine in the CD changer.
- Press BAND/CD button to activate the CD function, one of the disc will be played automatically. If the CD changer is not connected, the CD function is not activated.
- Press D +/- button to select the CD.
- Press one of buttons (◀/▶) (forward or backward) to select another except of music from the disc being played.

- Press and hold the (◀/▶) button during playback. The track is scanned by spiral in the forward or backward direction release the button to resume playback at the desired location.

Note : Remember that is not possible to listen to a CD when a cassette is in. Eject it before listen to a CD.

►/II Button

- To start play, press ►/II button
- To pause, press it again.

Random play

- To play one disc randomly, press RDM button. (The RDM indication is displayed)
- To play all disc randomly, press RDM button for more than 1.5 seconds. (The All RDM indication is displayed)

Repeat Play

- To play one track repeatedly, press RPT button. (The RPT indication is displayed)
- To play one track repeatedly, press RPT button for more than 1.5 seconds. (The All RPT indication is displayed)
- To play all disc repeatedly, press RPT button for more than 1.5 seconds. (The All RPT indication is displayed)

Intro Scan

Press INT button to scan a CD by playing only the first 10 seconds of each track.

- To play one disc intro scan, press INT button. (The INT indication is displayed)
- To play all disc intro scan, press INT button for more than 1.5 seconds. (The ALL INT indication is displayed)

To cancel, press the RDM, RPT, INT button.

General

Output Power	40 W × 4 (Max.)
Power Source	DC 12-15 V
Speaker impedance	4 Ω × 4 or 8 Ω × 4
Ground System	Negative
Dimensions (W × H × D)	188 × 58 × 166 mm (Without Front Panel)
Net Weight	1.3 kg

Tape Player

Tape Drive System	Full Auto Reverse
Tape Speed	4.75 cm/sec.
Wow/Flutter	0.2% (WRMS)
S/N Ratio	50 dB
Frequency Response	40-14,000 Hz

Tuner

FM	
Frequency Range	87.5-108 MHz
S/N Ratio	60 dB
Distortion (T.H.D. 0.5W)	0.5%
Channel Separation	30 dB

AM(MW)

Frequency Range	531-1602 kHz
S/N Ratio	50 dB
Distortion (T.H.D. 0.5W)	0.5%

* Note : The design and specifications are subject to change without notice in the course of product improvement.